 


Disconnect Terminals

Slide link disconnect terminals offer a superior solution for simple current transformer circuits and measurement transformer test sets using SAKT 1/LT lateral disconnect terminals, or SAKT 1/DU feed through terminals and SAKT 1/QT cross disconnect terminals.

Current transformers must always have a closed secondary circuit, even when changing measuring equipment (see schematic below).

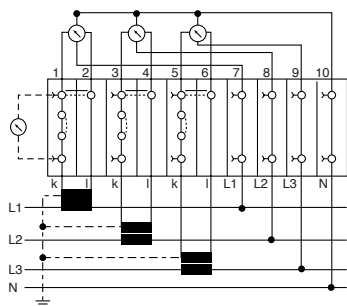

Stationary Jumpers

QL jumpers serve as fixed cross-connections for the Disconnect Terminals. The QL jumpers require the use of a fixing screw (BS M) and a connection sleeve (VH) when attaching the jumper to the current bar. The WQV jumpers are provided with a retained jumper screw.

Sliding Jumpers

QS and QVS jumpers are sliding jumpers. These jumpers are used to temporarily connect or disconnect adjacent terminal blocks. When the jumper screws are loose, the jumper can move to either open or close the cross connection between blocks. Tightening the jumper screws holds the jumper in either the open (disconnected) or closed (shorted) position.

QB jumpers work in a similar manner except that the jumpers remain fixed. An internal sliding connection link connected to the current bar either opens or closes the connection based on whether the link is in contact with the jumper or not.

SSP disconnect locks snap into the terminal block. These locks must be removed to change the position of the sliding link connection.

Terminal Block Selection Data

Available Options	Version
PA	
2 StB test points PA	
Back wall closed KrG	
Back wall open KrG	
4 StB 14 test points ø4.0 KrG 60 V**	
1 StB 8.5 test point ø2.0 KrG	
1 StB 8.5 test point ø2.3 KrG	
2 StB 14 test points ø4 KrG	
2 StB 14 test points ø2.3 KrG	

Dimensions

Width / Length / Height mm (in.)	for TS 32	
	for TS 35	
Insulation stripping length	mm (in.)	

Technical Data

Rated voltage / rated current / wire size UL		
	CSA	
	VDE	
Torque	Nm (lb. in.)	
Clamping screw	M	

Selected Accessory Data†

End Plate (thickness mm)	PA	KrG
	PA	KrG

Partition (thickness mm)

	PA	KrG	HP
	PA	KrG	HP

Small Partition

	TSch 2	
--	--------	--

Jumpers

QL fixed	QVS sliding	Connection sleeve	Fixing screw

Final number indicates number of poles. See the Accessories Section for more information.

	Connection sleeve	Fixing screw
--	-------------------	--------------

Switchable Jumper Links

	QB
--	----

Test Plugs

--	--


Disconnect Lock

--	--

Marking Tags

Note: Part numbers are shown for a single card of pre-printed tags numbered 1-50.	Consecutive horizontal	Consecutive vertical
---	------------------------	----------------------

 
SAKT 1/LT

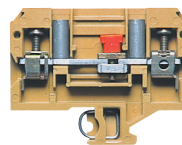

Slide Link

--	--

 SAKT 2/LT

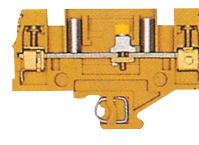

Slide Link

--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

†See Accessories section for additional information.

*For TS 35 #22...8 AWG

**With AP 380 V