

ISD-DEMO15100/15C00/3900

User Manual



Contents

Overview 3

Introduction 6

Board Configuration..... 8

Operations under VPE..... 11

Appendix – Recover the locked device 12

Board Schematic 14

Overview

This manual is for ISD-DEMO15100/15C00/3900 Rev_A.



Figure 1 – Top view of ISD-DEMO15100/15C00/3900 Rev-A board

Please note that ISD15100, ISD15C00 and ISD3900 series devices basically are the same device except that ISD15C00 and ISD3900 use external flash but ISD15100 has internal flash; and ISD15C00 is automotive certificated while ISD15100 and ISD3900 are not.

Because of this similarity, the same PCB board is used for ISD-DEMO15100, ISD-DEMO15C00 and ISD-DEMO3900 boards. Depends on the different parts populated, board names differentiate. Also because of this similarity, this manual applies for all demo boards, including ISD-DEMO15100, ISD-DEMO15C00 and ISD-DEMO3900.

The board shown above has part ISD15102 populated as U2, so it is an ISD-DEMO15100 board. For ISD-DEMO15C00 or ISD-DEMO3900 board, a flash memory must be populated at U1 position, and U2 part should be ISD15C00 or ISD3900 respectively.

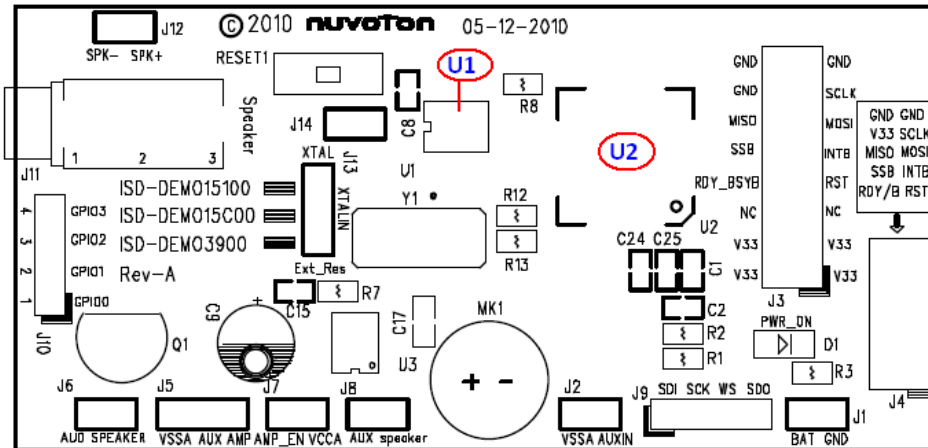


Figure 2 – Top side layout view of the ISD-DEMO15100/15C00/3900 Rev-A board

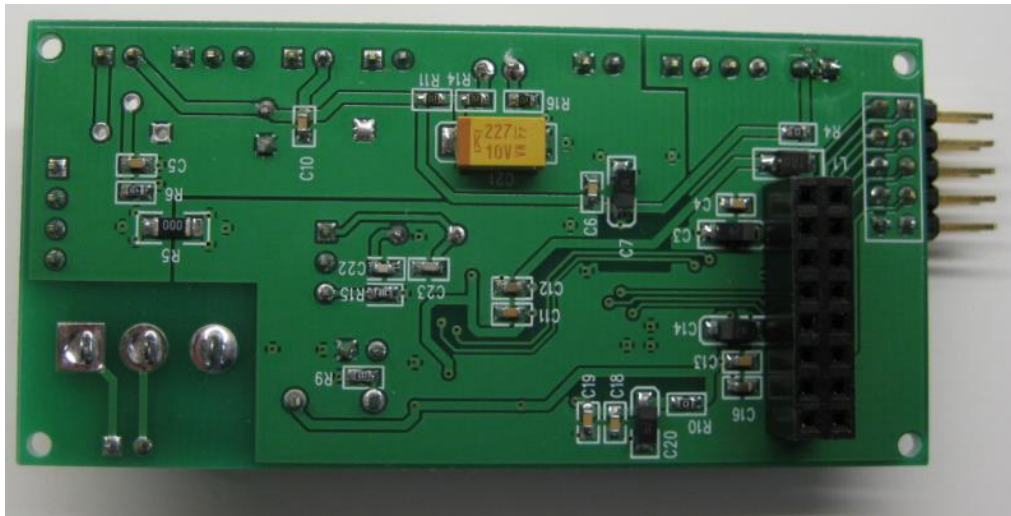


Figure 3 – Bottom view of ISD-DEMO15100 Rev-A board

nuvoTon

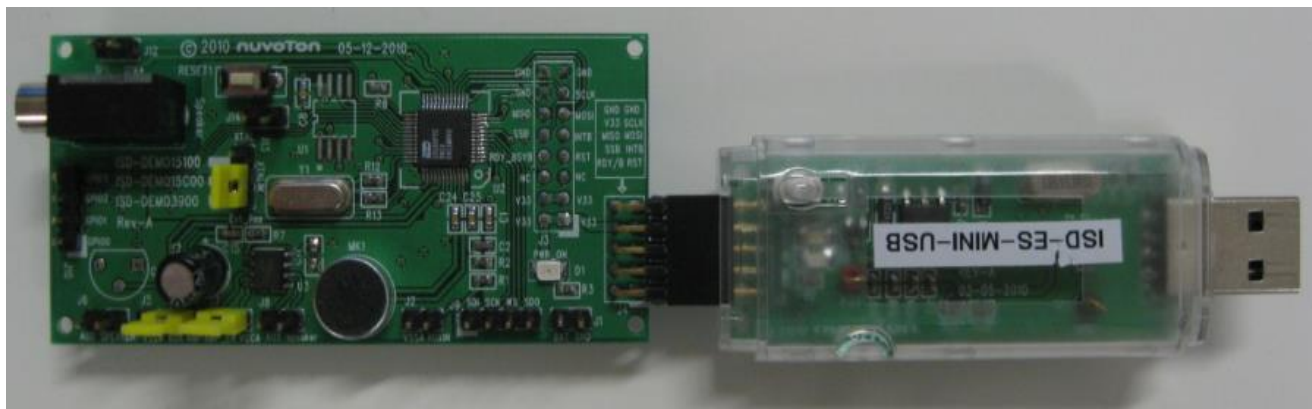


Figure 4 – ISD_DEMO15100 connected with ISD-ES_MINI_USB (dongle) board

Introduction

ISD_DEMO15100/15C00/3900 is to be used with ISD-ES_MINI_USB dongle. The complete evaluation kit for ISD-DEMO15100 consists of the following:

- Hardware
 - o ISD_DEMO15100 board
(Or ISD-DEMO15C00 board for ISD15C00 demo kit)
(Or ISD-DEMO3900 board for ISD3900 demo kit)
 - o ISD-ES_USB_MINI board
- Software
 - o ISD-VPE15100 can be downloaded from website:
<http://www.nuvoton-usa.com/ISD15100/vpe>. ISD15100, ISD15C00 and ISD3900 share the same GUI software suite ISD-VPE15100 as their common evaluation software.

User needs to fill out and submit the form on the website to request the username and password. Unfortunately, this registration process is not fully automatic yet when this manual is created. Instead, Nuvoton staff will generate the username and password based on the information received, and send them to user via email.

System Requirements

- PC running Windows Vista, XP, NT, or 2000.
- Support for Windows 7 will be available soon.

Figure 5 below shows a complete evaluation environment for ISD15100 series devices. The ISD USB dongle provides the communication link between ISD-DEMO15100 board and host PC. All the operations are initiated from VPE, a GUI application which runs on Windows PC.



Figure 5 – A complete evaluation environment for ISD15100 device

© 2010 nuvoton 05-12-2010

ISD-DEMO15100
ISD-DEMO15C00
ISD-DEMO3900
Rev-A

GPIO3
GPIO2
GPIO1
GPIO0

Speaker

XTAL
XTALIN
XTALIN

Ext_Res

U1
Y1

R8
R12
R13

C24
C25
C2
R2
R1

U2
RDY_BSYB
NC
V33
V33
V33

J3
PWR_ON
D1
R3

J1
BAT GND

J2
VSSA AUXIN

J9
SDI SCK WS SDO

J4
GND GND
V33 SCLK
MISO MISO
INTB INTB
RST RST
RDY/B RST

J11
1
2
3

J10
1
2
3
4

J6
AUD SPEAKER

J5
VSSA

J7
AUX AMP

J8
AMP

J12
SPK- SPK+

J13
GND GND
V33 SCLK
MISO MISO
INTB INTB
RST RST
RDY/B RST

J14
Speaker

U3
C17

U4
C15

U5
C16

U6
C18

U7
C19

U8
C20

U9
C21

U10
C22

U11
C23

U12
C24

U13
C25

U14
C26

U15
C27

U16
C28

U17
C29

U18
C30

U19
C31

U20
C32

U21
C33

U22
C34

U23
C35

U24
C36

U25
C37

U26
C38

U27
C39

U28
C40

U29
C41

U30
C42

U31
C43

U32
C44

U33
C45

U34
C46

U35
C47

U36
C48

U37
C49

U38
C50

U39
C51

U40
C52

U41
C53

U42
C54

U43
C55

U44
C56

U45
C57

U46
C58

U47
C59

U48
C60

U49
C61

U50
C62

U51
C63

U52
C64

U53
C65

U54
C66

U55
C67

U56
C68

U57
C69

U58
C70

U59
C71

U60
C72

U61
C73

U62
C74

U63
C75

U64
C76

U65
C77

U66
C78

U67
C79

U68
C80

U69
C81

U70
C82

U71
C83

U72
C84

U73
C85

U74
C86

U75
C87

U76
C88

U77
C89

U78
C90

U79
C91

U80
C92

U81
C93

U82
C94

U83
C95

U84
C96

U85
C97

U86
C98

U87
C99

U88
C100

U89
C101

U90
C102

U91
C103

U92
C104

U93
C105

U94
C106

U95
C107

U96
C108

U97
C109

U98
C110

U99
C111

U100
C112

U101
C113

U102
C114

U103
C115

U104
C116

U105
C117

U106
C118

U107
C119

U108
C120

U109
C121

U110
C122

U111
C123

U112
C124

U113
C125

U114
C126

U115
C127

U116
C128

U117
C129

U118
C130

U119
C131

U120
C132

U121
C133

U122
C134

U123
C135

U124
C136

U125
C137

U126
C138

U127
C139

U128
C140

U129
C141

U130
C142

U131
C143

U132
C144

U133
C145

U134
C146

U135
C147

U136
C148

U137
C149

U138
C150

U139
C151

U140
C152

U141
C153

U142
C154

U143
C155

U144
C156

U145
C157

U146
C158

U147
C159

U148
C160

U149
C161

U150
C162

U151
C163

U152
C164

U153
C165

U154
C166

U155
C167

U156
C168

U157
C169

U158
C170

U159
C171

U160
C172

U161
C173

U162
C174

U163
C175

U164
C176

U165
C177

U166
C178

U167
C179

U168
C180

U169
C181

U170
C182

U171
C183

U172
C184

U173
C185

U174
C186

U175
C187

U176
C188

U177
C189

U178
C190

U179
C191

U180
C192

U181
C193

U182
C194

U183
C195

U184
C196

U185
C197

U186
C198

U187
C199

U188
C200

U189
C201

U190
C202

U191
C203

U192
C204

U193
C205

U194
C206

U195
C207

U196
C208

U197
C209

U198
C210

U199
C211

U200
C212

U201
C213

U202
C214

U203
C215

U204
C216

U205
C217

U206
C218

U207
C219

U208
C220

U209
C221

U210
C222

U211
C223

U212
C224

U213
C225

U214
C226

U215
C227

U216
C228

U217
C229

U218
C230

U219
C231

U220
C232

U221
C233

U222
C234

U223
C235

U224
C236

U225
C237

U226
C238

U227
C239

U228
C240

U229
C241

U230
C242

U231
C243

Revision 1.0

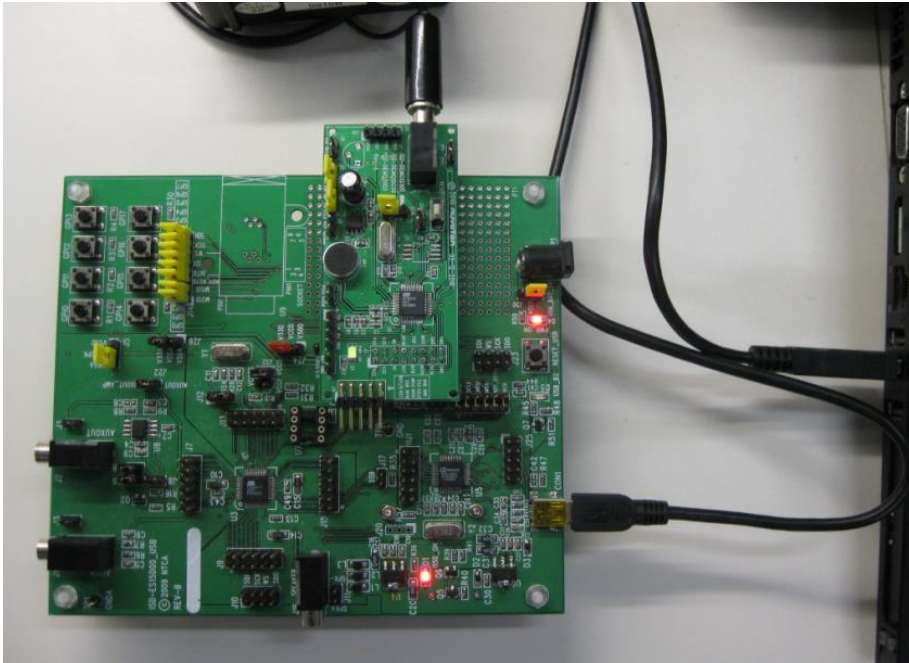


Figure 7 – ISD-DEMO15100 is connected onto ISD-ES15D00_USB mother board

So users have two options to use the ISD-DEMO15100 board:

- ISD-DEMO15100 + the big ISD15XXX evaluation board, shown in **Figure 7**.
- ISD-DEMO15100 + Mini USB board, shown in **Figure 8**.

Both combinations can achieve roughly the same functionalities. Combination shown in **Figure 8** is more recommended because of the much lower cost.

J4: 2x5 header for connecting ISD-ES_MINI_USB dongle. Please note: two boards must connect each other with both top side up. For USB dongle board, it has a small window at its top side.

Please note: It could cause hardware damage if the two boards are not connected correctly.

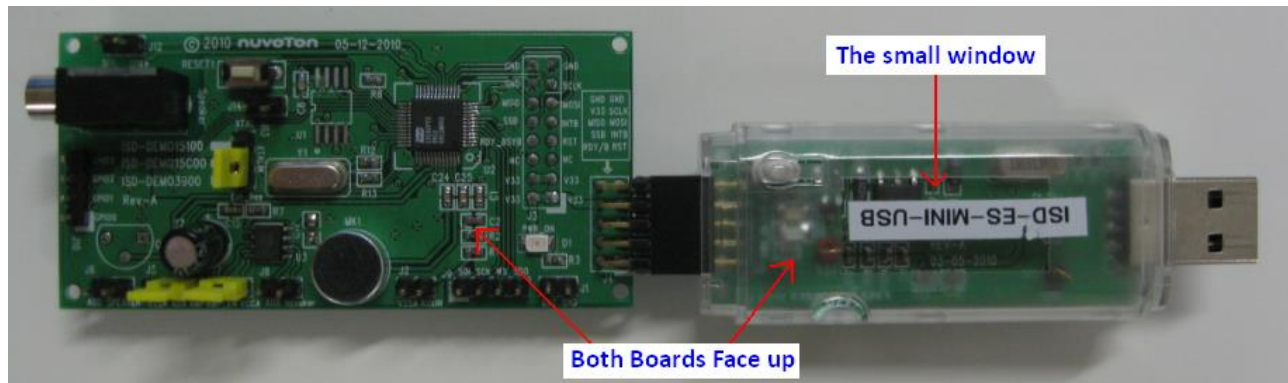


Figure 8 – connect ISD15D00 demo board with the USB dongle.

J5: Aux Output

- Installing jumper at right position will connect AUX and AMP → feed AUX output from ISD15100 to onboard audio amplifier ISD8101
- User should not install jumper at left position, which will connect AUX and VSSA together. The Left two pins of J1 are for the purpose of further evaluation. User can use these two pins as input to feed his/her own amplifier.

J6: AUD speaker. This is the output of the on-board AUD amplifier. User can connect an 8 Ohm speaker from this header to evaluate the AUD output of ISD15100.

J7: Install Jumper at J7 will connect AMP_EN with VCCA, thus enable the on board audio amplifier ISD8101. To disable ISD8101, remove the J7 jumper.

J8: 2-pin connector for speaker. This is the output from audio amplifier ISD8101.

J9: 4-pin header for ISD15100 I2S output.

J10: 4-pin GPIO expand header for ISD15100.

J11: speaker jack for ISD15100 PWM output.

J12: 2-pin speaker header for ISD15100 PWM output.

J13: Clock source selection.

- Install a jumper at top position to connect the top two pins → ISD15100 device clock can be from internal oscillator with external resistor.



- Install a jumper at bottom position to connect the bottom two pins → ISD15100 device clock can be from external crystal.

Please note: the silk label on board for J14 XTAL “XTALIN” and “Ext_Res” should switch the position on Rev-A board. Please bear this mind to avoid confusion.

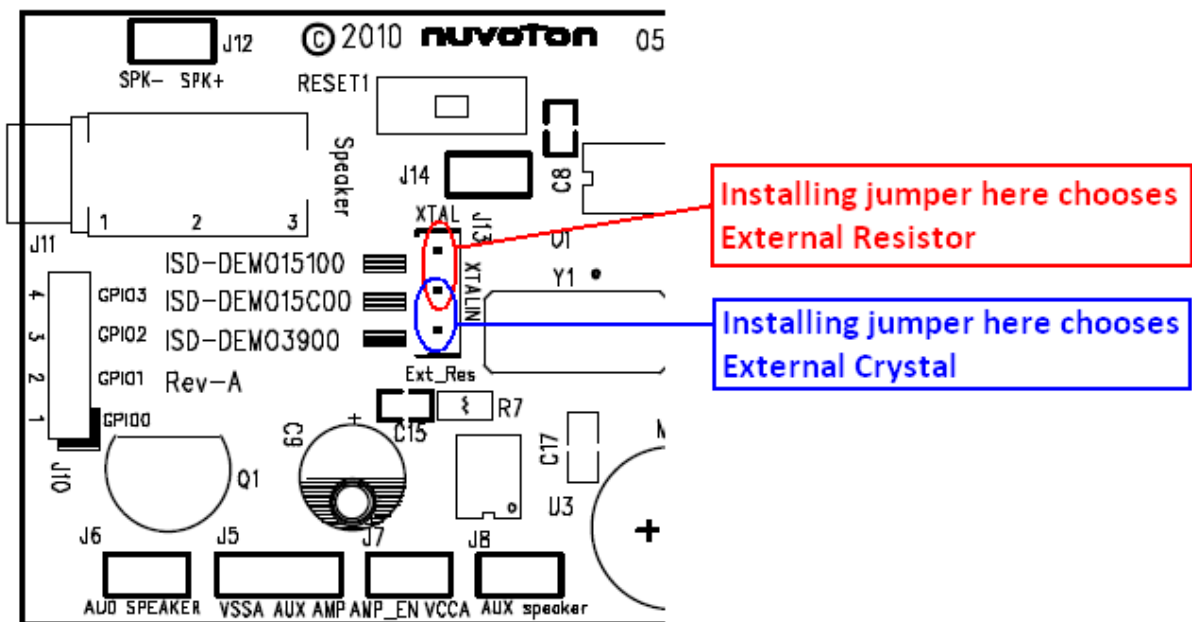


Figure 9 – Clock source selection

J14: for the purpose of unlocking device; please refer to the appendix for the usage of this jumper.

Operations under VPE

- Connect a ISD15100 demo board to USB dongle
- Plug in USB dongle into a PC USB port
- Launch ISD-VPE15100.



These operations do not have to follow a special order. USB dongle is hot pluggable, and so is the demo board. However, during digital programming, demo board needs to be connected otherwise the integrity of flash image cannot be guaranteed.

User can refer VPE user manual for the operation guide. VPE user manual can be found in VPE installation folder; i.e. usually it is under: C:\program files\ISD-VPE15100.

Appendix – Recover the locked device

Due to the nature of ISD15100 series device, sometimes the device may get itself locked. The symptom of lockup is that device stops to respond. For example, under VPE GUI, after power on device status cannot be read, i.e. the device is always Power Down. On customer's target board, device can no longer be powered up and it also stays at Power Down mode. In short, device appears to be "dead".

Often device Lock up is caused by "bad" memory content. Here are some examples in which device will get locked.

- In POI VM there is a command to set device to the external crystal as the clock source, but hardware wise there is no external crystal soldered, then this device will lock up after power on.
- In POI VM if user chooses to loop play a sound effect forever, then this device will fall to respond to outside after power on;
- Due to any unpredictable reason – such as a glitch during flash programming, the device memory content is not intact and it causes device Power On or Power Up failure.

For these lockups caused by "bad" flash image, there is a way to recover the device without hardware fix.

Steps to unlock ISD-DEMO15100 board

- Without powering the board, pull down the ISD15100 pin 28 to ground, i.e. install jumper J14.
- Power the board – connect USB cable,
- Launch ISD-VPE15100, send power-up command and wait till power-up finishes.
- Leave the ISD15100 pin 28 floating, i.e. remove jumper J14.
- Chip-erase the ISD151xx.



The mechanism behind this recovery sequence is that do NOT let the flash memory participate the device power on and power up initialization; and after device powered up, put flash back under control and erase the “bad” content.



Board Schematic

