

SPECIFICATION SHEET
JFW MODEL 50PMA-092
TRANSCEIVER TEST SYSTEM

JFW Industries, Inc.
Phone: 317-887-1340
sales@jfwindustries.com
www.jfwindustries.com

Frequency Range	30-3000 MHz
Configuration/Notes	9 Port Transceiver Test System (see block diagram 092-5356 for attenuator addressing) (all ports are bi-directional) (full fan-out i.e. every path has its own attenuator) (the ADMIN password is located on rear panel)
Enclosure Type	19 inch rack mount @ 4RU high
Impedance	50 Ohms nominal
Attenuation Range	0-95 dB in 1 dB steps
Startup/Default States (configurable)	Attenuators to 95dB at startup (see ATTEN command) DHCP enabled (see NET command) 4 Ethernet users (see NET command) Prompts off (see PROMPT command) All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.
VSWR	1.8:1 maximum
Attenuation Accuracy	± 0.50 dB 1-7 dB ± 1.00 dB 8-11 dB ± 1.25 dB or 3% 12-95 dB (whichever is greater) (guaranteed monotonic)
Insertion Loss	38 dB maximum
Power Divider Isolation	24 dB minimum
RF Input Power	1 Watt average
Switching Speed	4 microseconds (after command is received and processed) (3 milliseconds typical processing time)
AC Supply	100-240 VAC @ 47-63 Hz 4 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse #215-004, JFW #025-018
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

--CONTINUED--

SPECIFICATION SHEET
JFW MODEL 50PMA-092
TRANSCEIVER TEST SYSTEM

JFW Industries, Inc.
 Phone: 317-887-1340
 sales@jfwindustries.com
 www.jfwindustries.com

Remote Commands

Attenuator Control Commands:
 Atten, Set Path, Read Path, Read All Paths, Set
 Attenuator, Read Attenuator, Set All Attenuators, Read
 All Attenuators, Read All Extended, Fade Attenuator,
 Variable Attenuator Handover, Block, Set Block, Read
 Block, Read All Blocks, Fade Block, Variable Block
 Handover

System Commands:
 Help, Identification, Store, Recall, Pause, Net,
 Serial, Close, Disconnect, MOTD, Date, Message,
 Restrict, IDENT, Name, Show Users, Reboot, Uptime,
 Prompt

RF Connector


N, SMA or TNC female

Operating Temperature Range

0°C to +50°C

Physical Size

See outline drawing 092-6110

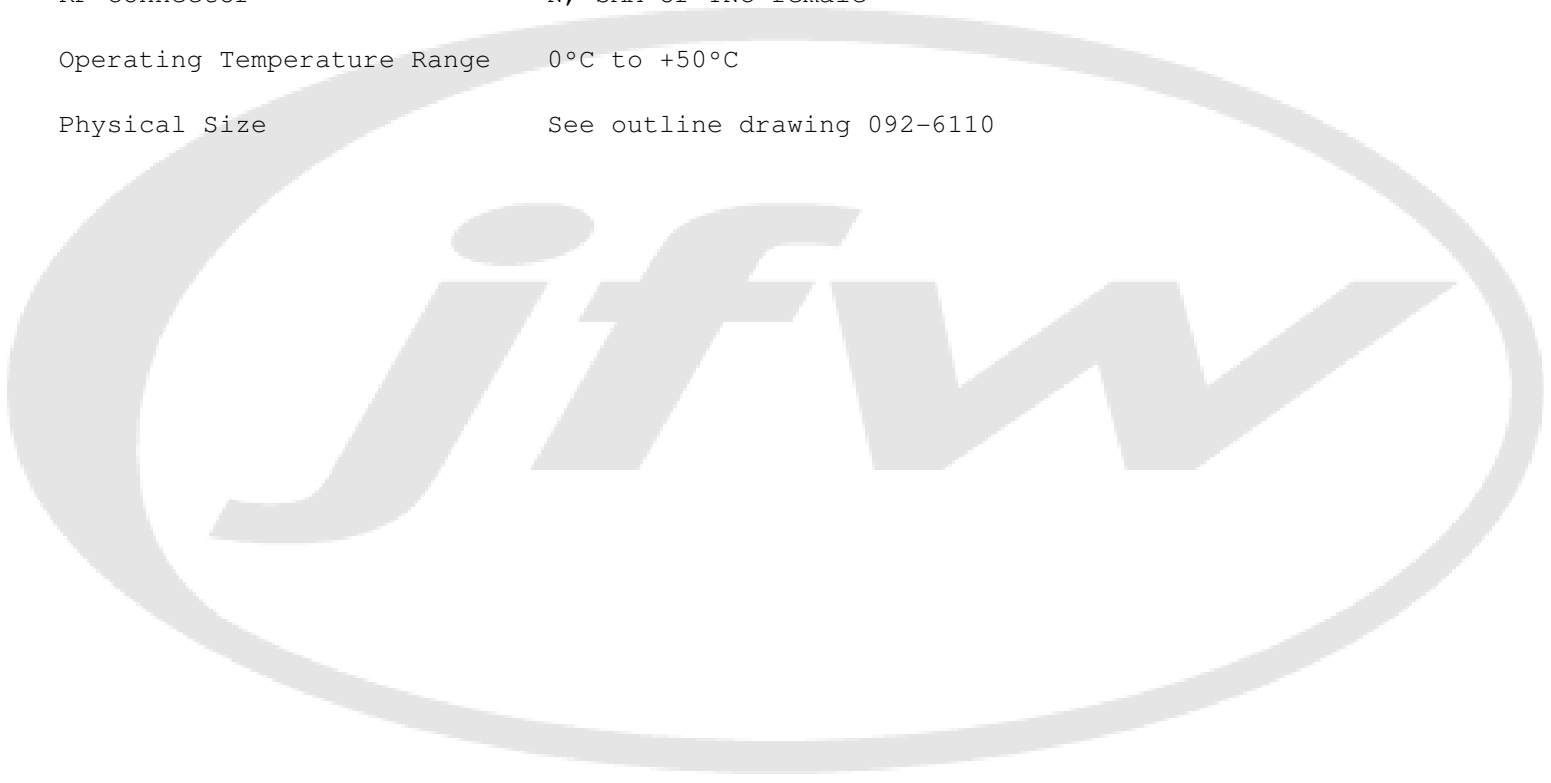

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	09/08/2014		TRS 09/08/2014				
26686	05/27/2016	A	TRS 05/27/2016				
28159	10/05/2017	B	CLK 10/05/2017				