

**SPECIFICATION SHEET**

**JFW MODEL 50PA-128-XX**

**PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.  
Phone: 317-887-1340  
sales@jfwindustries.com  
www.jfwindustries.com

Frequency Range	200-6000 MHz
Attenuation Range	0-95 dB in 1 dB steps
Configuration	Individually controlled solid-state programmable attenuators. Number of attenuators can be selected from 1 to 8 attenuators.
Enclosure Type	19 inch rack mount 2RU high (for 1-8 attenuators)
Impedance	50 Ohms nominal
Startup/Default States (configurable)	Maximum attenuation (see ATTEN command) DHCP enabled (see NET command) 4 Ethernet users (see NET command) Prompts off (see PROMPT command)  All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.
VSWR	2.0:1 maximum < 1.9:1 typical 200-700 MHz < 1.6:1 typical 700-6000 MHz
Attenuation Accuracy	± 0.50 dB            1-3 dB ± 0.75 dB            4-7 dB ± 1.00 dB            8-11 dB ± 1.25 dB or 4%    12-95 dB (whichever is greater) (guaranteed monotonic)
Insertion Loss	8.8 dB maximum 4.0 dB typical @ 200 MHz 4.5 dB typical @ 700 MHz 8.2 dB typical @ 6000 MHz
RF Input Power	+27 dBm average +33 dBm no damage
Switching Speed	4 microseconds typical (after command is received and processed) (3 milliseconds typical processing time)
Manual Control	20-Button Keypad and LCD display (IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)
Remote Control	Ethernet (DHCP, TCP/IP, 10/100, up to 12 users) RS-232 (up to 115200 Baud)

**--CONTINUED--**

**SPECIFICATION SHEET**

**JFW MODEL 50PA-128-XX**

**PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.  
Phone: 317-887-1340  
sales@jfwindustries.com  
www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime, Prompt

RF Connector

SMA or N female

Operating Temperature Range

0°C to +50°C

AC Supply

100-240 VAC @ 47-63 Hz

Outline Drawing Numbers

092-8261 (N female, 1-8 attenuators)  
092-8262 (SMA female, 1-8 attenuators)

Example Model Numbers

50PA-128-01 SMA (1 attenuator)  
50PA-128-02 SMA (2 attenuators)  
50PA-128-03 SMA (3 attenuators)  
50PA-128-04 SMA (4 attenuators)  
50PA-128-05 SMA (5 attenuators)  
50PA-128-06 SMA (6 attenuators)  
50PA-128-07 SMA (7 attenuators)  
50PA-128-08 SMA (8 attenuators)  
50PA-128-01 N (1 attenuator)  
50PA-128-08 N (8 attenuators)

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	06/01/2015		TRS 06/01/2015				
28159	10/05/2017	A	CLK 10/05/2017				
28495	02/09/2018	B	TRS 02/09/2018				