

MAX14916 Evaluation Kit

Evaluates: MAX14916

General Description

The MAX14916 evaluation kit (EV kit) provides a proven design to evaluate the MAX14916, 2.4A (min) quad high-side switch with extended diagnostics. The EV kit includes the MAX14916 evaluation board and a graphical user interface (GUI) that provides communication from a PC to the target device through a USB port and the USB2GPIO interface board. The USB2GPIO EV kit should be ordered separately.

The GUI is compatible with Windows 10 for exercising the features of the MAX14916 IC. The EV kit GUI allows individually controlling of eight high-side switches, which hardware configured for quad high-current operation, through the high-speed SPI interface and receive a diagnostic information from the MAX14916, including open-wire/open-load conditions, state of the output channels, multiple undervoltage alarms, global and per channel overtemperature alarms, and multiple fault alarms.

The MAX14916 EV kit must be powered from an external +24V power supply and can consume more than 10A when fully loaded. The USB2GPIO interface board is powered from the USB port.


The MAX14916 EV kit board comes with a MAX14916AFM+ installed in a 48-pin, 6 x 6mm FC2QFN package.

Features


- Robust Operation with Wide Range Of Input Voltages and Load Conditions
- VDDOK Indication
- LED Indication of Channels Status and Fault Conditions
- Fast Inductive Load Demagnetization
- Open-wire, Overload, Undervoltage, Overcurrent, Thermal Shutdown Fault Conditions Indication
- Supports Watchdog and SYNCH Features
- Communication Error Indication
- Wide Logic Voltage Range
- Pin Addressable SPI Communication
- -40°C to +125°C Temperature Range
- Proven PCB Layout
- Fully Assembled and Tested
- Windows 10 Compatible Software

Ordering Information appears at end of data sheet.

MAX14916 EV System

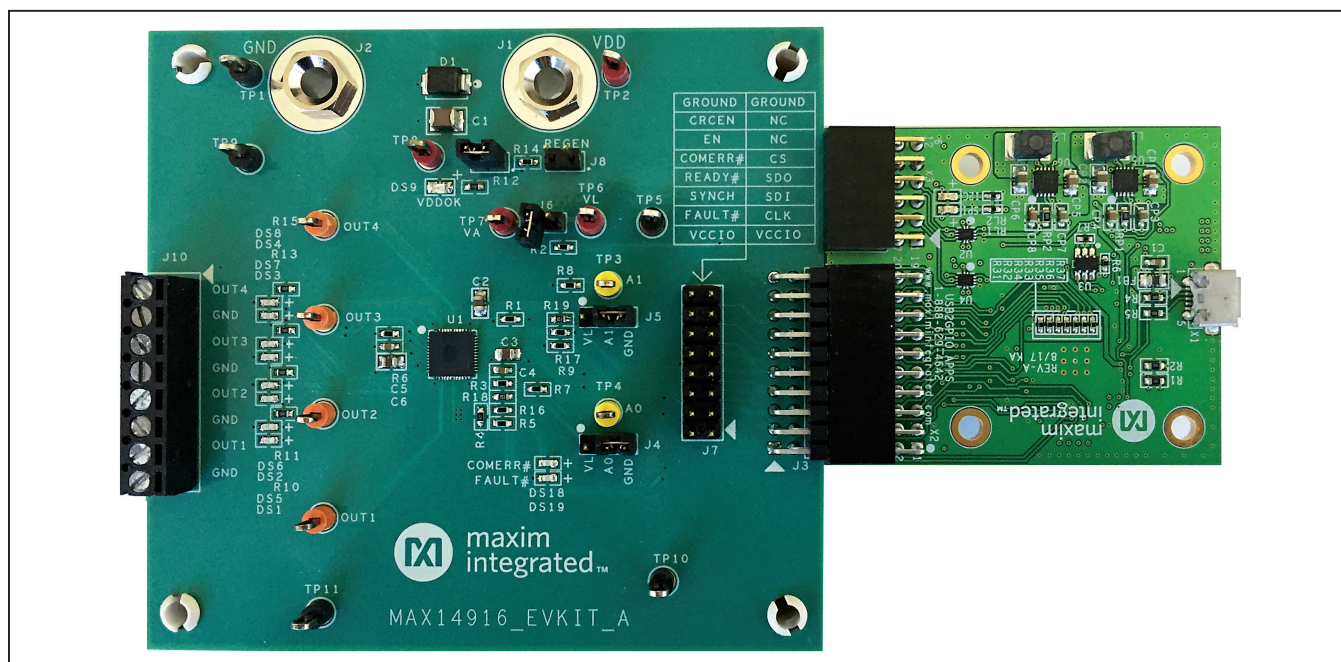

System Block Diagram

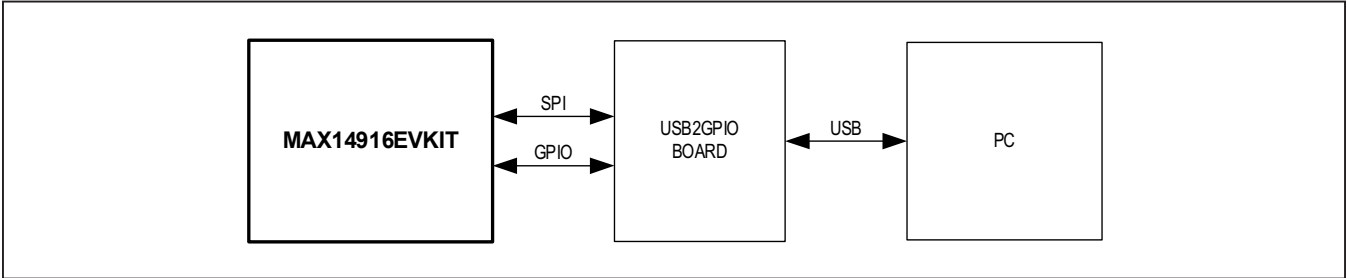

MAX14916 EV kit Files

FILE	DESCRIPTION
MAX14915_6EV kitSetupV1.1.exe	Application Program (GUI)

Quick Start

Required Equipment

- MAX14916 EV kit
- USB2GPIO EV kit (must be ordered separately)
- +24V DC power supply
- PC with installed Windows 10 and a USB port
- USB-A to micro-USB cable (not included)

Note: In the following section(s), software-related items are identified by **bolding**. Text in **bold** refers to items directly from the EV system software. Text in **bold and underline** refers to items from the Windows operating system.

Procedure

The EV kit is fully assembled and tested. Follow the steps below to verify board operation:

- 1) Visit [HERE](#) and click on *Design Resources* to download the latest version of the EV kit software, MAX14915_6EVKITSetupV1.1.exe.
- 2) Install the EV kit software on your computer by running the MAX14915_6EVKITSetupV1.1.exe program inside the temporary folder. The program files are copied to your PC and icons are created in the Windows **Start | Programs** menu.
- 3) Verify that all jumpers are in their default positions ([Table 1](#)).
- 4) Power up the EV kit with +24V from an external power supply through J1 and J2 Banana Plugs.
- 5) Connect the EV SYS to a USB port of a PC. A micro-USB cable is not included and should be ob-

tained locally.

- 6) Start the EV kit software by opening its icon in the **Start | Programs** menu. Select the MAX14916EVKIT button in the startup window. The EV kit software appears as shown in [Figure 1](#). Verify that the lower-right status bar indicates the EV kit hardware is **Connected**. The GUI automatically detects EV kit is connected to the PC and enables serial communication. Any configuration change can be made on Register Settings tab. (The following steps are used to verify functionality of the MAX14916)
- 7) Select Register Settings tab and press the Read All button twice to clear the initially detected undervoltage global conditions in the GlobalErr register 0x09.
- 8) Enable the desirable diagnostics in registers 0x0A through 0x0F. For example, allowing STATUS LEDs and FAULT LEDs to be controlled autonomously by the internal logic, by disabling SLEDSet and FLEDSet bits in the Config1 register 0x0D[1:0] = 00b. Select register 0x0D in the Register map table on the left and choose “0: Disabled” from the pull-down menu of the bit Setting column of the register description table on the right. The font color of the modified register is changed from black to red. Click Write Modified button to write a new configuration into the register.
- 9) Set all OUTPUT switches ON, by typing in 255 decimal number into SetOUT register 0x00. Note, the GUI accept decimal, hex or binary numbers (e.g., 255, or 0xFF, or 0b11111111). The user can enable Auto Write button to allow auto write the changes instead of clicking Write Modified or Write Selected buttons, that allow individual command to be sent to the MAX14916.

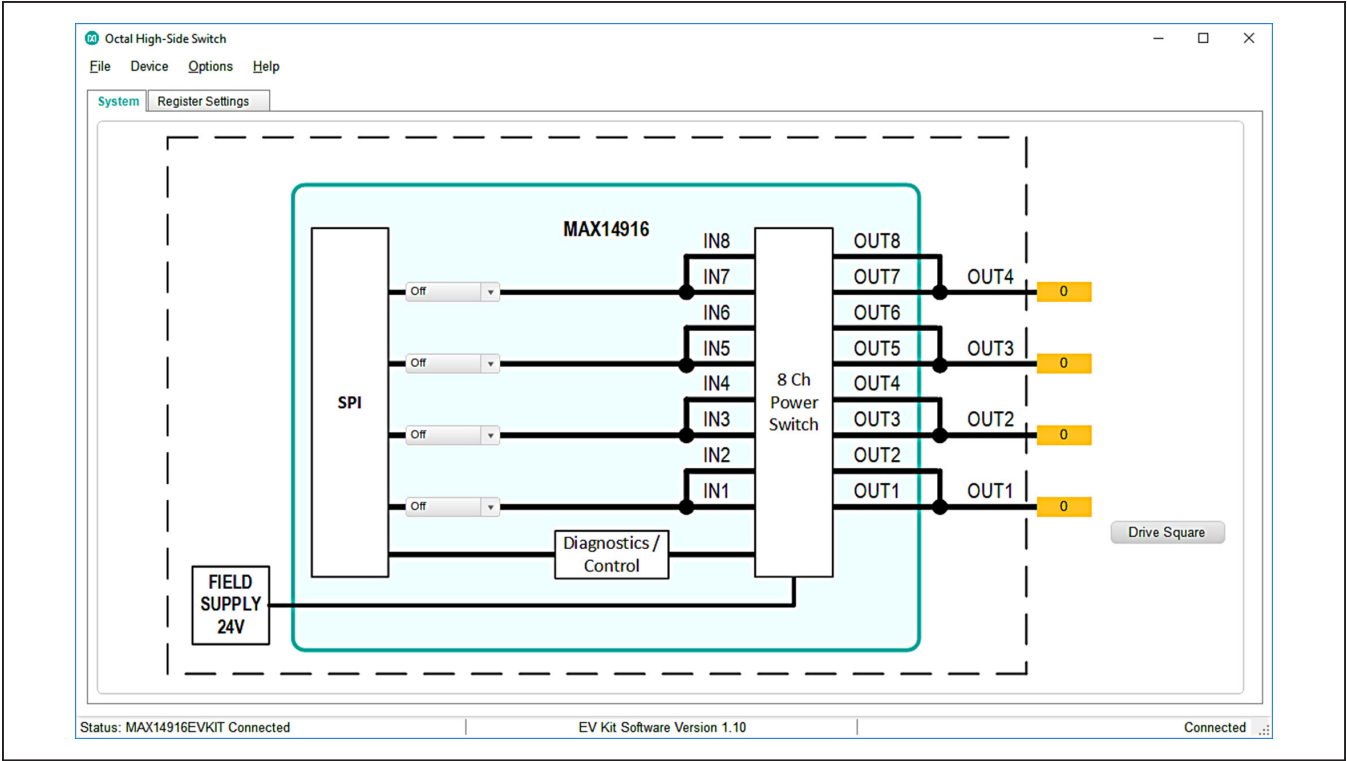


Figure 1. MAX14916 EV Kit GUI System Tab

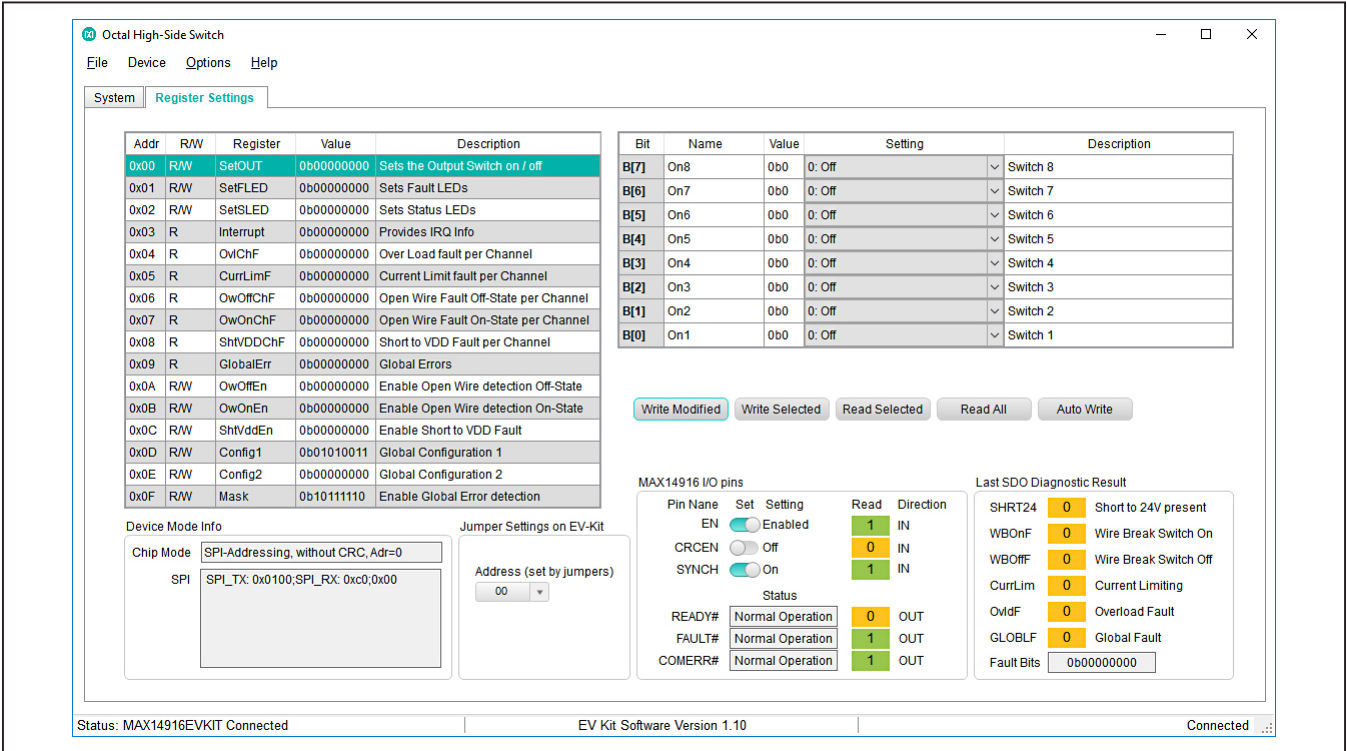


Figure 2. MAX14916 EV Kit GUI Register Settings Tab

Detailed Description of Hardware

The MAX14916EV kit in conjunction with the USB2GPIO# adapter board provides easy to use and flexible solution for evaluation of the MAX14916, octal high-side switch for industrial applications. It allows SPI communication between the Windows compatible GUI installed on a PC, and the MAX14916. The USB2GPIO# adapter board is a plug and play device that is powered from the USB port and does not require any additional configuration, refer to the USB2GPIO data sheet [HERE](#). A USB driver for the USB2GPIO# board is installed automatically with the MAX14916 GUI.

The MAX14916EVKIT# can be used as a standalone board connected to the SPI bus using J4 and/or J5 headers, refer to the MAX14916 EV kit schematic. Up to four EV kits can be connected to the same SPI bus with

selectable address for each board by appropriate J4 and J5 jumper settings. For full configuration options, refer to [Table 1](#).

Load for each channel should be connected to the J10 terminal block. Each channel (switch) can provide about 1A of current (typ) and can handle either resistive or inductive load.

On board diagnostics provide VDD status through VDDOK LED (DS9), communication error via COMERR# LED (DS18) and a global fault condition via FAULT# LED (DS19). Per channel output state and per channel fault conditions are visible via LED matrix, DS1 through DS4, and DS5 through DS8, correspondently. Other diagnostics are provided through the SPI interface by reading the diagnostic registers 0x03 through 0x09.

Table 1. MAX14916 Board Shunt Positions & Settings

HEADER	SHUNT POSITION	DESCRIPTION
J9	1-2*	VLED supplied from VDD.
	Open	Use an external VLED source. Apply VLED power between VLED test point TP8 and GND (TP9).
J6	1-2	Select 3.3V logic level (VL = VA).
	Open*	Logic voltage (VL) supplied from USB2GPIO board (3.3V). Use an external source between VL and GND (TP5) if another host controller is used.
J8	Open*	Internal 3.3V VA regulator enabled.
	1-2	Internal VA regulator disabled (REGEN = GND). Use an external VA source between VA test point and GND (TP4).
J4	1-2	Set address bit A0 = 1.
	2-3*	Set address bit A0 = 0.
J5	1-2	Set address bit A1 = 1.
	2-3*	Set address bit A1 = 0.

*Default configuration

Detailed Description of Software

The MAX14916 GUI provides access to all registers and allows full configuration and control of the MAX14916. There are two tabs available to control the EV kit. The System tab provides system-level control of the selected output pins, including static and dynamic control. The Register Settings tab provides per-channel and enhanced diagnostic configuration.

System Tab

The **System** tab allows driving the output pins by configuring each output either on, off, or driving Square wave frequency from pull-down menu, as shown in [Figure 3](#).

Click Drive Pins button on the right-side of the GUI to drive the outputs. The indicators connected to the OUT_ pins show the state of each output.

Connect the oscilloscope probe to OUT_ test points on the **EV kit** to see the output signal in real-time.

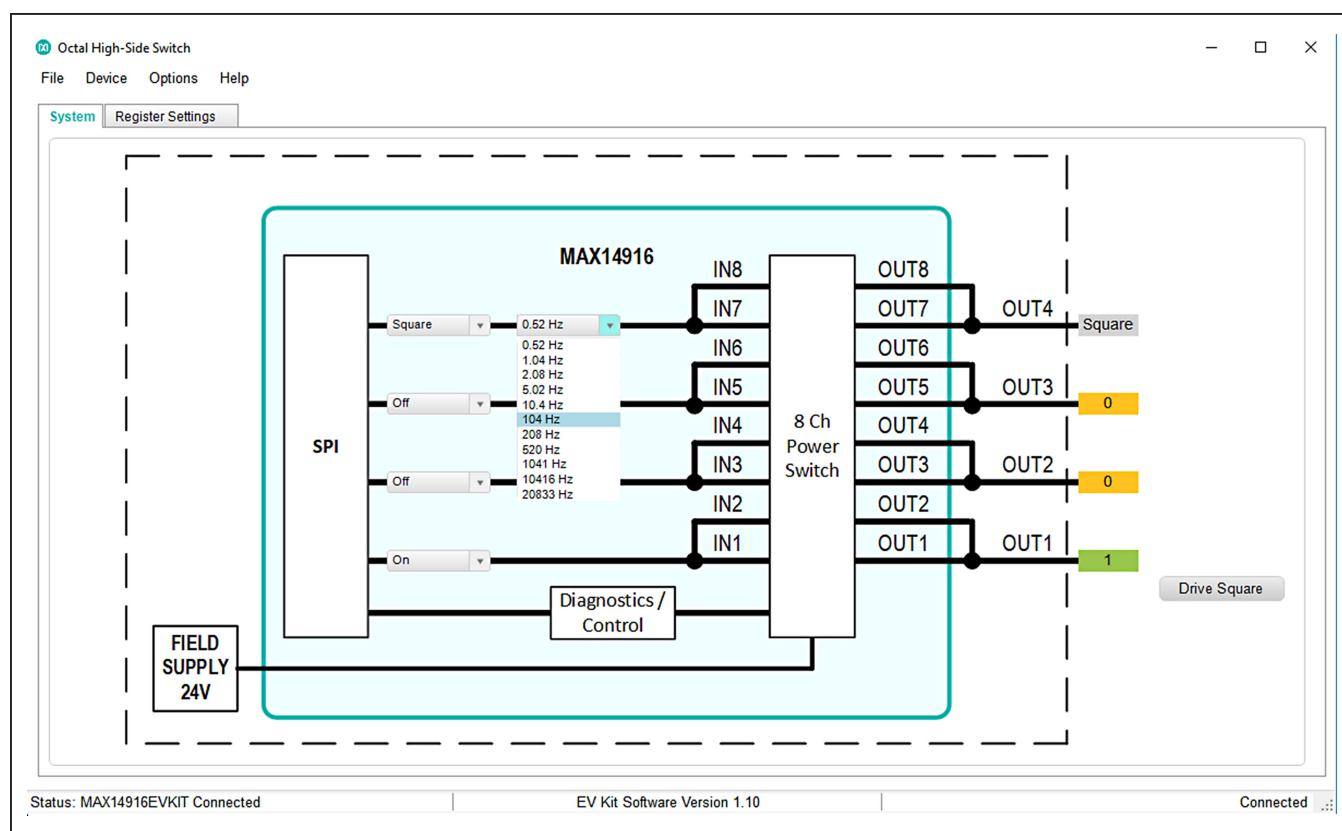


Figure 3. System Tab. Output Configuration

Register Settings Tab

The Register Settings tab allows detailed configuration of the device to explore all the available features, refer to [Figure 4](#). The full register map table of the MAX14916 is located on the left-side of the tab, and the bit-by-bit control and description table is located on the right side. When the register is selected in the register map table, the detailed description of each bit is shown on the right table. The register setting can be changed directly in the register map table by double-clicking on the Value cell. Each data entry should follow by the “Enter/Return” button on the keyboard. The Value cell accepts binary (0b), decimal or hex (0x) numbers. The modified register changes its color from black to red until the data will be actually written to the register. The data in the right table can be changed using drop down menus in the Setting cell for each bit individually. Both tables are synchronized that changes made in one table appear at both tables. There are several write and read options available through the corresponding control buttons located below the register bit-by-bit description table.

When the Auto Write button is selected, any data typed in, or selected through the Setting pull-down menu will be automatically written into the corresponding writable register. The button renamed to Stop Auto Write and auto-write function can be canceled by clicking on this button second time.

When the Auto Read button is selected, the write function is disabled, and the GUI is constantly monitoring the status and fault conditions of the device. Clicking a second time

on the button, which becomes Stop Auto Read, allows canceling this operation.

The Read All button performs a read operation of all registers after each click.

When the fault conditions occur, they will set the bit(s) in the corresponding read-only registers 0x03 to 0x09. The fault condition should be carefully evaluated and removed externally (over/under voltage, overload, open wire, etc.). It is recommended to read Interrupt (0x03) and Global Error (0x09) registers first to identify what kind of fault conditions happened, then read per-channel diagnostic registers 0x04 to 0x08 twice to make sure that condition is gone and to clear interrupts.

The Write Selected button allows to write to the selected register only, while the Write Modified button performs write operation to all modified registers after each click.

There are an I/O pins control and status box and per-bit diagnostic result provided by the MAX14916 after each SPI write or read operation below the buttons. The EN slider allows enable or disable OUTs, CRCEN enables or disables error-detecting code to be added to each SPI transaction and SYNCH slider allows manual synchronization of multiple settings.

A user must match the A0 and A1 jumper position EV kit with the SPI address selected from the Address pulldown menu, located below the register map table. The default address is 00.

Each SPI transaction is displayed in the Device Mode Info box for user convenience.

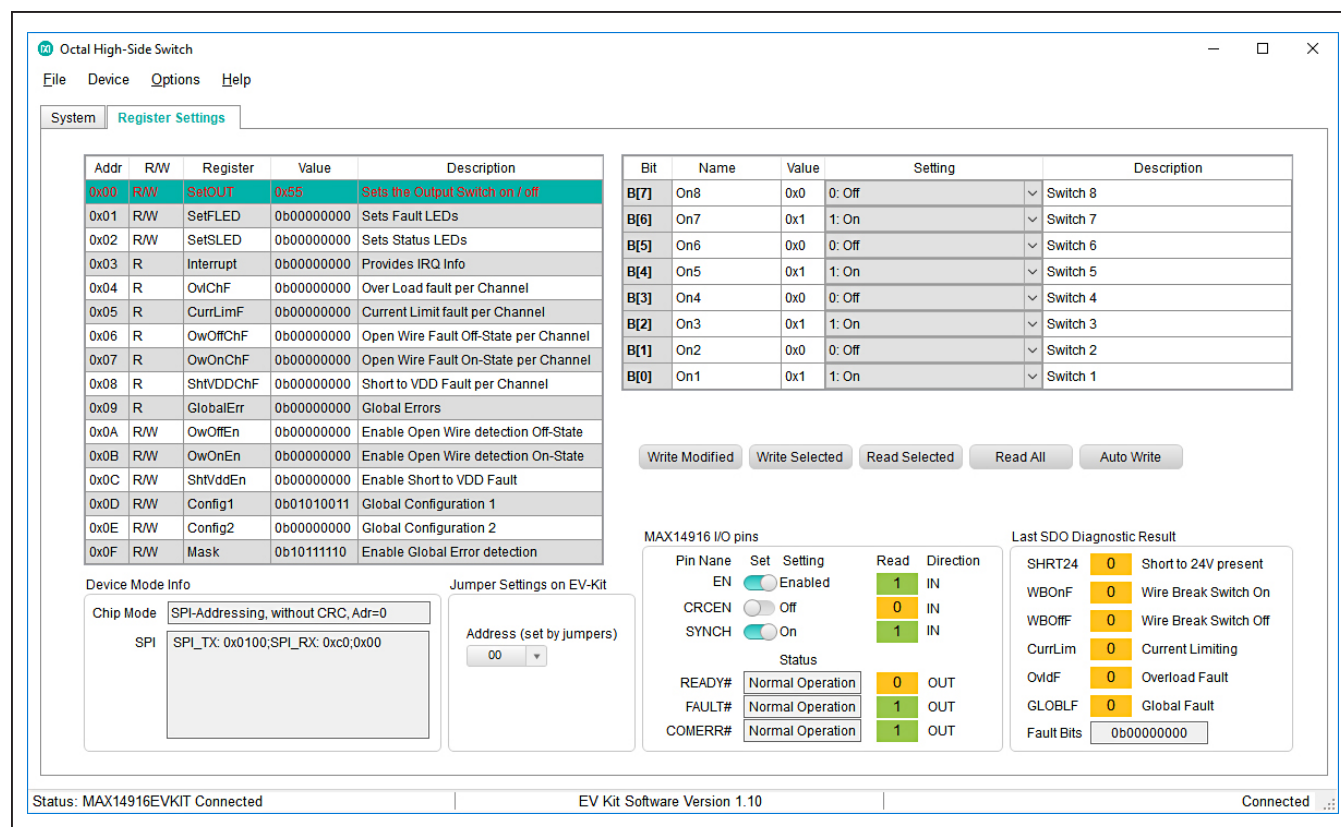


Figure 4. Register Settings Tab

Ordering Information

PART	TYPE
MAX14916EVKIT#	EV Kit
USB2GPIO#	EV Kit

#Denotes RoHS compliance.


MAX14916 EV Kit Bill of Materials

ITEM	REF_DES	QTY	MFG PART #	MANUFACTURER	VALUE	DESCRIPTION
1	C1	1	C3225X7S1H106K250AB; CGA6P3X7S1H106K250AB; GCM32EC71H106K	TDK;TDK;MURATA	10μF	CAPACITOR; SMT (1210); CERAMIC CHIP; 10μF; 50V; TOL = 10%; TG = -55°C TO +125°C; TC = X7S
2	C2, C6	2	GMK212B7105KG; GRM219R7YA105KA12	TAIYO YUDEN; MURATA	1.0μF	CAPACITOR; SMT (0805); CERAMIC; 1UF; 35V; TOL = 10%; MODEL = GMK SERIES; TG = -55°C TO +125°C; TC = X7R
3	C3	1	CGA4J1X7S1C106K125; GCM21BC71C106KE35	TDK;MURATA	10μF	CAPACITOR; SMT (0805); CERAMIC CHIP; 10μF; 16V; TOL = 10%; TG = -55°C TO +125°C; TC = X7S; AUTO
4	C4, C5	2	CC0603KRX7R0BB104; GRM188R72A104KA35; GCJ188R72A104KA01; HMK107B7104KA; 06031C104KAT2A	YAGEO; MURATA; MURATA; TAIYO YUDEN; AVX	0.1μF	CAPACITOR; SMT (0603); CERAMIC CHIP; 0.1μF; 100V; TOL = 10%; TG = -55°C TO +125°C; TC = X7R
5	C7-C10	4	CGA3EANP02A103J080AC	TDK	0.01μF	CAPACITOR; SMT (0603); CERAMIC CHIP; 0.01μF; 100V; TOL = 5%; MODEL = MULTILAYER CERAMIC CHIP CAPACITOR; TC = NPO
6	D1	1	SMBJ36A-E3	VISHAY GENERAL SEMICONDUCTOR	36V	DIODE; TVS; SMB (DO-214AA); VRM = 36V; IPP = 10.3A
7	D2-D5	4	MURA205T3G	ON SEMICONDUCTOR	MURA205T3G	DIODE; RECT; SMA (DO-214AC); PIV = 50V; IF = 2A
8	D6	1	SM30T15AY	ST MICROELECTRONICS	15V	DIODE; TVS; SMC (DO-214AB); VRM = 15V; IPP = 140A
9	DS1-DS4	4	LGL29K-G2J1-24-Z	OSRAM	LGL29K-G2J1-24-Z	DIODE; LED; SMARTLED; GREEN; SMT; PIV = 1.7V; IF = 0.02A
10	DS5-DS8, DS18, DS19	6	LS L29K-G1J2-1-Z	OSRAM	LS L29K-G1J2-1-Z	DIODE; LED; SMART; RED; SMT (0603); PIV = 1.8V; IF = 0.02A; -40°C TO +100°C
11	DS9	1	LTST-C171GKT	LITE-ON ELECTRONICS INC.	LTST-C171GKT	DIODE; LED; STANDARD; GREEN; SMT (0805); PIV = 5.0V; IF = 0.12A; -55°C TO +85°C
12	J1, J2	2	3267	POMONA ELECTRONICS	3267	CONNECTOR; MALE; PANELMOUNT; STANDARD UNINSULATED BANANA JACK; STRAIGHT; 1PIN
13	J3	1	68021-220HLF	AMPHENOL ICC	68021-220HLF	EVKIT PART-CONNECTOR; MALE; THROUGH HOLE; BERGSTIK II BREAKAWAY HEADER; RIGHT ANGLE; 20PINS;
14	J4, J5	2	PCC03SAAN	SULLINS	PCC03SAAN	CONNECTOR; MALE; THROUGH HOLE; BREAKAWAY; STRAIGHT THROUGH; 3PINS; -65°C TO +125°C
15	J6, J8, J9	3	PCC02SAAN	SULLINS	PCC02SAAN	CONNECTOR; MALE; THROUGH HOLE; BREAKAWAY; STRAIGHT THROUGH; 2PINS; -65°C TO +125°C
16	J7	1	PBC08DAAN	SULLINS ELECTRONICS CORP.	PBC08DAAN	CONNECTOR; MALE; THROUGH HOLE; BREAKAWAY; STRAIGHT; 16PINS; -65°C TO +125°C
17	J10	1	OSTTE080104	ON-SHORE TECHNOLOGY INC.	OSTTE080104	CONNECTOR; MALE; THROUGH HOLE; TERMINAL BLOCKS-WIRE TO BOARD; STRAIGHT; 8PINS

MAX14916 EV Kit Bill of Materials (continued)

ITEM	REF_DES	QTY	MFG PART #	MANUFACTURER	VALUE	DESCRIPTION
18	J11-J14	4	9032	KEystone	9032	MACHINE FABRICATED; ROUND-THRU HOLE SPACER; NO THREAD; M3.5; 5/8IN; NYLON
19	OUT1-OUT4	4	5013	KEystone	N/A	TEST POINT; PIN DIA = 0.125IN; TOTAL LENGTH = 0.445IN; BOARD HOLE = 0.063IN; ORANGE; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH;
20	R1, R3, R5-R9, R14, R16, R17	10	CRCW06031K00FK; ERJ-3EKF1001	VISHAY DALE; PANASONIC	1K	RESISTOR; 0603; 1K; 1%; 100PPM; 0.10W; THICK FILM
21	R2	1	ERJ-3EKF28R0	PANASONIC	28	RESISTOR; 0603; 28Ω; 1%; 100PPM; 0.10W; THICK FILM
22	R4	1	CRCW0603162KFK	VISHAY DALE	162K	RESISTOR; 0603; 162KΩ; 1%; 100PPM; 0.1W; THICK FILM
23	R10, R11, R13, R15	4	CRCW06035K60FK	VISHAY DALE	5.6K	RESISTOR, 0603, 5.6KΩ, 1%, 100PPM, 0.10W, THICK FILM
24	R12	1	CRCW060324K9FK; ERJ-3EKF2492	VISHAY DALE; PANASONIC	24.9K	RESISTOR; 0603; 24.9KΩ; 1%; 100PPM; 0.10W; THICK FILM
25	R18, R19	2	301-10K-RC	XICON	10K	RESISTOR, 0603, 10KΩ, 5%, 200PPM, 1/16W, THICK FILM
26	R20-R23	4	CRCW0603499KFK; ERJ-3EKF4993	VISHAY DALE; PANASONIC	499K	RESISTOR; 0603; 499KΩ; 1%; 100PPM; 0.1W; THICK FILM
27	SU1-SU5	5	S1100-B; SX1100-B; STC02SYAN	KYCON; KYCON; SULLINS ELECTRONICS CORP.	SX1100-B	TEST POINT; JUMPER; STR; TOTAL LENGTH = 0.24IN; BLACK; INSULATION = PBT; PHOSPHOR BRONZE CONTACT=GOLD PLATED
28	TP1, TP5, TP9-TP11	5	5011	KEystone	N/A	TEST POINT; PIN DIA = 0.125IN; TOTAL LENGTH = 0.445IN; BOARD HOLE = 0.063IN; BLACK; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH;
29	TP2, TP6-TP8	4	5010	KEystone	N/A	TEST POINT; PIN DIA = 0.125IN; TOTAL LENGTH = 0.445IN; BOARD HOLE = 0.063IN; RED; PHOSPHOR BRONZE WIRE SIL;
30	TP3, TP4	2	5009	KEystone	N/A	TEST POINT; PIN DIA = 0.125IN; TOTAL LENGTH = 0.35IN; BOARD HOLE = 0.063IN; YELLOW; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH;
31	U1	1	MAX14916A	MAXIM	MAX14916A	EVKIT PART - IC; OCTAL 1A HIGH-SIDE SWITCH WITH DIAGNOSTICS; FCQFN48-EP; PACKAGE OUTLINE: 21-100232; PACKAGE LAND PATTERN: 90-100077
32	PCB	1	MAX14916	MAXIM	PCB	PCB:MAX14916
TOTAL		86				

MAX14916 EV Kit Schematic

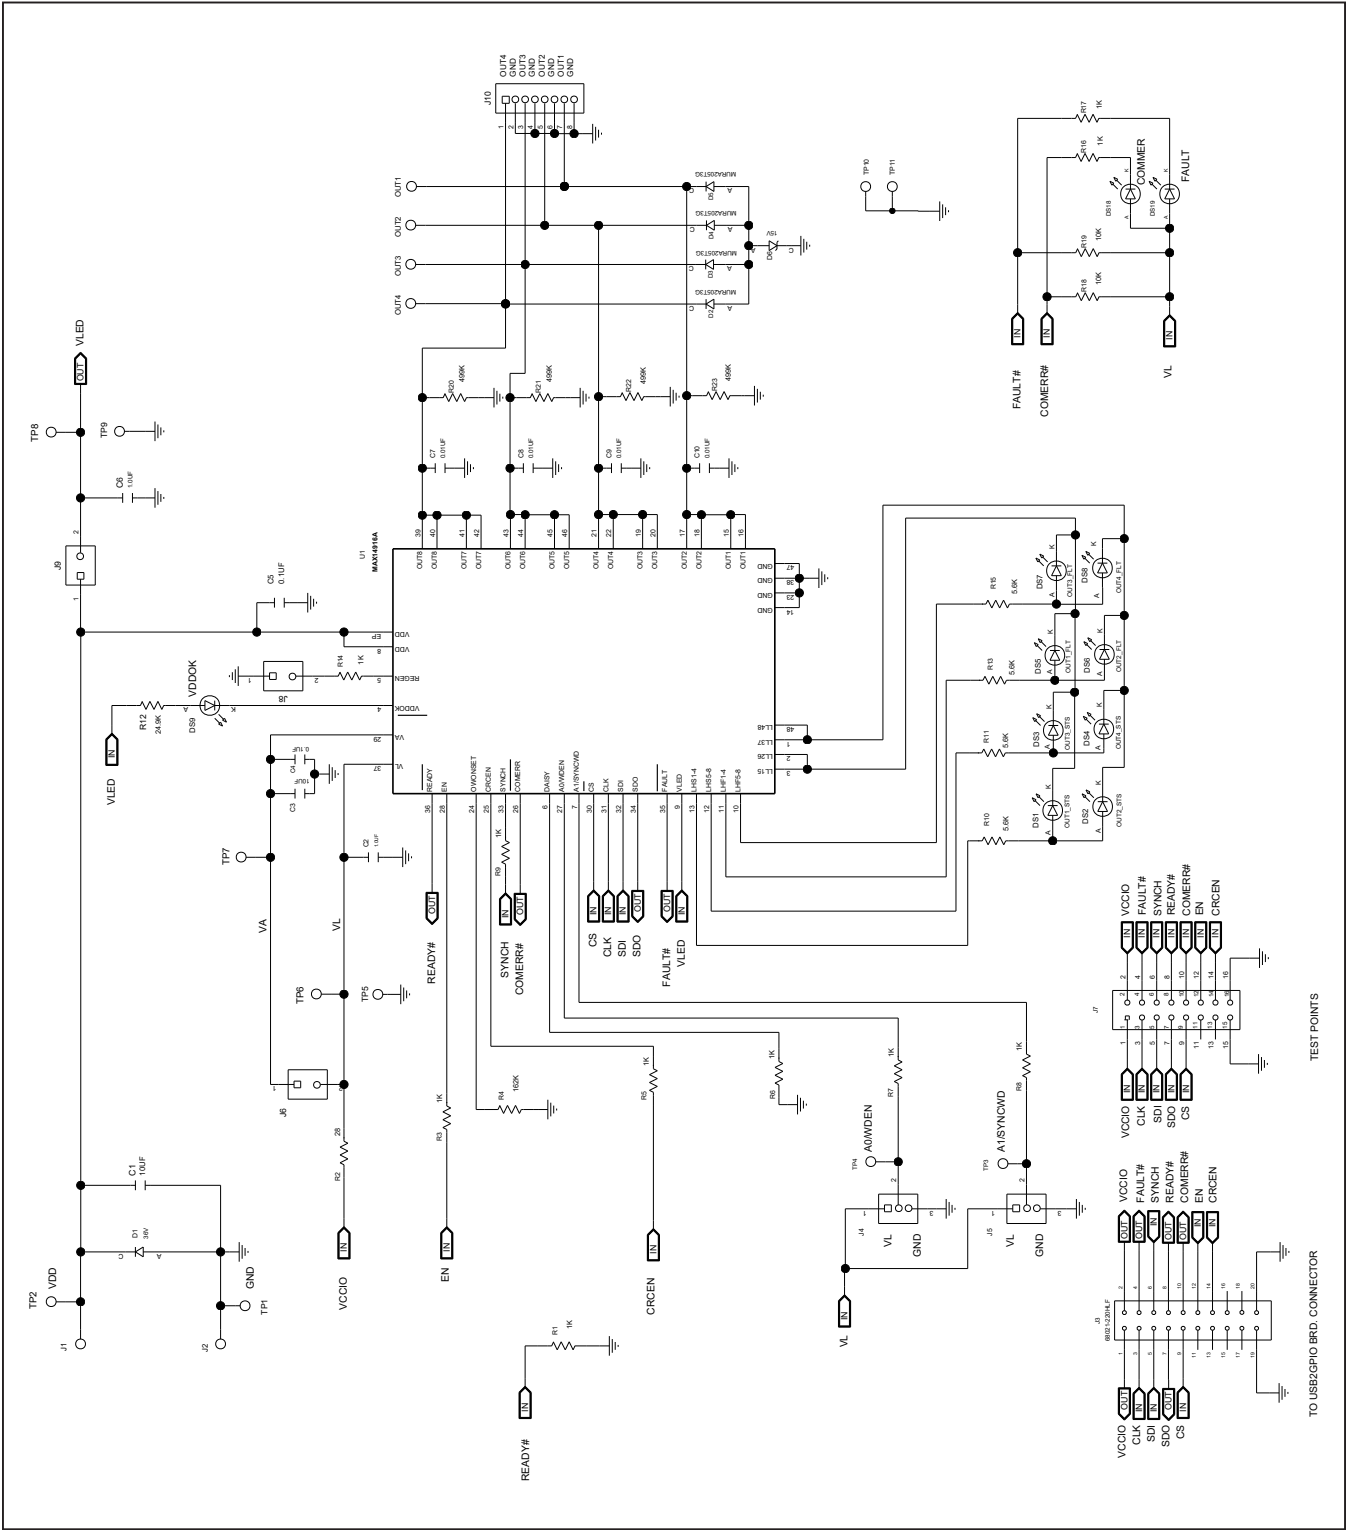

MAX14916_EVKIT_B

maxim integrated™

TP10

TP9

TP8

TP7

TP6

TP5

TP4

TP3

TP2

TP1

TP11

J10

J7

J1

J2

R1

R2

R3

R4

R5

R6

R7

R8

R9

R10

R11

R12

R13

R14

R15

R16

R17

R18

R19

C1

C2

C3

C4

C5

C6

D1

D51

D52

D53

D54

D55

D56

D57

D58

D59

U1

OUT1

OUT2

OUT3

OUT4

OUT5

OUT6

OUT7

OUT8

OUT9

OUT10

OUT11

OUT12

OUT13

OUT14

OUT15

OUT16

OUT17

OUT18

OUT19

OUT20

OUT21

OUT22

OUT23

OUT24

OUT25

OUT26

OUT27

OUT28

OUT29

OUT30

OUT31

OUT32

OUT33

OUT34

OUT35

OUT36

OUT37

OUT38

OUT39

OUT40

OUT41

OUT42

OUT43

OUT44

OUT45

OUT46

OUT47

OUT48

OUT49

OUT50

OUT51

OUT52

OUT53

OUT54

OUT55

OUT56

OUT57

OUT58

OUT59

OUT60

OUT61

OUT62

OUT63

OUT64

OUT65

OUT66

OUT67

OUT68

OUT69

OUT70

OUT71

OUT72

OUT73

OUT74

OUT75

OUT76

OUT77

OUT78

OUT79

OUT80

OUT81

OUT82

OUT83

OUT84

OUT85

OUT86

OUT87

OUT88

OUT89

OUT90

OUT91

OUT92

OUT93

OUT94

OUT95

OUT96

OUT97

OUT98

OUT99

OUT100

OUT101

OUT102

OUT103

OUT104

OUT105

OUT106

OUT107

OUT108

OUT109

OUT110

OUT111

OUT112

OUT113

OUT114

OUT115

OUT116

OUT117

OUT118

OUT119

OUT120

OUT121

OUT122

OUT123

OUT124

OUT125

OUT126

OUT127

OUT128

OUT129

OUT130

OUT131

OUT132

OUT133

OUT134

OUT135

OUT136

OUT137

OUT138

OUT139

OUT140

OUT141

OUT142

OUT143

OUT144

OUT145

OUT146

OUT147

OUT148

OUT149

OUT150

OUT151

OUT152

OUT153

OUT154

OUT155

OUT156

OUT157

OUT158

OUT159

OUT160

OUT161

OUT162

OUT163

OUT164

OUT165

OUT166

OUT167

OUT168

OUT169

OUT170

OUT171

OUT172

OUT173

OUT174

OUT175

OUT176

OUT177

OUT178

OUT179

OUT180

OUT181

OUT182

OUT183

OUT184

OUT185

OUT186

OUT187

OUT188

OUT189

OUT190

OUT191

OUT192

OUT193

OUT194

OUT195

OUT196

OUT197

OUT198

OUT199

OUT200

OUT201

OUT202

OUT203

OUT204

OUT205

OUT206

OUT207

OUT208

OUT209

OUT210

OUT211

OUT212

OUT213

OUT214

OUT215

OUT216

OUT217

OUT218

OUT219

OUT220

OUT221

OUT222

OUT223

OUT224

OUT225

OUT226

OUT227

OUT228

OUT229

OUT230

OUT231

OUT232

OUT233

OUT234

OUT235

OUT236

OUT237

OUT238

OUT239

OUT240

OUT241

OUT242

OUT243

OUT244

OUT245

OUT246

OUT247

OUT248

OUT249

OUT250

OUT251

OUT252

OUT253

OUT254

OUT255

OUT256

OUT257

OUT258

OUT259

OUT260

OUT261

OUT262

OUT263

OUT264

OUT265

OUT266

OUT267

OUT268

OUT269

OUT270

OUT271

OUT272

OUT273

OUT274

OUT275

OUT276

OUT277

OUT278

OUT279

OUT280

OUT281

OUT282

OUT283

OUT284

OUT285

OUT286

OUT287

OUT288

OUT289

OUT290

OUT291

OUT292

OUT293

OUT294

OUT295

OUT296

OUT297

OUT298

OUT299

OUT300

OUT301

OUT302

OUT303

OUT304

OUT305

OUT306

OUT307

OUT308

OUT309

OUT310

OUT311

OUT312

OUT313

OUT314

OUT315

OUT316

OUT317

OUT318

OUT319

OUT320

OUT321

OUT322

OUT323

OUT324

OUT325

OUT326

OUT327

OUT328

OUT329

OUT330

OUT331

OUT332

OUT333

OUT334

OUT335

OUT336

OUT337

OUT338

OUT339

OUT340

OUT341

OUT342

OUT343

OUT344

OUT345

OUT346

OUT347

OUT348

OUT349

OUT350

OUT351

OUT352

OUT353

OUT354

OUT355

OUT356

OUT357

OUT358

OUT359


OUT360

OUT361


Figure 1 shows a grayscale image of a printed circuit board (PCB) layout. The board is rectangular with a central vertical slot. It features various components including circular pads, rectangular pads, and a grid of small squares. A scale bar at the bottom left indicates a length of 1.0 inch.

Maxim Integrated | 11


MAX14916 EV Kit PCB Layout Diagrams (continued)

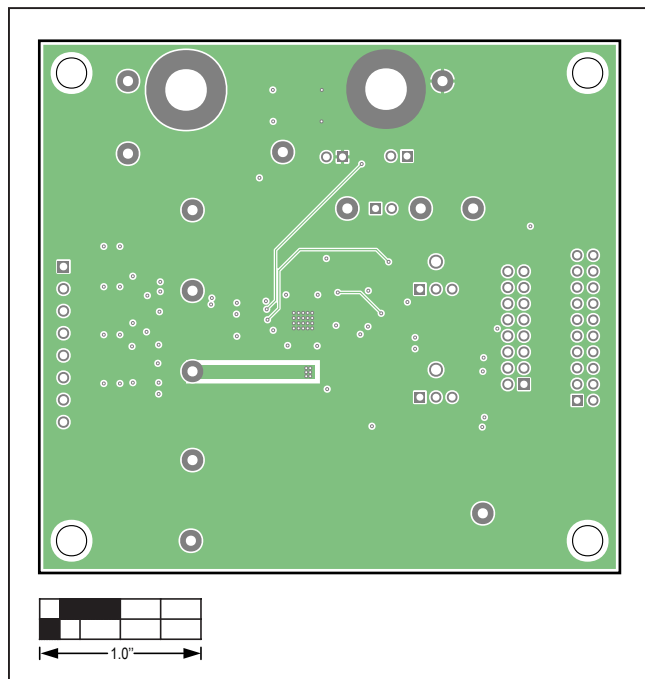

MAX14916 EV Kit PCB Layout—Internal 3

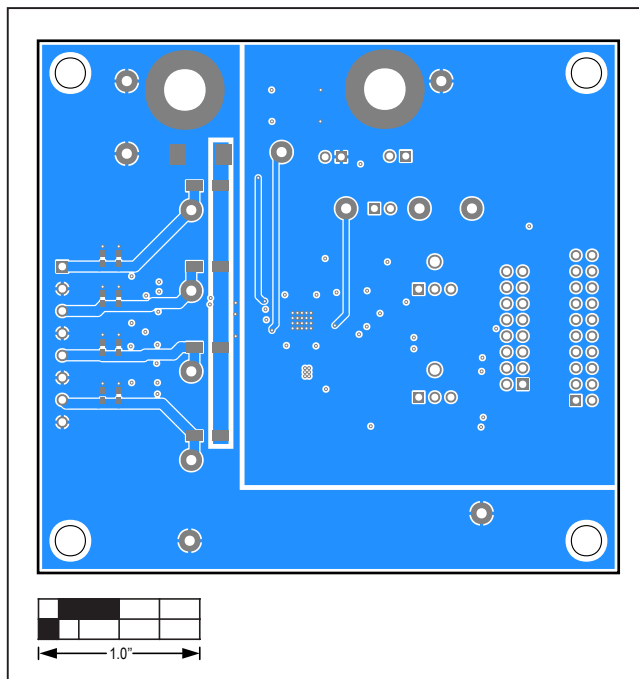

MAX14916 EV Kit PCB Layout—Bottom View

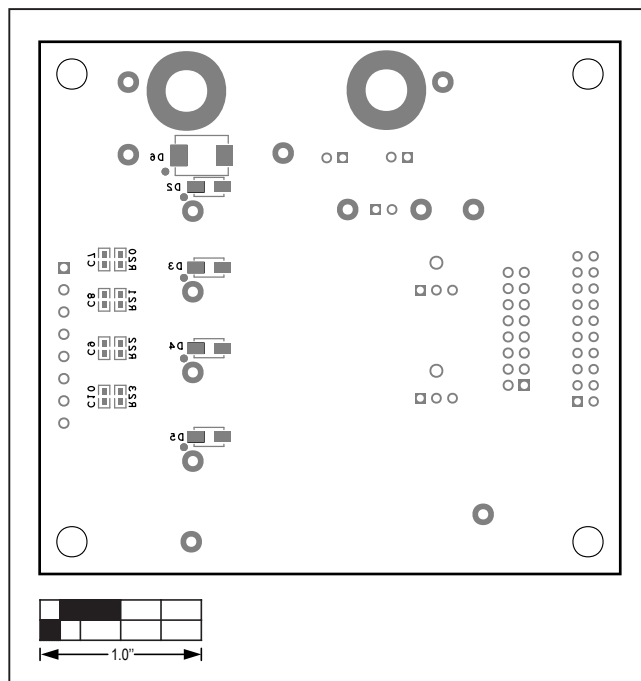

MAX14916 EV Kit PCB Layout—Bottom Silkscreen

Revision History

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	9/19	Initial release	—

For pricing, delivery, and ordering information, please visit Maxim Integrated's online storefront at <https://www.maximintegrated.com/en/storefront/storefront.html>.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.