

# MSD INSTALLATION INSTRUCTIONS

## MSD Pro Power™ LS Coil Red, PN 8286, Single, PN 82868, 8 Pack Black, PN 82863, Single, PN 828683, 8 Pack

**ONLINE PRODUCT REGISTRATION:** Register your MSD product online. Registering your product will help if there is ever a warranty issue with your product and helps the MSD R&D team create new products that you ask for! Go to [www.msperformance.com/registration](http://www.msperformance.com/registration).

**IMPORTANT:** Read the instructions before attempting the installation.

### Parts Included, Single Coil:

1 - Coil  
2 - 5mm X 30mm Hex Head Bolt  
2 - 5.3mm X 11m X 1.4 Washers  
2 - .281" X .625 X .125 Shims  
1 - 2-Pin Connector (installed)

### Parts Included, 8 Pack Coils


8 - Coils  
8 - 2-Pin Connectors  
16 - 5.3mm X 11m X 1.4 Washers  
16 - .281" X .625 X .125 Shims  
16 - 5mm X 30mm Hex Head Bolt

**WARNING:** During installation, disconnect the battery cables. When disconnecting the battery, always remove the Negative cable first and install it last.

There are several style LS coils used so it is important to verify that the PN 8286 is the correct coil for your application prior to disassembly. The PN 8286 was designed for L-Series engines.

The original coil will have a heat sink, an aluminum looking panel, on one side (Figure 1). It also has the socket for the spark plug wire on the opposite side of the coil harness connector. (If the spark plug wire and harness connector are on the same side, you may require the MSD PN 8285 coil.)

**IMPORTANT:** Notice that the MSD Coil has a 2-pin connector (Figure 1). This 2-pin connector must be plugged in to the coil. If not, the coil will not operate. This additional connector is for an optional ignition/timing control.

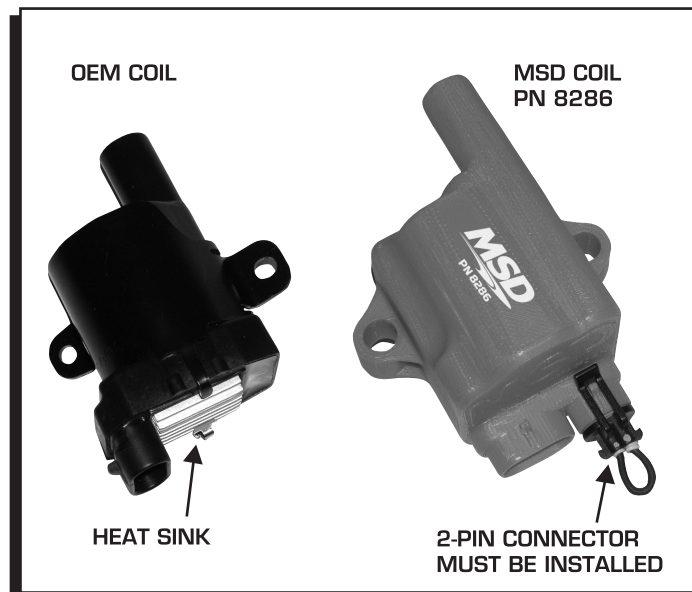

**Figure 1 Coil Identification**

### HIGH VOLTAGE SUPPLY HARNESS

MSD has found that the OE used a variety of different gauge wiring to supply the input voltage through the main coil harness. In cases of sustained high rpm and extreme loads, there may be insufficient voltage being supplied to the coils that could cause a check engine light and lower performance expectations.

MSD offers an accessory harness with a built-in relay and fuse that will ensure full delivery of the input voltage to the coils. The Harness, PN 88867, will plug-into the factory coil harness on each cylinder bank. This can be purchased through your MSD dealer, or by calling our tech department at 915-855-7123.

# **INSTALLATION INSTRUCTIONS**

## **MOUNTING**

The MSD Coil is designed to be a direct replacement but due to the number of applications available, the mounting of the coils may be slightly different. MSD has supplied different hardware to assist in mounting the MSD Coil. The OEM brackets and the holes are designed to be self tapping. MSD supplies stainless steel hardware which is softer and should not be used to create new threads. It is recommended to use the original coil retaining bolts to tap and chase the threads before installing the new MSD stainless steel bolts. You can also use an M5x0.8 tap to chase the mounting holes.

1. Remove the coil covers (if supplied) from the valve covers.
2. Remove the spark plug wire from the coil.
3. Disconnect the factory connector, remove the coil retaining bolts and remove the coil.
4. Use an original bolt or M5x0.8 tap to cut threads into the bracket before installing the MSD coil and new hardware.
5. Install the MSD Coil in the same position as the original coil. In some cases, the supplied shim may be required to space the coil off the bracket. Install the thin washer to the new bolt and tighten.
6. Connect the wiring harness and spark plug wire. Ensure that the 2-pin connector is installed in the coil.

**Note:** MSD Super Conductor 8.5mm Spark Plug wire sets, PN 32813, PN 32819, PN 32823, PN 32829, PN 33823 or PN 33829 are recommended.

### **Service**

In case of malfunction, this MSD component will be repaired free of charge according to the terms of the warranty. When returning MSD components for warranty service, **Proof of Purchase** must be supplied for verification. After the warranty period has expired, repair service is based on a minimum and maximum fee.

**All returns must have a Return Material Authorization (RMA) number** issued to them before being returned. To obtain an RMA number please contact MSD Customer Service at 1 (888) MSD-7859 or visit our website at [www.msdpower.com/rma](http://www.msdpower.com/rma) to automatically obtain a number and shipping information.

When returning the unit for repair, leave all wires at the length in which you have them installed. Be sure to include a detailed account of any problems experienced, and what components and accessories are installed on the vehicle. The repaired unit will be returned as soon as possible using Ground shipping methods (ground shipping is covered by warranty). For more information, call MSD at (915) 855-7123. MSD technicians are available from 7:00 a.m. to 5:00 p.m. Monday - Friday (mountain time).

### **Limited Warranty**

MSD warrants this product to be free from defects in material and workmanship under its intended normal use\*, when properly installed and purchased from an authorized MSD dealer, for a period of one year from the date of the original purchase. This warranty is void for any products purchased through auction websites. If found to be defective as mentioned above, it will be repaired or replaced at the option of MSD. Any item that is covered under this warranty will be returned free of charge using Ground shipping methods.

This shall constitute the sole remedy of the purchaser and the sole liability of MSD. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representation whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall MSD or its suppliers be liable for special or consequential damages.

\*Intended normal use means that this item is being used as was originally intended and for the original application as sold by MSD. Any modifications to this item or if it is used on an application other than what MSD markets the product, the warranty will be void. It is the sole responsibility of the customer to determine that this item will work for the application they are intending. MSD will accept no liability for custom applications.