

Multicell Battery Gas Gauge with Temperature, Voltage and Current Measurement

DESCRIPTION

Demonstration circuit 1812A-A (Figure 1) features the [LTC®2943](#). Demonstration circuit 1812A-B features the [LTC2944](#). Demonstration circuit 1812A-C features the [LTC2943-1](#). The LTC2943/LTC2943-1 has an operating range of 3.6V to 20V, while the LTC2944 has an operating range of 3.6V to 60V, making all three devices perfectly suited for multicell battery applications. A precision analog coulomb counter integrates current measured through a sense resistor between the battery's positive terminal and the load or charger. The LTC2943/LTC2943-1 measures voltage, current and temperature with an internal 14-bit No Latency $\Delta\Sigma$ ADC. The LTC2944 measures voltage, current and temperature with an internal 16-bit No Latency $\Delta\Sigma$ ADC. The measurements are stored in internal registers accessible via the onboard SMBus/I²C interface.

The LTC2943/LTC2943-1/LTC2944 has programmable high and low thresholds for all measured quantities. If a programmed threshold is exceeded, the device reports an alert using either the SMBus alert protocol or by setting a flag in the internal status register.

The LTC2943 and LTC2944 require only a single low value sense resistor to set the measured current range.

The LTC2943-1, however, has an integrated sense resistor of 50m Ω which sets the maximum current measurement to 1A. The default value assembled on the DC1812A-A and DC1812A-B is 100m Ω for a maximum current measurement of 500mA. The DC1812A-C which showcases the LTC2943-1 has the onboard sense resistor omitted in favor of the integrated 50m Ω sense resistor. All three parts have a software-configurable charge complete/alert pin. When the pin is set for charge complete, a jumper connects the pushbutton which simulates a logic low input at the $\overline{\text{AL/CC}}$ pin. This sets the ACR register to FFFFh which indicates a full battery. When the pin is configured for alert, the same jumper is used to connect a red LED that indicates an alert is present.

The DC1812A is a part of the QuikEval™ system for quick evaluation with a host controller through a PC using the DC590 or DC2026.

Design files for this circuit board are available at <http://www.linear.com/demo/DC1812A>

LT, LT, LTC, LTM, Linear Technology and the Linear logo are registered trademarks and No Latency $\Delta\Sigma$ and QuikEval are trademarks of Linear Technology Corporation. All other trademarks are the property of their respective owners.

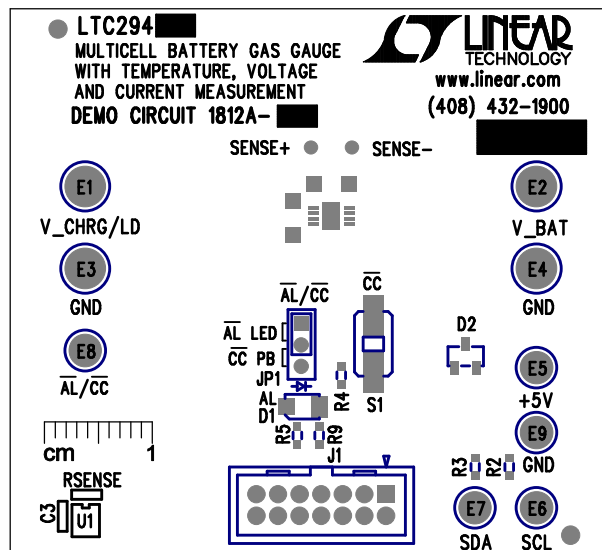


Figure 1. DC1812A

QUICK START PROCEDURE

Demonstration circuit 1812A is easy to set up to evaluate the performance of the LTC2943/LTC2943-1/LTC2944. Refer to Figure 2 for proper measurement equipment setup and follow the procedure below.

1. Connect a Li-Ion battery across V_BAT and GND. Multiple Li-Ion batteries can also be used as long as the total voltage does not exceed the operating voltage of the device. The LTC2943/LTC2943-1 has a maximum operating voltage of 20V, so for a 4.2V lithium ion battery the maximum cell count would be 4 cells. The LTC2944 has a maximum operating voltage of 60V, so for a 4.2V lithium-ion battery the maximum cell count would be 14 cells.
2. Connect a load across V_CHRG/LD and GND for battery discharge measurement.
3. Connect 3.6V to 20V (LTC2943/LTC2943-1) or 3.6V to 60V (LTC2944) battery charger supply across V_CHRG/LD and GND for battery charge measurement. Up to 500mA supplied to the battery can be measured with the board default 100mΩ sense resistor.
4. Connect a DC590 to 14-pin connector J1 for evaluation with QuikEval, or connect a host controller I²C bus to the SDA, SCL and GND test turrets.
5. If a host I²C controller is used, then provide a bus pull-up voltage to the +5V turret, else start QuikEval software on PC.
6. Read and write to the LTC2943/LTC2943-1/LTC2944 through I²C.
7. Through I²C, configure the $\overline{\text{AL/CC}}$ pin. Set JP1 accordingly.
8. If $\overline{\text{AL/CC}}$ is set for charge complete, use pushbutton switch S1 to simulate a logic low from a controller to indicate a fully charged battery.

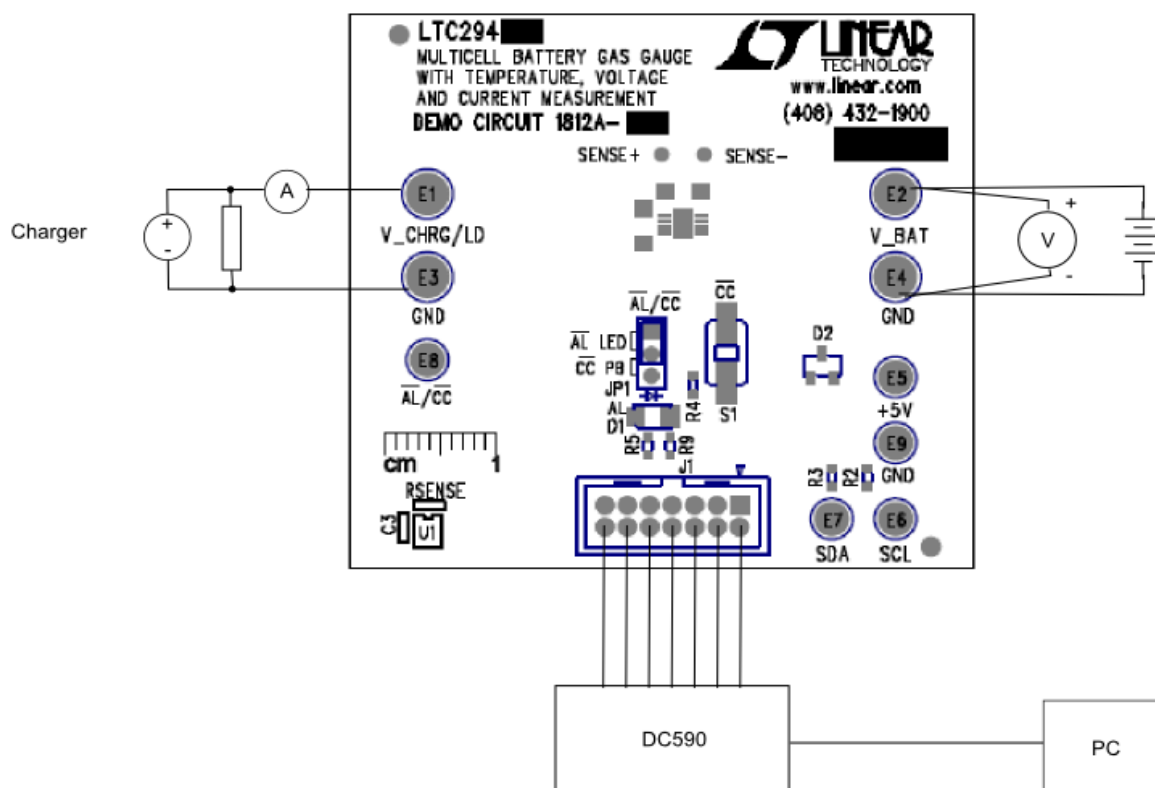


Figure 2. DC1812A Basic Setup

QUIKEVAL INTERFACE

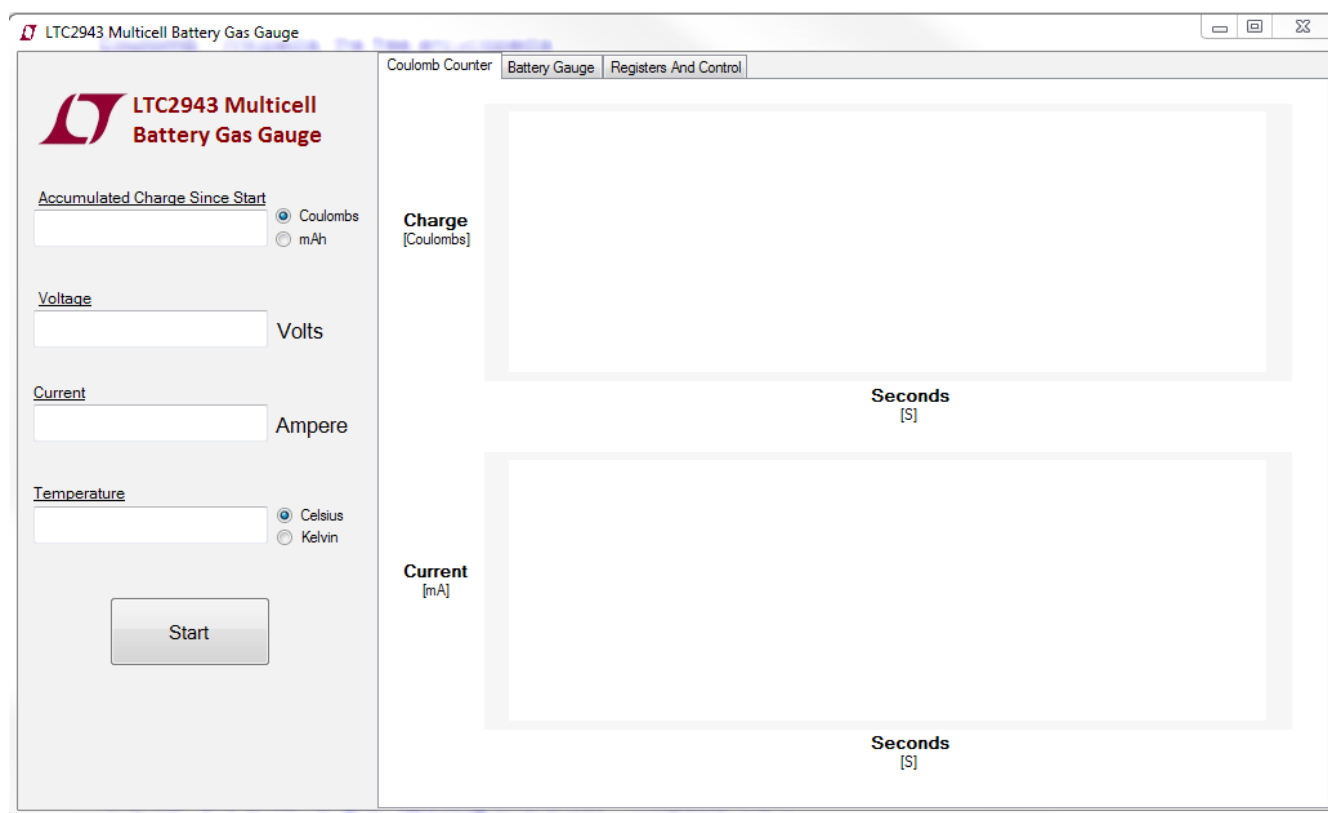


Figure 3. DC1812A QuikEval Interface

The DC1812A can be connected to a DC590 and used with the QuikEval software. The DC590 connects to a PC through USB. QuikEval automatically detects the demo board and brings up the LTC2943/LTC2944 evaluation software interface (Figure 3).

Interface Design

The QuikEval interface consists of three tabs along with a column that displays accumulated charge since the start of the scan, voltage, current and temperature. A start button allows convenient polling of the registers.

INFO COLUMN

Accumulated Charge Since Start (ACR Display)

The “Accumulated Charge Since Start” text box displays the change in accumulated charge since the start of a scan. The initial data in the ACR registers (registers C and D)

is first stored at the start of a scan and then any change in charge is reported in the ACR text box. This data can be displayed in one of two formats: coulombs and mAh.

Voltage and Current Display

Data from the voltage ADC (registers I and J) and the current ADC (registers O and P) is displayed here in volts and amperes, respectively. If the current falls into the mA range then the interface automatically updates the units accordingly. The display indicates the current as seen from the battery. Hence, if a negative value is displayed, the battery is discharging. If a positive value is displayed, the battery is charging.

Temperature Display

Data from the temperature ADC (register U and V) is displayed here. It can be displayed in two formats: Celsius and Kelvin.

QUIKEVAL INTERFACE

Start Button

Click on start to begin a polling routine that is based on the selected ADC mode. By default the ADC mode is set to automatic mode which updates the interface every 60ms. If the scan ADC mode is selected from the “Registers and Control” tab, then the interface would update every 10s. The ADC mode can be switched in real time during a scan and the interface will respond accordingly.

The interface recognizes when it is scanning and replaces the start button with a stop button during a polling routine. Similarly, for a single update, select the manual mode and click start. The LTC2943/LTC2943-1/LTC2944 will take a snapshot of the charge, voltage, current and temperature after which it will immediately go into sleep mode in which

only the charge accumulator is running. For convenience the GUI will hold the values of the snapshot for 2 seconds before updating the interface and displaying “ADC Off” in the current, voltage and temperature text box.

COULOMB COUNTER TAB

This tab contains time based graphical plots of charge and current. The charge plot displays the change in accumulated charge since the start of a scan with respect to time in mAh or coulombs depending on user input. The current plot displays the change in current with respect to time in mA. If the current exceeds 1A, then the graph auto scales to display the current in units of amperes. If a scan is restarted, the plots start from the beginning. If manual mode is selected, only the charge plot is active.

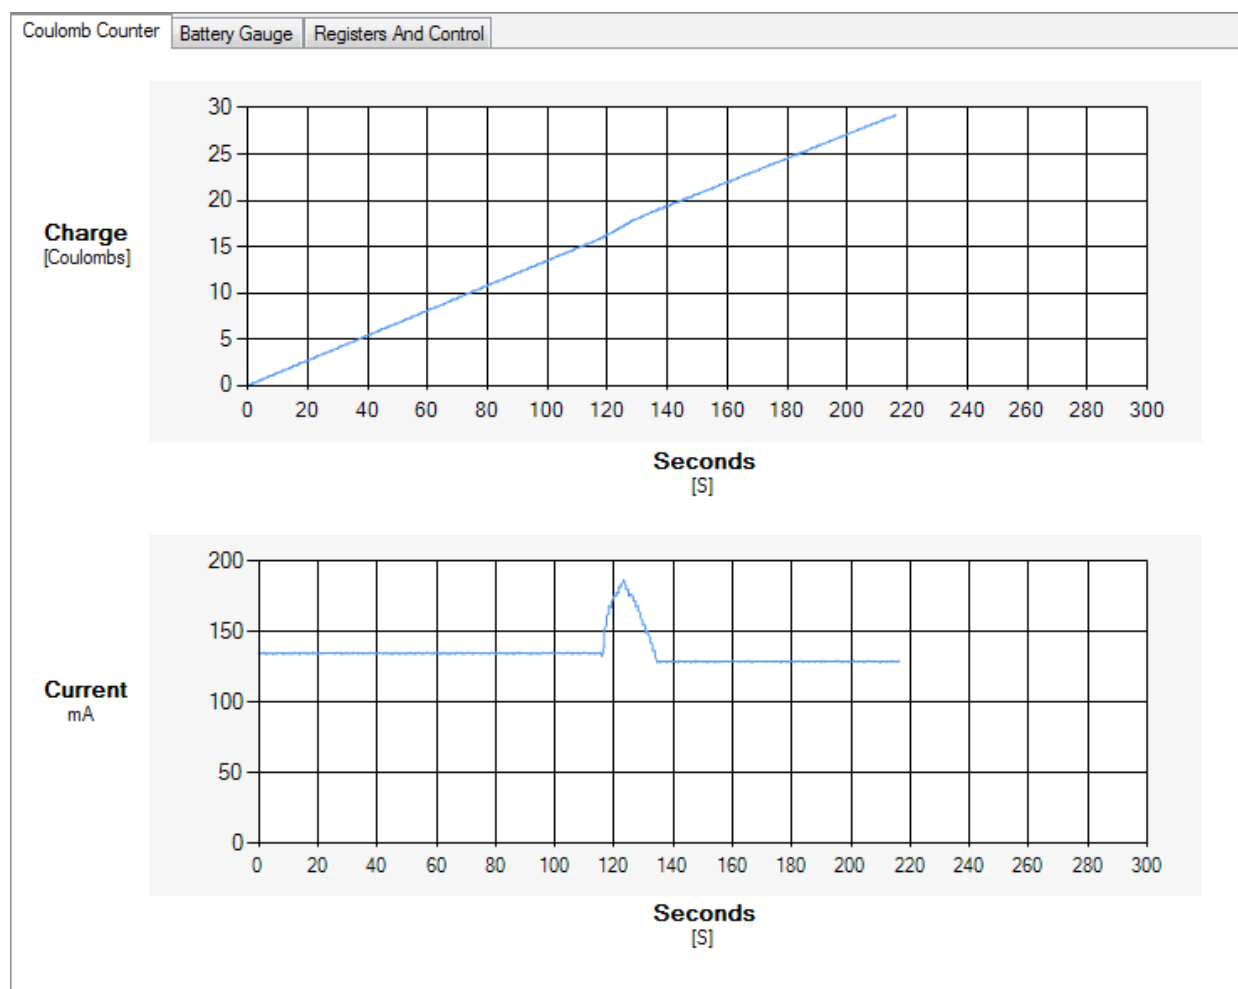


Figure 4. Coulomb Counter Tab

dc1812afa

QUIKEVAL INTERFACE

Once the plotted line reaches 300, the x-axis scrolls to accommodate by 30 second intervals.

BATTERY GAUGE TAB

This tab contains controls to set up the battery gas gauge and consists of two sections: User Input and Initialization.

User Input

For applications that have low current and a large battery, it is possible to get a q_{LSB} size smaller than $Q_{BAT}/2^{16}$, causing the 16-bit accumulated charge register to underflow before the battery is exhausted or overflow during charge.

In such cases, R_{SENSE} should be sized according to the following relationship:

$$R_{SENSE} \leq \frac{0.340\text{mAh} \cdot 2^{16}}{Q_{BAT}} \cdot 50\text{m}\Omega$$

where Q_{BAT} is in mAh. Similarly, for applications with a small battery but high maximum current the q_{LSB} can get quite large with respect to the battery capacity causing a loss in digital resolution in the accumulated charge register. To address this, the LTC2943/LTC2943-1/LTC2944 includes a programmable prescaler. Lowering the prescaler factor M reduces q_{LSB} to better match the accumulated charge

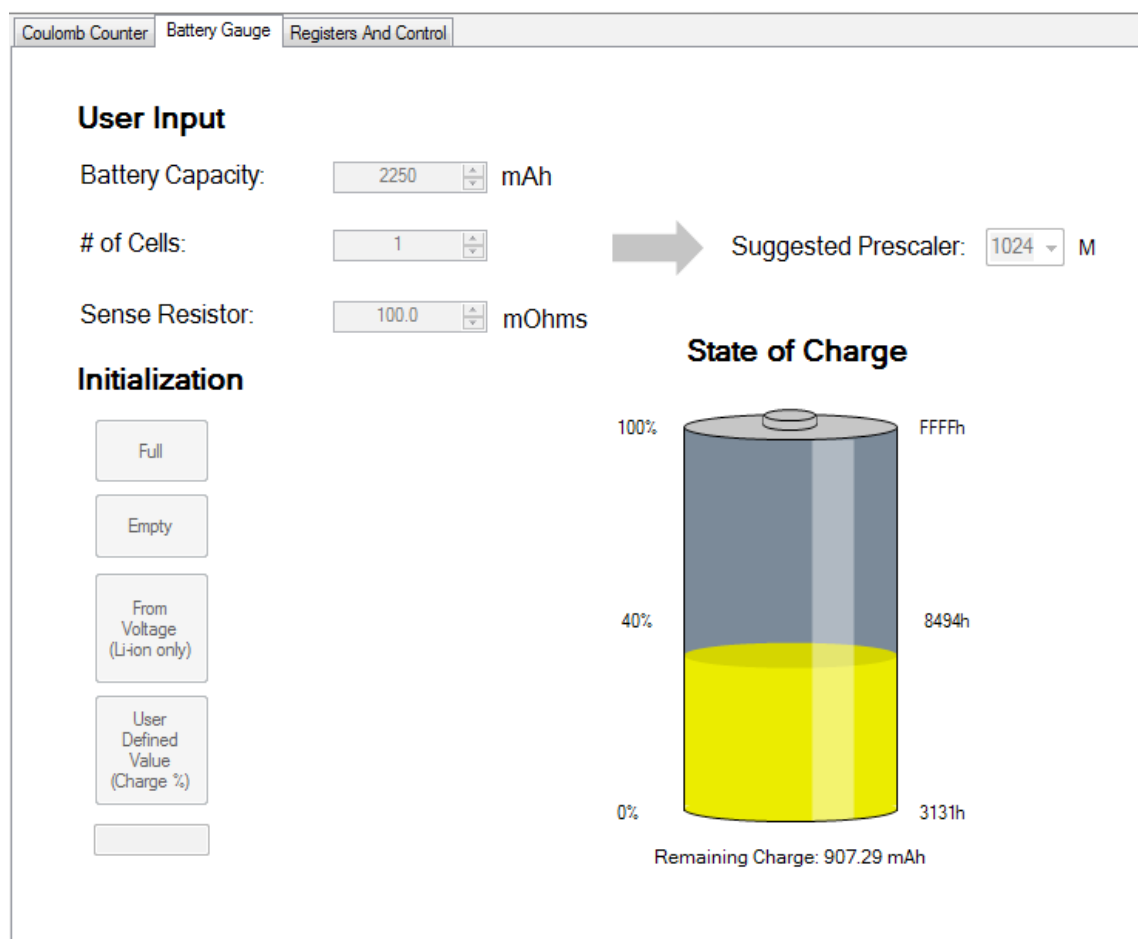


Figure 5. Battery Gauge Tab

QUIKEVAL INTERFACE

register to the capacity of the battery. M can be chosen between 1 and its default value of 4096. The charge LSB then becomes:

$$q_{\text{LSB}} = 0.34\text{mAh} \cdot \frac{50\text{m}\Omega}{R_{\text{SENSE}}} \cdot \frac{M}{4096}$$

To avoid unnecessary calculation, the interface conveniently suggests a prescalar value to use based on the entered battery capacity and sense resistor value. This prescalar can be overridden by the user with the help of the prescalar dropdown box. In the case of an override, the prescalar dropdown box will be colored red giving a visual cue that the prescalar chosen is not the suggested one.

The interface also warns the user in case the current is too small with respect to the battery capacity by giving an error message similar to the one shown in Figure 6.

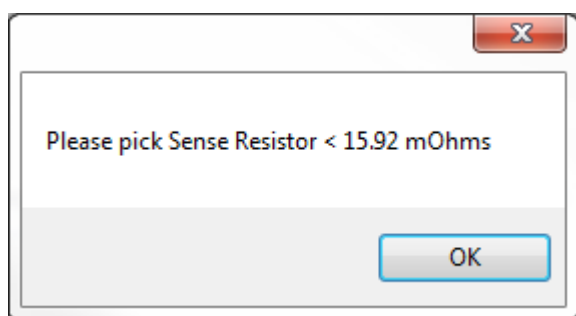


Figure 6. Low Current Warning

Initializing the Accumulated Charge Register

By default, the ACR register has the initial value of 0x7FFF. The ACR register can be initialized to full, empty or set to a user defined level based on battery capacity.

The “From Voltage (Li-ion Only)” button gives an estimate of the initial ACR value by sensing the voltage and ambient temperature of the battery being used. It compares the voltage and temperature values to the discharge curves of a Panasonic CGR18650CG lithium ion battery to estimate the battery’s state of charge. Due to the fact that the discharge curve for each lithium ion battery is different, the state of charge calculated this way might not be accurate.

It is strongly advised to use a characterized battery whose state of charge is already known and to initialize the ACR value accordingly.

Battery Gas Gauge

The gas gauge shows the battery’s state of charge. The upper battery limit is always 0xFFFF while the lower limit is dependent on the battery capacity and q_{LSB} size. This lower limit is calculated based off of R_{SENSE} and prescalar M, and displayed in hexadecimal in the lower right corner of the gas gauge. Battery charge percentage as well as the ACR register value is shown alongside the gas gauge. The amount of charge left is also represented in mAh under the battery widget.

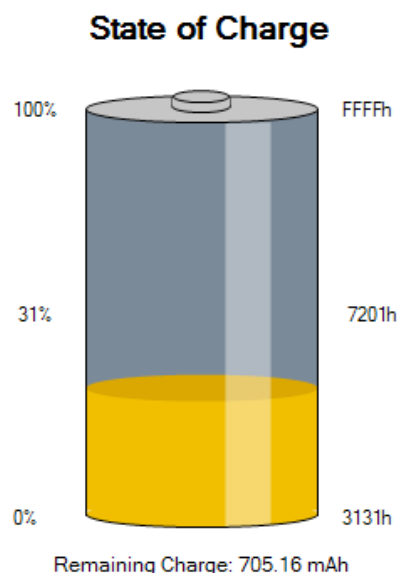


Figure 7. Battery Gas Gauge

QUIKEVAL INTERFACE

REGISTER AND CONTROL TAB

The register and control tab provides a detailed view of the LTC2943/LTC2943-1/LTC2944 device registers as well as provides convenient means to read and write to them.

Address/I²C Status

The write address for the LTC2943/LTC2943-1/LTC2944 is C8h and the read address is C9h. If an error occurs while reading from the LTC2943/LTC2943-1/LTC2944, the I²C status will display an error and the corresponding LED will turn red. Otherwise, the status is good and the LED remains green.

Sense Resistor

By default, the DC1812A-A and DC1812A-B are populated with a 100mΩ sense resistor to measure a maximum full-scale current of 500mA. If a different full-scale value current is desired, the sense resistor can be easily replaced and the corresponding resistor value can be set in the interface. Every time a new resistor value is entered, the interface will recalculate a suggested prescaler and q_{LSB} automatically and display it in the “LSB Information” section.

Address/I²C Status

Write Address: C8h I²C Status: Good! (Green LED)

Read Address: C9h

ARA Address: 19h

Sense Resistor

R Sense (mOhm): 100.0

Status Register (A)

- ☐ A[7] Reserved
- ☐ A[6] Current Alert
- ☐ A[5] ACR Overflow/Underflow
- ☐ A[4] Temperature Alert
- ☐ A[3] Charge Alert High
- ☐ A[2] Charge Alert Low
- ☐ A[1] Voltage Alert
- ☐ A[0] Undervoltage Lockout Alert

Demo Board Alert Pin: ☐ ARA

LSB Information

ACR and Threshold LSB: 4.25E-005Ah

Voltage and Threshold LSB: 360μV

Current and Threshold LSB: 2.93E-004A

Temperature LSB: 0.24°K

Temperature Threshold LSB: 1.96°K

Control Register (B)

ADC Mode

- ☒ [11] Automatic Mode (Default)
- ☐ [10] Scan Mode
- ☐ [01] Manual Mode
- ☐ [00] Sleep Mode

Pre Scaler M: 1024 M

AL#/CC Configure

- ☐ [11] Not Allowed
- ☒ [10] Alert Mode
- ☐ [01] Charge Complete Mode
- ☐ [00] AL#/CC# pin disabled

☐ Shutdown analog section

Register Read/Write

(A/B) Status/Control: 00EC

(C/D) Accumulated Charge Register: 84CB

(E/F) Charge Threshold High: FFFF

(G/H) Charge Threshold Low: 0000

(I/J) Voltage: 37FD

(K/L) Voltage Threshold High: FFFF

(M/N) Voltage Threshold Low: 0000

(O/P) Current: 9B80

(Q/R) Current Threshold High: FFFF

(S/T) Current Threshold Low: 0000

(U/V) Temperature: 9860

(W/X) Temperature Threshold: FF00

Reg	Data	Hex	Unit	Send To
B:	00	(h)		Control
C/D:	0000	(h)		ACR
E/F:	0000	(h)		Chrg Thr HI
G/H:	0000	(h)		Chrg Thr LO
K/L:	0000	(h)		Volt Thr HI
M/N:	0000	(h)		Volt Thr LO
Q/R:	0000	(h)		Cur Thr HI
S/T:	0000	(h)		Cur Thr LO
W:	00	(h)		Temp Thr HI
X:	00	(h)		Temp Thr LO

Figure 8. Register and Control Tab

QUIKEVAL INTERFACE

LSB Information

LSB information for charge, voltage, current and temperature registers as well as for all threshold registers is displayed here. The ACR LSB updates depending on the sense resistor and prescalar value chosen.

Status Register (A)

The individual status bits A[0:7] and their states are shown here. A red indicator next to bits A[6:0] indicates the respective alert is currently present and will latch the alert pin if configured for alert. Bit A[7] is reserved.

The demo board alert pin indicator indicates the status of the $\overline{\text{AL/CC}}$ pin. If the LTC2943/LTC2943-1/LTC2944 $\overline{\text{AL/CC}}$ pin is set for alert mode and an alert has been latched, the device will pull down this pin which will light up the LED indicator on the board as well as on the GUI. Click on ARA to send out an SMBus alert on to the bus lines and the device will respond with its address. The LED indicator on the demo board and GUI alert pin indicator will then be cleared if the alert is no longer present.

Control Register (B)

Configurations done in the control register section write to the control register (register B). The control bits B[7:6] set the LTC2943/LTC2943-1/LTC2944 ADC mode. The LTC2943/LTC2943-1/LTC2944 defaults to automatic mode which enables full-time voltage, current and temperature ADC conversions. Selecting scan mode enables voltage, current and temperature conversions cycles every 10s. After each conversion cycle the ADC goes into sleep mode until it is time for the next conversion cycle. Selecting manual mode initiates the ADC for a snapshot of voltage, temperature, current and charge once after which it returns to sleep mode. In sleep mode, the LTC2943/LTC2943-1/LTC2944 continues to accumulate charge while the ADC turns off.

Select a prescalar M value to scale the ACR according to battery capacity and maximum current. M cannot be changed during a scan.

The $\overline{\text{AL/CC}}$ pin can be configured for alert mode, charge complete mode, or disabled. Select the corresponding settings on the DC1812 jumper JP1.

The shutdown analog section is checked to disable the analog portion of the LTC2943/LTC2943-1/LTC2944 and set the device in a low current state. For normal operation leave unchecked.

Register Read/Write

Data in the internal registers of the LTC2943/LTC2943-1/LTC2944 is displayed here in hexadecimal format. Data can also be entered and written to the write registers. Enter data to be written in hexadecimal, or select unit and enter data in decimal form. Then click on the corresponding register button to write to that register. Data is auto corrected if the maximum or minimum full-scale is exceeded.

Interfacing with the DC2062B

This board can also interface with the DC2026 Linduino board which is part of the Linduino Firmware Development Program. The Linduino Firmware Development Program provides users with convenient driver code, written in C, for a wide range of LTC products. Please see the Linduino page for more details.

The DC2026 comes preloaded with a DC590 emulator firmware which allows easy interface with QuikEval. With the emulator firmware, QuikEval will launch the GUI as it would with the DC590. The DC2026 can also be used as a development platform, example software along with drivers can be found on the relevant product landing page:

LTC2943: <http://www.linear.com/LTC2943>

LTC2943-1: <http://www.linear.com/LTC2943-1>

LTC2944: <http://www.linear.com/LTC2944>

PARTS LIST

ITEM	QTY	REFERENCE	PART DESCRIPTION	MANUFACTURER/PART NUMBER
1	1	C2	CAP., CHIP X7R, 0.1 μ F 0603	AVX, 06033C104KAT2A
2	1	C3	CAP., X7R, 1.0 μ F, 100V, 10%, 1206	MURATA, GRM31CR72A105KA01
3	1	D1	WL-SMCW SMD CHIP LED WATERCLEAR	WURTH, 150120RS75000
4	1	D2	DIODE, BAT54C SOT23	DIODES INC., BAT54C-7-F
5	4	E1-E4	TURRET, TESTPOINT .094"	MILL-MAX, 2501-2-00-80-00-00-07-0
6	5	E5-E9	TURRET, TESTPOINT .064"	MILL-MAX, 2308-2-00-80-00-00-07-0
7	1	JP1	HEADER, 3 PIN 1 ROW .079CC	WURTH, 62000311121
8	1	XJP1	SHUNT, .079" CENTER	WURTH, 60800213421
9	1	J1	HEADERS, VERTICAL DUAL 2 $\times$ 7 .079CC	MOLEX, 87831-1420
10	3	R6, R7, R8	RES., CHIP, 4.99k, 1%, 0603	NIC, NRC06F4991TRF
11	4	R2, R3, R4, R9	RES., CHIP, 10k, 5%, 0603	NIC, NRC06J103TRF
12	1	R5	RES., CHIP, 1k, 5%, 0603	VISHAY, CRCW06031K00JNEA
13	1	S1	SWITCH, SMT PUSH BUTTON	PANASONIC, EVQPE105K
14	1	U2	I.C., SERIAL EEPROM TSSOP8	MICROCHIP, 24LC025-I/ST

DC1812A-A


1	1		DC1812A GENERAL BOM	
2	1	R _{SENSE}	RES., CHIP, 0.1 Ω 1/8W 1% 1206	IRC, LRC-LR1206LF-01-R100-F
3	1	U1	I.C., BATTERY GAS GAUGE WITH I ² C	LINEAR TECH., LTC2943CDD#PBF

DC1812A-B

1	1		DC1812A GENERAL BOM	
2	1	R _{SENSE}	RES., CHIP, 0.1 Ω 1/8W 1% 1206	IRC, LRC-LR1206LF-01-R100-F
3	1	U1	I.C., BATTERY GAS GAUGE WITH I ² C	LINEAR TECH., LTC2944CDD#PBF

DC1812A-C

1	1		DC1812A GENERAL BOM	
3	1	U1	I.C., BATTERY GAS GAUGE WITH I ² C	LINEAR TECH., LTC2943CDD-1#PBF

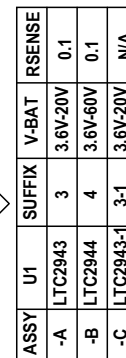

NOTE: UNLESS OTHERWISE SPECIFIED
1. ALL RESISTORS AND CAPACITORS ARE 0603

TITLE: SCHEMATIC			
MULTICELL BATTERY GAS GAUGE WITH			
TEMPERATURE, VOLTAGE AND CURRENT MEASUREMENT			
SIZE	IC NO.	REV.	
N/A	LTC294XCDD	3	
DATE: Monday August 10 2015		SHEET 1 OF 1	

SCHEMATIC DIAGRAM

ECO

REV

DESCRIPTION

APP. ENG.

DATE

-

3

PRODUCTION

S. AFZAL

8-10-15

8

LTC2944

MULTICELL BATTERY GAS GAUGE WITH TEMPERATURE, VOLTAGE AND CURRENT MEASUREMENT

DEMO CIRCUIT 1812A-

LINEAR TECHNOLOGY

www.linear.com

(408) 432-1900

8

V_CHRG/LD

E1

V_BAT

E2

GND

E3

AL/CC

E4

+5V

E5

GND

E6

SDA

E7

SCL

E8

AL/CC

E9

AL/CC

E10

AL/CC

E11

AL/CC

E12

AL/CC

E13

AL/CC

E14

AL/CC

E15

AL/CC

E16

AL/CC

E17

AL/CC

E18

AL/CC

E19

AL/CC

E20

AL/CC

E21

AL/CC

E22

AL/CC

E23

AL/CC

E24

AL/CC

E25

AL/CC

E26

AL/CC

E27

AL/CC

E28

AL/CC

E29

AL/CC

E30

AL/CC

E31

AL/CC

E32

AL/CC

E33

AL/CC

E34

AL/CC

E35

AL/CC

E36

AL/CC

E37

AL/CC

E38

AL/CC

E39

AL/CC

E40

AL/CC

E41

AL/CC

E42

AL/CC

E43

AL/CC

E44

AL/CC

E45

AL/CC

E46

AL/CC

E47

AL/CC

E48

AL/CC

E49

AL/CC

E50

AL/CC

E51

AL/CC

E52

AL/CC

E53

AL/CC

E54

AL/CC

E55

AL/CC

E56

AL/CC

E57

AL/CC

E58

AL/CC

E59

AL/CC

E60

AL/CC

E61

AL/CC

E62

AL/CC

E63

AL/CC

E64

AL/CC

E65

AL/CC

E66

AL/CC

E67

AL/CC

E68

AL/CC

E69

AL/CC

E70

AL/CC

E71

AL/CC

E72

AL/CC

E73

AL/CC

E74

AL/CC

E75

AL/CC

E76

AL/CC

E77

AL/CC

E78

AL/CC

E79

AL/CC

E80

AL/CC

E81

AL/CC

E82

AL/CC

E83

AL/CC

E84

AL/CC

E85

AL/CC

E86

AL/CC

E87

AL/CC

E88

AL/CC

E89

AL/CC

E90

AL/CC

E91

AL/CC

E92

AL/CC

E93

AL/CC

E94

AL/CC

E95

AL/CC

E96

AL/CC

E97

AL/CC

E98

AL/CC

E99

AL/CC

E100

AL/CC

E101

AL/CC

E102

AL/CC

E103

AL/CC

E104

AL/CC

E105

AL/CC

E106

AL/CC

E107

AL/CC

E108

AL/CC

E109

AL/CC

E110

AL/CC

E111

AL/CC

E112

AL/CC

E113

AL/CC

E114

AL/CC

E115

AL/CC

E116

AL/CC

E117

AL/CC

E118

AL/CC

E119

AL/CC

E120

AL/CC

E121

AL/CC

E122

AL/CC

E123

AL/CC

E124

AL/CC

E125

AL/CC

E126

AL/CC

E127

AL/CC

E128

AL/CC

E129

AL/CC

E130

AL/CC

E131

AL/CC

E132

AL/CC

E133

AL/CC

E134

AL/CC

E135

AL/CC

E136

AL/CC

E137

AL/CC

E138

AL/CC

E139

AL/CC

E140

AL/CC

E141

AL/CC

E142

AL/CC

E143

AL/CC

E144

AL/CC

E145

AL/CC

E146

AL/CC

E147

AL/CC

E148

AL/CC

E149

AL/CC

E150

AL/CC

E151

AL/CC

E152

AL/CC

E153

AL/CC

E154

AL/CC

E155

AL/CC

E156

AL/CC

E157

AL/CC

E158

AL/CC

E159

AL/CC

E160

AL/CC

E161

AL/CC

E162

AL/CC

E163

AL/CC

E164

AL/CC

E165

AL/CC

E166

AL/CC

E167

AL/CC

E168

AL/CC

E169

AL/CC

E170

AL/CC

E171

AL/CC

E172

AL/CC

E173

AL/CC

E174

AL/CC

E175

AL/CC

E176

AL/CC

E177

AL/CC

E178

AL/CC

E179

AL/CC

E180

AL/CC

E181

AL/CC

E182

AL/CC

E183

AL/CC

E184

AL/CC

E185

AL/CC

E186

AL/CC

E187

AL/CC

E188

AL/CC

E189

AL/CC

E190

AL/CC

E191

AL/CC

E192

AL/CC

E193

AL/CC

E194

AL/CC

E195

AL/CC

E196

AL/CC

E197

AL/CC

E198

AL/CC

E199

AL/CC

E200

AL/CC

E201

AL/CC

E202

AL/CC

E203

AL/CC

E204

AL/CC

E205

AL/CC

E206

AL/CC

E207

AL/CC

E208

AL/CC

E209

AL/CC

E210

AL/CC

E211

AL/CC

E212

AL/CC

E213

AL/CC

E214

AL/CC

E215

AL/CC

E216

AL/CC

E217

AL/CC

E218

AL/CC

E219

AL/CC

E220

AL/CC

E221

AL/CC

E222

AL/CC

E223

AL/CC

E224

AL/CC

E225

AL/CC

E226

AL/CC

E227

AL/CC

E228

AL/CC

E229

AL/CC

E230

AL/CC

E231

AL/CC

E232

AL/CC

E233

AL/CC

E234

AL/CC

E235

AL/CC

E236

AL/CC

E237

AL/CC

E238

AL/CC

E239

AL/CC

E240

AL/CC

E241

AL/CC

E242

AL/CC

E243

AL/CC

E244

AL/CC

E245

AL/CC

E246

AL/CC

E247

AL/CC

E248

AL/CC

E249

AL/CC

E250

AL/CC

E251

AL/CC

E252

AL/CC

E253

AL/CC

E254

AL/CC

E255

AL/CC

E256

AL/CC

E257

AL/CC

E258

AL/CC

E259

AL/CC

E260

AL/CC

E261

AL/CC

E262

AL/CC

E263

AL/CC

E264

AL/CC

E265

AL/CC

E266

AL/CC

E267

AL/CC

E268

AL/CC

E269

AL/CC

E270

AL/CC

E271

AL/CC

E272

AL/CC

E273

AL/CC

E274

AL/CC

E275

AL/CC

E276

AL/CC

E277

AL/CC

E278

AL/CC

E279

AL/CC

E280

AL/CC

E281

AL/CC

E282

AL/CC

E283

AL/CC

E284

AL/CC

E285

AL/CC

E286

AL/CC

E287

AL/CC

E288

AL/CC

E289

AL/CC

E290

AL/CC

E291

AL/CC

E292

AL/CC

E293

AL/CC

E294

AL/CC

E295

AL/CC

E296

AL/CC

E297

AL/CC

E298

AL/CC

E299

AL/CC

E300

AL/CC

E301

AL/CC

E302

AL/CC

E303

AL/CC

E304

AL/CC

E305

AL/CC

E306

AL/CC

E307

AL/CC

E308

AL/CC

E309

AL/CC

E310

AL/CC

E311

AL/CC

E312

AL/CC

E313

AL/CC

E314

AL/CC

E315

AL/CC

E316

AL/CC

E317

AL/CC

E318

AL/CC

E319

AL/CC

E320

AL/CC

E321

AL/CC

E322

AL/CC

E323

AL/CC

E324

AL/CC

E325

AL/CC

E326

AL/CC

E327

AL/CC

E328

AL/CC

E329

AL/CC

E330

AL/CC

E331

AL/CC

E332

AL/CC

E333

AL/CC

E334

AL/CC

E335

AL/CC

E336

AL/CC

E337

AL/CC

E338

AL/CC

E339

AL/CC

E340

AL/CC

E341

AL/CC

E342

AL/CC

E343

AL/CC

E344

AL/CC

E345

AL/CC

E346

AL/CC

E347

AL/CC

E348

AL/CC

E349

AL/CC

E350

AL/CC

E351

AL/CC

E352

AL/CC

E353

AL/CC

E354

AL/CC

E355

AL/CC

E356

AL/CC

E357

AL/CC

E358

AL/CC

E359

AL/CC

E360

AL/CC

E361

AL/CC

E362

AL/CC

E363

AL/CC

E364

AL/CC

E365

AL/CC

E366

AL/CC

E367

AL/CC

E368

AL/CC

E369

AL/CC

E370

AL/CC

E371

AL/CC

E372

AL/CC

E373

AL/CC

E374

AL/CC

E375

AL/CC

E376

AL/CC

E377

AL/CC

E378

AL/CC

E379

AL/CC

E380

AL/CC

E381

AL/CC

E382

AL/CC

E383

AL/CC

E384

AL/CC

E385

AL/CC

E386

AL/CC

E387

AL/CC

E388

AL/CC

E389

AL/CC

E390

AL/CC

E391

AL/CC

E392

AL/CC

E393

AL/CC

E394

AL/CC

E395

AL/CC

E396

AL/CC

E397

AL/CC

E398

AL/CC

E399

AL/CC

E400

AL/CC

E401

AL/CC

E402

AL/CC

E403

AL/CC

E404

AL/CC

E405

AL/CC

E406

AL/CC

E407

AL/CC

E408

AL/CC

E409

AL/CC

E410

AL/CC

E411

AL/CC

E412

AL/CC

E413

AL/CC

E414

AL/CC

E415

AL/CC

E416

AL/CC

E417

AL/CC

E418

AL/CC

E419

AL/CC

E420

AL/CC

E421

AL/CC

E422

AL/CC

E423

AL/CC

E424

AL/CC

E425

AL/CC

E426

AL/CC

E427

AL/CC

E428

AL/CC

E429

AL/CC

E430

AL/CC

E431

AL/CC

E432

AL/CC

E433

AL/CC

E434

AL/CC

E435

AL/CC

E436

AL/CC

E437

AL/CC

E438

AL/CC

E439

AL/CC

E440

AL/CC

E441

AL/CC

E442

AL/CC

E443

AL/CC

E444

AL/CC

E445

AL/CC

E446

AL/CC

E447

AL/CC

E448

AL/CC

E449

AL/CC

E450

AL/CC

E451

AL/CC

E452

AL/CC

E453

AL/CC

E454

AL/CC

E455

AL/CC

E456

AL/CC

E457

AL/CC

E458

AL/CC

E459

AL/CC

E460

AL/CC

E461

AL/CC

E462

AL/CC

E463

AL/CC

E464

AL/CC

E465

AL/CC

E466

AL/CC

E467

AL/CC

E468

AL/CC

E469

AL/CC

E470

AL/CC

E471

AL/CC

E472

AL/CC

E473

AL/CC

E474

AL/CC

E475

AL/CC

E476

AL/CC

E477

AL/CC

E478

AL/CC

E479

AL/CC

E480

AL/CC

E481

AL/CC

E482

AL/CC

E483

AL/CC

E484

AL/CC

E485

AL/CC

E486

AL/CC

E487

AL/CC

E488

AL/CC

E489

AL/CC

E490

AL/CC

E491

AL/CC

E492

AL/CC

E493

AL/CC

E494

AL/CC

E495

AL/CC

E496

AL/CC

E497

AL/CC

E498

AL/CC

E499

AL/CC

E500

AL/CC

E501

AL/CC

E502

AL/CC

E503

AL/CC

E504

AL/CC

E505

AL/CC

E506

AL/CC

E507

AL/CC

E508

AL/CC

E509

AL/CC

E510

AL/CC

E511

AL/CC

E512

AL/CC

E513

AL/CC

E514

AL/CC

E515

AL/CC

E516

AL/CC

E517

AL/CC

E518

AL/CC

E519

AL/CC

E520

AL/CC

E521

AL/CC

E522

AL/CC

E523

AL/CC

E524

AL/CC

E525

AL/CC

E526

AL/CC

E527

AL/CC

E528

AL/CC

E529

AL/CC

E530

AL/CC

E531

AL/CC

E532

AL/CC

E533

AL/CC

E534

AL/CC

E535

AL/CC

E536

AL/CC

E537

AL/CC

E538

AL/CC

E539

AL/CC

E540

AL/CC

E541

AL/CC

E542

AL/CC

E543

AL/CC

E544

AL/CC

E545

AL/CC

E546

AL/CC

E547

AL/CC

E548

AL/CC

E549

AL/CC

E550

AL/CC

E551

AL/CC

E552

AL/CC

E553

AL/CC

E554

AL/CC

E555

AL/CC

E556

AL/CC

E557

AL/CC

E558

AL/CC

E559

AL/CC

E560

AL/CC

E561

AL/CC

E562

AL/CC

E563

AL/CC

E564

AL/CC

E565

AL/CC

E566

AL/CC

E567

AL/CC

E568

AL/CC

E569

AL/CC

E570

AL/CC

E571

AL/CC

E572

AL/CC

E573

AL/CC

E574

AL/CC

E575

AL/CC

E576

AL/CC

E577

AL/CC

E578

AL/CC

E579

AL/CC

E580

AL/CC

E581

AL/CC

E582

AL/CC

E583

AL/CC

E584

AL/CC

E585

AL/CC

E586

AL/CC

E587

AL/CC

E588

AL/CC

E589

AL/CC

E590

AL/CC

E591

AL/CC

E592

AL/CC

E593

AL/CC

E594

AL/CC

E595

AL/CC

E596

AL/CC

E597

AL/CC

E598

AL/CC

E599

AL/CC

E600

AL/CC

E601

AL/CC

E602

AL/CC

E603

AL/CC

E604

AL/CC

E605

AL/CC

E606

AL/CC

E607

AL/CC

E608

AL/CC

E609

DEMO MANUAL DC1812A

DEMONSTRATION BOARD IMPORTANT NOTICE

Linear Technology Corporation (LTC) provides the enclosed product(s) under the following **AS IS** conditions:

This demonstration board (DEMO BOARD) kit being sold or provided by Linear Technology is intended for use for **ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY** and is not provided by LTC for commercial use. As such, the DEMO BOARD herein may not be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including but not limited to product safety measures typically found in finished commercial goods. As a prototype, this product does not fall within the scope of the European Union directive on electromagnetic compatibility and therefore may or may not meet the technical requirements of the directive, or other regulations.

If this evaluation kit does not meet the specifications recited in the DEMO BOARD manual the kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY THE SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THIS INDEMNITY, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user releases LTC from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge. Also be aware that the products herein may not be regulatory compliant or agency certified (FCC, UL, CE, etc.).

No License is granted under any patent right or other intellectual property whatsoever. **LTC assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or any other intellectual property rights of any kind.**

LTC currently services a variety of customers for products around the world, and therefore this transaction **is not exclusive**.

Please read the DEMO BOARD manual prior to handling the product. Persons handling this product must have electronics training and observe good laboratory practice standards. **Common sense is encouraged.**

This notice contains important safety information about temperatures and voltages. For further safety concerns, please contact a LTC application engineer.

Mailing Address:

Linear Technology
1630 McCarthy Blvd.
Milpitas, CA 95035

Copyright © 2004, Linear Technology Corporation