


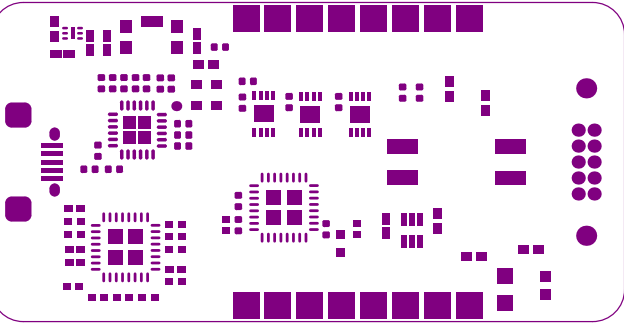

GND

TP3



RESET

J3



PWM|INT|RX|TX|SCL|SDA|5V|GND


R28



TP2



 TP1



TNGTLS

TFLXTLS

ATECC608A

R2



R1

SW2

608A

MICROCHIP

J20

USB2422
USB HUB

PS

MBUS

SAMD21



AN|RST|CS|SCK|SDO|SDI|3V3|GND



TP4



J2

DEBUGGER





STATUS





POWER


GND

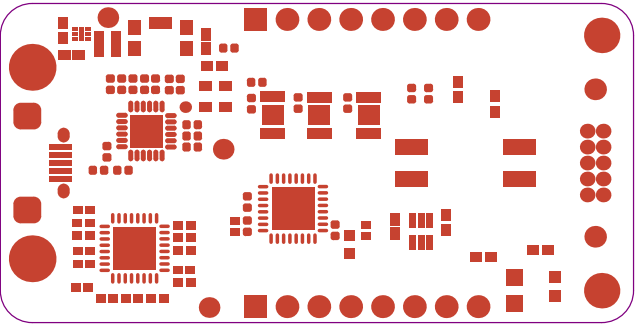


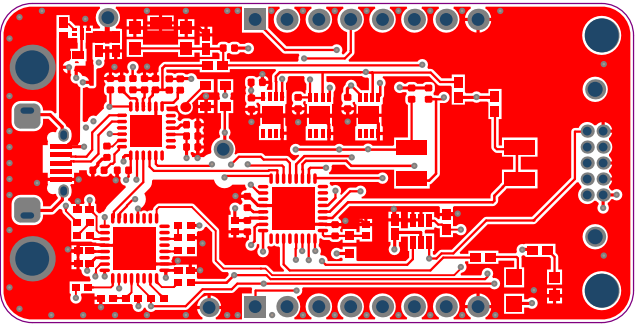

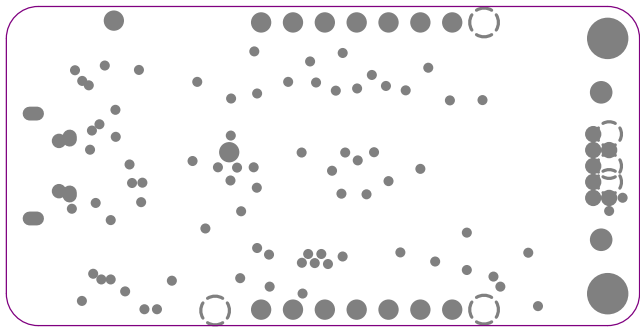

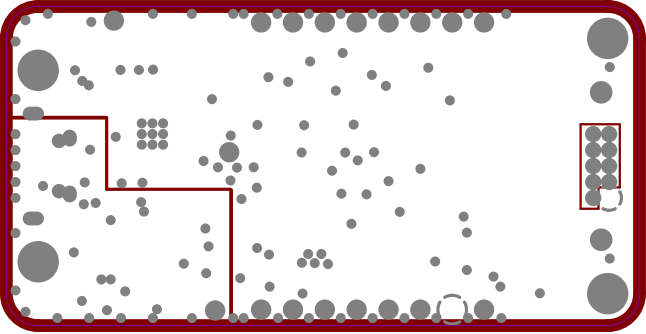

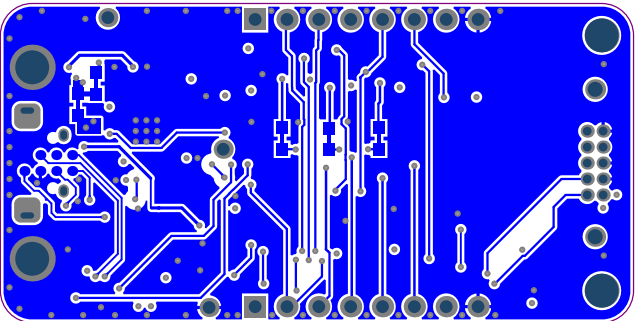

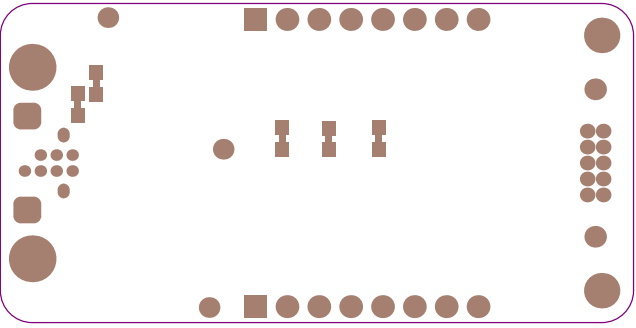

A08-303e REV4
Microchip © 2019

GND  Bn2 GND
+2V +3.3V mikro

PA08\SDA MOSI\PA18

PA08\SC1 MIS0\PA16

PA08\TX SCK\PA19

PA07\RX CS\PA17

PA05\INT RST#\RESET\#

PA10\PWM AN\PA04

   
NCC_3V3 CRYPTONAUT
DEBUG TRUST PLATFORM

GND

BOOT

GND

