

Keywords: MAX11301, MAX32630, WING, FEATHER, IoT MAX32630FTHR, MAX11301WING, ADC, DAC, analog to digital converter, digital to analog converter, guick start, guide,

#### **APPLICATION NOTE 6555**

# HOW TO INTERFACE THE MAX11301WING PIXI 20-PORT, MIXED-SIGNAL I/O WITH THE MAX32630FTHR

Abstract: This quick start guide explains how to interface the MAX11301WING with the MAX32630FTHR. A demo program is used to show a working program using the two devices.

#### Introduction

The MAX11301WING is a rapid development prototyping board designed for quick integration with other Maxim Feather and Wing evaluation boards. The MAX11301 PIXI<sup>™</sup> is a highly configurable mixed signal IC that provides versatility to any application. This quick start guide explains how to configure the MAX11301 PIXI programmable IC to read a potentiometer's wiper position using two digital-to-analog converters (DACs) and one analog-to-digital converter (ADC). The internal DACs are configured for ±5V output range, and connecting a potentiometer between the two DAC outputs with the center wiper connected to an internal ADC allows sensing over the entire voltage range. When paired with a MAX2630FTHR microcontroller platform, the MAX11301WING ADC conversions can be read and converted into a voltage value. If connected to a PC, the unprocessed and converted data can be printed to a serial terminal.

Follow the below steps to set up the MAX11301WING with the MAX32630FTHR+MAX32620PICO platform using the MAX11301WING\_Demo program software.

Figure 1 shows the hardware schematic for the MAX11301WING demo program.



Figure 1. Hardware schematic of the MAX11301WING demo.

#### **Required Equipment**

- Computer with two USB ports
- MAX32630FTHR microcontroller
- Any Mbed<sup>®</sup> programmer, MAX32625PICO recommended
- MAX11301WING PIXI 20-port I/O
- 10k<sup>1</sup>/<sub>2</sub> potentiometer
- Three cables that can connect the MAX11301WING to a potentiometer
- One fine-pitch, 10-pin ribbon cable, included with the MAX32630FTHR
- Two USB cables to connect the MAX32625PICO and MAX32630FTHR to a computer

#### Hardware Assembly

- 1. Connect the MAX32625PICO to the MAX32630FTHR using the 10-pin ribbon cable used for programming and communication. The 10-pin header on the MAX32630FTHR and MAX32625PICO boards have a mating groove and can only connect in the proper orientation.
- 2. Ensure jumpers J1 and J2 are installed on the MAX11301WING to connect the -7.5V rail to AVSSIO and the +7.5V rail to AVDDIO of the PIXI.
- 3. Stack the MAX11301WING on top of the MAX32630FTHR. The MAX11301WING form factor has 16 pins on one side of the board and 12 pins on the other. Make sure the 16-pin header (H1) and 12-pin header (H3) align on each board when stacking. Figure 2 shows the MAX11301WING stacking on the MAX32630FTHR.



Figure 2. Displays stacking the MAX11301WING on top of the MAX32630FTHR.

4. Connect the potentiometer between PORT0 and PORT1 of the MAX11301WING, located on header H2, pins 1 and 4. Figure 3 displays the H2 header pinout and highlights the desired ports with a red box.



Figure 3. Header H2 pinout with the desired ports highlights with red boxes.

- 5. Connect the potentiometer wiper to PORT9 of the MAX11301WING, located on header H2, pin 28. Reference Figure 3 for a pinout of the H2 header with PORT9 highlighted with a red box.
- 6. Connect the MAX32625PICO and MAX32630FTHR to a PC using the USB cables. The green and blue LEDs on the MAX11301WING should turn on, indicating that the board has power.

## Software Configuration

- 1. Go to os.mbed.com and log in. If you do not have an account, create one.
- Set to sumsearcom and log in. If you do not have an account, create one.
   After signing in, navigate to the MAX32630FTHR Mbed landing page by clicking the following link: os.mbed.com/platforms/MAX32630FTHR. On the right-hand side, click the Add to your Mbed compiler button to add the MAX32630FTHR as a target microcontroller board to your compiler. Figure 4 highlights the Add to your Mbed compiler button with a red box on the MAX32630FTHR landing page.



3. Install the Windows<sup>®</sup> OS driver for Mbed microcontrollers by scrolling down the MAX32630FTHR Mbed landing page to reach the PC Configuration section; follow the installation instructions. Figure 5 displays the PC Configuration section.

# PC Configuration

Your mbed Microcontroller can appear on your computer as a serial port. On Mac and Linux, this will happen by default. For Windows, you need to install a driver:

## A Windows

See Windows-serial-configuration for full details about setting up Windows for *serial communication* with your mbed Microcontroller

From a host PC to communicate with mbed you will need a terminal application. This allows the mbed Microcontroller to print to your PC screen, and for you to send characters back to your mbed.

• Terminals - Using Terminal applications to communicate between the Host PC and the mbed Micrcontroller

Some terminal programs (e.g. TeraTerm) list the available serial ports by name. However, if you do need to know the identity of the serial port so that you can attach a terminal or an application to it:

Figure 5. Displays PC Configuration section of the MAX32630FTHR Mbed landing page.

4. Import the MAX11301WING\_Demo program at Maxim-Integrated/MAX11301WING\_Demo into the compiler's program work space by clicking the Import to Compiler button on the right-hand side. Figure 6 highlights the import button on the MAX11301WING\_Demo repository page with a red box. This automatically opens the Mbed compiler in a new window. When this window opens, select Import to import the program.

CITIM MBED Mbed OS Mbed Cloud Partner Portal Se							arch	Q
OS Home Har	rdware▼ (	Code Documer	ntation 🔻 🛛 🤇	Questions	Forum	Compiler	4	
Teams » Maxim Inte	egrated » Code	» MAX11301WING	_Demo					
•— Maxim	Integrat	ted / 😭 MA	X1130	1WING_	Demo		Repository	
Dama anda fantha M	AV11201WIN	C Dragonna i EV a	- Dent O EV -	- Deut 1 and a si		C an Part 0	toolbox	
Toppendencies:	MAX11301WIN	Pixi 🗘 max32630fthr	n Port 0, -5 V or	1 POLL 1 and a si	igle-ended AL	Comport 9.	Import into Compiler	•
Fork of MAX11301	_Demo by 👗 Jo	ohn Greene					C Export to desktop	IDE
Home History	Graph A	PI Documentation	Wiki Pul	l Requests			Build repository	1
You can edit this area	!						Send Pull Request from	m here
Edit repository hor	nepage						O Make featured	
Files at re	evision	6:fe500	943de	11	wnload repos	itory: 🖁 zip 🖥 gz	✓ Following	
							& Embed url:	
/ default tip							< <pre>&lt;<pre>rogram /teams/Max</pre></pre>	dm-Int
Name				Size	Actions			
<b>↑</b> [up]							Clone repository desktop:	y to
MAX11301Hex.	i			79069	3 Revisions	Annotate	hg clone https://johnGre	eneM.
DAMANA ANY DE	itte			0.1	Devision	a hanninin		

- Figure 6. Highlights the Import into Compiler button with a red box on the MAX11301WING\_Demo repository.
- 5. In the compiler window, select the MAX11301WING\_Demo program in your program work space. In the upper right corner, the target microcontroller is displayed. Confirm the MAX32630FTHR is the target microcontroller. Figure 7 highlights the location of the target microcontroller on the compiler webpage with a red box. If the MAX32630FTHR is not selected, click this area to select a target microcontroller. Once clicked, the selection window appears; select MAX32630FTHR.

Mbed	1	/MAX1130	)1WING_Demo				
🎦 New 🗸 🎦 Import   📄 Save 📄 Save All   🔠 Compil	e 🗸 👌 Commit 🗸 🕢 Revision	<sub>1</sub> 10 - Cir]	A 🖓 🔨 🖽	Help			MAX32630FTHR 🌧
Program Workspace <	Program: /MAX11301WING_De	emo				Program Det	ails
My Programs     MAX11301WING Demo	$\nabla$ Type to filter the list	Match	Case 🗌 Whole Word		🔍 Find	Summary	Build
	Name	Size	Туре	Modified		Name	MAX11301WING_Demo
	MAX113XX_Pixi		Published Library	3 days, 3 hours ago		Created	3 days, 3 hours ago
	i max32630fthr		Published Library	3 days, 3 hours ago		Last Modified Last Built URL Revision	3 days, 3 hours ago Never
	main.cpp	2.7 kB	C/C++ Source File	3 days, 3 hours ago			Maxim-Integrated/MAX1130
	MAX11301Hex.h	77.2 kB	C/C++ Header File	3 days, 3 hours ago			6:fe50094
	💿 mbed-os		Library	3 days, 3 hours ago		Status	synced
						🖌 Update	Economit 🕜 Revisions
						Export	📄 Publish   🐼 Homepage
						Description	

Figure 7. Highlights the target microcontroller selection area of the Mbed compiler window.

6. With the MAX11301WING\_Demo program selected in the program work space, click the Compile button in the command banner at the top of the screen. Figure 8 highlights the Compile button. This initiates the download of the program's binary file.

Abed		/MAX11301WING_Demo				
🗅 New 🐱 🎦 Import   🔛 Save 🛄 Save All 🔛 Compil	le 🗸 🕭 Commit 🗸 🕜 Revisio		MAX32630FTHR			
Program Workspace 🔨	Program: /MAX11301WING_	Demo			Program Det	ails
My Programs	$\nabla$ Type to filter the list	📄 Match Case 📄 Whole Word		Q Find	Summary	Build
I LE MAXIISUIWING_DEMO	Name	Size Type	Modified	R	Name	MAX11301WING_Demo
	MAX113XX_Pixi	Published Library	3 days, 3 hours ago		Created	3 days, 3 hours ago
	max32630fthr	Published Library	3 days, 3 hours ago		Last Modified	3 days, 3 hours ago
	main.cpp	2.7 kB C/C++ Source File	3 days, 3 hours ago		URL	Maxim-Integrated/MAX1130
	MAX11301Hex.h	77.2 kB C/C++ Header File	3 days, 3 hours ago		Revision Status	6:fe50094
	🍥 mbed-os	Library	3 days, 3 hours ago			synced
					😡 Update	Commit ( Revisions
					Export	💽 Publish 😔 Homepage
					Description	

7. The MAX32625PICO board appears as a USB drive with the name DAPLINK in your native file navigation program. Figure 9 highlights the DAPLINK drive with a red box. Program the MAX32630FTHR by dragging the binary file onto the DAPLINK drive. Red LEDs flash on the MAX32635PICO until programming is complete. This typically takes a few seconds.

Th	s PC > Desktop > Io1 Presentation > Binaries			~	0	Search Binaries	,c
Quick access Documents Downloads Do	Name Internet-of-Things-Radio-Intermittent-Tr Internet-of-Things-Radio-Print, MAX3263 MAX11301, Demo, MAX32630FTH-R MAX30003, Demo, Plot, MAX32630FTH-L MAX30003, Demo, Plot, MAX32630FTH-L MAX30101, Demo, Debug, MAX32630FTH-L MAX30101, Demo, Plot, MAX32630FTH-L MAX30102, Demo, Max32630FTH-L MAX301012, Demo, Max32630FTH-R)	Date modified 9/6/2017 7:39 AM 9/6/2017 7:43 AM 9/6/2017 7:44 AM 9/6/2017 7:25 AM 9/6/2017 7:25 AM 9/6/2017 7:23 AM 9/6/2017 7:23 AM 9/6/2017 7:24 AM	Type BIN File BIN File BIN File BIN File BIN File BIN File BIN File BIN File BIN File	Size	42 KB 42 KB 43 KB 35 KB 36 KB 36 KB 34 KB 33 KB		
This PC DAPLINK (D:) Network							

Figure 9. Drag the binary file onto the DAPLINK drive to program the microcontroller.

Install the serial terminal program Tera Term by visiting this link and following the installation instructions: https://osdn.net/projects/ttssh2/releases/.
 Open Tera Term and select the Serial radio button and the Mbed device from the pull-down menu, as shown in Figure 9. The Mbed device could be on a different COM port than what is shown in Figure 10. Click OK.

Tera Term: New connect	tion				×
O T CP/IP	Host:	myhost.exa	mple.com		~
	Service:	<ul><li>☑ History</li><li>○ Telnet</li></ul>	TCP po	rt#: 22	
		SSH	SSH version:	SSH2	
		O Other	Protocol:	UNSPEC	22
Serial	Port:	COM10: mb	ed Serial Port (Co	OM10)	~
	ОК	Cancel	Help		

Figure 10. Tera Term opening window. Select the Serial radio button and the mbed Serial Port from the drop-down menu.

10. Set the baud rate to 115200bps by navigating to Setup/Serial Port. This opens a new configuration window. Select 115200 in the Baud rate pull-down menu, as shown in Figure 11.

<b>D</b> -4	001/10		
Port:	COMIU ~	ок	
Baud rate:	115200 ~		
Data:	8 bit ~	Cancel	
Parity:	none ~		
Stop:	1 bit ~	Help	
Flow control:	none ~		
Transmit dela 0 mse	y c/char 0 r	nsec/line	

Figure 11. Displays 115200bps baud rate selected in Tera Term.

11. Press the reset (SW1) button on the MAX32630FTHR, as displayed in Figure 12.



Figure 12. The reset button is SW1 on the MAX32630FTHR.

12. Data should begin streaming to the serial terminal, as shown in Figure 13.

1120								
ADC	Read	is	\$	3747,	Voltage	is	4.150	V
ADC	Read	is	:	3643,	Voltage	is	3.896	V
ADC	Read	is	:	3556,	Voltage	is	3.684	V
ADC	Read	is	\$	3437,	Voltage	is	3.393	V
ADC	Read	is	:	3339,	Voltage	is	3.154	V
ADC	Read	is	:	3210,	Voltage	is	2.839	V
ADC	Read	is	\$	3113,	Voltage	is	2.602	V
ADC	Read	is	:	2998,	Voltage	is	2.321	V
ADC	Read	is	\$	2912,	Voltage	is	2.111	V
ADC	Read	is	\$	2811,	Voltage	is	1.864	V

Figure 13. Serial output of the MAX11301WING\_Demo program.

This completes the integration and set up of the MAX11301WING with the MAX32630FTHR. Please continue to use this quick start as an example for making your own applications using the MAX11301 PIXI. Maxim has several Wing evaluation boards to enable rapid development of entire systems. Check out Maxim's Feather and Wing solutions for your next project!

Mbed is a registered trademark of Arm Limited.

//Serial Output//

PIXI is a trademark of Maxim Integrated Products, Inc.

Windows is a registered trademark and registered service mark of Microsoft Corporation.

Related Parts		
MAX11301	PIXI, 20-Port Programmable Mixed-Signal I/O with 12-Bit ADC, 12-Bit DAC, Analog Switches, and GPIO	Free Samples
MAX11301WING	Evaluation Kit for the MAX11301 PIXI Mixed-Signal IO	
MAX32625	Ultra-Low Power, High-Performance ARM Cortex-M4 with FPU-Based Microcontroller for Wearables	Free Samples
MAX32625PICO	Evaluation Kit for the MAX32625/MAX14750	
MAX32630	Ultra-Low Power, High-Performance Cortex-M4F Microcontroller for Wearables	Free Samples
MAX32630FTHR	MAX32630FTHR Application Platform	

#### More Information

For Technical Support: https://www.maximintegrated.com/en/support For Samples: https://www.maximintegrated.com/en/samples Other Questions and Comments: https://www.maximintegrated.com/en/contact

Application Note 6555: https://www.maximintegrated.com/en/an6555 APPLICATION NOTE 6555, AN6555, AN 6555, APP6555, Appnote6555, Appnote 6555

© 2014 Maxim Integrated Products, Inc.

The content on this webpage is protected by copyright laws of the United States and of foreign countries. For requests to copy this content, contact us. Additional Legal Notices: https://www.maximintegrated.com/en/legal