



Motor Supply and Outputs


VM range 6.5 to 45V

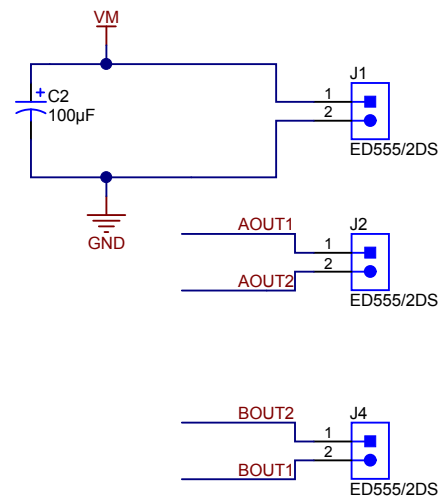


DRV888x

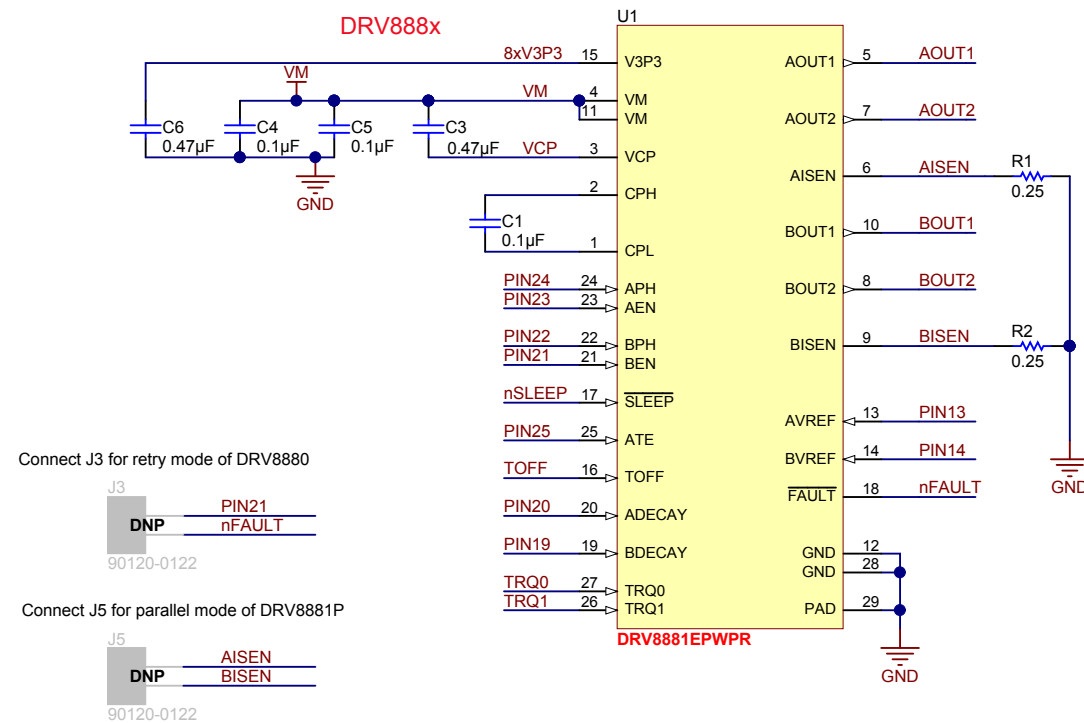


TEST POINTS & DEBUG MODE

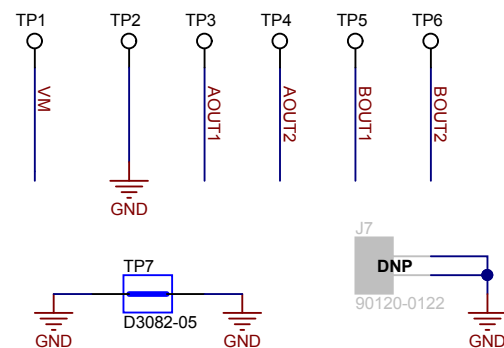

nFAULT notification

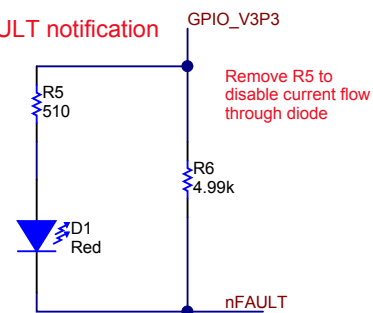

Connection to microcontroller
or external interface

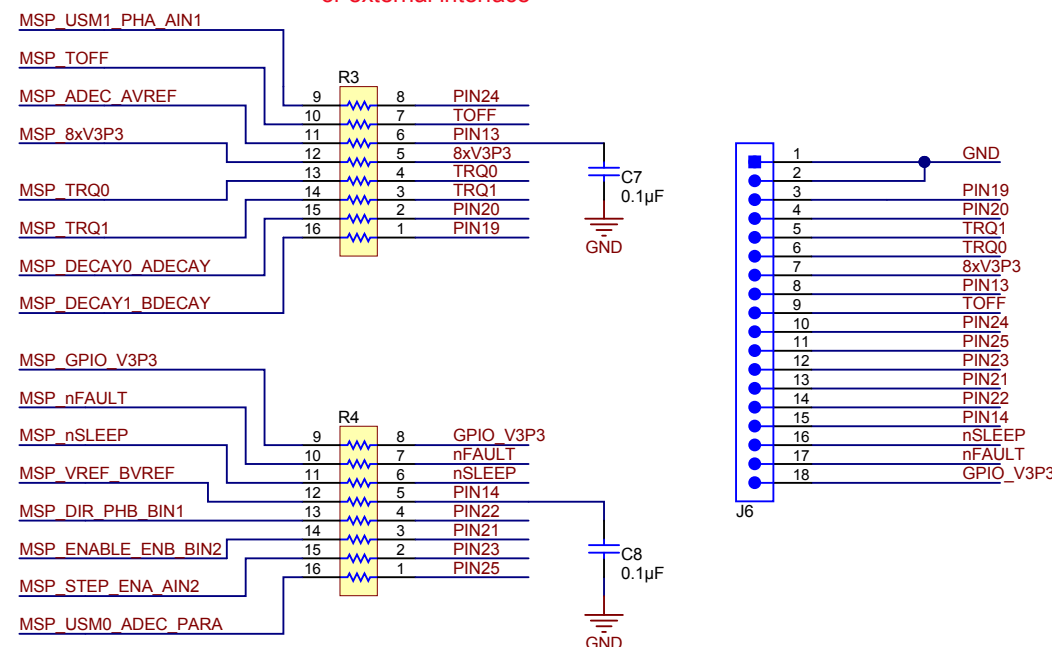

Notes:

- 1) For normal operation, populate resistor packs R3 and R4
- 2) For external control, remove resistor packs R3,R4 and provide signals at J6
- 3) Signals can be observed at J6 during normal operation

A

B

C

D

A

B

C

D

