



[Maxim](#) > [Design Support](#) > [Technical Documents](#) > [Application Notes](#) > [Microprocessor Supervisor Circuits](#) > APP 4285

Keywords: power supply sequencer, monitor, marginer, 12, twelve, digital comparators, DAC, sequencer, programmable, I2C, JTAG, SMBus, EEPROM

#### APPLICATION NOTE 4285

# In-Circuit Programming for the MAX16046–MAX16049 EEPROM-Programmable System Managers

By: Eric Schlaepfer, Applications Engineer  
Nov 07, 2008

*Abstract: The MAX16046–MAX16049 system managers can be programmed after being soldered to the application circuit board. This means that only unprogrammed devices need to be stocked, and that the latest version of the configuration information can be written to the device during manufacturing test. A few simple measures ensure that the application circuit allows the programming hardware to share the I<sup>2</sup>C or JTAG bus line and provides power for the device during programming. The programming algorithm is provided for both the I<sup>2</sup>C bus and the JTAG bus.*

The MAX16046–MAX16049 EEPROM-programmable system managers are power-supply sequencers, monitors, and marginers that can control up to 12 power supplies. Power supplies are monitored by three digital comparators, margined by programmable DAC outputs, and sequenced with a programmable state machine.

These system managers include an SMBus™-compatible I<sup>2</sup>C interface and a JTAG interface, both of which can access all device registers and program the internal configuration EEPROM. The MAX16046–MAX16049 are in-circuit programmable, as long as a few simple guidelines are followed.

## Providing Power

The MAX16046–MAX16049 have a supply voltage range of 3V to 14V. Typical applications connect V<sub>CC</sub> to a 12V intermediate bus voltage or a 3.3V auxiliary supply.

It is possible to program the MAX16046–MAX16049 with a partially powered board. For example, the 3.3V auxiliary voltage could be applied without any other supplies, or the 12V intermediate bus voltage could be applied; all downstream power supplies should be off since the system manager is not programmed at that point. Another option is to use a commonly available dual diode to allow power to be supplied from a programming connector. Due to the voltage drop caused by the diode, this approach works best when the MAX16046–MAX16049 is powered from a 12V bus.

If diode OR-ing is not used and the MAX16046–MAX16049 are to be programmed with power applied to the board, careful attention must be paid to the state of the sequencing outputs to prevent any downstream power supplies from prematurely turning on.

When unprogrammed, the MAX16046–MAX16049 have high-impedance outputs. Power supplies with active-high enable inputs should have pull-down resistors, and power supplies with active-low enable inputs should have pullup resistors. The sequencing outputs can be configured as either push-pull or open-drain. Because the open-drain configuration requires an external pullup resistor, it should be used with active-low enable inputs only.

It is not advisable to connect the MAX16046–MAX16049 in a JTAG chain, as power may not be applied to upstream devices in the chain, effectively cutting off access to the MAX16046–MAX16049. Rather, a JTAG multiplexer or a dedicated JTAG port is preferred.

## Sharing the Bus

A potential problem occurs when a device, other than the  $\mu\text{P}$ , needs to communicate with the MAX16046–MAX16049 during normal operation. One example is when a system supervisory  $\mu\text{P}$  needs to access the ADC readings of the MAX16046. When the board is unpowered or partially powered and the MAX16046 is being programmed, other devices connected to the I<sup>2</sup>C or JTAG bus could interfere. The easiest solution is to program the MAX16046 through the JTAG interface and connect the supervisory  $\mu\text{P}$  to the I<sup>2</sup>C interface. If the  $\mu\text{P}$  supports true open-drain I<sup>2</sup>C bus I/O (that is, pins that lack the ESD diode to  $V_{CC}$ ) and the pullup resistors are large enough, it can be possible to share the I<sup>2</sup>C bus for both programming and normal operation. If the  $\mu\text{P}$ 's I<sup>2</sup>C bus lines are not open-drain, the ESD diodes will clamp the bus lines and interfere with programming.

If the system  $\mu\text{P}$  does not have true open-drain I<sup>2</sup>C bus lines, a circuit like the one in **Figure 1** can be used to automatically switch between the  $\mu\text{P}$  and the programming I<sup>2</sup>C bus.

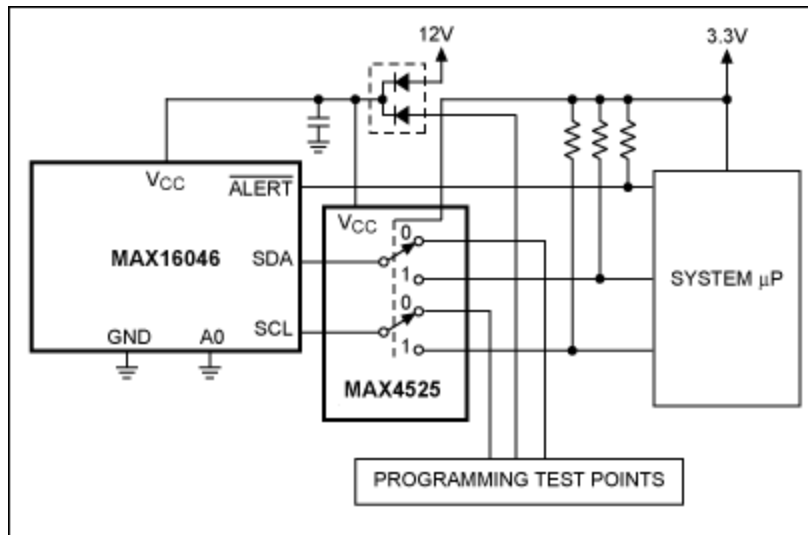


Figure 1. The MAX16046 shares its I<sup>2</sup>C bus through the MAX4525 multiplexer/switch.

The MAX4525 multiplexer in Figure 1 switches between the I<sup>2</sup>C connected to the system  $\mu\text{P}$  and the I<sup>2</sup>C connected to the programming test points. The switch is controlled by the  $V_{CC}$  of the system  $\mu\text{P}$ . If  $V_{CC}$  is not applied, but 12V is, the switch connects I<sup>2</sup>C to the programming test points. Once  $V_{CC}$  is applied, the switch connects the I<sup>2</sup>C to the system  $\mu\text{P}$ .

## Application Circuit Examples

The following figures show three different application circuits designed for in-circuit programming.

## Powered from a 12V Intermediate Bus and Programmed Through the I<sup>2</sup>C Bus

The **Figure 2** circuit powers the MAX16046 from the 12V intermediate bus, which is monitored by the analog enable line, EN. When the 12V bus rises above the threshold set by the resistive divider on EN, the MAX16046 attempts sequencing if it has been programmed. An unprogrammed MAX16046 does not do anything, and the sequencing outputs remain at a high impedance level.

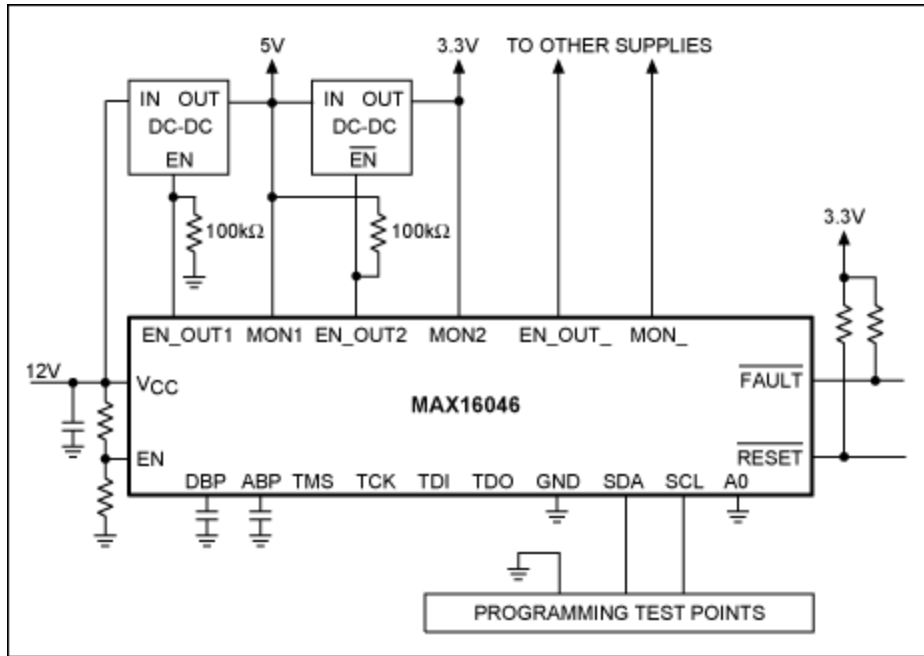


Figure 2. The MAX16046 is powered from the 12V intermediate bus and programmed through the I<sup>2</sup>C interface.

One power supply uses an active-high, push-pull enable signal, and the other uses an active-low, open-drain enable signal. Appropriate pullup and pulldown resistors prevent these power supplies from turning on while the unprogrammed outputs are at a high impedance level.

It is important to note that push-pull outputs cannot be pulled up above  $V_{DBP}$ , and that open-drain outputs cannot be pulled up above 6V. The I<sup>2</sup>C connections are brought out to programming test points; appropriate pullup resistors must be provided by the programming hardware. The circuit is simple because no other device on the circuit board needs to connect to the I<sup>2</sup>C bus.

## Powered from a 3.3V Auxiliary Supply and Programmed Through a JTAG Multiplexer

In **Figure 3**, the MAX16046 derives power from a 3.3V auxiliary supply. The JTAG connections are shared with other devices using a DS26900 JTAG multiplexer that is also powered from the 3.3V auxiliary supply. Programming can be accomplished by providing 3.3V without needing to power up the 12V intermediate bus.

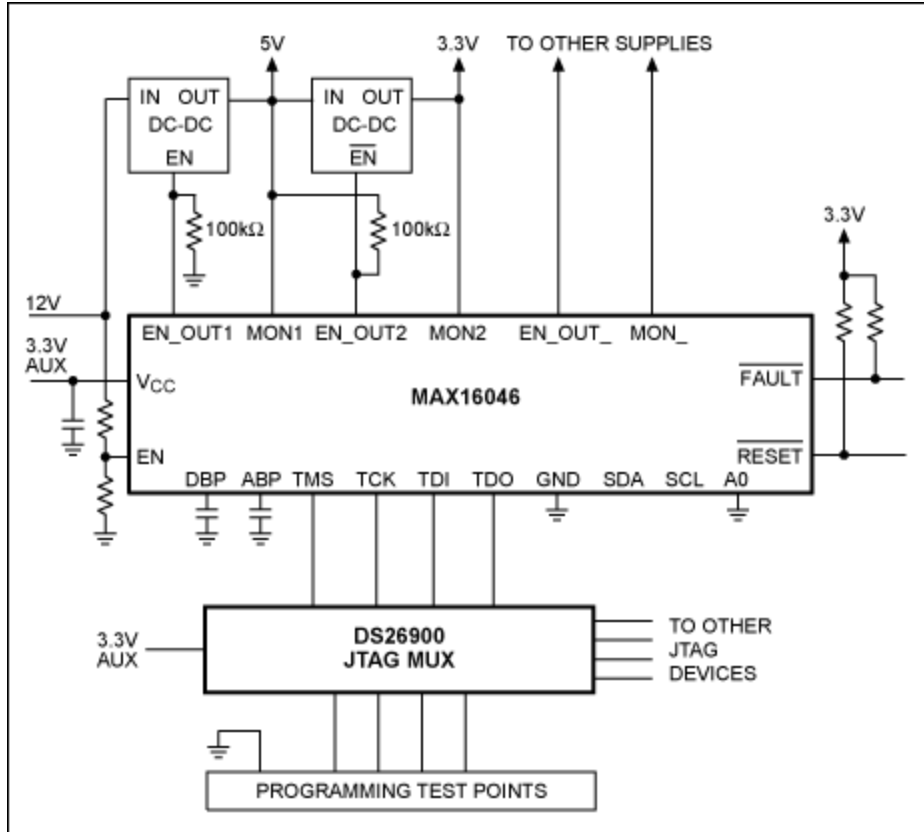


Figure 3. The MAX16046 is powered from a 3.3V auxiliary supply and programmed through the DS26900 JTAG multiplexer.

### Powered from a 12V Intermediate Bus and Programmed Through JTAG

Figure 4 shows the MAX16046 powered with a diode-OR'ed connection to the 12V intermediate bus so that power may safely be applied without powering on any downstream power supplies. The JTAG and power connections are brought out to programming test points.


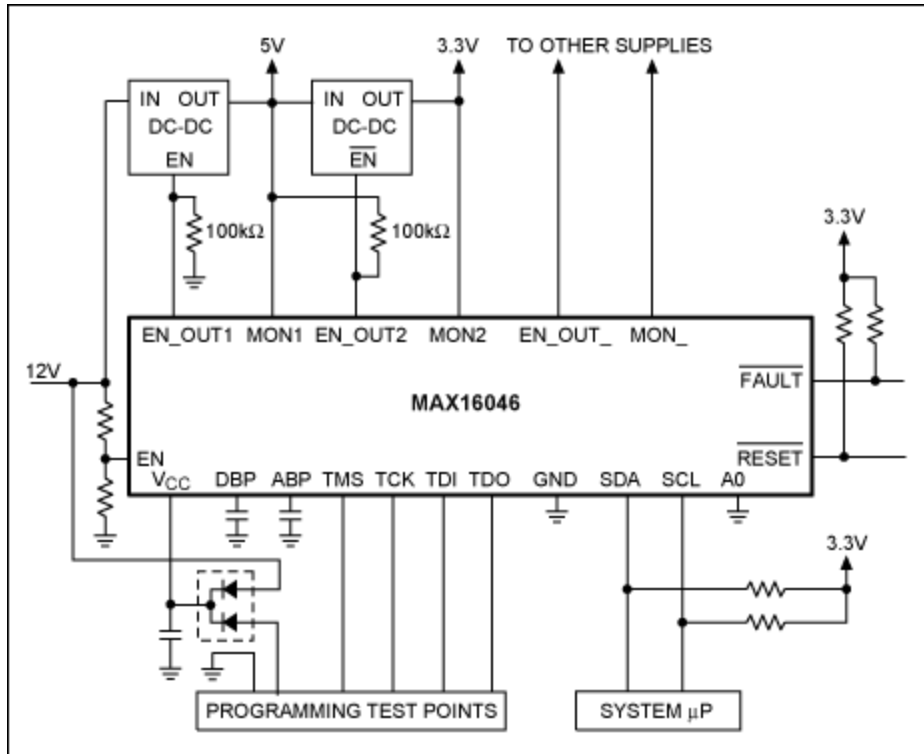


Figure 4. The MAX16046 is powered from a 12V intermediate bus and programmed through JTAG.

## Programming Algorithm

The MAX16046–MAX16049 have built-in EEPROM that stores the device configuration parameters. When power is applied, the contents of the EEPROM are transferred to the RAM registers. Both RAM and EEPROM are accessible from the JTAG and I<sup>2</sup>C interfaces. To correctly program the MAX16046–MAX16049, the desired parameters must be programmed to the EEPROM—see the memory map in Table 1.

Table 1. MAX16046 Memory Map

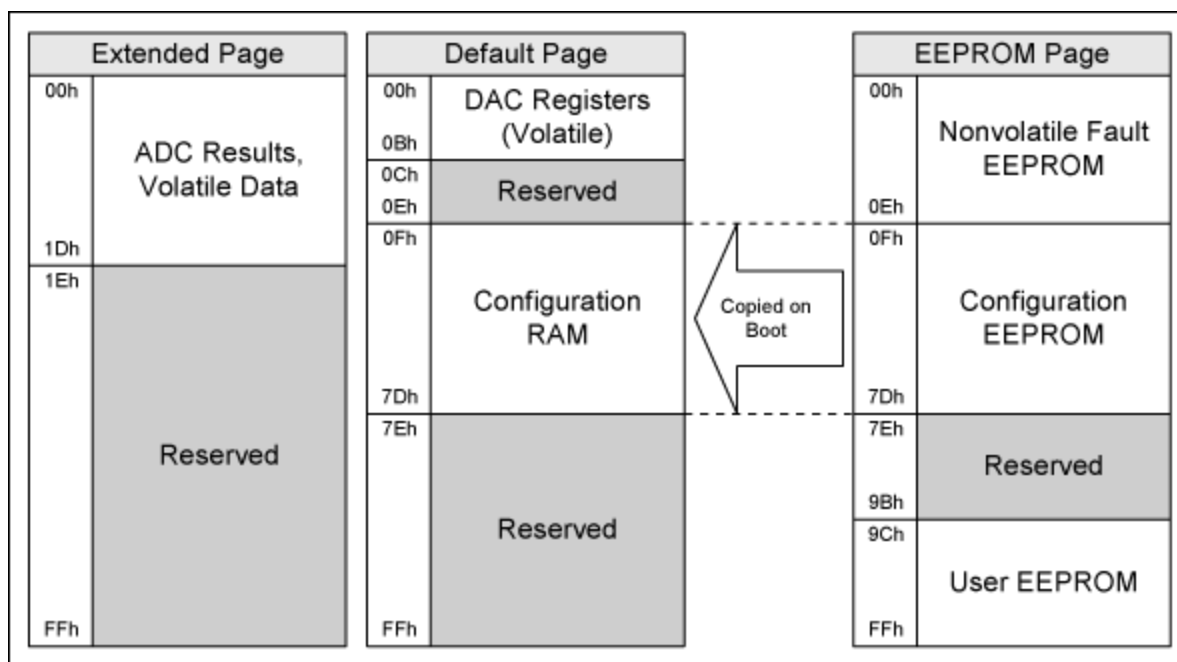

## Configuration Files

The MAX16046 evaluation kit (EV kit) software provides two types of configuration files. One is a human-readable XML file produced by selecting **File** → **Save Configuration As**. This file can be used for I<sup>2</sup>C programming. The second is produced by selecting **File** → **Save as .SVF**. This file is in the serial vector format (SVF) used by third-party JTAG tools and in-circuit PCB testers for JTAG programming.

The XML file may be viewed in a color-coded hierarchical format in many web browsers. The XML file generated by the EV kit software is divided into several sections and contains setup tab information as well as register data. There are two sections of interest: the **Config\_Register** section, which contains configuration values that can be loaded into EEPROM, and the **User\_Register** section, which contains values to load into the user EEPROM.

Within each section, a **Register** tag specifies the value to be loaded into a particular address. The format of the register tag is as follows:

```
<Register Address="{register number}" Value="{register value}"
Description="{text description of register}"/>
```

All values are decimal. These addresses correspond to both RAM registers and EEPROM addresses. Be aware that RAM registers 0 to 14 are DAC registers, but EEPROM at address 0 to address 14 is saved fault data. EEPROM programming routines should start at address 15.

Details on the XML file format can be found at the [XML Developer Center](#).

The SVF file format is described in more detail in the [Serial Vector Format Specification](#) (PDF, 85.2kB).

## I<sup>2</sup>C Programming Procedure

To program the MAX16046–MAX16049's EEPROM-configuration memory, it is necessary to first make sure that the configuration-lock bit in register r5Dh[0] is zero. If it is not zero, write a '1' to that bit to

clear it. To write to the EEPROM, send the appropriate command to enter the EEPROM page, load the starting address, and send a series of block-write commands. See the [MAX16046/MAX16048](#) or [MAX16047/MAX16049](#) data sheet for details on their respective I<sup>2</sup>C protocols.

Pseudocode for a typical EEPROM programming process is as follows:

```

SendByte(5Dh) // Check lock bit
If ReadByte() & 2 == 2 Then
  WriteByte(5Dh, 02h) // Clear lock bit if needed
SendByte(9Ah) // Access EEPROM page
Loop Address from 0Fh to 7Dh
  SendByte(Address) // Load address
  WriteBlock(Data, 10h) // Write a block of 16 bytes
  Wait(16 * 11 milliseconds) // Wait for programming
  SendByte(Address)
  ReadBlock(DataRead, 10h) // Read back data block
  If DataRead != Data Then
    RepeatCount = RepeatCount + 1
    If RepeatCount == 3 Then
      Fail
    Else
      RepeatCount = 0
      Address = Address + 10h // Advance to next block
  SendByte(9Bh) // Return to default page
Success

```

To write to the user EEPROM, the same process may be used, but with an address range of 9Ch to FFh instead of 0Fh to 7Dh.

## JTAG Programming Procedure

To program the device, use standard third-party JTAG tools, the MAX16046–MAX16049 BSDL file, and an SVF data file generated by the EV kit software with either a JTAG programming cable or an in-circuit PCB tester. The BSDL files are available for [download](#).

Note that the SVF files generated by the EV kit software test the IDCODE register. The following code snippet is from a SVF file generated by the MAX16046 EV kit software:

```

ENDDR IDLE;
ENDIR IDLE;
SIR 5 TDI(00) TDO(01);
SDR 32 TDI(00000000) TDO(10001197);

```

The TDO(10001197) statement verifies the complete IDCODE statement, including the device revision code. This statement will fail if a device is used with a different revision code. To make the SVF file ignore the revision code field of the IDCODE register, use the following line instead:

```

SDR 32 TDI(00000000) TDO(10001197) MASK(0FFFFFFF);

```

The mask statement ignores the 4-bit revision code field (see **Table 2**).

**Table 2. IDCODE Register Bitmap**

	Revision (4 Bits)	Part Number (16 Bits)	Manufacturer (11 Bits)
<b>Binary</b>	0001	0000 0000 0000 0001	00011001011 1
<b>Hex</b>	1	0001	197

## Related Parts

<a href="#">MAX16046</a>	12-/8-Channel EEPROM-Programmable System Managers with Nonvolatile Fault Registers	<a href="#">Free Samples</a>
<a href="#">MAX16047</a>	12-/8-Channel EEPROM-Programmable System Managers with Nonvolatile Fault Registers	<a href="#">Free Samples</a>
<a href="#">MAX16048</a>	12-/8-Channel EEPROM-Programmable System Managers with Nonvolatile Fault Registers	<a href="#">Free Samples</a>
<a href="#">MAX16049</a>	12-/8-Channel EEPROM-Programmable System Managers with Nonvolatile Fault Registers	<a href="#">Free Samples</a>

---

### More Information

For Technical Support: <http://www.maximintegrated.com/support>

For Samples: <http://www.maximintegrated.com/samples>

Other Questions and Comments: <http://www.maximintegrated.com/contact>

---

Application Note 4285: <http://www.maximintegrated.com/an4285>

APPLICATION NOTE 4285, AN4285, AN 4285, APP4285, Appnote4285, Appnote 4285

Copyright © by Maxim Integrated Products

Additional Legal Notices: <http://www.maximintegrated.com/legal>