



DC512 Software Quick-Start Guide

Quick-Start Guide:

1. Position DC410 JP2 in the VinP1 position. The DC410 will receive its power through the DC512 through the 15-pin connector.
2. Connect the DC410 9-pin serial port to a Serial Port on your computer.
3. Power up the DC512 and connect the DC512 and DC410 through their 15-pin connectors.
4. Copy the DC512 files into a directory called DC512 on the computer's default drive.
5. Run DC512V1.exe.

Note: 1. The serpdv driver must be included in the directory the LabView executable programs are being run from.