

ARM[®] Cortex[®]-M0
32-bit Microcontroller

NuMicro[®] Family
NuTiny-SDK-Mini55
User Manual

The information described in this document is the exclusive intellectual property of Nuvoton Technology Corporation and shall not be reproduced without permission from Nuvoton.

Nuvoton is providing this document only for reference purposes of NuMicro microcontroller based system design. Nuvoton assumes no responsibility for errors or omissions.

All data and specifications are subject to change without notice.

For additional information or questions, please contact: Nuvoton Technology Corporation.

www.nuvoton.com

Table of Contents

1	OVERVIEW	4
1.1	GENERAL DESCRIPTION	4
2	INTRODUCTION TO NUTINY-SDK-Mini55	5
2.1	NuTiny-SDK-Mini55 (PCB Board)	5
2.2	Virtual COM Port Switch Description	5
2.3	NuTiny-SDK-Mini55 Power Setting and Connector	6
2.3.1	Power Setting	6
2.3.2	Debug Connector	6
2.3.3	ICE USB Connector	6
2.3.4	Extended Connector	6
2.3.5	Reset Button	6
2.3.6	Power Connector	6
2.3.7	Virtual COM Port Function Switch	7
2.4	Pin Assignment for Extended Connector	8
2.5	NuTiny-SDK-Mini55 PCB Placement	9
3	How to Start NuTiny -SDK-Mini55 on the Keil μ Vision [®] IDE	10
3.1	Downloading and Installing Keil μ Vision [®] IDE Software	10
3.2	Downloading and Installing Nuvoton Nu-Link Driver	10
3.3	Hardware Setup	10
3.4	Example Program	10
4	How to Start NuTiny -SDK-Mini55 on the IAR Embedded Workbench	14
4.1	Downloading and Installing IAR Embedded Workbench Software	14
4.2	Downloading and Installing Nuvoton Nu-Link Driver	14
4.3	Hardware Setup	14
4.4	Example Program	14
5	NuTiny-EVB-Mini55 Schematic	18
5.1	Nu-Link-Me Schematic	18
5.2	SDK Circuit Schematic	19
5.3	NuTiny-SDK-MINI55 Schematic	20
5.4	GPIO for 48 pin Schematic	21
6	Downloading NuMicro [®] Related Files from Nuvoton Website	22
6.1	Downloading NuMicro [®] Keil μ Vision [®] IDE Driver	22
6.2	Downloading NuMicro [®] IAR EWARM Driver	24

6.3 Downloading NuMicro® Mini55 Series BSP Software Library26

7 REVISION HISTORY 28

1 OVERVIEW

NuTiny-SDK-Mini55 is the specific development tool for NuMicro® Mini55 series. The NuTiny-SDK-Mini55 can be used to develop and verify the application program easily.

NuTiny-SDK-Mini55 includes two portions. One is NuTiny-EVB-Mini55 and the other is Nu-Link-Me. NuTiny-EVB-Mini55 is the evaluation board and Nu-Link-Me is its Debug Adaptor. Thus, user does not need other additional ICE or debug equipment.

1.1 GENERAL DESCRIPTION

The NuMicro® Mini55 series 32-bit microcontroller is embedded with ARM® Cortex®-M0 core for industrial control and applications which require high performance, high integration, and low cost. The Cortex®-M0 is the newest ARM® embedded processor with 32-bit performance at a cost equivalent to the traditional 8-bit microcontroller.

The Mini55 series can run up to 48 MHz and operate at 2.1V ~ 5.5V, -40°C ~ 105°C, and thus can afford to support a variety of industrial control and applications which need high CPU performance. The Mini55 series offers 17.5K-bytes embedded program flash, size configurable Data Flash (shared with program flash), 2K-byte flash for the ISP, and 2K-byte SRAM.

Many system level peripheral functions, such as I/O Port, Timer, UART, SPI, I2C, PWM, ADC, Watchdog Timer, Analog Comparator and Brown-out Detector, have been incorporated into the Mini55 series in order to reduce component count, board space and system cost. These useful functions make the Mini55 series powerful for a wide range of applications.

Additionally, the Mini55 series is equipped with ISP (In-System Programming) and ICP (In-Circuit Programming) functions, which allow the user to update the program memory without removing the chip from the actual end product. The Mini55 series also supports In-Application-Programming (IAP) function, user switches the code executing without the chip reset after the embedded flash updated.

2 INTRODUCTION TO NUTINY-SDK-MINI55

NuTiny-SDK-Mini55 uses the Mini55LDE as the target microcontroller. Figure 2.1-1 shows the NuTiny-SDK-Mini55 for the Mini55 series, wherein the left portion is called NuTiny-EVB-Mini55 and the right portion is Debug Adaptor called Nu-Link-Me.

NuTiny-EVB-Mini55

NuTiny-EVB-Mini55 is similar to other development boards. It can be used to develop and verify applications to emulate the real behavior. The on-board chip covers Mini55 series features. The NuTiny-EVB-Mini55 can be a real system controller to design user's target systems.

Nu-Link-Me

- Debug Adaptor

The Nu-Link-Me Debug Adaptor connects your PC's USB port to the user's target system (via Serial Wired Debug Port) and allows user to program and debug embedded programs on the target hardware. To use Nu-Link-Me Debug adaptor with IAR or Keil, please refer to "Nuvoton NuMicro® IAR ICE driver user manual" or "Nuvoton NuMicro® Keil ICE driver user manual" in detail. These two documents will be stored in the local hard disk when user installs each driver.

- Virtual COM Port

The Nu-Link-Me also supports virtual COM port function. The Nu-Link-Me can be used as a USB to UART virtual COM port, which connects to on-board Mini55LDE UART0. Virtual COM port function is defaulted to off. User can turn on all of the positions of switch to enable it.

2.1 NuTiny-SDK-Mini55 (PCB Board)

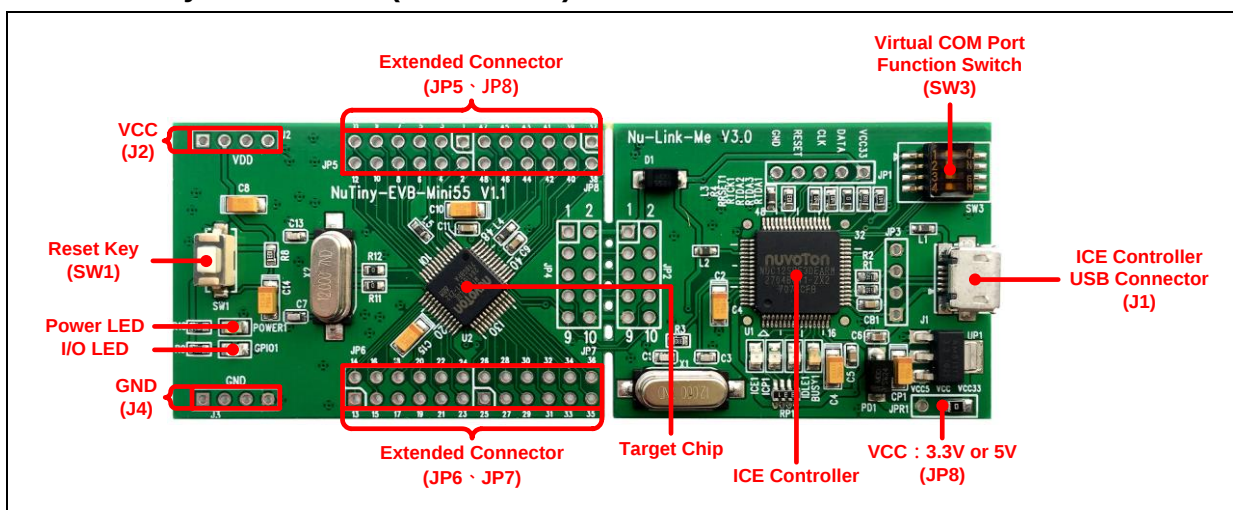


Figure 2.1-1 NuTiny-SDK-Mini55 (PCB Board)

2.2 Virtual COM Port Switch Description

The switch in Nu-Link-Me, SW3, determines that the virtual COM port function is enabled or disabled. When user turns on all of the positions of switch, the virtual COM port function will be enabled. By using virtual COM port function, user can access the USB device in the same way as it would access a standard COM port to Mini55LDE UART0. To use this function, user needs to install "VCOM Driver" at first. User can get "VCOM Driver" from NuMicroDVD in the folder "Software Utilities".

2.3 NuTiny-SDK-Mini55 Power Setting and Connector

2.3.1 Power Setting

- J1: USB port in Nu-Link-Me
- J2: V_{DD} Voltage connector in NuTiny-EVB-Mini55

Model	JPR1	J1 USB port	J2 V_{DD}	MCU Voltage
Model 1	Select VCC33 (default)	Connect to PC	DC 3.3V output	DC 3.3V
Model 2	Select VCC5	Connect to PC	DC 5V output	DC 5V
Model 3*	X	X	DC 2.1 V ~ 5.5 V Input	Voltage by J2 input

X: Unused

Note *: Need to separate NuTiny-EVB-Mini55 and Nu-Link-Me

2.3.2 Debug Connector

- JP4: Connector in target board (NuTiny-EVB-Mini55) for connecting with Nuvoton ICE adaptor (Nu-Link-Me)
- JP2: Connector in ICE adaptor (Nu-Link-Me) for connecting with a target board (NuTiny-EVB-Mini55)

2.3.3 ICE USB Connector

- J1: Mini USB Connector in Nu-Link-Me connected to a PC USB port

2.3.4 Extended Connector

- JP5, JP6, JP7 and JP8: Show all chip pins in NuTiny-EVB-Mini55

2.3.5 Reset Button

- SW1: Reset button in NuTiny-EVB-Mini55

2.3.6 Power Connector

- J2: V_{DD} connector in NuTiny-EVB-Mini55
- J3: GND connector in NuTiny-EVB-Mini55

2.3.7 Virtual COM Port Function Switch

- SW3: Switch ON/OFF to enable or disable Nu-Link-Me virtual COM port function.

Function	Switch				Descriptions
	1	2	3	4	
Enable	ON	ON	ON	ON	Enable Nu-Link-Me virtual COM port function
Disable	OFF	OFF	OFF	OFF	Disable Nu-Link-Me virtual COM port function

2.4 Pin Assignment for Extended Connector

The NuTiny-EVB-Mini55 provides Mini55LDE on board and the extended connector for LQFP-48 pin. Table 2.4-1 is the pin assignment for Mini55LDE.

Pin No	Pin Function	Pin No	Pin Function
01	NC	25	P2.5, PWM3, TX1
02	P1.5, AIN5, ACMP0_P, TX1	26	P2.6, PWM4, ACMP1_O
03	nRESET	27	P2.7
04	P3.0, AIN6, ACMP1_N	28	NC
05	AV _{SS}	29	P4.6, ICE_CLK
06	P5.4, AIN8	30	P4.7, ICE_DAT
07	P3.1, AIN7, ACMP1_P	31	NC
08	P3.2, INT0, STADC, T0EX, ACMP1_P	32	P0.7, SPICLK
09	P3.4, T0, SDA, ACMP1_P, AIN9	33	P0.6, MISO
10	P3.5, T1, SCL, ACMP1_P, AIN10	34	P0.5, MOSI
11	P3.7	35	P0.4, SPISS, PWM5
12	NC	36	NC
13	NC	37	P0.1, RTSn, RX0, SPISS
14	P3.6, ACMP0_O, CKO, T1EX, AIN11	38	P0.0, CTSn, TX0
15	P5.1, XT_OUT	39	NC
16	P5.0, XT_IN	40	NC
17	V _{SS}	41	P5.3, AIN0, ADC_VREF
18	LDO_CAP	42	V _{DD}
19	P5.5	43	AV _{DD}
20	P5.2, INT1	44	P1.0, AIN1, ACMP0_P
21	NC	45	P1.2, AIN2, RX, ACMP0_P
22	P2.2, PWM0	46	P1.3, AIN3, TX, ACMP0_P, INT0
23	P2.3, PWM1	47	P1.4, AIN4, ACMP0_N, RX1
24	P2.4, PWM2, RX1	48	P1.6

Table 2.4-1 Pin Assignment for Mini55LDE

2.5 NuTiny-SDK-Mini55 PCB Placement

User can refer to Figure 2.5-1 for the NuTiny-SDK-Mini55 PCB placements.

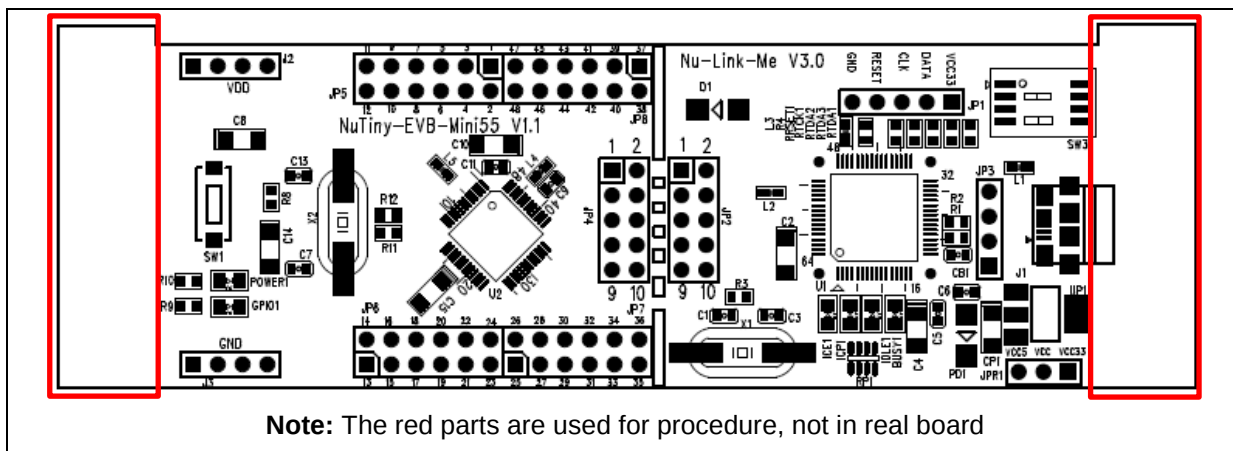


Figure 2.5-1 NuTiny-SDK-Mini55 PCB Placement

3 HOW TO START NUTINY -SDK-MINI55 ON THE KEIL MVISION® IDE

3.1 Downloading and Installing Keil μVision® IDE Software

Please connect to the Keil company website (<http://www.keil.com>) to download the Keil μVision® IDE and install the RVMDK.

3.2 Downloading and Installing Nuvoton Nu-Link Driver

Please connect to Nuvoton NuMicro® website (<http://www.nuvoton.com/NuMicro>) to download the “NuMicro® Keil μVision® IDE driver” file. Please refer to section 6.1 for the detailed download flow. After the Nu-Link driver is downloaded, please unzip the file and execute the “Nu-Link_Keil_Driver.exe” to install the driver.

3.3 Hardware Setup

The hardware setup is shown as Figure 3.3-1



Figure 3.3-1 NuTiny-SDK-Mini55 Hardware Setup

3.4 Example Program

This example demonstrates downloading and debugging an application on a NuTiny-SDK-Mini55 board. The example file can be downloaded from Nuvoton NuMicro® website and found in the directory list shown in Figure 3.4-1.


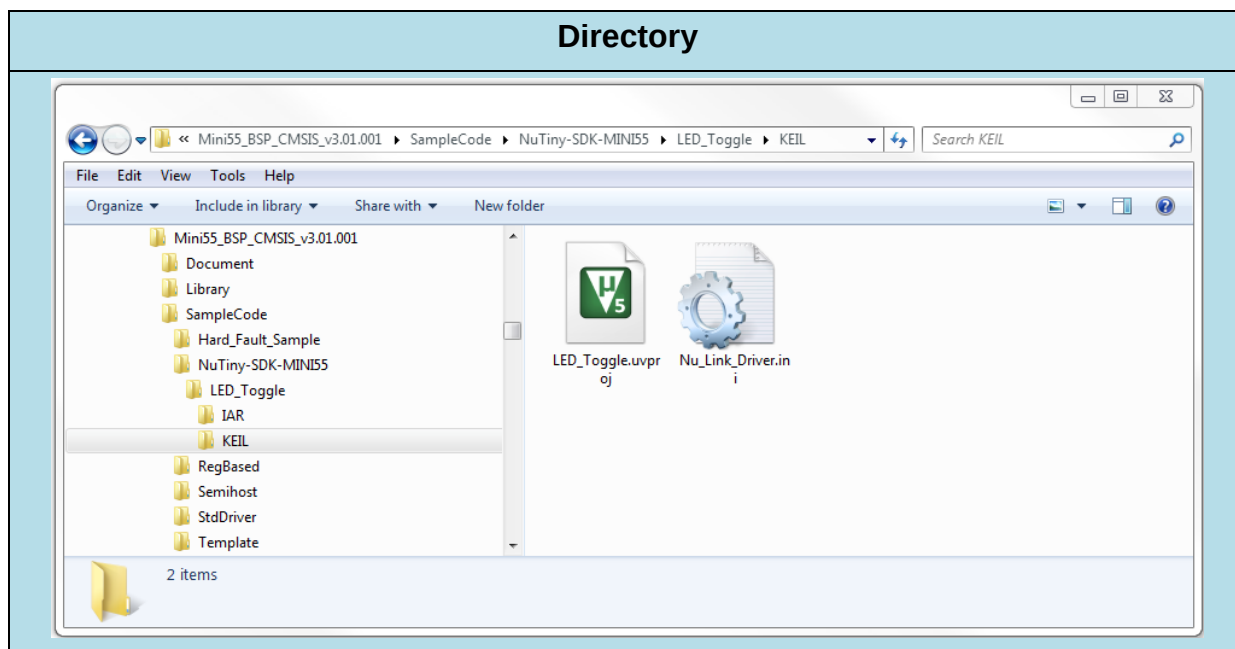



Figure 3.4-1 Example Directory

To use this example:

1. Open a project from the BSP installation folder (default as C:\Nuvoton) using the following path :
 \Mini55_BSP_CMSIS_v3.xx.xxx\SampleCode\NuTiny-SDK-MINI55\LED_Toggle\KEIL
2. Execute “**LED_Toggle.uvproj**”

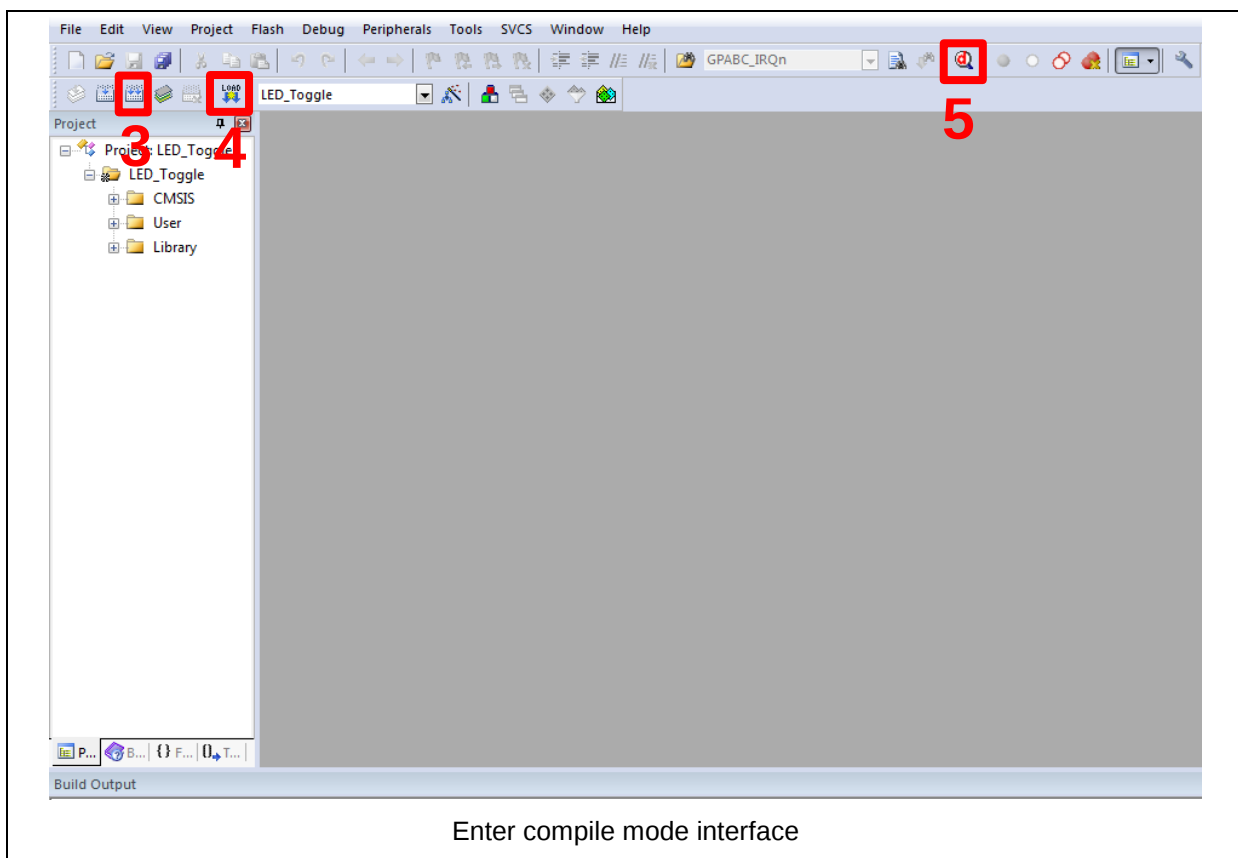

3.  Compiler
4.  Download the program code to Flash
5.  Enter / Exit Debug mode

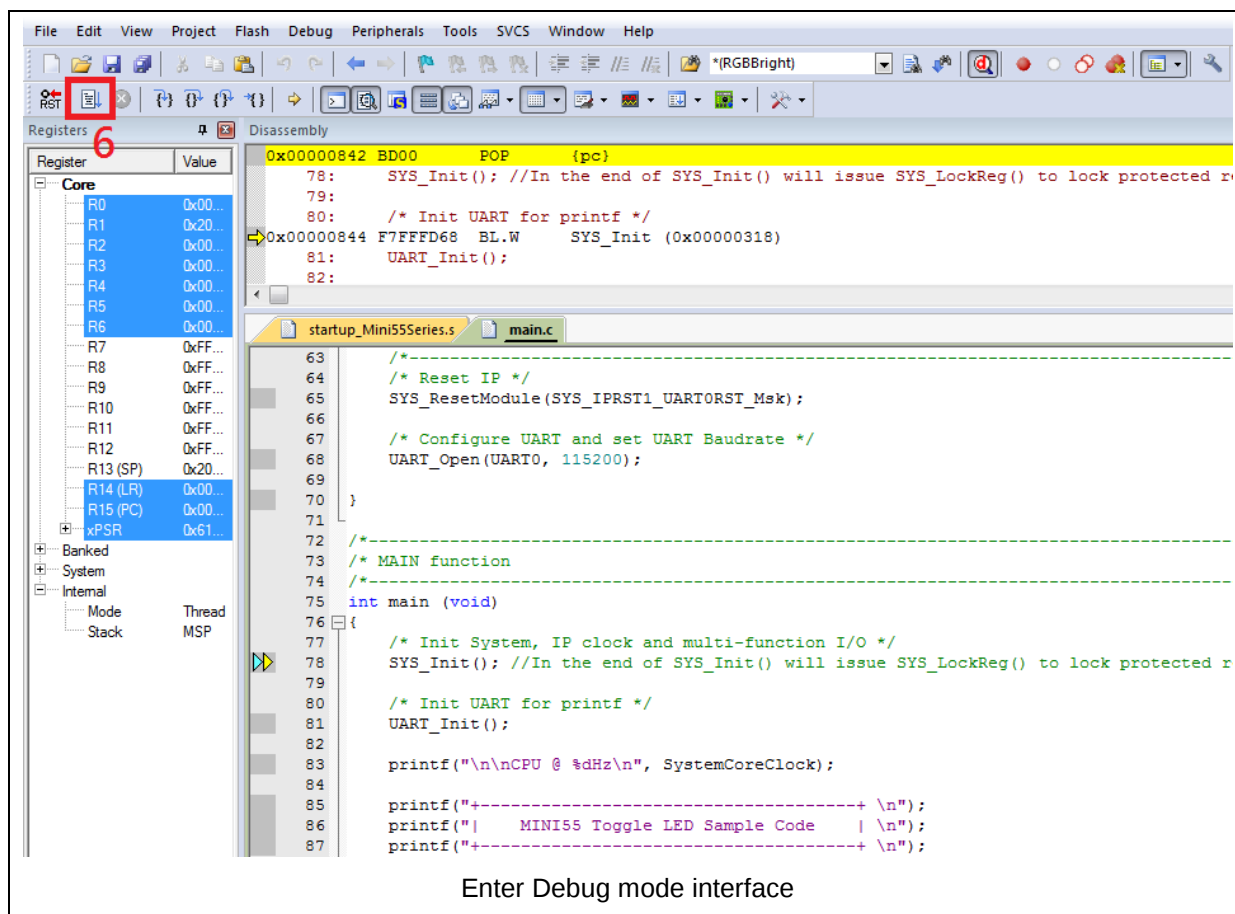

6.  Execute the program
7. The I/O LED on the NuTiny-EVB-Mini55 board will be toggled on.

4 HOW TO START NUTINY -SDK-MINI55 ON THE IAR EMBEDDED WORKBENCH

4.1 Downloading and Installing IAR Embedded Workbench Software

Please connect to IAR company website (<http://www.iar.com>) to download the IAR Embedded Workbench and install the EWARM.

4.2 Downloading and Installing Nuvoton Nu-Link Driver

Please connect to Nuvoton NuMicro® website (<http://www.nuvoton.com/NuMicro>) to download the “NuMicro® IAR EWARM Driver” file. Please refer to section 6.2 for the detailed download flow. After the Nu-Link driver is downloaded, please unzip the file and execute the “Nu-Link_IAR_Driver.exe” to install the driver.

4.3 Hardware Setup

The hardware setup is shown as Figure 4.3-1.

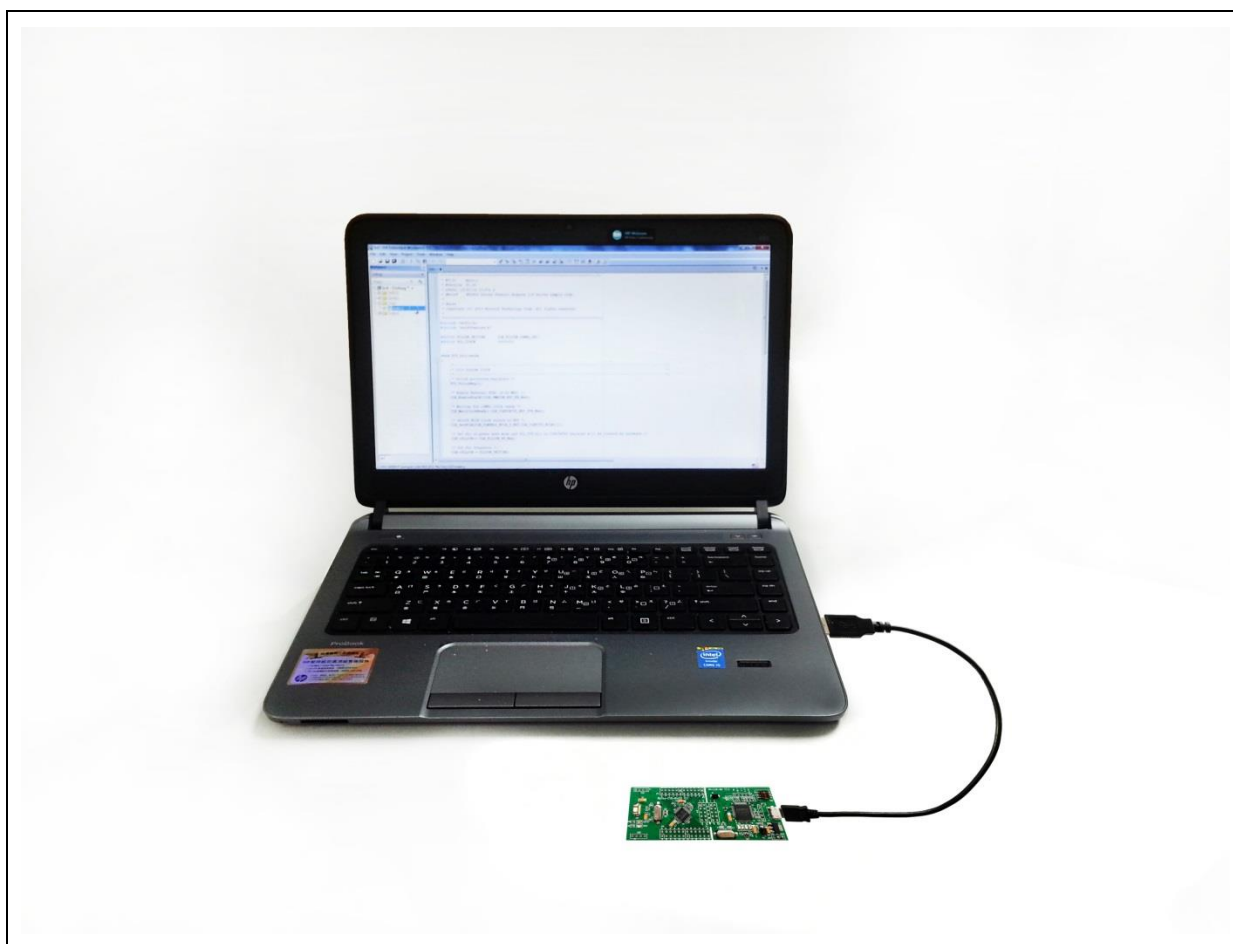


Figure 4.3-1 NuTiny-SDK-Mini55 Hardware Setup

4.4 Example Program

This example demonstrates downloading and debugging an application on a NuTiny-SDK-Mini55 board. The example file can be downloaded from Nuvoton NuMicro® website and found in the directory list shown in Figure 4.4-1.


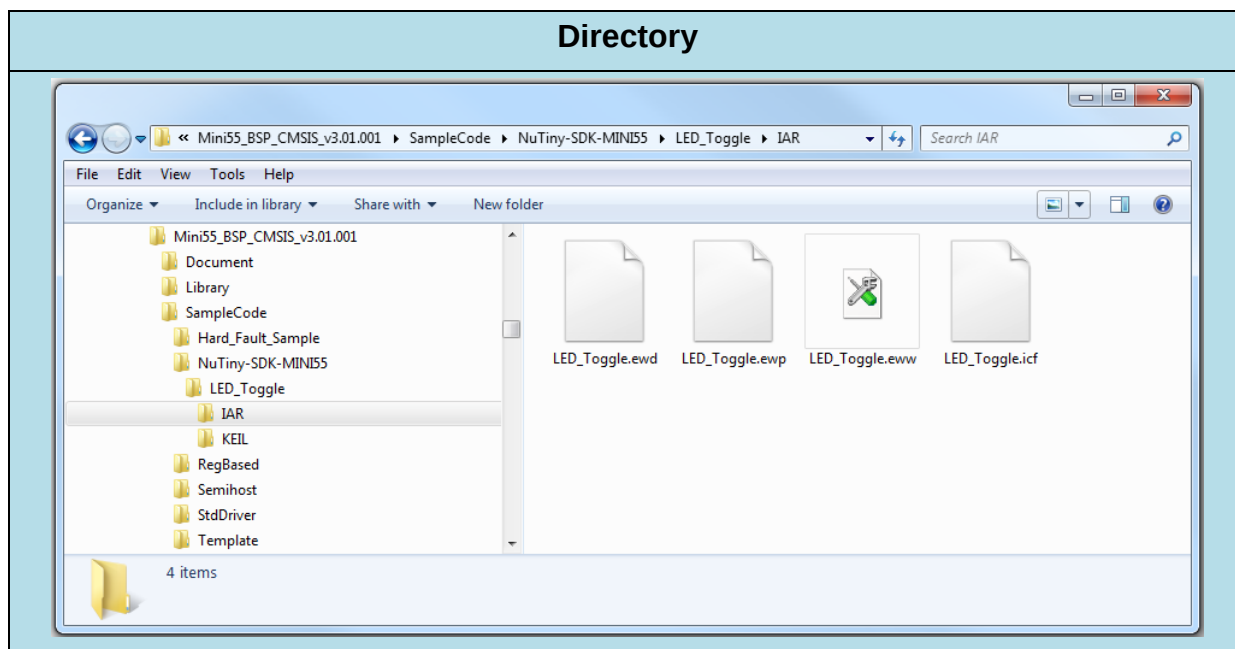



Figure 4.4-1 Example Directory

To use this example:

1. Open a project from the BSP installation folder (default as C:\Nuvoton) using the following path :
 \Mini55_BSP_CMSIS_v3.xx.xxx\SampleCode\NuTiny-SDK-MINI55\LED_Toggle\IAR
2. Execute “**LED_Toggle.eww**”

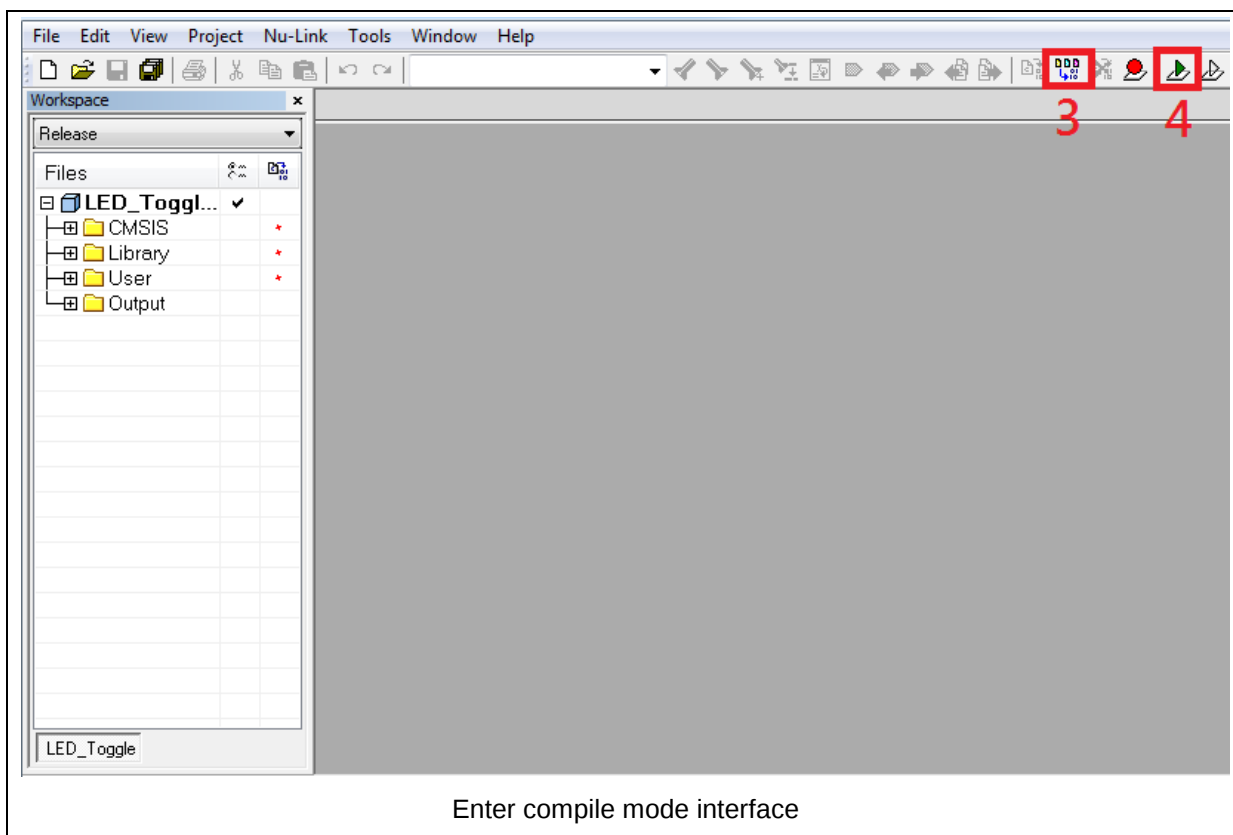


3.  Compile and make
4.  Download the program code to Flash and Enter Debug mode

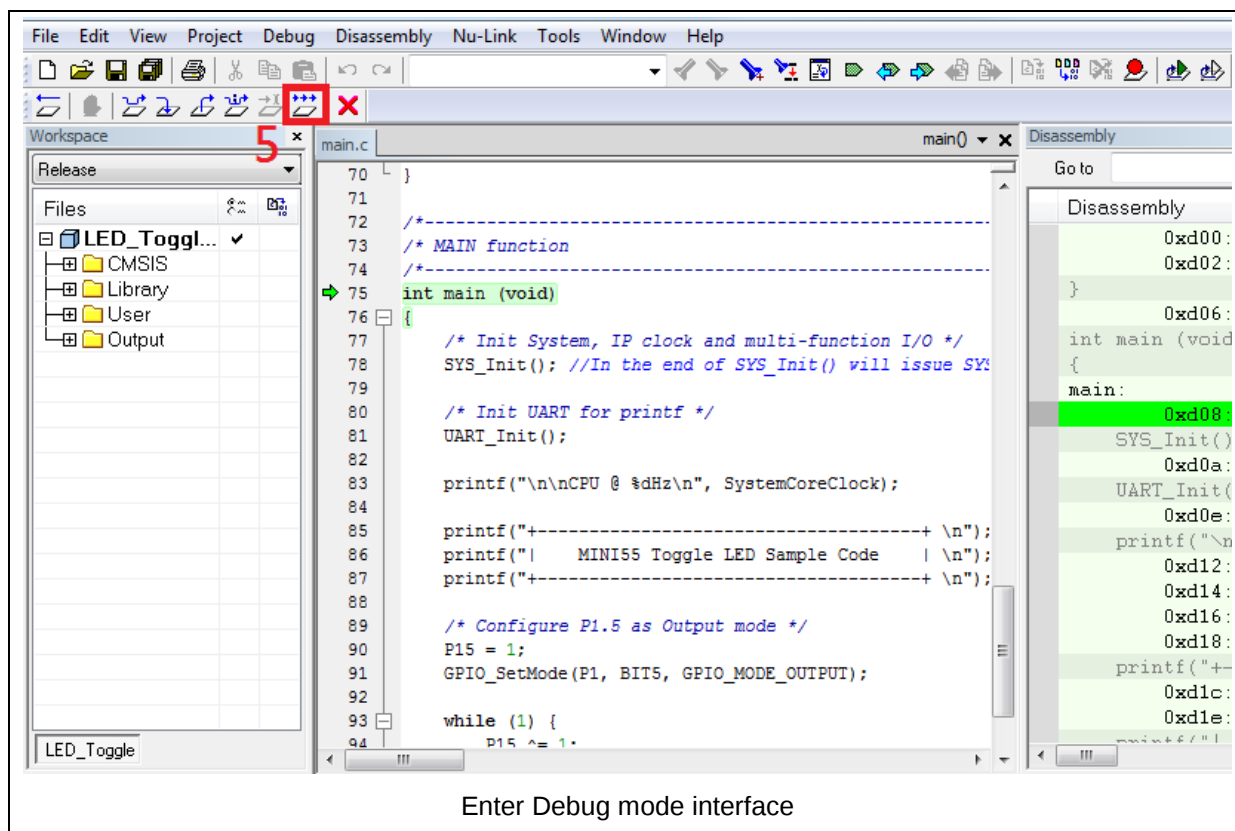


5.  Execute the program
6. The I/O LED on the NuTiny-EVB-Mini55 board will be toggled on.


5.1 Nu-Link-Me Schematic

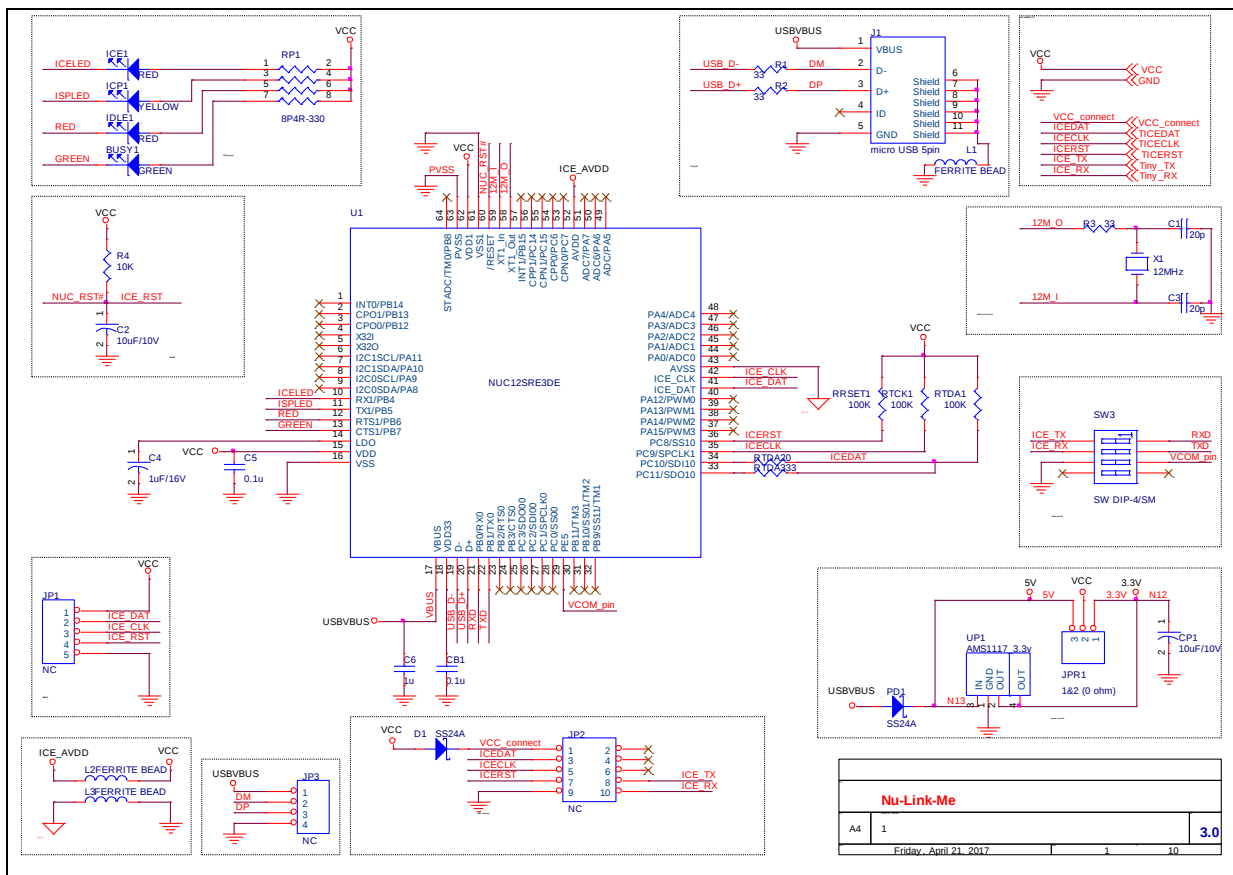


5.2 SDK Circuit Schematic

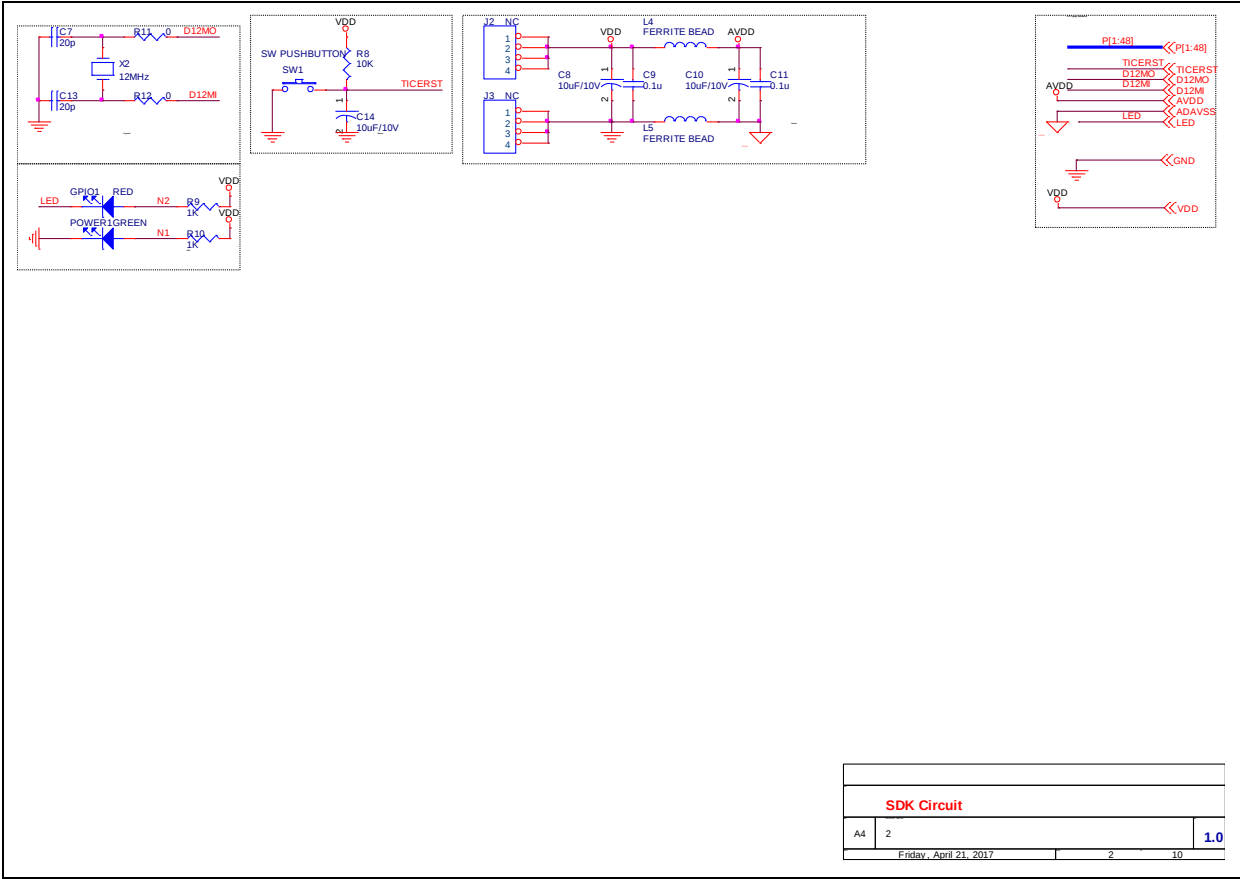

5.3 NuTiny-SDK-MINI55 Schematic

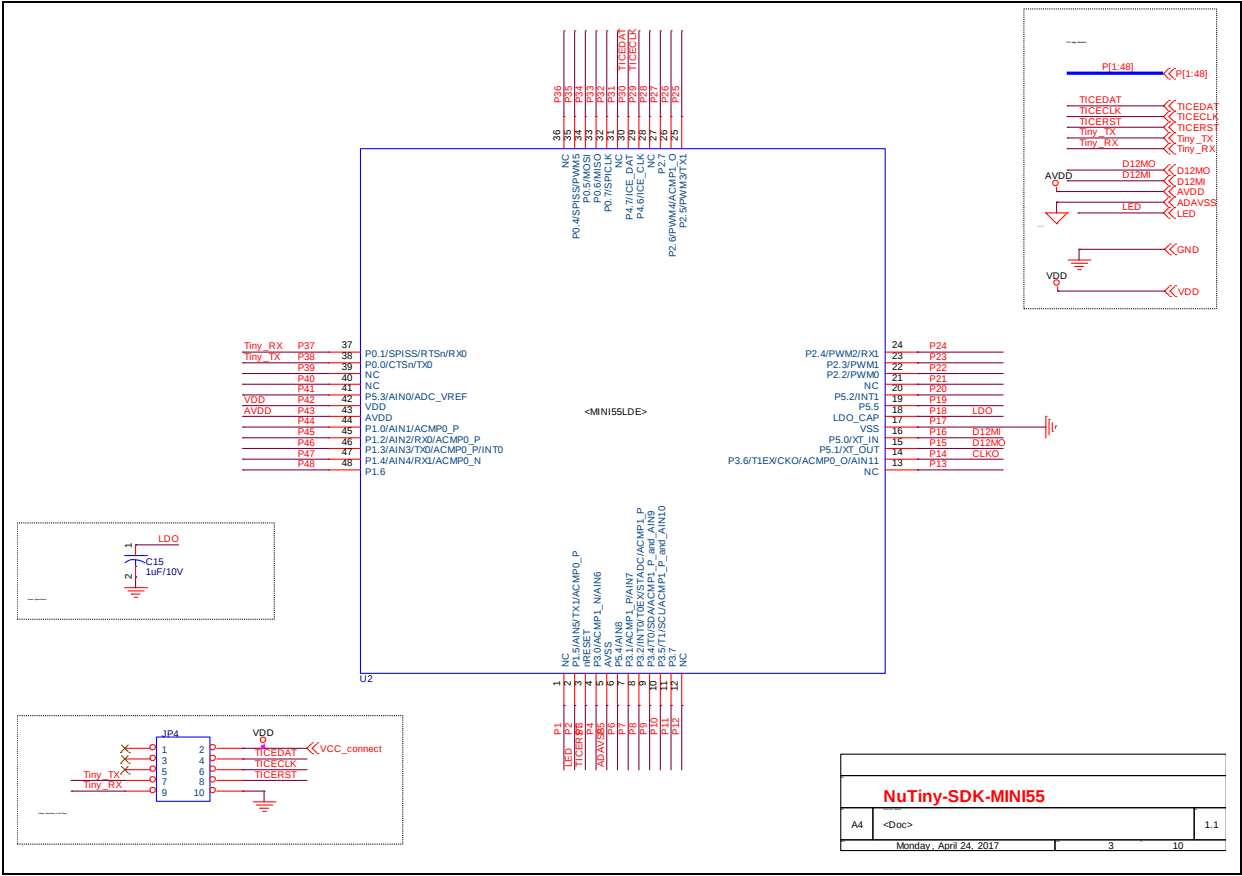

5.4 GPIO for 48 pin Schematic

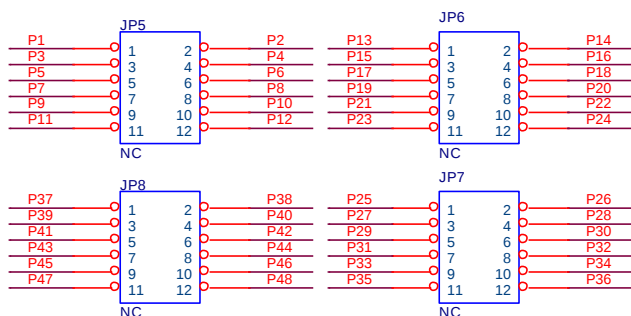

GPIO for 48 pin			
A4	<Doc>		1.0
Eridav April 21, 2017		4	10

6 DOWNLOADING NUMICRO[®] RELATED FILES FROM NUVOTON WEBSITE


6.1 Downloading NuMicro[®] Keil μ Vision[®] IDE Driver

Step1 Visit the Nuvoton NuMicro[®] website: <http://www.nuvoton.com/NuMicro>.

Step2

The screenshot shows the Nuvoton NuMicro website. The top navigation bar includes links for Products, Applications, Support, Foundry Service, Buy, myNuvoton, and About Nuvoton. The 'Support' link is highlighted with a red dashed box and a yellow oval labeled '2-1. Move to "Support"'. A dropdown menu is open under 'Support', showing links for Learning, Product Related Information, Tool & Software (highlighted with a red dashed box and a yellow oval labeled '2-2. Click here to enter Tool & Software'), Reference Design, FAQ, Sales Support, and Technical Support. The main content area features a product matrix with various NuMicro series (NUC100, Nano120, NUC120, NUC230, NUC140, NUC130, NUC220, NUC240, AU9110, AU9120*, M051, Nano100, Nano102, Nano112, Mini51) categorized by application (Industrial Control, Low Power, USB Application, Automotive Application, Audio Application). The matrix also shows memory sizes (16K, 32K, 64K) and a 'Developing' status for some products. The right sidebar contains sections for Online Support (Online Training, Forum, FAQ), Featured Products (M0516LDE, MINI54FDE, NANO130KE3BN), Featured Videos (M0 Introduction(06:35)), and Featured Applications.

Step3

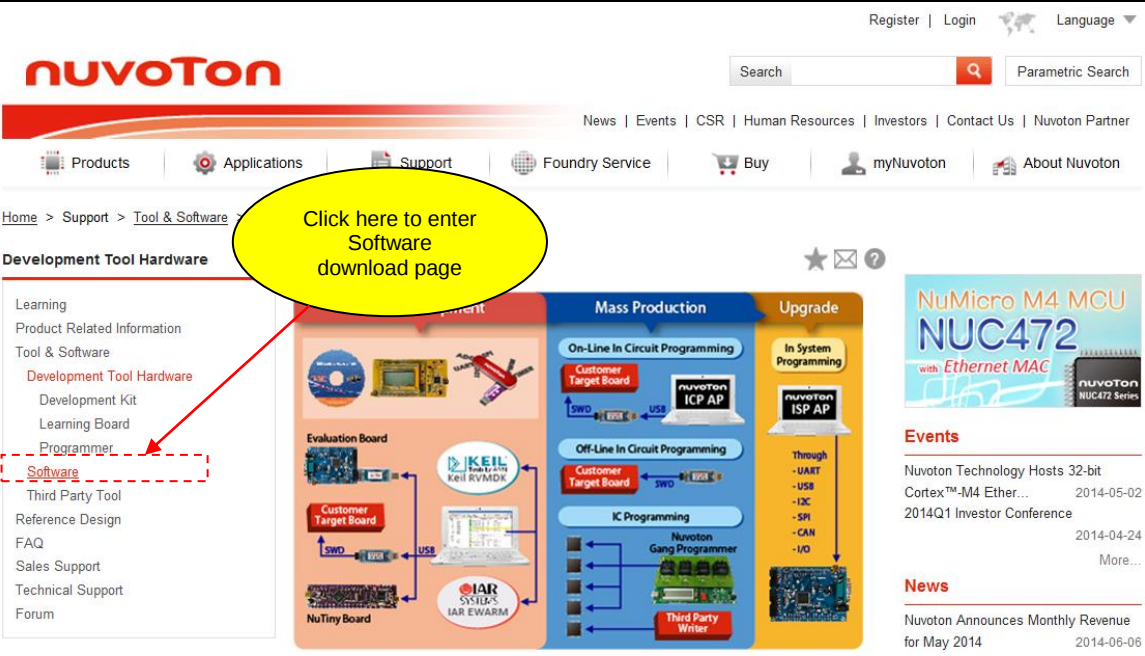

Click here to enter Software download page

Step4

Programmer Software Tools Package

File name	Description	Version	Date
 ICP Programming Tool V1.25.6287.zip Revision History	NuMicro ICP tool & user manual	V1.25.6287	2014-01-16
 ISP Programming Tool V1.44.zip Revision History	NuMicro ISP tool & user manual	V1.44	2014-01-20
 NuGang Programmer V6.21.zip Revision History	NuMicro NuGang Programmer user manual	V6.21	2014-01-24

Nu-Link Driver

File name	Description	Version	Date
 Nu-Link Driver for Keil RVMDK V1.25.6287.zip Revision History	This driver is to support Nu-Link to work under Keil RVMDK Development Environment for all NuMicro Family Devices.	V1.25.6287	2014-01-16
 Nu-Link Driver for IAR EWARM V1.25.6287.zip Revision History	This driver is to support Nu-Link to work under IAR EWARM Development Environment for all NuMicro Family Devices.	V1.25.6287	2014-01-16

 User Feedback ↑ TOP

Step5

Download the NuMicro® Keil µVision® IDE driver.

6.2 Downloading NuMicro® IAR EWARM Driver

Step1 Visit the Nuvoton NuMicro® website: <http://www.nuvoton.com/NuMicro>.

Step2

The screenshot shows the Nuvoton NuMicro website. A yellow oval labeled "2-1. Move to 'Support'" points to the "Support" link in the top navigation bar. A red dashed box highlights the "Support" link. A yellow oval labeled "2-2. Click here to enter Tool & Software" points to the "Tool & Software" link in the "Support" dropdown menu. The website features a navigation bar with links for Products, Applications, Support, Foundry Service, Buy, myNuvoton, and About Nuvoton. The main content area displays a list of ARM Cortex™-M0 MCUs, including AU9110 Audio Series, M051 Base Series, and Nano100/102 Base Series. A "Resources" section lists various documents like Application Note, Data Sheet, and Development Tool. A "Featured Products" section highlights M0516LDE, MINI54FDE, and NANO130KE3BN. A "Featured Videos" section shows a video titled "M0 Introduction(06:35)".

Register | Login | Language

nuvoTon

Search

Parametric Search

News | Events | CSR | Human Resources | Investors | Contact Us | NuvoTon Partner

Products

Applications

Support

Foundry Service

Buy

myNuvoTon

About NuvoTon

Home > Support > Tool & Software >

Development Tool Hardware

Learning

Product Related Information

Tool & Software

Development Tool Hardware

Development Kit

Learning Board

Programmer

Software

Third Party Tool

Reference Design

FAQ

Sales Support

Technical Support

Forum

Click here to enter Software download page

On-Line In Circuit Programming

Off-Line In Circuit Programming

IC Programming

Upgrade

In System Programming

NuMicro M4 MCU

NUC472

with Ethernet MAC

nuvoTon NUC472 Series

Events

Nuovon Technology Hosts 32-bit Cortex™-M4 Ether... 2014-05-02

2014Q1 Investor Conference 2014-04-24

More...

News

Nuovon Announces Monthly Revenue for May 2014 2014-06-06

Programmer Software Tools Package

File name	Description	Version	Date
ICP Programming Tool V1.25.6287.zip Revision History	NuMicro ICP tool & user manual	V1.25.6287	2014-01-16
ISP Programming Tool V1.44.zip Revision History	NuMicro ISP Programming Tool & user manual	V1.44	2014-01-20
NuGang Programmer V6.21.zip Revision History	NuGang Programmer & user manual	V6.21	2014-01-24

Click here to download

Nu-Link Driver for Keil RVMDK V1.25.6287.zip
 Revision History

Nu-Link Driver for IAR EWARM V1.25.6287.zip
 Revision History

Nu-Link Driver

File name	Description	Version	Date
Nu-Link Driver for Keil RVMDK V1.25.6287.zip Revision History	This driver is to support Nu-Link to work under Keil RVMDK Development Environment for all NuMicro Family Devices.	V1.25.6287	2014-01-16
Nu-Link Driver for IAR EWARM V1.25.6287.zip Revision History	This driver is to support Nu-Link to work under IAR EWARM Development Environment for all NuMicro Family Devices.	V1.25.6287	2014-01-16

User Feedback

↑ TOP

Step5

Download the NuMicro® IAR EWARM driver.

6.3 Downloading NuMicro® Mini55 Series BSP Software Library

Step 1

Visit the Nuvoton NuMicro® website: <http://www.nuvoton.com/NuMicro>.

Step 2

The screenshot shows the Nuvoton NuMicro website. A yellow oval labeled "2-1. Move to 'Support'" points to the "Support" link in the top navigation bar. Another yellow oval labeled "2-2. Click here to enter Tool & Software" points to the "Tool & Software" link in the dropdown menu under "Support". The website features a navigation bar with links for Products, Applications, Support, Foundry Service, Buy, myNuvoton, and About Nuvoton. A search bar is located in the top right. The main content area displays a list of ARM Cortex™-M0 MCUs on the left, a central grid of product models (NUC100, Nano120, NUC120, NUC230, NUC140, NUC130, NUC122, NUC123, Nano102, Nano112, Mini51, M051, AU9110, AU9120*), and a right sidebar with sections for Online Support, Featured Products, Featured Videos, and Featured Applications. The footer includes the text: "As one of the leading Microcontroller (MCU) companies in the world, Nuvoton provides the state-".

Step 3	 The screenshot shows the NuvoTon website's 'Tool & Software' page. On the left, a sidebar lists various resources: Learning, Product Related Information, Tool & Software, Development Tool Hardware, Development Kit, Learning Board, Programmer, Software (highlighted with a red dashed box and a yellow callout bubble), Third Party Tool, Reference Design, FAQ, Sales Support, Technical Support, and Forum. The main content area is divided into three columns: 'Development Tool Hardware' (showing Evaluation Board, Customer Target Board, and NuTiny Board), 'Mass Production' (showing On-Line In Circuit Programming, Off-Line In Circuit Programming, and IC Programming), and 'Upgrade' (showing In System Programming). A yellow callout bubble with the text 'Click here to enter Software download page' points to the 'Software' link in the sidebar.
Step 4	Download the NuMicro® Mini55 Series CMSIS BSP.

7 REVISION HISTORY

Date	Revision	Description
2017.06.28	1.00	1. Preliminary version.

Important Notice

Nuvoton Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, "Insecure Usage".

Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, the control or operation of dynamic, brake or safety systems designed for vehicular use, traffic signal instruments, all types of safety devices, and other applications intended to support or sustain life.

All Insecure Usage shall be made at customer's risk, and in the event that third parties lay claims to Nuvoton as a result of customer's Insecure Usage, customer shall indemnify the damages and liabilities thus incurred by Nuvoton.

*Please note that all data and specifications are subject to change without notice.
All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.*