

## **TRF3711xxEVM**

### **Contents**

|   |                                               |   |
|---|-----------------------------------------------|---|
| 1 | Introduction .....                            | 2 |
|   | 1.1 Overview .....                            | 2 |
|   | 1.2 EVM Frequency Configuration Options ..... | 2 |
|   | 1.3 System Block Diagram .....                | 2 |
| 2 | Software Control .....                        | 3 |
|   | 2.1 Installation Instructions .....           | 3 |
|   | 2.2 Software Operation .....                  | 3 |
| 3 | EVM Test Configuration .....                  | 5 |
|   | 3.1 Test Block Diagram .....                  | 5 |
|   | 3.2 Test Equipment .....                      | 5 |
|   | 3.3 Calibration .....                         | 5 |
| 4 | Basic Test Procedure .....                    | 5 |
|   | 4.1 DC Test .....                             | 5 |
|   | 4.2 Basic RF Test .....                       | 6 |
|   | 4.3 Advanced RF Test .....                    | 6 |
| 5 | Optional Configurations .....                 | 8 |
|   | 5.1 Mixer Outputs .....                       | 8 |
|   | 5.2 Common-Mode Voltage .....                 | 8 |
|   | 5.3 DC Offset Control .....                   | 8 |
|   | 5.4 Analog Gain Control .....                 | 8 |
|   | 5.5 Analog Device Disable .....               | 8 |
| 6 | Schematics .....                              | 8 |

### **List of Figures**

|   |                                                                    |   |
|---|--------------------------------------------------------------------|---|
| 1 | System Block Diagram .....                                         | 2 |
| 2 | TRF3711xx GUI Front Panel .....                                    | 3 |
| 3 | Test Setup Block Diagram .....                                     | 5 |
| 4 | TRF371125 with ADS62P42 WiMAX 3.5-MHz Signal EVM Performance ..... | 7 |

### **List of Tables**

|   |                                                           |   |
|---|-----------------------------------------------------------|---|
| 1 | TRF3711xx Device Frequencies and Recommended Baluns ..... | 2 |
| 2 | Frequency Allocations .....                               | 6 |

## 1 Introduction

### 1.1 Overview

This document is the user's guide for the TRF3711xxEVM. The TRF3711xx is a receiver direct downconvert quadrature demodulator that includes programmable baseband filters, adjustable dc offset correction, and buffer amplifiers to directly drive ADCs. The device is suited for operation with WCDMA, WiMAX, and LTE modulation as well as with other high-bandwidth signal modulation schemes.

**Note:** Unless otherwise noted, the abbreviations *TRF3711xxEVM* and *TRF3711xx* are used in this document to refer to all members of this device family (including the TRF371109, TRF371125, and TRF371135). [Table 1](#) summarizes the TRF3711xx device frequency options and lists the recommended balun for each device.

**Table 1. TRF3711xx Device Frequencies and Recommended Baluns<sup>(1)</sup>**

| Frequency | Device               | Recommended Balun      |
|-----------|----------------------|------------------------|
| 700 MHz   | TRF371109, TRF371125 | Murata LDB21897M05C    |
| 880 MHz   | TRF371109, TRF371125 | Murata LDB21881M05C    |
| 940 MHz   | TRF371109, TRF371125 | Murata LDB21942M05C    |
| 1740 MHz  | TRF371125, TRF371135 | Murata LDB211G8005C    |
| 1950 MHz  | TRF371125, TRF371135 | Murata LDB211G9005C    |
| 2025 MHz  | TRF371125, TRF371135 | Murata LDB211G9005C    |
| 2500 MHz  | TRF371125, TRF371135 | Murata LDB212G4005C    |
| 3550 MHz  | TRF371125, TRF371135 | Johanson 3600BL14M050E |
| 5400 MHz  | TRF371135            | Johanson 5400BL15B050E |


<sup>(1)</sup> There is considerable overlap in the operating frequency range of the TRF3711xx family of devices. Refer to the specific device data sheet and compare performance parameters at the frequencies of interest to select the best part for a particular application.

### 1.2 EVM Frequency Configuration Options

The TRF3711xx device is inherently broadband; however, the RF input and LO input require differential input, which is generally achieved with the use of an RF balun. The EVM can be configured with a different balun to facilitate operation in the desired band. Inspect the board at R101 to R105 to determine which balun is populated on the board.

### 1.3 System Block Diagram

The basic radio system block diagram in [Figure 1](#) demonstrates where the TRF3711xx fits in the overall receiver architecture. The bold box highlights the TRF3711xx device.

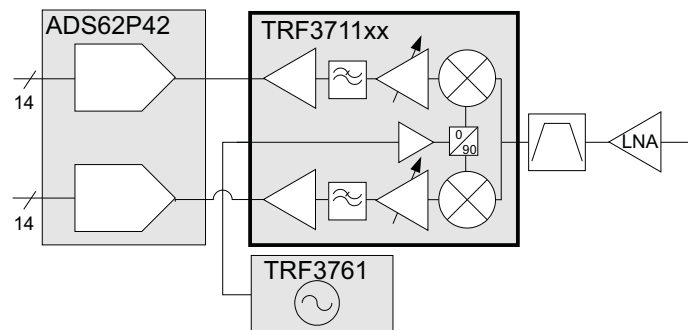

**Figure 1. System Block Diagram**

## 2 Software Control

### 2.1 Installation Instructions

1. Open the folder named TRF3711\_Installer\_vxpx (**xpx** represents the latest version).
2. Run Setup.exe.
3. Follow the on-screen instructions.
4. Once installed, launch by clicking on the TRF3711\_GUI\_Verxpx program.
5. When plugging in the USB cable for the first time, you will be prompted to install the USB drivers.
  - (a) When a pop-up screen opens, select *Continue Downloading*.
  - (b) Follow the on-screen instructions to install the USB drivers.
  - (c) If needed, the drivers can be accessed directly in the install directory.

### 2.2 Software Operation

The front panel control is shown in [Figure 2](#). The registers are set in the respective default configurations. This section describes the functionality of the control registers.

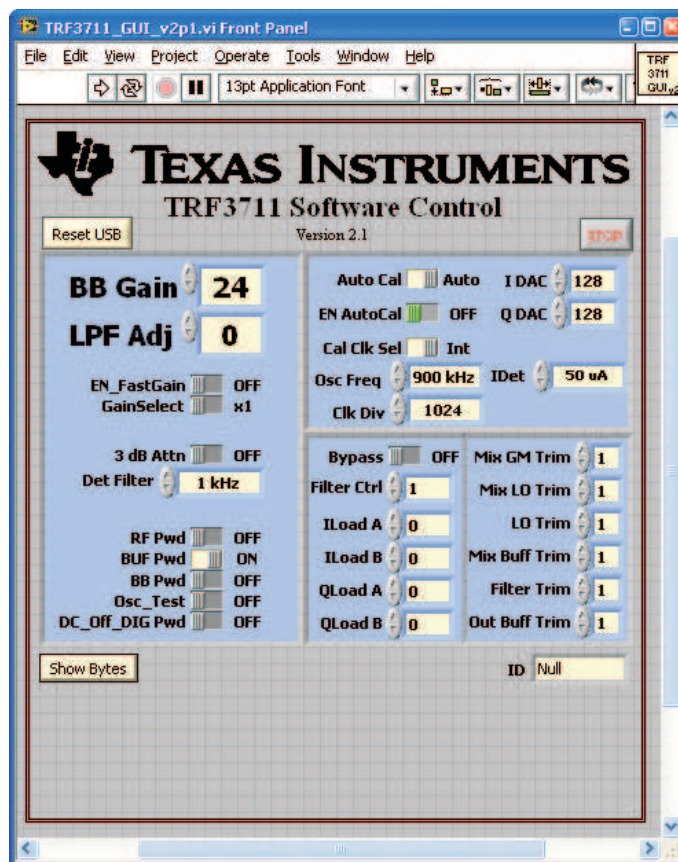


Figure 2. TRF3711xx GUI Front Panel

#### 2.2.1 Register 1

- **BB Gain:** The programmable-gain amplifiers (PGA) setting; range is 0 to 24.
- **LPFAdj:** Sets the bandwidth of the BB filters. Setting 0 is maximum (bandwidth  $\geq 15$  MHz); setting 255 is minimum (BW  $\leq 700$  kHz). See the specific device data sheet for comprehensive curves.
- **EN\_FastGain:** Enables the fast-gain option to adjust PGA gain with external bits

- Gain Select: Selects whether each bit in the fast-gain control is either 1 dB or 2 dB.
- 3 dB Attn: Engages the 3-dB attenuator at the baseband output.
- Det Filter Selects the internal detector filter used in dc offset calibration.
- RF Pwd Enables SW-controlled power down of RF stages inside device.
- BUF Pwd Enables power down on test buffer for mixer output; default is powered down.
- Osc\_Test Enables dc offset oscillator to the READBACK pin on the TRF3711.
- DC\_OFF\_DIG Pwd Enables SW-controlled power down of dc offset-correction circuitry.

### 2.2.2 Register 2

- Auto Cal *Manual* mode allows the dc offset DACs to be user-configurable; *Auto* mode uses the internally stored values.
- En Auto Cal: When toggled, an Auto Cal is initiated. Note, *Auto Cal* must be in *Auto* mode.
- IQ DAC: Shows the setting of the dc offset I and Q DAC when in manual mode; range is 0 to 255.
- Cal Clk Sel: Toggle between using an externally supplied SPI clock or internal oscillator clock.
- Osc. Freq. Selects the oscillator frequency for the internal clock.
- Clk Div Sets the clock divider if the control clocks must be slowed down. Value chosen in conjunction with Det Filter setting for optimal averaging.
- IDet: Selects the resolution of the I and Q DAC.

### 2.2.3 Register 3

- I/QLoadA/B: Selects the mixer gain for the differential BB paths. Typically, modification of these registers is not required, but they can be tweaked for minor I/Q amplitude adjustment.
- Filter Ctrl: Trims the peaking response of the BB LPF response.
- Bypass Engages the bypass feature of the BB LPF.

### 2.2.4 Register 5

- Mix GM Trim No adjustment of this register required.
- Mix LO Trim No adjustment of this register required.
- LO Trim No adjustment of this register required.
- Mix Buff Trim No adjustment of this register required.
- Filter Trim No adjustment of this register required.
- Out Buff Trim No adjustment of this register required.


### 2.2.5 Misc Settings

- Reset USB: Toggle this button if the USB port is not responding. This generates a new USB handle address.
- Show Bytes: Shows the 32-bit word that is sent for each register.
- Stop Stops the program.

## 3 EVM Test Configuration

### 3.1 Test Block Diagram

The test setup for general testing of the TRF3711xx is shown in [Figure 3](#).

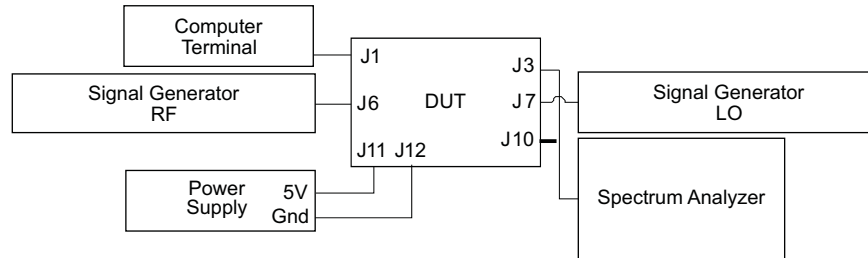

**Figure 3. Test Setup Block Diagram**

### 3.2 Test Equipment

The following equipment is required for completing RF testing:

- Power supply with current readout (Agilent E3631 or equivalent)
- Signal generator for input signal (Agilent E4438C or equivalent)
- Signal generator for LO signal (Agilent E4438C or equivalent)
- Spectrum analyzer (Agilent E4440A or equivalent)
- Programming computer

### 3.3 Calibration

The RF cables should be good-quality RF cables because of the high-frequency signals.

---

**NOTE:** There is approximately 1 dB of insertion loss for the input traces and balun on the printed circuit board (PCB).

---

- Measure the insertion loss of the RF input cable and use this value to compensate for the desired input power.
- Measure the insertion loss of the LO input cable and use this value to compensate for the desired LO power.
- BB loss factor: If using the onboard transformers to interface with 50-Ω test equipment, then there is approximately 12 dB of loss associated with the voltage transformation and transformer loss.

## 4 Basic Test Procedure

This section outlines the basic test procedure for testing the EVM. This section is divided into three test sections: *DC Test*, *Basic RF Test*, and *Advanced RF Test*. The first section requires only power supply with current readout and a computer for programmability. The second section requires basic RF test equipment and basic technical know-how. The third section is for reference and requires specialized equipment and setup. Only [Section 4.1](#) and [Section 4.2](#) are required to ensure basic functionality.

### 4.1 DC Test

1. Connect +5 V to J11; connect ground to J12.
2. Engage power supplies.
3. Verify current is 385 mA  $\pm$  25 mA.

## 4.2 Basic RF Test

Determine which balun device is placed on the board by inspecting which jumper resistor is installed at the R101 to R105 locations. This information determines the proper RF frequencies for which the board is configured. [Table 2](#) summarizes the frequency band allocations.

**Table 2. Frequency Allocations**

| Band | Frequency Band       | F_LO    | F_RF    |
|------|----------------------|---------|---------|
| 1G9  | 1800 MHz to 2000 MHz | 1.9 GHz | 1.9 GHz |
| 2G4  | 2.3 GHz to 2.7 GHz   | 2.4 GHz | 2.4 GHz |
| 3G5  | 3.5 GHz to 3.8 GHz   | 3.5 GHz | 3.5 GHz |
| 1G7  | 1600 MHz to 1800 MHz | 1.7 GHz | 1.7 GHz |
| 900M | 700 MHz to 1000 MHz  | 900 MHz | 900 MHz |

1. Inject LO signal at J7 at F\_LO frequency at 0 dBm. Compensate for RF cable losses, including about 1 dB for input balun and transmission line losses.
2. Verify USB cable is connected.
3. Launch TRF3711\_GUI\_vxpx.
4. Toggle Auto Cal En on the GUI to complete a dc offset calibration.
5. Monitor the dc voltage are TP2 (IA) and TP7 (IB) and between TP10 (QA) and TP12 (QB) and verify that the dc offset voltage is  $0 \pm 35$  mV.
6. Inject RF signal at J6 at F\_RF + 300 kHz at –40 dBm. Compensate for cable loss including about 1 dB for input transmission line losses and balun.
7. Connect spectrum analyzer at J3 (I).
8. Set Spectrum analyzer center frequency to 300 kHz:
  - (a) Set span to 500 Hz.
  - (b) Set reference level to 0 dBm.
  - (c) Set analyzer to dc coupling.
  - (d) Set RBW to 3 Hz.
  - (e) Set VBW to 10 Hz.
9. Measure the signal at 300 kHz and verify signal at –12 dBm  $\pm 4$  dB; note there is at least 12 dB of loss associated through the onboard transformer. Also note that the device gain depends on the frequency, and thus the output levels differ, depending on the frequency of the test.
10. Adjust BB gain to 20; verify signal reduces 4 dB  $\pm 1$  dB.
11. Switch output cable to J10 (Q) and repeat the basic RF test beginning with Step 9..

## 4.3 Advanced RF Test

The EVM is equipped with the differential outputs going to a 16:1 transformer for interfacing with 50- $\Omega$  test equipment. This configuration is suitable for completing basic RF test evaluation of the device; however, the inherent high-pass nature of a transformer limits performance at frequencies close to dc. As a result, this configuration is not suitable for analyzing true modulated signals. As an alternative, the ports at J2/J4 and J8/J13 offer direct access to the driver amplifier outputs for the differential I and Q signals, respectively. Note, these ports cannot drive 50- $\Omega$  test equipment directly. For best performance, the connections to the transformer should be severed by removing jumpers at W4, W5, W6, and W7.

These ports can drive into an ADC directly or into a high-impedance differential amplifier. These ports are dc-coupled to provide the proper common-mode offset voltage to the ADC. The typical EVM performance of the device using a modulated 3.5-MHz wide WiMAX signal captured by the ADC is shown in Figure 4.

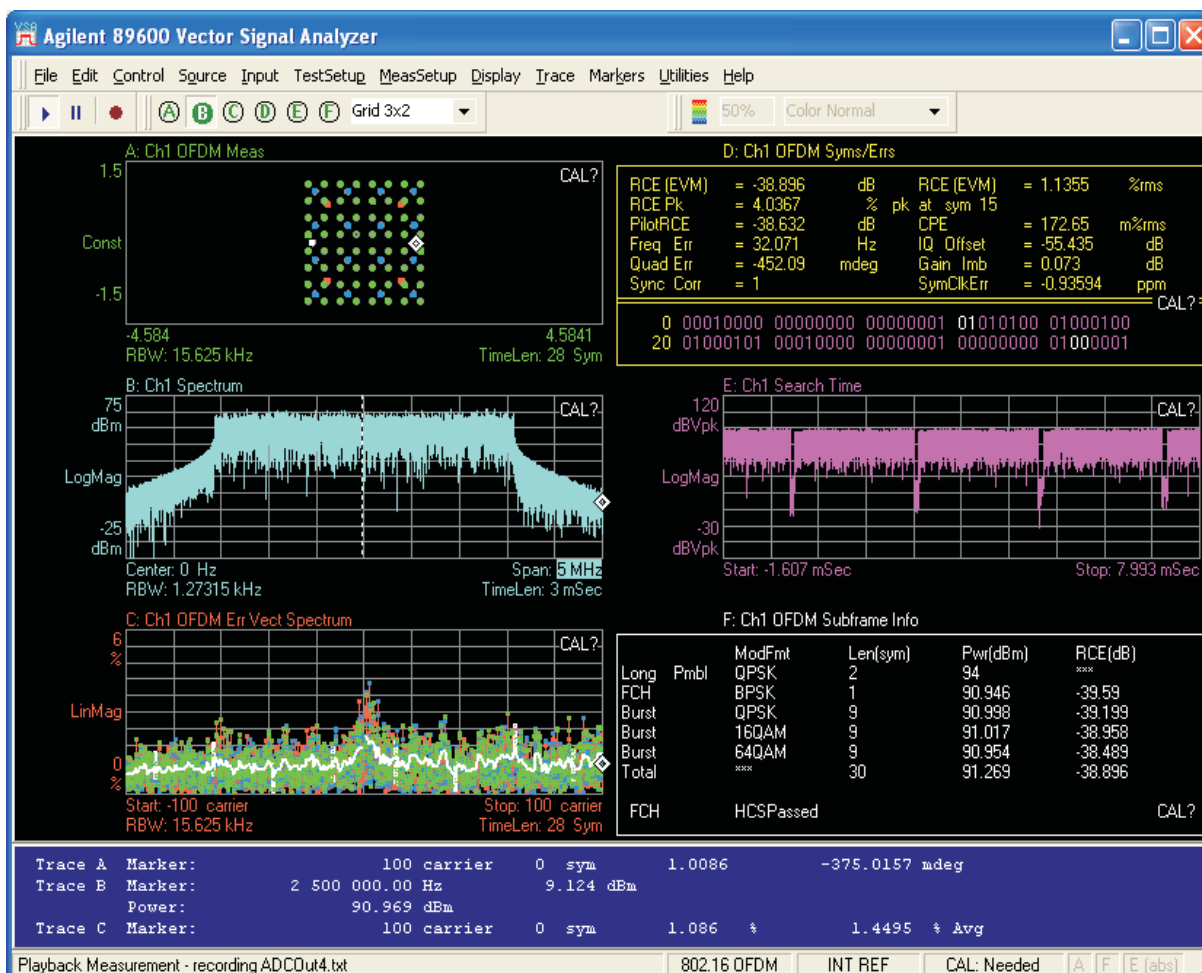


Figure 4. TRF371125 with ADS62P42 WiMAX 3.5-MHz Signal EVM Performance

## 5 Optional Configurations

### 5.1 Mixer Outputs

The mixer outputs can be fed directly to the transformers and to ports J5 and J9. This can be useful for measuring the RF performance of the mixer itself without the PGAs or filters. This feature is implemented by toggling the *BUF Pwd* to *Off*.

### 5.2 Common-Mode Voltage

The common-mode voltage is set to a static 1.5 V by a resistor-divider network. Note, the common-mode voltage is shifted if the input supply is not 5 V. Alternatively, this can be controlled via a potentiometer by:

- Removing R17, R18
- Placing 0-Ω jumper at R19
- Adjusting potentiometer R20.

When cascading the device with an ADC it may be desirable to feed the common-mode voltage from the ADC to the device. This can be accomplished by:

- Removing shunt at W3
- Placing ADC common-mode voltage at TP9

### 5.3 DC Offset Control

The easiest way to manage the dc offset control is to use the *Auto Cal* function. This is accomplished by setting *Auto Cal* to *Auto* and toggling the *Auto Cal En* switch. Monitor the dc offset voltage at TP2 (IA) and TP7 (IB) and between TP10 (QA) and TP12 (QB) and verify that the procedure worked sufficiently.

The detection filter is typically set to 1 kHz and the clock divider is set to 1024. With this configuration the dc offset calibration is most accurate and can be enabled with the RF signal present. If the RF input signal is disabled during the auto-cal procedure, then the detection filter bandwidth can be 10 MHz and the clock divider reduced to a value of 16. Other combinations of detector filter and clock divider are possible, depending on accuracy required and convergence time required.

Alternatively, this function can be accomplished by manually programming the I and Q DAC registers. Toggle *Auto Cal* to *Manual*. Adjust the I and Q DAC registers on the GUI directly. Monitor the dc offset values at TP2 (IA) and TP7 (IB) and between TP10 (QA) and TP12 (QB) until the dc offset is as close to 0 mV as possible.

### 5.4 Analog Gain Control

The device is equipped with three bits to control the PGA gain to facilitate an analog gain-control loop that does not require the use of SPI. To use this function, set the *EN\_FastGain* to *ON*. Then adjust for the gain through the binary combination of bits B0, B1, B2 that can be toggled at DIP switch SW1. For example, if the BB gain is set to 24 and the binary bits are set to *b101*, then the equivalent gain setting is  $24 - 5 = 19$ . If the *GainSelect* is set to  $2\times$ , then the equivalent gain setting for the previous example is  $24 - 2 \times 5 = 14$ .

### 5.5 Analog Device Disable

The TRF3711xx can be disabled by removing the jumper at W2.

## 6 Schematics

Schematics for the TRF3711xxEVM are appended to this document.









## REVISION HISTORY

### Changes from A Revision (March, 2010) to B Revision

**Page**

- Added TRF371109 device to products supported by EVM ..... [1](#)

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

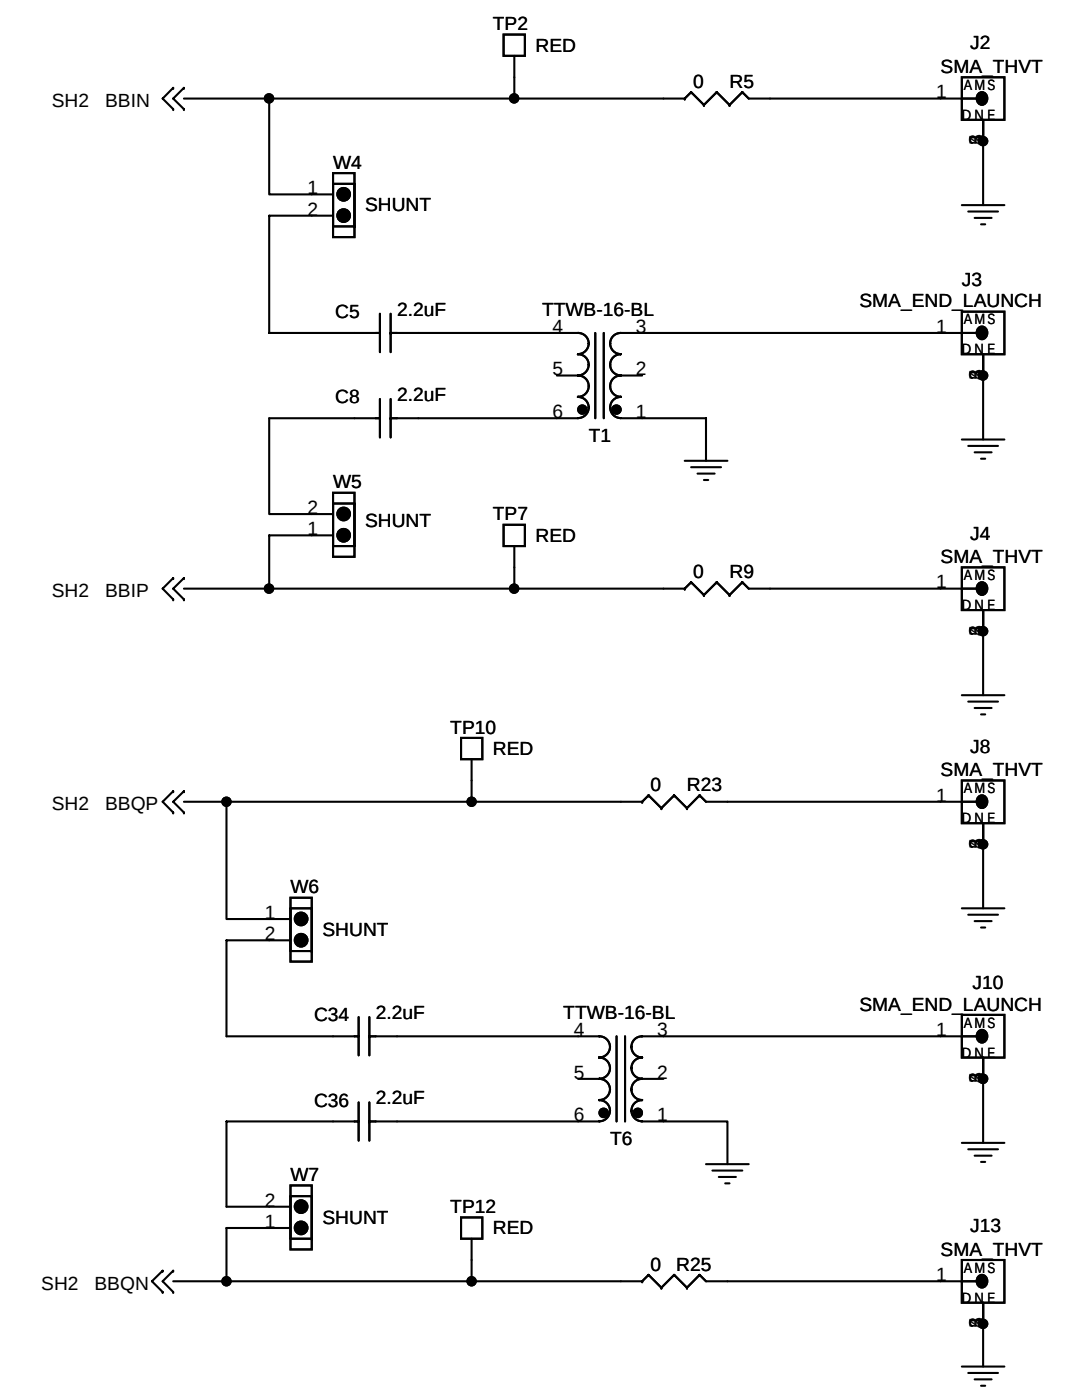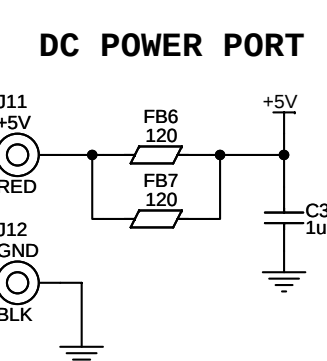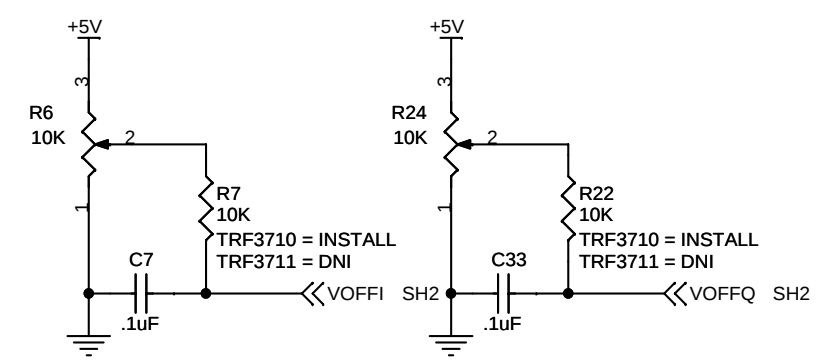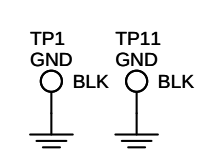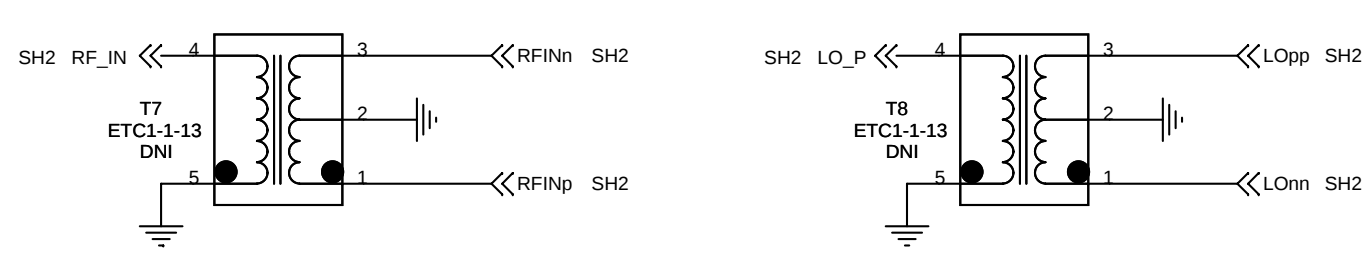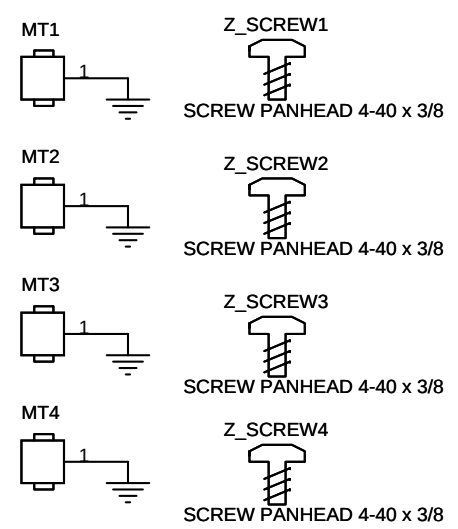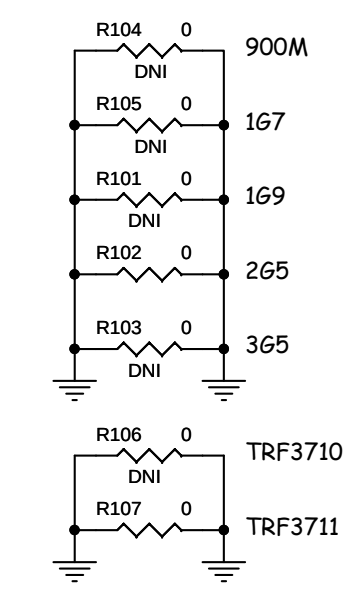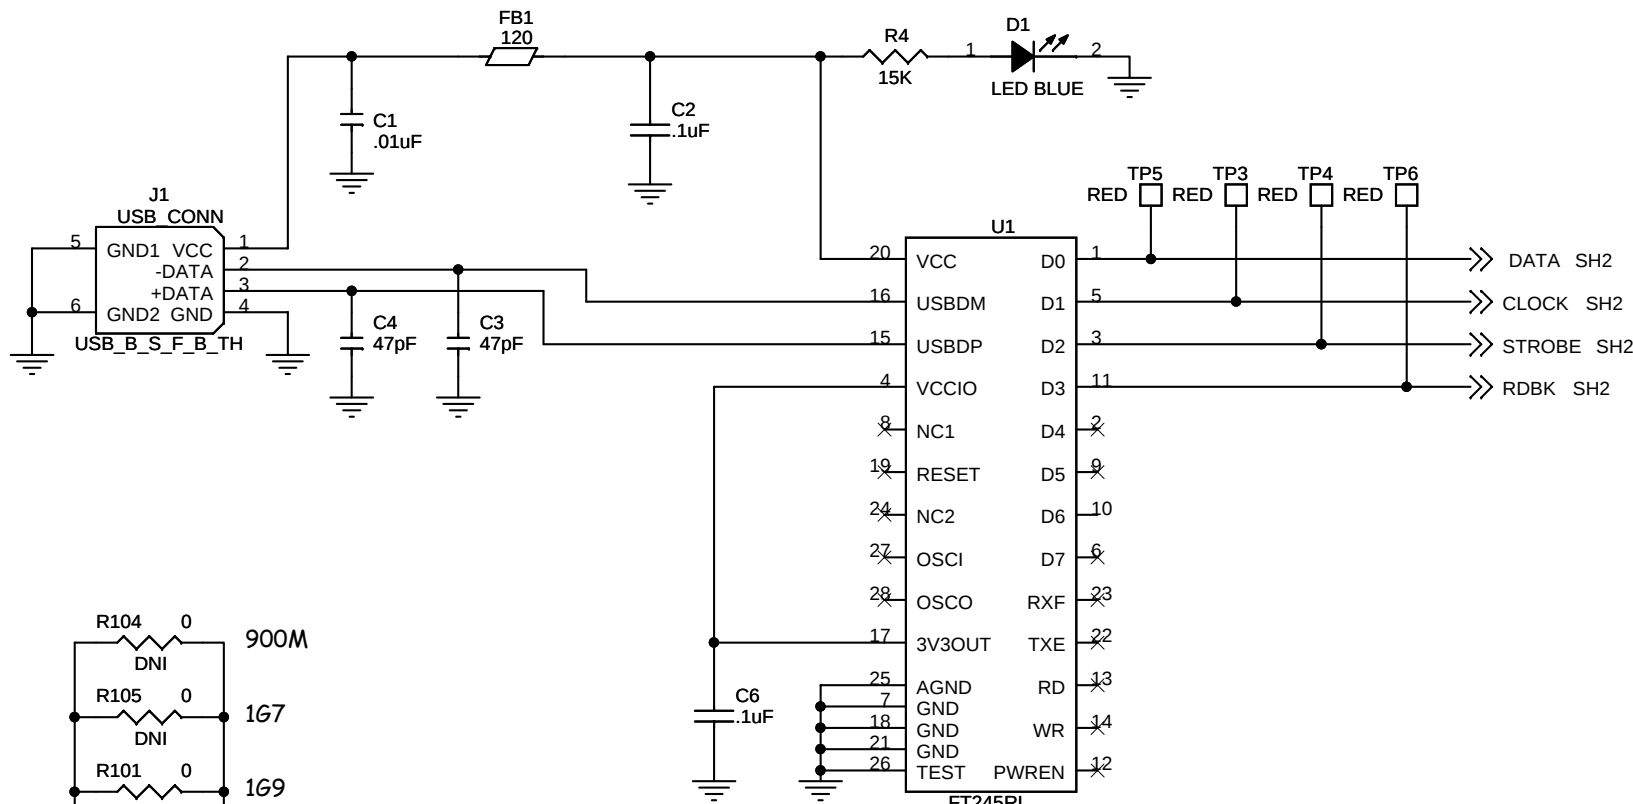

|                                                                                                                                                           |                                        |              |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------|--------------|
|  <b>TEXAS INSTRUMENTS</b><br>12500 TI Boulevard. Dallas, Texas 75243 |                                        |              |
| Title <b>TRF371X EVM</b>                                                                                                                                  |                                        |              |
| Size <b>B</b>                                                                                                                                             | Document Number <b>TRF371X EVM-SCH</b> | Rev <b>E</b> |
| Date: Monday, December 14, 2009                                                                                                                           |                                        | Sheet 1 of 2 |

|                          |
|--------------------------|
| Engineer: R. HOPPENSTEIN |
| Drawn By: JV SMITH       |



## Evaluation Board/Kit Important Notice

Texas Instruments (TI) provides the enclosed product(s) under the following conditions:

This evaluation board/kit is intended for use for **ENGINEERING DEVELOPMENT, DEMONSTRATION, OR EVALUATION PURPOSES ONLY** and is not considered by TI to be a finished end-product fit for general consumer use. Persons handling the product(s) must have electronics training and observe good engineering practice standards. As such, the goods being provided are not intended to be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including product safety and environmental measures typically found in end products that incorporate such semiconductor components or circuit boards. This evaluation board/kit does not fall within the scope of the European Union directives regarding electromagnetic compatibility, restricted substances (RoHS), recycling (WEEE), FCC, CE or UL, and therefore may not meet the technical requirements of these directives or other related directives.

Should this evaluation board/kit not meet the specifications indicated in the User's Guide, the board/kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge.

EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

TI currently deals with a variety of customers for products, and therefore our arrangement with the user **is not exclusive**.

TI assumes **no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein**.

Please read the User's Guide and, specifically, the Warnings and Restrictions notice in the User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For additional information on TI's environmental and/or safety programs, please contact the TI application engineer or visit [www.ti.com/esh](http://www.ti.com/esh).

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used.

## FCC Warning

This evaluation board/kit is intended for use for **ENGINEERING DEVELOPMENT, DEMONSTRATION, OR EVALUATION PURPOSES ONLY** and is not considered by TI to be a finished end-product fit for general consumer use. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to part 15 of FCC rules, which are designed to provide reasonable protection against radio frequency interference. Operation of this equipment in other environments may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

## EVM Warnings and Restrictions

It is important to operate this EVM within the input voltage range of 4.5 V to 5.5 V and the output voltage range of 0 V to 4 V .

Exceeding the specified input range may cause unexpected operation and/or irreversible damage to the EVM. If there are questions concerning the input range, please contact a TI field representative prior to connecting the input power.

Applying loads outside of the specified output range may result in unintended operation and/or possible permanent damage to the EVM. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative.

During normal operation, some circuit components may have case temperatures greater than 55° C. The EVM is designed to operate properly with certain components above 55° C as long as the input and output ranges are maintained. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors. These types of devices can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during operation, please be aware that these devices may be very warm to the touch.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2010, Texas Instruments Incorporated

## IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

### Products

|                             |                                                                    |
|-----------------------------|--------------------------------------------------------------------|
| Amplifiers                  | <a href="http://amplifier.ti.com">amplifier.ti.com</a>             |
| Data Converters             | <a href="http://dataconverter.ti.com">dataconverter.ti.com</a>     |
| DLP® Products               | <a href="http://www.dlp.com">www.dlp.com</a>                       |
| DSP                         | <a href="http://dsp.ti.com">dsp.ti.com</a>                         |
| Clocks and Timers           | <a href="http://www.ti.com/clocks">www.ti.com/clocks</a>           |
| Interface                   | <a href="http://interface.ti.com">interface.ti.com</a>             |
| Logic                       | <a href="http://logic.ti.com">logic.ti.com</a>                     |
| Power Mgmt                  | <a href="http://power.ti.com">power.ti.com</a>                     |
| Microcontrollers            | <a href="http://microcontroller.ti.com">microcontroller.ti.com</a> |
| RFID                        | <a href="http://www.ti-rfid.com">www.ti-rfid.com</a>               |
| RF/IF and ZigBee® Solutions | <a href="http://www.ti.com/lprf">www.ti.com/lprf</a>               |

### Applications

|                            |                                                                                          |
|----------------------------|------------------------------------------------------------------------------------------|
| Audio                      | <a href="http://www.ti.com/audio">www.ti.com/audio</a>                                   |
| Automotive                 | <a href="http://www.ti.com/automotive">www.ti.com/automotive</a>                         |
| Communications and Telecom | <a href="http://www.ti.com/communications">www.ti.com/communications</a>                 |
| Computers and Peripherals  | <a href="http://www.ti.com/computers">www.ti.com/computers</a>                           |
| Consumer Electronics       | <a href="http://www.ti.com/consumer-apps">www.ti.com/consumer-apps</a>                   |
| Energy                     | <a href="http://www.ti.com/energy">www.ti.com/energy</a>                                 |
| Industrial                 | <a href="http://www.ti.com/industrial">www.ti.com/industrial</a>                         |
| Medical                    | <a href="http://www.ti.com/medical">www.ti.com/medical</a>                               |
| Security                   | <a href="http://www.ti.com/security">www.ti.com/security</a>                             |
| Space, Avionics & Defense  | <a href="http://www.ti.com/space-avionics-defense">www.ti.com/space-avionics-defense</a> |
| Video and Imaging          | <a href="http://www.ti.com/video">www.ti.com/video</a>                                   |
| Wireless                   | <a href="http://www.ti.com/wireless-apps">www.ti.com/wireless-apps</a>                   |