
Freescale and the Freescale logo are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners. © 2015 Freescale Semiconductor, Inc.
FRDMKL25A8471QRC REV 1
920-28976 REV A

FRDMKL25-A8471

FRDM KL25-A8471

freescale

For more information, visit freescale.com/sensortoolbox

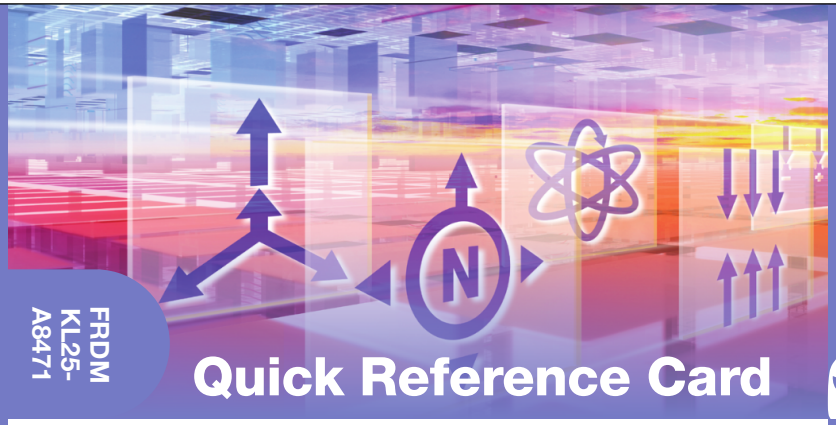

FRDM KL25-A8471

Quick Reference Card

3-Axis Sensor Toolbox Demonstration Kit

FRDMSTBC-A8471 3-Axis Sensor Toolbox Board and
Freescale Freedom FRDM-KL25Z development board

freescale™


Get Started

Download tools and documentation under **Jump Start Your Design at freescale.com/sensortoolbox**



FREESCALE FREEDOM PLATFORM

1. Verify package contents:
   - FRDM-KL25Z/FRDMSTBC-A8471 assembly
   - USB cable
2. Download and install the P&E OpenSDA USB drivers: **pemicro.com/opensda**
3. Plug one end of a USB cable into the SDA port on the assembly. Plug the other end of the cable into the USB port on the computer.
4. Download and install the latest Sensor Toolbox software at: **freescale.com/sensortoolbox**
5. Start the Sensor Toolbox software.

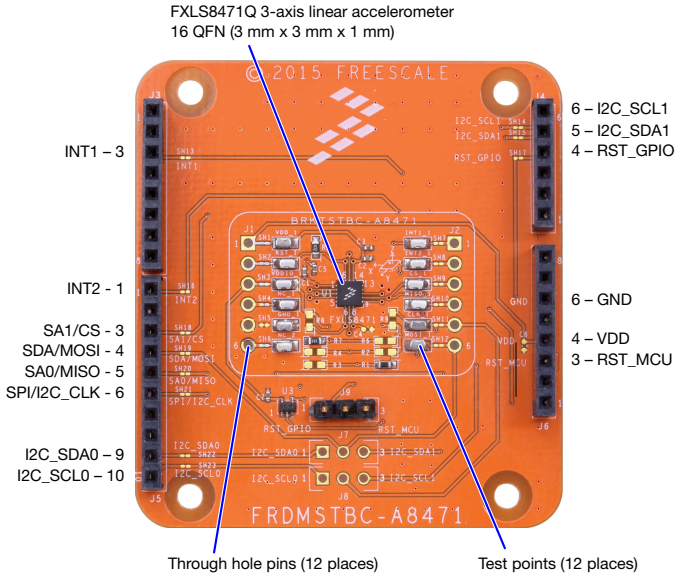

Get to Know the FRDMKL25-A8471

freescale™

Learn more at freescale.com/sensortoolbox