TPS26600-02EVM: Evaluation Module for TPS2660x

This user's guide describes the evaluation module (EVM) for the Texas instruments TPS26600, TPS26601, and TPS26602 devices. The document provides configuration information and test setup details for working with the EVM. The EVM schematic, board layout and bill of materials (BOM) are also included.

NOTE: The TPS26602 can be evaluated on this EVM by replacing the TPS26600PWP (U1) or TPS26600RHF (U2) with the TPS26602PWP or TPS26602RHF, on respective channels. Instructions for evaluation are listed in Section 4.4.7. The TPS26601 can be evaluated on this EVM by replacing the TPS26600RHF (U2) with the TPS26601RHF. Instructions for evaluation are listed in Section 4.4.8.

Contents

1 Introduction 2
2 Description 2
3 Schematics 3
4 General Configurations 4
5 EVM Board Assembly Drawings and Layout Guidelines 14
6 Bill Of Materials (BOM) 16

List of Figures

1 TPS26600-02EVM Schematic 3
2 EVM Test Setup 6
3 Output Voltage Start-Up Waveform 8
4 J5/J12 = 2-3 Position, Current Limit (2.23 A), Auto-Retry Mode 10
5 J5/J12 = 1-2 Position, Current Limit (2.23 A), Latch-Off Mode 10
6 Restart From Latch-Off Mode 11
7 J5/J12 = Floating, Current Limit (2.23 A), Circuit Breaker With Auto-Retry Mode 11
8 Output Short-Circuit Protection 12
9 Reverse Polarity Protection 13
10 Top Side Placement 14
11 Top Layer 14
12 Bottom Layer 15

List of Tables

1 TPS26600-02EVM Options and Setting 2
2 Input and Output Connector Functionality 4
3 Test Points Description 4
4 Jumper and LED Descriptions 4
5 Power Supply Setting for the TPS26600-02EVM 7
6 Default Jumper Setting for the TPS26600-02EVM 7
7 TPS26600-02EVM DMM Readings at Different Test Points 7
8 TPS26600-02EVM Oscilloscope Setting for the Output Voltage Start-Up Test 8
9 TPS26600-02EVM Oscilloscope Setting for the Current Limit Test 9

Copyright © 2016–2017, Texas Instruments Incorporated

10 TPS26600-02EVM Jumper Setting for Current Limits 9
11 TPS26600-02EVM Output Short-Circuit Protection Test 12
12 TPS26600-02EVM Reverse Polarity Test 13
13 TPS26600-02EVM Bill of Materials 16

Trademarks

All trademarks are the property of their respective owners.

1 Introduction

The TPS26600-02EVM allows reference circuit evaluation of TI's TPS2660x devices. The TPS2660x are compact 4.2-V to 55-V, 2.23-A industrial eFuses with integrated back-to-back FETs, programmable undervoltage, overvoltage, reverse-polarity, overcurrent, inrush current protection, and output current monitoring features.

1.1 EVM Features

The TPS26600-02EVM features include:

- 4.2-V to 55-V input operating voltage range
- 0.2-A to 2.23-A jumper-programmable current limit
- Reverse polarity protection up to –55 V
- Programmable input UVLO
- Selectable overload fault response (auto-retry, latch and circuit breaker)
- Programmable input overvoltage protection (OVP) cut off
- Programmable V_{OUT} slew rate control
- Load current monitor output with 1.5 V / A
- Optional on-board transient protection devices like input TVS and output Schottky diodes
- On-board reset switch and fault indicators

1.2 EVM Applications

- Control and automation
- PLCs
- Industrial power systems
- Sensors and controls

2 Description

The TPS26600-02EVM enables full evaluation of the TPS2660x devices. The EVM supports HTSOP and QFN versions of the devices on two channels (CH1 and CH2, respectively). Input power is applied at T1 (CH1) and T3 (CH2) while T2 (CH1) and T4 (CH2) provide an output connection to the load. Refer to the schematic in Figure 1 and the test setup in Figure 2.

S1 and S2 allows U1 and U2 to RESET. A fault (FLTb) indicator is provided by D1 and D7 for CH1 and CH2, respectively. Scaled current for each can channel be monitored at TP5 and TP14 with a scaling factor of 1.5 V / A.

Table 1. TPS26600-02EVM Options and Setting


Part Number	EVM Function	V_{IN} Range	UVLO		OVP		Current Limit		Selectable Fault Response
			CH1	CH2	CH1	CH2	Minimum Setting	Maximum Setting	
TPS26600-02EVM	4.2-V to 55-V, 2.23-A Industrial eFuse	4.2 V–55 V	10 V	15 V	40 V	33 V	0.2 A[1]	2.23 A	Auto retry Latch off Circuit Breaker

(1) Minimum programmable current limit can be changed to 0.1 A by changing the R12 and R24 values to 120 kΩ on CH1 and CH2 respectively.

Copyright © 2016–2017, Texas Instruments Incorporated

3 Schematics

Figure 1 illustrates the EVM schematic.

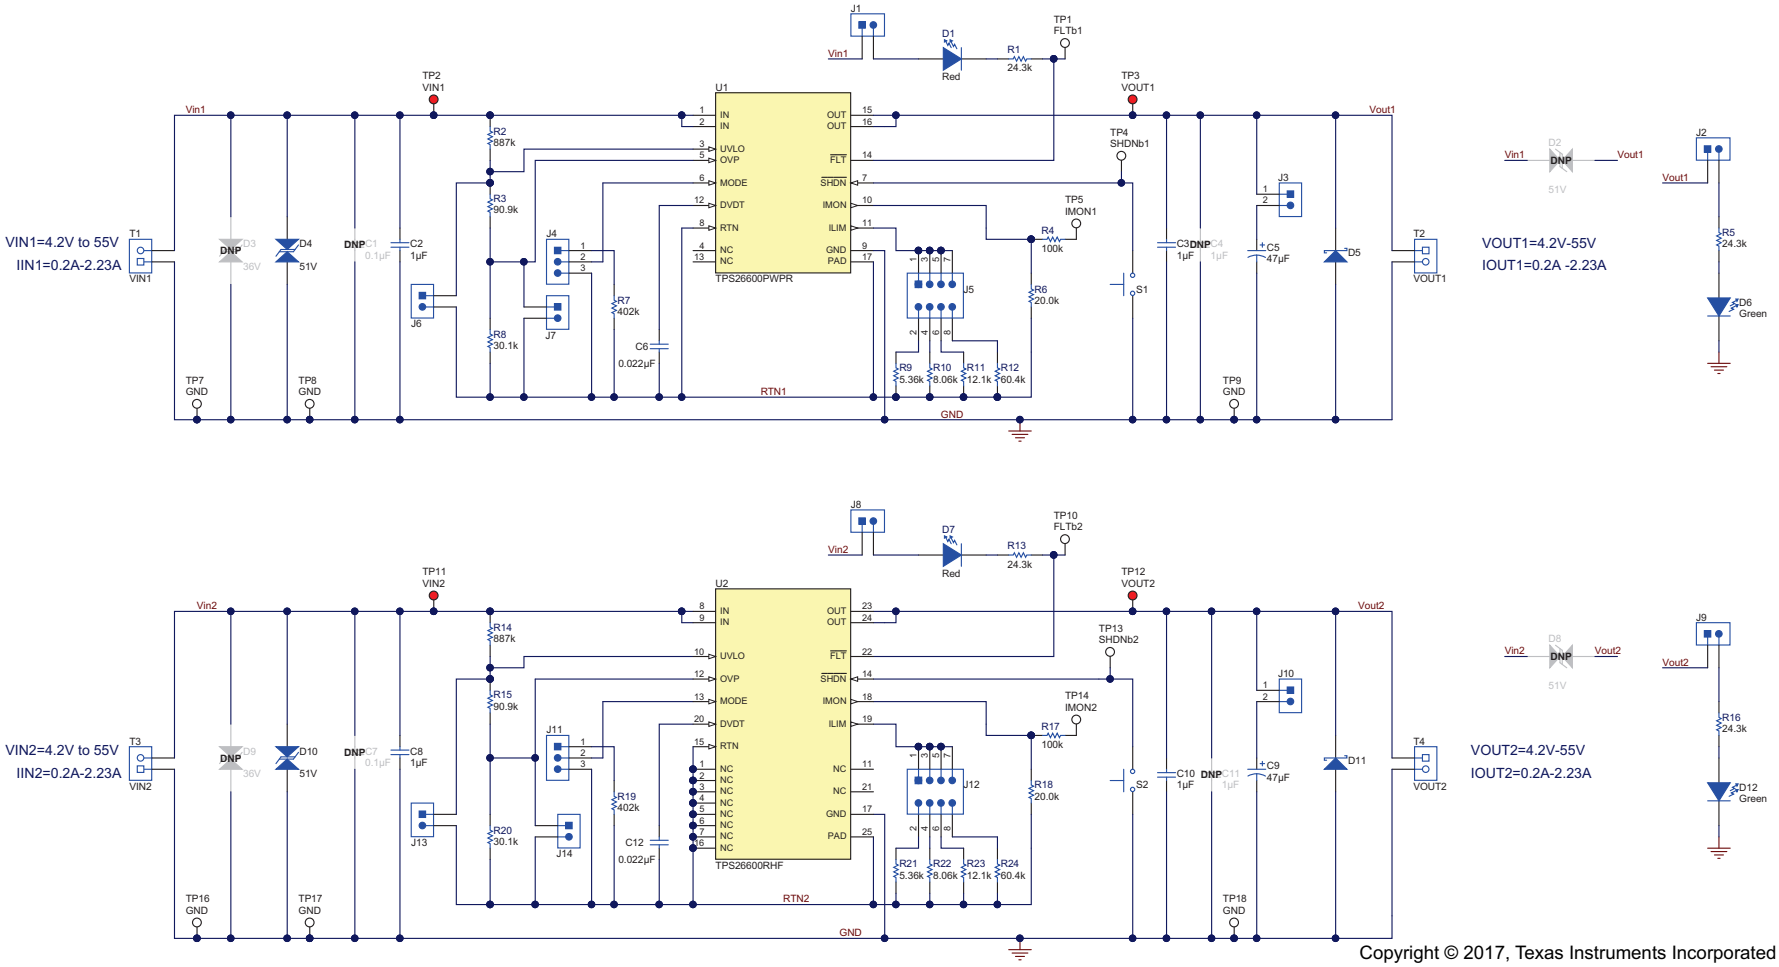

Copyright © 2017, Texas Instruments Incorporated

Figure 1. TPS26600-02EVM Schematic

Copyright © 2016–2017, Texas Instruments Incorporated

4 General Configurations

4.1 Physical Access

Table 2 lists the TPS26600-02EVM input and output connector functionality, Table 3 describes the test point availability, and Table 4 describes the jumper functionality.

Table 2. Input and Output Connector Functionality

Connector		Label	Description
T1	CH1	VIN1(+), GND(–)	CH1 input power supply to the EVM
T2		VOUT1(+), GND(–)	CH1 output from the EVM
T3	CH2	VIN2(+), GND(–)	CH2 input power supply to the EVM
T4		VOUT2(+), GND(–)	CH2 output from the EVM

Table 3. Test Points Description

Channel	Test Points	Label	Description
CH1	TP1	FLTb1	CH1 fault indicator
	TP2	VIN1	CH1 power supply input
	TP3	VOUT1	CH1 output voltage
	TP4	SHDNb1	CH1 shutdown input
	TP5	IMON1	CH1 output current monitor
	TP7, TP8, TP9	GND	GND
CH2	TP10	FLTb2	CH2 fault indicator
	TP11	VIN2	CH2 power supply input
	TP12	VOUT2	CH2 output voltage
	TP13	SHDNb2	CH2 shutdown input
	TP14	IMON2	CH2 output current monitor
	TP16, TP17, TP18	GND	GND

Table 4. Jumper and LED Descriptions

Jumper	Label	Description
J1	J1	CH1 fault LED pulled to VIN1, if installed
J2	J2	CH1 output power indicator LED pulled to VOUT1, if installed
J3	J3	CH1 bulk output capacitor connects to VOUT1, if installed
J4	MODE	CH1 MODE selection 1-2 position sets latch-off mode 2-3 position sets auto-retry mode Open position sets circuit breaker with auto-retry mode
J5	ILIM	CH1 current limit setting 1-2 position sets 2.23 A 3-4 position sets 1.5 A 5-6 position sets 1 A 7-8 position sets 0.2 A
J6	UVLO	CH1 UVLO setting Sets internal UVLO (15 V), if installed
J7	OVP	CH1 OVP setting Sets internal OVP (33 V), if installed
J8	J8	CH2 fault LED pulled to VIN2, if installed
J9	J9	CH2 output power indicator LED pulled to VOUT2, if installed
J10	J10	CH2 bulk output capacitor connects to VOUT1, if installed

Copyright © 2016–2017, Texas Instruments Incorporated

Table 4. Jumper and LED Descriptions (continued)

Jumper	Label	Description
J11	MODE	CH2 MODE selection 1-2 position sets latch-off mode 2-3 position sets auto-retry mode Open position sets circuit breaker with auto-retry mode
J12	ILIM	CH2 current limit setting 1-2 position sets 2.23 A 3-4 position sets 1.5 A 5-6 position sets 1 A 7-8 position sets 0.2A
J13	UVLO	CH2 UVLO setting Sets internal UVLO (15 V), if installed
J14	OVP	CH2 OVP setting Sets internal OVP (33 V), if installed
D1, D7 (RED-LED)	Fault LED	CH1, CH2 fault indicators, respectively. LED turns on when the internal MOSFET is disabled due to any fault condition such as undervoltage, overvoltage, overload, short circuit, reverse current, and thermal shutdown.
D6, D12 (GREEN-LED)	Output power indicator	CH1, CH2 output power indicators, respectively. LED turns on whenever the output voltage is available.

4.2 Test Equipment

4.2.1 Power Supplies

One adjustable power supply: 0-V to 60-V output, 0-A to 3-A output current limit.

4.2.2 Meters

One DMM minimum needed and may require more if simultaneous measurements are required.

4.2.3 Oscilloscope

A DPO2024, or equivalent. Three 10x voltage probes and one DC current probe.

4.2.4 Loads

One resistive load which can tolerate up to 3-A DC load at 24 V.

NOTE: A resistive load is recommended for testing. If an electronic load is used, ensure that the output load is set in the constant resistance (CR) mode, not in the constant current (CC) mode.

Copyright © 2016–2017, Texas Instruments Incorporated

4.3 Test Setup

Figure 2 shows the typical test setup for the TPS26600-02EVM. Connect T1/T3 to the power supply and T2/T4 to the load.

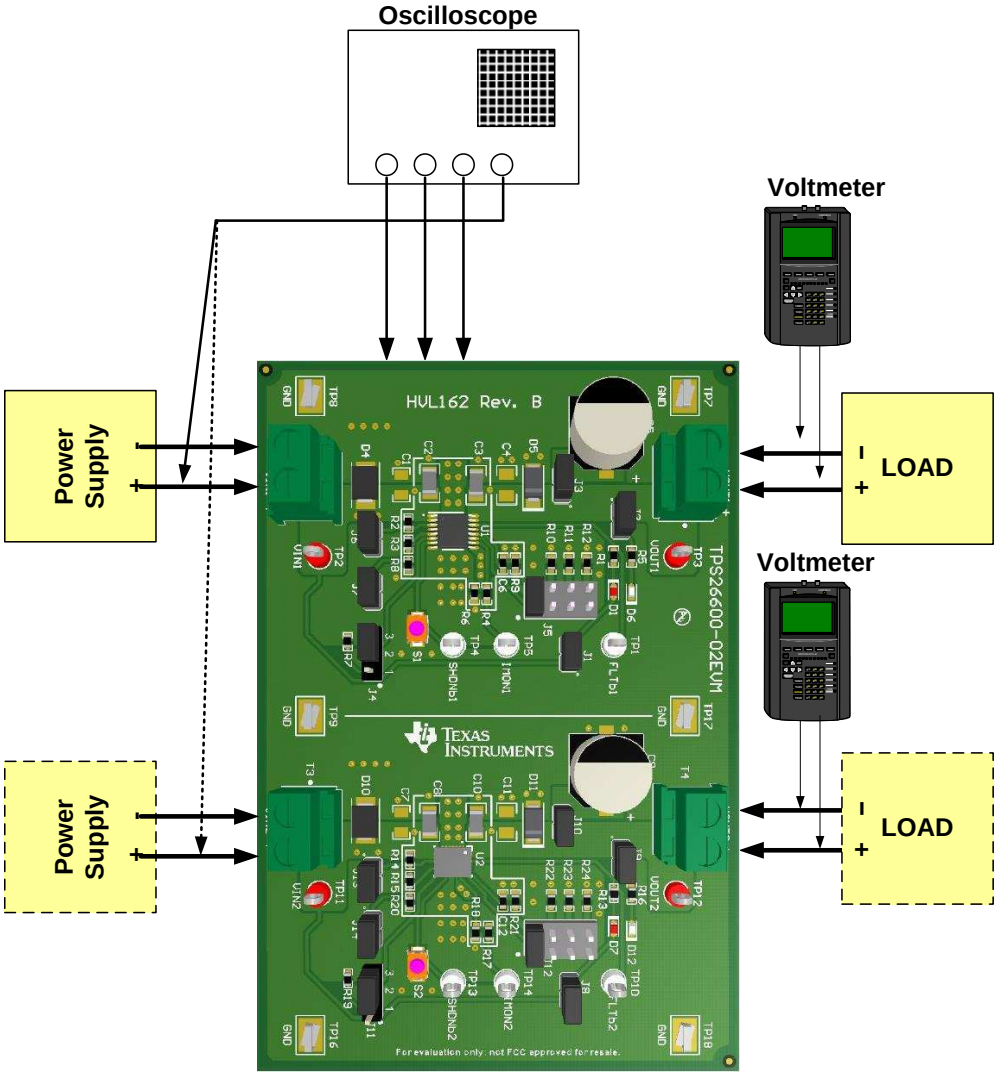


Figure 2. EVM Test Setup

Copyright © 2016–2017, Texas Instruments Incorporated

4.4 Test Procedure

NOTE: CH1 and CH2 can be tested one by one with a single power supply and the load.

4.4.1 Preliminary Tests

1. Turn on the power supply and set the output voltage and the current limit according to Table 5.

Table 5. Power Supply Setting for the TPS26600-02EVM

EVM	Channel	Voltage Set Point	Power Supply Current Limit
TPS26600-02EVM	CH1	24 V	3 A
	CH2	24 V	3 A

2. Turn on the load and set the load resistance to 16 Ω ±1 Ω.
3. Disable the power supply, load and hook up the TPS26600-02EVM assembly as shown in Figure 2
4. Make sure the default evaluation board jumper settings are as shown in Table 6.

Table 6. Default Jumper Setting for the TPS26600-02EVM

	J1	J2	J3	J4	J5	J6	J7
CH1	Install	Install	Do not populate	2-3	1-2	Do not populate	Do not populate
	J8	**J9**	**J10**	**J11**	**J12**	**J13**	**J14**
CH2	Install	Install	Do not populate	2-3	1-2	Install	Install

5. Enable the power supply and the load.
6. Connect the negative probe of the DMM to TP7 or TP18 test points, the positive probe to the respective test points, and verify that the voltages shown in Table 7 are obtained.

Table 7. TPS26600-02EVM DMM Readings at Different Test Points

Voltage test on (CH1)	Measured Voltage Reading	Voltage test on (CH2)	Measured Voltage Reading
VIN1 (TP2)	24 V ±1 V DC	VIN2 (TP11)	24 V ±1 V DC
VOUT1 (TP3)	24 V ±1 V DC	VOUT2 (TP12)	24 V ±1 V DC
IMON1 (TP5)	2.3 V ±0.2 V DC	IMON2 (TP14)	2.3 V ±0.2 V DC
FLTb1 (TP1)	22.6 V ±0.5 V DC	FLTb2 (TP10)	22.6 V ±0.5 V DC
SHDNb1 (TP4)	2.7 V ±0.5 V DC	SHDNb2 (TP13)	2.7 V ±0.5 V DC

7. Press the CH1/CH2 shutdown switch S1/S2 and verify the CH1/CH2 output voltage VOUT1/VOUT2 drops to zero. Release the S1/S2 switch and verify the output voltage resumes to nominal 24 V ±1 V.
8. Disable the power supply and the load.

4.4.2 UVLO, OVP Tests

Follow the instructions to verify undervoltage and overvoltage levels of the device:

1. Set the load resistance to 24 Ω ±1 Ω and the power supply voltage to 24 V. Enable the power supply and the load.
2. Increase the CH1 input voltage (VIN1) and monitor the output voltage (VOUT1). Verify that VOUT1 increases as VN1 increases and drops to zero when VIN1 exceeds 40 V ±1 V (CH1 OVP limit).
3. Reduce the CH1 input voltage and verify that the output turns on at 36 V ±1 V.

Copyright © 2016–2017, Texas Instruments Incorporated

4. Further reduce the CH1 input voltage and verify that VOUT1 reduces as VN1 reduces and drops to zero when VIN1 falls below 9 V ±0.5 V (CH1 UVLO limit).
5. Increase the CH2 input voltage (VIN2) and monitor the output voltage (VOUT2). Verify that VOUT2 increases as VN2 increases and drops to zero when VIN2 exceeds 33 V ±1 V (CH2 OVP limit).
6. Reduce the CH2 input voltage and verify that the output turns on at 30 V ±1 V.
7. Further reduce the CH2 input voltage and verify that VOUT2 reduces as VN2 reduces and drops to zero when VIN2 falls below 14 V ±0.5 V (CH2 UVLO limit).
8. Verify that CH1 and CH2 FLTb red LEDs (D1/D7) turn on whenever the supply voltage reaches either OVP or UVLO limits of the respective channels.
9. Disable the power supply and the load.

4.4.3 Output Voltage Start-Up Time Test

Follow the instructions to verify the individual channels output voltage start-up time:

1. Set up the oscilloscope as listed in Table 8.
2. Set the load resistance to 16 Ω ±1 Ω and the power supply voltage to 24 V.
3. Enable the load.
4. Enable the power supply and verify that the output voltage startup waveform is as shown in Figure 3.

Table 8. TPS26600-02EVM Oscilloscope Setting for the Output Voltage Start-Up Test

Oscilloscope Setting	CH1 Probe Points	CH2 Probe Points
Channel 1 = 10 V / div	VOUT1 (TP3)	VOUT2 (TP12)
Channel 2 = 10 V / div	VIN1 (TP2)	VIN2 (TP11)
Channel 3 = 20 V / div	FLTb1 (TP1)	FLTb2 (TP10)
Channel 4 = 1 A / div	Input current into T1 +Ve wire	Input current into T3 +Ve wire
Trigger source = Channel 1		
Trigger level = 12 V ±1 V		
Trigger polarity = Rising		
Trigger mode = Single		
Time base	2 ms / div	

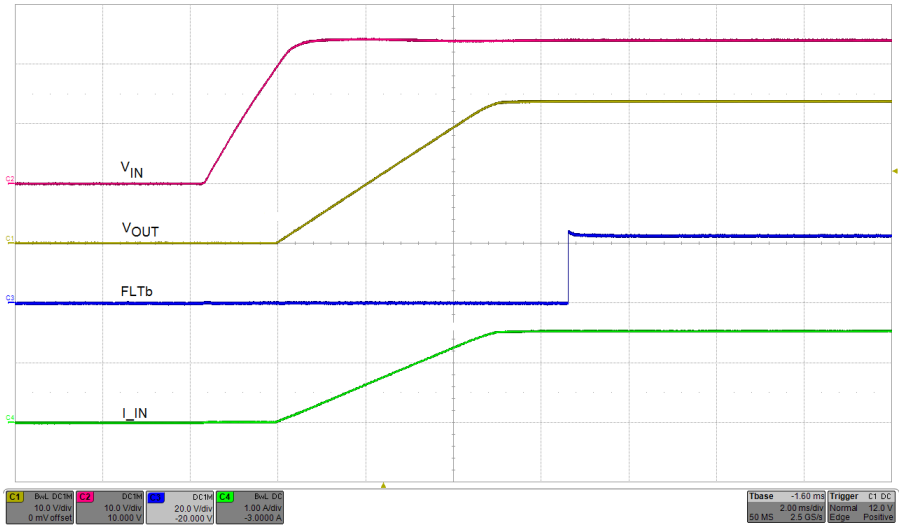


Figure 3. Output Voltage Start-Up Waveform

Copyright © 2016–2017, Texas Instruments Incorporated

4.4.4 Current Limit and Fault Responses Test

Follow the instructions to verify the current limit and various fault response modes like auto-retry, latch and circuit breaker with auto-retry:

1. Set up the oscilloscope as listed in Table 9.

Table 9. TPS26600-02EVM Oscilloscope Setting for the Current Limit Test

Oscilloscope Setting	CH1 Probe Points	CH2 Probe Points
Channel 1 = 10V / div	VOUT1 (TP3)	VOUT2 (TP12)
Channel 2 = 10V / div	VIN1 (TP2)	VIN2 (TP11)
Channel 4 = 2 A / div	Input current into T1 +Ve wire	Input current into T3 +Ve wire
Trigger source = Channel 2		
Trigger level = 12 V ±1V		
Trigger polarity = Rising		
Trigger mode = Single		
Time base	100 ms / div	

NOTE: Note : Measuring the current limit value on the oscilloscope can easily cause ±10% error from the typical expected values as listed in Table 10.

2. Set the current limit to 2.23 A by installing the J5/J12 jumper in position 1-2.
3. The jumper setting for different current limits is shown in Table 10.
4. Set the current limit response to auto-retry by installing the J4/J11 jumper in position 2-3.

Table 10. TPS26600-02EVM Jumper Setting for Current Limits

CH1, CH2 Jumper Positions (J5, J12)	Load Current Limit (A)
1-2	2.23
3-4	1.5
5-6	1
7-8	0.2

Copyright © 2016–2017, Texas Instruments Incorporated

5. Set the load resistance to 6 Ω ±1 Ω and the power supply voltage to 24 V.
6. Enable the load.
7. Enable the power supply and verify the current limit magnitude and auto-retry fault response waveform as shown in Figure 4.

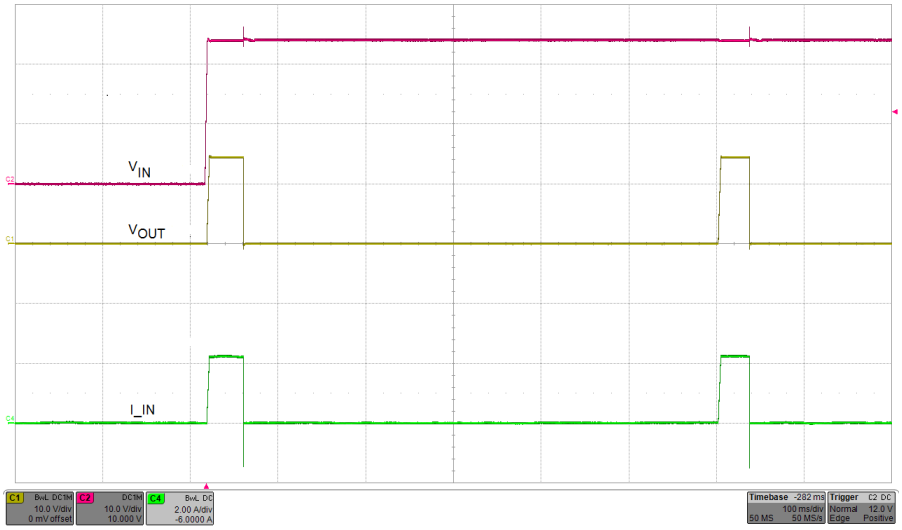


Figure 4. J5/J12 = 2-3 Position, Current Limit (2.23 A), Auto-Retry Mode

8. Disable the power supply.
9. Set the current limit response mode to latch-off by installing the J4/J11 jumper in the position 1-2.
10. Set the load resistance to 6 Ω ±1 Ω and enable the load.
11. Enable the power supply and verify the current limit magnitude the latch-off fault response waveform as shown in the Figure 5.

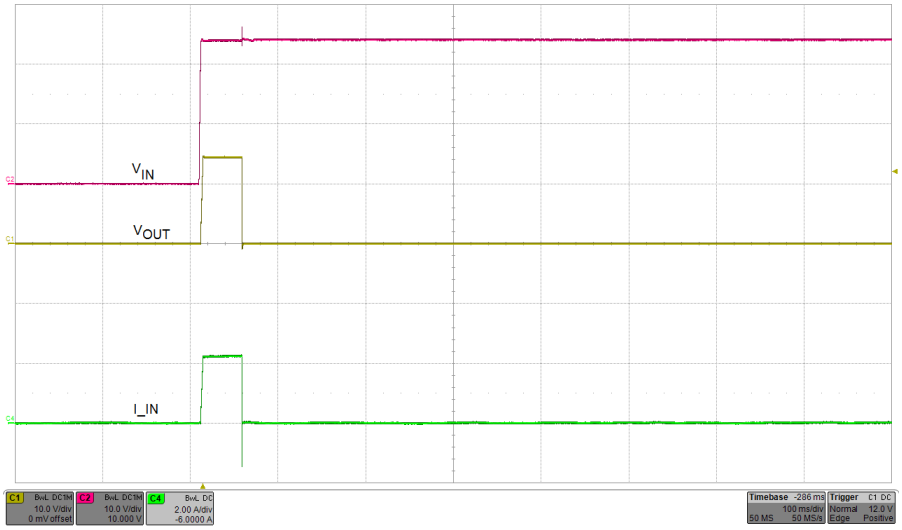


Figure 5. J5/J12 = 1-2 Position, Current Limit (2.23 A), Latch-Off Mode

12. Once the device is latched-off, either the power supply or the SHDNb should be recycled to re-enable it.
13. Change the load resistance to 16 Ω ±1 Ω.
14. Press and release the reset switch (S1/S2) to re-enable the device from latch-off mode and verify the recovery or restart waveform as shown in Figure 6.

Copyright © 2016–2017, Texas Instruments Incorporated

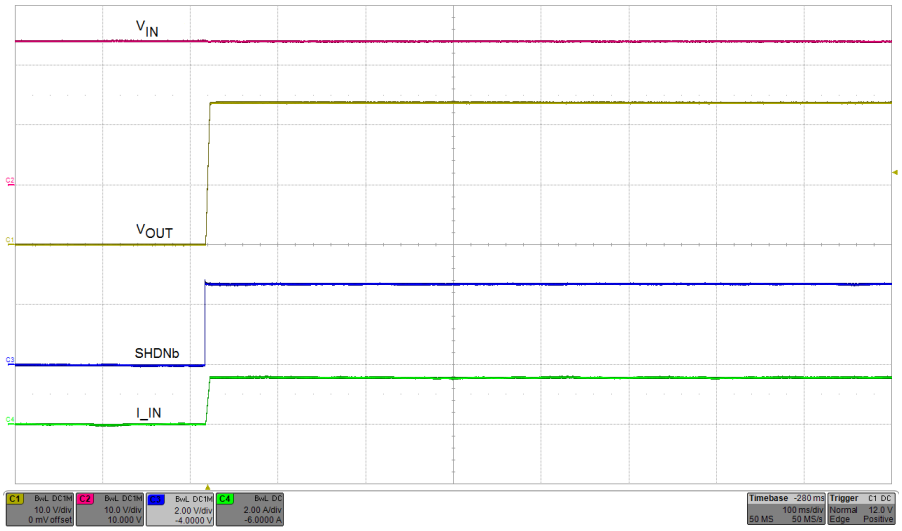


Figure 6. Restart From Latch-Off Mode

15. Disable the power supply.
16. Set the current limit response mode to circuit breaker with auto-retry by uninstalling the J4/J11 jumper.
17. Set the load resistance to 6 Ω ±1 Ω and enable the load.
18. Enable the power supply and verify the circuit breaker with auto retry fault response waveform as shown in Figure 7.

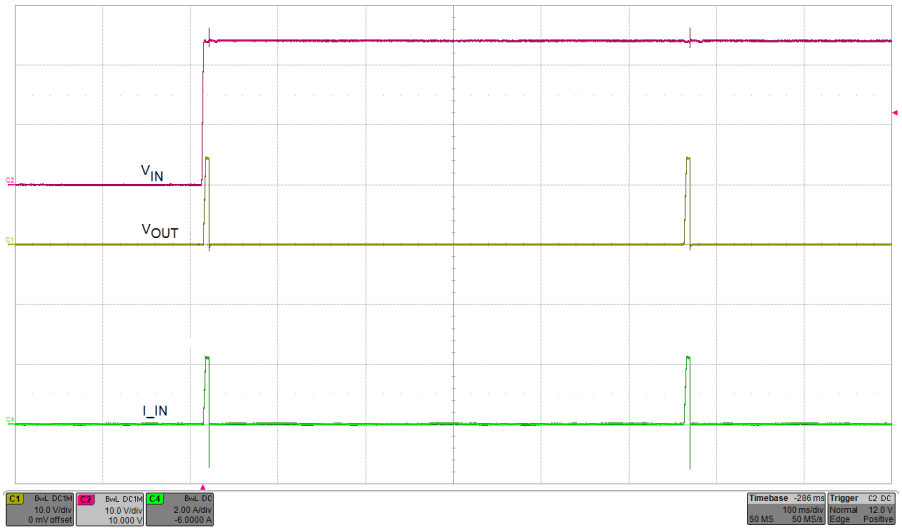


Figure 7. J5/J12 = Floating, Current Limit (2.23 A), Circuit Breaker With Auto-Retry Mode

Copyright © 2016–2017, Texas Instruments Incorporated

4.4.5 Output Short-Circuit Protection Test

Follow the instructions to verify the output short-circuit protection feature of the device:

1. Set up the oscilloscope as listed in Table 11.

Table 11. TPS26600-02EVM Output Short-Circuit Protection Test

Oscilloscope Setting	CH1 Probe Points	CH2 Probe Points
Channel 1 = 10 V / div	VOUT1 (TP3)	VOUT2 (TP12)
Channel 2 = 10 V / div	VIN1 (TP2)	VIN2 (TP11)
Channel 3 = 20 V / div	FLTb1 (TP1)	FLTb2 (TP10)
Channel 4 = 2 A / div	Input current into T1 +Ve wire	Input current into T3 +Ve wire
Trigger source = Channel 1		
Trigger level = 12 V ±1 V		
Trigger polarity = Falling		
Trigger mode = Single		
Time base	2 ms / div	

2. Set the load resistance to 16 Ω ±1 Ω and the power supply voltage to 24 V.
3. Enable the load and the power supply.
4. Use either wire or FET to short the output to ground and verify the output short-circuit response waveform as shown in Figure 8.

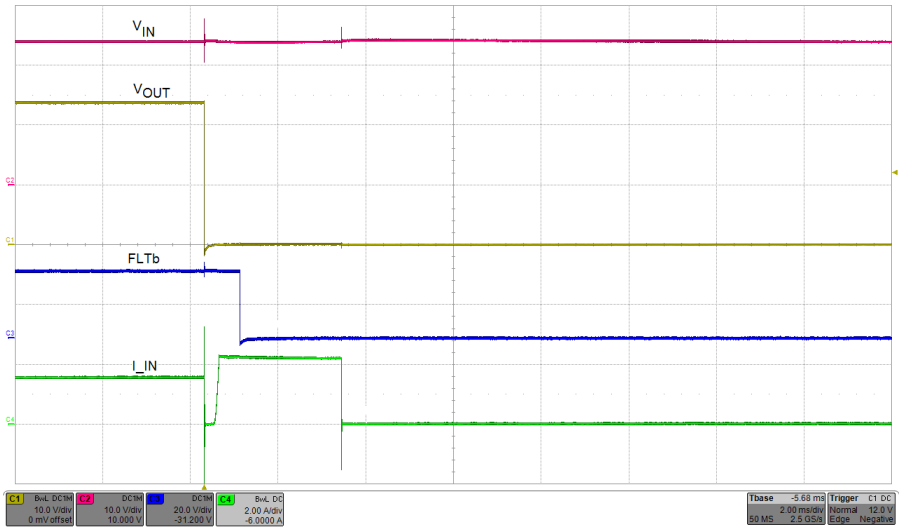


Figure 8. Output Short-Circuit Protection

Copyright © 2016–2017, Texas Instruments Incorporated

4.4.6 Reverse Polarity Test

Follow the instructions to verify the reverse polarity protection feature of the device:

1. Set up the oscilloscope as listed in Table 12.

Table 12. TPS26600-02EVM Reverse Polarity Test

Oscilloscope Setting	CH1 Probe Points	CH2 Probe Points
Channel 1 = 10 V / div	VOUT1 (TP3)	VOUT2 (TP12)
Channel 2 = 10 V / div	VIN1 (TP2)	VIN2 (TP11)
Trigger source = Channel 1		
Trigger level = –12 V ±1 V		
Trigger polarity = Falling		
Trigger mode = Single		
Time base	10 ms / div	

2. Set the power supply voltage to 24 V and disable the power supply.
3. Connect +ve terminal of the power supply to either T1/T3 –ve terminal, connect –ve terminal of the power supply to either T1/T3 +ve terminal.
4. Enable the power supply and verify the reverse polarity protection waveform as shown in Figure 9.

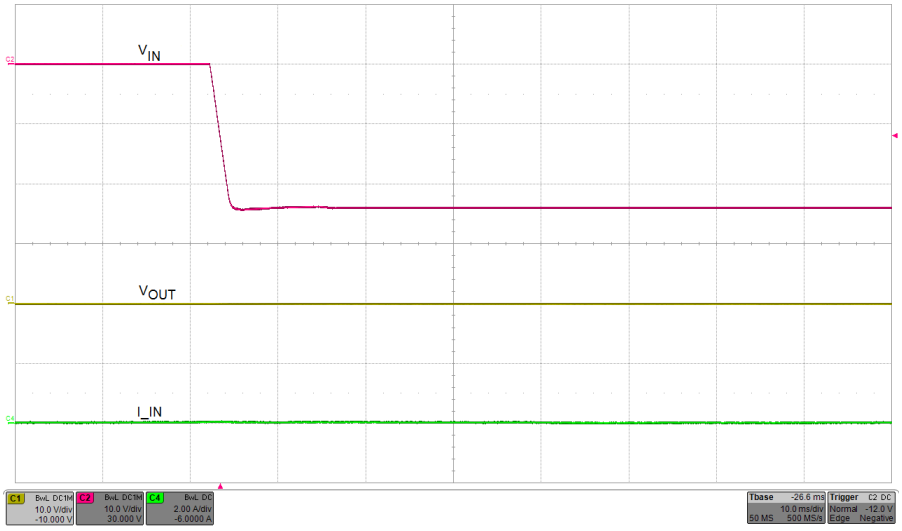


Figure 9. Reverse Polarity Protection

4.4.7 Instructions to Evaluate the TPS26602

1. Replace either U1 or U2 with the TPS26602PWP or the TPS26602RHF on respective channels.
2. Install jumper on J7/J14 to connect the OVP pin to RTN.
3. Follow the similar test procedure as TPS26600 for evaluation.

4.4.8 Instructions to Evaluate the TPS26601

1. Replace U2 with the TPS26601RHF.
2. Make sure all jumpers are set according to default jumper settings.
3. Follow the similar test procedure as TPS26600 for evaluation.

Copyright © 2016–2017, Texas Instruments Incorporated

5 EVM Board Assembly Drawings and Layout Guidelines

5.1 PCB Drawings

Figure 10 through Figure 12 show component placement and layout of the EVM.

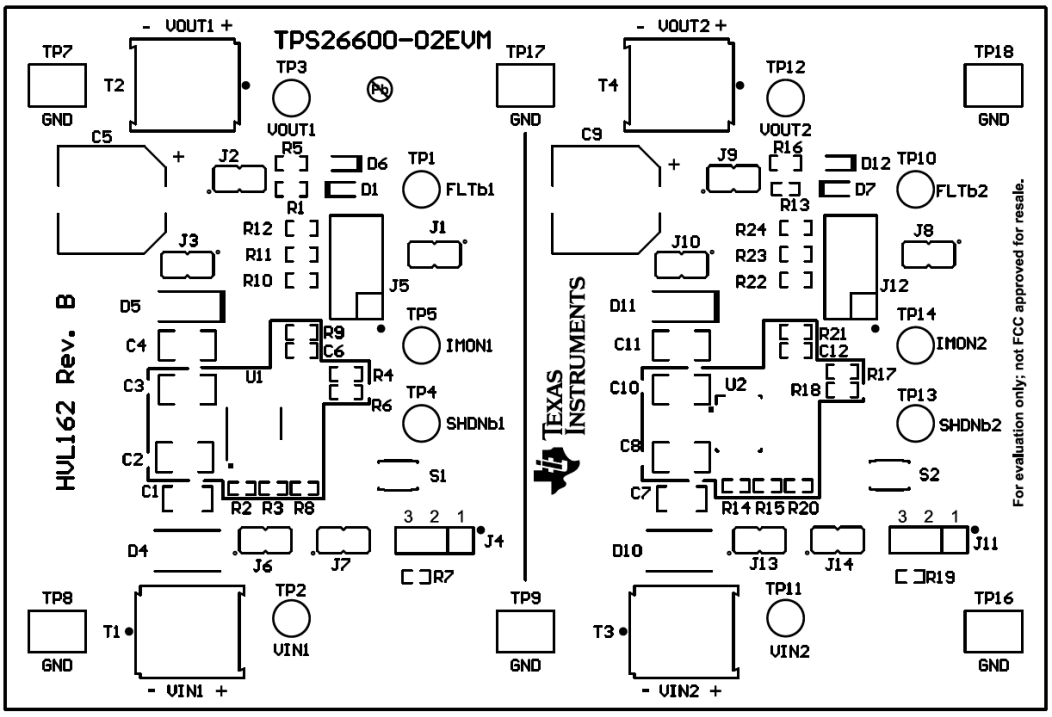


Figure 10. Top Side Placement

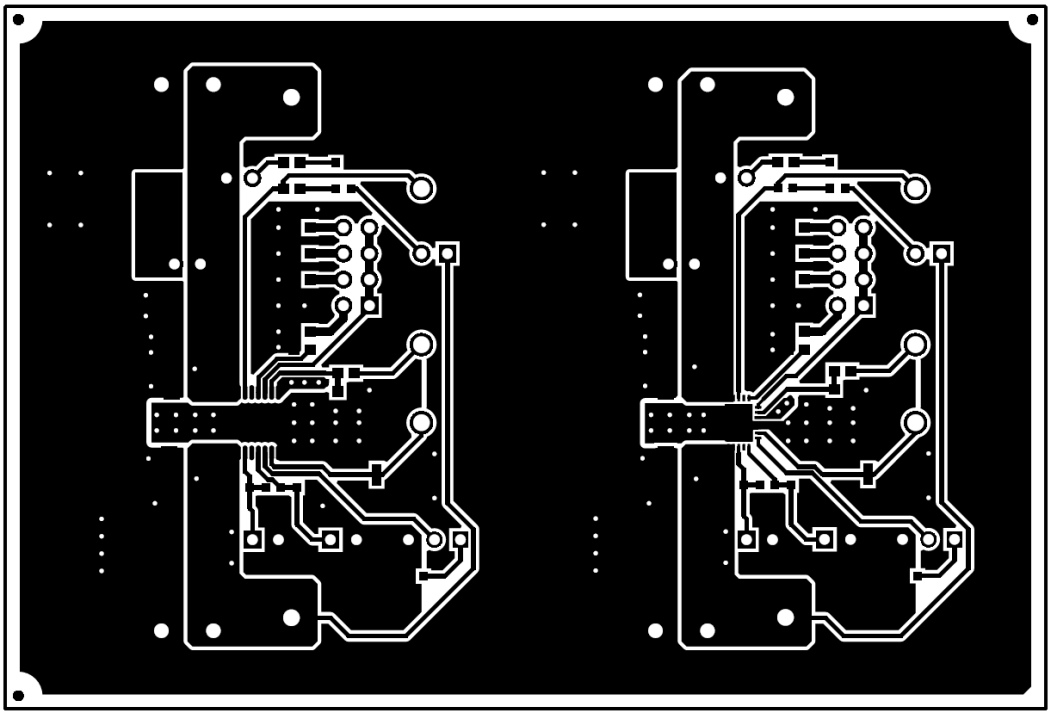


Figure 11. Top Layer

Copyright © 2016–2017, Texas Instruments Incorporated

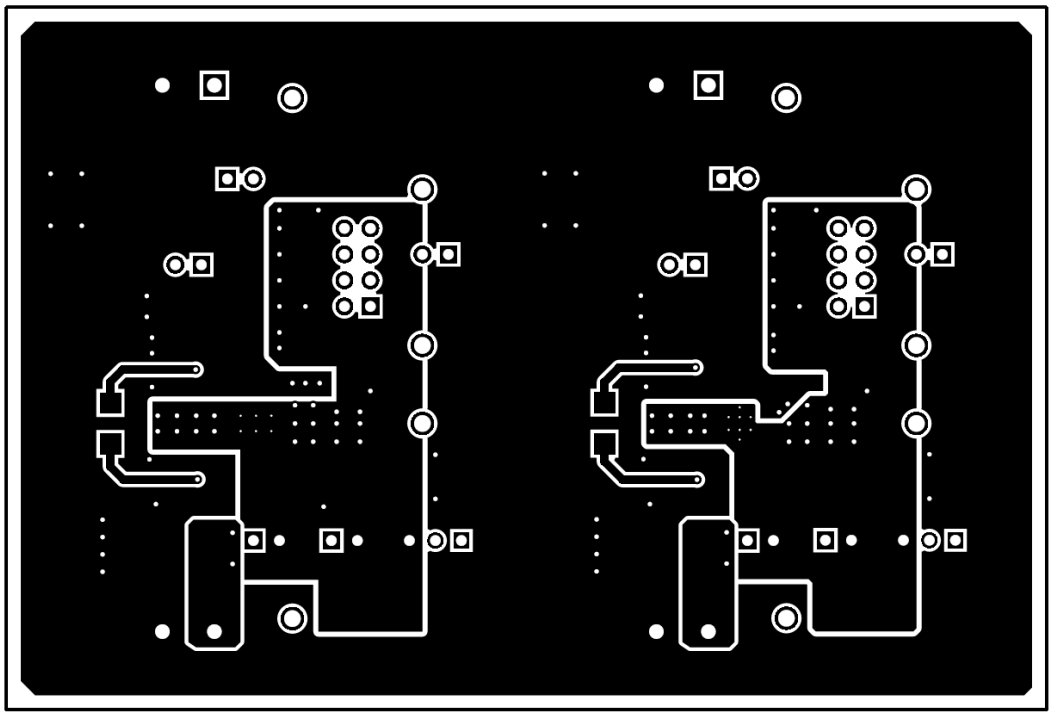


Figure 12. Bottom Layer

Copyright © 2016–2017, Texas Instruments Incorporated

6 Bill Of Materials (BOM)

Table 13 displays the EVM BOM.

Table 13. TPS26600-02EVM Bill of Materials

Item #	Designator	Qty	Value	Part Number	Manufacturer	Description	Package Reference
1	!PCB1	1		HVL162	Any	Printed Circuit Board	
2	C2, C3, C8, C10	4	1uF	GRM31CR72A105KA01L	Murata	CAP, CERM, 1 µF, 100 V, +/- 10%, X7R, 1206	1206
3	C5, C9	2	47uF	EEETG1J470P	Panasonic	CAP, AL, 47 µF, 63 V, +/- 20%, ohm, SMD	SMT Radial G
4	C6, C12	2	0.022uF	GRM188R71C223KA01D	Murata	CAP, CERM, 0.022 µF, 16 V, +/- 10%, X7R, 0603	0603
5	D1, D7	2	Red	LTST-C190CKT	Lite-On	LED, Red, SMD	Red LED, 1.6x0.8x0.8mm
6	D4, D10	2	51V	SMBJ51CA	Bourns	Diode, TVS, Bi, 51 V, 600 W, SMB	SMB
7	D5, D11	2	60V	B260A-13-F	Diodes Inc.	Diode, Schottky, 60 V, 2 A, SMA	SMA
8	D6, D12	2	Green	LTST-C190GKT	Lite-On	LED, Green, SMD	1.6x0.8x0.8mm
9	H1, H2, H3, H4	4		SJ-5303 (CLEAR)	3M	Bumpon, Hemisphere, 0.44 X 0.20, Clear	Transparent Bumpon
10	J1, J2, J3, J6, J7, J8, J9, J10, J13, J14	10		PBC02SAAN	Sullins Connector Solutions	Header, 100mil, 2x1, Gold, TH	Sullins 100mil, 1x2, 230 mil above insulator
11	J4, J11	2		PEC03SAAN	Sullins Connector Solutions	Header, 100mil, 3x1, Tin, TH	Header, 3 PIN, 100mil, Tin
12	J5, J12	2		PEC04DAAN	Sullins Connector Solutions	Header, 100mil, 4x2, Tin, TH	Header, 4x2, 100mil, Tin
13	R1, R5, R13, R16	4	24.3k	CRCW060324K3FKEA	Vishay-Dale	RES, 24.3 k, 1%, 0.1 W, 0603	0603
14	R2, R14	2	887k	CRCW0603887KFKEA	Vishay-Dale	RES, 887 k, 1%, 0.1 W, 0603	0603
15	R3, R15	2	90.9k	CRCW060390K9FKEA	Vishay-Dale	RES, 90.9 k, 1%, 0.1 W, 0603	0603
16	R4, R17	2	100k	CRCW0603100KFKEA	Vishay-Dale	RES, 100 k, 1%, 0.1 W, 0603	0603
17	R6, R18	2	20.0k	CRCW060320K0FKEA	Vishay-Dale	RES, 20.0 k, 1%, 0.1 W, 0603	0603
18	R7, R19	2	402k	CRCW0603402KFKEA	Vishay-Dale	RES, 402 k, 1%, 0.1 W, 0603	0603
19	R8, R20	2	30.1k	CRCW060330K1FKEA	Vishay-Dale	RES, 30.1 k, 1%, 0.1 W, 0603	0603
20	R9, R21	2	5.36k	CRCW06035K36FKEA	Vishay-Dale	RES, 5.36 k, 1%, 0.1 W, 0603	0603
21	R10, R22	2	8.06k	CRCW06038K06FKEA	Vishay-Dale	RES, 8.06 k, 1%, 0.1 W, 0603	0603
22	R11, R23	2	12.1k	CRCW060312K1FKEA	Vishay-Dale	RES, 12.1 k, 1%, 0.1 W, 0603	0603
23	R12, R24	2	60.4k	CRCW060360K4FKEA	Vishay-Dale	RES, 60.4 k, 1%, 0.1 W, 0603	0603
24	S1, S2	2		SKRKAEE010	Alps	Switch, Push Button, SMD	2.9x2x3.9mm SMD
25	SH-J1, SH-J2, SH-J4, SH-J5, SH-J8, SH-J9, SH-J11, SH-J12, SH-J13, SH-J14	10	1x2	SPC02SYAN	Sullins Connector Solutions	Shunt, 100mil, Flash Gold, Black	Closed Top 100mil Shunt
26	T1, T2, T3, T4	4		282841-2	TE Connectivity	Terminal Block, 2x1, 5.08mm, TH	10.16x15.2x9mm
27	TP1, TP4, TP5, TP10, TP13, TP14	6	White	5012	Keystone	Test Point, TH, Multipurpose, White	Keystone5012
28	TP2, TP3, TP11, TP12	4	Red	5010	Keystone	Test Point, Multipurpose, Red, TH	Red Multipurpose Testpoint
29	TP7, TP8, TP9, TP16, TP17, TP18	6	SMT	5016	Keystone	Test Point, SMT, Compact	Testpoint_Keystone_Compact

Copyright © 2016–2017, Texas Instruments Incorporated

Table 13. TPS26600-02EVM Bill of Materials (continued)

Item #	Designator	Qty	Value	Part Number	Manufacturer	Description	Package Reference
30	U1	1		TPS26600PWPR	Texas Instruments	4.2V-55V, 2.23A, Industrial eFuse with Integrated Reverse Input Polarity Protection	PWP0016D
31	C1, C7	0	0.1uF	GRM319R72A104KA01D	Murata	CAP, CERM, 0.1 µF, 100 V, +/- 10%, X7R, 1206	1206
32	C4, C11	0	1uF	GRM31CR72A105KA01L	Murata	CAP, CERM, 1 µF, 100 V, +/- 10%, X7R, 1206	1206
33	D2, D8	0	51V	SMAJ51CA	Littelfuse	Diode, TVS, Bi, 51 V, 400 W, SMA	SMA
34	D3, D9	0	36V	SMCJ36CA	Bourns	TVS DIODE 36VWM 58.1VC SMC	SMC
35	FID1, FID2, FID3	0		N/A	N/A	Fiducial mark. There is nothing to buy or mount.	Fiducial
36	SH-J3, SH-J6, SH-J7, SH-J10	0	1x2	SPC02SYAN	Sullins Connector Solutions	Shunt, 100mil, Flash Gold, Black	Closed Top 100mil Shunt
37	U2	1		TPS26600RHF	Texas Instruments	4.2V - 55V, 2.23A Industrial eFuse with Integrated Reverse Input Polarity Protection	RHF0024A

Copyright © 2016–2017, Texas Instruments Incorporated

Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

Changes from Original (August 2016) to A Revision	Page
• Added TPS26601 device to document.	1
• Changed schematic for board revision B.	3
• Deleted TP6 and TP15 test points from *Test Points Description* table.	4
• Changed *EVM Test Setup* image.	6
• Deleted CH2 *NOTE* from the *Test Procedure* section.	7
• Added *Instructions to Evaluate the TPS26601* section.	13
• Changed all PCB drawings in the *PCB Drawings* section.	14
• Updated BOM for board revision B.	16

Copyright © 2016–2017, Texas Instruments Incorporated

STANDARD TERMS FOR EVALUATION MODULES

1. *Delivery:* TI delivers TI evaluation boards, kits, or modules, including any accompanying demonstration software, components, and/or documentation which may be provided together or separately (collectively, an “EVM” or “EVMs”) to the User (“User”) in accordance with the terms set forth herein. User's acceptance of the EVM is expressly subject to the following terms.

   1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductors products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM (“Software”) shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms that accompany such Software

   1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.

2 *Limited Warranty and Related Remedies/Disclaimers*:

   2.1 These terms do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.

   2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for a nonconforming EVM if (a) the nonconformity was caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI, (b) the nonconformity resulted from User's design, specifications or instructions for such EVMs or improper system design, or (c) User has not paid on time. Testing and other quality control techniques are used to the extent TI deems necessary. TI does not test all parameters of each EVM. User's claims against TI under this Section 2 are void if User fails to notify TI of any apparent defects in the EVMs within ten (10) business days after delivery, or of any hidden defects with ten (10) business days after the defect has been detected.

   2.3 TI's sole liability shall be at its option to repair or replace EVMs that fail to conform to the warranty set forth above, or credit User's account for such EVM. TI's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by TI and that are determined by TI not to conform to such warranty. If TI elects to repair or replace such EVM, TI shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.

3 *Regulatory Notices:*

   3.1 *United States*

      3.1.1 *Notice applicable to EVMs not FCC-Approved:*

      FCC NOTICE: This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.

      3.1.2 *For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:*

      CAUTION

      This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

      Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

      FCC Interference Statement for Class A EVM devices

      NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- *Reorient or relocate the receiving antenna.*
- *Increase the separation between the equipment and receiver.*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- *Consult the dealer or an experienced radio/TV technician for help.*

3.2 *Canada*

3.2.1 *For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210 or RSS-247*

Concerning EVMs Including Radio Transmitters:

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concernant les EVMs avec appareils radio:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concerning EVMs Including Detachable Antennas:

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur

3.3 *Japan*

3.3.1 *Notice for EVMs delivered in Japan:* Please see http://www.tij.co.jp/lsds/ti_ja/general/eStore/notice_01.page 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。
http://www.tij.co.jp/lsds/ti_ja/general/eStore/notice_01.page

3.3.2 *Notice for Users of EVMs Considered "Radio Frequency Products" in Japan:* EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required to follow the instructions set forth by Radio Law of Japan, which includes, but is not limited to, the instructions below with respect to EVMs (which for the avoidance of doubt are stated strictly for convenience and should be verified by User):

1. Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above, User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】 開発キットの中には技術基準適合証明を受けていないものがあります。 技術適合証明を受けていないもののご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。 日本テキサス・インスツルメンツ株式会社

東京都新宿区西新宿６丁目２４番１号

西新宿三井ビル

3.3.3 *Notice for EVMs for Power Line Communication:* Please see http://www.tij.co.jp/lsds/ti_ja/general/eStore/notice_02.page

電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。http://www.tij.co.jp/lsds/ti_ja/general/eStore/notice_02.page

3.4 *European Union*

3.4.1 *For EVMs subject to EU Directive 2014/30/EU (Electromagnetic Compatibility Directive)*:

This is a class A product intended for use in environments other than domestic environments that are connected to a low-voltage power-supply network that supplies buildings used for domestic purposes. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

4 *EVM Use Restrictions and Warnings:*

4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.

4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.

4.3 *Safety-Related Warnings and Restrictions:*

4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.

4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.

4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.

5. *Accuracy of Information:* To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.

6. *Disclaimers:*

   6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY MATERIALS PROVIDED WITH THE EVM (INCLUDING, BUT NOT LIMITED TO, REFERENCE DESIGNS AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY EPIDEMIC FAILURE WARRANTY OR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.

   6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT, REGARDLESS OF WHEN MADE, CONCEIVED OR ACQUIRED.

7. *USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS.* USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.

8. *Limitations on Damages and Liability:*

   8.1 *General Limitations*. IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS OR THE USE OF THE EVMS , REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TI MORE THAN TWELVE (12) MONTHS AFTER THE EVENT THAT GAVE RISE TO THE CAUSE OF ACTION HAS OCCURRED.

   8.2 *Specific Limitations.* IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY USE OF AN EVM PROVIDED HEREUNDER, INCLUDING FROM ANY WARRANTY, INDEMITY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS, , EXCEED THE TOTAL AMOUNT PAID TO TI BY USER FOR THE PARTICULAR EVM(S) AT ISSUE DURING THE PRIOR TWELVE (12) MONTHS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM SHALL NOT ENLARGE OR EXTEND THIS LIMIT.

9. *Return Policy.* Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.

10. *Governing Law:* These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2017, Texas Instruments Incorporated

IMPORTANT NOTICE FOR TI DESIGN INFORMATION AND RESOURCES

Texas Instruments Incorporated ('TI") technical, application or other design advice, services or information, including, but not limited to, reference designs and materials relating to evaluation modules, (collectively, "TI Resources") are intended to assist designers who are developing applications that incorporate TI products; by downloading, accessing or using any particular TI Resource in any way, you (individually or, if you are acting on behalf of a company, your company) agree to use it solely for this purpose and subject to the terms of this Notice.

TI's provision of TI Resources does not expand or otherwise alter TI's applicable published warranties or warranty disclaimers for TI products, and no additional obligations or liabilities arise from TI providing such TI Resources. TI reserves the right to make corrections, enhancements, improvements and other changes to its TI Resources.

You understand and agree that you remain responsible for using your independent analysis, evaluation and judgment in designing your applications and that you have full and exclusive responsibility to assure the safety of your applications and compliance of your applications (and of all TI products used in or for your applications) with all applicable regulations, laws and other applicable requirements. You represent that, with respect to your applications, you have all the necessary expertise to create and implement safeguards that (1) anticipate dangerous consequences of failures, (2) monitor failures and their consequences, and (3) lessen the likelihood of failures that might cause harm and take appropriate actions. You agree that prior to using or distributing any applications that include TI products, you will thoroughly test such applications and the functionality of such TI products as used in such applications. TI has not conducted any testing other than that specifically described in the published documentation for a particular TI Resource.

You are authorized to use, copy and modify any individual TI Resource only in connection with the development of applications that include the TI product(s) identified in such TI Resource. NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER TI INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT OF TI OR ANY THIRD PARTY IS GRANTED HEREIN, including but not limited to any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information regarding or referencing third-party products or services does not constitute a license to use such products or services, or a warranty or endorsement thereof. Use of TI Resources may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

TI RESOURCES ARE PROVIDED "AS IS" AND WITH ALL FAULTS. TI DISCLAIMS ALL OTHER WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, REGARDING TI RESOURCES OR USE THEREOF, INCLUDING BUT NOT LIMITED TO ACCURACY OR COMPLETENESS, TITLE, ANY EPIDEMIC FAILURE WARRANTY AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

TI SHALL NOT BE LIABLE FOR AND SHALL NOT DEFEND OR INDEMNIFY YOU AGAINST ANY CLAIM, INCLUDING BUT NOT LIMITED TO ANY INFRINGEMENT CLAIM THAT RELATES TO OR IS BASED ON ANY COMBINATION OF PRODUCTS EVEN IF DESCRIBED IN TI RESOURCES OR OTHERWISE. IN NO EVENT SHALL TI BE LIABLE FOR ANY ACTUAL, DIRECT, SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF TI RESOURCES OR USE THEREOF, AND REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

You agree to fully indemnify TI and its representatives against any damages, costs, losses, and/or liabilities arising out of your non-compliance with the terms and provisions of this Notice.

This Notice applies to TI Resources. Additional terms apply to the use and purchase of certain types of materials, TI products and services. These include; without limitation, TI's standard terms for semiconductor products http://www.ti.com/sc/docs/stdterms.htm), evaluation modules, and samples (http://www.ti.com/sc/docs/sampterms.htm).

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2017, Texas Instruments Incorporated