AKD5374-A
Evaluation board Rev.1 for AK5374

GENERAL DESCRIPTION

AKD5374-A is an evaluation board for AK5374, which is a stereo A/D Converter with a USB 2.0 interface. The AK5374 can be tested easily on the AKD5374-A, as the operation of the device is compatible with USB standard audio class. The AKD5374-A has not only an external audio interface, but also an external EEP-ROM that all descriptor contents are stored and customizable.

■ **Ordering guide**

AKD5374-A --- Evaluation board for AK5374

FUNCTION

■ **Microphone Jack**
■ **3.3 volt Regulator (LM1117-3.3V)**
■ **8k bit EEPROM(AK6506CT)**
■ **USB B-type Connector**

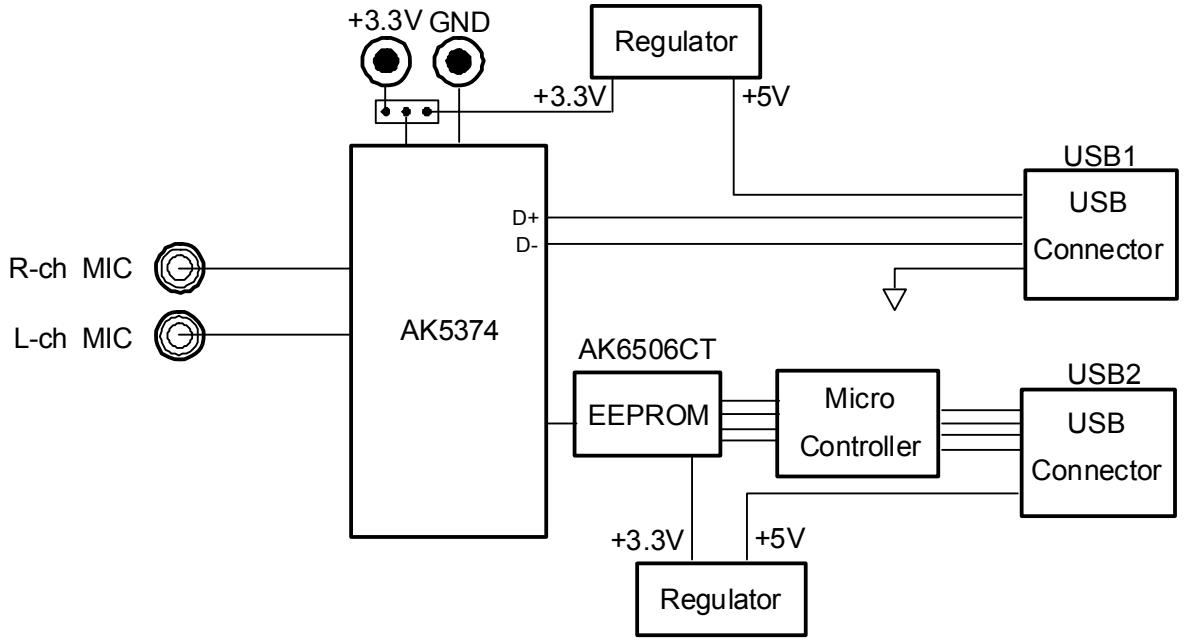


Figure 1. AKD5374-A Block Diagram

* Circuit diagram and PCB layout are attached at the end of this manual

BOARD OUTLINE CHART

■ Outline Chart

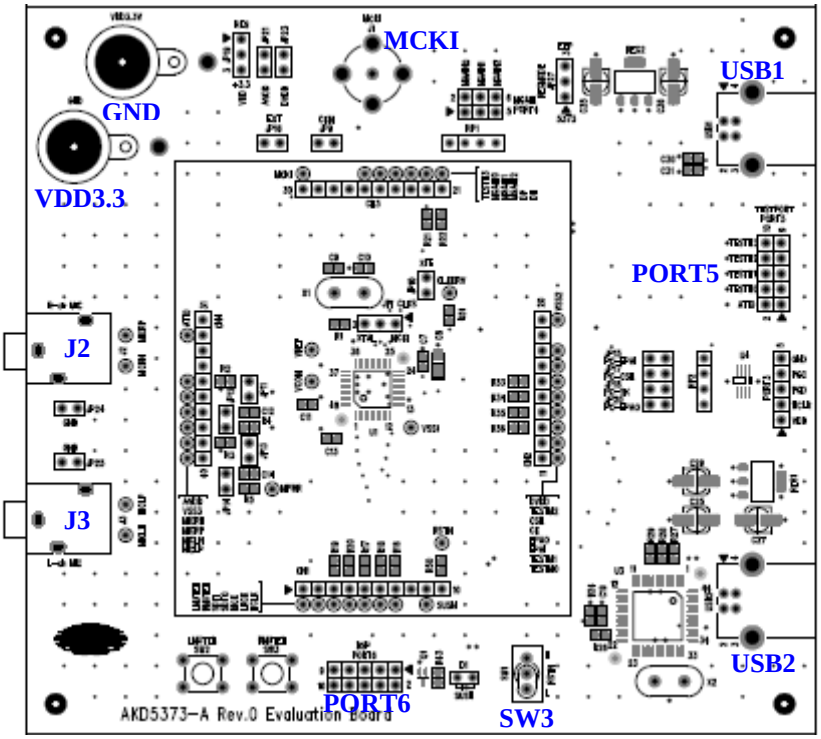


Figure 2. AKD5374-A top view

■ Comment

(1) VDD3.3V, GND
These are the power supply connectors. Connect power supply with these pins.
As for the detail comments, refer to the setup of power supply on the next page.

(2) MCKI (BNC-JACK)
This is external clock source for the MCKI/XTI pin of the AK5374.

(3) USB1 (USB Connector)
This is USB B-type connector for evaluation of the AK5374. Connect this to PC.

(4) USB2 (USB Connector)
This is USB B-type connector for EEP-ROM write operation.

(5) J2, J3 (Mini Jacks)
These are analog signal inputs.


(6) PORT5, PORT6 (10 pin header)
PORT5 (TEST PORT): It is not used except test mode

(7) SW3 (Switch)
SW3: Reset of AK5374. Keep “H” during normal operation.

Evaluation Board Manual

■ Operation sequence

1) Set up the jumper pins as the followings.

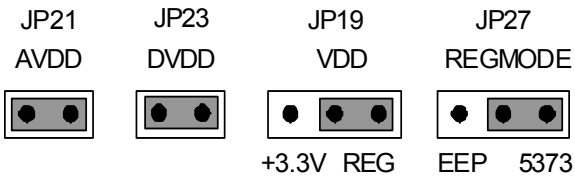

2) Connect USB1 port of the AKD5374-A to PC with an USB cable. Windows recognizes the AK5374 automatically, and it is not necessary to install any driver. Device manage shows "AK5374" as an USB Audio Device in "Sound, video and game controllers" if Windows recognizes the device successfully.

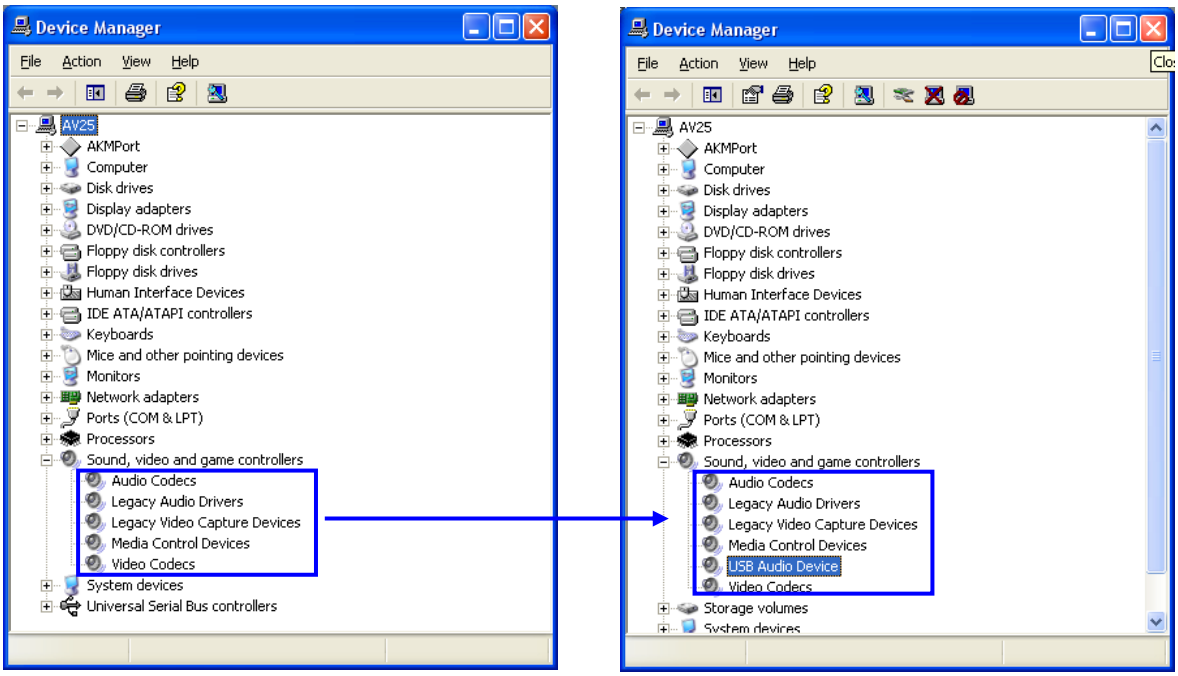


Figure 3. Device Manager "Sound, video and game controllers"

3) Double click "USB Audio Device", the window of "USB Audio Device Properties" shows the properties including device type as "Sound, video and game controllers", Manufacturer as "Generic USB Audio", and Location as "Location 0 (AK5374)".

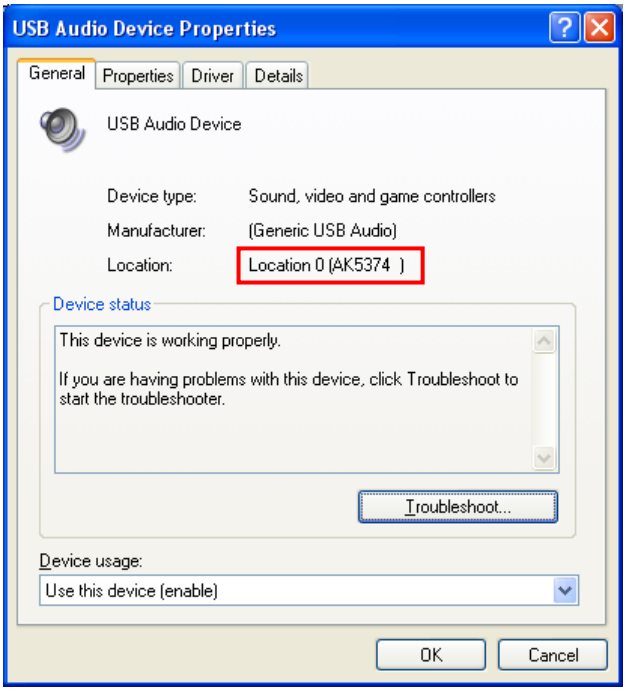


Figure 4. USB Audio Device Properties

■ Evaluation mode

Internal ADC Streaming Mode

Evaluation of using internal ADC of AK5374
USB1 (USB Connector) is used. Nothing should be connected to USB2 (USB Connector) and PORT6 (DSP).

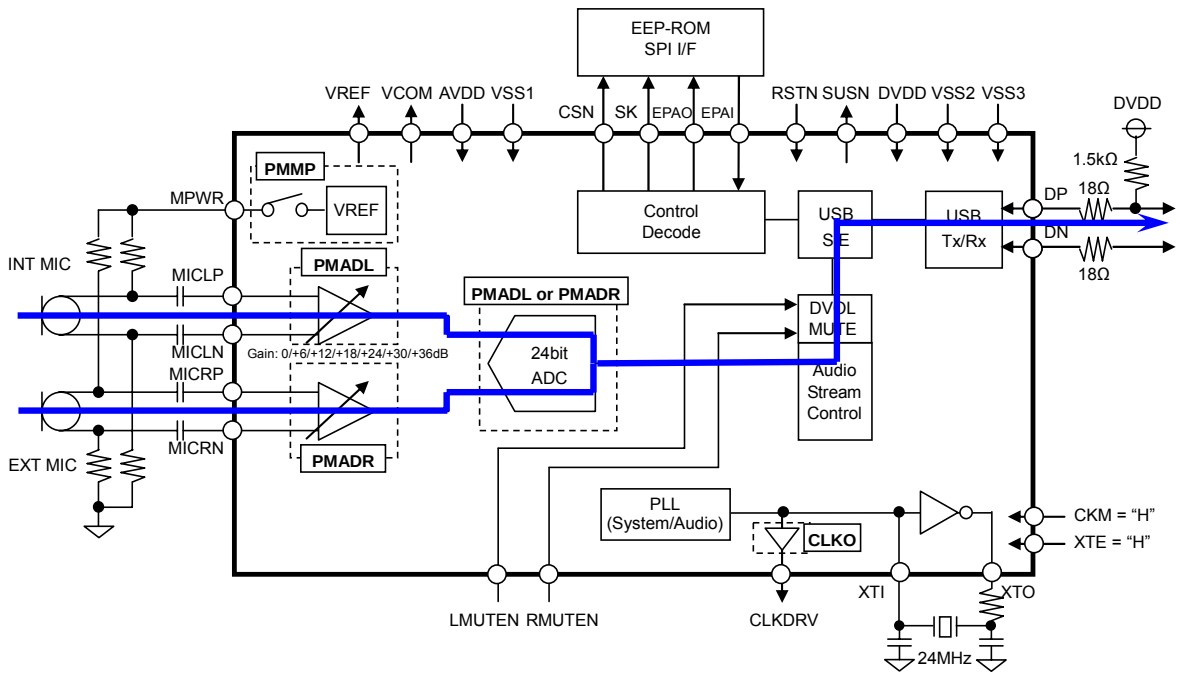


Figure 5. Internal ADC Streaming Mode

■ Evaluation

1) Runs “sound recorder” program in ‘accessory -> Entertainment’

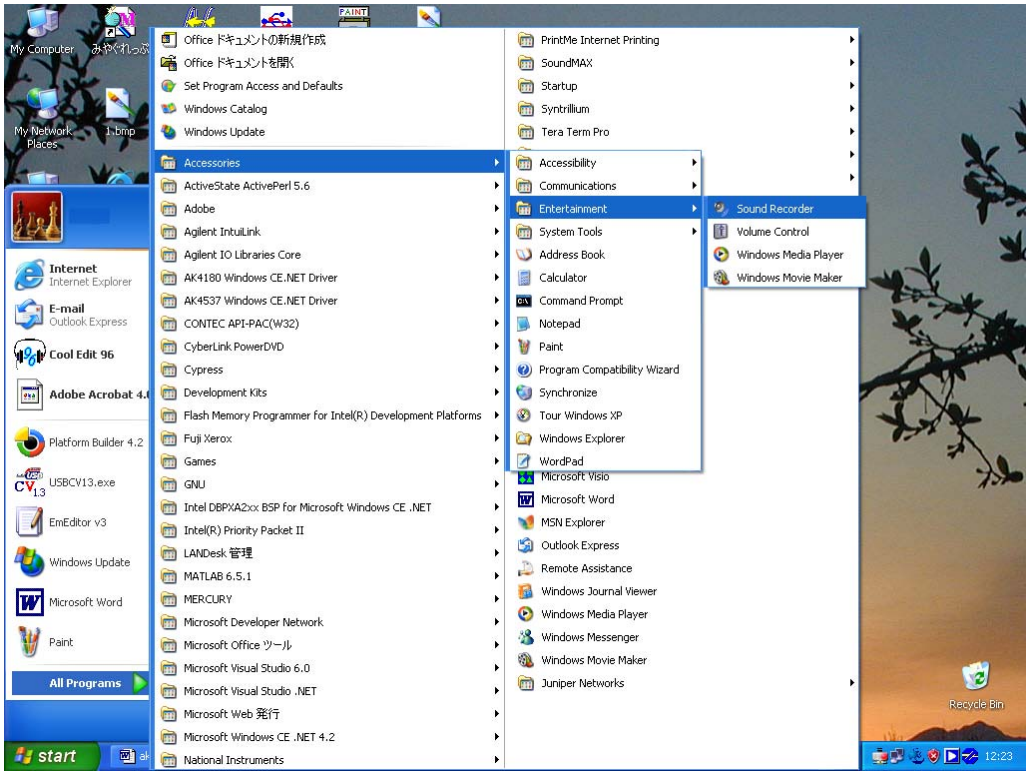


Figure 6. Sound Recorder

2) Select “Edit” -> “Property”, and then select “USB Audio Device (1)” as “Preferred Device”.

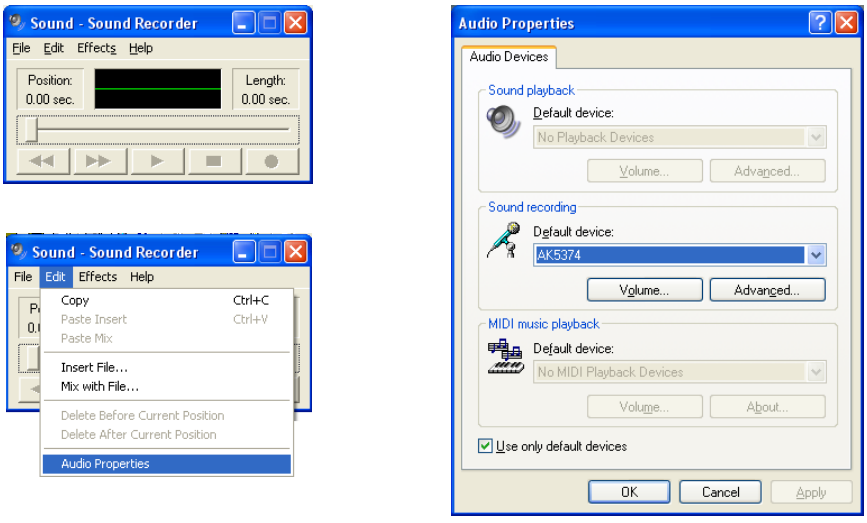


Figure 7. Audio Properties

3) When the icon or Volume in the Sound Recording block is clicked, the volume slider window appears. The top points value means the maximum value of the AK5374 under Windows. The Mute all check box is displayed.

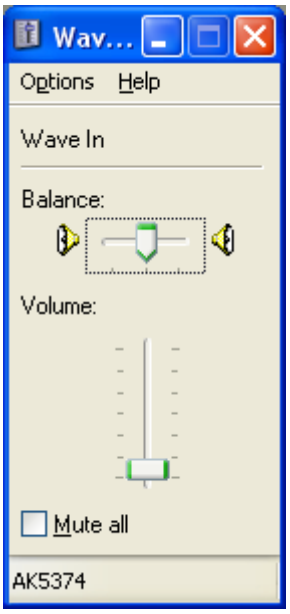


Figure 8. Volume Control

4) Select “File” -> “Property”, and then click “convert now.” button in the Property window. Then select “44100Hz 16bit Mono” or “44100Hz 16bit Stereo” as attribute on the Sound Recorder

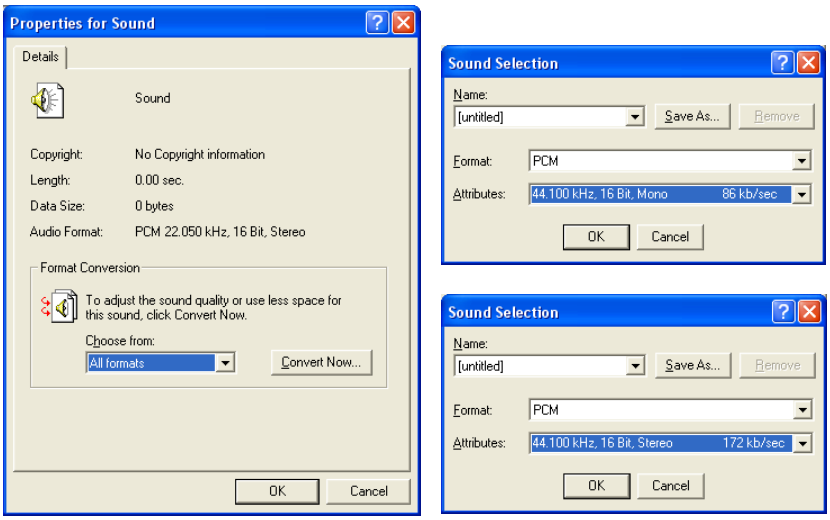


Figure 9. Sound Selecion

5) Check the microphone being plugged and volume control adjustment then you can start recording by pressing “Rec” button.

■ Other jumper pins set up

1. JP24, JP25 (GND) : These jumper pins should be OPEN on normal operation. <Default>

2. JP11 (MICRN) : Connection of microphone power.
   OPEN: Microphone power is not connected.
   SHORT : Microphone power is connected. <Default>

3. JP12 (MICRP) : Connection of microphone power.
   OPEN: Microphone power is not connected.
   SHORT : Microphone power is connected. <Default>

4. JP13 (MICLN) : Connection of microphone power.
   OPEN: Microphone power is not connected.
   SHORT : Microphone power is connected. <Default>

5. JP14 (MICLP) : Connection of microphone power.
   OPEN: Microphone power is not connected.
   SHORT : Microphone power is connected. <Default>

6. JP1 (CLKS) : Selection of external master clock input and crystal oscillator input .
   XTAL : Select crystal oscillator input . <Default>
   MCKI : Select external master clock input.

7. JP10 (XTE) : Selection of clock source for the MCKI/XTI pin.
   OPEN : Select X'tal as the clock source. (XTE pin = "H") <Default>
   SHORT : Select external clock as the clock source (XTE pin = "L")

8. JP16 (EXT) : Selection of external clock input impedance.
   OPEN : External clock input impedance is High impedance.
   SHORT : External clock input impedance is 51Ω.<Default>

9. JP9 (CKM) : Selection of reference X'tal frequency.
   OPEN : 24MHz crystal resonator can be used as the master clock (CKM pin = "H") <Default>
   SHORT : 16MHz crystal resonator can be used as the master clock (CKM pin = "L")

■ The function of the toggle SW

[SW2] (LMUTEN): Left channel mute switch. Keep pressing the button if mute is needed.
[SW3] (RMUTEN): Right channel mute switch. Keep pressing the button if mute is needed.

■ Indication for LED

[D1] (SUSN): Monitor SUSN pin of the AK5374. LED turns off when the AK5374 is on suspend state.

Software Manual

■ AK5374MAPPER.exe

1) General description
AK5374MAPPER.exe is a tool of creating a register setting file that is written to EEPROM on the AKD5374-A. The program can not only display register settings written from a register setting file, but also change the register settings directly.

2) Explanation of main window
When runs the program, the window as shown blow opens.

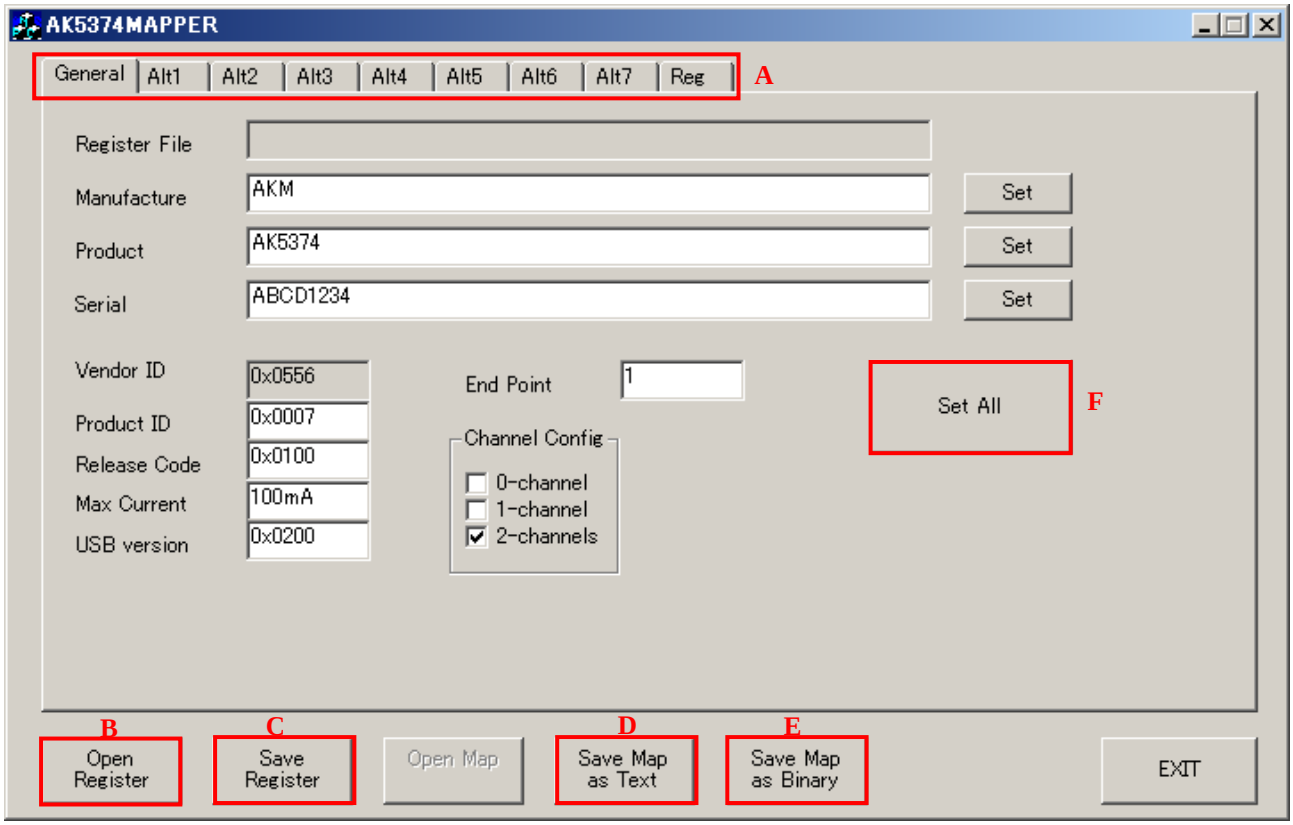


Figure 10. AK5374MAPPER General Setting

A: The top menu can be switched by “TAB” key.

B: Click this button to open a register setting file(.txt), and display will be changed after reading the file.

C: Click this button to save the current register settings as a setting file which has a fixed name “AK5374_register.txt”.

D: Click this button to output a writing EEPROM file as a text file (.txt) which has a fixed name “AK5374_eeprom.txt”.

E: Click this button to output a writing EEPROM file as a binary file (.bin) which has a fixed name “AK5374_eeprom.bin”.

F: “Set All” button must be clicked after changing codes or values in edit boxes.

3) The setting of Alternate

Set up the register about Alternate here.

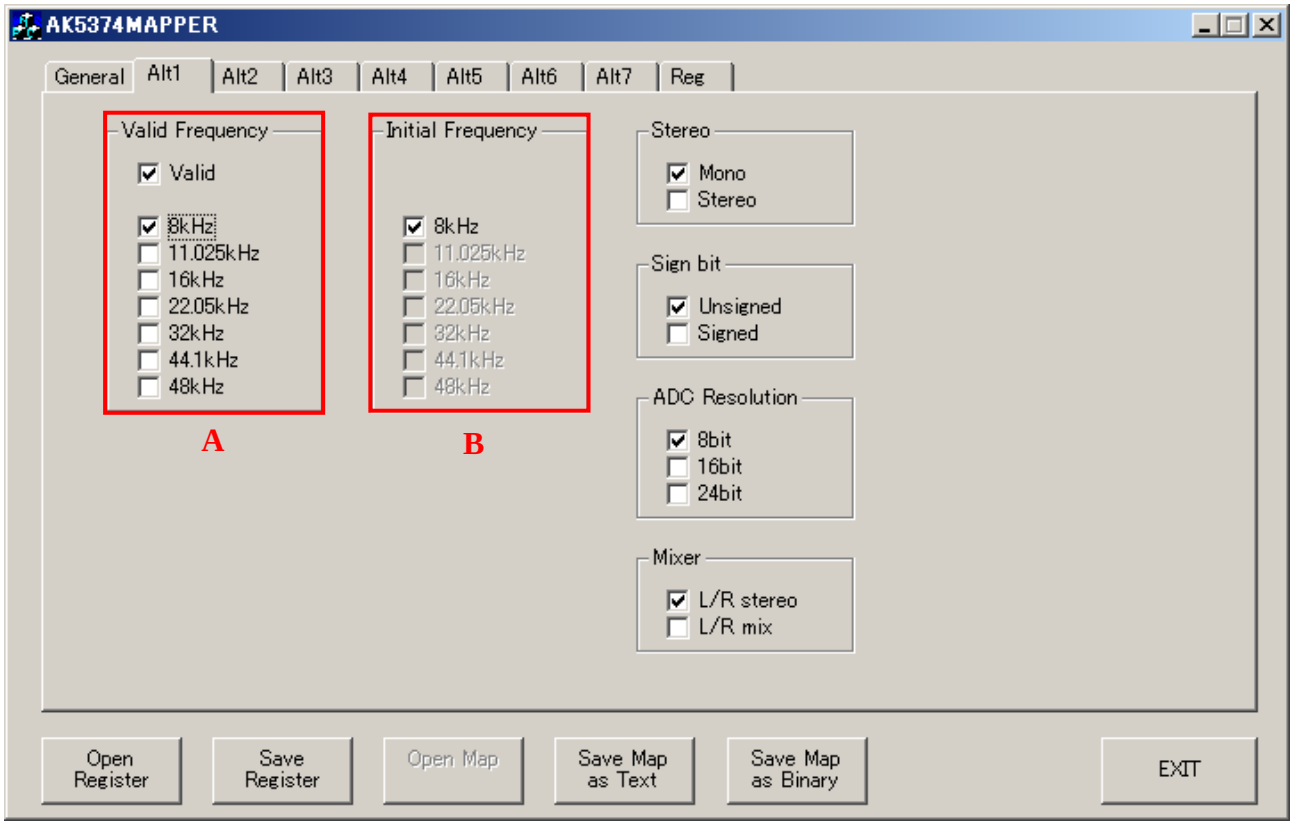


Figure 11. AK5374MAPPER Alternate Setting

A: Choose available frequencies here. If any valid frequency is chosen, valid check mark will be made.

B: Choose initial frequency. Only available frequencies can be chosen.

About the AK5374's descriptor setting, refer to datasheet of the AK5374.

4) The setting of register

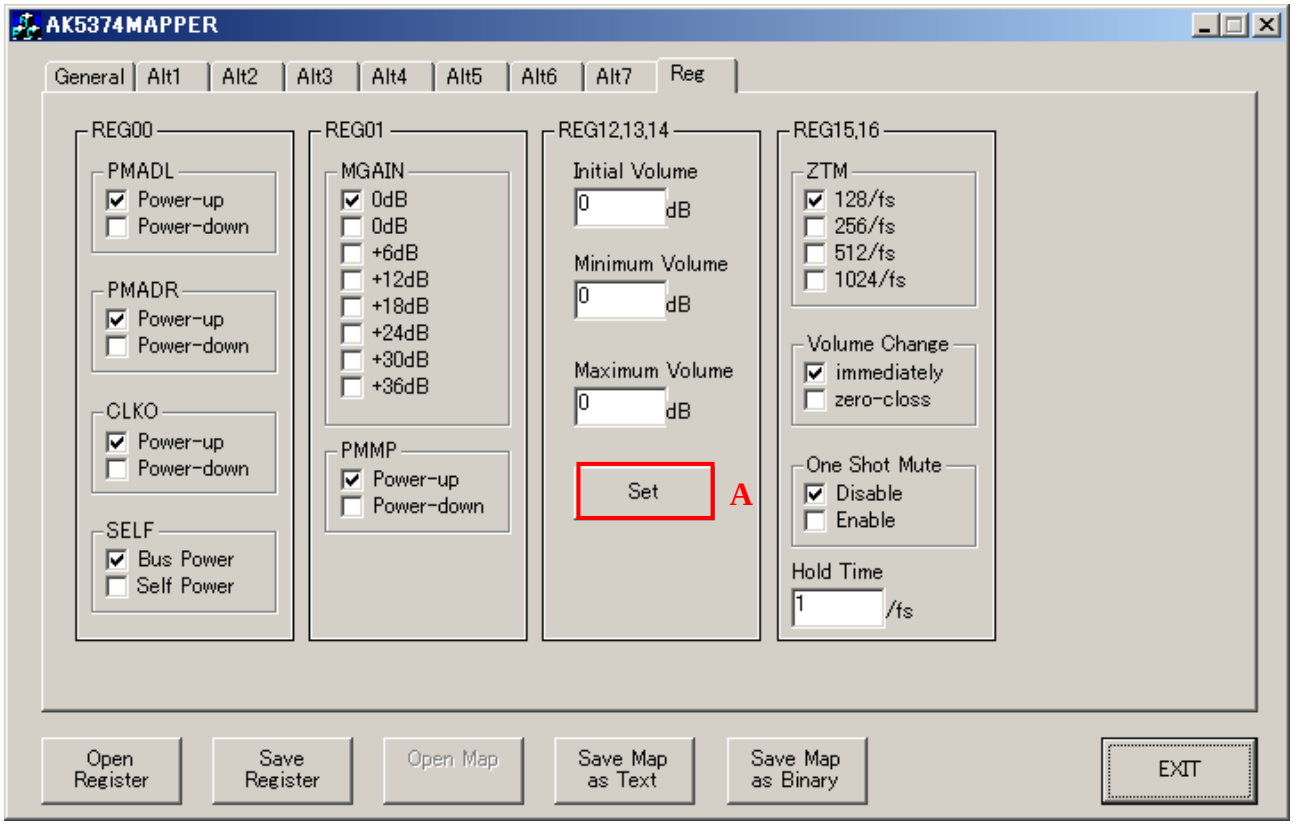


Figure 12. AK5374MAPPER Register Setting

A: Volume and hold time can be set up by clicking the “Set” button or pressing “ENTER” key after inputting numbers in edit boxes.

About the AK5374’s register setting, refer to datasheet of the AK5374.

5) Register setting file <Default>

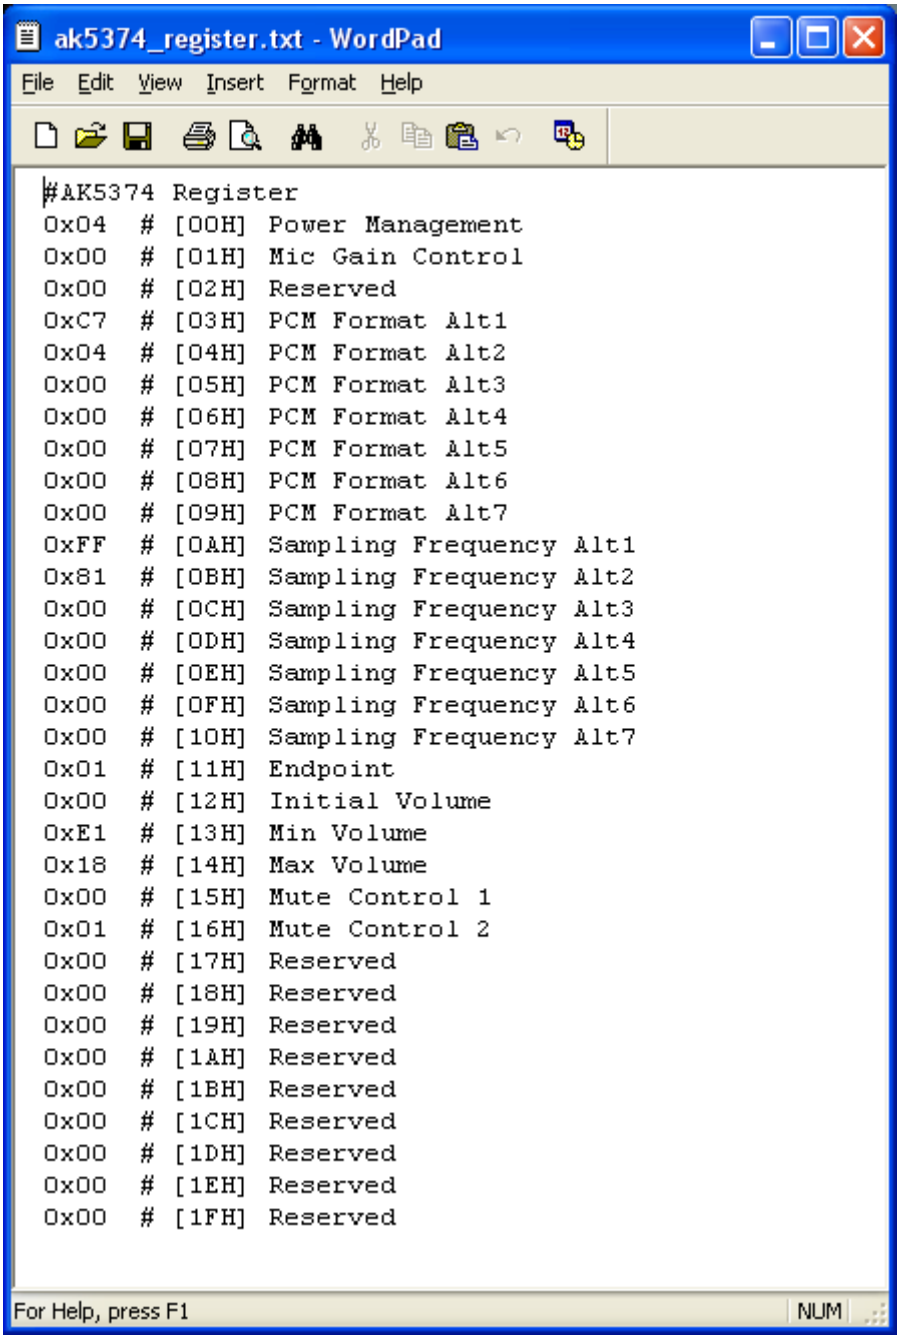


Figure 13. Register Setting File (Text)

6) EEPROM Image File (Text output) <Default>

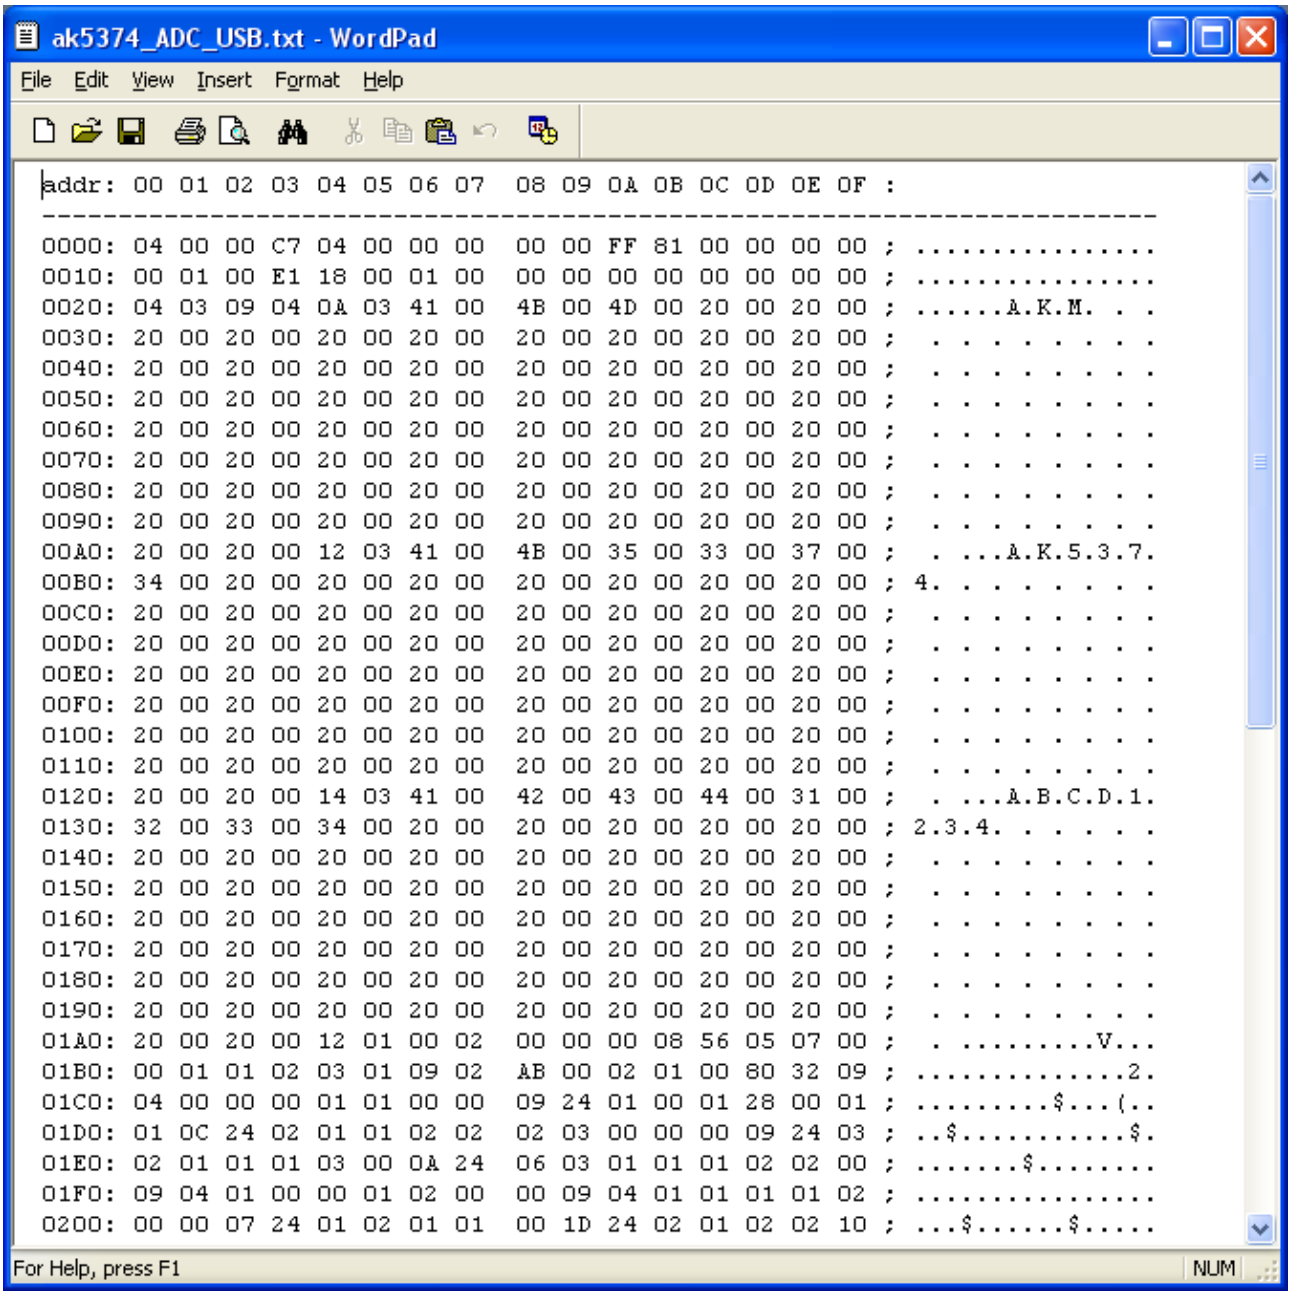


Figure 14. EEPROM Image File (Text)

■ EEPROM Write program for the AK5374: AK5374EEPROM.exe

1) Set up the jumper pins as the followings.



2) Connect USB2 Port of the AKD5374-A to PC with an USB cable. Windows recognizes the mirco controller device automatically. Device manage shows "PICkit2 Microcontroller Programmer" in "Human Interface Devices" if Windows recognizes the device successfully.

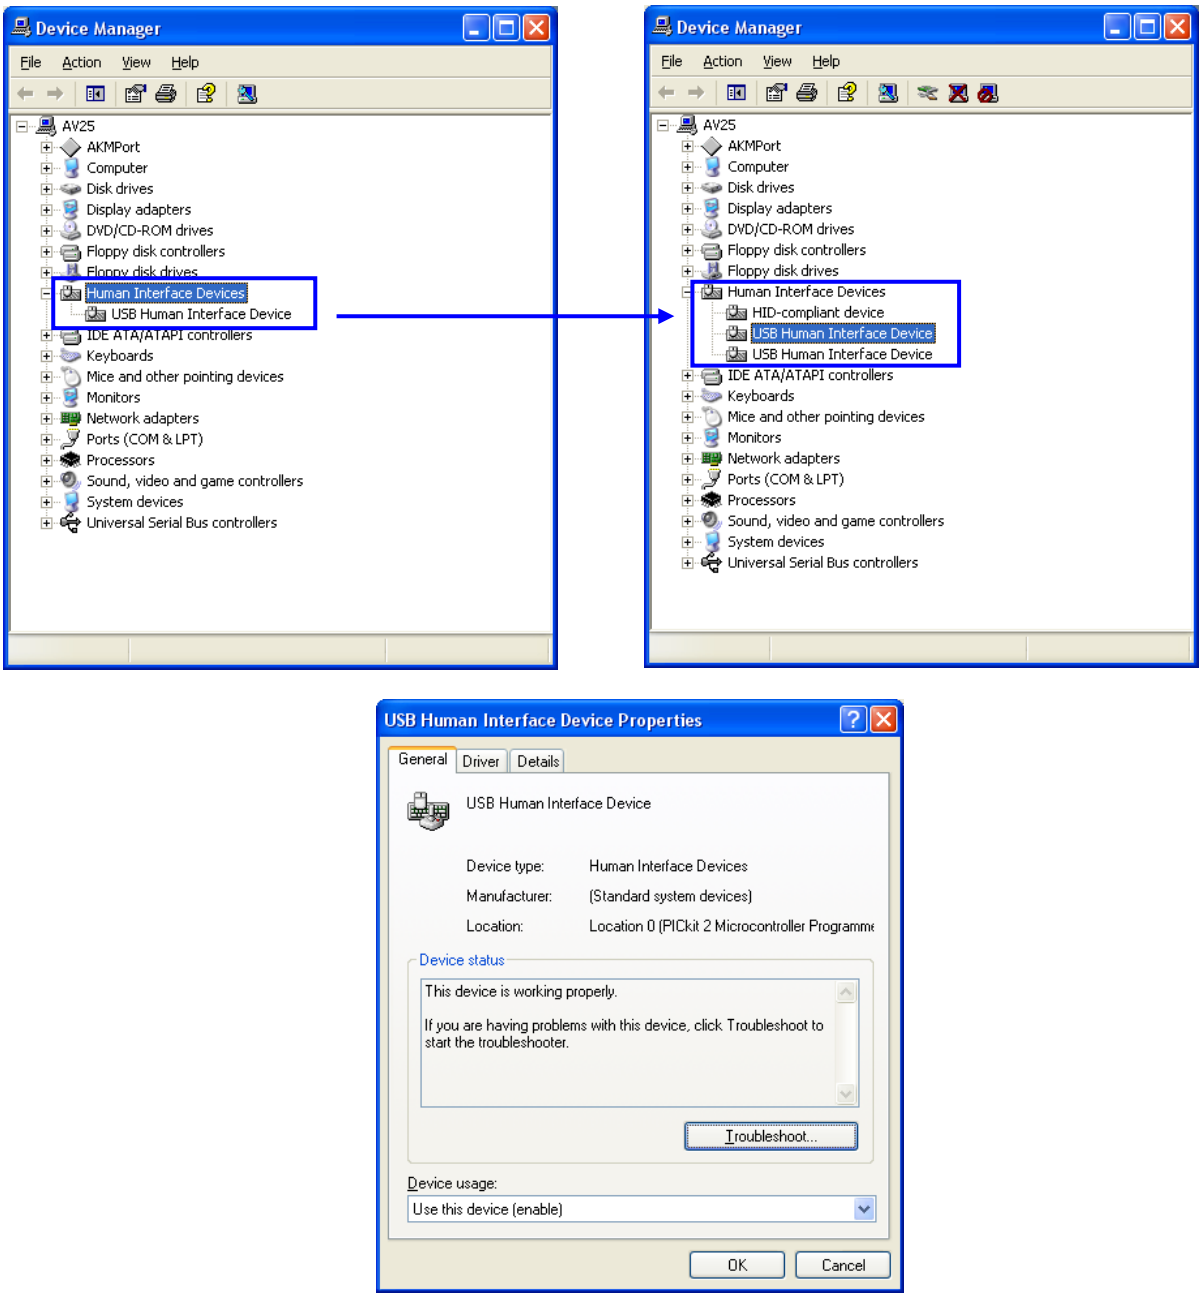


Figure 15. Device Manger "Human Interface Devices"

3) Run the program "AK5374EEPROM.exe".

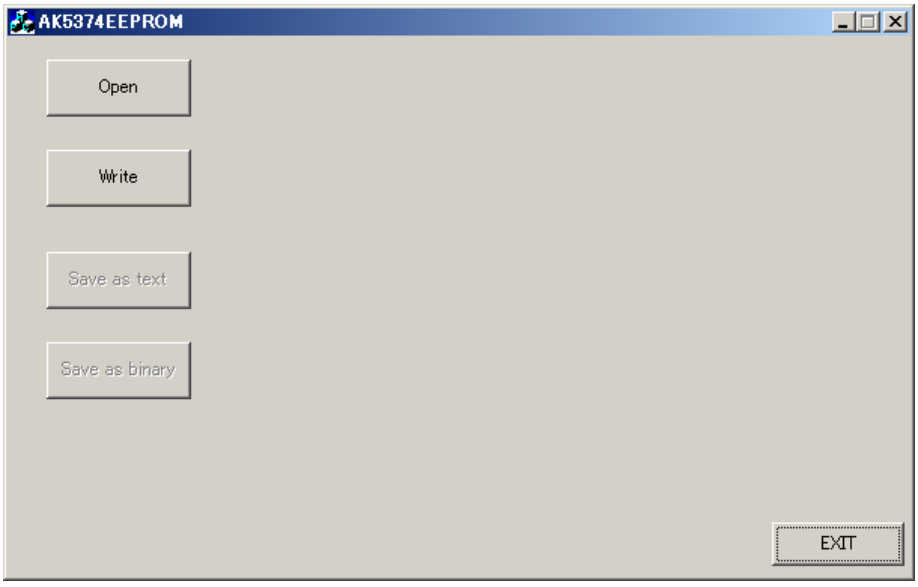


Figure 16. AK5374EEPROM.exe

[Open]: Click this button to open a test file(.txt) or a binary file(.bin, .dat) and write it.
[Write]: Click this button to verify the file Written to EEPROM.
"Write complete" is displayed if the write succeeds, while "Verify failed" if not.
It takes only one second to write a file to EEPROM.

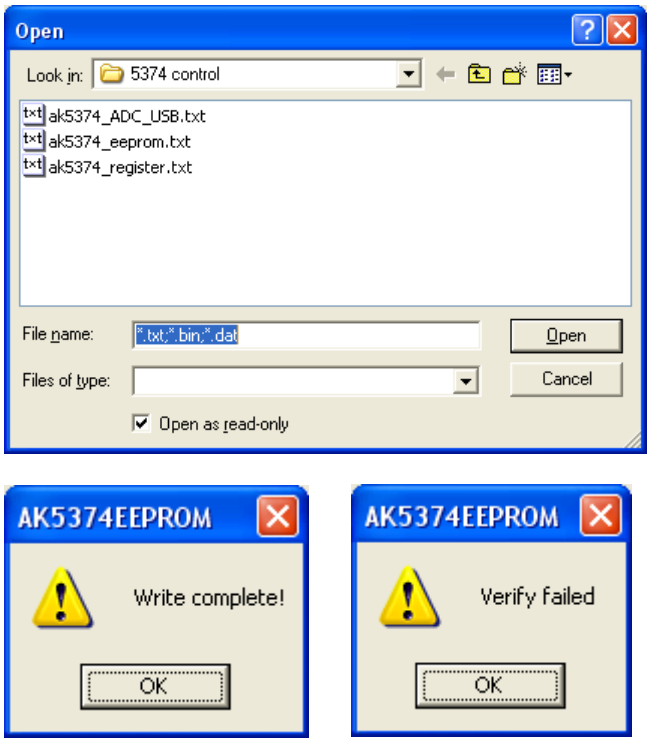


Figure 17. AK5374EEPROM Write


4) Click "OK", and the [EXIT] button of AK5374EEPROM.exe.

Revision History


Date (yy/mm/dd)	Manual Revision	Board Revision	Reason	Page	Contents
2010/05/27	KM101600	1	First edition		
2010/08/06	KM101601		Description Addition	8	Explanation for "Set All" button was added.

IMPORTANT NOTICE


- These products and their specifications are subject to change without notice.
  When you consider any use or application of these products, please make inquiries the sales office of Asahi Kasei Microdevices Corporation (AKM) or authorized distributors as to current status of the products.
- Descriptions of external circuits, application circuits, software and other related information contained in this document are provided only to illustrate the operation and application examples of the semiconductor products. You are fully responsible for the incorporation of these external circuits, application circuits, software and other related information in the design of your equipments. AKM assumes no responsibility for any losses incurred by you or third parties arising from the use of these information herein. AKM assumes no liability for infringement of any patent, intellectual property, or other rights in the application or use of such information contained herein.
- Any export of these products, or devices or systems containing them, may require an export license or other official approval under the law and regulations of the country of export pertaining to customs and tariffs, currency exchange, or strategic materials.
- AKM products are neither intended nor authorized for use as critical components$_{Note1)}$ in any safety, life support, or other hazard related device or system$_{Note2)}$, and AKM assumes no responsibility for such use, except for the use approved with the express written consent by Representative Director of AKM. As used here:
  Note1) A critical component is one whose failure to function or perform may reasonably be expected to result, whether directly or indirectly, in the loss of the safety or effectiveness of the device or system containing it, and which must therefore meet very high standards of performance and reliability.
  Note2) A hazard related device or system is one designed or intended for life support or maintenance of safety or for applications in medicine, aerospace, nuclear energy, or other fields, in which its failure to function or perform may reasonably be expected to result in loss of life or in significant injury or damage to person or property.
- It is the responsibility of the buyer or distributor of AKM products, who distributes, disposes of, or otherwise places the product with a third party, to notify such third party in advance of the above content and conditions, and the buyer or distributor agrees to assume any and all responsibility and liability for and hold AKM harmless from any and all claims arising from the use of said product in the absence of such notification.

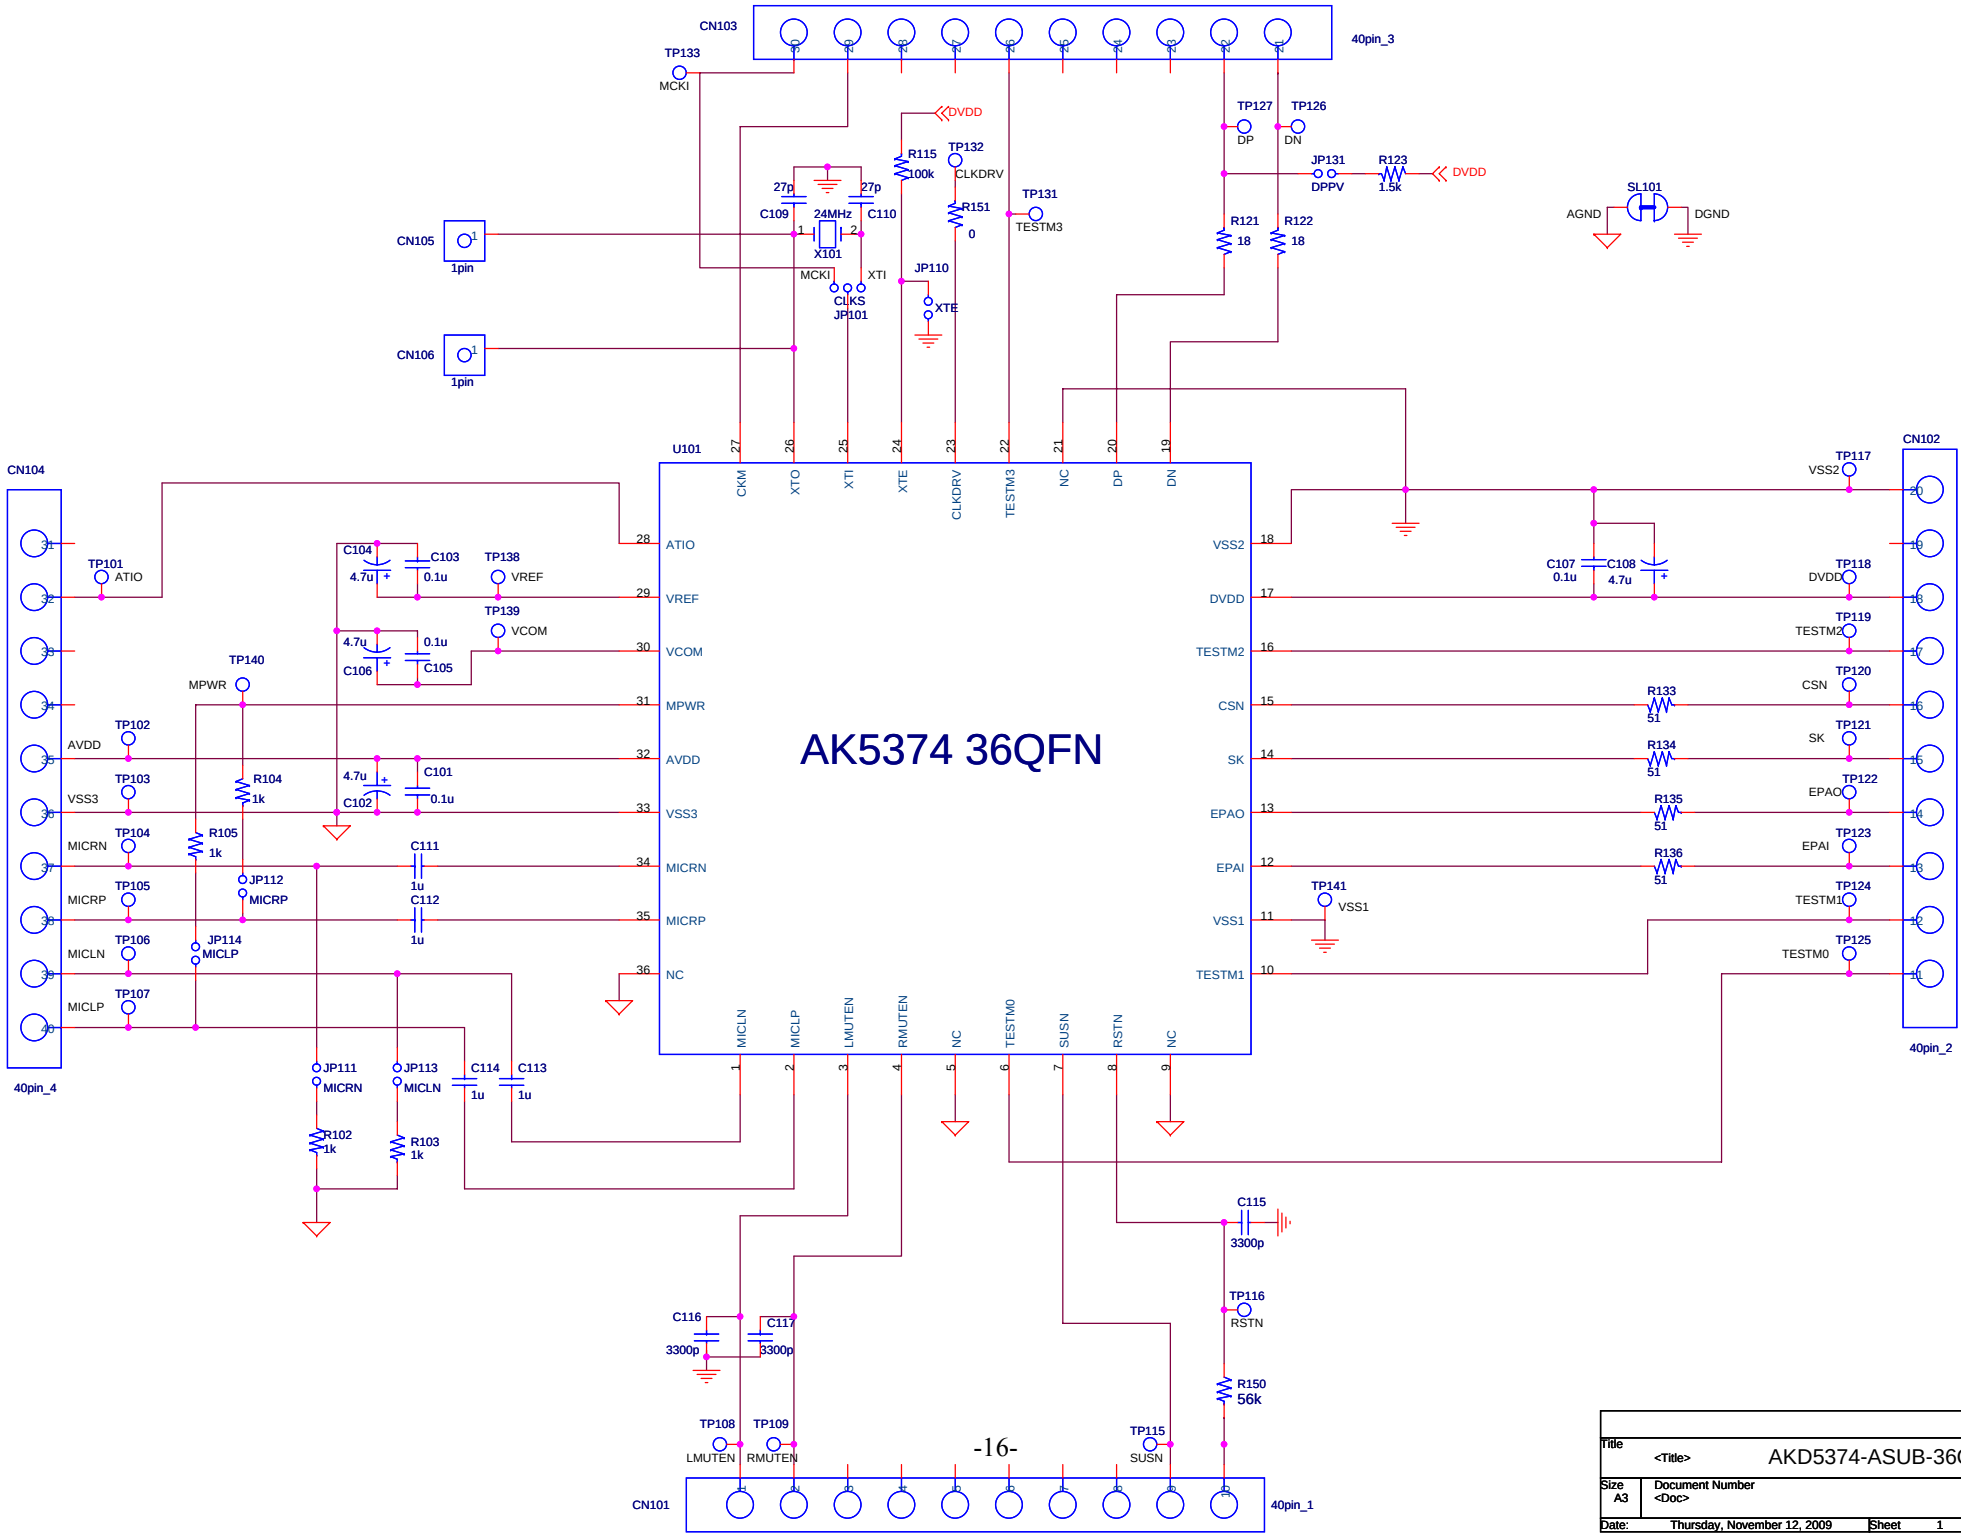

Title	<Title>	AKD5374-ASUB-36QFN
Size A3	Document Number <Doc>	Rev 0
Date: Thursday, November 12, 2009	Sheet 1 of 1	

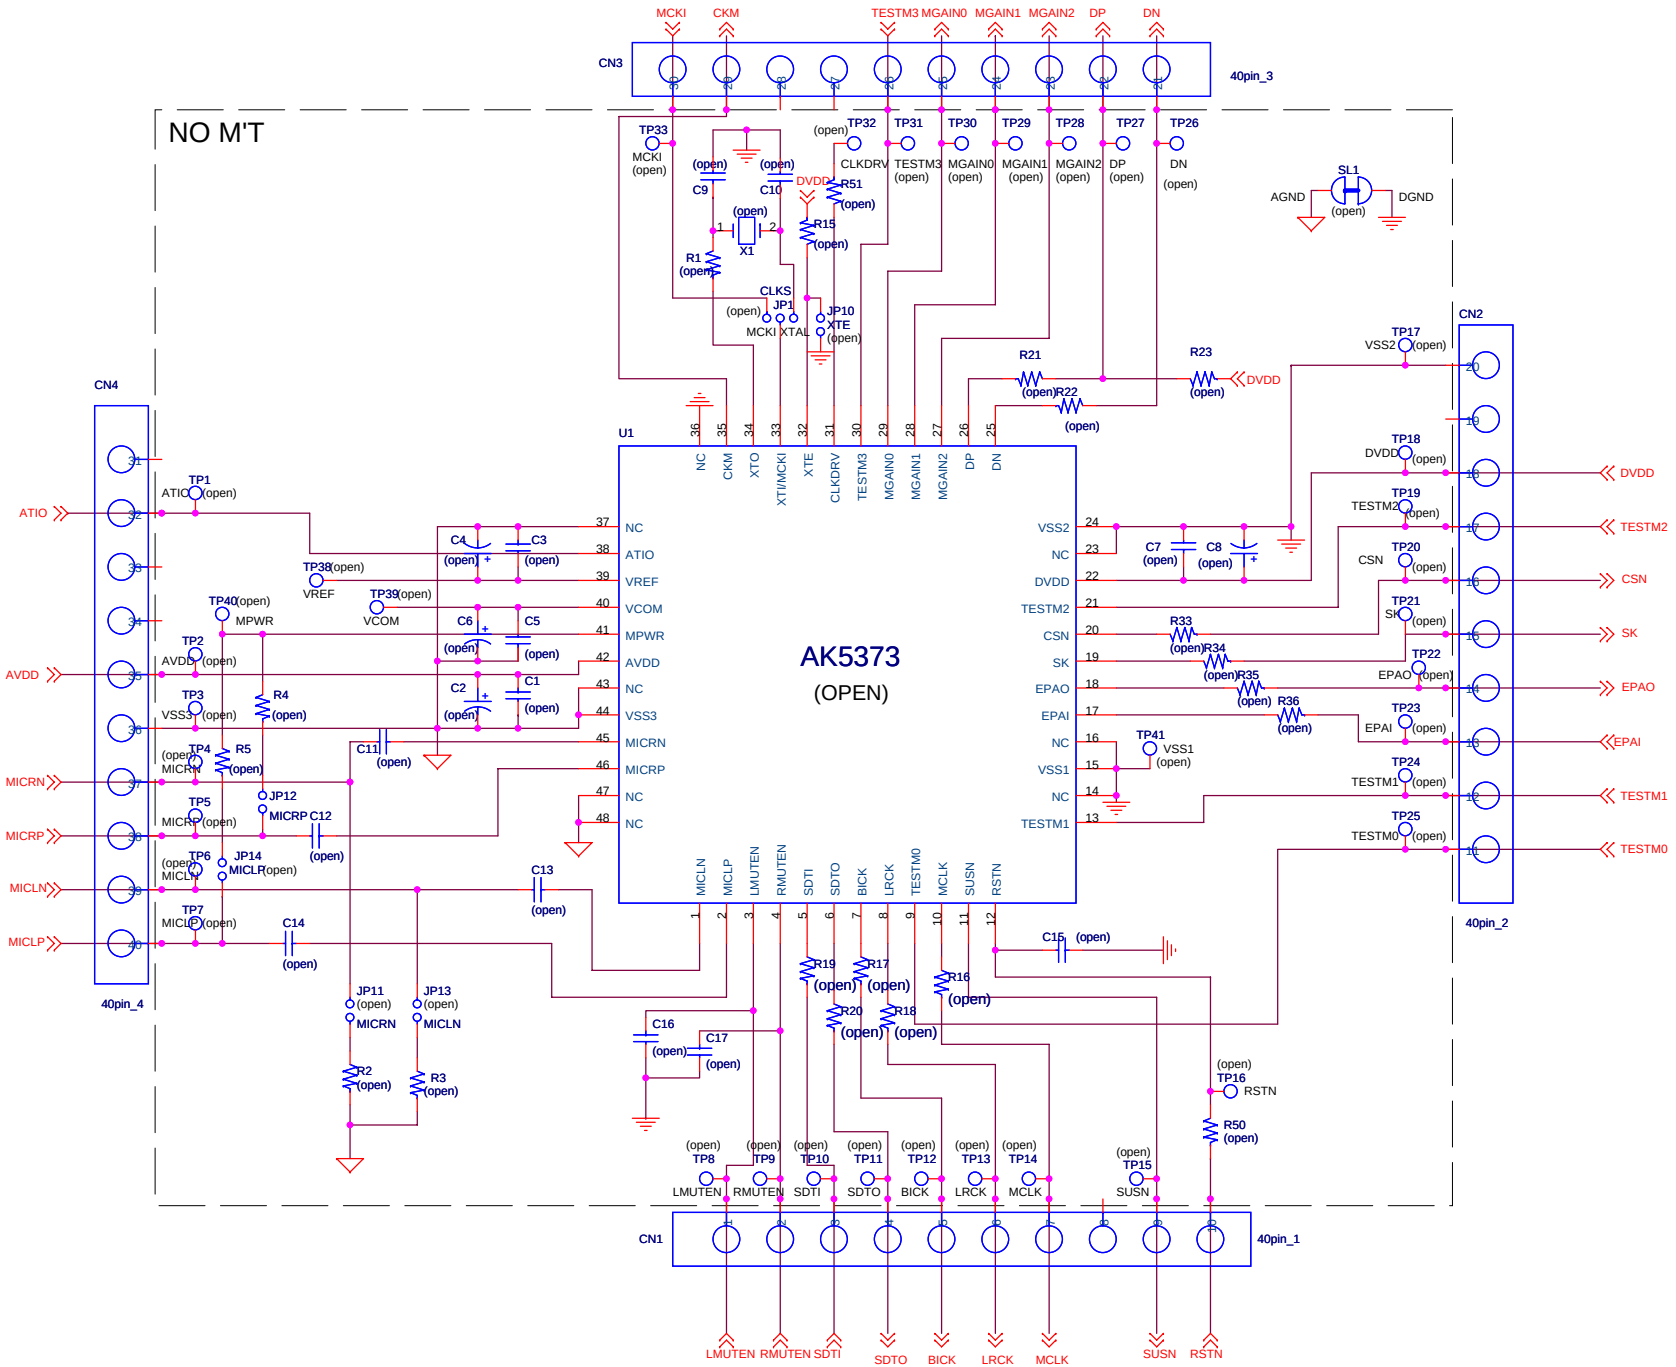


Title	<Title>	AKD5374-A-Main	
Size A3	Document Number <Doc>	AK5374	Rev 1
Date: Friday, April 16, 2010	Sheet 1 of 2		

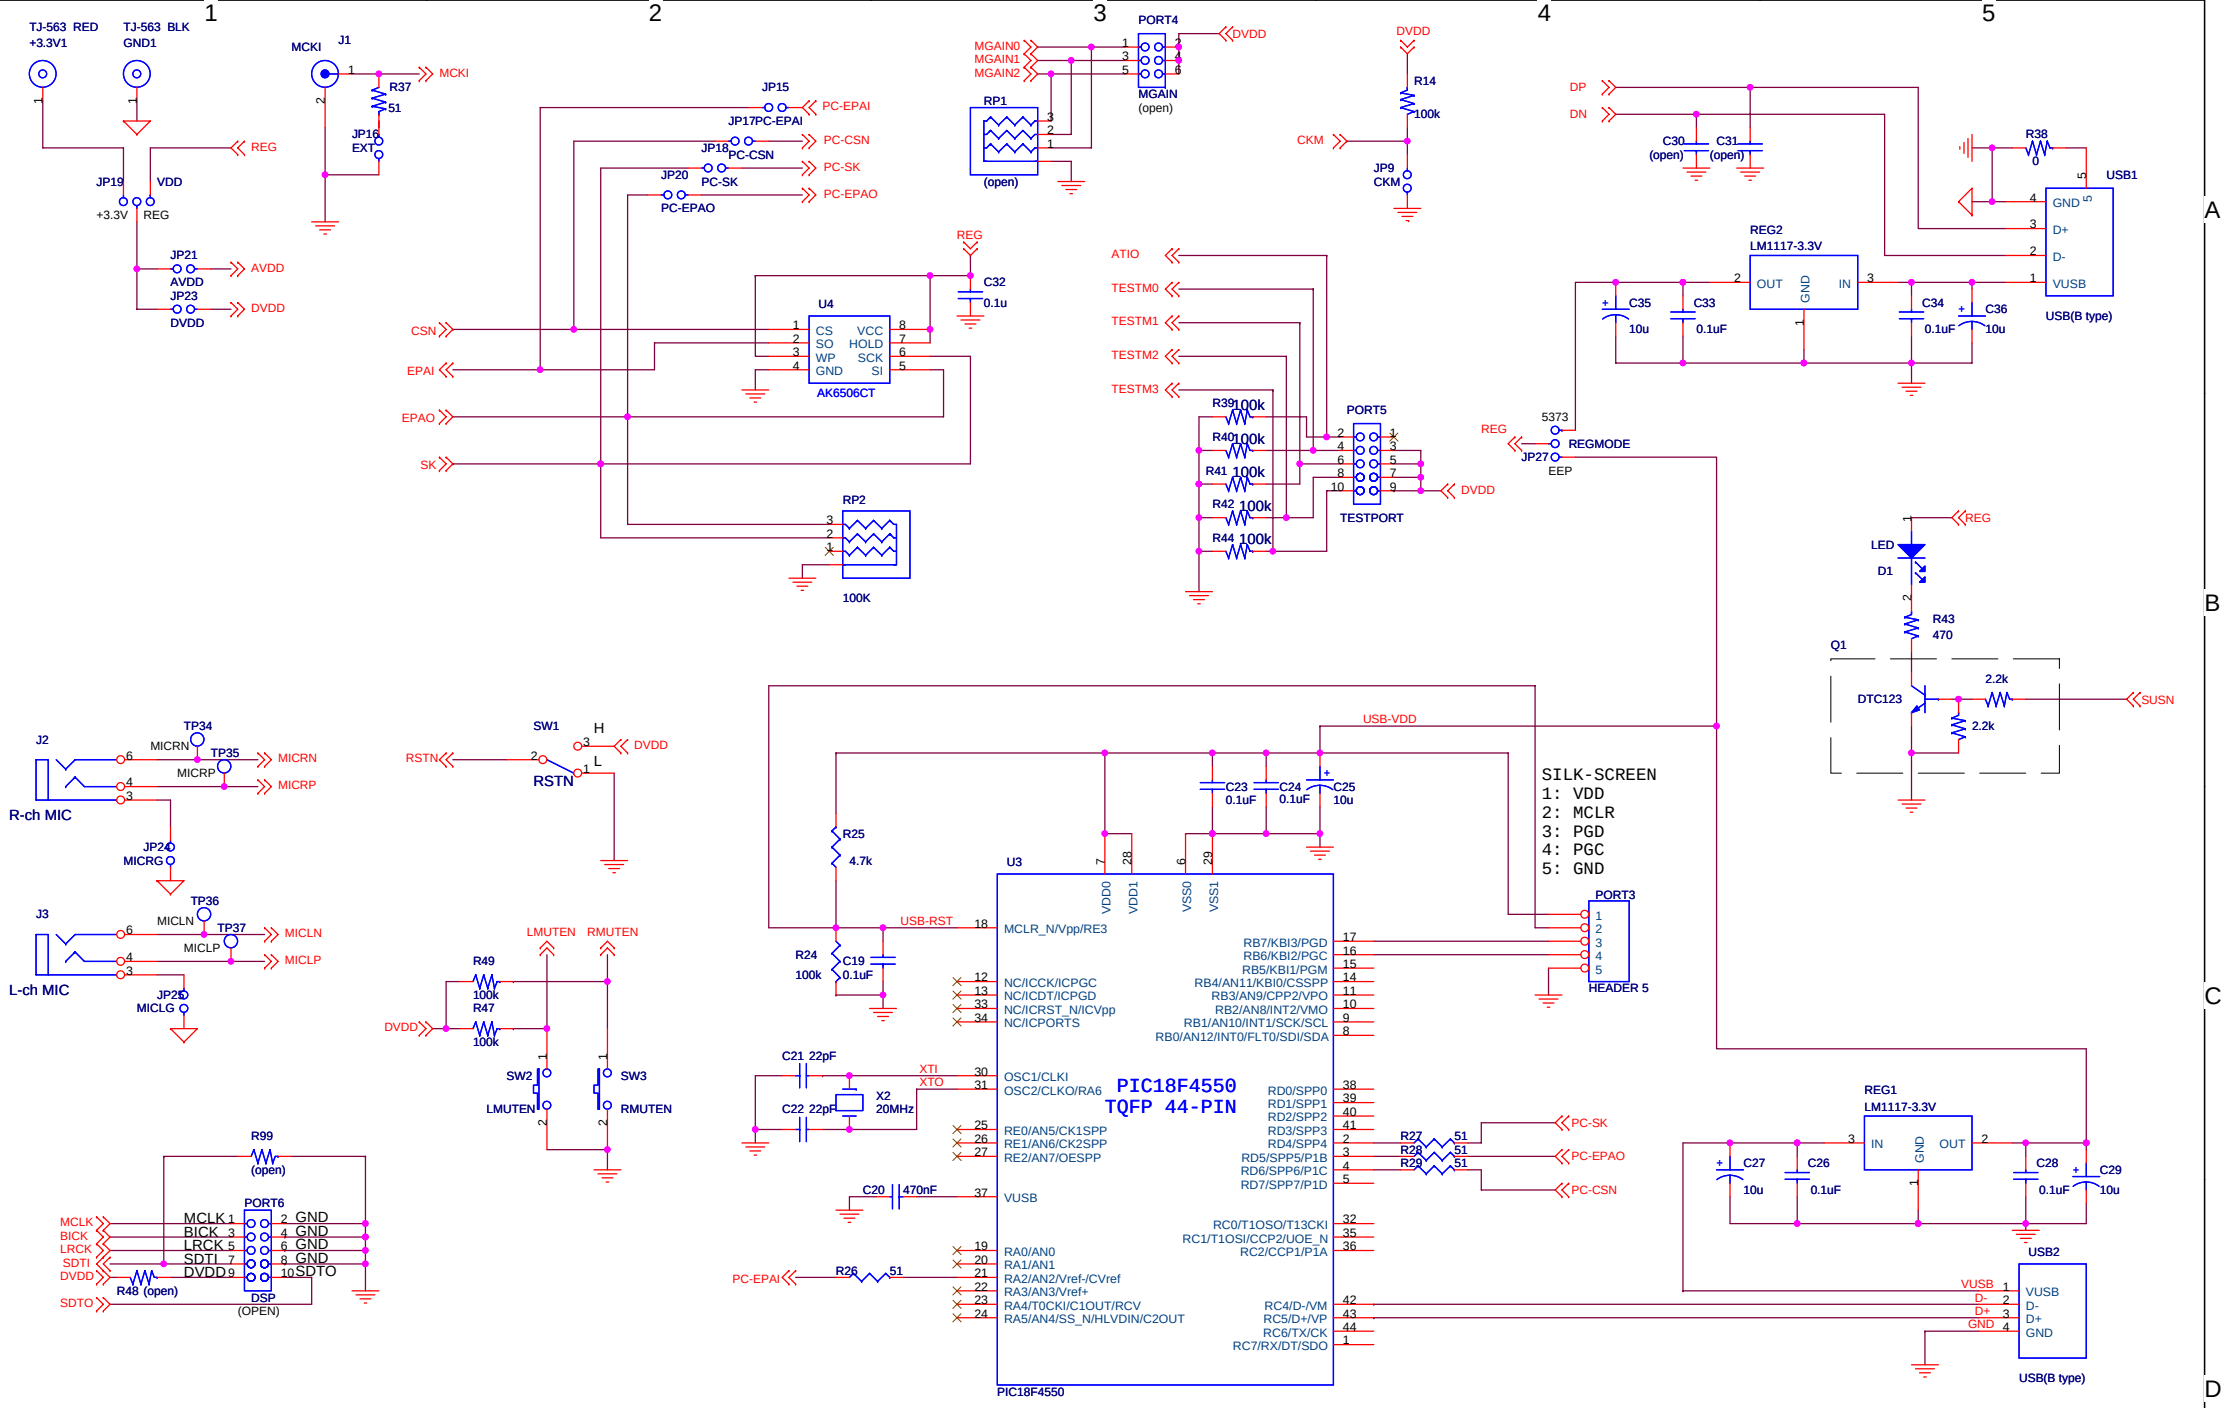

Title	<Title>	AKD5374-A-Main
Size A3	Document Number <Doc>	others
Rev 1		
Date: Friday, April 16, 2010	Sheet 2 of 2	


AKD5373/74-ASUB

部品面シルク図

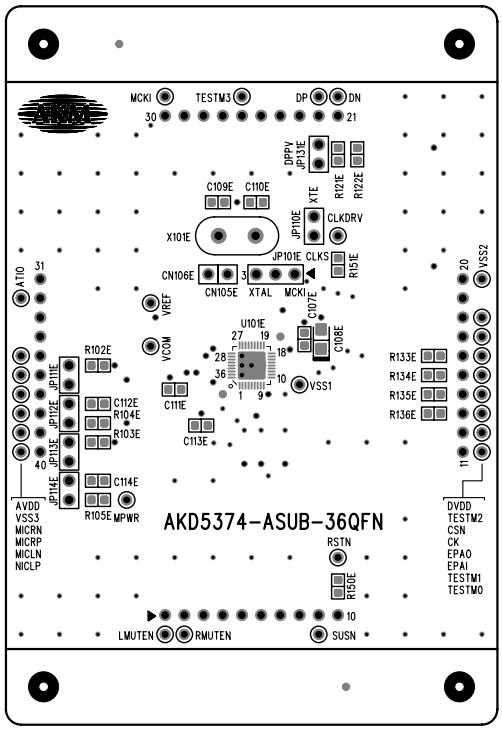


AKD5373/74-ASUB

半田面シルク図

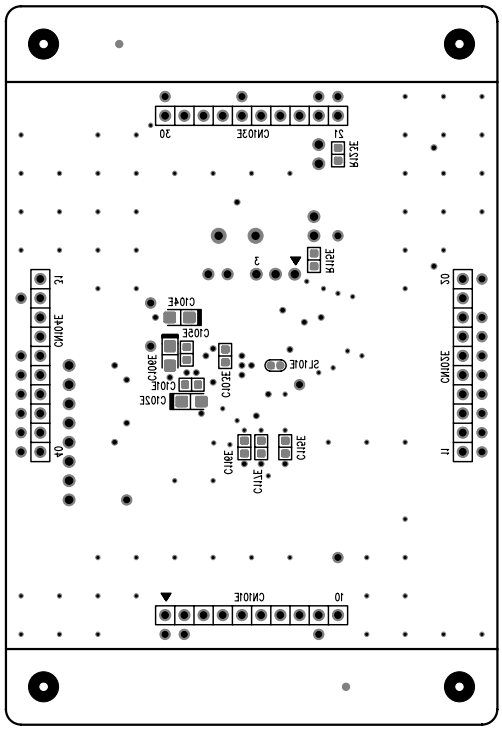


AKD5373/74-ASUB

部品面パターン図 (部品面透視図)

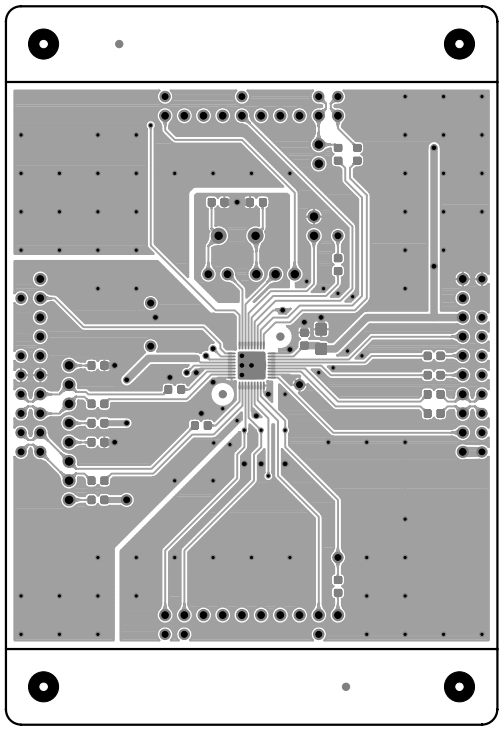


AKD5373/74-ASUB

半田面パターン図

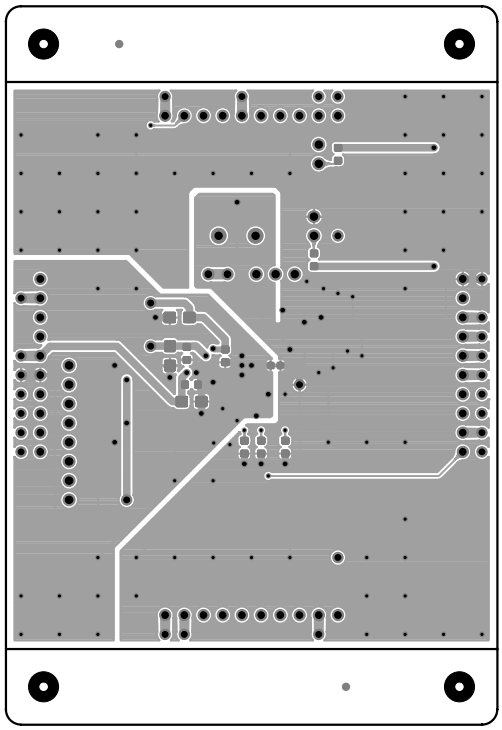

AKD5373/74-A Rev.0(MAIN)


部品面シルク図　　部品面透視図

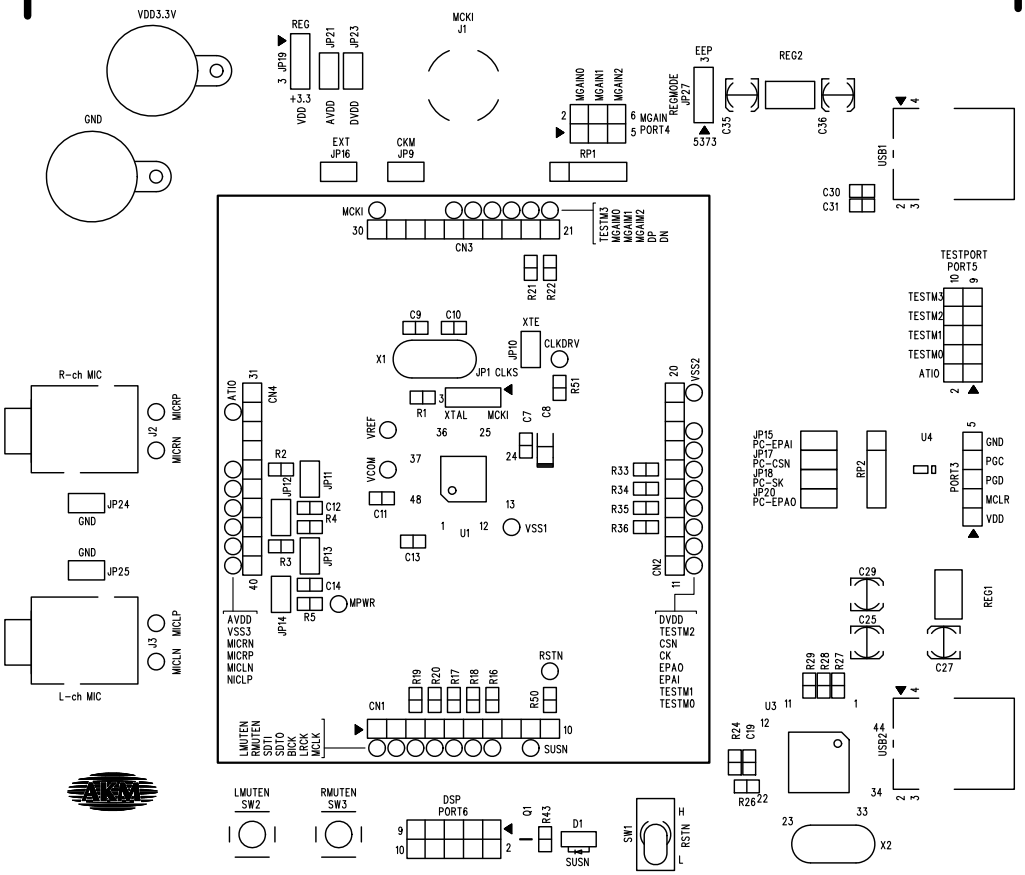

AKD5373-A Rev.0 Evaluation Board


AKD5373/74-A Rev.0(MAIN)

半田面シルク図　　部品面透視図

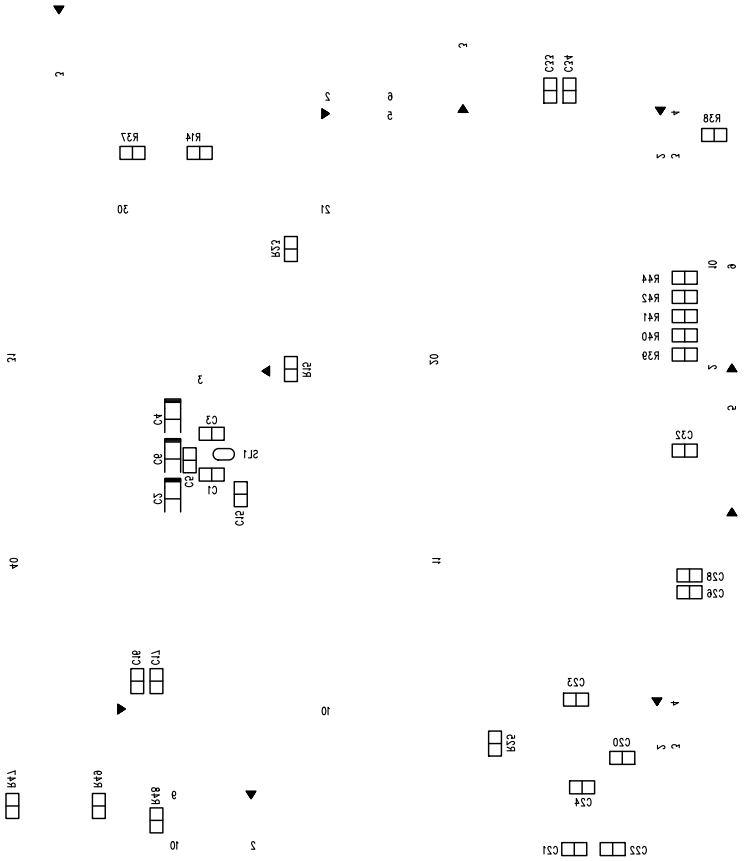


AKD5373/74-A Rev.0(MAIN)

部品面レジスト図　　部品面透視図

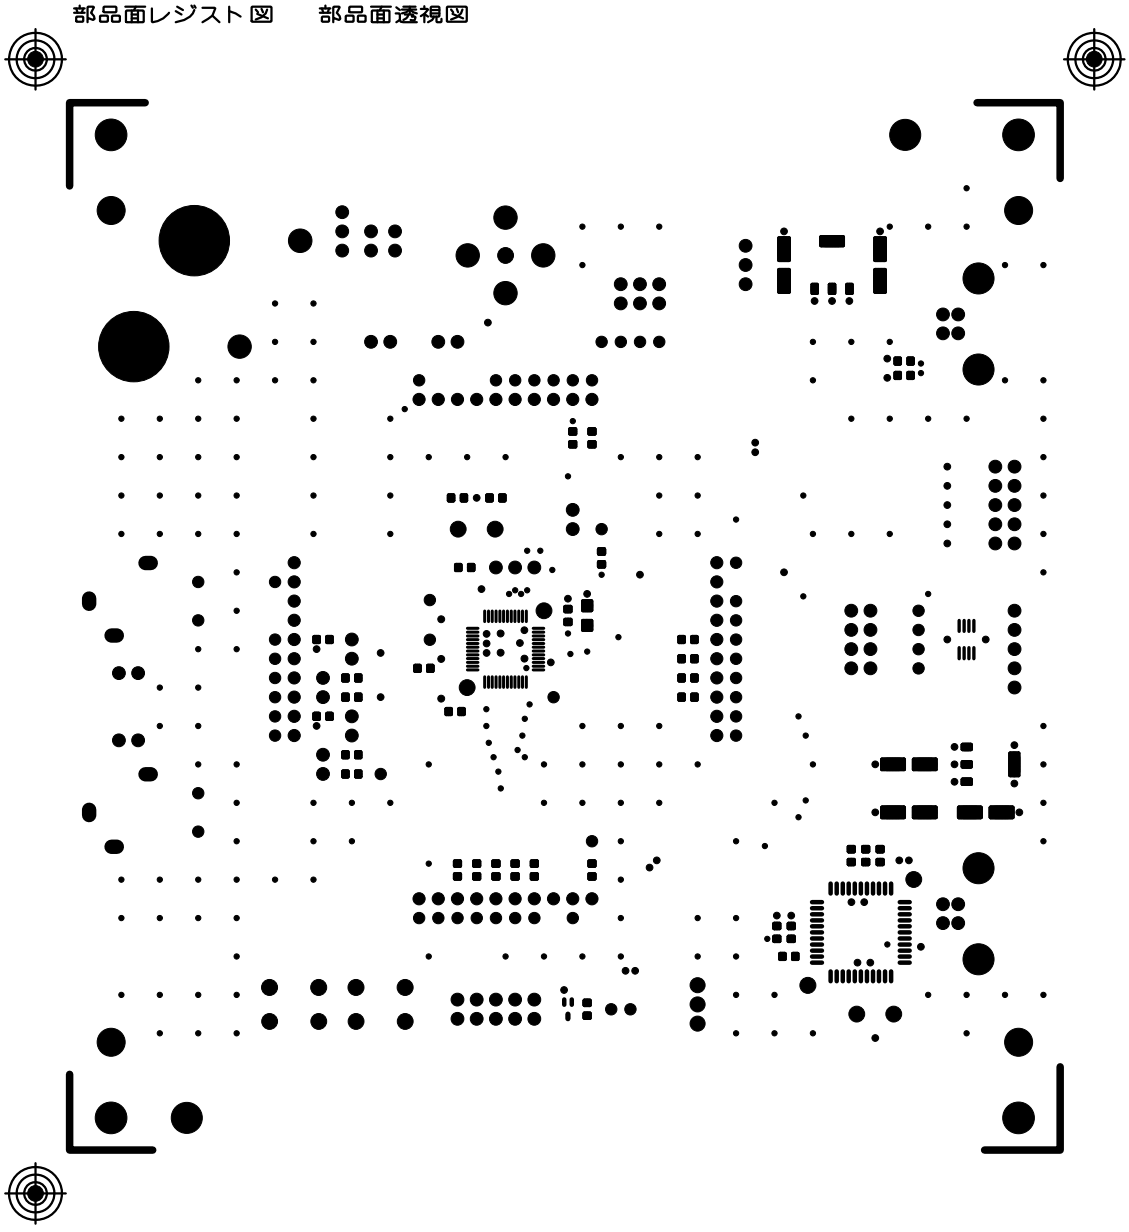


AKD5373/74-A Rev.0(MAIN)

半田面レジスト図　　部品面透視図

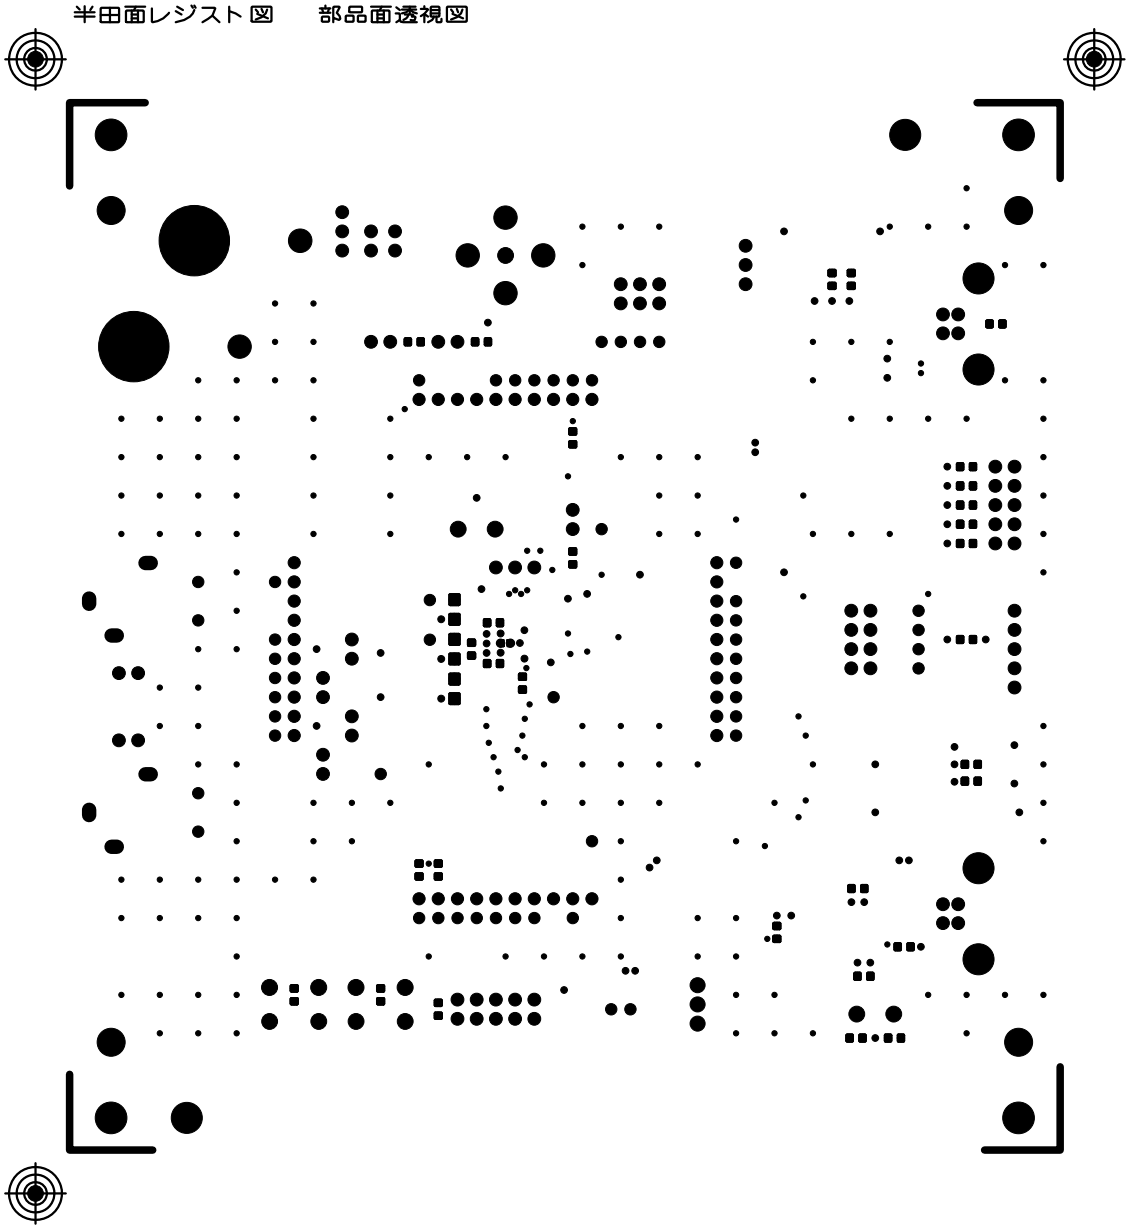

AKD5373/74-A Rev.0(MAIN)

部品面パターン図　　部品面透視図

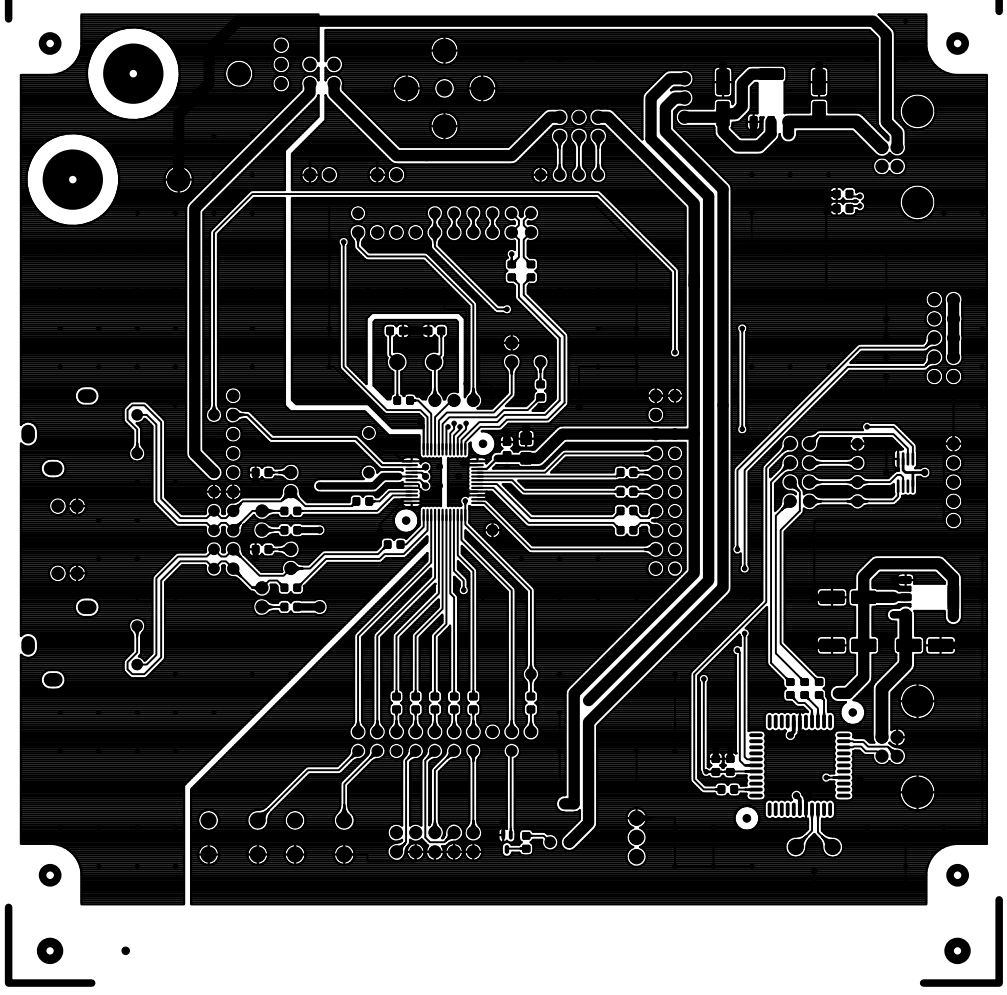

AKD5373/74-A Rev.0(MAIN)

半田面パターン図　　部品面透視図

