
NPN Silicon RF Transistor

- For low noise, high-gain broadband amplifiers at collector currents from 2 mA to 30 mA
- f_T = 8 GHz
  F = 1.2 dB at 900 MHz

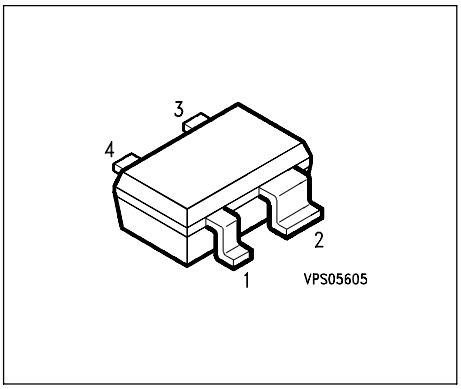

ESD: **E**lectro**s**tatic **d**ischarge sensitive device, observe handling precaution!

Type	Marking	Ordering Code	Pin Configuration				Package
BFP 183W	RHs	Q62702-F1503	1 = E	2 = C	3 = E	4 = B	SOT-343

Maximum Ratings

Parameter	Symbol	Values	Unit
Collector-emitter voltage	V_{CEO}	12	V
Collector-emitter voltage	V_{CES}	20	
Collector-base voltage	V_{CBO}	20	
Emitter-base voltage	V_{EBO}	2	
Collector current	I_C	65	mA
Base current	I_B	5	
Total power dissipation $T_S \leq 58$ °C	P_{tot}	450	mW
Junction temperature	T_j	150	°C
Ambient temperature	T_A	- 65 ... + 150	
Storage temperature	T_{stg}	- 65 ... + 150	
Thermal Resistance			
Junction - soldering point 1)	R_{thJS}	≤ 205	K/W

1) T_S is measured on the collector lead at the soldering point to the pcb.

Electrical Characteristics at T_A = 25°C, unless otherwise specified.

Parameter	Symbol	Values			Unit
		min.	typ.	max.	
DC Characteristics					
Collector-emitter breakdown voltage I_C = 1 mA, I_B = 0	$V_{(BR)CEO}$	12	-	-	V
Collector-emitter cutoff current V_{CE} = 20 V, V_{BE} = 0	I_{CES}	-	-	100	µA
Collector-base cutoff current V_{CB} = 10 V, I_E = 0	I_{CBO}	-	-	100	nA
Emitter-base cutoff current V_{EB} = 1 V, I_C = 0	I_{EBO}	-	-	1	µA
DC current gain I_C = 15 mA, V_{CE} = 8 V	h_{FE}	50	100	200	-

Electrical Characteristics at T_A = 25°C, unless otherwise specified.

Parameter	Symbol	Values			Unit
		min.	typ.	max.	
AC Characteristics					
Transition frequency I_C = 25 mA, V_{CE} = 8 V, f = 500 MHz	f_T	6	8	-	GHz
Collector-base capacitance V_{CB} = 10 V, f = 1 MHz	C_{cb}	-	0.4	0.6	pF
Collector-emitter capacitance V_{CE} = 10 V, f = 1 MHz	C_{ce}	-	0.27	-	
Emitter-base capacitance V_{EB} = 0.5 V, f = 1 MHz	C_{eb}	-	1	-	
Noise figure I_C = 5 mA, V_{CE} = 8 V, Z_S = Z_{Sopt} f = 900 MHz f = 1.8 GHz	F	- -	1.2 2	- -	dB
Power gain [1] I_C = 15 mA, V_{CE} = 8 V, f = 900 MHz Z_S = Z_{Sopt}, Z_L = Z_{Lopt}	G_{ms}	-	21.5	-	
Power gain [2] I_C = 15 mA, V_{CE} = 8 V, f = 1.8 GHz Z_S = Z_{Sopt}, Z_L = Z_{Lopt}	G_{ma}	-	14.5	-	
Transducer gain I_C = 15 mA, V_{CE} = 8 V, Z_S = Z_L = 50 Ω f = 900 MHz f = 1.8 GHz	$\lvert S_{21e}\rvert^2$	- -	17 11	- -	

1) $G_{ms} = |S_{21}/S_{12}|$

2) $G_{ma} = |S_{21}/S_{12}| \, (k-(k^2-1)^{1/2})$


SPICE Parameters (Gummel-Poon Model, Berkeley-SPICE 2G.6 Syntax) :

Transistor Chip Data

IS =	1.0345	fA	BF =	115.98	-	NF =	0.80799	-
VAF =	14.772	V	IKF =	0.14562	A	ISE =	16.818	fA
NE =	1.2149	-	BR =	10.016	-	NR =	0.99543	-
VAR =	3.4276	V	IKR =	0.013483	A	ISC =	1.3559	fA
NC =	0.85331	-	RB =	1.0112	Ω	IRB =	0.43801	mA
RBM =	2.5426	Ω	RE =	1.3435	Ω	RC =	0.20486	Ω
CJE =	23.077	fF	VJE =	1.0792	V	MJE =	0.45354	-
TF =	22.746	ps	XTF =	0.36823	-	VTF =	0.50905	V
ITF =	1.8773	mA	PTF =	0	deg	CJC =	460.11	fF
VJC =	1.1967	V	MJC =	0.3	-	XCJC =	0.053823	-
TR =	1.0553	ns	CJS =	0	fF	VJS =	0.75	V
MJS =	0	-	XTB =	0	-	EG =	1.11	eV
XTI =	3	-	FC =	0.54852	-	TNOM	300	K

All parameters are ready to use, no scalling is necessary.
Extracted on behalf of SIEMENS Small Signal Semiconductors by:
Institut für Mobil-und Satellitenfunktechnik (IMST)
© 1996 SIEMENS AG

Package Equivalent Circuit:

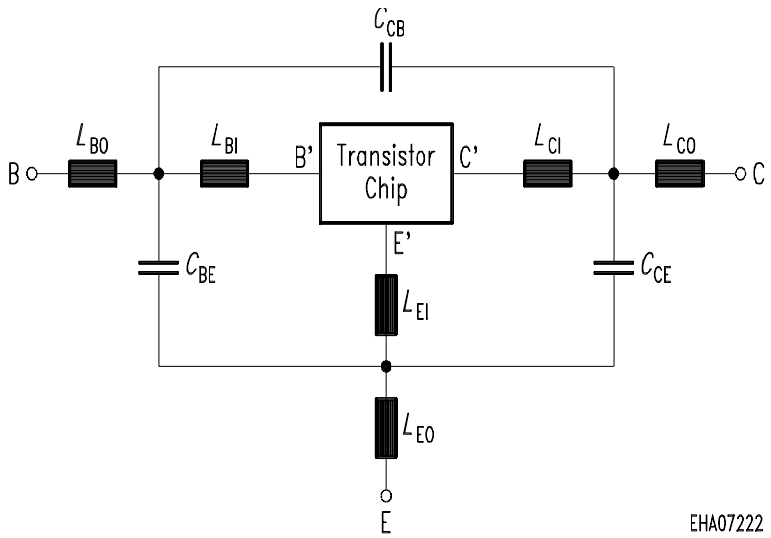


LBI =	0.43	nH
LBO =	0.47	nH
LEI =	0.26	nH
LEO =	0.12	nH
LCI =	0.06	nH
LCO =	0.36	nH
CBE =	68	fF
CCB =	46	fF
CCE =	232	fF

Valid up to 6 GHz


For examples and ready to use parameters please contact your local Siemens distributor or sales office to obtain a Siemens CD-ROM or see Internet: http://www.siemens.de/Semiconductor/products/35/35.htm

Total power dissipation $P_{tot} = f(T_A^*, T_S)$


* Package mounted on epoxy

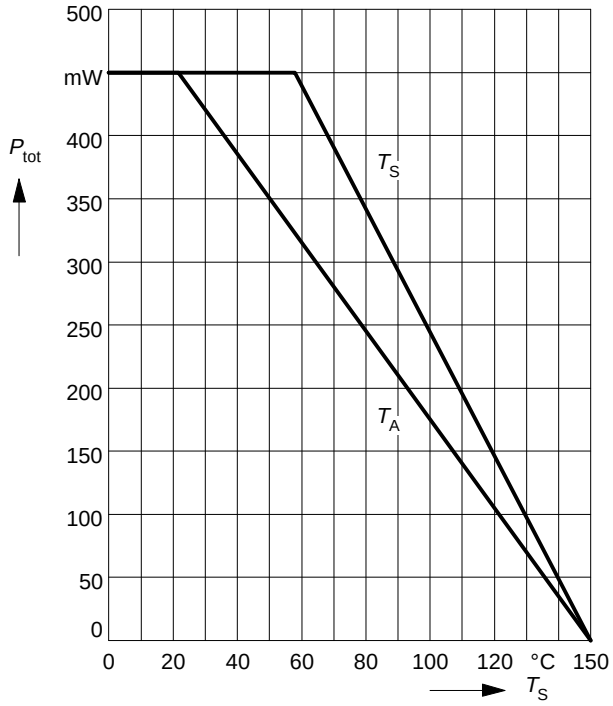


Permissible Pulse Load $R_{thJS} = f(t_p)$

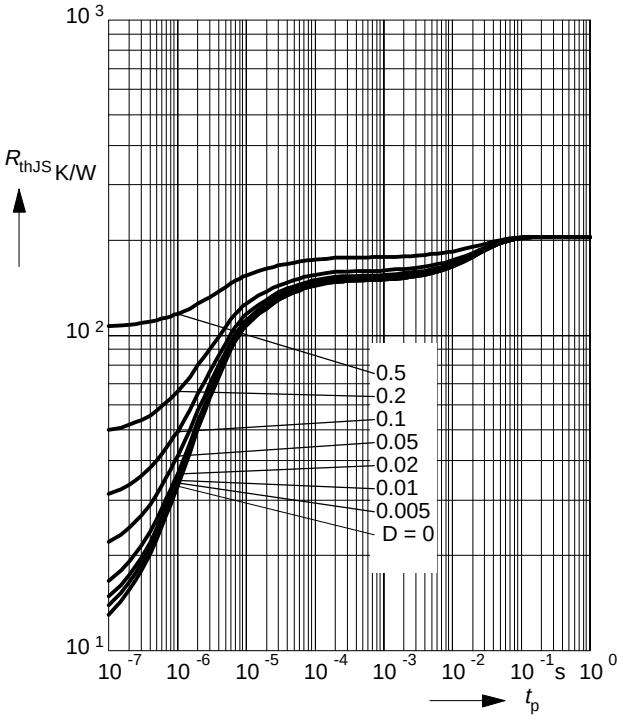

Permissible Pulse Load $P_{totmax}/P_{totDC} = f(t_p)$

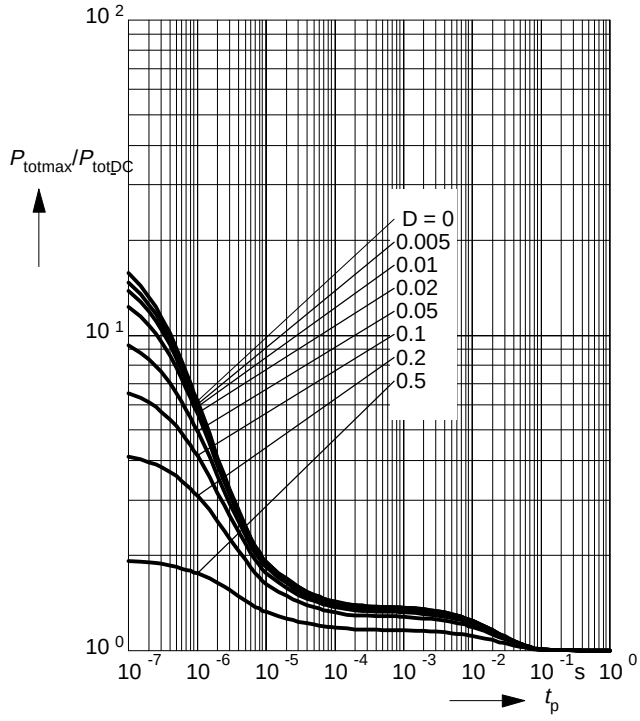


Collector-base capacitance $C_{cb} = f(V_{CB})$
$V_{BE} = v_{be} = 0$, $f = 1$MHz

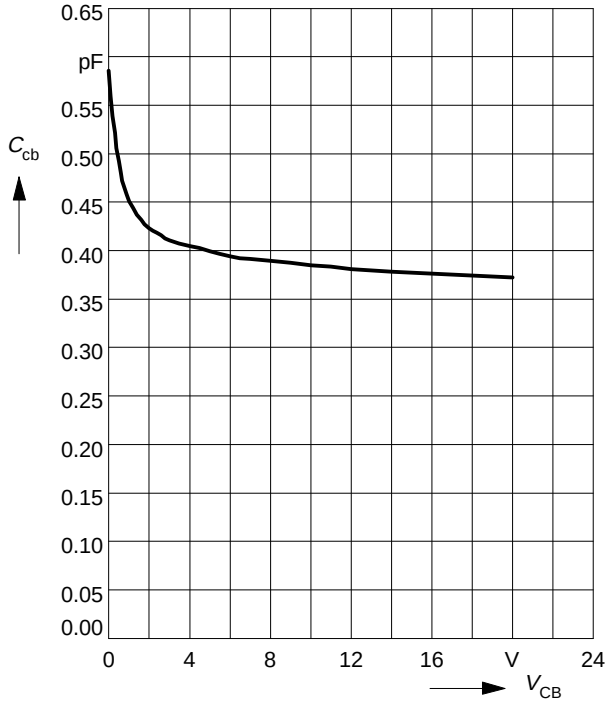


Transition frequency $f_T = f(I_C)$


V_{CE} = Parameter

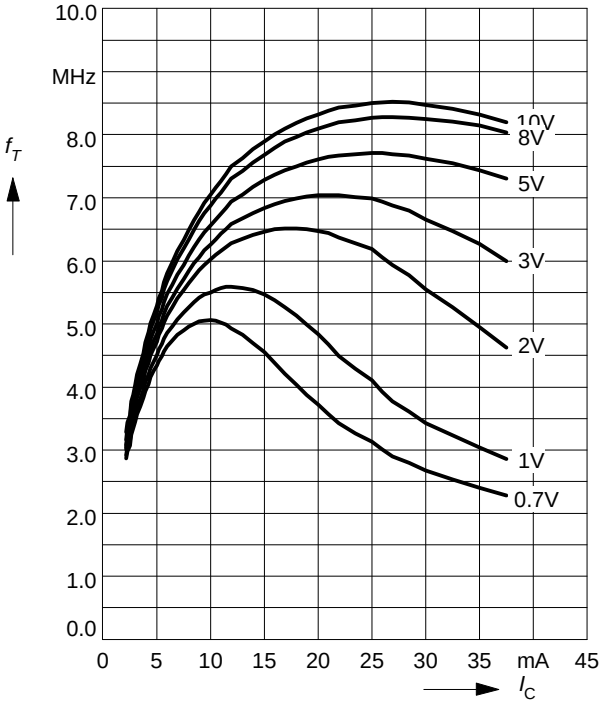


Power Gain G_{ma}, $G_{ms} = f(I_C)$
$f = 0.9$GHz
V_{CE} = Parameter

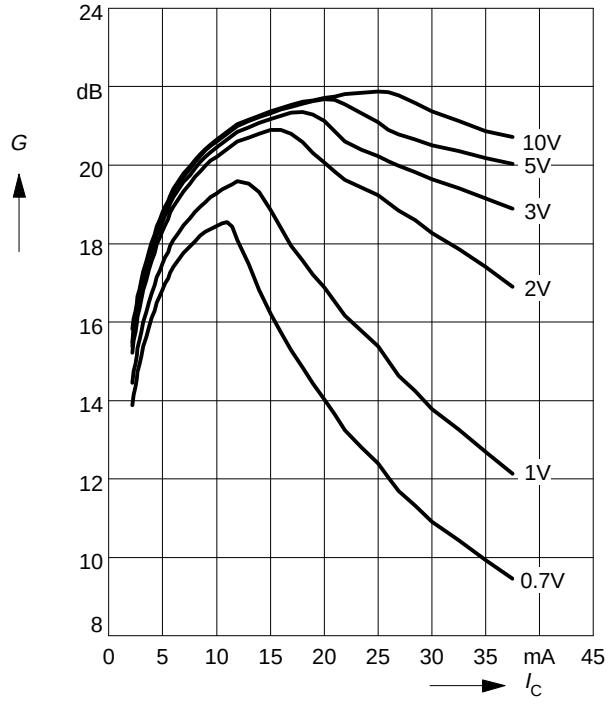


Power Gain G_{ma}, $G_{ms} = f(I_C)$
$f = 1.8$GHz
V_{CE} = Parameter

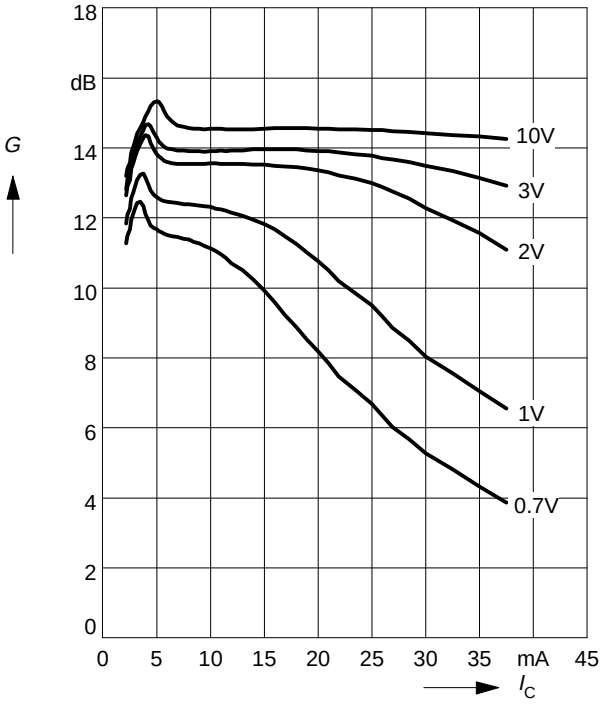

Power Gain G_{ma}, G_{ms} = $f(V_{CE})$:_____
$|S_{21}|^2$ = $f(V_{CE})$:---------
f = Parameter

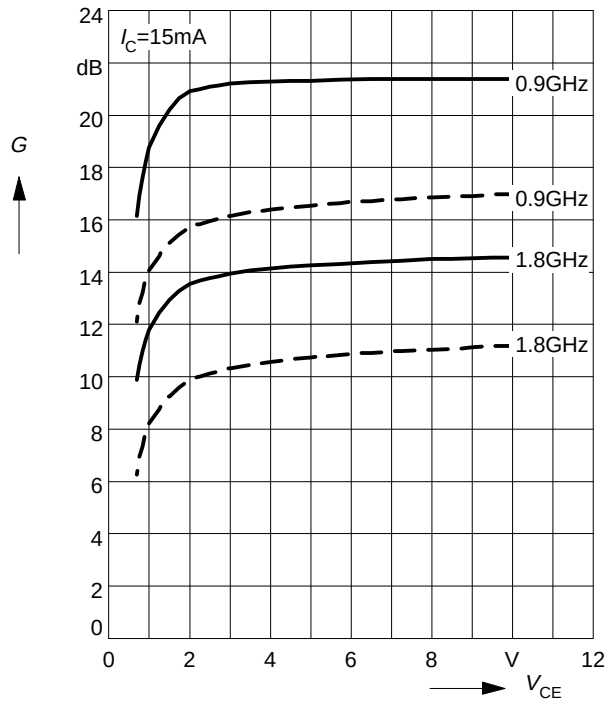


Intermodulation Intercept Point IP_3=$f(I_C)$
(3rd order, Output, Z_S=Z_L=50Ω)
V_{CE} = Parameter, f = 900MHz

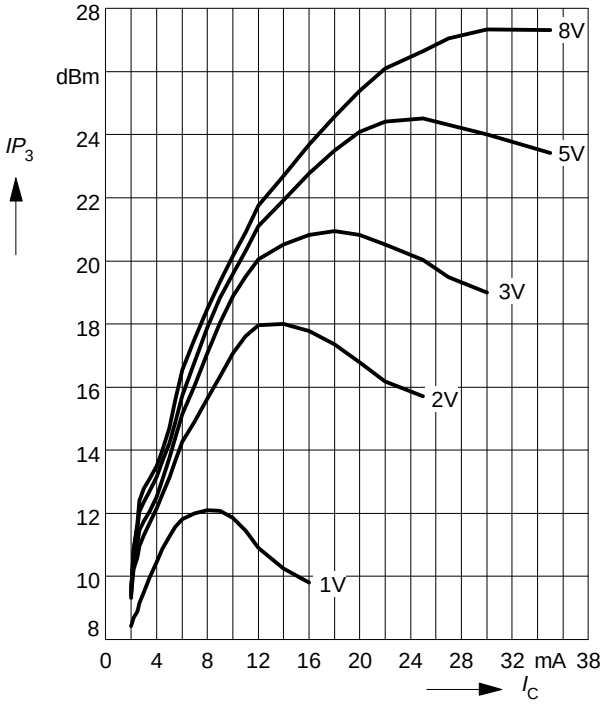

Power Gain G_{ma}, G_{ms} = $f(f)$

V_{CE} = Parameter

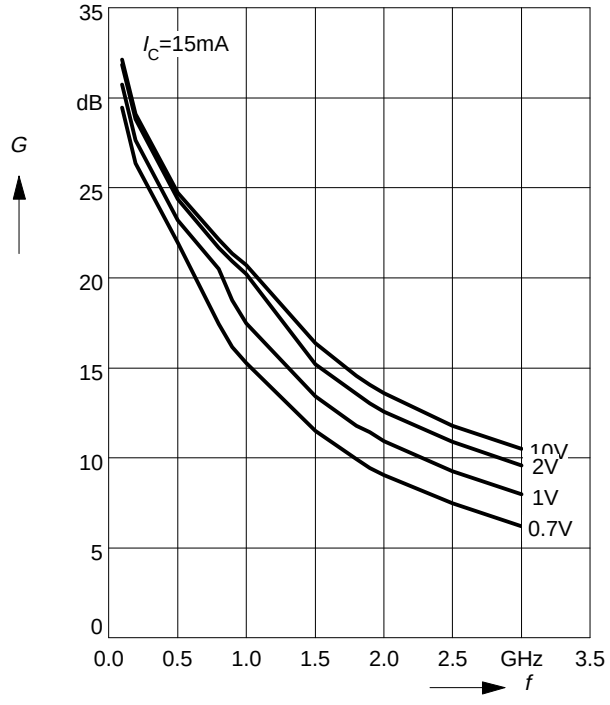

Power Gain $|S_{21}|^2$= $f(f)$

V_{CE} = Parameter

