

LMP91200 Evaluation Board User Guide (551600628-001 RevB)

The LMP91200 evalboard (LMP91200EVAL) can be used as stand-alone or as part of SensorAFE eval platform (refer to SensorAFE platform http://www.national.com/en/industrial/sensing/sensor_afe/tools.html for software and required hardware). It allows configuring the LMP91200 through a 3-wire SPI interface and testing the device with real PH probe. Moreover the eval board allows the connection of external RTD (for instance Pt100, Pt1000).

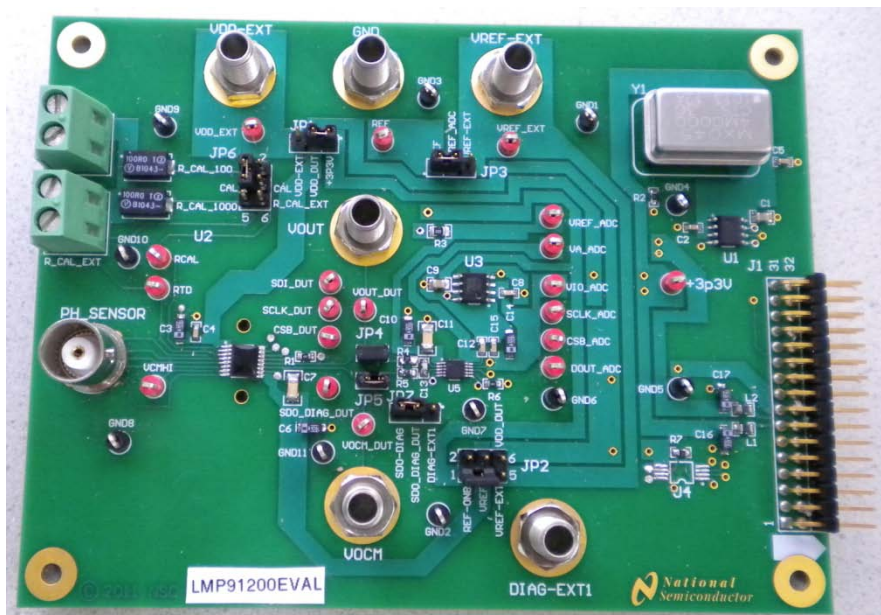


Figure 1 LMP91200EVAL

1. PH probe and RTD connection

The LMP91200 evalboard is not provided with any PH probe and RTD.

The PH probe can be connected to the BNC connector labeled PH_SENSOR. The footprint of PH_SENSOR allows the connection of a Triaxial BNC. So in case of need replace the BNC soldered on the eval board with a triaxial BNC (refer to Schematic section to check the pinout of the Triaxial BNC).

The external RTD can be connected to the RTD_IN connector. The eval board is already provided with two reference resistors labeled R_CAL_100 and R_CAL_1000, but in case of need an external reference resistor can be connected to the T_CAL_EXT connector.

After the connection of the RTD, configure the JP6 according to the table below

Jumper name	Configuration	Description
JP6	1-3 shorted	Reference resistor = 100ohm, when a Pt100 is connected to the board
	3-5 shorted	Reference resistor = 1000ohm, when a Pt1000 is connected to the board
	4-6 shorted	External reference resistor
	one of the three options	

2. Stand alone usage

2.1 JUMPERS

In order to use the LMP91200EVAL in standalone mode, the following jumpers need to be configured as follow:

Jumper name	Configuration	Description
JP1	2-3 shorted	Supply voltage of LMP91200 provided through VDD-EXT banana connector
JP2	3-5 shorted	Connect the external voltage reference to the VREF pin of LMP91200
	4-6 shorted	In case the supply voltage is used as reference. Do not short pin 3-5 of JP2.
JP3	2-3 shorted	External voltage reference provided through VREF-EXT banana connector
JP4	open	Disconnect the VOUT pin of the LMP91200 from the ADC input
JP5	open	Disconnect the VCM pin of the LMP91200 from the ADC input

The SPI bus is accessible from GPSI16 connector. Connect the external microcontroller to GPSI16 as the pin out below. The supply voltage of the SPI signal generated by the microcontroller needs to be equal to the supply voltage applied at VDD-EXT pin.

GPSI16 pin out table

SCLK	Pin 3
MOSI	Pin 7
MISO	Pin 5
CSB	Pin 1
GND	Pin 2

Jumper name	Configuration	Description
JP7	2-3 shorted	Connect the SDO_DIAG pin to the bidirectional MUX U4

The SDO_DIAG pin of the LMP91200 is an I/O digital pin. When the LMP91200 is not in diagnostic mode that pin is an Output pin (MISO of SPI bus), while it becomes an Input pin when the LMP91200 is in diagnostic mode. **Refer to the Datasheet of the LMP91200 for further details.**

2.2 POWER SUPPLY

Connect a supply voltage (1.8V to 5.5V) between VDD-EXT and GND banana plugs.

2.3 VOLTAGE REFERENCE

Connect a supply voltage (1.8V to 5.5V) between VREF-EXT and GND banana plugs. The Reference voltage cannot be bigger than the voltage applied at VDD-EXT.

2.4 CONFIGURATION OF THE LMP91200

Before configuring the LMP91200, be sure that the jumpers have been configured according the previous tables, the PH probe and the RTD are connected to the board, the power supplies are connected to the board and they are powered on, the microcontroller for SPI is connected to the board. **Refer to the Datasheet of the LMP91200 for timing information and register meaning.**

3. Using as part of Sensor AFE evaluation platform

3.1 EVALBOARDS CONNECTION

In this case the LMP91200EVAL is part of the evaluation platform (LMP91000EVAL + SPIO4 board), the 2 boards need to be connected as follow:

- LMP91200EVAL through the SPIO-GPSI16 connector (note the white arrow on the boards to align the boards);

Then the SPIO4 needs to be connected to a PC via USB cable

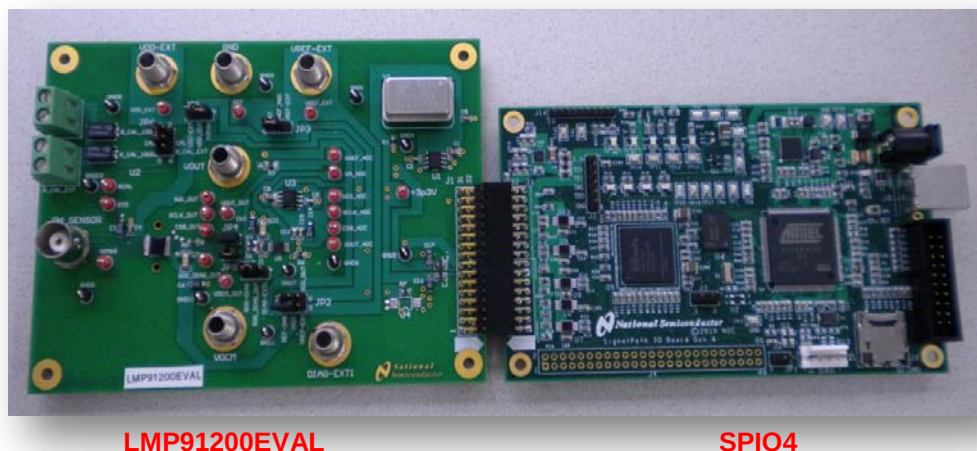


Figure 2 Sensor AFE evaluation platform

3.2 JUMPERS

In order to use the LMP91200EVAL in the evaluation platform the following jumpers need to be configured as follow:

Jumper name	Configuration	Description
JP1	1-2 shorted	Supply voltage (3.3V) of LMP91200 provided by SPIO4 board
JP2	1-3 shorted	Connect the onboard voltage reference (2.5V) to the VREF pin of LMP91200
JP3	1-2 shorted	Voltage reference provided by onboard Voltage reference
JP4	shorted	Connect the VOUT pin of the LMP91200 to the ADC input
JP5	shorted	Connect the VCM pin of the LMP91200 to the ADC input
JP7	2-3 shorted	Connect the SDO_DIAG pin to the bidirectional MUX U4

3.3 POWER SUPPLY

All the required power supplies are provided by the SPIO4 board once connected to a PC via USB cable.

3.4 VOLTAGE REFERENCE

The voltage reference is provided by the SPIO4 board once connected to a PC via USB cable.

3.5 CONFIGURATION OF THE LMP91200

Refer to LMP91200 Datasheet for further information.

4. Connectors, Jumpers, Test Point

4.1 POWER SUPPLY

VDD-EXT	banana plug for the positive power supply of the LMP91200 and bidirectional MUX (U4).
GND	banana plug for ground connection.

4.2 SIGNAL CONNECTORS

Reference Signals

PH_SENSOR	BNC connector (alternatively remove this connector and solder a triaxial BNC) to connect PH probe.
DIAG-EXT1	Banana connector to provide diagnostic pulses
R_CAL_EXT	Terminal block to connect external calibration resistor
R_RTD_IN	Terminal block to connect external RTD

Output signals

VOUT	Banana plug for the output of the LMP91200.
VOCM	Banana plug for the output common mode voltage of the LMP91200.

4.3 JUMPERS

The evalboard has 7 jumpers

JP1	It is a 3 pin header which selects the supply voltage sources.
JP2	It is a 6 pin header which multiplexes the Voltage reference sources to the VREF pin of the LMP91200.
JP3	It is a 3 pin header which selects the voltage reference source.
JP4	It is a simple jumper which connect the VOUT pin of the LMP91200 to the +IN input of the ADC (ADC141S628).
JP5	It is a simple jumper which connect the VOCM pin of the LMP91200 to the –IN input of the ADC (ADC141S628).
JP6	It is a 6pin header which multiplexes the calibration resistors to the CAL pin of the LMP91200.
JP7	It is 3 pin header which select the source of the Diagnostic pulses

4.4 TEST POINTS

The test points are connected as follows.

VDD_EXT	External supply voltage
GND1 to GND10	Ground
+3p3V	Supply voltage provided by SPIO4 (3.3V)
RTD	RTD pin of LMP91200
RCAL	RCAL pin of LMP91200
VCMHI	VCMHI pin of LMP91200
VREF-EXT	External Voltage supply
VOUT_DUT	VOUT pin of LMP91200
VOCM_DUT	VOCM pin of LMP91200


REF	Onboard Voltage reference
VREF_ADC	VREF pin of U5 (ADC141S628)
VA_ADC	Supply voltage of U5 (ADC141S628)
VIO_ADC	Digital supply voltage of U5 (ADC141S628)
SDI_DUT	Data in of LMP91200
SCLK_DUT	Clock of LMP91200
CSB_DUT	Chip select of LMP91200
SDO_DIAG_DUT	Data out/DIAGNOSTIC of LMP91200
SCLK_ADC	Clock of ADC
DOUT_ADC	Data out of ADC
CSB_ADC	Chip select of ADC

4.5 SPECIAL CONNECTORS

For NSC's data capture boards


GPSI16	16 pin header for USI2, SPIO4 and ADC1x1S626 boards interface
---------------	---

5. Schematic

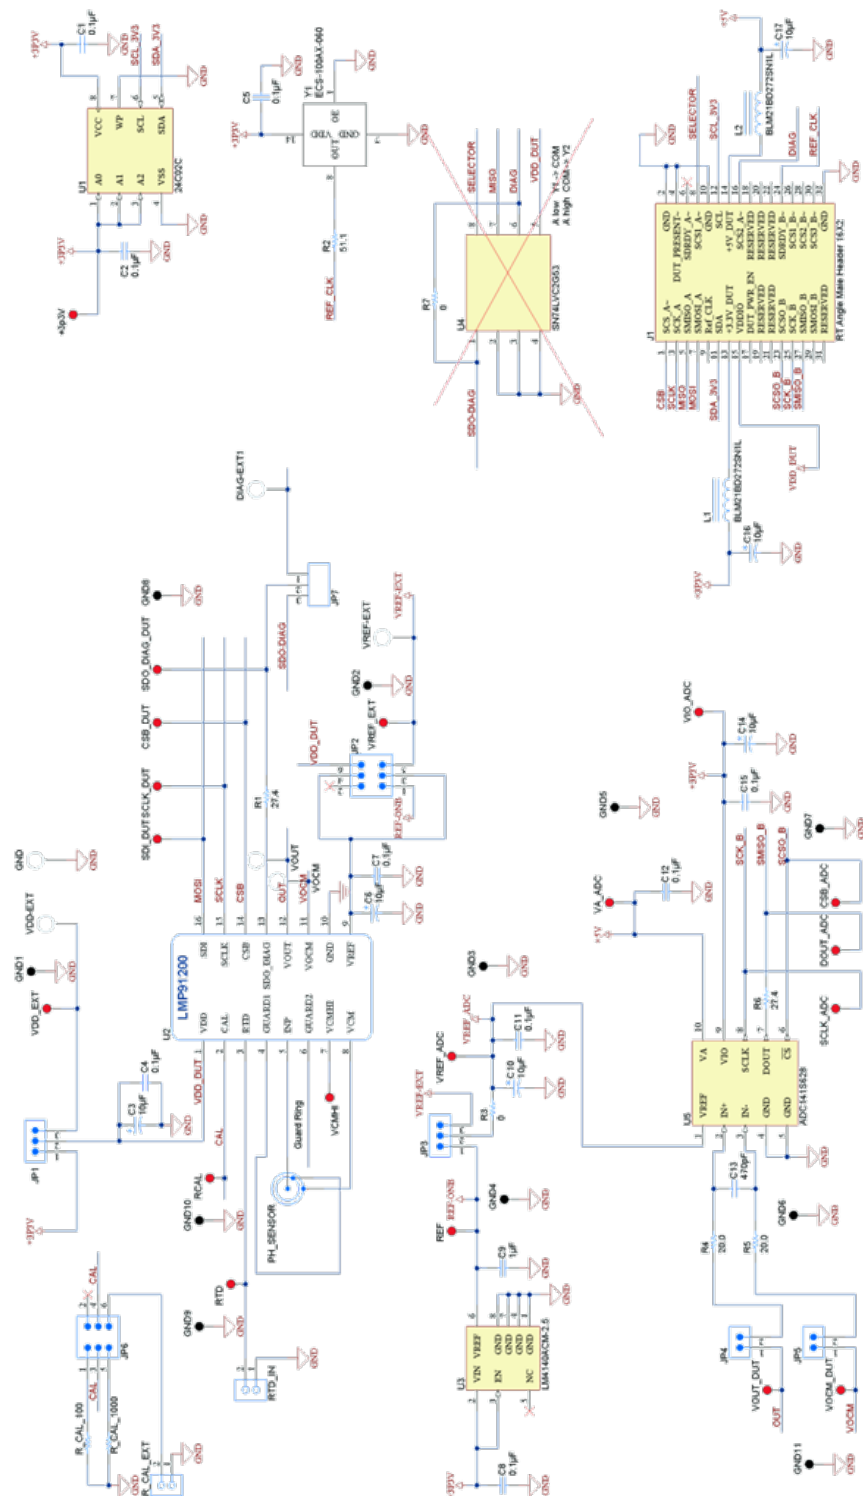


6. Board Layout

6.1 Top Layer

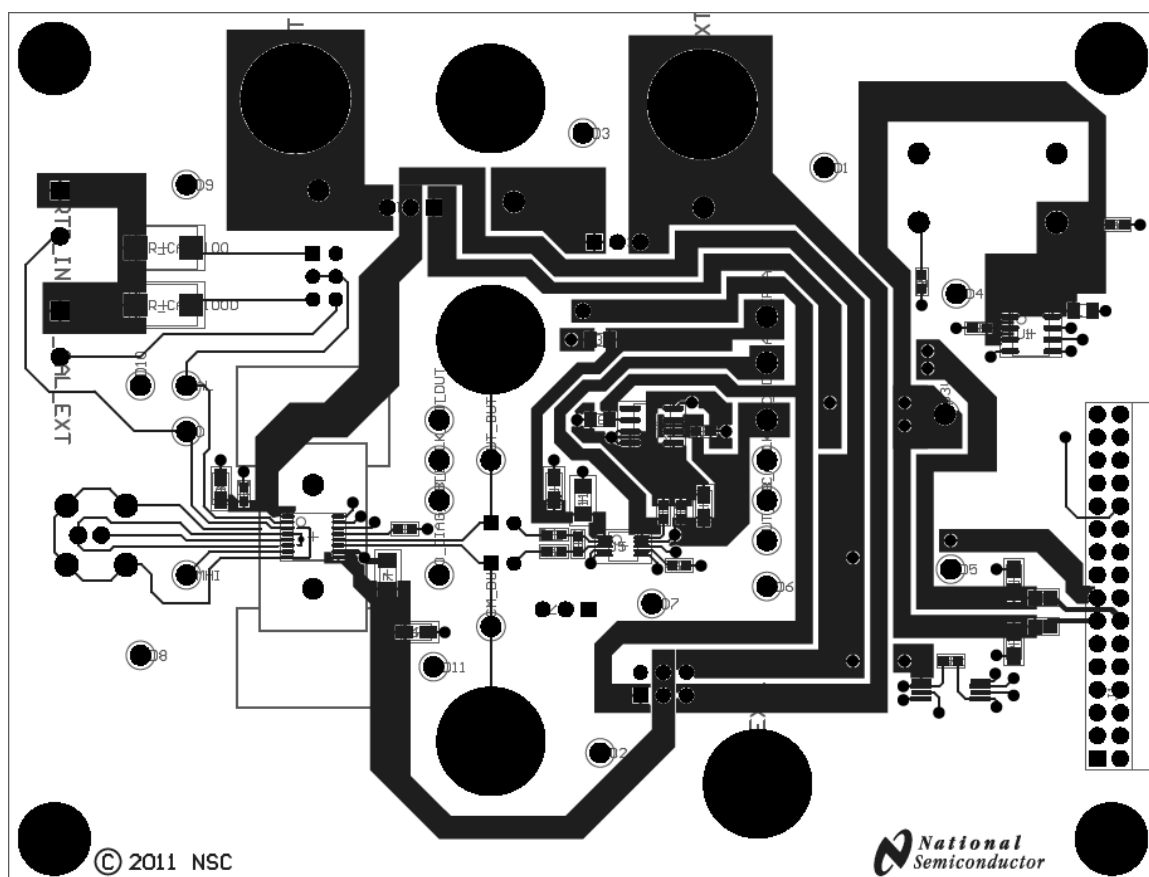

6.2 Bottom Layer

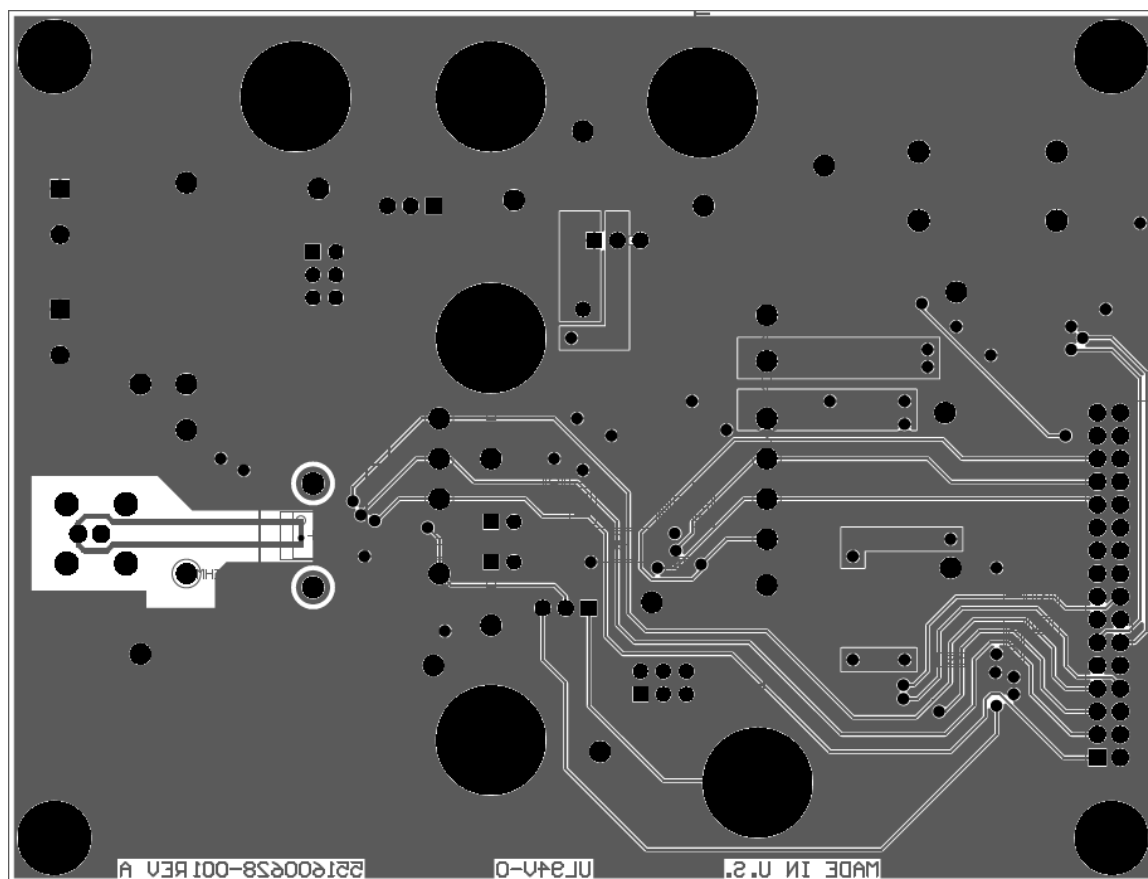

7. BOM

Item	Designator	Description	Manufacturer	Part Number	Quantity
1	+3p3V, CSB_ADC, CSB_DUT, DOUT_ADC, RCAL, REF, RTD, SCLK_ADC, SCLK_DUT, SDI_DUT, SDO_DIAG_DUT , VA_ADC, VCMHI, VDD_EXT, VIO_ADC, VOCM_DUT, VOUT_DUT, VREF_ADC, VREF_EXT	Test Point, TH, Compact, Red	Keystone Electronics	5005	19
2	C1	CAP, CERM, 0.1uF, 25V, +/-10%, X7R, 0805	AVX	08053C104KAT2A	1
3	C2, C4, C5, C8, C12, C15	CAP, CERM, 0.1uF, 16V, +/-5%, X7R, 0603	AVX	0603YC104JAT2A	6
4	C3, C6, C10, C14, C16, C17	CAP, TANT, 10uF, 10V, +/- 20%, 3.4 ohm, 3216-18 SMD	Vishay- Sprague	293D106X0010A2TE3	6
5	C7, C11	CAP, CERM, 0.1uF, 100V, +/-5%, X7R, 1206	AVX	12061C104JAT2A	2
6	C9	CAP, CERM, 1uF, 10V, +/- 10%, X7R, 0805	AVX	0805ZC105KAT2A	1
7	C13	CAP, CERM, 100pF, 50V, +/-5%, C0G/NP0, 0603	AVX	06035A101JAT2A	1
8	DIAG-EXT1, GND, VDD-EXT, VOCM, VOUT, VREF-EXT	Standard Banana Jack, Uninsulated, 15A	Johnson Components	108-0740-001	6
9	GND1, GND2, GND3, GND4, GND5, GND6, GND7, GND8, GND9, GND10, GND11	Test Point, TH, Compact, Black	Keystone Electronics	5006	11
10	N/A	BUMPON HEMISPHERE .44X.20 BLACK	3M	SJ-5003 (BLACK)	4
11	J1	SPIO-GPSI16 Header, 16- Pin, Dual row, Right Angle	Sullins Connector Solutions	PBC36DGAN	1
12	JP1, JP3	Header, TH, 100mil, 1x3, Gold plated, 230 mil above insulator	Samtec Inc.	TSW-103-07-G-S	2
13	JP2, JP6	Header, TH, 100mil, 3x2, Gold plated, 230 mil above insulator	Samtec Inc.	TSW-103-07-G-D	2
14	JP4, JP5	Header, TH, 100mil, 2x1, Gold plated, 230 mil above insulator	Samtec Inc.	TSW-102-07-G-S	2
15	JP7	Header, TH, 100mil, 1x3, Gold plated, 230 mil above	Sullins Electronics	PBC03SAAN	1

		insulator			
16	L1, L2	Ferrite, Chip, 200mA, .080 ohm, SMD	Wurth Elektronik eiSos	BLM21BD272SN1L	2
17	PH_SENSOR	Triax BNC, Right Angle, 3 Lug, Trompeter 70 series	Trompeter-Emerson	CBJR70A	1
18	R1, R6	RES, 27.4 ohm, 1%, 0.1W, 0603	Vishay-Dale	CRCW060327R4FKE A	2
19	R2	RES, 51.1 ohm, 1%, 0.1W, 0603	Vishay-Dale	CRCW060351R1FKE A	1
20	R3	RES, 0 ohm, 5%, 0.125W, 0805	Vishay-Dale	CRCW08050000Z0EA	1
21	R4, R5	RES, 1K ohm, 1%, 0.1W, 0603	Vishay-Dale	CRCW06031K00FKE A	2
22	R7	RES, 0 ohm, 5%, 0.1W, 0603	Rohm	MCR03EZPJ000	1
23	R_CAL_100	SMR3DZ Foil resistor,600mW,0.01%,100 R	VISHAY	Y1746100R000T9R	3
24	R_CAL_1000	SMR3DZ Foil resistor,600mW,0.01%,1K		Y17461K00000T9R	
25	R_CAL_EXT, RTD_IN	Conn Term Block, 2POS, 5.08mm PCB	Phoenix Contact	1715721	2
26	U3	Precision Micropower Low Dropout Voltage Reference	National Semiconductor	LM4140ACM-2.5	1
27	U4	N/P			
28	U5	14-Bit, 50 to 250 kSPS, Differential Input, MicroPower ADC, 10-pin Mini SOIC, Pb-Free	National Semiconductor	ADC141S628	1
29	Y1	Osc 4.000Mhz 5.0V Full Size	CTS	MXO45-3C-4M0000	1
30	U1	2K 5.0V I2C Serial EEPROM	Microchip	24C02C/SN	1
31	U2	Configurable AFE for Low-Power Chemical Sensing Applications	National Semiconductor	LMP91200	1

Notes

BY USING THIS PRODUCT, YOU ARE AGREEING TO BE BOUND BY THE TERMS AND CONDITIONS OF NATIONAL SEMICONDUCTOR'S END USER LICENSE AGREEMENT. DO NOT USE THIS PRODUCT UNTIL YOU HAVE READ AND AGREED TO THE TERMS AND CONDITIONS OF THAT AGREEMENT. IF YOU DO NOT AGREE WITH THEM, CONTACT THE VENDOR WITHIN TEN (10) DAYS OF RECEIPT FOR INSTRUCTIONS ON RETURN OF THE UNUSED PRODUCT FOR A REFUND OF THE PURCHASE PRICE PAID, IF ANY.

The LMP91200EVAL Evaluation Board is intended for product evaluation purposes only and is not intended for resale to end consumers, is not authorized for such use and is not designed for compliance with European EMC Directive 89/336/EEC, or for compliance with any other electromagnetic compatibility requirements.

National Semiconductor Corporation does not assume any responsibility for use of any circuitry or software supplied or described. No circuit patent licenses are implied.

LIFE SUPPORT POLICY

NATIONAL'S PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE EXPRESS WRITTEN APPROVAL OF THE PRESIDENT OF NATIONAL SEMICONDUCTOR CORPORATION. As used herein:

1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into the body, or (b) support or sustain life, and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in a significant injury to the user.
2. A critical component is any component in a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

National Semiconductor Corporation Americas Tel: 1-800-272-9959 Fax: 1-800-737-7018 Email: support@nsc.com	National Semiconductor Europe Fax: +49 (0) 1 80-530 85 86 Email: europe.support@nsc.com Deutsch Tel: +49 (0) 699508 6208 English Tel: +49 (0) 870 24 0 2171 French Tel: +49 (0) 141 91 8790	National Semiconductor Asia Pacific Customer Response Group Tel: 65-2544466 Fax: 65-2504466 Email: sea.support@nsc.com	National Semiconductor Japan Ltd. Tel: 81-3-5639-7560 Fax: 81-3-5639-7507
www.national.com			

National does not assume any responsibility for any circuitry described, no circuit patent licenses are implied and National reserves the right at any time without notice to change said circuitry and specification.

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

Products

Audio	www.ti.com/audio
Amplifiers	amplifier.ti.com
Data Converters	dataconverter.ti.com
DLP® Products	www.dlp.com
DSP	dsp.ti.com
Clocks and Timers	www.ti.com/clocks
Interface	interface.ti.com
Logic	logic.ti.com
Power Mgmt	power.ti.com
Microcontrollers	microcontroller.ti.com
RFID	www.ti-rfid.com
OMAP Mobile Processors	www.ti.com/omap
Wireless Connectivity	www.ti.com/wirelessconnectivity

Applications

Automotive and Transportation	www.ti.com/automotive
Communications and Telecom	www.ti.com/communications
Computers and Peripherals	www.ti.com/computers
Consumer Electronics	www.ti.com/consumer-apps
Energy and Lighting	www.ti.com/energy
Industrial	www.ti.com/industrial
Medical	www.ti.com/medical
Security	www.ti.com/security
Space, Avionics and Defense	www.ti.com/space-avionics-defense
Video and Imaging	www.ti.com/video

TI E2E Community Home Page

e2e.ti.com

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2012, Texas Instruments Incorporated