
NPN Silicon RF Transistor

- For low noise, high-gain amplifiers up to 2GHz
- For linear broadband amplifiers
- f_T = 8GHz
  F = 1.3dB at 900MHz

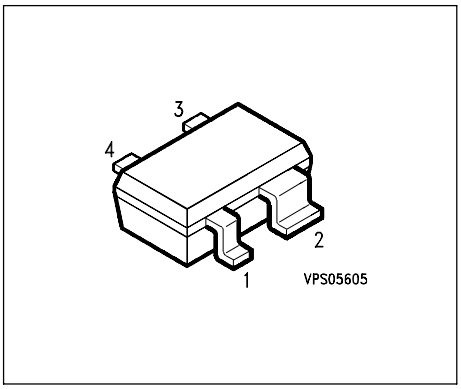

ESD: **E**lectro**s**tatic **d**ischarge sensitive device, observe handling precaution!

Type	Marking	Ordering Code	Pin Configuration				Package
BFP 193W	RCs	Q62702-F1577	1 = E	2 = C	3 = E	4 = B	SOT-343

Maximum Ratings

Parameter	Symbol	Values	Unit
Collector-emitter voltage	V_{CEO}	12	V
Collector-emitter voltage	V_{CES}	20	
Collector-base voltage	V_{CBO}	20	
Emitter-base voltage	V_{EBO}	2	
Collector current	I_C	80	mA
Base current	I_B	10	
Total power dissipation $T_S \leq 66$ °C	P_{tot}	 580	mW
Junction temperature	T_j	150	°C
Ambient temperature	T_A	- 65 ... + 150	
Storage temperature	T_{stg}	- 65 ... + 150	
Thermal Resistance			
Junction - soldering point [1)]	R_{thJS}	≤ 145	K/W

1) T_S is measured on the collector lead at the soldering point to the pcb.

Electrical Characteristics at T_A = 25°C, unless otherwise specified.

Parameter	Symbol	Values			Unit
		min.	typ.	max.	
DC Characteristics					
Collector-emitter breakdown voltage I_C = 1 mA, I_B = 0	$V_{(BR)CEO}$	12	-	-	V
Collector-emitter cutoff current V_{CE} = 20 V, V_{BE} = 0	I_{CES}	-	-	100	µA
Collector-base cutoff current V_{CB} = 10 V, I_E = 0	I_{CBO}	-	-	100	nA
Emitter-base cutoff current V_{EB} = 1 V, I_C = 0	I_{EBO}	-	-	1	µA
DC current gain I_C = 30 mA, V_{CE} = 8 V	h_{FE}	50	100	200	-

Electrical Characteristics at T_A = 25°C, unless otherwise specified.

Parameter	Symbol	Values			Unit
		min.	typ.	max.	
AC Characteristics					
Transition frequency I_C = 50 mA, V_{CE} = 8 V, f = 500 MHz	f_T	 6	 8	 -	GHz
Collector-base capacitance V_{CB} = 10 V, f = 1 MHz	C_{cb}	 -	 0.63	 0.9	pF
Collector-emitter capacitance V_{CE} = 10 V, f = 1 MHz	C_{ce}	 -	 0.33	 -	
Emitter-base capacitance V_{EB} = 0.5 V, f = 1 MHz	C_{eb}	 -	 1.8	 -	
Noise figure I_C = 10 mA, V_{CE} = 8 V, Z_S = Z_{Sopt} f = 900 MHz f = 1.8 GHz	F	 - -	 1.3 2.1	 - -	dB
Power gain [2)] I_C = 30 mA, V_{CE} = 8 V, Z_S = Z_{Sopt} Z_L = Z_{Lopt} f = 900 MHz f = 1.8 GHz	G_{ma}	 - -	 19.5 13	 - -	
Transducer gain I_C = 30 mA, V_{CE} = 8 V, Z_S =Z_L= 50 Ω f = 900 MHz f = 1.8 GHz	$\lvert S_{21e}\rvert^2$	 - -	 15 9	 - -	

2) $G_{ma} = |S_{21}/S_{12}|\ (k-(k^2-1)^{1/2})$


SPICE Parameters (Gummel-Poon Model, Berkeley-SPICE 2G.6 Syntax) :

Transistor Chip Data

IS =	0.2738	fA	BF =	125	-	NF =	0.95341	-
VAF =	24	V	IKF =	0.26949	A	ISE =	10.627	fA
NE =	1.935	-	BR =	14.267	-	NR =	1.4289	-
VAR =	3.8742	V	IKR =	0.037925	A	ISC =	0.037409	fA
NC =	0.94371	-	RB =	1	Ω	IRB =	0.91763	mA
RBM =	1.8368	Ω	RE =	0.76534	Ω	RC =	0.11938	Ω
CJE =	1.1824	fF	VJE =	0.70276	V	MJE =	0.48654	-
TF =	18.828	ps	XTF =	0.69477	-	VTF =	0.8	V
ITF =	0.96893	mA	PTF =	0	deg	CJC =	935.03	fF
VJC =	1.1828	V	MJC =	0.30002	-	XCJC =	0.053563	-
TR =	1.0037	ns	CJS =	0	fF	VJS =	0.75	V
MJS =	0	-	XTB =	0	-	EG =	1.11	eV
XTI =	3	-	FC =	0.72063	-	TNOM	300	K

All parameters are ready to use, no scalling is necessary.
Extracted on behalf of SIEMENS Small Signal Semiconductors by:
Institut für Mobil-und Satellitenfunktechnik (IMST)
© 1996 SIEMENS AG

Package Equivalent Circuit:

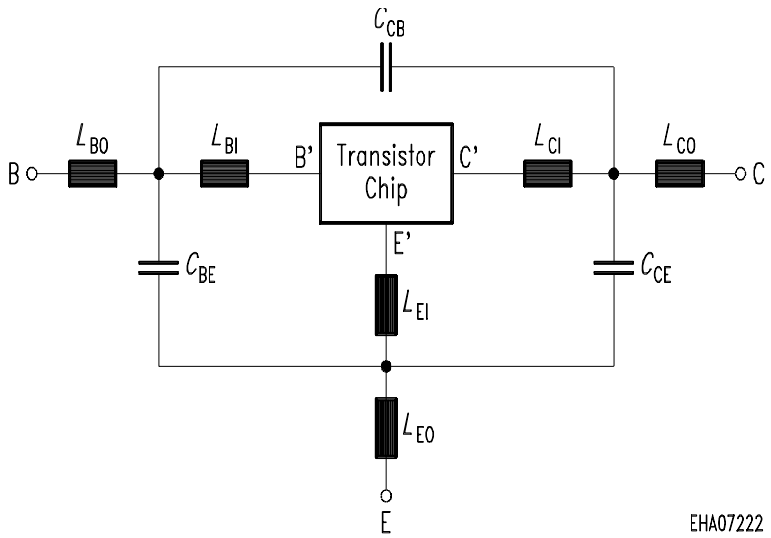


LBI =	0.43	nH
LBO =	0.47	nH
LEI =	0.26	nH
LEO =	0.12	nH
LCI =	0.06	nH
LCO =	0.36	nH
CBE =	68	fF
CCB =	46	fF
CCE =	232	fF

Valid up to 6 GHz


For examples and ready to use parameters please contact your local Siemens distributor or sales office to obtain a Siemens CD-ROM or see Internet: http://www.siemens.de/Semiconductor/products/35/35.htm

Total power dissipation $P_{tot} = f(T_A^*, T_S)$


* Package mounted on epoxy

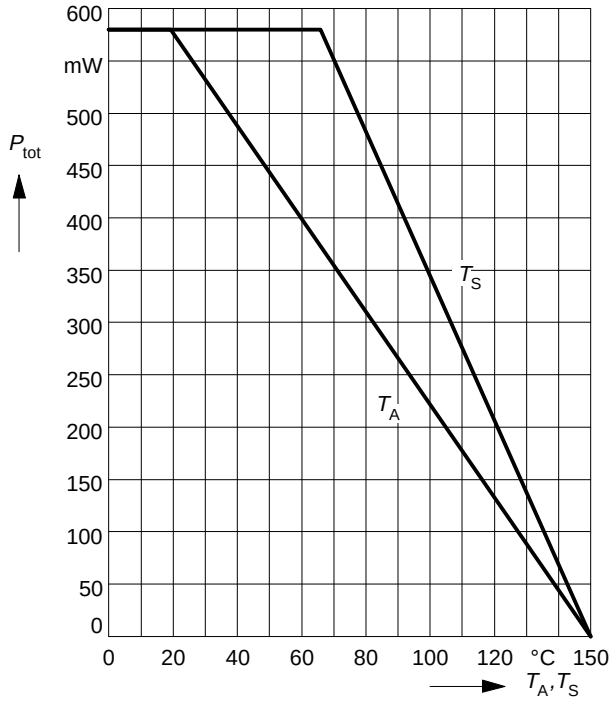


Permissible Pulse Load $R_{thJS} = f(t_p)$

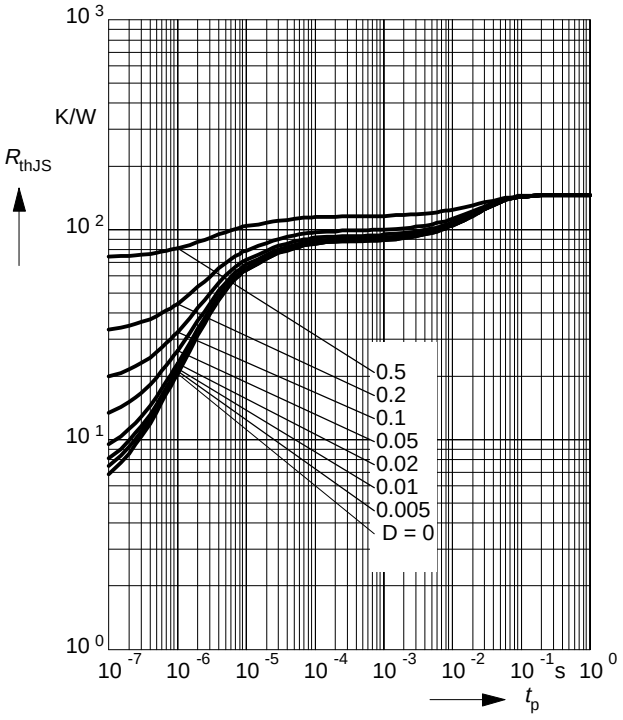

Permissible Pulse Load $P_{totmax}/P_{totDC} = f(t_p)$

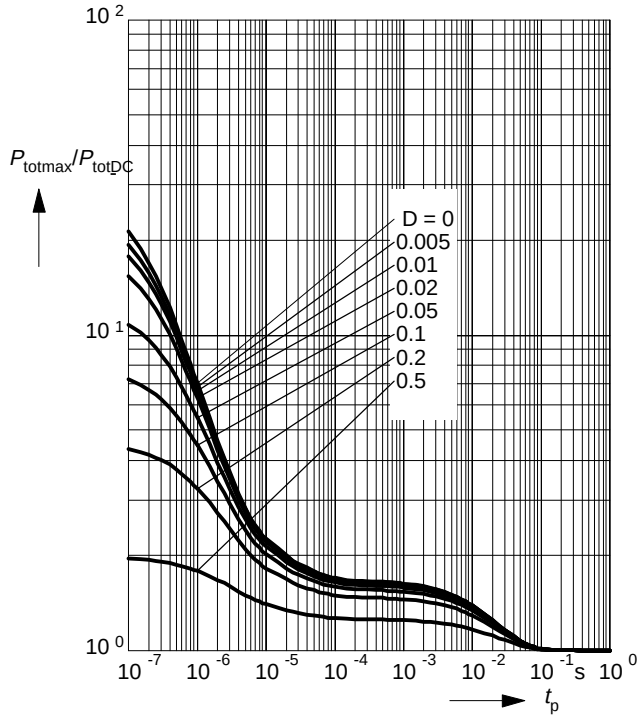


Collector-base capacitance $C_{cb} = f(V_{CB})$
$V_{BE} = v_{be} = 0$, $f = 1$MHz

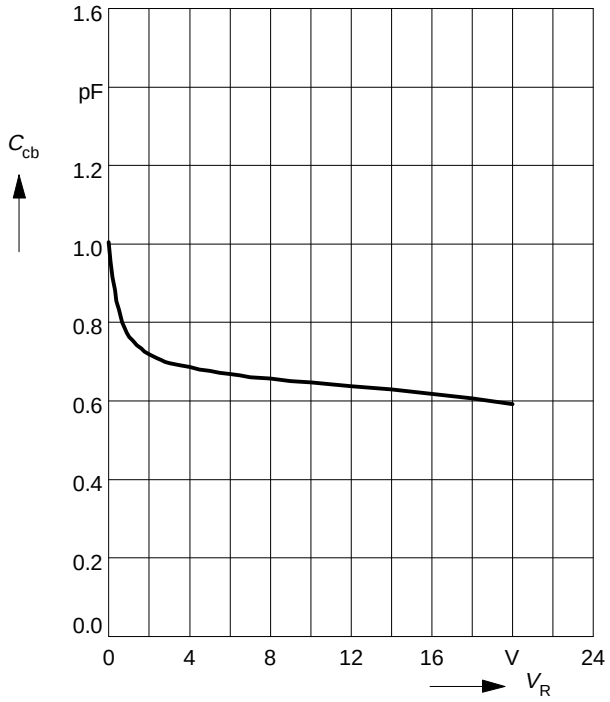


Transition frequency $f_T = f(I_C)$


V_{CE} = Parameter

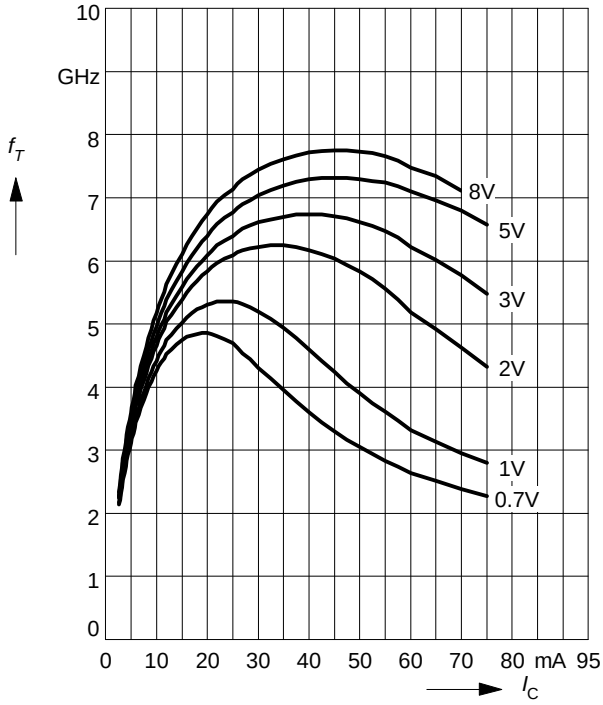


Power Gain G_{ma}, $G_{ms} = f(I_C)$
$f = 0.9$GHz
V_{CE} = Parameter

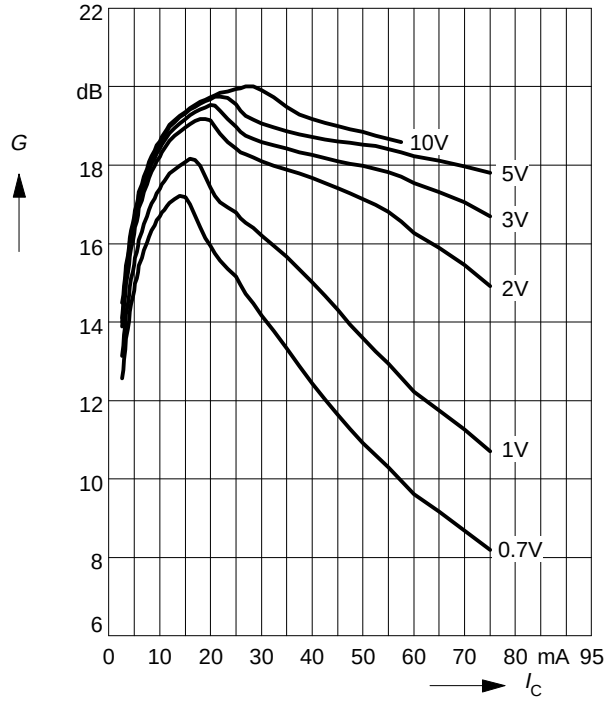


Power Gain G_{ma}, $G_{ms} = f(I_C)$
$f = 1.8$GHz
V_{CE} = Parameter

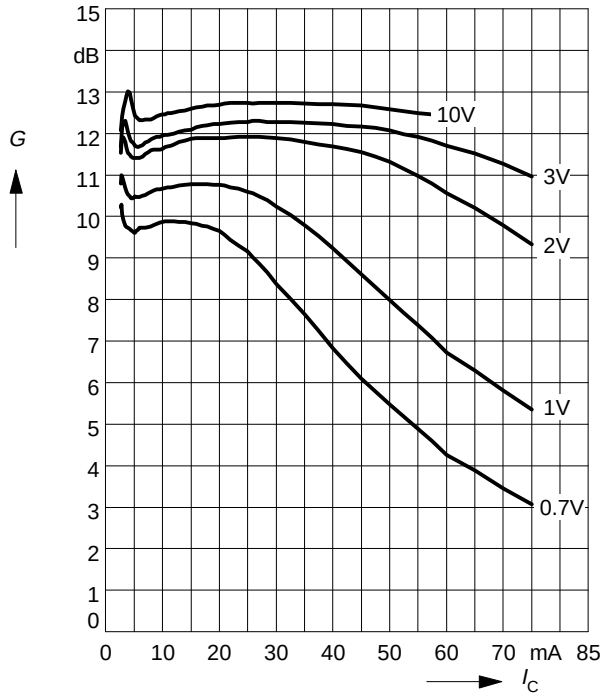

Power Gain G_{ma}, G_{ms} = $f(V_{CE})$:_____
$|S_{21}|^2$ = $f(V_{CE})$:---------
f = Parameter

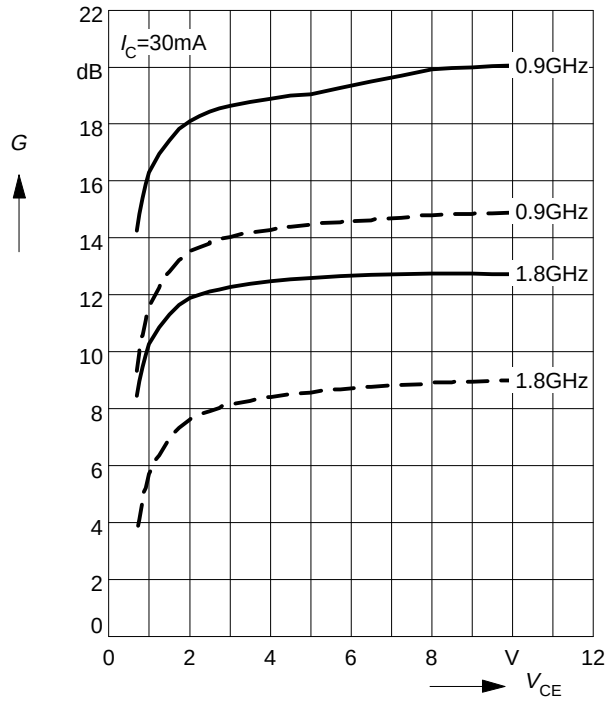


Intermodulation Intercept Point IP_3=$f(I_C)$
(3rd order, Output, Z_S=Z_L=50Ω)
V_{CE} = Parameter, f = 900MHz

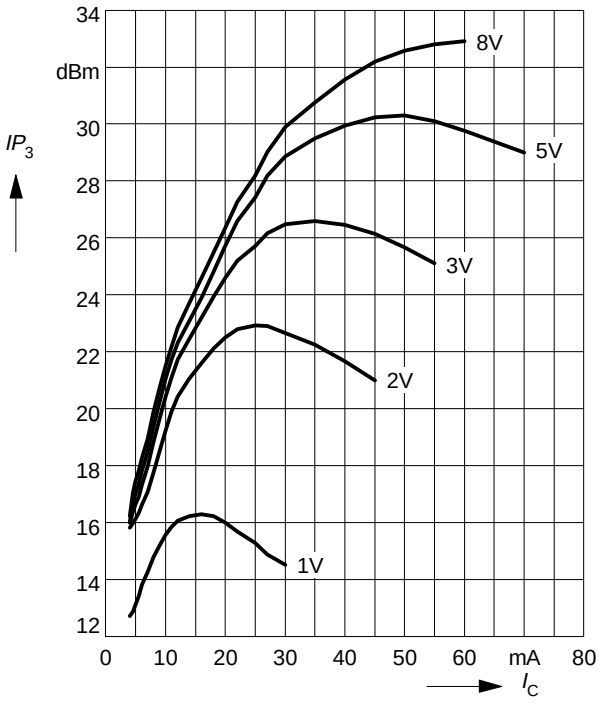

Power Gain G_{ma}, G_{ms} = $f(f)$

V_{CE} = Parameter

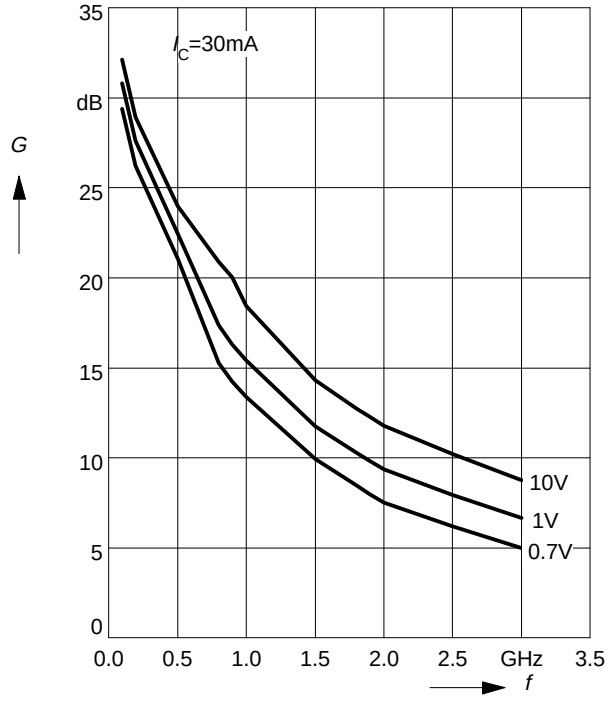

Power Gain $|S_{21}|^2$= $f(f)$

V_{CE} = Parameter

