

Fit Testing Materials


Issue Date 01/01/04

3M equipment and procedures provide a simple, direct way to meet OSHA qualitative fit testing requirements. Our products can be used with any particulate or gas/vapor respirator with a particulate prefilter to test face-to-respirator seal. The equipment helps satisfy respiratory program requirements, and is easy to use during respiratory training.

The fit test works by spraying a sweet or bitter solution into the hood environment. If the wearer does not detect the test agent's taste, an acceptable fit has been demonstrated.

Features/Benefits

- Fast, easy method for performing qualitative fit testing.
- Can be used with any particulate respirator or any gas/vapor respirator with a particulate prefilter.
- Helps satisfy respiratory program requirements.
- Can be used during respirator training programs.
- Convenient, reliable, and economical to use.
- Permits exercises to be performed in a test atmosphere.
- Determines employee's taste threshold to fit test solution.

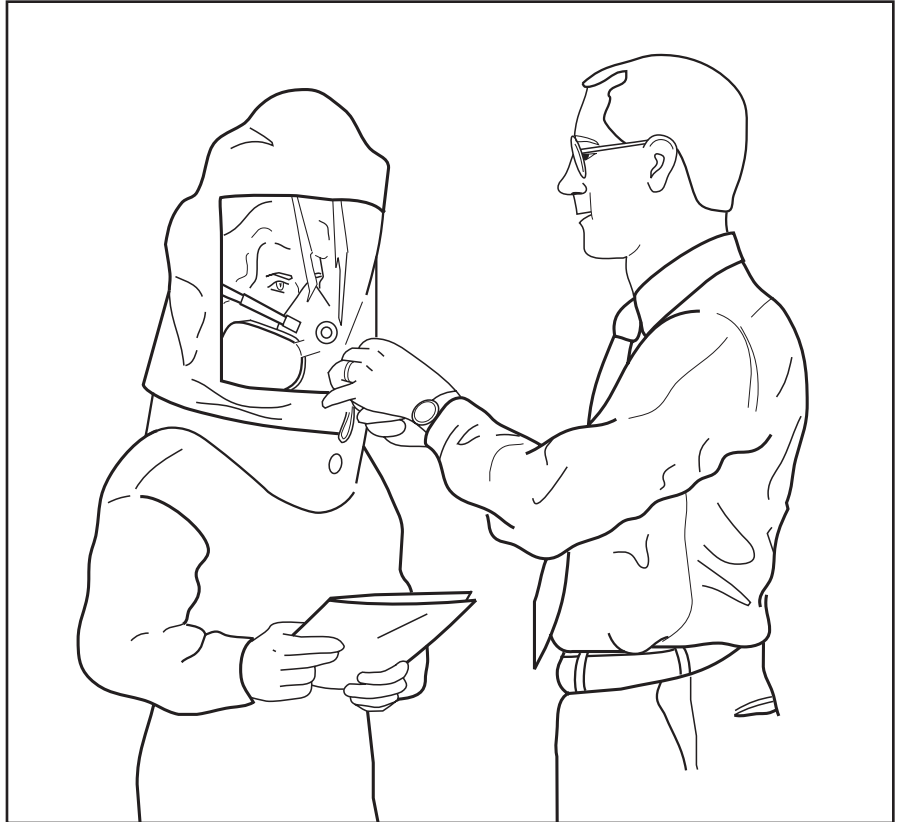

3M™ Fit Testing Materials can help you meet OSHA requirements


Respiratory Seminars

3M offers a comprehensive selection of seminars designed to fully acquaint the respiratory product user with the applicable regulations.

All seminars qualify for Continuing Education Units as well as various professional association credits. For a seminar calendar, call 1-800-659-0151, ext. 275.

3M™ Fit Testing Materials

3M™ Fit Test Kits

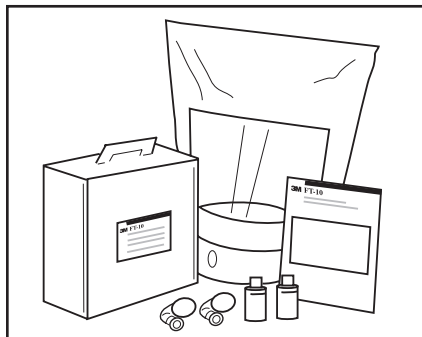

3M™ FT-10 Qualitative Fit Test Apparatus (sweet solution).

Contents


- Laminated instruction booklet (English/Spanish/ Portuguese/French).
- Sensitivity solution (FT-11).
- Fit test solution (FT-12).
- Two nebulizers (FT-13).
- One hood (FT-14).
- One collar assembly (FT-15).
- Two sets replacement nebulizer inserts.



3M™ FT-20 Training and Fit Testing Case (sweet solution).

Contents

- Durable, molded black plastic case with inside hinge straps and wide top pocket for extra literature. It is easy to carry and convenient to use.
- All FT-10 materials.
- 3M Universal Fitting Instruction video.
- All 3M respirator fitting posters.
- Administrative Respiratory Protection Guide.

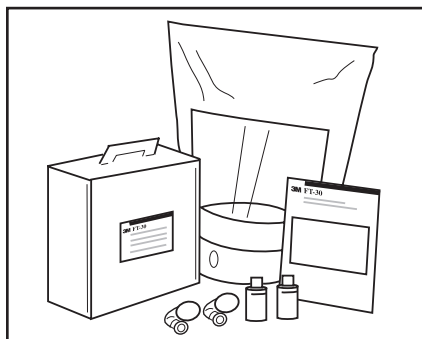

3M™ FT-30 Qualitative Fit Test Apparatus (bitter solution).

Contents

- Laminated instruction booklet (English/Spanish/ Portuguese/French).
- Sensitivity solution (FT-31).
- Fit test solution (FT-32).
- Two nebulizers (FT-13).
- One hood (FT-14).
- One collar assembly (FT-15).
- Two sets replacement nebulizer inserts.

For more information, please contact:

3M Occupational Health and Environmental Safety Division (OH&ESD)

In the U.S., contact:

Sales Assistance

1-800-896-4223

Technical Assistance

1-800-243-4630

Fax On Demand

1-800-646-1655

Internet

<http://www.3M.com/occsafety>

For other 3M products

1-800-3M HELPS

In Canada, contact:

3M Canada Company, OH&ESD

P.O. Box 5757

London, Ontario N6A 4T1

Sales Assistance

1-800-265-1840, ext. 6137

Technical Assistance (Canada only)

1-800-267-4414

Fax On Demand

1-800-646-1655

Internet

<http://www.3M.com/CA/occsafety>

Technical Assistance In Mexico

01-800-712-0646

5270-2255, 5270-2119 (Mexico City only)

Technical Assistance In Brazil

0800-132333

Fax On Demand O.U.S. Locations

1-651-732-6530

3M Occupational Health and Environmental Safety Division

3M Center, Building 235-2W-70

St. Paul, MN 55144-1000