

Pad Layout Application Note

INTRODUCTION

Freescal produces a range of Capacitive Touch Sensor Products using three sensing technologies. Each of these technologies will have slightly different response to changes in pad layout. Though, since each technology is measuring capacitance from the electrode to ground, the overall difference will be relatively insignificant. All electrodes follow the basic principle that capacitance increases on a single line as a ground reference is introduced. In this case, the ground reference is your finger.

THEORY

While exact calculations are sometimes difficult, it is always best to minimize stray capacitance and isolate electrodes. Stray capacitance can come from a two sources: trace capacitance and pad capacitance. The isolation will become a factor in very small designs. However, due to the single line

methodology of Freescal's touch sensors, the lines are inherently isolated; thus, this is usually not a problem.

Trace Capacitance can be generated in two ways: the traces through ground fill or the trace to ground planes. In the case of a ground fill, the fringe capacitance effect causes the total capacitance to increase, thus reducing the sensitivity of the touch sensor. The fringe effect is shown in [Figure 1](#). In addition, capacitance can be generated between the trace and a ground plane. This effect will be much more significant than fringe capacitance, as there is now much more area exposed to the parallel ground plane. This effect is shown in [Figure 2](#).

Pad Capacitance is affected by the same principles as traces. Both fringe capacitance and ground capacitance will be important. Reducing the trace capacitance and pad capacitance while increasing the touch area for the electrode achieves the best result.

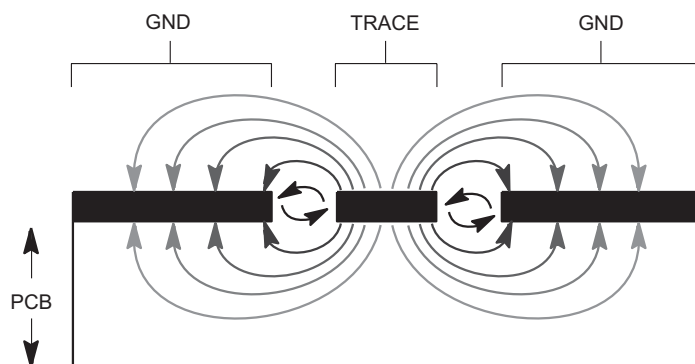


Figure 1. Trace Fringe Capacitance

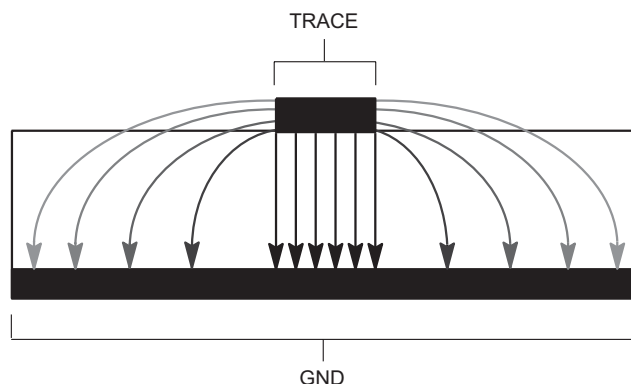


Figure 2. Trace Ground Capacitance

DESIGN CONSTRAINTS FOR CONDUCTIVE PADS

Pad Size / Dielectric Thickness

When using Freescale touch sensors, relatively basic pads are all that is needed. Using square or circular pads should provide the best results. There is a significant relationship between the size of the pad and the thickness of the material that will separate a user's finger from the conductive surface. For very small pads, thin plastics must be used. With large pads, thicker plastic covers are acceptable.

The minimum pad size for Freescale's products is 3 mm by 3 mm when using thin film overlays to about 0.5 mm thickness of acrylic or ABS plastic. The maximum pad size used for touch is about 15 mm by 15 mm. This thicker pad can be used with plastics of up to 3 mm thickness and still achieve consistent operation.

Minimum Pad Size: 3 mm by 3 mm

Maximum Pad Size: 15 mm by 15 mm

Minimum Dielectric Thickness: Film

Maximum Dielectric Thickness: 3mm

Pad Layout Constraints

Even though electrode design is fairly simple for a single line system, other requirements in a system may have shielding requirements for noisy environments, and this can complicate the design. If shielding is required in an application, it is best to use coplanar ground, as this will have the least influence on the capacitance. The best way to do this is to surround a pad with a ground connected ring. The ring can be the minimum thickness for the production technology, and the space between the ring and the electrode can also be the minimum thickness, as shown in Figure 3.

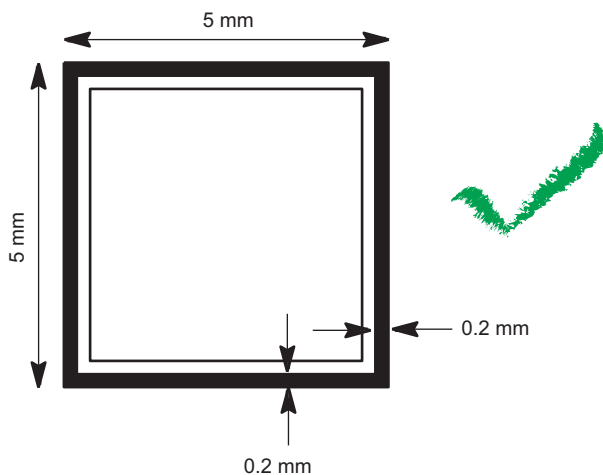


Figure 3. Pad Layout Constraints

Note that a ground plane should not be used to shield the electrode from noise. In some cases this ground plane can actually amplify noise by transmitting this across power on the board.

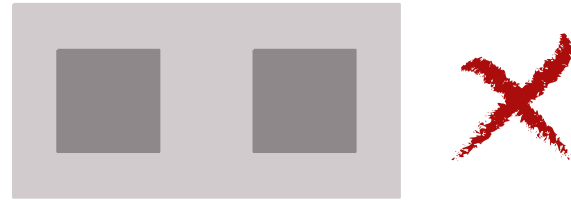


Figure 4. Ground Plane Usage

Trace Layout Constraints

For traces to electrodes, the total capacitance should be minimized. Thus, the pad width and length should be kept as small as possible. Using <0.20 mm width traces on the electrode lines is recommended. Trace length should be kept as small as possible as well. Although, 1 mm – 20 cm trace lengths should be fine for most applications.

Trace Width: <0.20 mm

Trace Length: 1 mm to 200 mm

Note that if ground planes are used in a system, the capacitance generated from a trace will be greatly increased. Thus, with ground planes, the maximum length should be 40 mm instead of 200 mm.

When routing traces on a board for capacitive sensors, one of the goals must be to reduce the effect that one electrode will have on another. To reduce the coupling effect of electrodes, traces should never be routed under other electrodes. However, it is no problem for traces to cross.

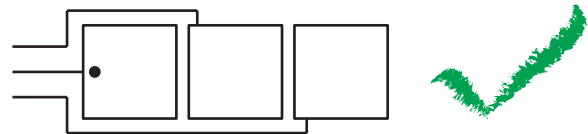


Figure 5. Correct Electrode Tracing

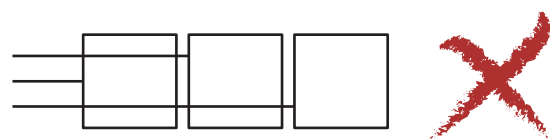


Figure 6. Incorrect Electrode Tracing

Neighboring Buttons

In most designs, buttons are placed very close together. When using Freescale's touch sensors the single line methodology provides a great deal of electrode independence, allowing electrodes to be placed in very close proximity. Two buttons do not need to be separated by any more than simple trace widths, but it is recommended that the ground ring is used in this case. The minimum edge to edge distance between two pads is going to be equal to three times the minimum tolerance for the manufacturing system, as shown in [Figure 7](#).

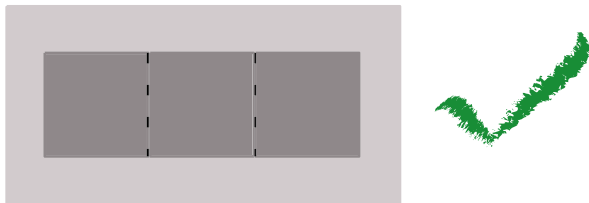


Figure 7. Neighboring Electrodes

DESIGN CONSTRAINTS FOR RESISTIVE FILMS

When using Indium Tin Oxide (ITO) film, the design must change slightly, though all of the basic principles still apply. The two primary differences between resistive film and conductive pads are the resistive nature and the single layer design requirement.

Resistive Traces

Resistive Traces can cause problems depending on the total resistance of the trace. Different ITO films will have varying resistance. A higher resistance will increase the transitivity of the film. The unit for the resistance of a film is Ohms per square. The total resistance of a trace can be calculated by dividing the length by the width (to obtain the number of squares) and multiplying the result by the Ohms/sq. In the case that a trace is 105 mm and 0.15 mm thick, the number of squares would be 700. If the resistance per square is 50 Ohms, the total resistance of the trace would be 35 kOhm.

Each of Freescale's devices will respond differently to high resistance traces, but all can tolerate even moderately high resistances.

E-field (PN: MC33941) – The E-field device family can tolerate resistances of up to 2 M Ω with no significant change in the output or setup.

Software (PN: MPR084) – The software device family can tolerate resistances of up to 100 k Ω but will require settings to

be changed. The electrode measurement mechanism on the software based devices charges through an external resistor to the IC. Thus, this resistance may also have to be calibrated for the different trace resistance values.

ASIC State Machine (PN: MPR031) – The state machine family can tolerate resistances of up to 1 M Ω but may require settings to be changed. These devices will not be as sensitive to trace resistance variation, and their performance will not be decreased. Some register settings on the device may need to be slightly adjusted to compensate for the high resistance. Even larger resistances of up to 5 M Ω may also work with these devices. However, depending on the pad, capacitance may be outside the standard operating range.

Due to the total resistance restrictions, it may be necessary at times to make the traces to the touch pads wider. When doing this, ensure that the space over an electrode where a user would touch the film cannot be covered in a way that a touch is detected. The best way to do this is to keep the area under a finger for a trace less than 20% of the area where a touch pad is. In most cases, it can be assumed that a person's finger is approximately 15 mm by 15 mm area. Thus, if a 15x15 mm square is placed anywhere on a trace, the total area should be 1/5 of the area for a pad. This is shown in [Figure 8](#) and [Figure 9](#).

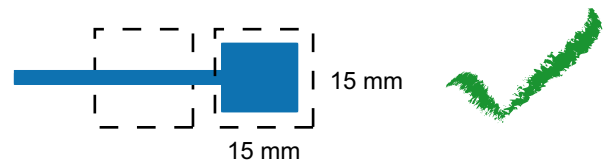


Figure 8. Trace Width Correct

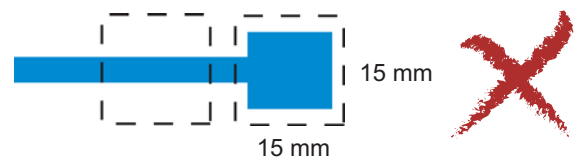


Figure 9. Trace Width Incorrect

Single Layer Design

Apply the same rule as above. When one pad is being touched, a user's finger should not cover 20% of the area of another pad by having a trace too near to a pad. If this is done, it could result in a false touch. This principle is shown in [Figure 10](#) and [Figure 11](#) below.

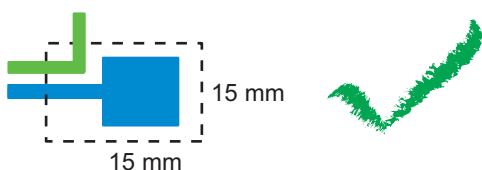


Figure 10. Second Electrode Trace Correct

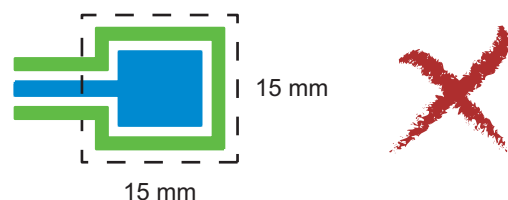


Figure 11. Second Electrode Trace Incorrect

How to Reach Us:

Home Page:

www.freescale.com

Web Support:

<http://www.freescale.com/support>

USA/Europe or Locations Not Listed:

Freescale Semiconductor, Inc.
Technical Information Center, EL516
2100 East Elliot Road
Tempe, Arizona 85284
1-800-521-6274 or +1-480-768-2130
www.freescale.com/support

Europe, Middle East, and Africa:

Freescale Halbleiter Deutschland GmbH
Technical Information Center
Schatzbogen 7
81829 Muenchen, Germany
+44 1296 380 456 (English)
+46 8 52200080 (English)
+49 89 92103 559 (German)
+33 1 69 35 48 48 (French)
www.freescale.com/support

Japan:

Freescale Semiconductor Japan Ltd.
Headquarters
ARCO Tower 15F
1-8-1, Shimo-Meguro, Meguro-ku,
Tokyo 153-0064
Japan
0120 191014 or +81 3 5437 9125
support.japan@freescale.com

Asia/Pacific:

Freescale Semiconductor China Ltd.
Exchange Building 23F
No. 118 Jianguo Road
Chaoyang District
Beijing 100022
China
+86 010 5879 8000
support.asia@freescale.com

For Literature Requests Only:

Freescale Semiconductor Literature Distribution Center
P.O. Box 5405
Denver, Colorado 80217
1-800-441-2447 or +1-303-675-2140
Fax: +1-303-675-2150
LDCForFreescaleSemiconductor@hibbertgroup.com

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners.

© Freescale Semiconductor, Inc. 2008. All rights reserved.

