

Evaluation Board for the 600 mA/1000 mA, 2.5 MHz Buck-Boost DC-to-DC Converters—ADP2503/ADP2504

FEATURES

Output current

600 mA for the ADP2503

1000 mA for the ADP2504

Input voltage range: 2.3 V to 5.5 V

Fixed output voltage range: 2.8 V to 5.5 V

Switching frequency: 2.5 MHz

1.5 μ H inductor compatible

Typical quiescent current: 38 μ A

Automatic pulse skip mode

Synchronization pin

GENERAL DESCRIPTION

The [ADP2503/ADP2504](#) adjustable output voltage evaluation boards are complete buck-boost converter solutions that test the ADP2503/ADP2504, high efficiency, low quiescent current, step-up/step-down, dc-to-dc converters. These converters provide accurate ($\pm 2\%$) regulation for load currents up to 1 A. The ADP2503/ADP2504 evaluation boards are available for all output voltages. Additional voltage options are available upon request from your local Analog Devices, Inc., sales office.

At high load currents, the ADP2503/ADP2504 use a current mode, fixed frequency PWM control scheme for excellent stability and transient response. To ensure the longest battery life in portable applications, the ADP2503/ADP2504 feature an optional power- saving pulse skip mode that reduces the switching frequency under light load conditions to save power.

EVALUATION BOARD DIAGRAM

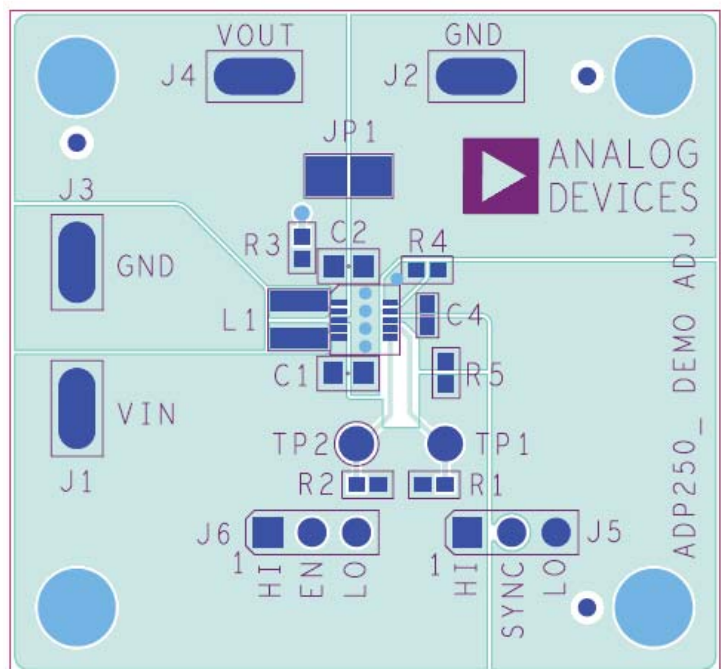


Figure 1. ADP2503/ADP2504 Adjustable Evaluation Board

TABLE OF CONTENTS

Features	1	Typical Performance Characteristics	4
General Description	1	Evaluation Board Schematic and Artwork.....	5
Evaluation Board Diagram.....	1	Ordering Information.....	7
Revision History	2	Bill of Materials.....	7
Using the Evaluation Board.....	3	ESD Caution.....	8
Setting Up the Evaluation Board	3		
Powering Up the Evaluation Board.....	3		
Measuring Evaluation Board Performance	3		

REVISION HISTORY

11/09—Revision 0: Initial Version

USING THE EVALUATION BOARD

The [ADP2503/ADP2504](#) evaluation boards are supplied fully assembled and tested. Before applying power to the evaluation board, follow the procedures in this section and refer to Figure 8.

SETTING UP THE EVALUATION BOARD

Jumper J6

Jumper J6 enables the part. Connect the jumper between Position 1 and Position 2 to enable the ADP2503/ADP2504. Connect a jumper between Position 2 to Position 3 to disable the ADP2503/ADP2504 and bring the current to <1 μ A.

Jumper J5

The ADP2503/ADP2504 can be configured to operate in low noise pulse width mode (PWM) or in power save mode (PSM), depending on the SYNC pin polarity. If the SYNC pin is pulled high (Position 1 and Position 2 of J5 connected together), the converter operates in forced PWM mode. If the SYNC pin is pulled low, pulse skip mode is turned on when the load current drops below approximately 75 mA.

Input Power Source

If the input power source includes a current meter, use that meter to monitor the input current. Connect the positive terminal of the power source to the VIN terminal on the evaluation board and connect the negative terminal of the power source to the PGND terminal of the evaluation board.

If the power source does not include a current meter, connect a current meter in series with the input source voltage. Then, connect the positive lead (+) of the power source to the ammeter positive (+) connection, the negative lead (–) of the power source to the PGND terminal on the evaluation board, and the negative lead (–) of the ammeter to the VIN terminal on the board.

Output Load

Connect an electronic load or resistor to set the load current. If the load includes an ammeter, or if the current is not measured, connect the load directly to the evaluation board, with the positive (+) load connection to the VOUT terminal and the negative (–) load connection to the PGND terminal.

If an ammeter is used, connect it in series with the load. Connect the positive (+) ammeter terminal to the evaluation board VOUT terminal, the negative (–) ammeter terminal to the positive (+) load terminal, and the negative (–) load terminal to the evaluation board PGND terminal.

Input and Output Voltmeters

Measure the input and output voltages with voltmeters. Make sure that the voltmeters are connected to the appropriate evaluation board terminals and not to the loads or power sources. If the voltmeters are not connected directly to the evaluation board, the measured voltages are incorrect due to the voltage drop across the leads and/or connections between the evaluation board, the power source, and/or the load.

Connect the input voltage measuring voltmeter positive (+) terminal to the evaluation board VIN terminal and the negative (–) terminal to the evaluation board PGND terminal. Connect the output voltage measuring voltmeter positive (+) terminal to the evaluation board VOUT terminal and the negative (–) terminal to the evaluation board PGND terminal.

POWERING UP THE EVALUATION BOARD

When the power source and load are connected to the ADP2503/ADP2504 evaluation board, it can be powered for operation. Ensure that the power source voltage is >2.5 V and <5.5 V. If using an ammeter, increase the range value to 1 A or 3 A for the initial startup.

Bring the EN pin high using J6 and monitor the output voltage. If the load is not already enabled, enable the load and verify that it is drawing the proper current and that the output voltage maintains voltage regulation.

MEASURING EVALUATION BOARD PERFORMANCE

Measuring Output Voltage Ripple

To observe the output voltage ripple, place an oscilloscope probe across the output capacitor with the probe ground lead at the negative (–) capacitor terminal and the probe tip at the positive (+) capacitor terminal. Set the oscilloscope to ac, 20 mV/division time base, and 2 μ s/division time base.

Measuring the Switching Waveform

To observe the switching waveform with an oscilloscope, place the oscilloscope probe tip at the end of the inductor connected to the SW1 pin/SW2 pin with the probe ground at PGND. Set the oscilloscope to dc, 2 V/division time base, and 2 μ s/division time base.

Measuring Load Regulation

The load regulation must be tested by increasing the load at the output and looking at the change in output voltage. To minimize voltage drop, use short low resistance wires, especially for heavy loads.

Measuring Line Regulation

Vary the input voltage and examine the change in the output voltage.

Measuring Efficiency

Measure the efficiency, η , by comparing the input power with the output power.

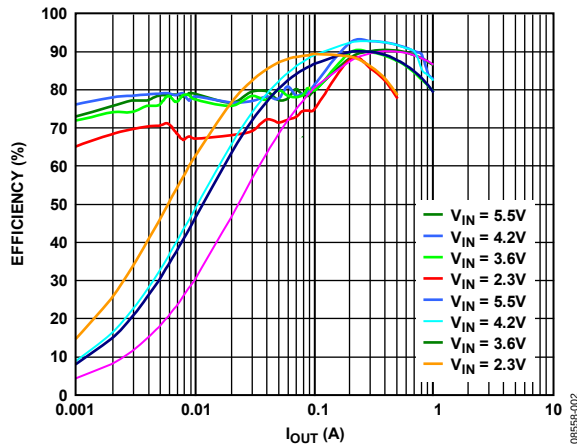
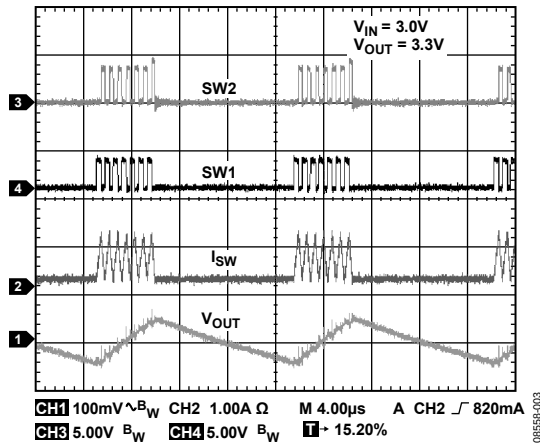
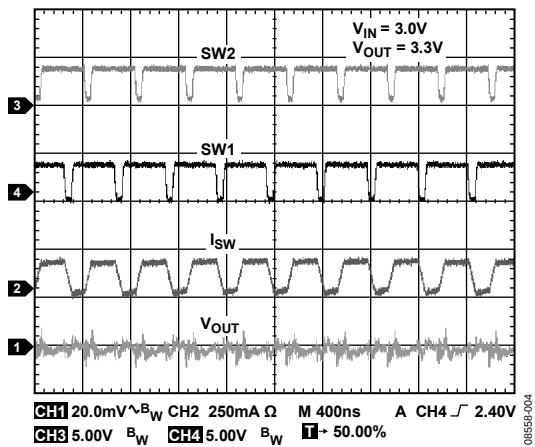
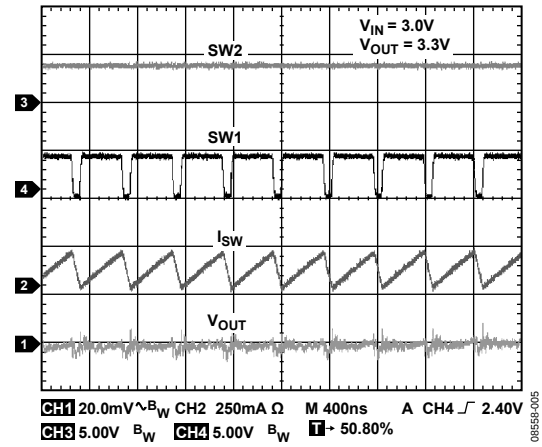
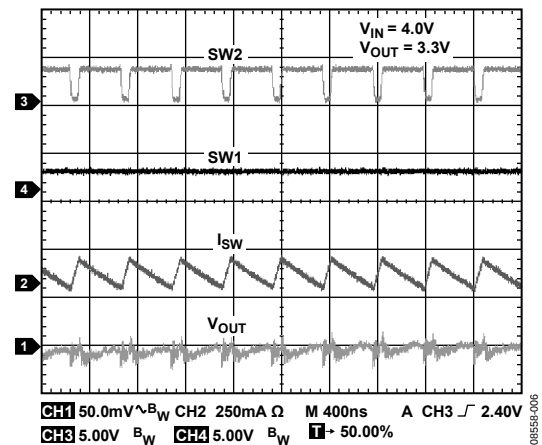
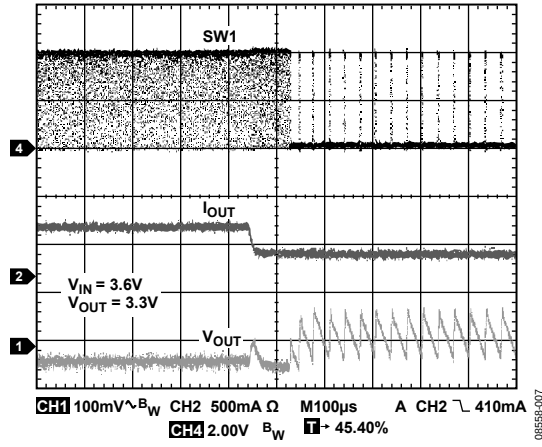
$$\eta = \frac{V_{OUT} \times I_{OUT}}{V_{IN} \times I_{IN}}$$

Measure the input and output voltages as close as possible to the input and output capacitors to reduce the effect of IR drops.

Measuring Inductor Current

Measure the inductor current by removing one end of the inductor from its pad and connecting a current loop in series. Then, use a current probe to measure the current flowing through the current loop.

TYPICAL PERFORMANCE CHARACTERISTICS

Figure 2. Efficiency vs. I_{OUT} , $V_{OUT} = 3.3\text{ V}$, PWM and PSMFigure 3. Buck Boost, $V_{IN} = 3.0\text{ V}$, $V_{OUT} = 3.3\text{ V}$, PSMFigure 4. Buck Boost, $V_{IN} = 3.0\text{ V}$, $V_{OUT} = 3.3\text{ V}$, PWMFigure 5. Boost Operation, $V_{IN} = 3.0\text{ V}$, $V_{OUT} = 3.3\text{ V}$, PWMFigure 6. Buck Operation, $V_{IN} = 4.0\text{ V}$, $V_{OUT} = 3.3\text{ V}$, PWMFigure 7. Mode Change by Load Transients, Load Fall ($V_{OUT} = 3.3\text{ V}$)

EVALUATION BOARD SCHEMATIC AND ARTWORK

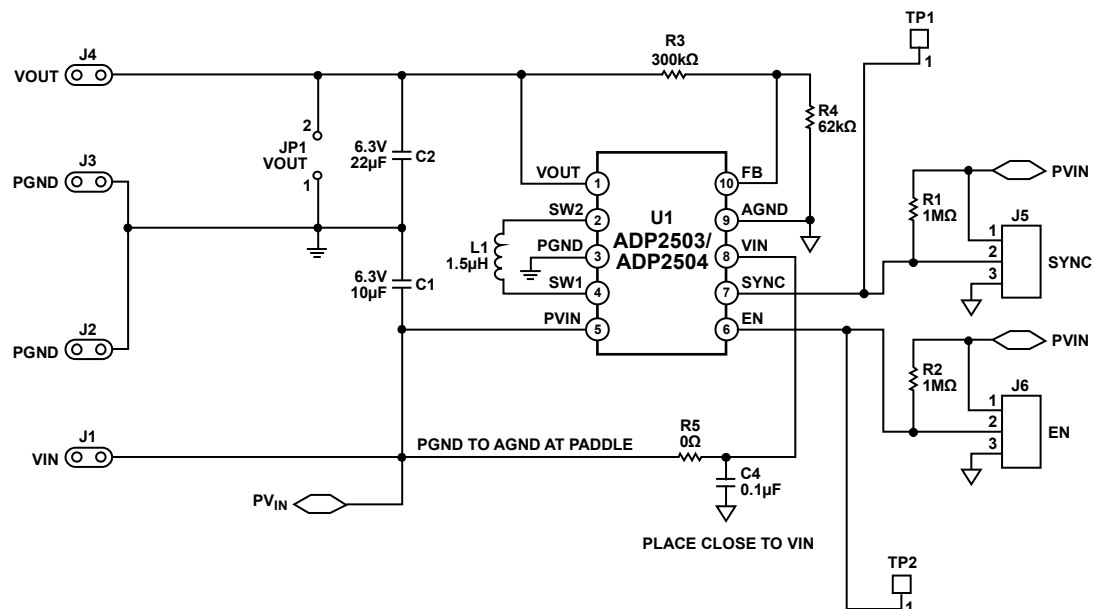


Figure 8. ADP2503/ADP2504 Adjustable Evaluation Board Schematic

019559-008

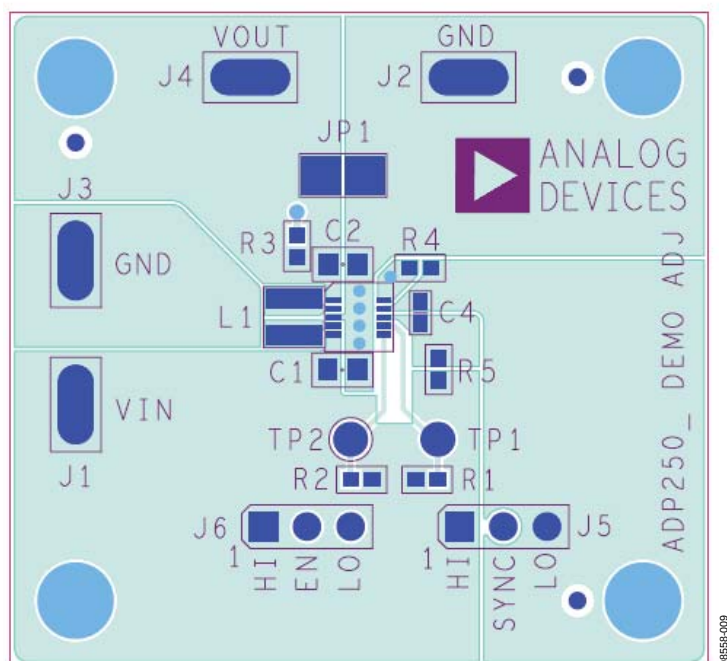


Figure 9. Top Layer, Recommended Layout

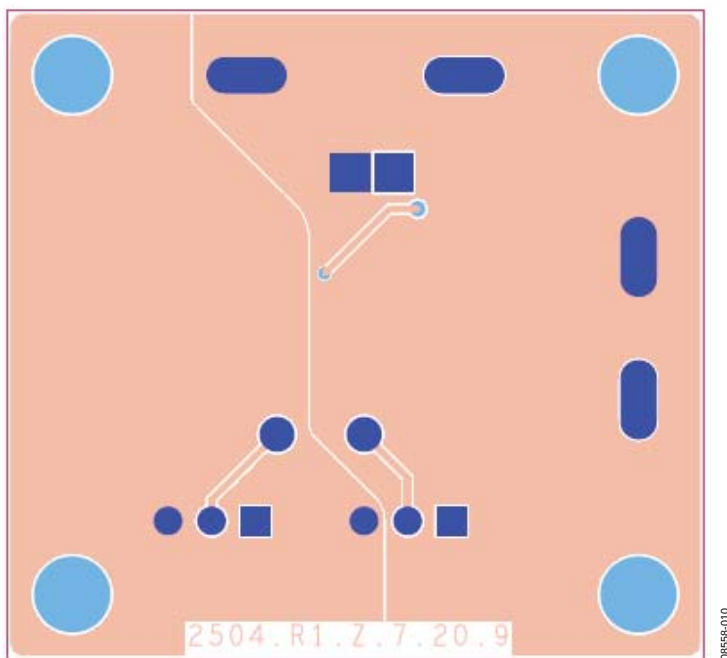


Figure 10. Bottom Layer, Recommended Layout

ORDERING INFORMATION

BILL OF MATERIALS

Table 1.

Qty	Reference Designator	Description	Manufacturer	Part Number
1	C1	Capacitor, 10 μ F, 6.3 V 0603, X5R	Murata Manufacturing Co., Ltd	GRM188R60J106M
1	C2	Capacitor, 22 μ F, 6.3 V, 0805, X5R	Murata Manufacturing Co., Ltd	GRM21BR60J226ME39
1	C4	Capacitor, 0.1 μ F, 16 V 0603, X7R	Yageo	223878615649
1	L1	Inductor, 1.5 μ H	Murata Manufacturing Co., Ltd	LQM2HPN1R5MG0L
2	R1, R2	Resistor, 1 M Ω	Vishay Intertechnology, Inc.	CRCW04021004F
1	R5	Resistor, 0 Ω	Vishay Intertechnology, Inc.	CRCW04020R00F
1	R4	Resistor, 62 k Ω ¹	Panasonic	ERA3AEB623V
1	R3	Resistor, 300 k Ω ¹	Panasonic	ERA3AEB304V
1	U1	Buck-boost regulator	Analog Devices	ADP2503/ADP2504

¹ Selected values for an output voltage of 3.0 V.

NOTES

ESD CAUTION

**ESD (electrostatic discharge) sensitive device.**

Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

Evaluation boards are only intended for device evaluation and not for production purposes. Evaluation boards are supplied "as is" and without warranties of any kind, express, implied, or statutory including, but not limited to, any implied warranty of merchantability or fitness for a particular purpose. No license is granted by implication or otherwise under any patents or other intellectual property by application or use of evaluation boards. Information furnished by Analog Devices is believed to be accurate and reliable. However, no responsibility is assumed by Analog Devices for its use, nor for any infringements of patents or other rights of third parties that may result from its use. Analog Devices reserves the right to change devices or specifications at any time without notice. Trademarks and registered trademarks are the property of their respective owners. Evaluation boards are not authorized to be used in life support devices or systems.