



**MCP1630 Low-Cost
Li-Ion Battery Charger
Reference Design
User's Guide**

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip's products as critical components in life support systems is not authorized except with express written approval by Microchip. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

Trademarks

The Microchip name and logo, the Microchip logo, Accuron, dsPIC, KEELOQ, microID, MPLAB, PIC, PICmicro, PICSTART, PRO MATE, PowerSmart, rfPIC, and SmartShunt are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

Amplab, FilterLab, Migratable Memory, MXDEV, MXLAB, PICMASTER, SEEVAL, SmartSensor and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Application Maestro, dsPICDEM, dsPICDEM.net, dsPICworks, ECAN, ECONOMONITOR, FanSense, FlexROM, fuzzyLAB, In-Circuit Serial Programming, ICSP, ICEPIC, Linear Active Thermistor, MPASM, MPLIB, MPLINK, MPSIM, PICkit, PICDEM, PICDEM.net, PICLAB, PICtail, PowerCal, PowerInfo, PowerMate, PowerTool, Real ICE, rLAB, rfPICDEM, Select Mode, Smart Serial, SmartTel, Total Endurance, UNI/O, WiperLock and Zena are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

© 2005, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

 Printed on recycled paper.

QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV
== ISO/TS 16949:2002 ==

Microchip received ISO/TS-16949:2002 quality system certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona and Mountain View, California in October 2003. The Company's quality system processes and procedures are for its PICmicro® 8-bit MCUs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

Table of Contents

Preface	1
Chapter 1. Product Overview	
1.1 Introduction	5
1.2 What is the MCP1630 Low-Cost Li-Ion Battery Charger?	6
1.3 What the MCP1630 Low-Cost Li-Ion Battery Charger Kit Includes	6
Chapter 2. Installation and Operation	
2.1 Introduction	7
2.2 Features	7
2.3 Getting Started	8
Appendix A. Schematic and Layouts	
A.1 Introduction	11
A.2 Board Schematic	12
A.3 Board – Assembly Drawing	13
A.4 Board – Top Overlay	14
A.5 Board – Top Layer	15
A.6 Board – Bottom Layer	16
Appendix B. Bill Of Materials (BOM)	
Appendix C. Evaluation Board Firmware	
C.1 Device Firmware	19
Worldwide Sales and Service	20

MCP1630 Low-Cost Battery Charger User's Guide

NOTES:



MCP1630 LOW-COST BATTERY CHARGER USER'S GUIDE

Preface

NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a “DS” number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is “DSXXXXA”, where “XXXX” is the document number and “A” is the revision level of the document.

INTRODUCTION

This chapter contains general information that will be useful to know before using the MCP1630 Low-Cost Li-Ion Battery Charger. Items discussed in this chapter include:

- Document Layout
- Conventions Used in this Guide
- Recommended Reading
- The Microchip Web Site
- Customer Support
- Document Revision History

DOCUMENT LAYOUT

This document describes how to use the MCP1630 Low-Cost Li-Ion Battery Charger as a development tool to emulate and debug firmware on a target board. The manual layout is as follows:

- **Chapter 1. “Product Overview”** – Important information about the MCP1630 Low-Cost Li-Ion Battery Charger.
- **Chapter 2. “Installation and Operation”** – Includes instructions on how to get started with this demo board and a description of the demo board.
- **Appendix A. “Schematic and Layouts”** – Shows the schematic and layout diagrams for the MCP1630 Low-Cost Li-Ion Battery Charger.
- **Appendix B. “Bill Of Materials (BOM)”** – Lists the parts used to build the MCP1630 Low-Cost Li-Ion Battery Charger.
- **Appendix C. “Evaluation Board Firmware”** – Provides information about the application firmware and where the source code can be found.

MCP1630 Low-Cost Battery Charger User's Guide

CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

DOCUMENTATION CONVENTIONS

Description	Represents	Examples
Arial font:		
Italic characters	Referenced books	<i>MPLAB[®] IDE User's Guide</i>
	Emphasized text	...is the <i>only</i> compiler...
Initial caps	A window	the Output window
	A dialog	the Settings dialog
	A menu selection	select Enable Programmer
Quotes	A field name in a window or dialog	"Save project before build"
Underlined, italic text with right angle bracket	A menu path	<u><i>File>Save</i></u>
Bold characters	A dialog button	Click OK
	A tab	Click the Power tab
N'Rnnnn	A number in verilog format, where N is the total number of digits, R is the radix and n is a digit.	4'b0010, 2'hF1
Text in angle brackets < >	A key on the keyboard	Press <Enter>, <F1>
Courier New font:		
Plain Courier New	Sample source code	#define START
	Filenames	autoexec.bat
	File paths	c:\mcc18\h
	Keywords	_asm, _endasm, static
	Command-line options	-Opa+, -Opa-
	Bit values	0, 1
	Constants	0xFF, 'A'
Italic Courier New	A variable argument	<i>file.o</i> , where <i>file</i> can be any valid filename
Square brackets []	Optional arguments	mcc18 [options] <i>file</i> [options]
Curly brackets and pipe character: { }	Choice of mutually exclusive arguments; an OR selection	errorlevel {0 1}
Ellipses...	Replaces repeated text	var_name [, var_name...]
	Represents code supplied by user	void main (void) { ... }

RECOMMENDED READING

This user's guide describes how to use the MCP1630 Low-Cost Li-Ion Battery Charger. The following Microchip documents are available and recommended as supplemental reference resources.

MCP1630 Data Sheet, “High-Speed, Microcontroller-Adaptable, Pulse Width Modulator”, DS21896

This data sheet provides detailed information regarding the MCP1630 product family.

MCP6291/2/3/4/5 Data Sheet, “1.0 mA, 10 MHz, Rail-to-Rail Op Amp”, DS21812

This data sheet provides detailed information regarding the MCP6291/2/3/4/5 product family.

PIC12F683 Data Sheet, “8-Pin Flash-Based, 8-Bit CMOS Microcontrollers with nanoWatt Technology”, DS41211

This data sheet provides detailed information regarding the PIC12F683 product family.

THE MICROCHIP WEB SITE

Microchip provides online support via our web site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support
- Development Systems Information Line

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: <http://support.microchip.com>

MCP1630 Low-Cost Battery Charger User's Guide

DOCUMENT REVISION HISTORY

Revision B (November 2005)

- Updated Fast Charge Current to 1.5A.
- Added Constant Voltage Charge Calibration.

Revision A (June 2005)

- Initial Release of this Document.

Chapter 1. Product Overview

1.1 INTRODUCTION

The MCP1630 Low-Cost Li-Ion Battery Charger is used to evaluate Microchip's MCP1630 in a SEPIC power converter application. As provided, the MCP1630 Low-Cost Li-Ion Battery Charger is capable of charging a single-cell, Li-Ion battery pack from an input voltage of 6V to 18V. The MCP1630 Low-Cost Li-Ion Battery Charger provides a constant current, constant voltage charge with preconditioning, cell temperature monitoring and battery pack fault monitoring. Also, the charger provides a status or fault indication. The MCP1630 Low-Cost Li-Ion Battery Charger automatically detects the insertion or removal of a battery pack.

This chapter covers the following topics:

- What is the MCP1630 Low-Cost Li-Ion Battery Charger?
- What the MCP1630 Low-Cost Li-Ion Battery Charger Kit Includes

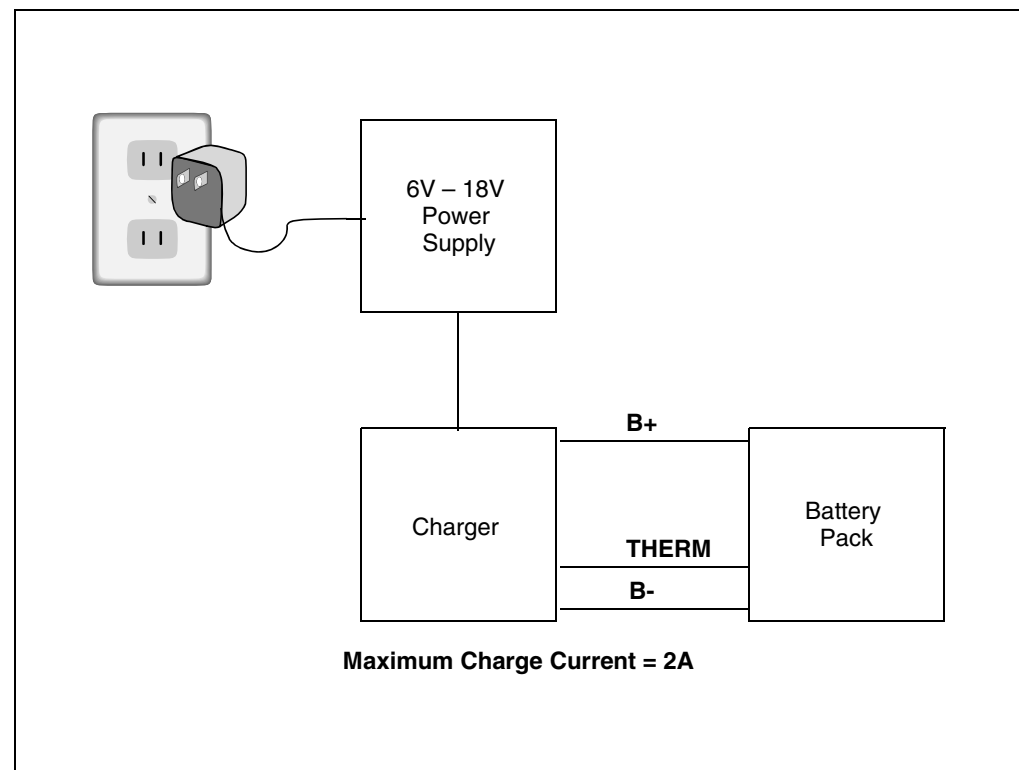


FIGURE 1-1: MCP1630 Low-Cost Li-Ion Battery Charger System Block Diagram.

MCP1630 Low-Cost Battery Charger User's Guide

1.2 WHAT IS THE MCP1630 LOW-COST LI-ION BATTERY CHARGER?

The MCP1630 Low-Cost Li-Ion Battery Charger is a complete stand-alone constant current, constant voltage battery charger for single-cell Li-Ion battery packs. Different battery chemistries (i.e. three NiMH or NiCd batteries connected in series) can be charged with minor modifications to the firmware. Multiple series cell Li-Ion battery packs can be charged with minor modifications to the hardware.

This board utilizes Microchip's MCP1630 (high-speed PIC[®] MCU PWM MSOP8), MCP6292 (dUAL op-amp MSOP8), and PIC12F683 (Flash MCU SOIC8). The input voltage range for the demo board is 6V to 18V. The output is capable of charging at a fast charge rate of 2A constant current.

An input terminal block is provided to apply the input voltage to the charger. An output header is also provided as a means to connect the external battery pack or simulated battery load. A programming header is available for updating the firmware contained in the PIC12F683.

1.3 WHAT THE MCP1630 LOW-COST LI-ION BATTERY CHARGER KIT INCLUDES

This MCP1630 Low-Cost Li-Ion Battery Charger Kit includes:

- The MCP1630 Low-Cost Li-Ion Battery Charger Board, 102-00069
- MCP1630 Low-Cost Li-Ion Battery Charger User's Guide, (DS51555).
- MCP1630 Data Sheet, *"High-Speed, Microcontroller-Adaptable, Pulse Width Modulator"*, (DS21896).
- MCP6291/2/3/4/5 Data Sheet, *"1.0 mA, 10 MHz, Rail-to-Rail Op Amp"*, (DS21812).
- PIC12F683 Data Sheet, *"8-Pin Flash-Based, 8-Bit CMOS Microcontrollers with nanoWatt Technology"*, (DS41211).

Chapter 2. Installation and Operation

2.1 INTRODUCTION

The MCP1630 Low-Cost Li-Ion Battery Charger demonstrates Microchip's high-speed Pulse Width Modulator (PWM) (the MCP1630) used in a battery charger application. When used in conjunction with a microcontroller, the MCP1630 will control the power system duty cycle to provide output voltage or current regulation. The PIC12F683 microcontroller can be used to regulate output voltage or current, switching frequency and maximum duty cycle. The MCP1630 generates duty cycle and provides fast overcurrent protection based off various external inputs. External signals include the input oscillator, the reference voltage, the feedback voltage and the current sense. The output signal is a square-wave pulse. The power train used for the MCP1630 Low-Cost Li-Ion Battery Charger is a Single-Ended Primary Inductive Converter (SEPIC).

2.2 FEATURES

The MCP1630 Low-Cost Li-Ion Battery Charger has the following features:

- Programmed parameters - modified in firmware
- Factory Settings:
 - Preconditioning Charge Current = 200 mA
 - Preconditioning Threshold = 3 V
 - Constant Current Fast Charge = 1.5 A
 - Constant Voltage Charge = 4.2 V
 - Charge Termination Threshold = 100 mA
- Overvoltage protection (battery removed)
- Overcharge protection to prevent damaging the battery
- Overcurrent protection in the event of a shorted battery
- Battery reversal protection
- Input short circuit protection
- Overtemperature protection to prevent the battery from reaching too high a temperature during charge
- Soft-start capability by holding the reference voltage low during power-up
- The MCP1630 Low-Cost Li-Ion Battery Charger terminates charge by detecting a predefined charge current threshold during constant voltage charge, or a specified elapsed time
- The MCP1630 Low-Cost Li-Ion Battery Charger has the flexibility to optimize the charging algorithm for new battery technology, different battery chemistries or different battery pack configurations
- Proprietary features can be added by modifying the firmware contained in the PIC12F683
- The factory-programmed source code is available
- Ability to adapt to environmental effects, such as ambient temperature

MCP1630 Low-Cost Battery Charger User's Guide

2.3 GETTING STARTED

The MCP1630 Low-Cost Li-Ion Battery Charger is fully assembled and tested for charging single-cell, Li-Ion battery packs with the recommended charge profile for Li-Ion batteries. This board requires the use of an external input voltage source (+6V to +18V) and external load (battery or simulated battery load).

2.3.1 Power Input and Output Connections

2.3.1.1 POWERING THE MCP1630 LOW-COST LI-ION BATTERY CHARGER

1. Apply the input voltage to the input terminal block, J1. The input voltage source should be limited to the 0V to +18V range. For normal operation, the input voltage should be between +6V and +18V. The input voltage must not exceed an absolute maximum of +20V.
2. Connect the positive side of the input source (+) to pin 1 of J1. Connect the negative or return side (–) of the input source to pin 2 of J1. Refer to Figure 2-1.

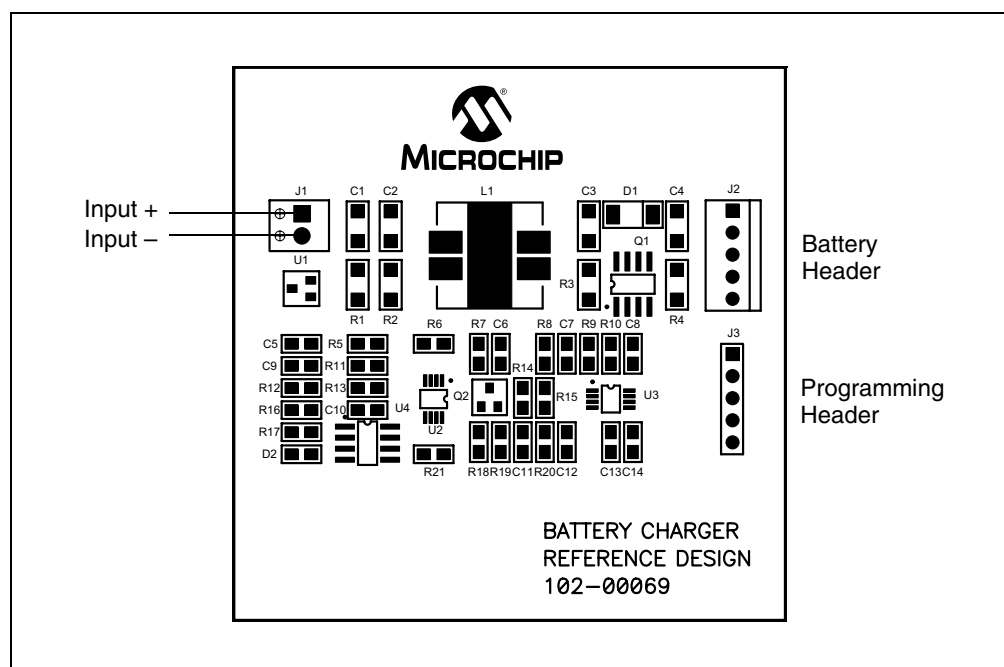


FIGURE 2-1: Setup Configuration Diagram.

2.3.1.2 APPLY THE LOAD TO A BATTERY HEADER

1. To apply a load to the MCP1630 Low-Cost Li-Ion Battery Charger, the positive side of the load (B+) should be connected to pin 1 of J2. The negative side of the load (B-) should be connected to pin 5 of J2. Care should be taken when using electronic loads or ground referenced loads.
2. A thermistor referenced to (B-) in the battery pack should be utilized. If a thermistor is not available or not desired, a 10 kΩ resistor should be placed between pins 4 and 5 of the battery header (J2).
3. The installed firmware will prevent the board from entering the Fast Charge mode if the battery terminal voltage is less than 3V. During power-up, the board will always trickle charge first, so using a purely resistive load will not work for trickle and fast-charge current. The best way to evaluate the charger is to use a single-cell Li-Ion battery pack, or the recommended simulated battery load. Refer to Figure 2-2.

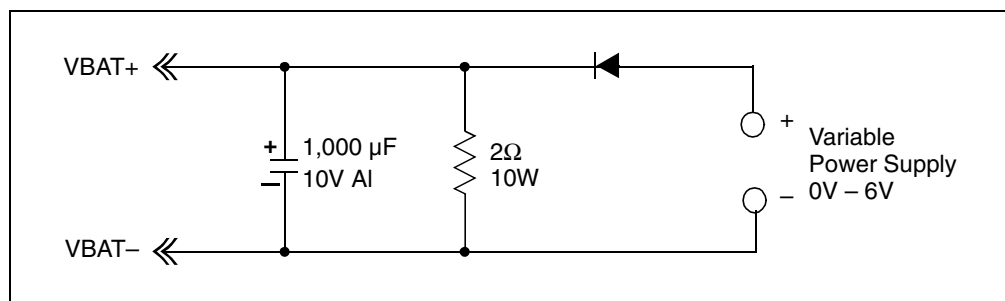


FIGURE 2-2: Simulated Battery Load.

2.3.1.3 STATUS LED

1. The MCP1630 Low-Cost Li-Ion Battery Charger has an LED to indicate charge status or fault status. Table 2-1 represents the state of the LED during various states of the charge cycle.

TABLE 2-1: STATUS OUTPUT

CHARGE CYCLE STATE	LED
Qualification	OFF
Preconditioning	ON
Constant Current Fast Charge	ON
Constant Voltage	ON
Charge Complete	OFF
Safety Timer Fault	Flashing (2 Hz, 50% duty cycle)
Cell Temperature Invalid	Flashing (1 Hz, 50% duty cycle)
Battery Disconnected	OFF
Input Power Removed	OFF

2.3.1.4 PROGRAMMING

Header J3 is provided for In-Circuit System Programming™.

If the factory installed firmware is modified or if the PIC12F683 is reprogrammed, the board needs to be calibrated. To perform calibration, a 4.2V source should be applied to the battery header. Then, when input power is applied for the first time, the board will perform a self calibration. The LED will flash when the calibration has been completed. The 4.2V source should be removed and input power cycled for normal operation.

MCP1630 Low-Cost Battery Charger User's Guide

NOTES:

Appendix A. Schematic and Layouts

A.1 INTRODUCTION


This appendix contains the following schematics and layouts for the MCP1630 Low-Cost Li-Ion Battery Charger.

Diagrams included in this appendix:

- Board Schematic
- Board – Assembly Drawing
- Board – Top Overlay
- Board – Top Layer
- Board – Bottom Layer


MCP1630 Low-Cost Battery Charger User's Guide

A.2 BOARD SCHEMATIC

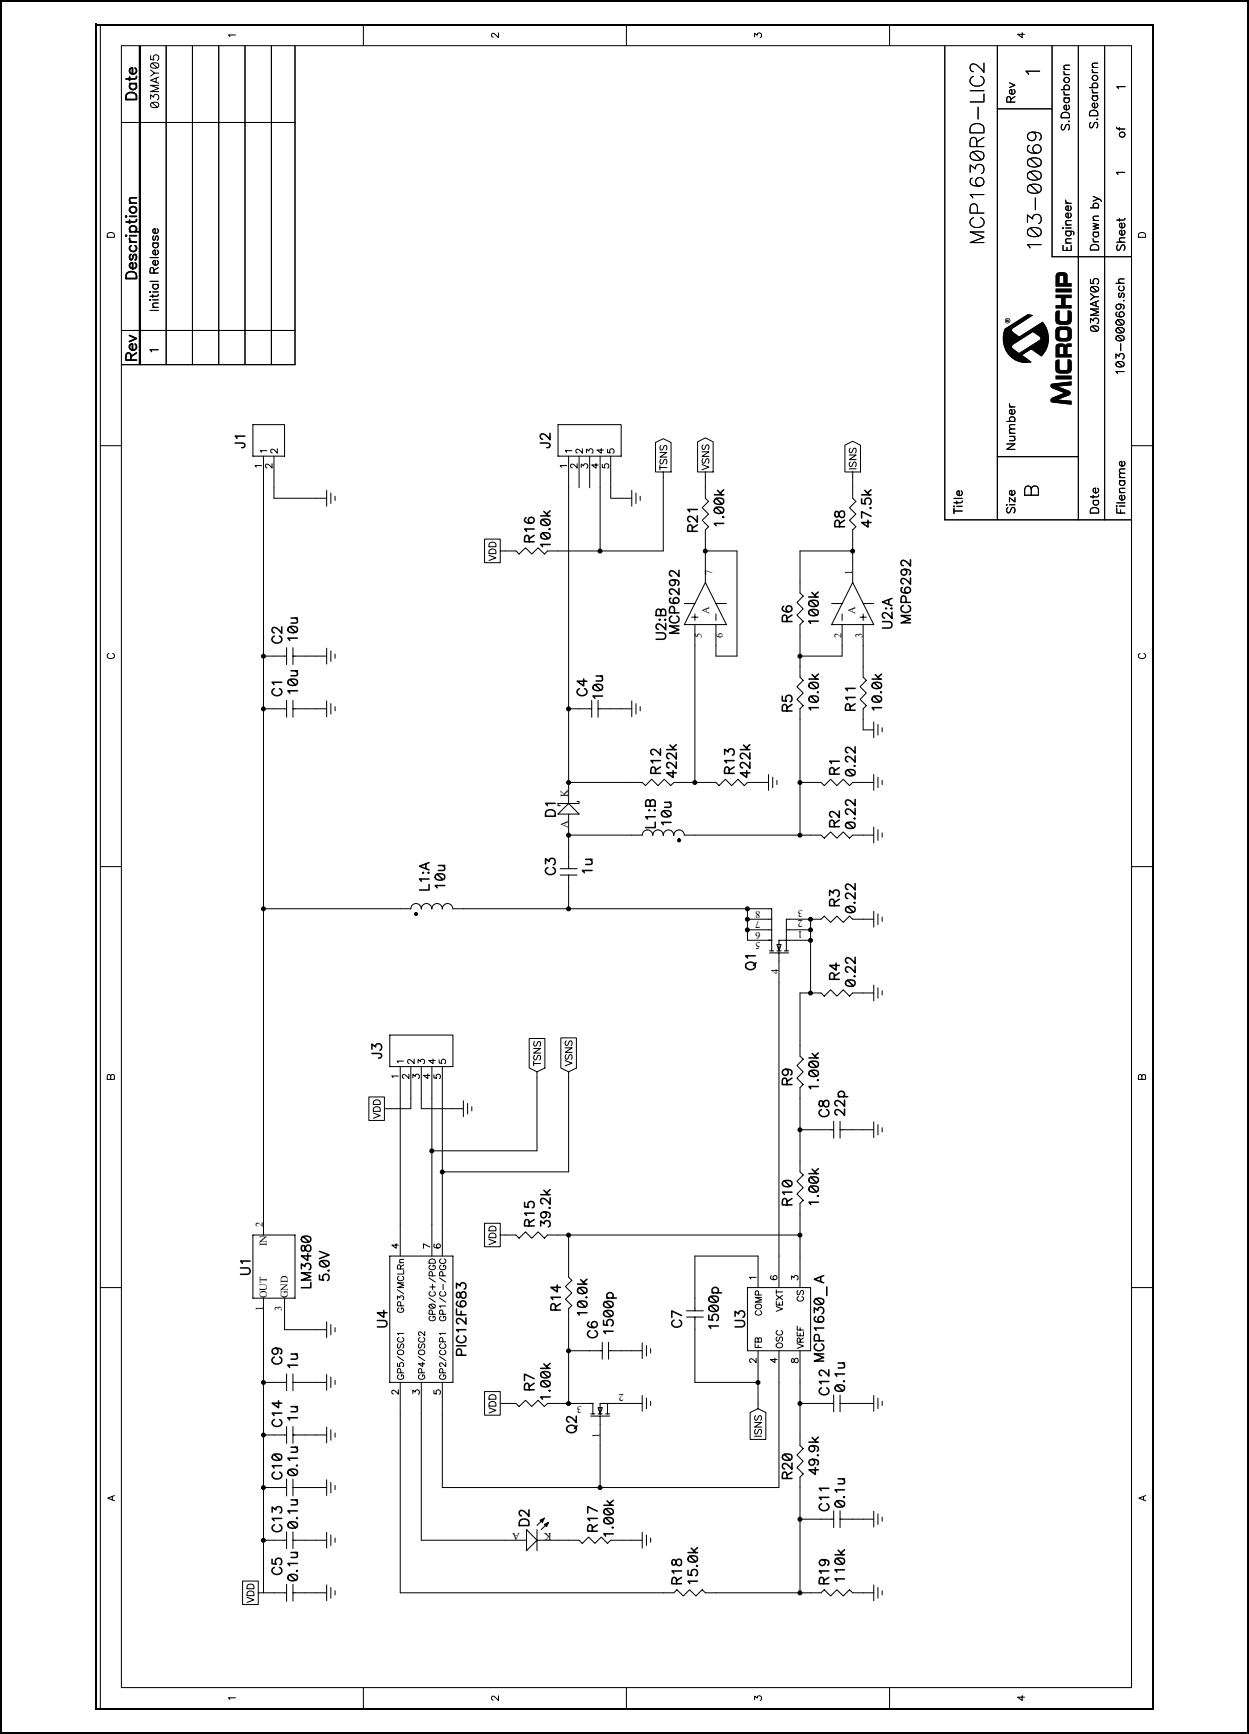

A.3 BOARD – ASSEMBLY DRAWING


A	B	C	D																									
NOTES:			<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th>REV</th> <th>DESCRIPTION</th> <th>DATE</th> </tr> <tr> <td>1</td> <td>Initial Design</td> <td>03MAY05</td> </tr> <tr> <td> </td> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> <td> </td> </tr> </table>	REV	DESCRIPTION	DATE	1	Initial Design	03MAY05										1									
REV	DESCRIPTION	DATE																										
1	Initial Design	03MAY05																										
MATERIAL: FR-4. THICKNESS 0.062 COPPER 1 OZ – SIG LYRS			TWO LAYER BOARD FINISH: ☒ SOLDERMASK OVER BARE COPPER (SMOBC) WITH HOT-AIR-LEVELED SOLDER ☐ SMOBC WITH SELECTIVE GOLD PLATING ON LANDS INDICATED. 10µl GOLD OVER 50–100µl NICKEL. ☐ 60/40 TIN-LEAD REFLOW SOLDERMASK – DYNACHEM EPIC 200 LPI OR EQUIVALENT. COLOR–Green High Gloss SILKSCREEN – White	2																								
USE ARTWORK SET NO. 105-00069 REV 1			ANY ALTERNATIVES TO THE ABOVE SPECIFICATIONS MUST BE APPROVED BY THE ENGINEERING DEPARTMENT AT MICROCHIP. THIS PCB TO BE MANUFACTURED TO MEET ALL ACCEPTANCE LEVELS OF A CLASS 2 PCB PER ANSI/IPC-A-600F.	3																								
ASSEMBLY NOTES: 1. ALL UNUSED COMPONENTS SHALL BE FREE OF SOLDER 2. ALL COMPONENTS SHALL BE MOUNTED FLUSH TO THE BOARD, EXCEPT AS NOTED. 3. MAXIMUM COMPONENT HEIGHT NOT TO EXCEED: 0.500 TOP SIDE, 0.048 BOTTOM SIDE 4. FINISHED BOARD SHALL BE FREE OF ALL RESIDUES. 5. ALL LEADS SHALL BE TRIMED TO A MAXIMUM LENGTH OF 0.045			<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="2">Title</th> <th>Rev</th> </tr> <tr> <td colspan="2">MCP1630RD-LIC2</td> <td>1</td> </tr> <tr> <td>Size</td> <td>Number</td> <td>Rev</td> </tr> <tr> <td>B</td> <td>104-00069</td> <td>1</td> </tr> <tr> <td colspan="3" style="text-align: center;">MICROCHIP</td> </tr> <tr> <td>Date</td> <td>Engineer</td> <td>S.Desborn</td> </tr> <tr> <td>03MAY05</td> <td>Drawn by</td> <td>S.Desborn</td> </tr> <tr> <td colspan="2">Filename</td> <td>Sheet 1 of 1</td> </tr> </table>	Title		Rev	MCP1630RD-LIC2		1	Size	Number	Rev	B	104-00069	1	MICROCHIP			Date	Engineer	S.Desborn	03MAY05	Drawn by	S.Desborn	Filename		Sheet 1 of 1	4
Title		Rev																										
MCP1630RD-LIC2		1																										
Size	Number	Rev																										
B	104-00069	1																										
MICROCHIP																												
Date	Engineer	S.Desborn																										
03MAY05	Drawn by	S.Desborn																										
Filename		Sheet 1 of 1																										

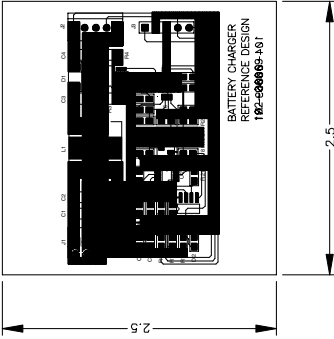

BATTERY CHARGER
1630RD-DESIGN
105-00069-01


MCP1630 Low-Cost Battery Charger User's Guide

A.4 BOARD – TOP OVERLAY

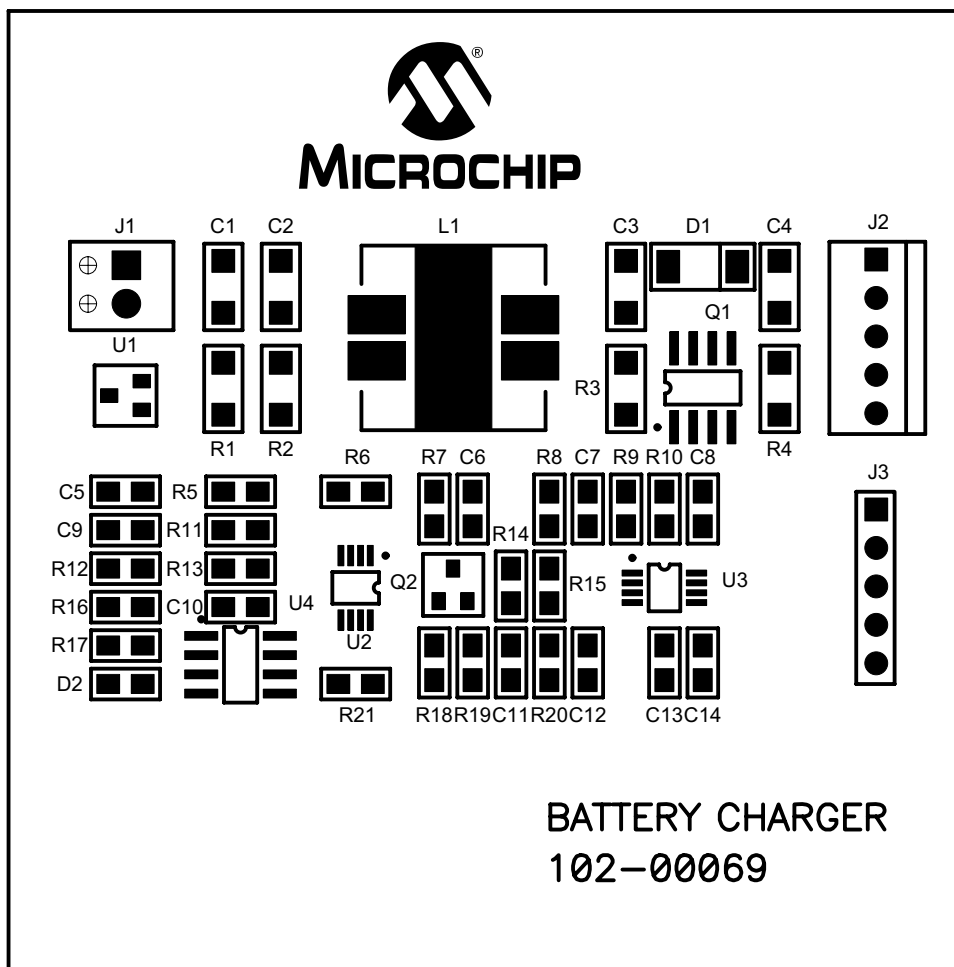

Scale = 2:1


A.5 BOARD – TOP LAYER

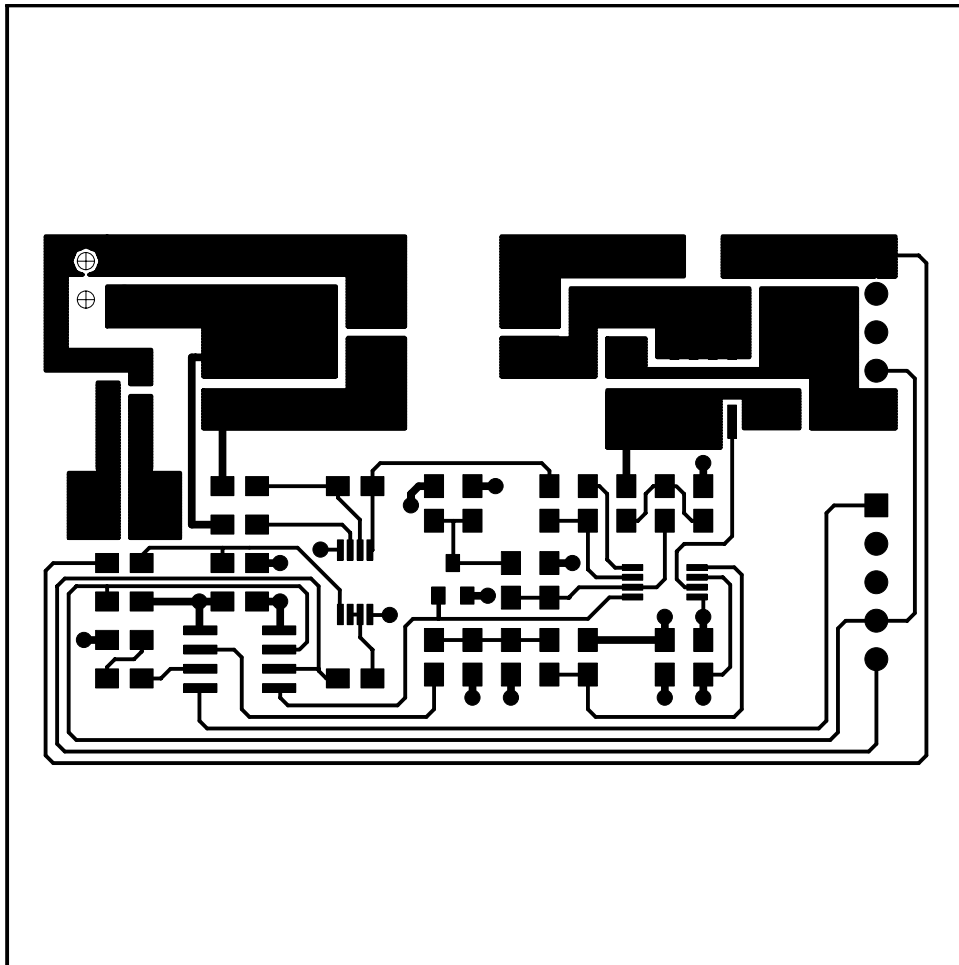

Scale = 2:1

MCP1630 Low-Cost Battery Charger User's Guide

A.6 BOARD – BOTTOM LAYER

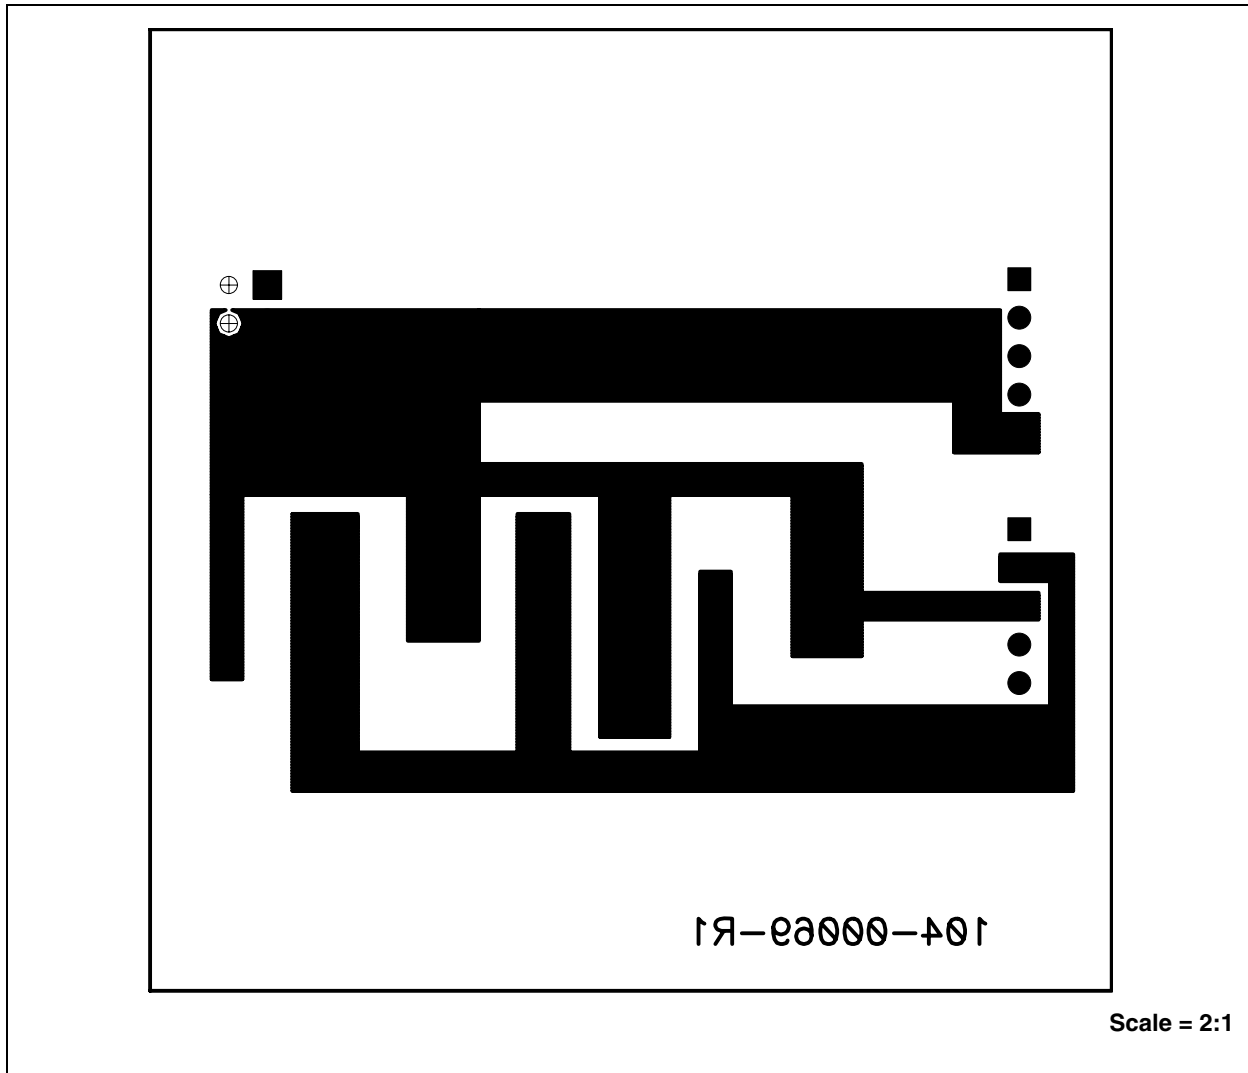

Appendix B. Bill Of Materials (BOM)

TABLE B-1: BILL OF MATERIALS (BOM)

Qty.	Reference	Description	Mfgr.	Part Number
5	C5,C10,C11,C12,C13	0.1 μ F, X7R Ceramic, 16V, 0805	Panasonic [®] -ECG	ECJ-2VB1C104K
2	C9,C14	1 μ F, X5R Ceramic, 16V, 0805	Panasonic-ECG	ECJ-2FB1C105K
1	C8	22 pF, NPO Ceramic, 50V, 0805	Panasonic-ECG	ECJ-2VC1H220J
1	C7	1500 pF, X7R Ceramic, 100V, 0805	Panasonic-ECG	ECJ-2VB2A152K
1	C3	1 μ F, X7R Ceramic, 25V, 1206	Panasonic-ECG	ECJ-3YB1E105K
3	C1,C2,C4	10 μ F, X5R Ceramic, 25V, 1206	Panasonic-ECG	ECJ-3YB1E106M
1	L1	10 μ H, Coupled Inductor, DRQ127	Coiltronics [®]	DRQ127-100
1	J3	Header, 5 Pos., 2.54 mm, HDR1X5	Molex [®]	22-03-2051
1	J2	Header, 5 Pos., 2.54 mm, Friction Lock, HDR1X5-FL	Molex [®]	22-23-2051
1	D2	Green LED, 0805	Lumex [®] Opto/Components	SML-LXT0805GW-TR
1	U1	5.0V, Voltage Regulator, SOT23	National Semiconductor	LM3480IM3-5.0
1	U3	PWM Building Block, MSOP8	Microchip Technology Inc.	MCP1630-E/MS
1	U2	Dual Operational Amplifier 10 MHz, MSOP8	Microchip Technology Inc.	MCP6292-E/MS
1	Q1	N-Channel MOSFET, SOIC8	International Rectifier	IRF7807V
1	Q2	N-Channel MOSFET, SOT23	Fairchild [®]	NDS7002A
1	U4	8-Bit FLASH MCU, SOIC8	Microchip Technology Inc.	PIC12F683-I/SN
5	R7,R9,R10,R17,R21	1.00 k Ω , 1/10W, Chip Resistor, 0805	Panasonic-ECG	ERJ-6ENF1001V
4	R5,R11,R14,R16	10.0 k Ω , 1/10W, Chip Resistor, 0805	Panasonic-ECG	ERJ-6ENF1002V
1	R18	15.0 k Ω , 1/10W, Chip Resistor, 0805	Panasonic-ECG	ERJ-6ENF1502V
1	R8	47.5 k Ω , 1/10W, Chip Resistor, 0805	Panasonic-ECG	ERJ-6ENF4752V
1	R20	49.9 k Ω , 1/10W, Chip Resistor, 0805	Panasonic-ECG	ERJ-6ENF4992V
1	R6	100 k Ω , 1/10W, Chip Resistor, 0805	Panasonic-ECG	ERJ-6ENF1003V
1	R19	110k, 1/10W, Chip Resistor, 0805	Panasonic-ECG	ERJ-6ENF1103V
2	R12,R13	422 k Ω , 1/10W, Chip Resistor, 0805	Panasonic-ECG	ERJ-6ENF4223V
4	R1,R2,R3,R4	0.22 Ω , 1/4W, Chip Resistor, 1206	Panasonic-ECG	ERJ-8RQFR22V
1	D1	3.0A, 30V Schottky Diode, SMA	Toshiba [®]	CMS01 (TE12L)
1	J1	Terminal Block, 2 Pos., 2.54 mm, TB254-2	Phoenix Contact	1725656

MCP1630 Low-Cost Battery Charger User's Guide

NOTES:



C.1 DEVICE FIRMWARE

```

graph TD
    Start([Power-Up]) --> Init[Initialize:  
Ports, Clocks, ADC,  
PWM, and Interrupts]
    Init --> B1{Is Battery  
Present?}
    B1 -- No --> B1
    B1 -- Yes --> TC[Trickle Charge:  
Turn on LED,  
Start PWM,  
Current = 200 mA]
    TC --> B2{Is Battery  
Present?}
    B2 -- No --> T1{Timer  
Expired?}
    T1 -- Yes --> CF[Charge Fault:  
Terminate Charge  
Flash LED]
    CF --> B3{Is Battery  
Present?}
    B3 -- No --> B1
    B3 -- Yes --> B1
    T1 -- No --> T2{Temp. Out  
of Range?}
    T2 -- Yes --> TF1[Temperature Fault:  
Suspend Charge,  
Flash LED]
    TF1 --> T3{Temp. Out  
of Range?}
    T3 -- Yes --> T3
    T3 -- No --> T2
    T2 -- No --> B2
    B2 -- Yes --> B4{Is Battery  
> 3V?}
    B4 -- Yes --> FC[Fast Charge:  
Reset Timers  
Control Current to  
Maintain 4.2V,  
Max. Current = 2A]
    FC --> B5{Is Battery  
Present?}
    B5 -- No --> B2
    B5 -- Yes --> B6{Is Current  
< 100 mA?}
    B6 -- No --> T4{Timer  
Expired?}
    T4 -- Yes --> CC[Charge Complete:  
Terminate Charge  
Turn off LED]
    CC --> B7{Is Battery  
Present?}
    B7 -- No --> B2
    B7 -- Yes --> B8{Is Battery  
> 4.0V?}
    B8 -- No --> B2
    B8 -- Yes --> B2
    T4 -- No --> T5{Temp. Out  
of Range?}
    T5 -- Yes --> TF2[Temperature Fault:  
Suspend Charge,  
Flash LED]
    TF2 --> T6{Temp. Out  
of Range?}
    T6 -- Yes --> T6
    T6 -- No --> T4
    T5 -- No --> B6
  
```

DS51555B-page 19



WORLDWIDE SALES AND SERVICE

AMERICAS

Corporate Office
2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support:
<http://support.microchip.com>
Web Address:
www.microchip.com

Atlanta

Alpharetta, GA
Tel: 770-640-0034
Fax: 770-640-0307

Boston

Westborough, MA
Tel: 774-760-0087
Fax: 774-760-0088

Chicago

Itasca, IL
Tel: 630-285-0071
Fax: 630-285-0075

Dallas

Addison, TX
Tel: 972-818-7423
Fax: 972-818-2924

Detroit

Farmington Hills, MI
Tel: 248-538-2250
Fax: 248-538-2260

Kokomo

Kokomo, IN
Tel: 765-864-8360
Fax: 765-864-8387

Los Angeles

Mission Viejo, CA
Tel: 949-462-9523
Fax: 949-462-9608

San Jose

Mountain View, CA
Tel: 650-215-1444
Fax: 650-961-0286

Toronto

Mississauga, Ontario,
Canada
Tel: 905-673-0699
Fax: 905-673-6509

ASIA/PACIFIC

Australia - Sydney
Tel: 61-2-9868-6733
Fax: 61-2-9868-6755

China - Beijing
Tel: 86-10-8528-2100
Fax: 86-10-8528-2104

China - Chengdu
Tel: 86-28-8676-6200
Fax: 86-28-8676-6599

China - Fuzhou
Tel: 86-591-8750-3506
Fax: 86-591-8750-3521

China - Hong Kong SAR
Tel: 852-2401-1200
Fax: 852-2401-3431

China - Qingdao
Tel: 86-532-8502-7355
Fax: 86-532-8502-7205

China - Shanghai
Tel: 86-21-5407-5533
Fax: 86-21-5407-5066

China - Shenyang
Tel: 86-24-2334-2829
Fax: 86-24-2334-2393

China - Shenzhen
Tel: 86-755-8203-2660
Fax: 86-755-8203-1760

China - Shunde
Tel: 86-757-2839-5507
Fax: 86-757-2839-5571

China - Wuhan
Tel: 86-27-5980-5300
Fax: 86-27-5980-5118

China - Xian
Tel: 86-29-8833-7250
Fax: 86-29-8833-7256

ASIA/PACIFIC

India - Bangalore
Tel: 91-80-2229-0061
Fax: 91-80-2229-0062

India - New Delhi
Tel: 91-11-5160-8631
Fax: 91-11-5160-8632

India - Pune
Tel: 91-20-2566-1512
Fax: 91-20-2566-1513

Japan - Yokohama
Tel: 81-45-471- 6166
Fax: 81-45-471-6122

Korea - Gumi
Tel: 82-54-473-4301
Fax: 82-54-473-4302

Korea - Seoul
Tel: 82-2-554-7200
Fax: 82-2-558-5932 or
82-2-558-5934

Malaysia - Penang
Tel: 60-4-646-8870
Fax: 60-4-646-5086

Philippines - Manila
Tel: 63-2-634-9065
Fax: 63-2-634-9069

Singapore
Tel: 65-6334-8870
Fax: 65-6334-8850

Taiwan - Hsin Chu
Tel: 886-3-572-9526
Fax: 886-3-572-6459

Taiwan - Kaohsiung
Tel: 886-7-536-4818
Fax: 886-7-536-4803

Taiwan - Taipei
Tel: 886-2-2500-6610
Fax: 886-2-2508-0102

Thailand - Bangkok
Tel: 66-2-694-1351
Fax: 66-2-694-1350

EUROPE

Austria - Wels
Tel: 43-7242-2244-399
Fax: 43-7242-2244-393

Denmark - Copenhagen
Tel: 45-4450-2828
Fax: 45-4485-2829

France - Paris
Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79

Germany - Munich
Tel: 49-89-627-144-0
Fax: 49-89-627-144-44

Italy - Milan
Tel: 39-0331-742611
Fax: 39-0331-466781

Netherlands - Drunen
Tel: 31-416-690399
Fax: 31-416-690340

Spain - Madrid
Tel: 34-91-708-08-90
Fax: 34-91-708-08-91

UK - Wokingham
Tel: 44-118-921-5869
Fax: 44-118-921-5820