

TPS53119EVM-690 User Guide

The TPS53119EVM-690 evaluation module allows users to evaluate the Texas Instruments TPS53119, a small-sized, single, buck controller with adaptive on-time D-CAP™ mode control. Included in this document are operating and testing descriptions as well as the EVM schematic, bill of materials, and board layout.

Contents

1	Introduction	3
2	Description	3
	2.1 Typical Applications	3
	2.2 Features	3
3	Electrical Performance Specifications	4
4	Schematic	5
5	Test Setup	6
	5.1 Test Equipment	6
	5.2 Recommended Test Setup	7
6	Configurations	7
	6.1 Switching Frequency Selection	7
	6.2 Soft-Start Selection	8
	6.3 Mode Selection	8
	6.4 Enable Selection	8
7	Test Procedure	9
	7.1 Line/Load Regulation and Efficiency Measurement Procedure	9
	7.2 Control Loop Gain and Phase Measurement Procedure	9
	7.3 List of Test Points	10
	7.4 Equipment Shutdown	10
8	Performance Data and Typical Characteristic Curves	11
	8.1 Efficiency	11
	8.2 Load Regulation	11
	8.3 Output Transient	12
	8.4 Output Ripple	13
	8.5 Switching Node	13
	8.6 Enable Turnon/Turnoff	14
	8.7 Output 1.1-V Prebias Turnon	15
	8.8 Bode Plot	15
	8.9 Thermal Image	16
9	EVM Assembly Drawing and PCB Layout	17
10	Bill of Materials	21

List of Figures

1	TPS53119EVM-690 Schematic	5
2	Tip and Barrel Measurement for Vout Ripple	6
3	TPS53119EVM-690 Recommended Test Setup	7
4	Efficiency	11
5	Load Regulation	11
6	Output Load Transient	12
7	Output Load Transient	12

8	Output Ripple	13
9	Switching Node	13
10	Enable Turnon	14
11	Enable Turnoff	14
12	Output 1.1-V Prebias Turnon	15
13	Bode Plot at 12 V _{IN} , 1.1 V/25 A.....	15
14	Top Board at 12 V _{IN} , 1.1 V/25 A.....	16
15	Bottom Board at 12 V _{IN} , 1.1 V/25 A	16
16	TPS53119EVM-690 Top Layer Assembly Drawing, Top View.....	17
17	TPS53119EVM-690 Bottom Assembly Drawing, Bottom View	17
18	TPS53119EVM-690 Top Copper, Top View.....	18
19	TPS53119EVM-690 Layer-2 Copper, Top View	18
20	TPS53119EVM-690 Layer-3 Copper, Top View	19
21	TPS53119EVM-690 Layer-4 Copper, Top View	19
22	TPS53119EVM-690 Layer-5 Copper, Top View	20
23	TPS53119EVM-690 Bottom Layer Copper, Top View	20

List of Tables

1	TPS53119EVM-690 Electrical Performance Specifications.....	4
2	Switching Frequency Selection	8
3	Soft-Start Selection	8
4	MODE Selection	8
5	Enable Selection	8
6	Functions of Each Test Points.....	10
7	The EVM Bill of Materials According to Schematic Shown in	21

Trademarks

D-CAP is a trademark of Texas Instruments.

All other trademarks are the property of their respective owners.

1 Introduction

The TPS53119EVM-690 evaluation module (EVM) uses the TPS53119 device. The TPS53119 is a small-size, single buck controller with adaptive on-time D-CAP™ mode control. It provides a fixed 1.1-V output at up to 25 A from a 12-V input bus. TPS53119EVM-690 also uses the 5-mm × 6-mm TI power block MOSFET (CSD86350Q5D) for high power density and superior thermal performance.

2 Description

The TPS53119EVM-690 is designed to use a regulated 12-V bus to produce a regulated 1.1-V output at up to 25 A of load current. The TPS53119EVM-690 is designed to demonstrate the TPS53119 in a typical low-voltage application while providing test points to evaluate the performance of the TPS53119.

2.1 Typical Applications

- Point of load systems
- Storage computer
- Server computer
- Multifunction printer
- Embedded computing

2.2 Features

The TPS53119EVM-690 features:

- 25-Adc, steady-state output current
- Support prebias output voltage start-up
- High efficiency and high power density by using TI power block MOSFET
- J1 for selectable switching frequency setting
- J2 for selectable internal voltage servo soft start
- J3 for enable function
- J6 for auto-skip and forced CCM selection
- Convenient test points for probing critical waveforms

3 Electrical Performance Specifications

Table 1. TPS53119EVM-690 Electrical Performance Specifications

PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
INPUT CHARACTERISTICS					
Voltage range	V_{IN}	8	12	14	V
Maximum input current	$V_{IN} = 8\text{ V}$, $I_{OUT} = 25\text{ A}$		4		A
No load input current	$V_{IN} = 14\text{ V}$, $I_{OUT} = 0\text{ A}$ with auto-skip mode		1		mA
OUTPUT CHARACTERISTICS					
Output voltage V_{OUT}			1.1		V
Output voltage regulation	Line regulation($V_{IN} = 8\text{ V}$ -14 V)		0.5%		
	Load regulation($V_{IN} = 12\text{ V}$, $I_{OUT} = 0\text{ A}$ -25 A)		0.5%		
Output voltage ripple	$V_{IN} = 12\text{ V}$, $I_O = 25\text{ A}$		25		mVpp
Output load current		0		25	A
Output over current			35		A
SYSTEMS CHARACTERISTICS					
Switching frequency			300		kHz
Peak efficiency	$V_{IN} = 12\text{ V}$, 1.1 V/10 A		90.90%		
Full-load efficiency	$V_{IN} = 12\text{ V}$, 1.1 V/25 A		88.59%		
Operating temperature			25		°C

Note: Jumpers set to default locations, See [Section 6](#) of this user's guide

4 Schematic

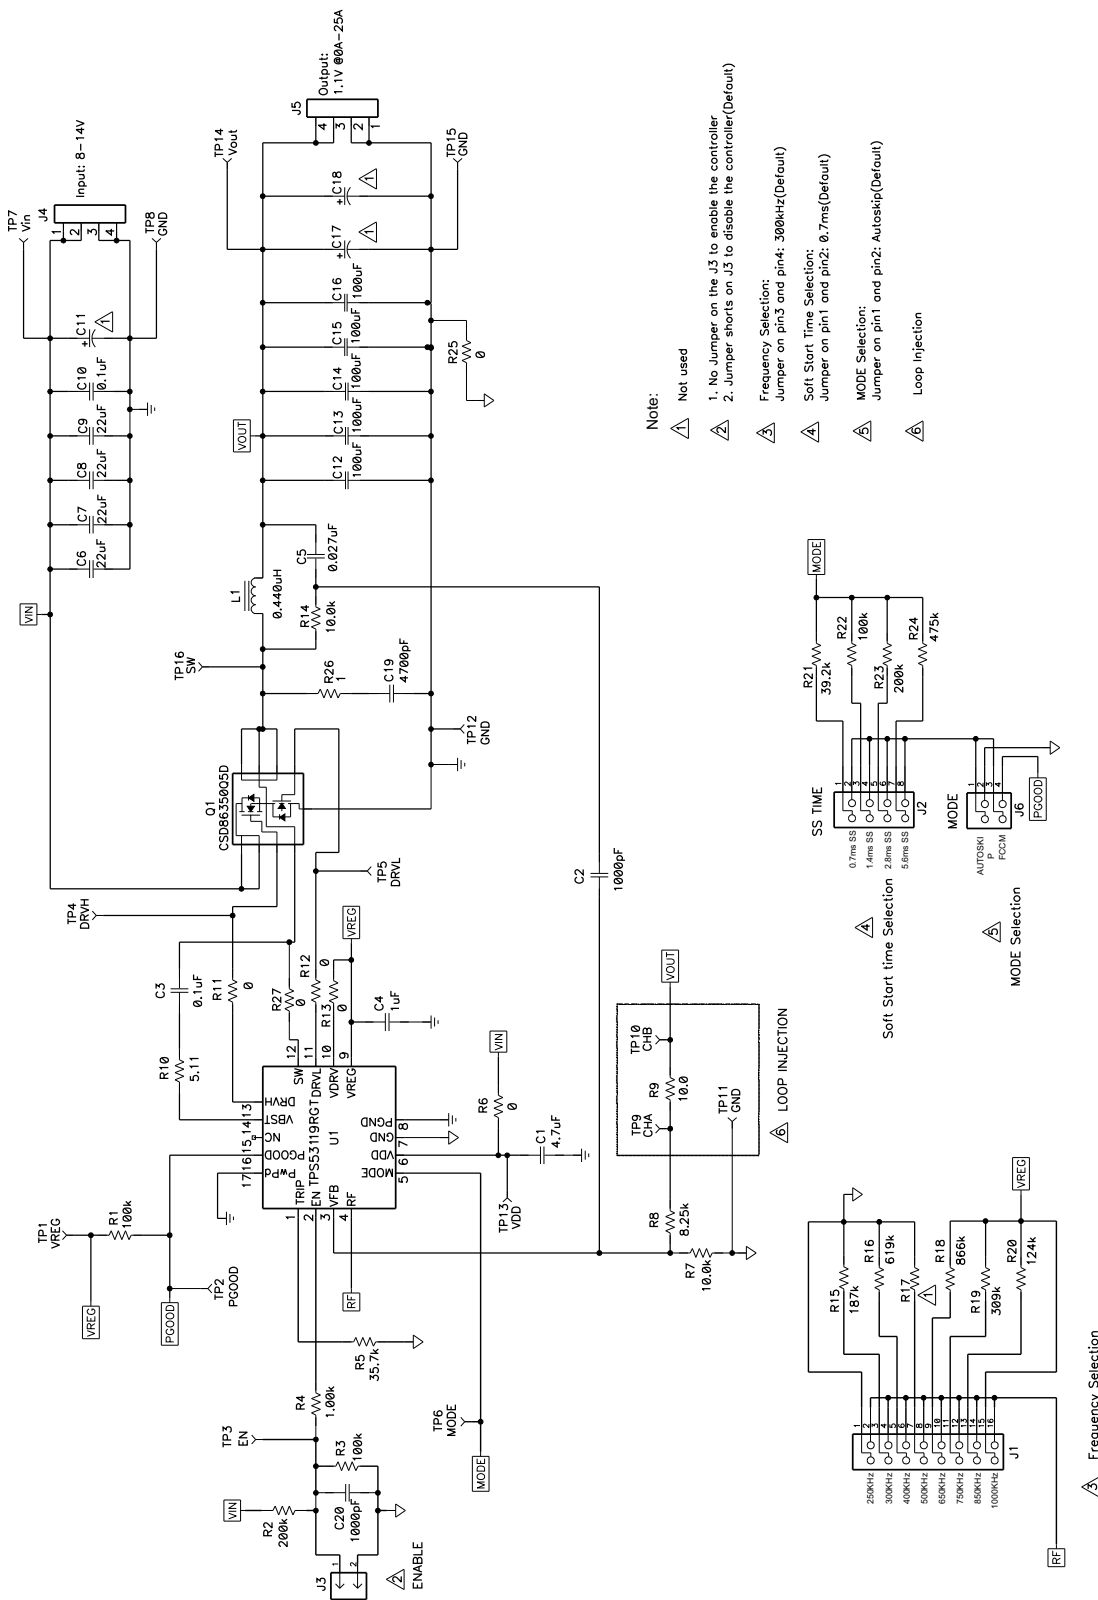


Figure 1. TPS53119EVM-690 Schematic

5 Test Setup

5.1 Test Equipment

Voltage Source: The input voltage source V_{IN} must be a 0-V to 14-V variable dc source capable of supplying 10 Adc. Connect V_{IN} to J4 as shown in Figure 3.

Multimeters:

V1: V_{IN} at TP7 (V_{in}) and TP8 (GND).

V2: V_{OUT} at TP14 (V_{out}) and TP15 (GND).

A1: V_{in} input current

Output Load: The output load must be an electronic constant resistance mode load capable of 0 Adc to 30 Adc at 1.1 V.

Oscilloscope: A digital or analog oscilloscope can be used to measure the output ripple. The oscilloscope must be set for 1-M Ω impedance, 20-MHz bandwidth, ac coupling, 2- μ s/division horizontal resolution, 50-mV/division vertical resolution. Test points TP14 and TP15 can be used to measure the output ripple voltage by placing the oscilloscope probe tip through TP14 and holding the ground barrel on TP15 as shown in Figure 2. Using a leaded ground connection may induce additional noise due to the large ground loop.

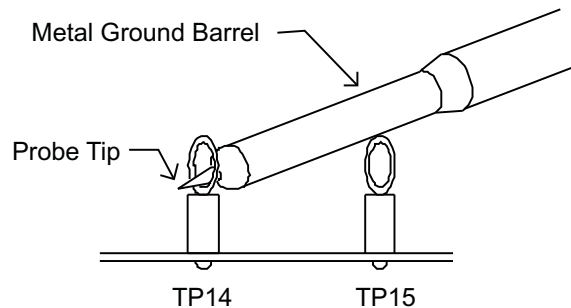


Figure 2. Tip and Barrel Measurement for Vout Ripple

Fan: Some of the components of this EVM may approach temperatures of 60°C during operation. A small fan capable of 200-400 LFM is recommended to reduce component temperatures while the EVM is operating. The EVM must not be probed if the fan is not running.

Recommended Wire Gauge:

1. V_{IN} to J4 (12-V input):

The recommended wire size is 1 $\times$ AWG 14 per input connection, with the total length of wire less than 4 feet (2-foot input, 2-foot return).

2. J5 to LOAD:

The minimum recommended wire size is 2 $\times$ AWG 14, with the total length of wire less than 4 feet (2-foot output, 2-foot return)

5.2 Recommended Test Setup

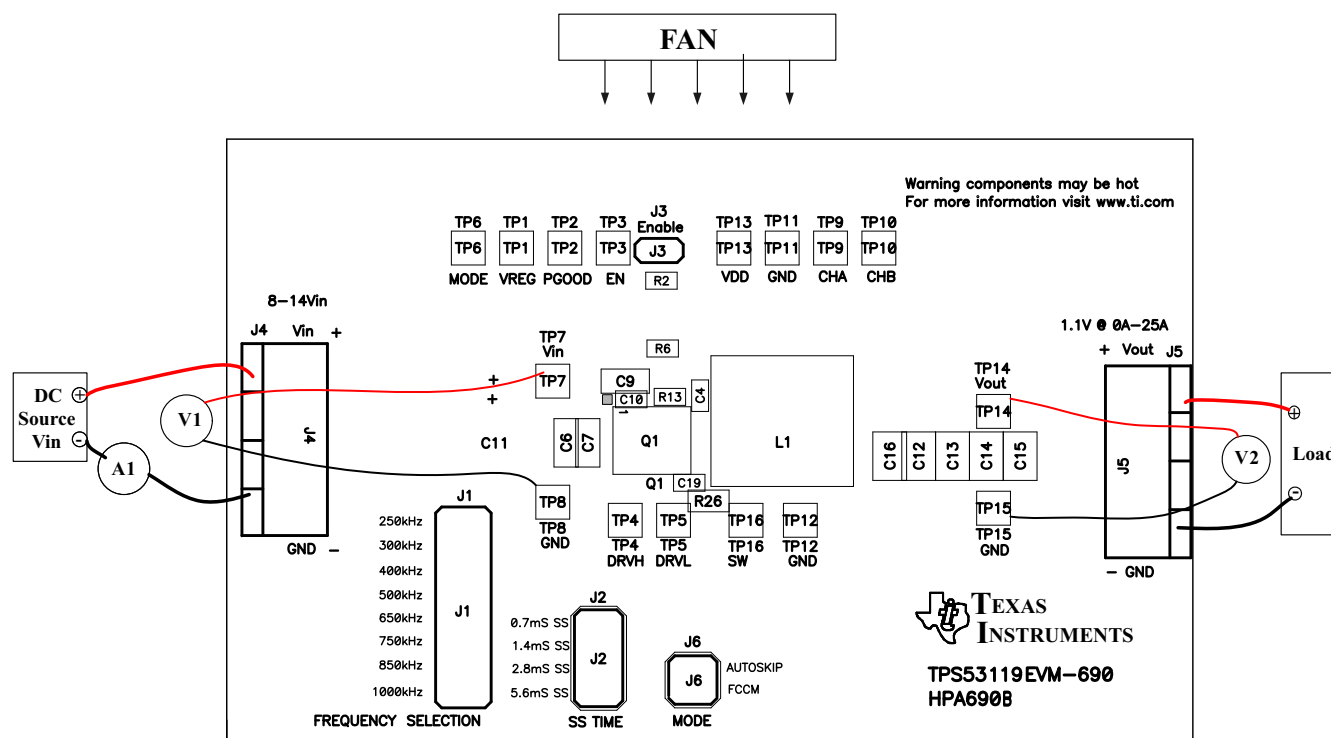


Figure 3. TPS53119EVM-690 Recommended Test Setup

Figure 3 is the recommended test setup to evaluate the TPS53119EVM-690. Working at an ESD workstation, make sure that any wrist straps, bootstraps, or mats are connected referencing the user to earth ground before power is applied to the EVM.

Input Connections:

1. Prior to connecting the dc input source V_{IN} , it is advisable to limit the source current from V_{IN} to 10 A maximum. Ensure that V_{IN} is initially set to 0 V and connected as shown in Figure 3.
2. Connect a voltmeter V1 at TP7 (V_{IN}) and TP8 (GND) to measure the input voltage.
3. Connect a current meter A1 to measure the input current.

Output Connections:

1. Connect load to J5, and set Load to constant resistance mode to sink 0 A_{dc} before V_{IN} is applied.
2. Connect a voltmeter V2 at TP14 (V_{OUT}) and TP15 (GND) to measure the output voltage.

Other Connections:

Place a fan as shown in Figure 3 and turn it on, ensuring that air is flowing across the EVM.

6 Configurations

All jumper selections must be made prior to applying power to the EVM. Users can configure this EVM per the following configurations.

6.1 Switching Frequency Selection

The switching frequency can be set by J1.

Default setting: 300 kHz

Table 2. Switching Frequency Selection

JUMPER SET TO	RESISTOR (RF) CONNECTIONS (Ω)	SWITCHING FREQUENCY (kHz)
Top(1-2 pin shorted)	0	250
Second (3-4 pin shorted)	187 k	300
Third (5-6 pin shorted)	619 k	400
Fourth (7-8 pin shorted)	Open	500
Fifth (9-10 pin shorted)	866 k	650
Sixth (11-12 pin shorted)	309 k	750
Seventh (13-14 pin shorted)	124 k	850
Bottom (15-16 pin shorted)	0	1000

6.2 Soft-Start Selection

The soft-start time can be set by J2.

Default setting: 0.7 ms

Table 3. Soft-Start Selection

JUMPER SET TO	R _{MODE} CONNECTIONS (Ω)	SOFT-START TIME (ms)
Top (1-2 pin shorted)	39.2 k	0.7
Second (3-4 pin shorted)	100 k	1.4
Third (5-6 pin shorted)	200 k	2.8
Bottom (7-8 pin shorted)	475 k	5.6

6.3 Mode Selection

The MODE can be set by J6.

Default setting: Auto Skip

Table 4. MODE Selection

Jumper Set to	MODE Selection
Top (1-2 pin shorted)	Auto Skip
Bottom (3-4 pin shorted)	Forced CCM

6.4 Enable Selection

The controller can be enabled and disabled by J3.

Default setting: Jumper shorts on J3 to disable the controller

Table 5. Enable Selection

JUMPER SET TO	ENABLE SELECTION
Jumper shorts on J3	Disable the controller
No Jumper shorts on J3	Enable the controller

7 Test Procedure

7.1 Line/Load Regulation and Efficiency Measurement Procedure

1. Set up EVM as described in [Section 5](#) and [Figure 3](#).
2. Ensure that load is set to constant resistance mode and to sink 0 Adc.
3. Ensure that all jumper configuration settings per [Section 6](#).
4. Ensure that the jumper provided in the EVM shorts on J3 before V_{IN} is applied.
5. Increase V_{IN} from 0 V to 12 V. Using V1 to measure input voltage.
6. Remove the jumper on J3 to enable the controller.
7. Use V2 to measure V_{OUT} voltage.
8. Vary Load from 0-25 Adc; V_{OUT} must remain in load regulation.
9. Vary V_{IN} from 8 V to 14 V, V_{OUT} must remain in line regulation.
10. Put the jumper on J3 to disable the controller.
11. Decrease load to 0 A.
12. Decrease V_{IN} to 0 V.

7.2 Control Loop Gain and Phase Measurement Procedure

TPS53119EVM-690 contains a 10- Ω series resistor in the feedback loop for loop response analysis.

1. Set up EVM as described in [Section 5](#) and [Figure 3](#).
2. Connect isolation transformer to test points marked TP9 and TP10.
3. Connect input signal amplitude measurement probe (channel A) to TP9. Connect output signal amplitude measurement probe (channel B) to TP10.
4. Connect ground lead of channel A and channel B to TP11.
5. Inject approximately 40-mV or less signal through the isolation transformer.
6. Sweep the frequency from 100 Hz to 1 MHz with 10 Hz or lower post filter. The control loop gain and phase margin can be measured.
7. Disconnect isolation transformer from bode plot test points before making other measurements. (Signal injection into feedback may interfere with accuracy of other measurements.)

7.3 List of Test Points

Table 6. Functions of Each Test Points

TEST POINTS	NAME	DESCRIPTION
TP1	VREG	6.2-V LDO output
TP2	PGOOD	Power Good
TP3	EN	Enable pin
TP4	DRVH	High-side driver output
TP5	DRVL	Low-side driver output
TP6	MODE	Soft-start and auto skip/FCCM selection pin
TP7	V _{in}	V _{IN}
TP8	GND	GND for V _{IN}
TP9	CHA	Input A for loop injection
TP10	CHB	Input B for loop injection
TP11	GND	GND
TP12	GND	GND
TP13	VDD	Controller power supply input
TP14	V _{out}	Output voltage
TP15	GND	GND for output voltage

7.4 Equipment Shutdown

1. Shut down load.
2. Shut down V_{IN}.
3. Shut down FAN.

8 Performance Data and Typical Characteristic Curves

Figure 4 through Figure 12 present typical performance curves for TPS53119EVM-690.

8.1 Efficiency

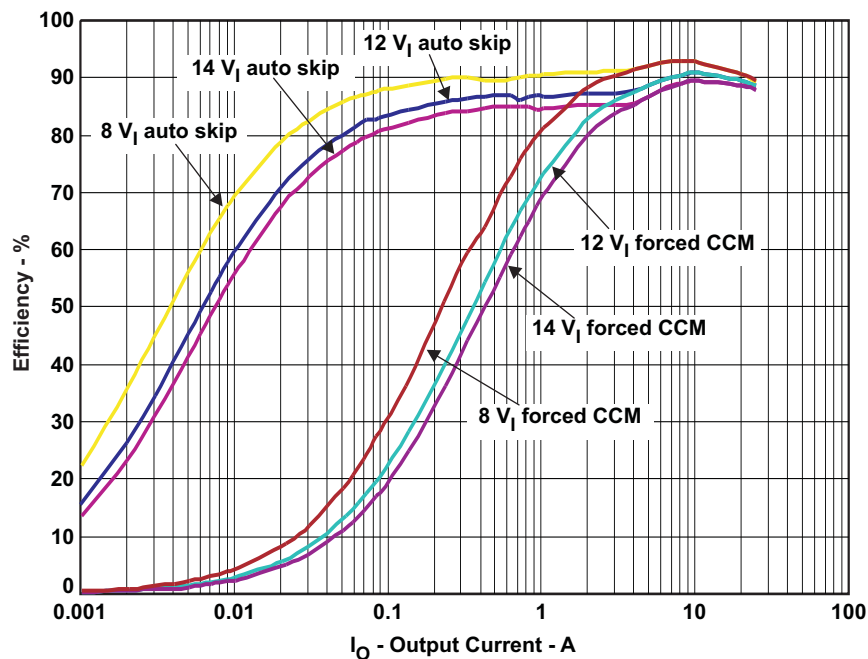


Figure 4. Efficiency

8.2 Load Regulation

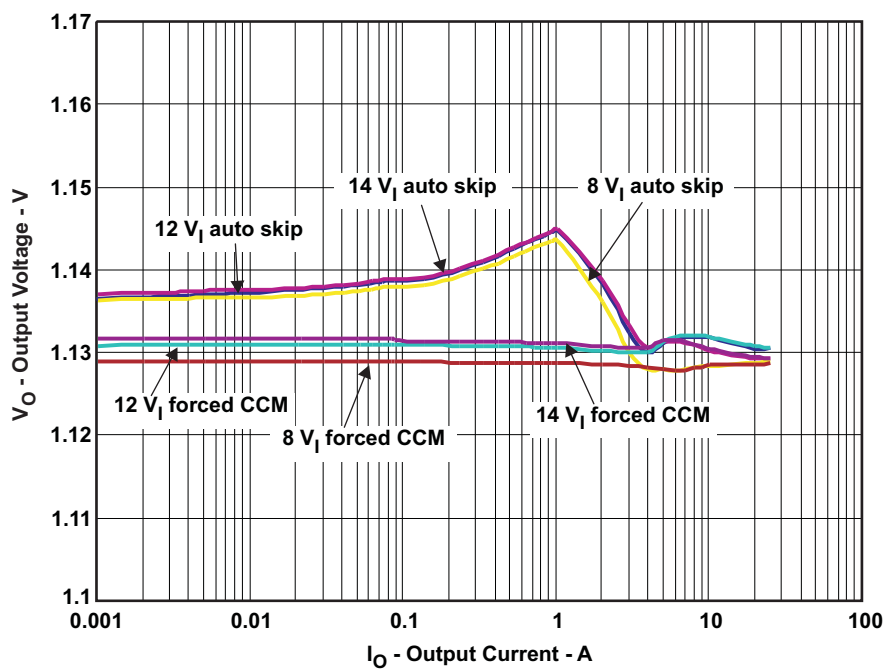


Figure 5. Load Regulation

8.3 Output Transient

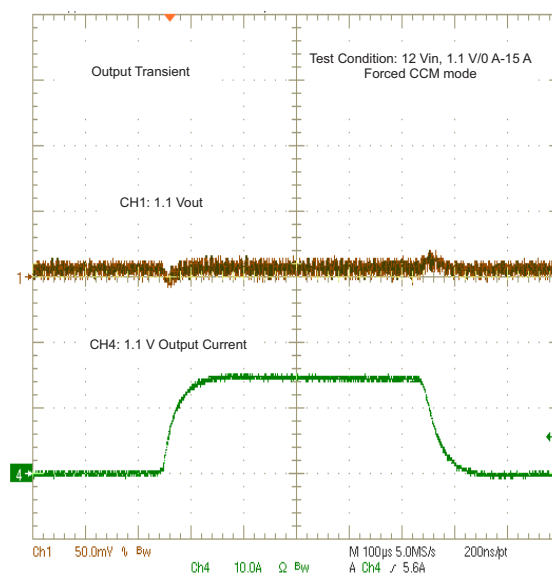


Figure 6. Output Load Transient

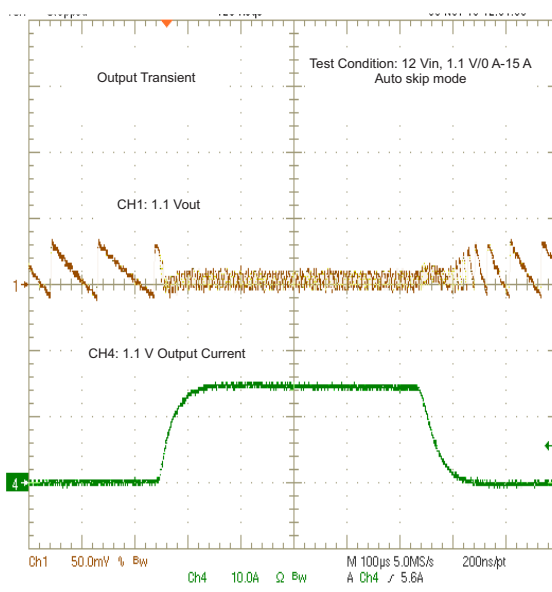


Figure 7. Output Load Transient

8.4 Output Ripple

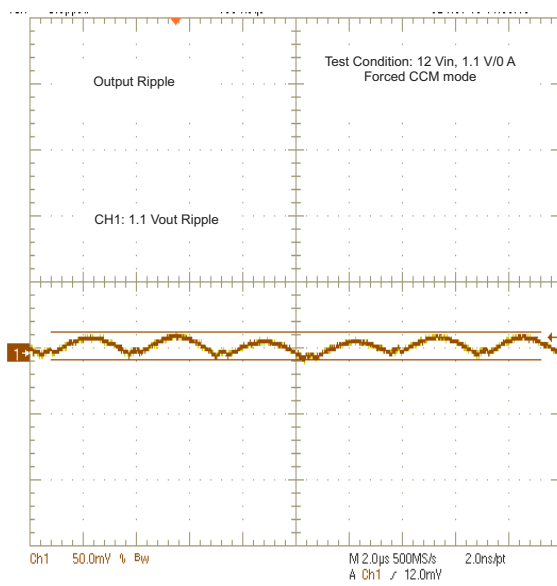


Figure 8. Output Ripple

8.5 Switching Node

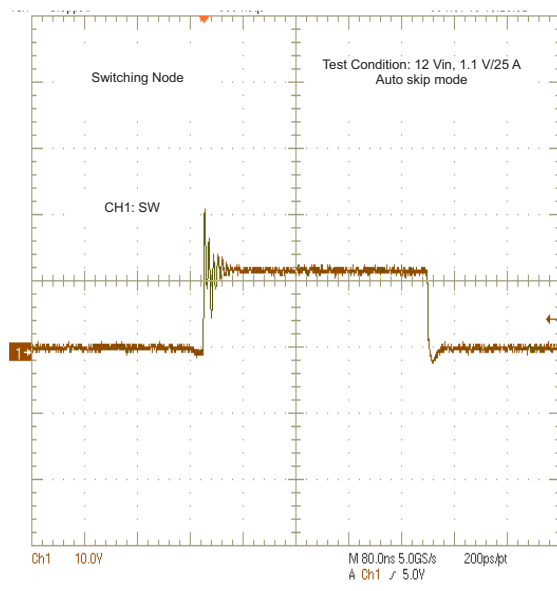


Figure 9. Switching Node

8.6 Enable Turnon/Turnoff

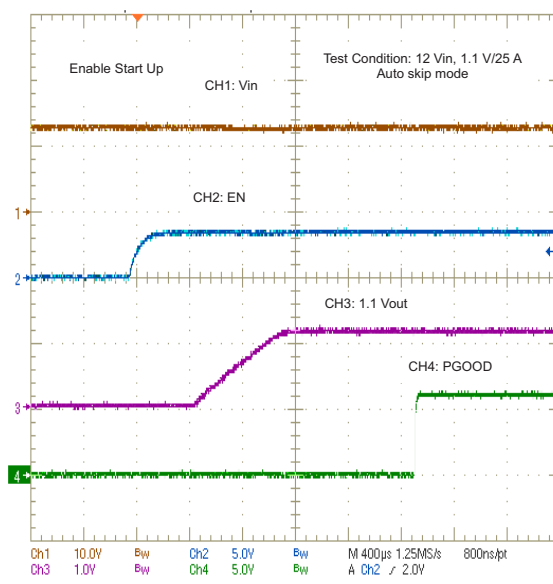


Figure 10. Enable Turnon

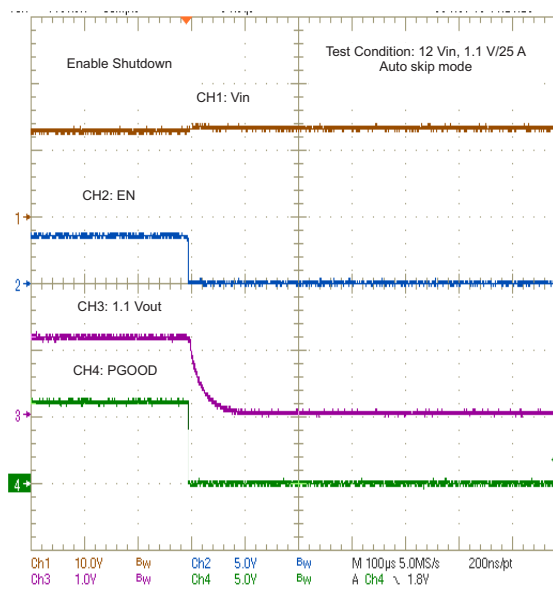


Figure 11. Enable Turnoff

8.7 Output 1.1-V Prebias Turnon

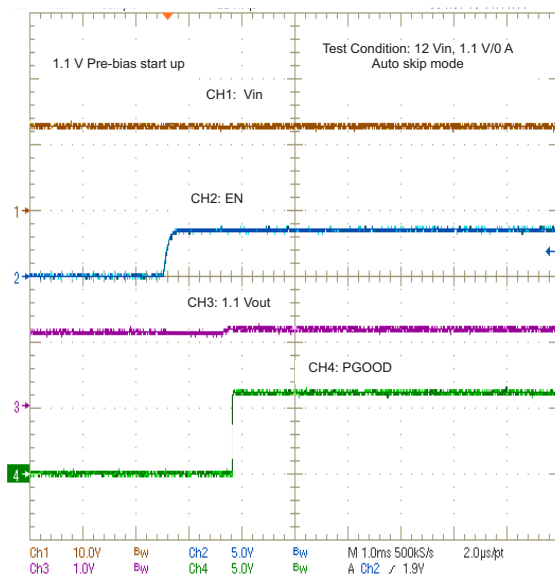


Figure 12. Output 1.1-V Prebias Turnon

8.8 Bode Plot

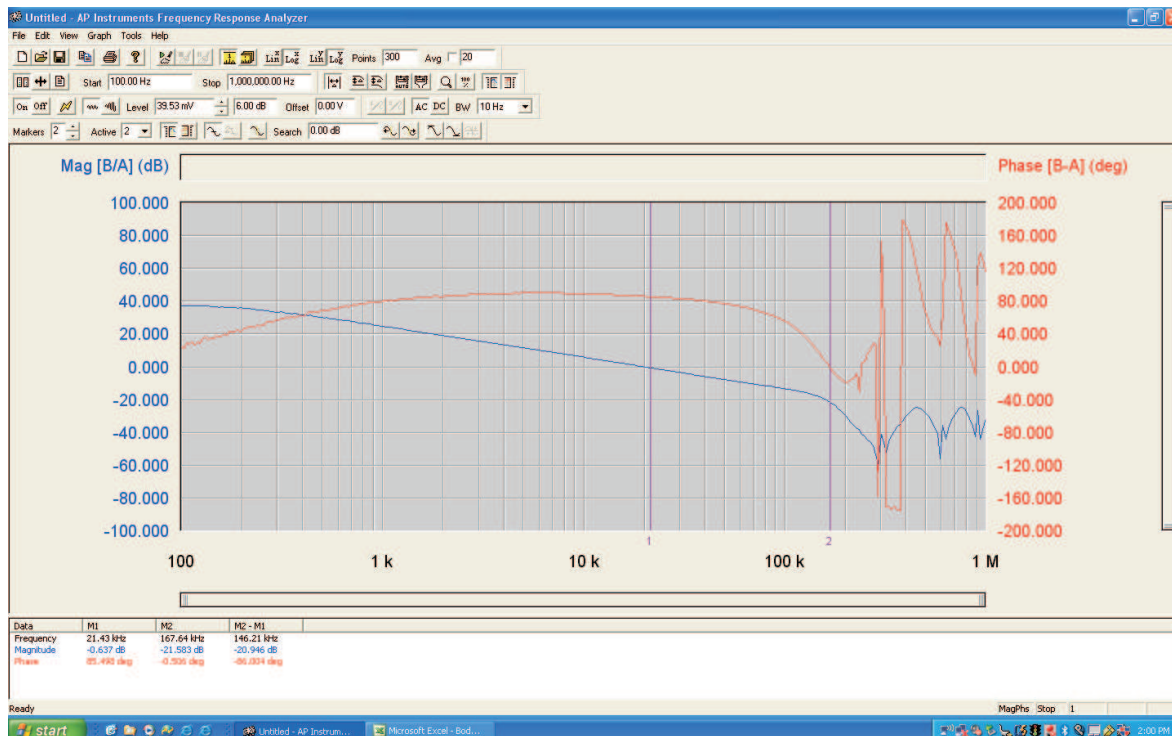


Figure 13. Bode Plot at 12 V_{IN}, 1.1 V/25 A

8.9 Thermal Image

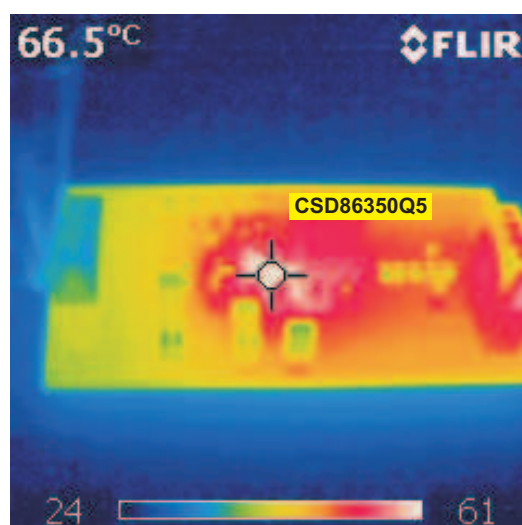


Figure 14. Top Board at 12 V_{IN}, 1.1 V/25 A

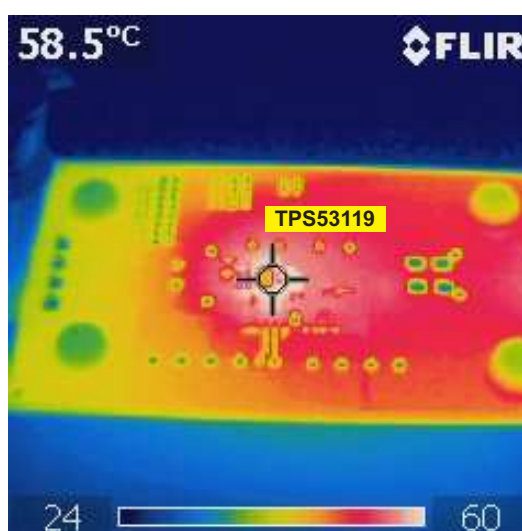


Figure 15. Bottom Board at 12 V_{IN}, 1.1 V/25 A

9 EVM Assembly Drawing and PCB Layout

Figure 16 through Figure 23 show the design of the TPS53119EVM-690 printed-circuit board. The EVM has been designed using six layers, 2-oz copper circuit board.

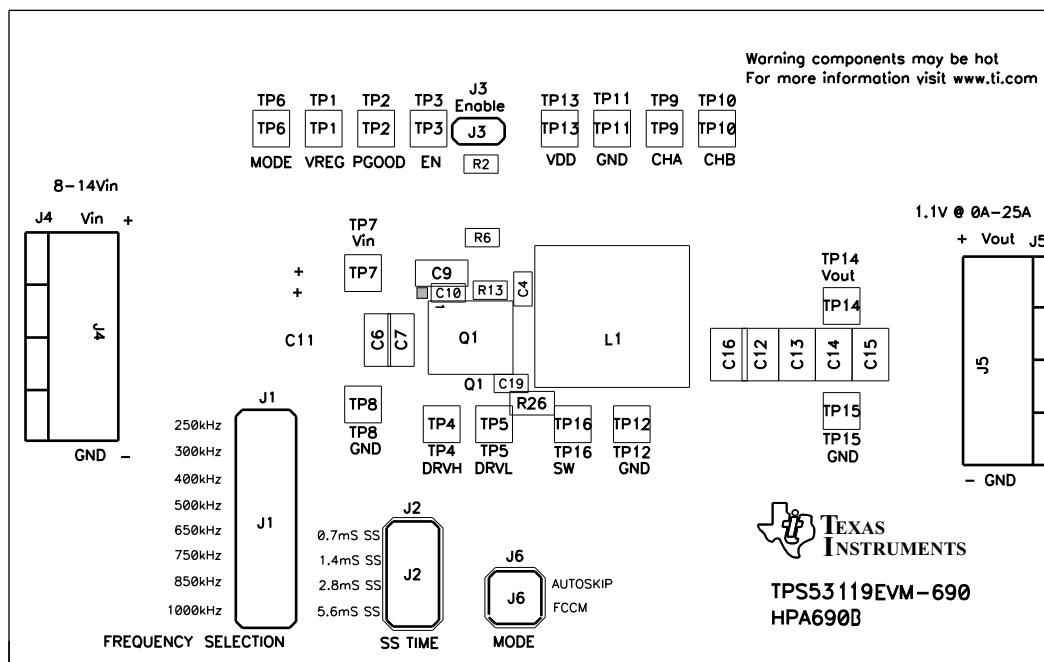


Figure 16. TPS53119EVM-690 Top Layer Assembly Drawing, Top View

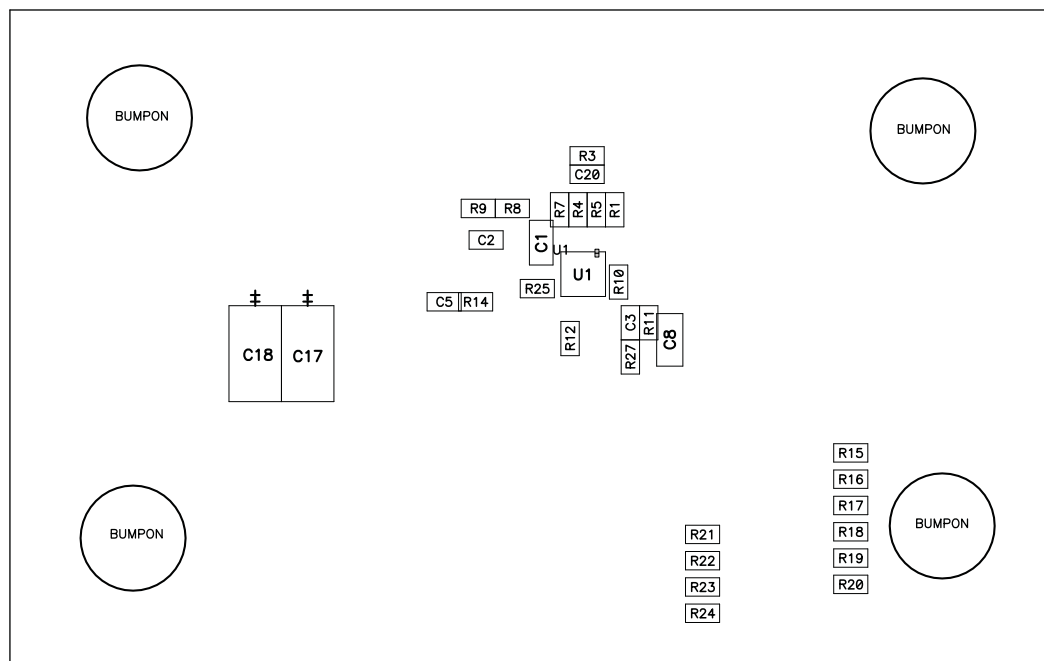


Figure 17. TPS53119EVM-690 Bottom Assembly Drawing, Bottom View

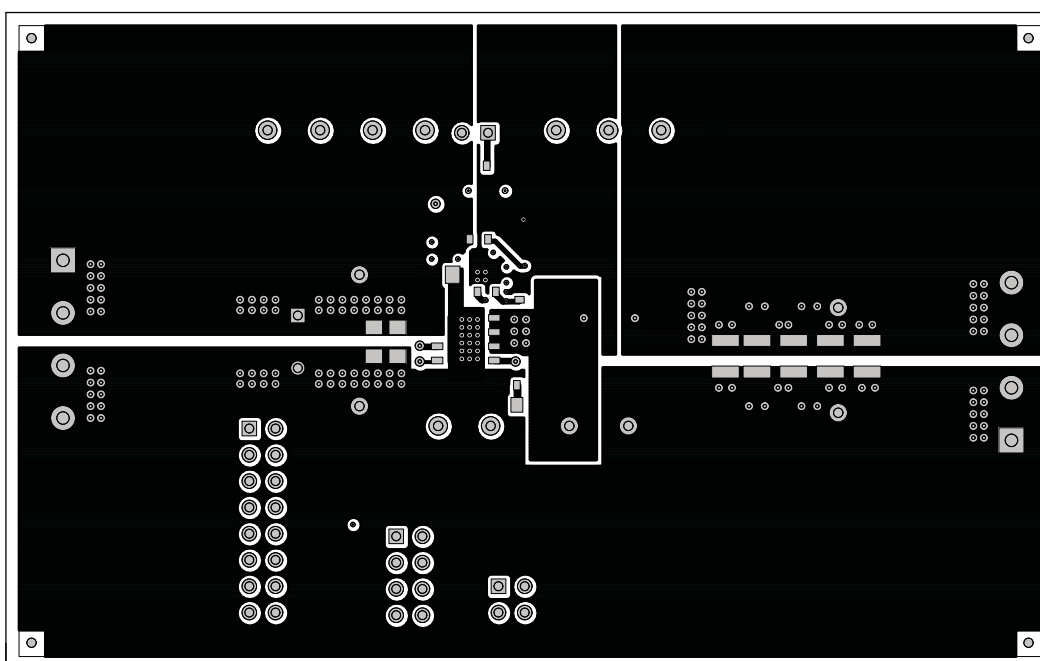


Figure 18. TPS53119EVM-690 Top Copper, Top View

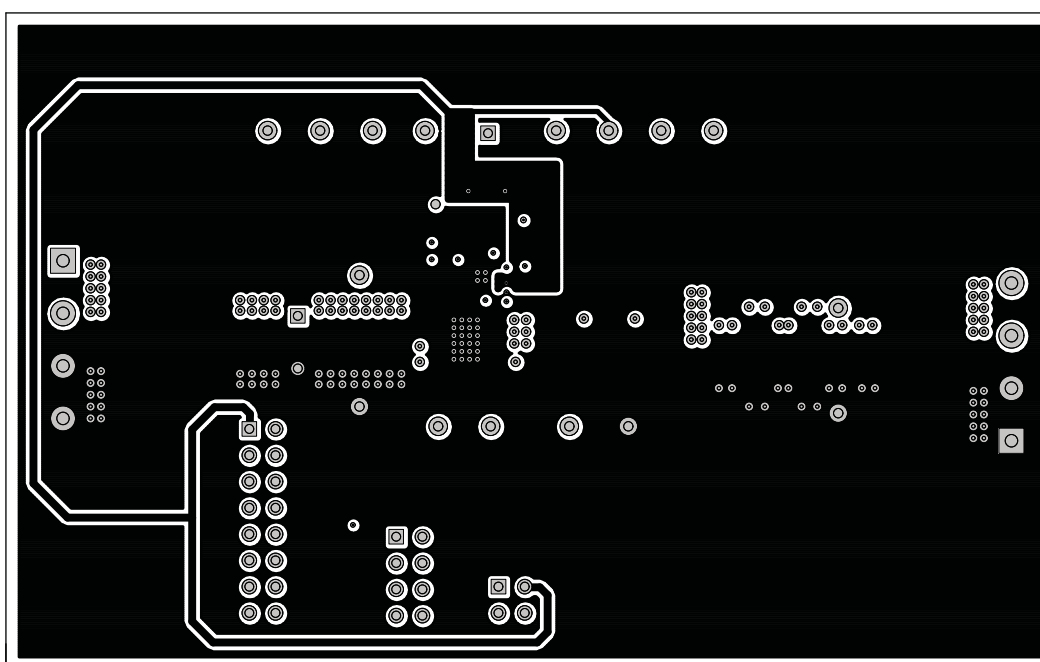


Figure 19. TPS53119EVM-690 Layer-2 Copper, Top View

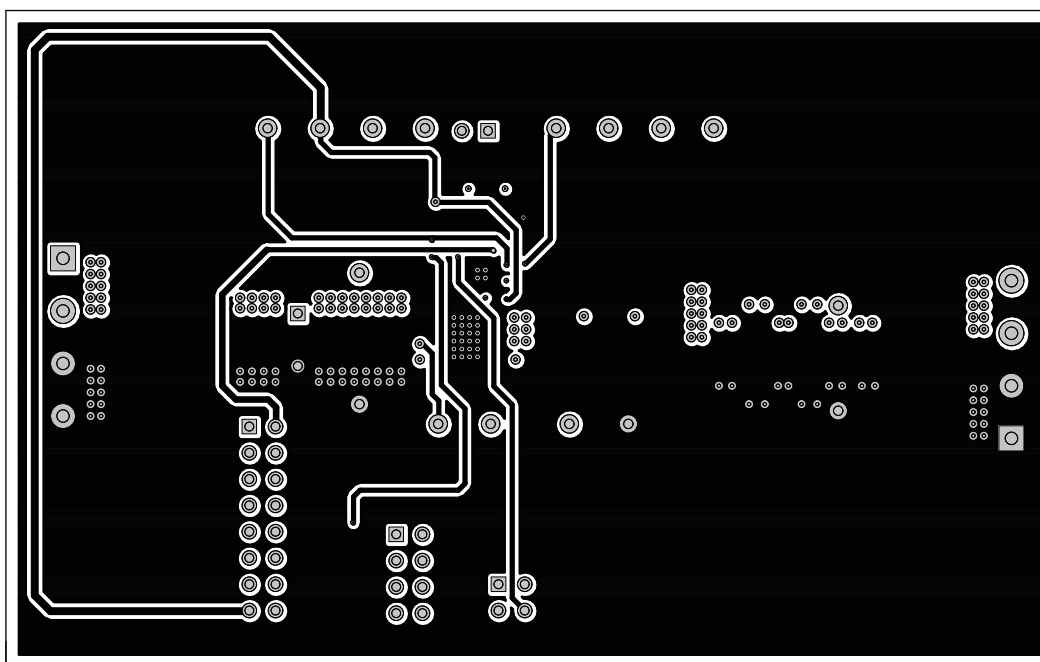


Figure 20. TPS53119EVM-690 Layer-3 Copper, Top View

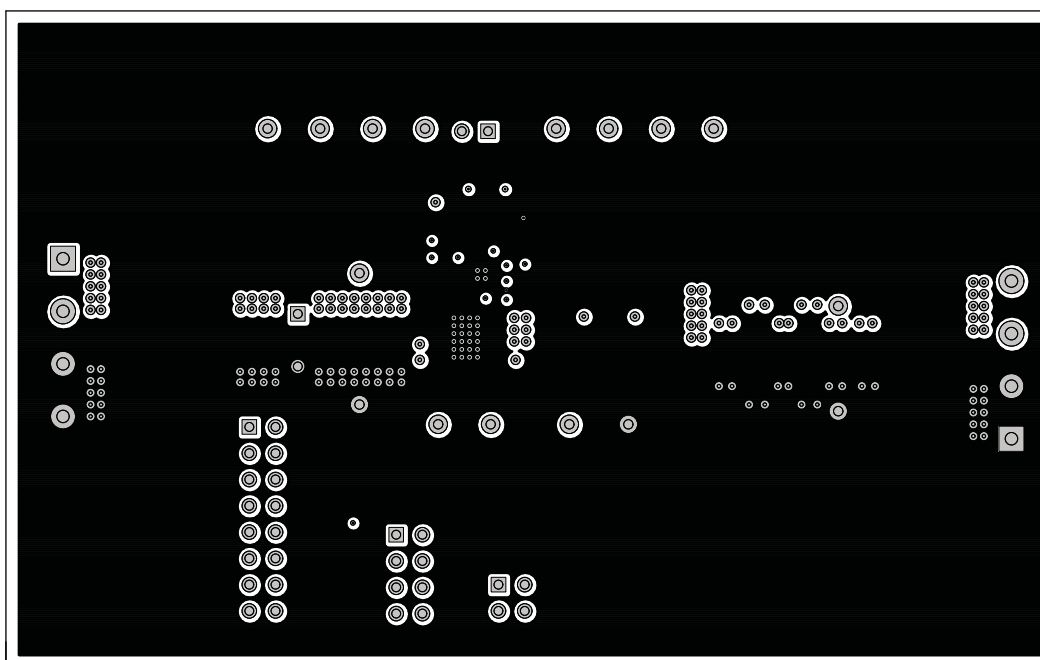


Figure 21. TPS53119EVM-690 Layer-4 Copper, Top View

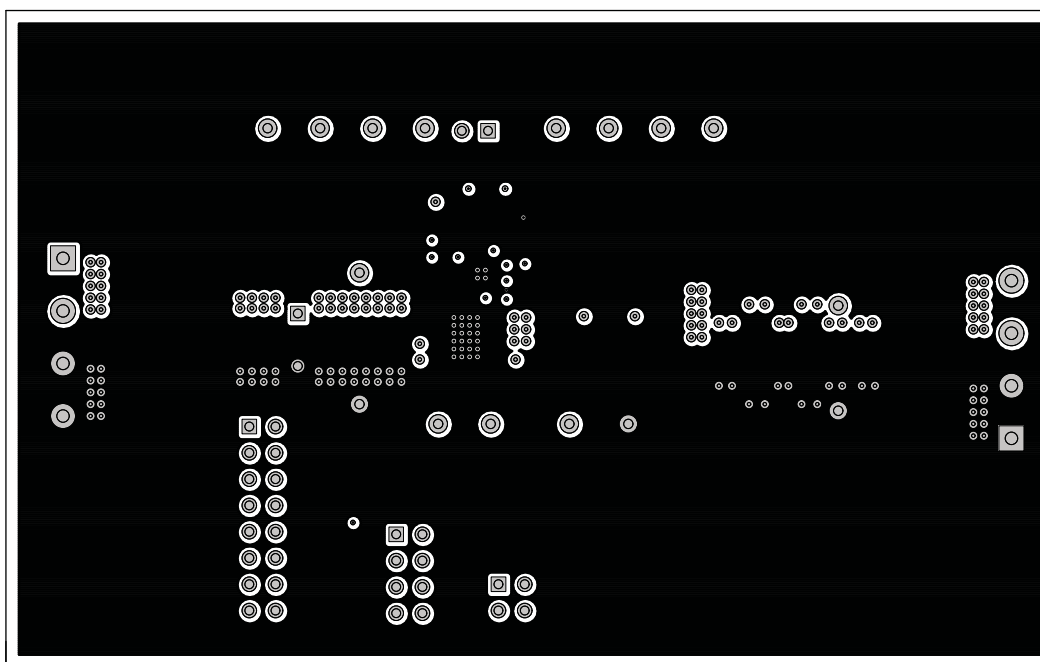


Figure 22. TPS53119EVM-690 Layer-5 Copper, Top View

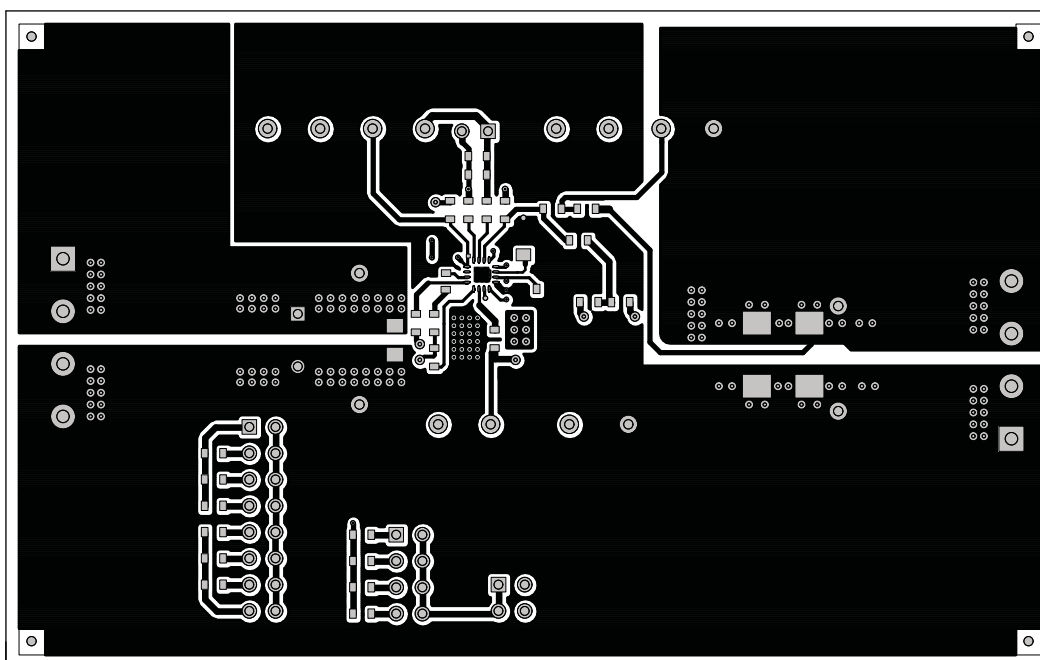


Figure 23. TPS53119EVM-690 Bottom Layer Copper, Top View

10 Bill of Materials

Table 7. The EVM Bill of Materials According to Schematic Shown in Figure 1

Qty	RefDes	Description	MFR	Part Number
1	C1	Capacitor, Ceramic, 4.7 μ F, 16V, X5R, 20%, 0805	STD	STD
5	C12–C16	Capacitor, Ceramic, 100 μ F, 6.3V, X5R, 20%, 1210	Murata	GRM32ER60J107ME20L
1	C19	Capacitor, Ceramic, 4700 pF, 50V, X7R, 20%, 0603	STD	STD
2	C2, C20	Capacitor, Ceramic, 1000 pF, 25V, X7R, 10%, 0603	STD	STD
2	C3, C10	Capacitor, Ceramic, 0.1 μ F, 50V, X7R, 10%, 0603	STD	STD
1	C5	Capacitor, Ceramic, 0.027 μ F, 50V, X7R, 10%, 0603	STD	STD
1	C4	Capacitor, Ceramic, 1 μ F, 16V, X7R, 10%, 0603	STD	STD
4	C6–C9	Capacitor, Ceramic, 22 μ F, 16V, X5R, 20%, 1206	Murata	GRM31CR61C226ME15L
1	L1	Inductor, SMT, 0.44 μ H, 30A, 0.0032ohms, 0.530"x0.510"	Pulse or E&E Magnetic	PA0513-441NLT or 831-02990F
1	Q1	MOSFET, Dual N-chan, Power Block, 25V, 40A, QFN-8 Power	TI	CSD86350Q5D
3	R1, R3, R22	Resistor, Chip, 100k, 1/16W, 1%, 0603	STD	STD
1	R15	Resistor, Chip, 187k, 1/16W, 1%, 0603	STD	STD
1	R16	Resistor, Chip, 619k, 1/16W, 1%, 0603	STD	STD
1	R18	Resistor, Chip, 866k, 1/16W, 1%, 0603	STD	STD
1	R19	Resistor, Chip, 309k, 1/16W, 1%, 0603	STD	STD
2	R2, R23	Resistor, Chip, 200k, 1/16W, 1%, 0603	STD	STD
1	R20	Resistor, Chip, 124k, 1/16W, 1%, 0603	STD	STD
1	R21	Resistor, Chip, 39.2k, 1/16W, 1%, 0603	STD	STD
1	R24	Resistor, Chip, 475k, 1/16W, 1%, 0603	STD	STD
1	R26	Resistor, Chip, 1, 1/10W, 5%, 0805	STD	STD
1	R4	Resistor, Chip, 1.00k, 1/16W, 1%, 0603	STD	STD
1	R5	Resistor, Chip, 35.7k, 1/16W, 1%, 0603	STD	STD
6	R6, R11–R13, R25, R27	Resistor, Chip, 0, 1/16W, 5%, 0603	STD	STD
1	R10	Resistor, Chip, 5.11, 1/16W, 1%, 0603	STD	STD
2	R7, R14	Resistor, Chip, 10.0k, 1/16W, 1%, 0603	STD	STD
1	R8	Resistor, Chip, 8.25k, 1/16W, 1%, 0603	STD	STD
1	R9	Resistor, Chip, 10, 1/16W, 1%, 0603	STD	STD
1	U1	IC, Single Synchronous Step-Down Controller	TI	TPS53119RGT

IMPORTANT NOTICE FOR TI DESIGN INFORMATION AND RESOURCES

Texas Instruments Incorporated ("TI") technical, application or other design advice, services or information, including, but not limited to, reference designs and materials relating to evaluation modules, (collectively, "TI Resources") are intended to assist designers who are developing applications that incorporate TI products; by downloading, accessing or using any particular TI Resource in any way, you (individually or, if you are acting on behalf of a company, your company) agree to use it solely for this purpose and subject to the terms of this Notice.

TI's provision of TI Resources does not expand or otherwise alter TI's applicable published warranties or warranty disclaimers for TI products, and no additional obligations or liabilities arise from TI providing such TI Resources. TI reserves the right to make corrections, enhancements, improvements and other changes to its TI Resources.

You understand and agree that you remain responsible for using your independent analysis, evaluation and judgment in designing your applications and that you have full and exclusive responsibility to assure the safety of your applications and compliance of your applications (and of all TI products used in or for your applications) with all applicable regulations, laws and other applicable requirements. You represent that, with respect to your applications, you have all the necessary expertise to create and implement safeguards that (1) anticipate dangerous consequences of failures, (2) monitor failures and their consequences, and (3) lessen the likelihood of failures that might cause harm and take appropriate actions. You agree that prior to using or distributing any applications that include TI products, you will thoroughly test such applications and the functionality of such TI products as used in such applications. TI has not conducted any testing other than that specifically described in the published documentation for a particular TI Resource.

You are authorized to use, copy and modify any individual TI Resource only in connection with the development of applications that include the TI product(s) identified in such TI Resource. NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER TI INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT OF TI OR ANY THIRD PARTY IS GRANTED HEREIN, including but not limited to any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information regarding or referencing third-party products or services does not constitute a license to use such products or services, or a warranty or endorsement thereof. Use of TI Resources may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

TI RESOURCES ARE PROVIDED "AS IS" AND WITH ALL FAULTS. TI DISCLAIMS ALL OTHER WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, REGARDING TI RESOURCES OR USE THEREOF, INCLUDING BUT NOT LIMITED TO ACCURACY OR COMPLETENESS, TITLE, ANY EPIDEMIC FAILURE WARRANTY AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

TI SHALL NOT BE LIABLE FOR AND SHALL NOT DEFEND OR INDEMNIFY YOU AGAINST ANY CLAIM, INCLUDING BUT NOT LIMITED TO ANY INFRINGEMENT CLAIM THAT RELATES TO OR IS BASED ON ANY COMBINATION OF PRODUCTS EVEN IF DESCRIBED IN TI RESOURCES OR OTHERWISE. IN NO EVENT SHALL TI BE LIABLE FOR ANY ACTUAL, DIRECT, SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF TI RESOURCES OR USE THEREOF, AND REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

You agree to fully indemnify TI and its representatives against any damages, costs, losses, and/or liabilities arising out of your non-compliance with the terms and provisions of this Notice.

This Notice applies to TI Resources. Additional terms apply to the use and purchase of certain types of materials, TI products and services. These include; without limitation, TI's standard terms for semiconductor products (<http://www.ti.com/sc/docs/stdterms.htm>), [evaluation modules](#), and [samples](http://www.ti.com/sc/docs/sampterm.htm) (<http://www.ti.com/sc/docs/sampterm.htm>).

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2017, Texas Instruments Incorporated