

TPS53126EVM-600

The TPS53126EVM-600 Evaluation Module presents an easy-to-use reference design for a common, dual-output power supply using the TPS53126 controller in cost-sensitive applications.

Contents

1	Introduction	3
1.1	Description	3
1.2	Applications	3
1.3	Features	3
2	Electrical Performance Specifications	4
3	Schematic	5
4	Connector and Test Point Descriptions	6
4.1	Enable Switches – SW1 and SW2	6
4.2	Switching Frequency Select Switch – SW3	6
4.3	Test Point Descriptions	6
5	Test Setup	7
5.1	Equipment	7
5.2	Recommended Setup	8
6	Test Procedure	9
6.1	Start-up Procedure	9
6.2	Line/Load Regulation and Efficiency Measurement Procedure	10
6.3	Output Ripple Voltage Measurement Procedure	10
6.4	Shutdown Procedure	10
7	Performance Data and Typical Characteristic Curves	10
7.1	Efficiency	10
7.2	Line and Load Regulation	11
7.3	Output Voltage Ripple	12
7.4	Switch Node Waveforms	13
8	EVM Assembly Drawings and Layout	14
9	Bill of Materials	18

List of Figures

1	TPS53126EVM-600 Schematic	5
2	Tip and Barrel Measurement for Output Voltage Ripple	7
3	TPS53126EVM-600 Recommended Test Setup	9
4	Efficiency vs Load ($V_{IN} = 8\text{ V}$ – 22 V , $V_{OUT1} = 1.05\text{ V}$, $I_{OUT1} = 0\text{ A}$ – 4 A)	10
5	Efficiency vs Load ($V_{IN} = 8\text{ V}$ – 22 V , $V_{OUT2} = 1.8\text{ V}$, $I_{OUT2} = 0\text{ A}$ – 4 A)	11
6	Output Voltage vs Load ($V_{IN} = 8\text{ V}$ – 22 V , $V_{OUT1} = 1.05\text{ V}$, $I_{OUT1} = 0\text{ A}$ – 4 A)	11
7	Output Voltage vs Load ($V_{IN} = 8\text{ V}$ – 22 V , $V_{OUT2} = 1.8\text{ V}$, $I_{OUT2} = 0\text{ A}$ – 4 A)	12
8	Output Voltage Ripple ($V_{IN} = 12\text{ V}$, $V_{OUT1} = 1.05\text{ V}$, $I_{OUT1} = 4\text{ A}$, $F_{SW} = 350\text{ kHz}$)	12
9	Output Voltage Ripple ($V_{IN} = 12\text{ V}$, $V_{OUT2} = 1.8\text{ V}$, $I_{OUT2} = 4\text{ A}$, $F_{SW} = 350\text{ kHz}$)	13
10	Switching Waveform ($V_{IN} = 12\text{ V}$, $V_{OUT1} = 1.05\text{ V}$, $I_{OUT1} = 4\text{ A}$, $F_{SW} = 350\text{ kHz}$)	13
11	Switching Waveform ($V_{IN} = 12\text{ V}$, $V_{OUT2} = 1.08\text{ V}$, $I_{OUT2} = 4\text{ A}$, $F_{SW} = 350\text{ kHz}$)	14
12	Top Assembly	14
13	Bottom Assembly	15

14	Top Layer	15
15	Bottom Layer	16
16	Internal Layer 1	16
17	Internal Layer 2	17

List of Tables

1	TPS53126EVM-600 Electrical and Performance Specifications.....	4
2	TPS53126EVM-600 Test Points Description.....	6
3	TPS53126EVM-600 Bill of Materials.....	18

1 Introduction

1.1 Description

The TPS53126EVM-600 evaluation board provides the user with a convenient way to evaluate the TPS53126 Dual D-CAP2™ Mode Control Step-Down Controller in a realistic, cost-sensitive application. Providing both a low core-type 1.05-V and I/O type 1.8-V output at up to 4 A from a loosely regulated 12-V (8-V to 22-V) source, the TPS53126EVM-600 includes switches and test points to assist users in evaluating the performance of the TPS53126 controller in their applications.

1.2 Applications

- Digital television
- Set-top box
- DSL and cable modems
- Cost-sensitive digital consumer products

1.3 Features


- 8-V to 22-V input
- 1.05-V and 1.8-V output
- Up to 4 A per channel output
- Switch selectable 350-kHz or 700-kHz pseudo-fixed frequency D-CAP2™ mode control
- Independent enable switches for power-on/power-off testing

2 Electrical Performance Specifications

Table 1. TPS53126EVM-600 Electrical and Performance Specifications

Parameter		Notes and Conditions	Min	Typ	Max	Unit
INPUT CHARACTERISTICS						
V_{IN}	Input voltage		8	12	22	V
I_{IN}	Input Current	$V_{IN} = 12\text{ V}$, $I_{OUT1} = 4\text{ A}$, $I_{OUT2} = 4\text{ A}$	–	1.2	1.5	A
	No-Load Input Current	$V_{IN} = 12\text{ V}$, $I_{OUT} = 0\text{ A}$, $SW3 = 350\text{ kHz}$	–	20	–	mA
V_{IN_UVLO}	Input UVLO	$I_{OUT} = 4\text{ A}$	4.0	4.2	4.5	V
OUTPUT CHARACTERISTICS						
V_{OUT1}	Output Voltage 1	$V_{IN} = 12\text{ V}$, $I_{OUT1} = 2\text{ A}$	–	1.05	–	V
	Line Regulation	$V_{IN} = 8\text{ V to }22\text{ V}$	–	–	1%	
	Load Regulation	$I_{OUT1} = 0\text{ A to }4\text{ A}$	–	–	1%	
V_{OUT1_rip}	Output Voltage Ripple	$V_{IN} = 12\text{ V}$, $I_{OUT2} = 4\text{ A}$	–	–	30	mVpp
I_{OUT1}	Output Current 1	$V_{IN} = 8\text{ V to }22\text{ V}$	0		4	A
V_{OUT2}	Output Voltage 2	$V_{IN} = 12\text{ V}$, $I_{OUT2} = 2\text{ A}$	–	1.80	–	V
	Line Regulation	$V_{IN} = 8\text{ V to }22\text{ V}$	–	–	1%	
	Load Regulation	$I_{OUT2} = 0\text{ A to }4\text{ A}$	–	–	1%	
V_{OUT2_rip}	Output Voltage Ripple	$V_{IN} = 12\text{ V}$, $I_{OUT2} = 4\text{ A}$	–	–	30	mVpp
I_{OUT2}	Output Current 2	$V_{IN} = 8\text{ V to }22\text{ V}$	0		4	A
SYSTEMS CHARACTERISTICS						
F_{SW}	Switching Frequency	$SW3 = 350\text{ kHz}$	200	350	400	kHz
η_{pk1}	Peak Efficiency of Output 1	$V_{IN} = 12\text{ V}$, $SW3 = 350\text{ kHz}$	–	88%		
η_1	Full Load Efficiency of Output 1	$V_{IN} = 12\text{ V}$, $I_{OUT1} = 4\text{ A}$, $SW3 = 350\text{ kHz}$	–	85%		
η_{pk2}	Peak Efficiency of Output 2	$V_{IN} = 12\text{ V}$, $SW3 = 350\text{ kHz}$	–	9%1		
η_2	Full Load efficiency of Output 2	$V_{IN} = 12\text{ V}$, $I_{OUT2} = 4\text{ A}$, $SW3 = 350\text{ kHz}$	–	91%		

3 Schematic

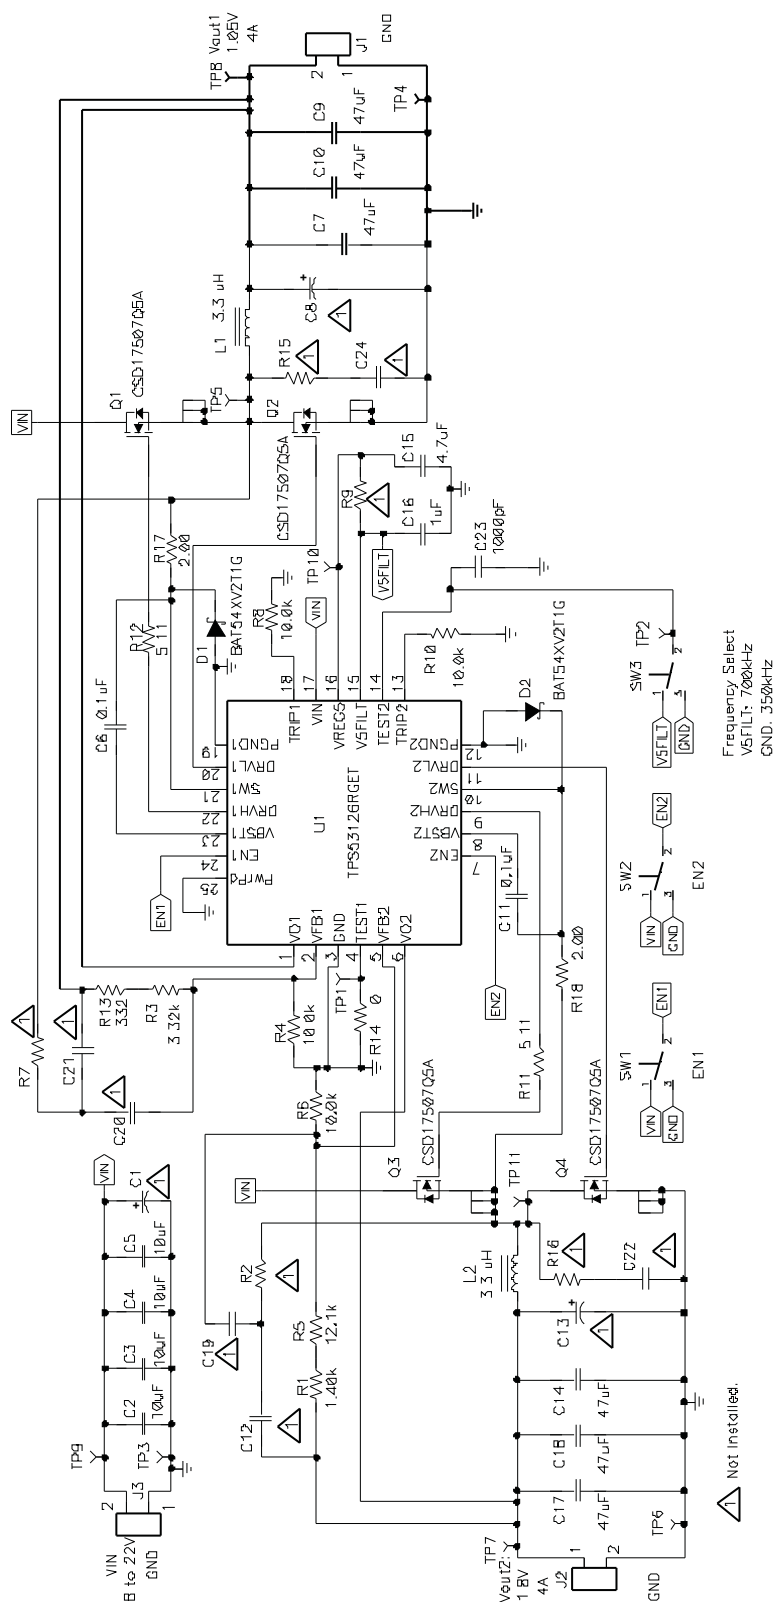

NOTE: For Reference Only, See [Table 3](#) for Specific Values

Figure 1. TPS53126EVM-600 Schematic

4 Connector and Test Point Descriptions

4.1 Enable Switches – SW1 and SW2

TPS53126EVM-600 includes independent enable switches for each of the two outputs. When the switch is in the DIS position, the channel is disabled and discharged per the TPS53126's internal discharge characteristics.

To enable V_{OUT1} , place SW1 in the EN position. To enable V_{OUT2} , place SW2 in the EN position.

4.2 Switching Frequency Select Switch – SW3

TPS53126EVM-600 includes a frequency select switch (SW3) to select the frequency programmed by the TEST2 IC pin of the TPS53126. When in the 350-kHz position, the D-CAP2™ mode control selects the Ton for 350-kHz operation. When in the 700-kHz position, the D-CAP2™ mode control selects the Ton for 700-kHz operation. For more details of switching frequency verse V_{IN} and I_{OUT} , see the TPS53126 data sheet .

Do not switch the position of SW3 while the TPS53126EVM-600 module is running. To change frequency selection, disable both Channel 1 and Channel 2 before changing the switching frequency.

4.3 Test Point Descriptions

[Table 2](#) lists the test points, their labels, uses, and where additional information is located.

Table 2. TPS53126EVM-600 Test Points Description

Test Point	Label	Use	Section
TP1	TEST1	Not Used	
TP2	TEST2	Monitor Frequency Select Voltage (5 V or GND)	
TP3	GND	Ground for Input Voltage	Section 4.3.1
TP4	GND	Ground for Channel-1 Output Voltage	Section 4.3.2
TP5	SW1	Monitor Switching Node for Channel 1	Section 4.3.4
TP6	GND	Ground for Channel-2 Output Voltage	Section 4.3.3
TP7	VOU2	Monitor Output Voltage for Channel 2	Section 4.3.3
TP8	VOU1	Monitor Output Voltage for Channel 1	Section 4.3.2
TP9	VIN	Monitor Input Voltage	Section 4.3.1
TP10	VREG5	Monitor Output of VREG5 Regulator	Section 4.3.5
TP11	SW2	Monitor Switching Node for Channel 2	Section 4.3.4

4.3.1 Input Voltage Monitoring –TP3 and TP9

TPS53126EVM-600 provides two test points for measuring the voltage applied to the module. This allows the user to measure the actual module voltage without losses from input cables and connectors. Measure all input voltage between TP9 and TP3. To use TP9 and TP3, connect a voltmeter positive terminal to TP9 and negative terminal to TP3.

4.3.2 Channel-1 Output Voltage Monitoring – TP4 and TP8

TPS53126EVM-600 provides two test points for measuring the voltage generated at the V_{OUT1} output by the module. This allows the user to measure the actual output voltage without losses from output cables and connectors. Measure all dc output voltage measurements between TP8 and TP4. To use TP8 and TP4, connect a voltmeter positive terminal to TP8 and negative terminal to TP4.

For output ripple measurements, TP8 and TP4 allow a user to limit the ground loop area by using the tip and barrel measurement technique shown in [Figure 2](#).

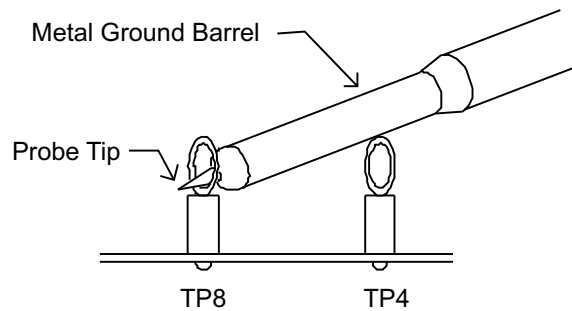


Figure 2. Tip and Barrel Measurement for Output Voltage Ripple

4.3.3 Channel-2 Output Voltage Monitoring – TP6 and TP7

TPS53126EVM-600 provides two test points for measuring the voltage generated at the V_{OUT2} output by the module. This allows the user to measure the actual output voltage without losses from output cables and connectors. Measure all dc output voltage between TP7 and TP6. To use TP7 and TP6, connect a voltmeter positive terminal to TP7 and negative terminal to TP6.

For output ripple measurements, TP7 and TP6 allow a user to limit the ground loop area by using the tip and barrel measurement technique shown in [Figure 2](#).

4.3.4 Switching Node Monitoring – TP3, TP5, and TP11

TPS53126EVM-600 provides two test points for measuring the switching node waveform voltages. TP5 monitors the switching node of Channel 1. TP2 monitors the switching node of Channel 2. To use TP5 or TP11, connect an oscilloscope probe between TP5 or TP11 and TP3.

4.3.5 5-V Regulator Output Monitoring – TP3 and TP10

TPS53126EVM-600 provides a test point for measuring the output of the internal 5-V regulator. TP10 monitors the output voltage of the internal 5-V regulator. To use TP10, connect a voltmeter positive terminal to TP10 and negative terminal to TP3.

5 Test Setup

5.1 Equipment

5.1.1 Voltage Source

The input voltage source (V_{IN}) shall be a 0-V to 25-V variable dc source capable of supplying 3 Adc minimum.

5.1.2 Meters

A1: 0-Adc to 5-Adc, ammeter

V1: V_{IN} , 0-V to 25-V voltmeter

V2: V_{OUT1} , 0-V to 2-V voltmeter

V3: V_{OUT2} , 0-V to 2-V voltmeter

5.1.3 Loads

LOAD1: One output load is an electronic load set for constant-current mode capable of 0 Adc to 4 Adc at 1.05 Vdc.

LOAD2: The other output load is an electronic load set for constant-current mode capable of 0 Adc to 4 Adc at 1.8 Vdc.

5.1.4 Oscilloscope and Probe

The oscilloscope, analog or digital, must be set for ac-coupled measurement with 20-MHz bandwidth limiting. Use 20-mV/division vertical resolution, 1- μ s/division horizontal resolution for output ripple voltage test.

Oscilloscope probes with exposed conductive ground barrels are recommended.

5.1.5 Recommended Wire Gauge

VIN to J3 – The connection between the source voltage V_{IN} and J1 of TPS53126EVM-600 can carry as much as 2 Adc. The minimum recommended wire size is AWG 16 with the total length of wire less than 2 feet (1-foot input, 1-foot return).

J1 to LOAD1 and J2 to LOAD2 – The connection between J1 and LOAD1, and J2 and LOAD2 of TPS53126EVM-600 can carry as much as 4 Adc each. The minimum recommended wire size is AWG 14 with the total length of wire less than 2 feet (1-foot input, 1-foot return).

5.1.6 Other Test Equipment

FAN – The TPS53126EVM-600 evaluation module includes components that can get hot to touch. Because this EVM is not enclosed to allow probing of circuit nodes, a small fan capable of 200-400 lfm is recommended to reduce component temperatures when operating.

5.2 Recommended Setup

[Figure 3](#) shows the recommended test setup to evaluate the TPS53126EVM-600. Working at an ESD workstation, ensure that any wrist straps, bootstraps, or mats are connected referencing the user to earth ground before power is applied to the EVM. An electrostatic smock and safety glasses also are recommended.

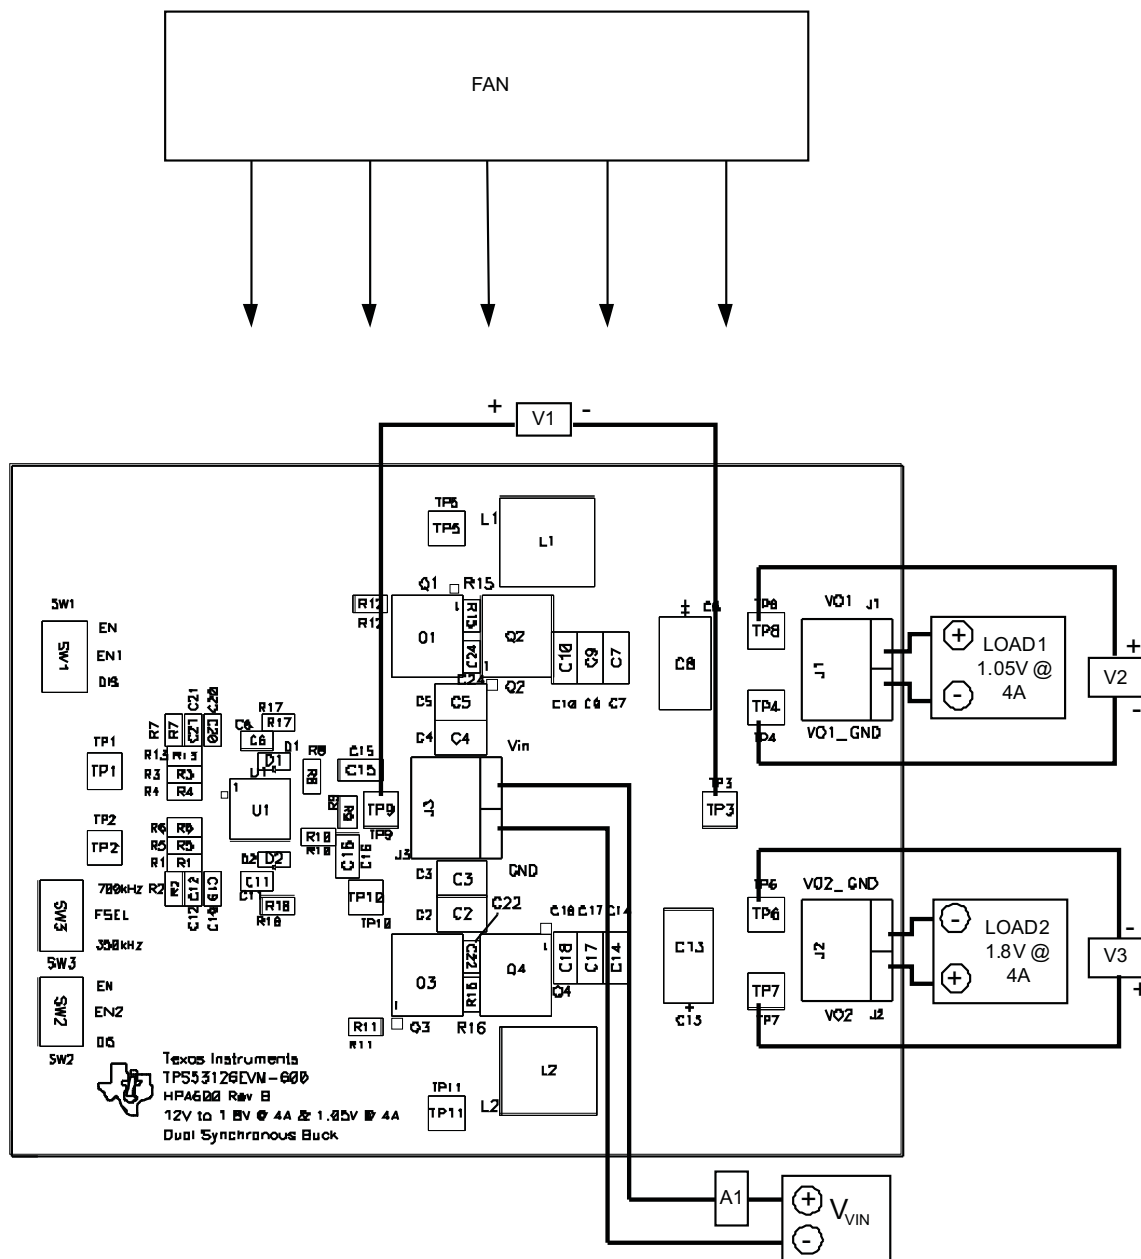


Figure 3. TPS53126EVM-600 Recommended Test Setup

6 Test Procedure

6.1 Start-up Procedure

1. Prior to connecting the dc input source V_{IN} , it is advisable to limit the source current from V_{IN} to 2 A maximum. Ensure that V_{IN} is initially set to 0 V.
2. Ensure LOAD1 and LOAD2 are set to constant-current mode to sink 0 A before V_{IN} is applied.
3. Verify SW1, SW2, and SW3 are in the desired position.
4. Place a fan as shown in Figure 3 and turn on, making sure air is flowing across the EVM.
5. Increase V_{IN} from 0 V to 12 Vdc.

6.2 Line/Load Regulation and Efficiency Measurement Procedure

1. Set up TPS53126EVM-600 per [Section 5.2](#).
2. Start up the TPS53126EVM-600 per [Section 6.1](#).
3. Adjust V_{IN} to desired value between 8 Vdc and 22 Vdc.
4. Adjust LOAD1/LOAD2 to desired load between 0 Adc and 4 Adc.
5. Read input voltage, output voltage, and input current from V1, V2/V3, and A1, respectively.
6. Shut down the TPS53126EVM-600 per [Section 6.4](#).

6.3 Output Ripple Voltage Measurement Procedure

1. Set up the TPS53126EVM-600 per [Section 5.2](#).
2. Start up the TPS53126EVM-600 per [Section 6.1](#).
3. Adjust V_{IN} to desired value between 8 Vdc and 22 Vdc.
4. Adjust LOAD1/LOAD2 to desired load between 0 A and 4 Adc.
5. Connect the oscilloscope probe to TP8 and TP4 for V_{OUT1} , or TP7 and TP6 for V_{OUT2} as shown in [Figure 2](#).
6. Measure output ripple.
7. Shut down TPS53126EVM-600 per [Section 6.4](#).

6.4 Shutdown Procedure

1. Set SW1 to DIS.
2. Set SW2 to DIS.
3. Decrease LOAD1 to 0 A, and shut down LOAD1.
4. Decrease LOAD2 to 0 A, and shut down LOAD2.
5. Decrease V_{IN} to 0 V, and shut down V_{IN} .
6. Shut down the fan.

7 Performance Data and Typical Characteristic Curves

[Figure 4](#) through [Figure 11](#) present typical performance curves for the TPS53126EVM-600. Because actual performance data can be affected by measurement techniques and environmental variables, these curves are presented for reference and may differ from actual field measurements.

7.1 Efficiency

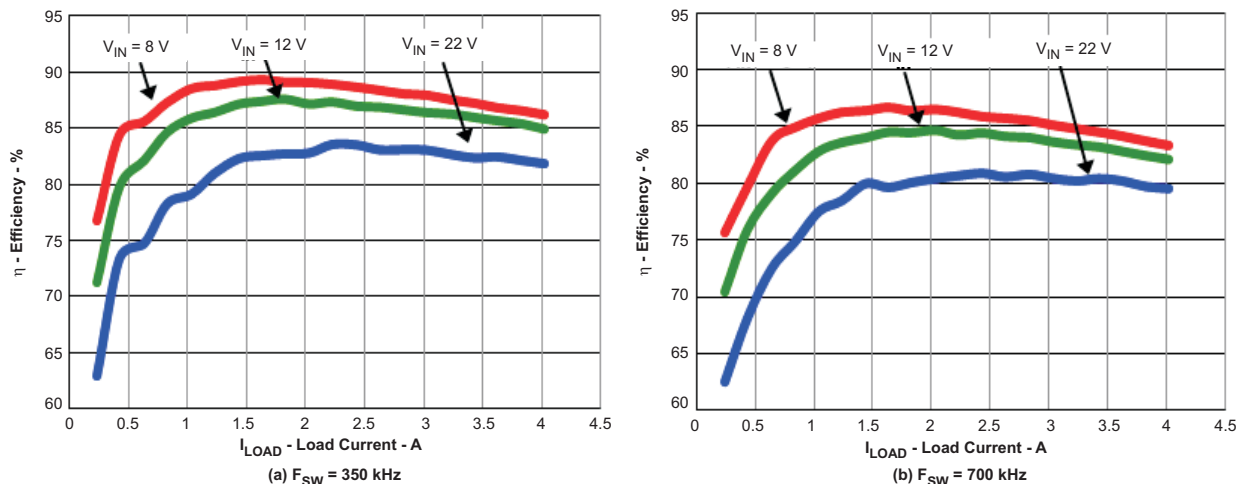


Figure 4. Efficiency vs Load ($V_{IN} = 8$ V–22 V, $V_{OUT1} = 1.05$ V, $I_{OUT1} = 0$ A–4 A)

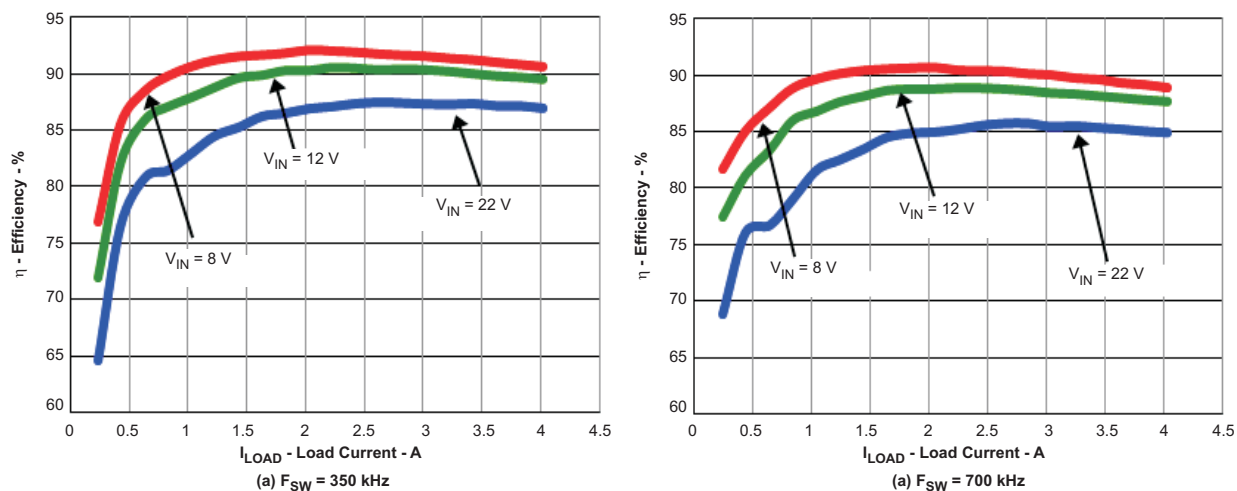


Figure 5. Efficiency vs Load ($V_{IN} = 8\text{ V}$ – 22 V , $V_{OUT2} = 1.8\text{ V}$, $I_{OUT2} = 0\text{ A}$ – 4 A)

7.2 Line and Load Regulation

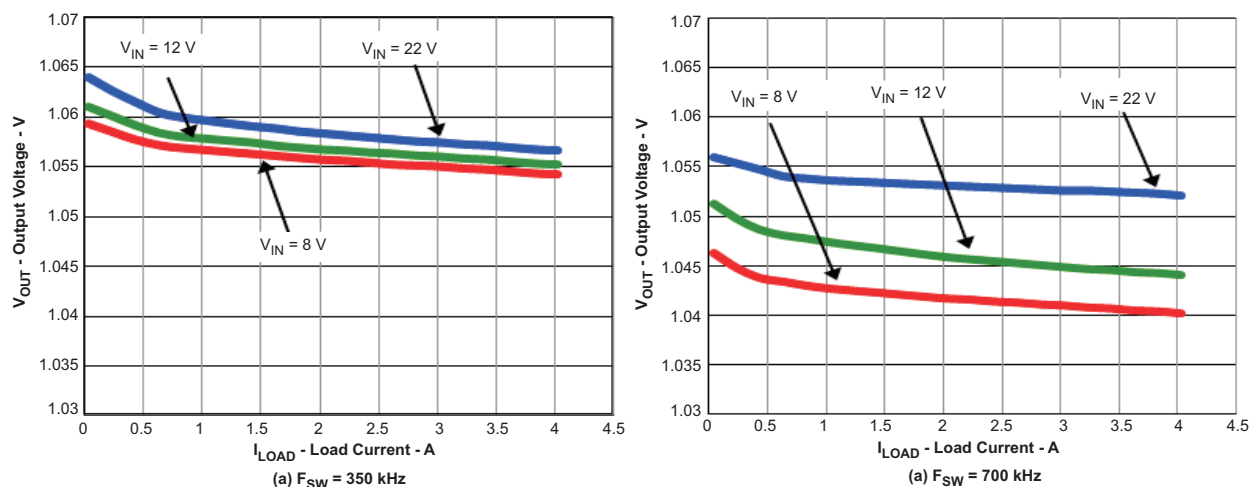


Figure 6. Output Voltage vs Load ($V_{IN} = 8\text{ V}$ – 22 V , $V_{OUT1} = 1.05\text{ V}$, $I_{OUT1} = 0\text{ A}$ – 4 A)

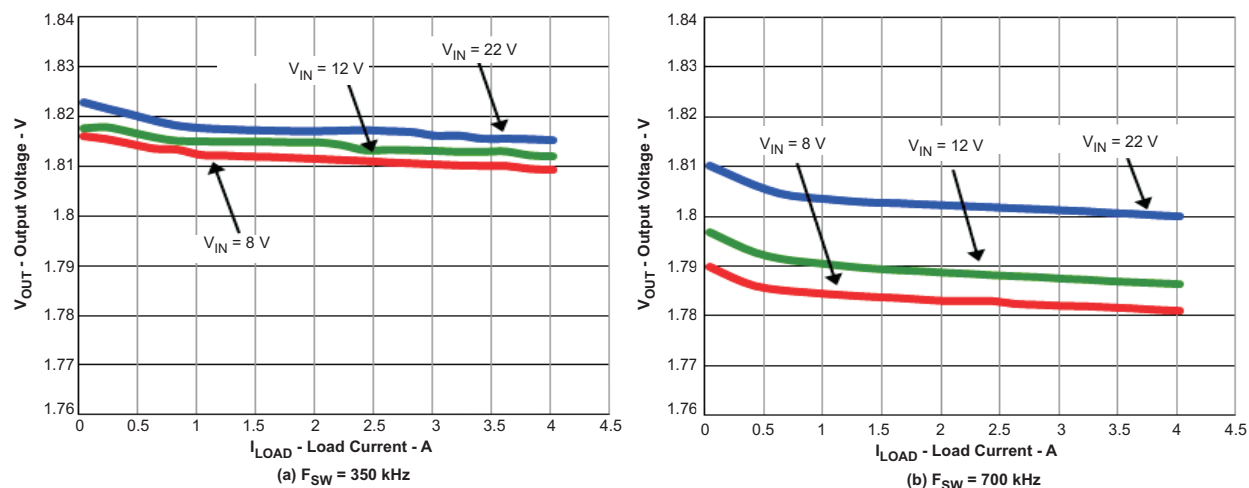


Figure 7. Output Voltage vs Load ($V_{IN} = 8$ V–22 V, $V_{OUT2} = 1.8$ V, $I_{OUT2} = 0$ A–4 A)

7.3 Output Voltage Ripple

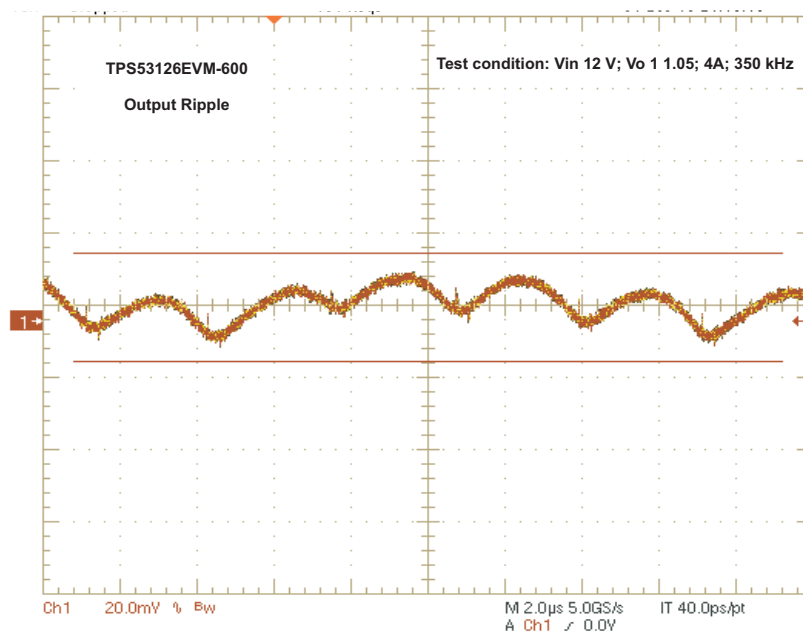


Figure 8. Output Voltage Ripple ($V_{IN} = 12$ V, $V_{OUT1} = 1.05$ V, $I_{OUT1} = 4$ A, $F_{SW} = 350$ kHz)

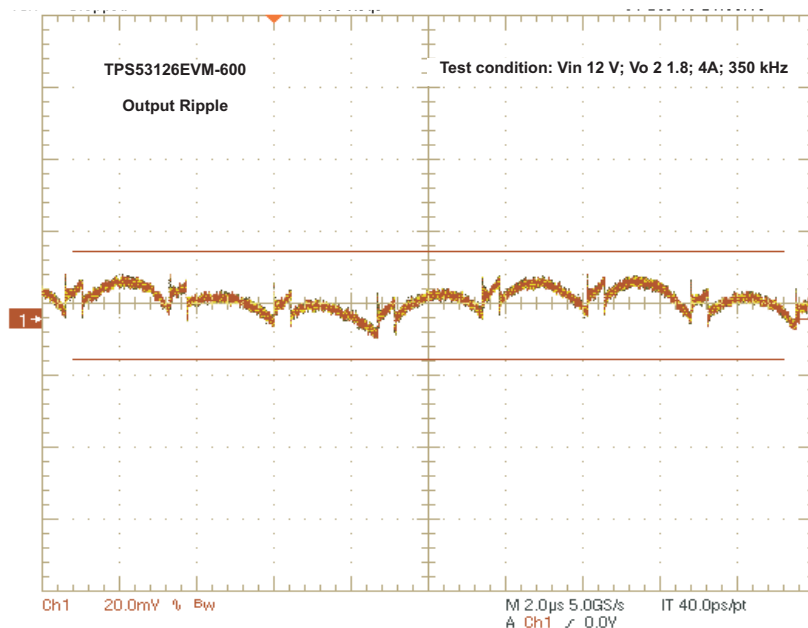


Figure 9. Output Voltage Ripple ($V_{IN} = 12\text{ V}$, $V_{OUT2} = 1.8\text{ V}$, $I_{OUT2} = 4\text{ A}$, $F_{SW} = 350\text{ kHz}$)

7.4 Switch Node Waveforms

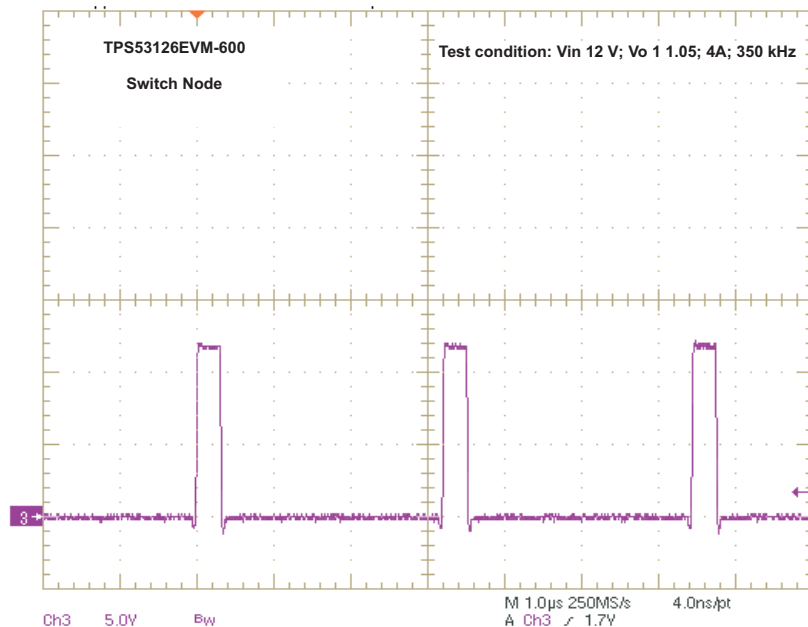


Figure 10. Switching Waveform ($V_{IN} = 12\text{ V}$, $V_{OUT1} = 1.05\text{ V}$, $I_{OUT1} = 4\text{ A}$, $F_{SW} = 350\text{ kHz}$)

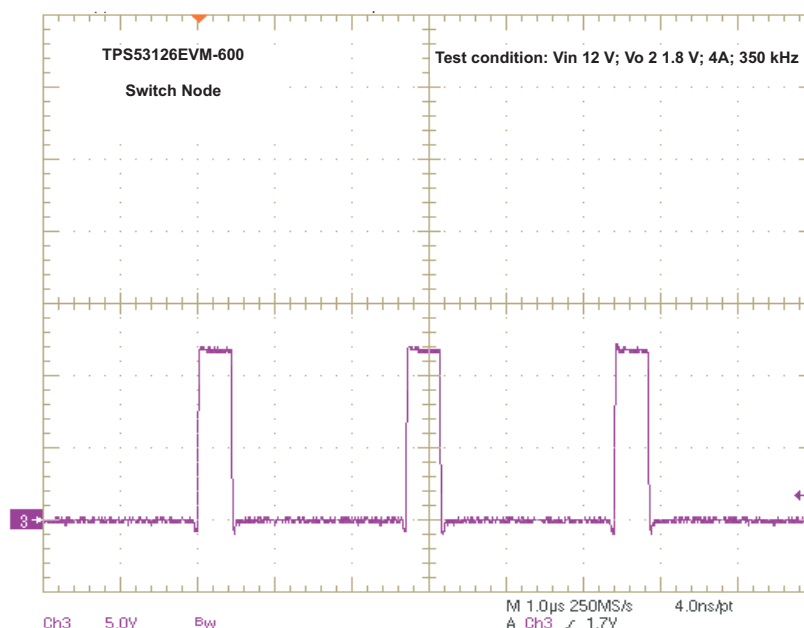


Figure 11. Switching Waveform ($V_{IN} = 12\text{ V}$, $V_{OUT2} = 1.08\text{ V}$, $I_{OUT2} = 4\text{ A}$, $F_{SW} = 350\text{ kHz}$)

8 EVM Assembly Drawings and Layout

The following figures (Figure 12 through Figure 17) show the design of the TPS53126EVM-600 printed-circuit board (PCB). The EVM has been designed using a 4-layer, 2-oz copper-clad circuit board of 3.5 inch by 2.7 inch to allow the user to easily view, probe, and evaluate the TPS53126 control integrated circuit in a practical application. Moving components to both sides of the PCB or using additional internal layers can offer additional size reduction for space constrained systems.

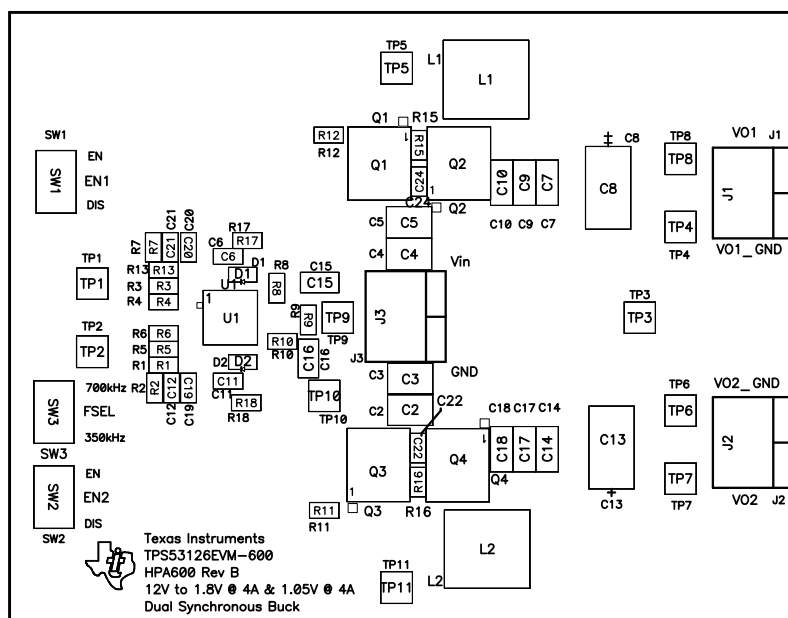


Figure 12. Top Assembly

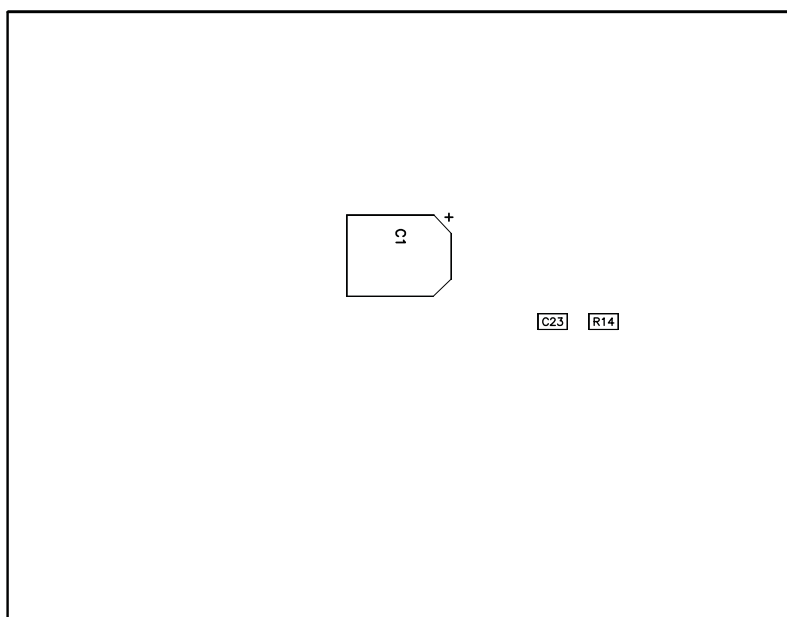


Figure 13. Bottom Assembly

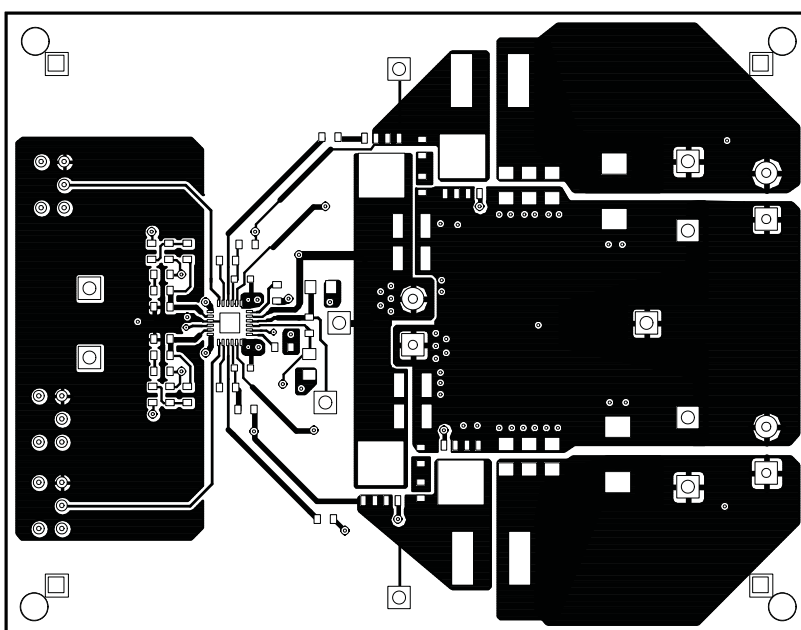


Figure 14. Top Layer

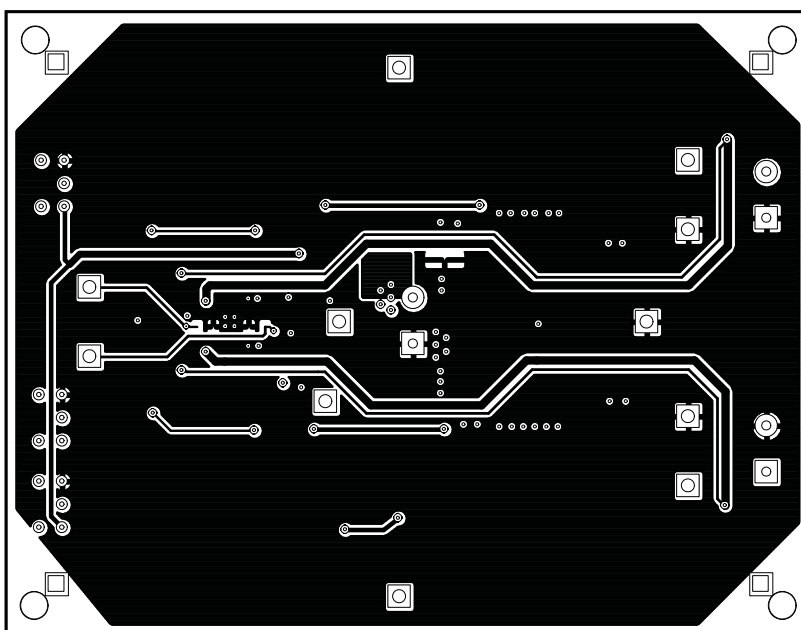


Figure 15. Bottom Layer

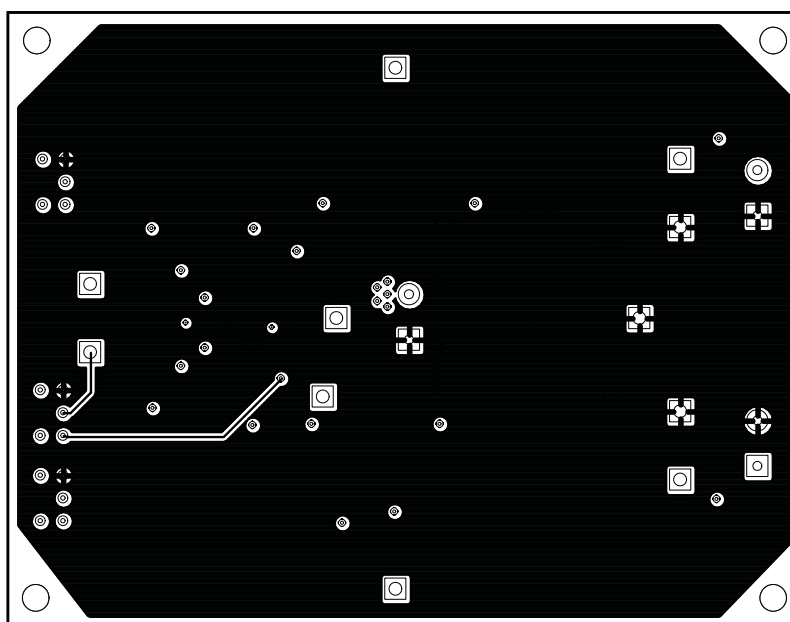


Figure 16. Internal Layer 1

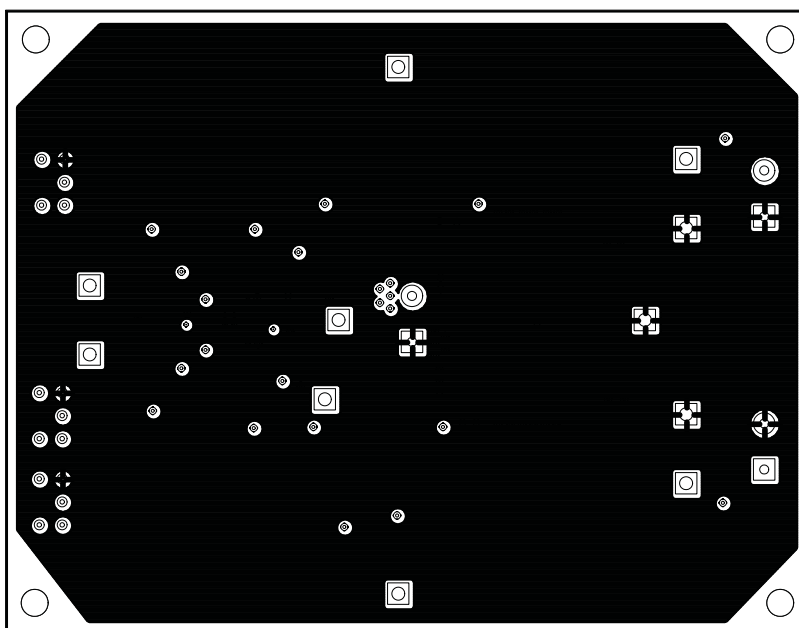


Figure 17. Internal Layer 2

9 Bill of Materials

The reference designators refer to the schematic in [Figure 1](#) and assembly locations in [Figure 12](#) and [Figure 13](#). Components with a quantity of 0 listed are not populated on the PCB but are provided for reference.

Table 3. TPS53126EVM-600 Bill of Materials

Qty	RefDes	Value	Description	Size	Part Number	MFR
0	C1		Capacitor, Aluminum, 25V, 20%	0.328 x 0.390 inch	Std	Std
0	C12, C19, C20, C21		Capacitor, Ceramic	0603	Std	Std
1	C15	4.7 μ F	Capacitor, Ceramic, 10V, X5R, 20%	0805	Std	Std
1	C16	1 μ F	Capacitor, Ceramic, 16V, X5R, 20%	0805	Std	Std
4	C2, C3, C4, C5	10 μ F	Capacitor, Ceramic, 25V, X5R, 20%	1210	Std	Std
0	C22, C24		Capacitor, Ceramic, 25V, X7R, 20%	0603	Std	Std
1	C23	1000 pF	Capacitor, Ceramic, Low Inductance, 16V, X7R, 20%	0603	Std	Std
2	C6, C11	0.1 μ F	Capacitor, Ceramic, 50V, X5R, 10%	0603	Std	Std
6	C7, C9, C10, C14, C17, C18	47 μ F	Capacitor, Ceramic, 6.3V, X5R, 20%	1206	Std	Std
0	C8, C13	330 μ F	Capacitor, PXE, 4.0V, 15-m Ω , 20%	7343 (D)	APXE4R0ARA331MF61G	NIPPON CHEMI-CON
2	D1, D2	BAT54XV2T1G	Diode, Schottky, 200 mA, 30 V	SOD523	BAT54XV2T1G	On Semi
3	J1, J2, J3	ED120/2DS	Terminal Block, 2-pin, 15-A, 5.1mm	0.40 x 0.35 inch	ED120/2DS	OST
2	L1, L2	3.3 μ H	Inductor, SMT Chip Coil, $\pm$ 30%	8 x 8mm	LQH88PN3R3N38	Murata
4	Q1, Q2, Q3, Q4	CSD17507Q5A	MOSFET, N-Chan, 30V, 65A, 11.8m Ω	QFN-8 POWER	CSD17507Q5A	TI
1	R1	1.40k	Resistor, Chip, 1/16W, 1%	0603	Std	Std
2	R11, R12	5.11	Resistor, Chip, 1/16W, 1%	0603	Std	Std
1	R13	332	Resistor, Chip, 1/16W, 1%	0603	Std	Std
1	R14	0	Resistor, Chip, 1/16W, 5%	0603	Std	Std
0	R15, R16		Resistor, Chip, 1/8W, 5%	0603	Std	Std
2	R17, R18	2.00	Resistor, Chip, 1/16W, 1%	0603	Std	Std
0	R2, R7, R9		Resistor, Chip, 1/16W, 1%	0603	Std	Std
1	R3	3.32k	Resistor, Chip, 1/16W, 1%	0603	Std	Std
4	R4, R6, R8, R10	10.0k	Resistor, Chip, 1/16W, 1%	0603	Std	Std
1	R5	12.1k	Resistor, Chip, 1/16W, 1%	0603	Std	Std
3	SW1, SW2, SW3	G12AP-RO	Switch, ON-ON Mini Toggle	0.28 x 0.18"	G12AP-RO	Nikkai
4	TP1, TP2, TP5, TP11	5012	Test Point, White, Thru Hole	0.125 x 0.125 inch	5012	Keystone
1	TP10	5013	Test Point, Orange, Thru Hole	0.125 x 0.125 inch	5013	Keystone
3	TP3, TP4, TP6	5011	Test Point, Black, Thru Hole	0.125 x 0.125 inch	5011	Keystone
2	TP7, TP8	5014	Test Point, Yellow, Thru Hole	0.125 x 0.125 inch	5014	Keystone
1	TP9	5010	Test Point, Red, Thru Hole	0.125 x 0.125 inch	5010	Keystone
1	U1	TPS53126RGET	IC, Dual Synchronous Step-Down Controller for Low-Voltage Power Rails	QFN-24	TPS53126RGET	TI
1	–		PCB, 2.70" x 3.50" x 0.063" FR-4	2.7" x 3.5"	HPA600	Any

Evaluation Board/Kit Important Notice

Texas Instruments (TI) provides the enclosed product(s) under the following conditions:

This evaluation board/kit is intended for use for **ENGINEERING DEVELOPMENT, DEMONSTRATION, OR EVALUATION PURPOSES ONLY** and is not considered by TI to be a finished end-product fit for general consumer use. Persons handling the product(s) must have electronics training and observe good engineering practice standards. As such, the goods being provided are not intended to be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including product safety and environmental measures typically found in end products that incorporate such semiconductor components or circuit boards. This evaluation board/kit does not fall within the scope of the European Union directives regarding electromagnetic compatibility, restricted substances (RoHS), recycling (WEEE), FCC, CE or UL, and therefore may not meet the technical requirements of these directives or other related directives.

Should this evaluation board/kit not meet the specifications indicated in the User's Guide, the board/kit may be returned within 30 days from the date of delivery for a full refund. **THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.**

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge.

EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

TI currently deals with a variety of customers for products, and therefore our arrangement with the user **is not exclusive**.

TI assumes **no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.**

Please read the User's Guide and, specifically, the Warnings and Restrictions notice in the User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For additional information on TI's environmental and/or safety programs, please contact the TI application engineer or visit www.ti.com/esh.

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used.

FCC Warning

This evaluation board/kit is intended for use for **ENGINEERING DEVELOPMENT, DEMONSTRATION, OR EVALUATION PURPOSES ONLY** and is not considered by TI to be a finished end-product fit for general consumer use. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to part 15 of FCC rules, which are designed to provide reasonable protection against radio frequency interference. Operation of this equipment in other environments may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

EVM Warnings and Restrictions

It is important to operate this EVM within the input voltage range of 8 V to 22 V and the output voltage range of 1 V to 1.9 V .

Exceeding the specified input range may cause unexpected operation and/or irreversible damage to the EVM. If there are questions concerning the input range, please contact a TI field representative prior to connecting the input power.

Applying loads outside of the specified output range may result in unintended operation and/or possible permanent damage to the EVM. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative.

During normal operation, some circuit components may have case temperatures greater than 40° C. The EVM is designed to operate properly with certain components above 40° C as long as the input and output ranges are maintained. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors. These types of devices can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during operation, please be aware that these devices may be very warm to the touch.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2011, Texas Instruments Incorporated

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

Products

Audio	www.ti.com/audio
Amplifiers	amplifier.ti.com
Data Converters	dataconverter.ti.com
DLP® Products	www.dlp.com
DSP	dsp.ti.com
Clocks and Timers	www.ti.com/clocks
Interface	interface.ti.com
Logic	logic.ti.com
Power Mgmt	power.ti.com
Microcontrollers	microcontroller.ti.com
RFID	www.ti-rfid.com
RF/IF and ZigBee® Solutions	www.ti.com/lprf

Applications

Communications and Telecom	www.ti.com/communications
Computers and Peripherals	www.ti.com/computers
Consumer Electronics	www.ti.com/consumer-apps
Energy and Lighting	www.ti.com/energy
Industrial	www.ti.com/industrial
Medical	www.ti.com/medical
Security	www.ti.com/security
Space, Avionics and Defense	www.ti.com/space-avionics-defense
Transportation and Automotive	www.ti.com/automotive
Video and Imaging	www.ti.com/video
Wireless	www.ti.com/wireless-apps

TI E2E Community Home Page

e2e.ti.com

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2011, Texas Instruments Incorporated