

Totalizers mechanic

Stroke, piece and revolution counters

Display 4- or 5-digits, reset button

H 127, T 127, U 127



H 127 - Stroke counter



T 127 - Piece counter with lever



U 127 - Revolution counter

Features

- Stroke, piece and revolution counters
- Adding
- Display 4- or 5-digits
- Manual reset by knurled knob

Technical data - mechanical design

Display	White numbers on black
Digit height	4.5 mm
Reset	Reset by knurled knob
Operating temperature	0...+60 °C
Housing type	Surface mount housing with mounting plate
Housing colour	Grey
Dimensions W x H x L	40 x 29 x 27.5 mm
Dimensions mounting plate	40 x 46 mm
Mounting	Base plate, 2 long mounting holes
Weight approx.	90 g
Materials	Housing: Hostaform POM, grey Base plate: Steel zinc-coated

Totalizers mechanic

Stroke, piece and revolution counters

Display 4- or 5-digits, reset button

H 127, T 127, U 127

Technical data - mechanical design

H 127

Function	Stroke counter
Number of digits	5-digits
Count mode	Adding in a stroke direction to be indicated. 1 stroke = 1 count
Drive shaft	Right or left, $\varnothing 4$ mm
Stroke	$>38^\circ$ to $<60^\circ$
Stroke lever	To be positioned on shaft at will. Stroke lever relocates automatically to start position.
Stroke frequency	≤ 500 strokes/min
Measuring range	99 999

T 127


Function	Piece counter with lever
Number of digits	4-digits
Count mode	1 button touch = 1 count
Drive shaft	Only available with lever provided at right
Stroke	$>38^\circ$ to $<60^\circ$
Measuring range	9999

U 127


Function	Revolution counter
Number of digits	5-digits
Count mode	Adding in a rotational direction to be indicated, subtracting in reverse direction. 1 rev. = 1 count
Drive shaft	Right or left, $\varnothing 4$ mm
Operating speed	≤ 2000 rpm
Measuring range	99 999

Direction of strokes and rotation

Drive on the right




Reset button left
Away from user
Sense of rotation or stroke direction I




Reset button left
Toward user
Sense of rotation or stroke direction II

Drive on the left



Reset button right
Way from user
Sense of rotation or stroke direction I



Reset button right
Toward user
Sense of rotation or stroke direction II

Reset button always opposite of drive.

Totalizers mechanic

Stroke, piece and revolution counters

Display 4- or 5-digits, reset button

H 127, T 127, U 127

Part number

Stroke counter

H 127.0 0 A

Display / direction of stroke

G 5-digits 99 999 / I

H 5-digits 99 999 / II

Count mode / drive

01 1 stroke = 1 digit / drive shaft at right

02 1 stroke = 1 digit / drive shaft at left

Housing

A Surface mount housing, grey

Reset

1 Reset button at left

2 Reset button at right

Piece counter

T 127. 001

Design

001 Display 4-digits, stroke direction II,
Reset button left, 1 stroke = 1 digit
Housing grey, surface mount

Revolution counter

U 127.0 0 A

Display / direction of rotation

G 5-digits 99 999 / I

H 5-digits 99 999 / II

Count mode / drive

01 1 revolution = 1 digit / drive shaft at right

02 1 revolution = 1 digit / drive shaft at left

Housing

A Surface mount housing, grey

Reset

1 Reset button at left

2 Reset button at right

Totalizers mechanic


Stroke, piece and revolution counters

Display 4- or 5-digits, reset button


H 127, T 127, U 127

Dimensions

H 127, U 127

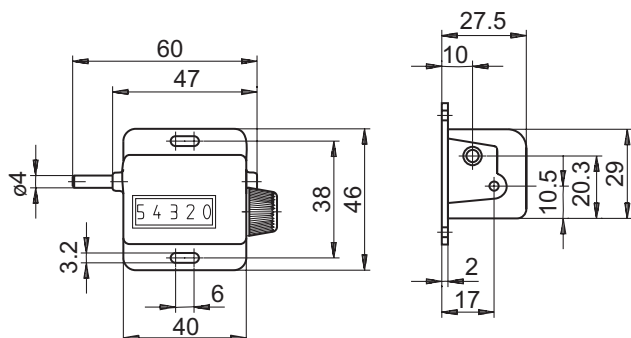

Stroke lever and stroke

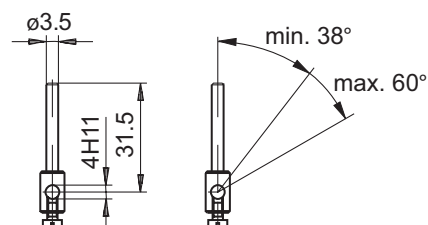

T 127

