STANDARD
MICROSYSTEMS
CORPORATION

LAN83C175
ADVANCE INFORMATION

LAN83C175 - EPIC/C
Ethernet CARDBUS Integrated Controller With Modem Support

FEATURES

- IEEE 802.3 Compliant 10/100 Mb/s Ethernet Controller
- Fully Compliant Glueless Integrated CardBus Interface
- Secondary 8 Bit interface to Support Multi-function CardBus Adpaters Including LAN / Rockwell or Lucent Modem Combinations
- Supports 3.3V or 5V Modem and Physical Layer Interface
- 10Base-T Physical Layer Digital Support
  - Smart Squelch Digital Noise Filter and Receive and Collision Input to Reject Both Analog and Digital Noise on Twisted Pair Receive Inputs
  - 10Mbps Manchester Encoding / Decoding with Receive Clock Recovery
  - Automatic Polarity Detection
  - Full Duplex Support
- Scatter/Gather DMA Capability
- Supports Chaining of Transmit Packets
- Optional Early Transmit and Early Receive
- Optional Receive Lookahead Buffering Mode
- 4.5Kbyte On-Chip Receive Buffer and 1.5Kbyte On-Chip Transmit Buffer Eliminate Bus Latency Issues
- Automatic Rejection of Runt Packets
- Automatic Retransmission of Collision Frames from Internal Buffer
- Automatic Padding of Short Frames
- Big or Little Endian Byte Ordering
- Capable of Supporting 64Kbyte Expansion Boot ROM
- IEEE Standard MII Interface to Physical Layer
- Interface to LAN83C694 Shares MII Pins
- Serial MII Management Interface
- Interface to an 8 Bit Parallel EEPROM for Storage and Retrieval of LAN Address and Configuration Information
- On-Chip Clock Multiplier
- Low Power Sleep Mode and Extended Power Management Features
- Internal and External Loopback Diagnostic Functions
- Simple I/O Pin Mapping Scheme to Facilitate In-Circuit Test
- Single 3.3V Supply
- 208 Pin TQFP Package

TABLE OF CONTENTS

FEATURES 1
GENERAL DESCRIPTION 3
PIN CONFIGURATION 5
DESCRIPTION OF PIN FUNCTIONS 6
FUNCTIONAL DESCRIPTION 9
DMA OPERATION 11
TRANSMIT DMA 11
RECEIVE DMA 17
TRANSMIT/RECEIVE ARBITRATION FOR CARDBUS BUS 25
BIG/LITTLE ENDIAN SUPPORT 25
MAC OPERATION 28
MAC RECEIVER 28
MAC TRANSMITTER 30
MII MANAGEMENT INTERFACE 32
EEPROM INTERFACE 32
POWER DOWN MODE 34
JUMPER OPTIONS 34
SOFT RESET 34
CONFIGURATION 35
MAPPING OF ROM AND CONTROL FUNCTIONS 35
REGISTER MAP/CONTROL REGISTER DECODE 37
REGISTER DESCRIPTIONS/CONTROL REGISTERS 38
MODEM AND EXTERNAL FLASH RAM INTERFACE AND CONTROL 64
MODEM REGISTERS MAP 64
MODEM REGISTERS BITS DESCRIPTION 65
PHYSICAL CONNECTION 68
MODEM AND RAM ACCESS TIMING 68
OPERATIONAL DESCRIPTION 69
MAXIMUM GUARANTEED RATINGS 69
DC ELECTRICAL CHARACTERISTICS 69
TIMING DIAGRAMS 71

80 Arkay Drive
Hauppauge, NY. 11788
(516) 435-6000
FAX (516) 273-3123

GENERAL DESCRIPTION

The LAN83C175 EPIC/C is a high-performance Low CPU Utilization Ethernet network controller designed to interface directly to the CardBus Local Bus on one side and to the 802.3 standard Media Independent Interface (MII) on the other side. The network interface can also be configured to communicate directly with the LAN83C694 10BASE-T transceiver.

The LAN83C175 implements 802.3 Media Access Control functions. It is capable of running at Ethernet rates of both 100Mbps and 10Mbps. An MII compliant serial management interface is provided to control external media dependent transceivers. The LAN83C175 is a two channel bus master (one for transmit, one for receive) capable of transferring data at the maximum CardBus transfer rate of 132Mbps. The LAN83C175 has several features designed to maximize throughput and minimize CPU utilization, including the optional Receive Lookahead Buffering Mode, which eliminates the need to re-copy the data from one host memory location to another.

The LAN83C175 also includes a secondary general purpose 8-bit interface with appropriate registers, address lines and control lines. This secondary interface provides all of the signals required to implement a secondary function on a CardBus adpater. An example of such a secondary function is a 33.6Kbps or higher speed modem design based on a Rockewell or Lucent modem chip set.


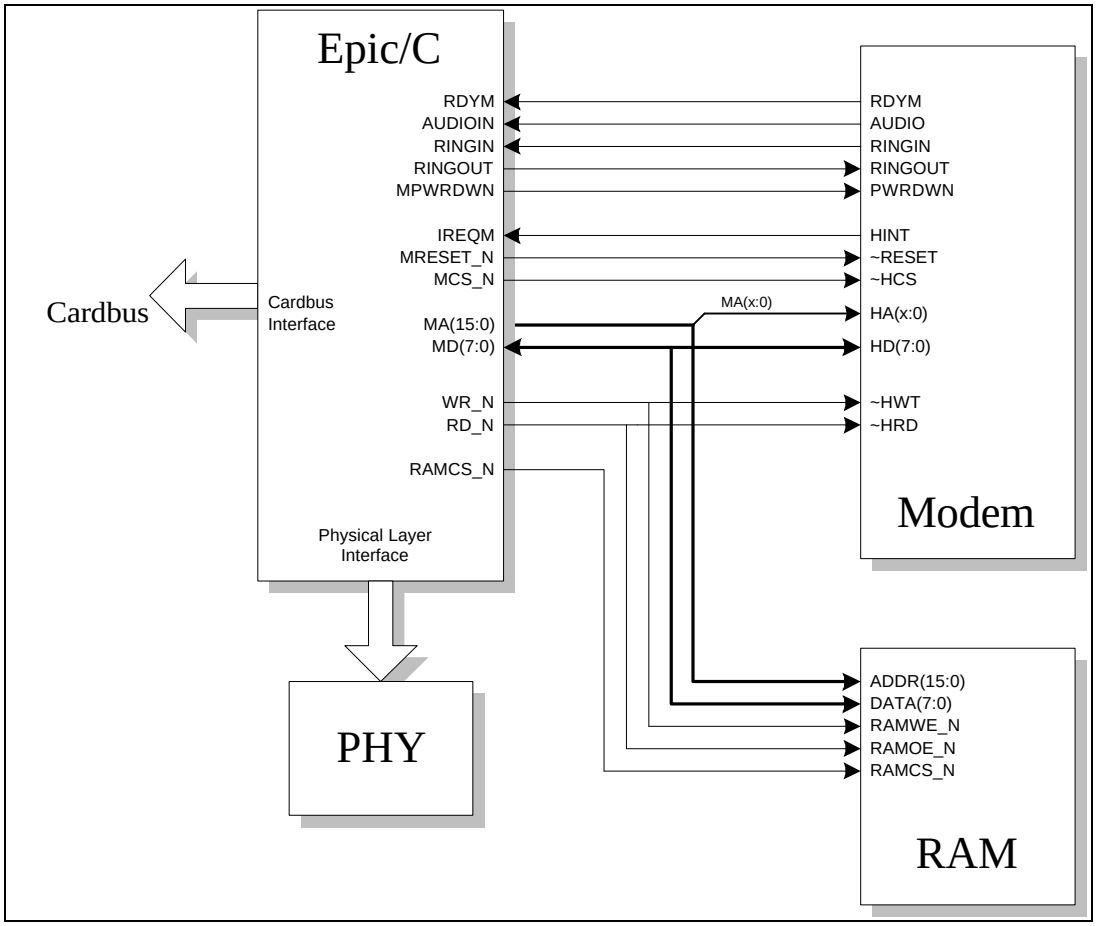


FIGURE 1 - LAN83C175 SYSTEM DIAGRAM

PIN CONFIGURATION

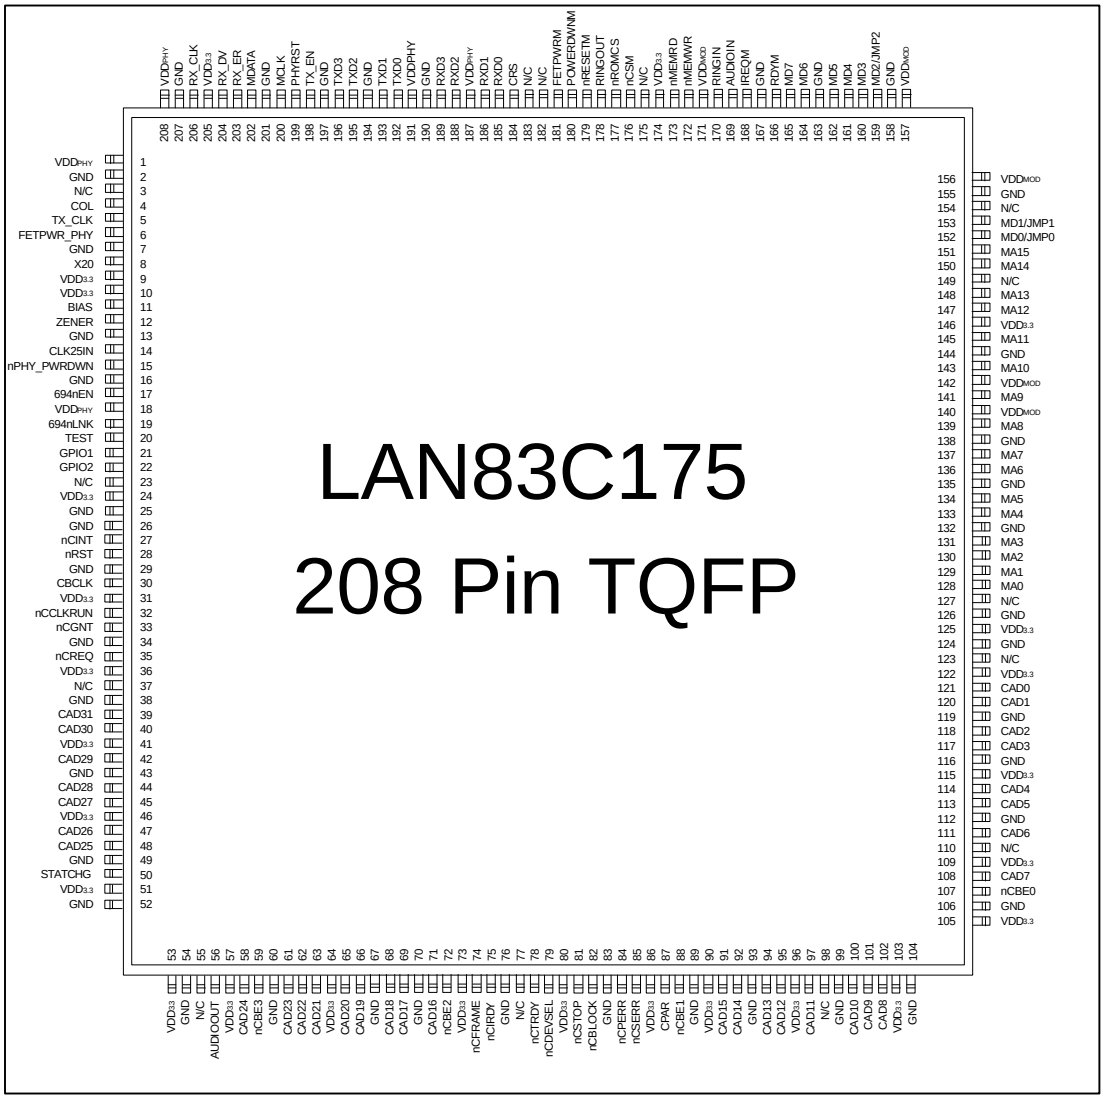

DESCRIPTION OF PIN FUNCTIONS

TQFP PIN NO.	NAME	I/O	DESCRIPTION
30	CBCLK	I_{CBCLK}	CardBus Clock
28	nRST	I_{CB}	CardBus System Reset
39,40,42,44,45,47,48,58, 61-63,65,66,68,69,71, 91,92,94,95,97,100-102, 108,111,113,114,117, 118,120,121	CAD[31:0]	IO_{CB}	CardBus Multiplexed Address/Data Bus
59,72,88,107	nCBE[3:0]	IO_{CB}	CardBus Multiplexed Command/Byte Enable Signals
87	CPAR	IO_{CB}	CardBus Parity Signal
74	nCFRAME	IO_{CB}	CardBus Cycle Frame Signal
75	nCIRDY	IO_{CB}	CardBus Initiator Ready Signal
78	nCTRDY	IO_{CB}	CardBus Target Ready Signal
81	nCSTOP	IO_{CB}	CardBus Cycle Stop Signal
82	nCBLOCK	I_{CB}	CardBus Lock Signal
79	nCDEVSEL	IO_{CB}	CardBus Device Select
35	nCREQ	O_{CB}	CardBus Bus Request
33	nCGNT	I_{CB}	CardBus Bus Grant
84	nCPERR	IO_{CB}	CardBus Parity Error
85	nCSERR	O_D	CardBus System Error (Open Drain)
27	nCINT	O_D	CardBus Interrupt (Open Drain)
32	nCCLKRUN	IO_{CB}	CardBus Clock Control and Request Line
151,150,148,147,145, 143,141,139,137,136, 134,133,131-128	MA[15:0]	O_{TTL4}	Address Bus to Modem and Flash RAM.
165,164,162-159, 153,152	MD[7:0]	IO_{TTL4}	Data Bus to EEPROM
173	nMEMRD	O_{TTL4}	External Bus Read Signal
172	nMEMWR	O_{TTL4}	External Bus Write Signal
177	nROMCS	O_{TTL4}	Flash RAM Chip Select
5	TX_CLK	I_{TTL4}	MII Transmit Clock
198	TX_EN	O_{TTL4}	MII Transmit Enable
196,195,193,192	TXD[3:0]	O_{TTL4}	MII Transmit Data

TQFP PIN NO.	NAME	I/O	DESCRIPTION
206	RX_CLK	I_{TTL4}	MII Receive Clock
184	CRS	I_{TTL4}	MII Carrier Sense
189,188,186,185	RXD[3:0]	I_{TTL4}	MII Receive Data
4	COL	I_{TTL4}	MII Collision Signal
204	RX_DV	I_{TTL4}	MII Receive Data Valid Signal
203	RX_ER	I_{TTL4}	MII Receive Error Signal
200	MCLK	O_{TTL4}	MII Management Interface Clock
202	MDATA	IO_{TTL4}	MII Management Interface Data
19	694nLNK	I_{TTL4}	10Base-T Link Integrity Status
17	694nEN	O_{TTL4}	694 Enable. Tri-States 694 Outputs when PHY100 is in use
14	CLK25IN	I_{TTL4}	System Clock (25MHz) Input
21	GPIO1	IO_{TTL4}	General Purpose I/O
22	GPIO2	IO_{TTL4}	General Purpose I/O
20	TEST	I_{TTL4}	Used for In-Circuit Device Test
8	X20	O_{TTL4}	20MHz Buffered Clock Output
11	BIAS	I	Bias Current Input for Clock Multiplier. Connect a 6KΩ $^{1}/_{8}$ w 1% Resistor between RBIAS and Ground
12	ZENER	I	Regulated Voltage Input for Clock Multiplier
199	PHYRST	O_{TTL4}	Reset Output to Physical Layer Chip
15	nPHY_PWRDWN	O_{TTL4}	Physical Layer Power-Down Control
6	FETPWR_PHY	O_{TTL4}	Physical Layer Power-Down Control
179	nRESETM	O_{TTL4}	MODEM RESET
176	nCSM	O_{TTL4}	MODEM chip select
166	RDYM	I_{TTL4}	MODEM ready/busy signal. Ready when high
168	IREQM	I_{TTL4}	MODEM Interrupt request
180	POWERDWNM	O_{TTL4}	MODEM Power Down
181	FETPWRM	O_{TTL4}	MODEM Power Down Control
170	RINGIN	I_{TTL4}	MODEM Ring-in signal
178	RINGOUT	O_{TTL4}	MODEM Ring-out signal
50	STATCHG	O_{TTL4}	CardBus status changed signal

TQFP PIN NO.	NAME	I/O	DESCRIPTION
169	AUDIOIN	I_{TTL4}	Audio input to the chip
56	AUDIOOUT	O	Audio output to CardBus
9,10,24,31,36,41,46, 51,53,57,64,73,80,86, 90,96,103,105,109, 115,122,125,146,174, 205	$VDD_{3.3}$	PWR	Connect to 3.3V Power Supply
1,18,187,191,208	VDD_{PHY}	PWR	Must be connected to the same power supply as the Physical Layer device
140,142,156,157,171	VDD_{MOD}	PWR	Must be connected to the same power supply as the Modem and the External Flash RAM. Note that the modem and Flash RAM should operate at the same voltage.
2,7,13,16,25,26,29, 34,38,43,49,52,54,60, 67,70,76,83,89,93,99, 104,106,112,116,119, 124,126,132,135,138, 144,155,158,163,167, 190,194,197,201,207	GND	PWR	Connect to Ground
3,23,37,55,77,98,110, 123,127,149,154,175, 182,183	N/C		No connects

FUNCTIONAL DESCRIPTION

The LAN83C175 EPIC/C is a high-performance Ethernet network controller designed to interface directly to the CardBus Local Bus on one side and to the 802.3 standard Media Independent Interface (MII) on the other side. The network interface can also be configured to communicate directly with the LAN83C694 10BASE-T transceiver.

The LAN83C175 implements 802.3 Media Access Control functions. It is capable of running at Ethernet rates of both 100 Mbps and 10 Mbps. An MII compliant serial management interface is provided to control external media dependent transceivers. The LAN83C175 is a two channel bus master (one for transmit, one for receive) capable of transferring data at the maximum CardBus transfer rate of 132 Mbps. Buffer format in host memory is controlled by an independent linked list structure for each channel.

The LAN83C175's architecture is essentially broken into two independent transmit and receive processes which share CardBus bus and network bandwidth. This architecture is ideal for full-duplex networks where transmission and reception of frames may occur simultaneously. An internal arbiter controls which process has access to the CardBus bus at a given time (see section on "transmit/receive arbitration for CardBus bus").

The transmit process consists of a DMA controller, local transmit RAM, memory transfer unit ("MTU") and CSMA/CD transmit state machine. The transmit DMA copies packet data from host memory into the local buffer. When ready, the memory transfer unit feeds data from the transmit buffer to the CSMA/CD state machine, which is responsible for sending data out on the network under the Ethernet protocol. When transmission is complete, the transmit DMA posts the transmit status into host memory, interrupts the host (optionally) and looks for the next transmit packet to be queued.

Like the transmit process, the receive process consists of a DMA controller, local receive RAM, memory transfer unit and CSMA/CD state machine. Packets are received by the CSMA/CD state machine and stored into local memory by the receive MTU. The receive DMA then copies the data from the local buffer into host memory, posts the receive status and interrupts the host. The LAN83C175 has several features designed to minimize CPU utilization, including the optional Receive Look-ahead Buffering Mode, which eliminates the need to re-copy the data from one host memory location to another. Figure 2 on the following page shows a block diagram of the LAN83C175.

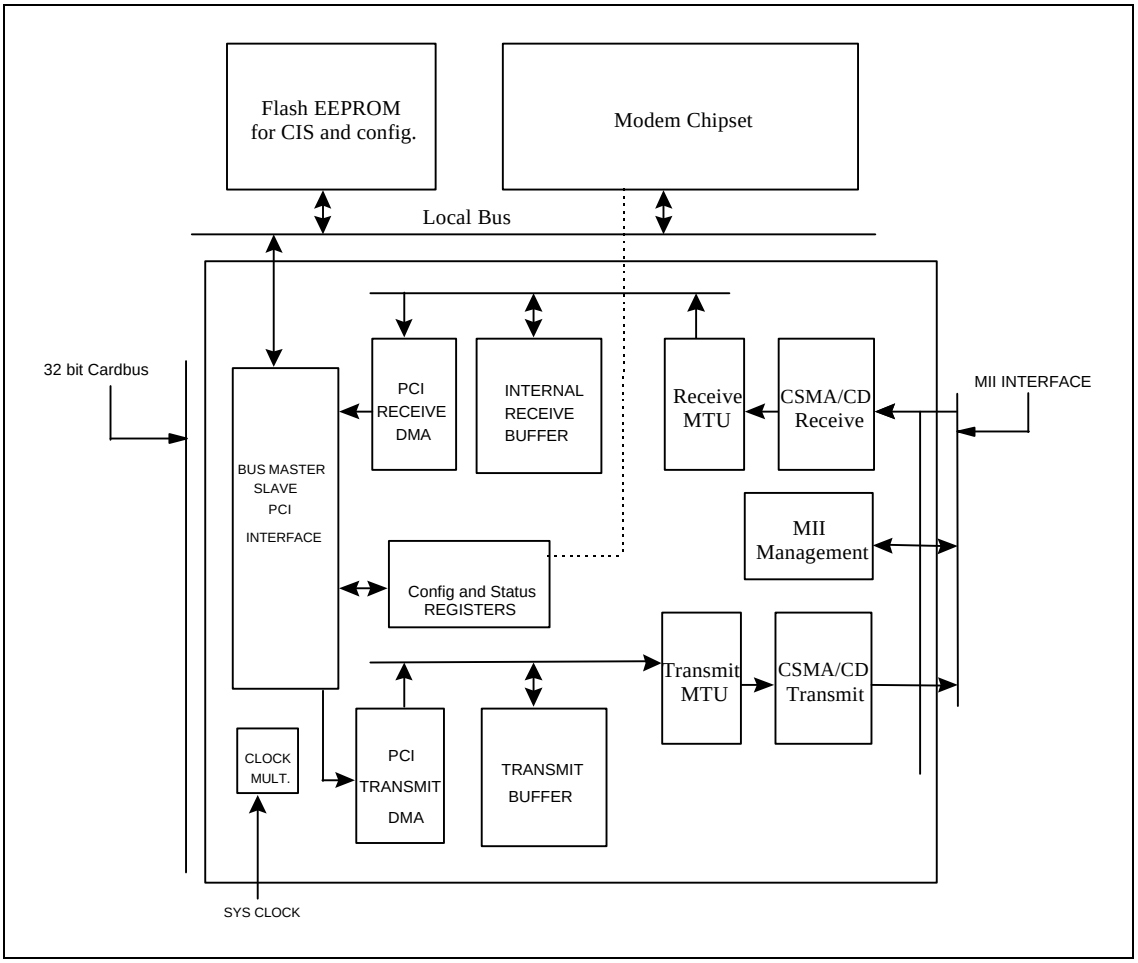



FIGURE 2 - EPIC/C BLOCK DIAGRAM

DMA OPERATION

The software driver controls the transmit and receive DMA controllers through the I/O control registers and through "buffer descriptors" in host memory. There is an independent chain (linked list) of descriptors for each DMA. Each descriptor may point to a single data buffer (which can hold a whole frame or part of a frame) or to a fragment list, which in turn contains a list of buffers for an entire frame. Each descriptor also contains control and status information and a pointer to the next descriptor.

TRANSMIT DMA

The following diagram shows the format of the transmit descriptor table:
DWORD 0 - Status

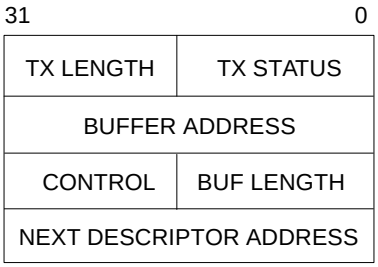

Bit Number and Description

31 through 16: Transmit Length

15 - OWNER: Descriptor ownership bit - set to 0 when the host owns the descriptor, 1 when the NIC owns the descriptor.

14 and 13 - Reserved.

12 through 8 - COLLISION COUNT: These bits contain the number of collisions detected while attempting to transmit the current packet. Bit 12 also indicates transmit abort for excessive collisions.

7 - DEFERRING: This bit is set when the inter-frame gap state machine is deferring. If the PHY has asserted the collision line as a result of jabber, this bit will stay set indicating the jabber condition. Always returns 0.

6 - OUT OF WINDOW COLLISION: This bit is set if a collision is detected more than one slot time after the start of transmission. Transmission is aborted under these conditions.

5 - COLLISION DETECT HEARTBEAT: This bit is set to a '1' during transmission of each packet. It is set to '0' if a collision is detected within 36 bit times of the end of each packet transmission. If no collision is detected within this window, it remains '1'. This bit always returns zero in full duplex mode.

4 - UNDERRUN: This bit is set when the transmit DMA is unable to supply the transmitter enough data to maintain frame transmission. Always returns 0.

3 - CARRIER SENSE LOST: This bit is set if the carrier is lost during packet transmission. Carrier sense is monitored from its rising edge at the start of the outgoing frame's echo. Transmission is not aborted upon loss of carrier. This bit will always return zero in full duplex mode.

2 - TRANSMITTED WITH COLLISIONS: When set, this bit indicates the frame collided at least once with another frame on the network. It is not set for either out-of-window collisions or excessive collision aborts.

1 - NON-DEFERRED TRANSMISSION: This bit is set if the frame is transmitted successfully without deferring. A deferred transmission can only occur the first time an attempt is made to send a packet. Collisions are not deferred transmissions.

0 - PACKET TRANSMITTED: This bit is set to indicate transmission of a packet without excessive collisions or abort.

DWORD 1 - Data Buffer/Start of Fraglist Pointer

Bit Number and Description

31 through 0: Starting address of data buffer or fragment list in host memory space. Fragment list must be DWORD aligned. Data buffer may be aligned on any byte.

DWORD 2 - Control/Data Length

Bit Number and Description

31 through 21 Reserved: Must always be set to 0.

20 - LASTDESCR: Indicates that this is the last descriptor for the current transmit frame (Not used when FRAGLIST = 1).

19 - NOCRC: Disable automatic CRC generation for this packet when set.

18 - IAF: When set, interrupt after this frame is transmitted.

17 - LFFORM: Fragment list format - A "1" indicates that the data length field comes before the pointer in the fragment list. "0" indicates that the pointer comes before the data length.

16 - FRAGLIST: Indicates that this descriptor points to a fragment list.

15 through 0 - Length of data buffer (Not used when FRAGLIST = 1).

DWORD 3 - Next Descriptor Pointer

Bit Number and Description

31 through 2 - Starting address of next descriptor in host memory space. Descriptors must be DWORD aligned.

1 - 0: Unused.

The software driver initializes the transmit process by writing the transmit control register, early transmit threshold register (if early transmit will be used), inter-packet gap program register, interrupt mask register and general control register. The software must also program the CardBus Transmit Current Descriptor Address Register (PTCDAR) with the address in host memory where the first transmit descriptor will be located.

To begin packet transmissions, the software driver programs the transmit descriptor chain with the appropriate number of entries and then sets the TXQUEUED bit in the COMMAND register.

Descriptor entries describe the location of transmit data in host memory. Data for a single transmit frame may not always be in a contiguous block in host memory. Therefore, the LAN83C175 allows the software to specify multiple data buffers for each frame. Each frame may be queued in one of two ways, both of which may be used in the same descriptor chain:

1) Direct Queuing Method (descriptors point directly to the transmit data buffers):

One or more descriptors may be used to point to a single frame. All descriptors must have the FRAGLIST control bit set to 0. The first descriptor must contain the transmit length for the frame. The last descriptor for the frame must have the LASTDESCR bit set to 1 and contain the desired values for the TXIAF and NOCRC control bits. When the TXQUEUED bit is set, the transmit DMA will read the from the location in host memory pointed to by its Current Descriptor Address register. If the ownership bit in the descriptor is equal to 1 then the LAN83C175 will accept the descriptor and update its Current Descriptor Address register with the value in the Next Descriptor Address field. Otherwise the TXQUEUED bit will be cleared (and the transmit queue empty (TQE) interrupt set) and the Current Descriptor Address register will not be changed. The Transmit Length field in the first descriptor will

always contain the number of bytes to be transmitted on the network, and not necessarily the number of bytes in the transmit buffers. The transmit DMA will begin copying data from the location in host memory specified by the Buffer Address field in the first descriptor. It will compare the transmit byte count to the Data Length field, and copy the lesser number of bytes into the local transmit RAM. If early transmit is enabled, the LAN83C175 will automatically initiate transmission on the network when the number of bytes specified in the Early Transmit Threshold register have been loaded into the transmit buffer.

If the transmit byte count is less than the Data Length field, or the LASTDESCR bit is set, then the frame copy is complete after the buffer has been read. The LAN83C175 will initiate transmission on the network if it has not already done so.

If the Data Length field is less than the transmit byte count and the LASTDESCR bit is not set, then the LAN83C175 will attempt to read another descriptor. The transmit DMA will proceed as before, however this time it will not read the Transmit Length field, but instead use the remaining number of bytes in its transmit byte counter (original byte count minus bytes already copied). This process will continue until a descriptor is read with the LASTDESCR bit set or the transmit byte count reaches zero. If LASTDESCR is set and the total number of bytes copied do not add up to the transmit byte count, then the transmit MTU will pad the frame with random data after copying all of the valid data out of the transmit RAM. The CSMA/CD state machine will not append the automatically generated CRC to the frame if NOCRC is set in the last descriptor for the frame.

After the LAN83C175 has initiated the first transmission, it will check to see if there are any more frames in the transmit queue. If the software does not have another frame ready for transmission, then the ownership bit in the next descriptor must be 0. If the ownership bit is 0, then the LAN83C175 will clear TXQUEUED and set the transmit queue empty interrupt. If the ownership bit is 1, then the LAN83C175 will begin copying the next frame into the local transmit RAM. The DMA will continue copying transmit buffers until the frame has been completely loaded into the transmit RAM or the first transmission has completed. If the copy completes while the first transmission is still in progress, then the LAN83C175 will stop and wait. When the transmission is finished, the LAN83C175 will post the status into the first descriptor for that frame and immediately initiate the second transmission. If the transmission completes before the copy is done, the LAN83C175 will pause after the current transmit buffer has been copied and post the status from the first frame. If the early transmit threshold has already been exceeded then the second transmission will be initiated immediately. The transmit DMA will then continue by reading the next descriptor for the copy in progress.

When the transmit status is posted, the ownership bit will be written as 0 to indicate that the host now owns that descriptor again. The Transmit Length field will not be overwritten. If TXIAF is true in the last descriptor for the frame, then the transmit complete (TXC) interrupt will be set. When there are no frames left in the queue and the last transmission has completed on the network, the transmit DMA will set the transmit chain complete (TCC) interrupt and return to its idle state.

2) Fragment List Method (descriptor points to a fragment list)

This method of queuing a transmit frame is much like the first method, except that each frame is always specified by one descriptor which points to a list of buffers (fragment list) instead of the buffers themselves. The FRAGLIST bit in the descriptor must be set to 1 and the LFFORM bit must properly indicate the format of the fragment list. The first entry in the fragment list tells how many data buffers

(fragments) are listed. Up to 63 fragments are allowed. The remaining entries specify the starting address and length of each buffer.

As in the direct queuing method, the transmit DMA will copy fragments one at a time into the local buffer until Transmit Length bytes have been copied or all of the fragments have been read. If early transmit is enabled, transmission will be initiated when enough bytes have been copied to meet the early transmit threshold. Otherwise transmission will be initiated when the entire copy is complete.

When more than one frame is queued, the transmit DMA will begin copying a second frame while the first is transmitting. It will continue copying fragments until the entire frame is loaded or the first transmission has completed. If the copy completes while the first transmission is still in progress, then the LAN83C175 will stop and wait. When the transmission is finished, the LAN83C175 will post the status into the first descriptor and immediately initiate the second transmission. If the transmission completes before the copy is done, the LAN83C175 will pause between fragments to post the status and then resume the copy. If the early transmit threshold has already been exceeded then the second transmission will be initiated immediately. Figure 3 on the following page shows a drawing of the Transmit Buffer Structure.

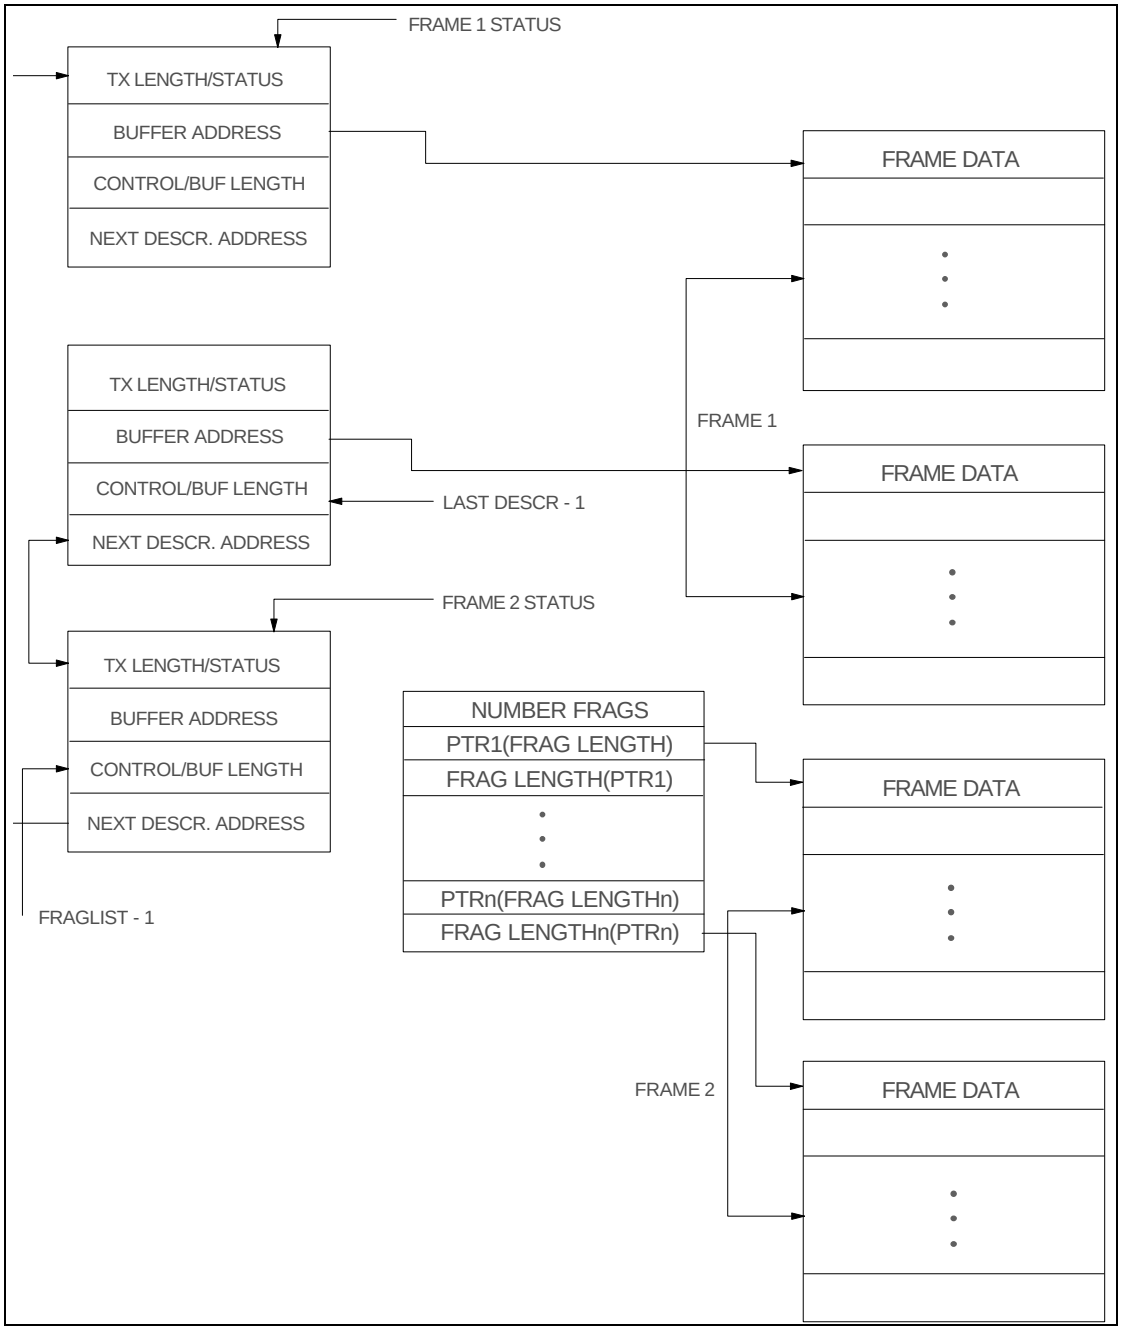


FIGURE 3 - TRANSMIT BUFFER STRUCTURE

The software may add transmit frames to the queue at any time. If the transmit process is already running (TXQUEUED may still be set), then all of the descriptor and fragment list fields for the new frame must be valid BEFORE the ownership bit in the first descriptor is set. After the descriptors are written, the TXQUEUED bit should be set. TXQUEUED can be written regardless of completion status and will ensure that the latest frame is transmitted. If the LAN83C175 reaches the end of the transmit queue before the new frame has been added, a transmit chain complete interrupt is generated for the old portion of the queue and another transmit chain complete interrupt will be generated when the added portion completes.

Interrupting Transmit Chain

The host may interrupt the transmit chain before all frames have been transmitted by setting the STOP_TDMA bit in the command register. Setting this bit forces TXQUEUED to 0. The transmit DMA will finish copying any frame that it has already begun, and transmit all frames that have been loaded into the transmit ram. After the transmit DMA has posted the status for the last frame, it will set the transmit chain complete interrupt and return to its idle state (exactly as if the next frame in the queue was owned by the host). If the DMA reads a descriptor owned by the host while a copy is still in progress, it will set the transmit queued empty interrupt and wait for the descriptor to be re-queued. It will not return to the idle state until the copy is completed.

Transmit Buffer Full

Whenever the local transmit RAM becomes full, the transmit DMA will wait until more space is available before loading any more data. Space is freed up as the transmit MTU reads data from the local RAM and updates its pointers. In some cases, the transmit MTU will leave its pointers at the beginning of a frame until it knows that the transmission will not have to be retried. Automatic retries can occur due to collisions or early transmit underruns.

Transmit Underrun

A transmit underrun occurs in early transmit mode when the transmit DMA can not keep up with transmission on the network. Data must be read from the local RAM before it is available. Usually, when an underrun occurs, the transmit MTU will generate a transmit underrun (TXU) interrupt and update its transmit status register. The transmit DMA will continue to operate as though nothing has happened. The software driver will be allowed to read the transmit status value from TXSTAT and set the "transmit underrun go" (TXUGO) bit to tell the MTU to retry the frame. The MTU will re-transmit the entire frame out of the local transmit ram. When transmission has completed successfully, the DMA will post the transmit status for the retry to the descriptor for that frame. Operation will continue as it normally would for a non-underrun situation.

The only exception to this behavior is when the transmit MTU can not automatically retry an underrun frame. This happens when the frame size is larger than the transmit RAM (1.5 Kbytes) and the transmit DMA has overwritten the beginning of the frame before the underrun occurs. If such an event occurs, the transmit DMA will abort the copy and reset its pointers to the first descriptor for that frame. The DMA will clear the TXQUEUED bit and return to its idle state. Transmit queue empty and transmit chain complete interrupts will be generated along with the transmit underrun interrupt. The software driver must set TXUGO to reset the transmit MTU and then set TXQUEUED if it wants to retry the frame. The frame will be re-copied from scratch out of host memory when TXQUEUED is set.

Maximum Transmit Size and Burst Rate

The transmit DMA supports frame sizes up to 64 Kbytes. The maximum size for a single data buffer (fragment) is also 64 Kbytes. The transmit DMA will run at the maximum CardBus data rate of 132 MBytes/s when the target memory system supports zero wait state reads. The transmit DMA will burst as many words as it can before having to relinquish the CardBus bus. It is capable of bursting data continuously with no wait states (even when a transmission is active on the network) until the transmit RAM becomes full. The transmit DMA, however, will most likely lose possession of the CardBus bus several times before it can fill the entire 1.5 Kbyte transmit buffer.

Bit Number and Description

31 Through 4 - Unused

5 through 0 - Number of fragments in this fragment list (1-63). (Note: programming 0 into this field results in 64 fragments).

Data Buffer Pointer


31 through 0 - Starting address of data buffer in host memory space. Data buffer may be aligned on any byte.

31 through 16 - Unused

15 through 0 - Length of data buffer.

RECEIVE DMA

The diagram below shows the format of the receive descriptor table:

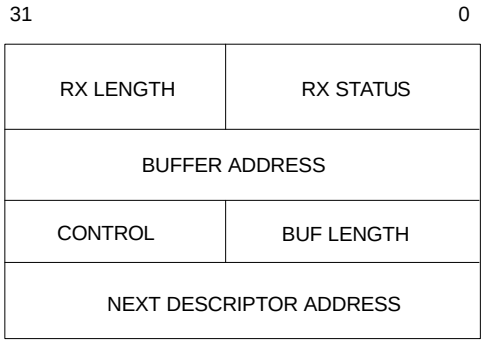

DWORD 0 - Status

Bit Number and Description

31 through 16 - RECEIVE FRAME LENGTH: Number of bytes in the received frame.

15 - OWNER: Descriptor ownership bit - set to "0" when the host owns the descriptor, set to "1" when the NIC owns the descriptor.

14 - HEADER COPIED: Set when the receive status is posted after a header copy.

13 - FRAGMENT LIST ERROR: Set when all buffers in the fragment list have been filled before the entire receive frame is copied.

12 - NETWORK STATUS VALID: Set when bits 6 - 0 contain the status from the current frame and bits 31-16 contain the frame length. In the case of a header copy or fragment list error, the receive status from the current frame may or may not be posted. In all other cases this bit will be set.

11 through 7 - Reserved

6 - RECEIVER DISABLED: This bit is set when the receiver is in monitor mode. Always returns 0.

5 - BROADCAST ADDRESS RECOGNIZED: This bit is set when a broadcast address has been recognized.

4 - MULTICAST ADDRESS RECOGNIZED: This bit is set when a multicast address which passes the hash filter has been recognized.

3 - MISSED PACKET: This bit is set when a packet with a recognized address and without errors (or with masked errors) is not buffered because the device is in monitor mode. This bit is also set when the packet overflows the receive buffer space and cannot be received. Always returns 0.

2 - CRC ERROR: This bit is set when a frame's computed CRC does not match the CRC appended to the frame. If the frame is a runt, this bit will be clear. In MII mode, this bit will also be set if receive error was asserted on the MII interface during reception of the frame.

1 - FRAME ALIGNMENT ERROR: This bit is set if a CRC error has occurred and the frame is not byte aligned.

0 - PACKET RECEIVED INTACT: This bit is set when a packet is received into the buffer space without error.

DWORD 1 - Data Buffer/Start of Fraglist Pointer
Bit Number and Description

31 through 0 - Starting address of data buffer or fragment list in host memory space. Fragment list must be DWORD aligned. Data buffer may be aligned on any byte.

DWORD 2 - Control/Data Length (or Frame Offset)

Bit Number and Description

31 through 19 - Reserved: Must always be set to 0.

18 - HEADER: Indicates that this descriptor is for a header copy.

17 - LFFORM: Fragment list format - a 1 indicates that the data length field comes before the pointer in the fragment list. A 0 indicates that the pointer comes before the data length.

16 - FRAGLIST: Indicates that this descriptor points to a fragment list.

15 through 0 - Length of data buffer (when FRAGLIST = 0) or Offset into frame where copy begins (when FRAGLIST = 1).

DWORD 3 - Next Descriptor Pointer

Bit Number and Description

31 through 2 - Starting address of next descriptor in host memory space. Descriptors must be DWORD aligned.

1 - 0: Unused.

The software driver initializes the receive process by writing the receive control register, interrupt mask register and general control register. The software must also program the CardBus Receive Current Descriptor Address Register (PRCDAR) with the address in host memory where the first receive descriptor will be located.

To allow packet receptions, the software driver programs the receive descriptor chain and then sets the RXQUEUED and START_RX bits in the COMMAND register. Setting START_RX brings the CSMA/CD receiver online. The receive DMA is enabled by setting RXQUEUED. The software driver should set RXQUEUED before or simultaneous to bringing the receiver online so that the receiver does not overflow the local buffer while waiting for a descriptor to be queued. The first descriptor must be valid before the RXQUEUED bit is set. The first descriptor will be read as soon as it is queued, even if no receptions have occurred on the network.

The receive lookahead method offers maximum performance in most cases.

Free Buffer Pool Method

In this mode the software driver pre-allocates a pool of free buffers for frames received by the LAN83C175. The ONECOPY bit in the general control register must be set so that the each frame may be copied into the buffer pool without host intervention. The descriptors for the free buffer pool may point directly to the buffers, or point to a fragment list which in turn specifies the buffers.

When the RXQUEUED bit is set, the receive DMA will attempt to read the first descriptor from the address pointed to by its Current Descriptor Address register. If the ownership bit is 0, the RXQUEUED bit will be cleared (and the receive queue empty (RQE) interrupt set) and the Current Descriptor Address register will not be changed. If the ownership bit is equal to 1, the LAN83C175 will accept the descriptor and update its Current Descriptor Address register with the value in the Next Descriptor Address field. The LAN83C175 will save the descriptor information until a frame is received. If the fraglist control bit is also 1, then the receive DMA will read and save the address pointer and data length for the first buffer in the fragment list. The offset field in the descriptor (see buffer length field) should be set to zero, otherwise the copy will not begin at the start of the frame. The fragment list format for the receive DMA is identical to the format for the transmit DMA.

As soon as a frame is received, the LAN83C175 will begin copying it from the local receive buffer into the allocated buffer in host memory. If early receive is enabled, the LAN83C175 can begin the copy while reception is still in progress. The receive DMA always monitors the local buffer contents so that a receive underflow can never occur. As soon as the receive DMA has copied the number of bytes in the CardBus Receive Copy Threshold register, it will set the receive copy threshold (RCT) interrupt. When the receive DMA has copied the entire packet from the local RAM into host memory, it will post the receive status into the first descriptor for the frame and set the receive copy complete (RCC) interrupt. The DMA will read the next descriptor and, if owned by the NIC, check to see if there are any more frames to copy out of the local RAM. If the receive DMA fills the first host buffer before the entire frame has been copied, it will read the next descriptor or fragment list entry to find more buffer space. This process will continue until the entire frame has

been copied. If the DMA reads a descriptor with the ownership bit set to 0, it will clear the RXQUEUED bit (and set the receive queue empty interrupt) and wait for a new descriptor to be queued. In fragment list mode, the receive DMA always expects the fragment list to contain enough buffer space for the entire frame.

If all the buffers in the fragment list are filled before the copy is finished, then the DMA will abort the copy and set the fragment list error bit in the PRSTAT register. The DMA receive status will be posted to the descriptor for that frame and the RXQUEUED bit will be cleared. If early receive is enabled, the network portion of the receive status may not yet be valid, as indicated by the RSV bit posted in the status. The software driver may poll the RSV bit in the interrupt status register, and when it returns a 1 read the receive status from PRSTAT. The software may attempt to re-copy the frame by setting the RXQUEUED bit again, or may discard the frame by setting the NEXTFRAME bit before or simultaneous to setting RXQUEUED. If RXQUEUED is set after or along with NEXTFRAME, the DMA will begin to copy the next frame (if any) in the receive buffer.

Note: The DMA rounds the number of bytes copied up to the nearest dword.

If the receive buffer does not start on a dword boundary, then the number of bytes in the receive buffer may be slightly less (up to 3 bytes) than the receive copy threshold when the interrupt is generated.

Adding Receive Buffers to the Pool

The software driver adds buffers to the pool by writing the appropriate descriptors and setting their ownership bit to 1. If the receive DMA has stopped (RXQUEUED is cleared), then the software must set the RXQUEUED bit to queue the new descriptors. The RXQUEUED bit may be set at any time, even if the receive DMA is still active.

Receive Lookahead Method

When this buffering method is used, the LAN83C175 first copies only the header of a frame into host memory, and then waits for a queue from the software driver before copying the rest of the frame. The software usually specifies the final destination of the frame data with a fragment list. The advantage to this buffering method is that the LAN83C175 may copy frame data to its final destination instead of a temporary buffer space, so the software driver is not required to re-copy the data from one host memory location to another.

In receive lookahead mode, frames are usually copied into the host memory one at a time, and a handshake is performed between the software driver and the LAN83C175 during each frame. The handshake is performed using the RXQUEUED and NEXTFRAME bits in the COMMAND register, and the receive copy complete (RCC) and header copy complete (HCC) interrupts. The control bits in the receive descriptors are also used to direct the receive DMA.

The software driver begins by setting up a buffer for the header of the first frame and setting RXQUEUED. The HEADER control bit in the descriptor should be set and the FRAGLIST bit should be cleared. The buffer address pointer and length are specified directly in the descriptor. When a frame is received, the receive DMA begins copying the beginning of the frame into the header buffer until the buffer is full, or until the entire frame has been copied. The copy may begin before the entire frame has been received if early receive is enabled. When the header copy is complete, the receive DMA status will then be posted to the descriptor for the header buffer, and the header copy complete interrupt will be set. If reception from the network has completed, then the network portion of the posted status will be

valid, and the RSV bit will be set to 1. In early receive mode, the receive DMA status may be posted before the network status for the frame is available, in which case the RSV bit in the descriptor will be set to 0. If the entire frame fits into the header buffer, then the network receive status will always be posted with the frame. After a header copy, the receive DMA always clears the RXQUEUED bit (also setting the receive queue empty interrupt, which may be masked) and waits in the idle state for the software driver to queue a fragment list for the rest of the frame.

After examining the header data, the software driver may discard the frame or have it copied into host memory as many times as it would like. The software requests copies of the frame by programming descriptors (and fragments lists) and setting RXQUEUED without setting NEXTFRAME. The frame is copied exactly as it would be in the free buffer pool mode, with the exception that the offset field is used with fragment list copies. The software may not need all of the bytes at the beginning of the frame to be copied, so it may specify an offset into the frame where the copy should begin. The offset field shares a location in the descriptor with the buffer length field because the buffer length is not specified in a descriptor for a fragment list. The receive DMA copies the frame into host memory beginning from the byte number specified in the offset. If the offset field is not zero, then the copy will not begin until the entire frame has been received from the network, even if early receive is enabled. This is so that the receive DMA does not copy invalid data if the offset is greater that the number of bytes that have been received so far. Usually, the entire frame will have been received before the fragment list is available.

When the copy is finished, the receive status is posted and the receive copy complete interrupt is set. The receive DMA will then read the next descriptor, and if the ownership bit is set it will immediately begin to copy the same frame into host memory again. If the descriptor is owned by the host, then RXQUEUED will be cleared (and receive queue empty interrupt set) and the receive DMA will wait in the idle state for another command. If the software driver wants another copy of the frame, it may queue another descriptor and set RXQUEUED without setting NEXTFRAME. This procedure will be repeated until the software chooses to go on to the next frame.

The software driver discards a frame by setting NEXTFRAME before or simultaneous to setting RXQUEUED. If RXQUEUED is set after or along with NEXTFRAME, the receive DMA will begin to copy the next frame (if any) in the receive buffer. The next descriptor queued should contain a header buffer for the next frame.

Occasionally, the software driver may want to discard a frame immediately after reading its header, but still read the receive status for that frame. If the valid network status is not posted in the descriptor, then the software driver may read it from the PRSTAT register. The driver must first set NEXTFRAME and RXQUEUED to discard the frame, as described above. However, the next descriptor in the receive descriptor list must have the ownership bit cleared (host still owns descriptor). This allows the LAN83C175 to update the PRSTAT register without starting to copy the following frame. The software driver must poll the RQE (receive queue empty) interrupt to determine when the status is available. When the RQE interrupt is set, the driver may read the receive status from the PRSTAT register. The receive status valid bit in the interrupt status register will not indicate when the receive status is available.

When the software driver only wants one more copy of the current frame, it does not have to wait for the copy to complete before setting NEXTFRAME. The software may set NEXTFRAME immediately after setting RXQUEUED (on the following I/O write) and begin

to queue the header descriptor for the next frame. After the header descriptor is queued, the software may set RXQUEUED again to guarantee that the header descriptor is recognized. When the DMA is finished copying the first frame, it will immediately read the next descriptor and may begin copying the next header without waiting for the software to respond to an interrupt.

Note: Software must never set NEXTFRAME more than once per frame. NEXTFRAME may only be set when the copy is in progress or has already been completed.

Figure 4 shows an example of the Receive Buffer Structure, and Figure 4 shows a flow diagram for the Receive Buffering Method.

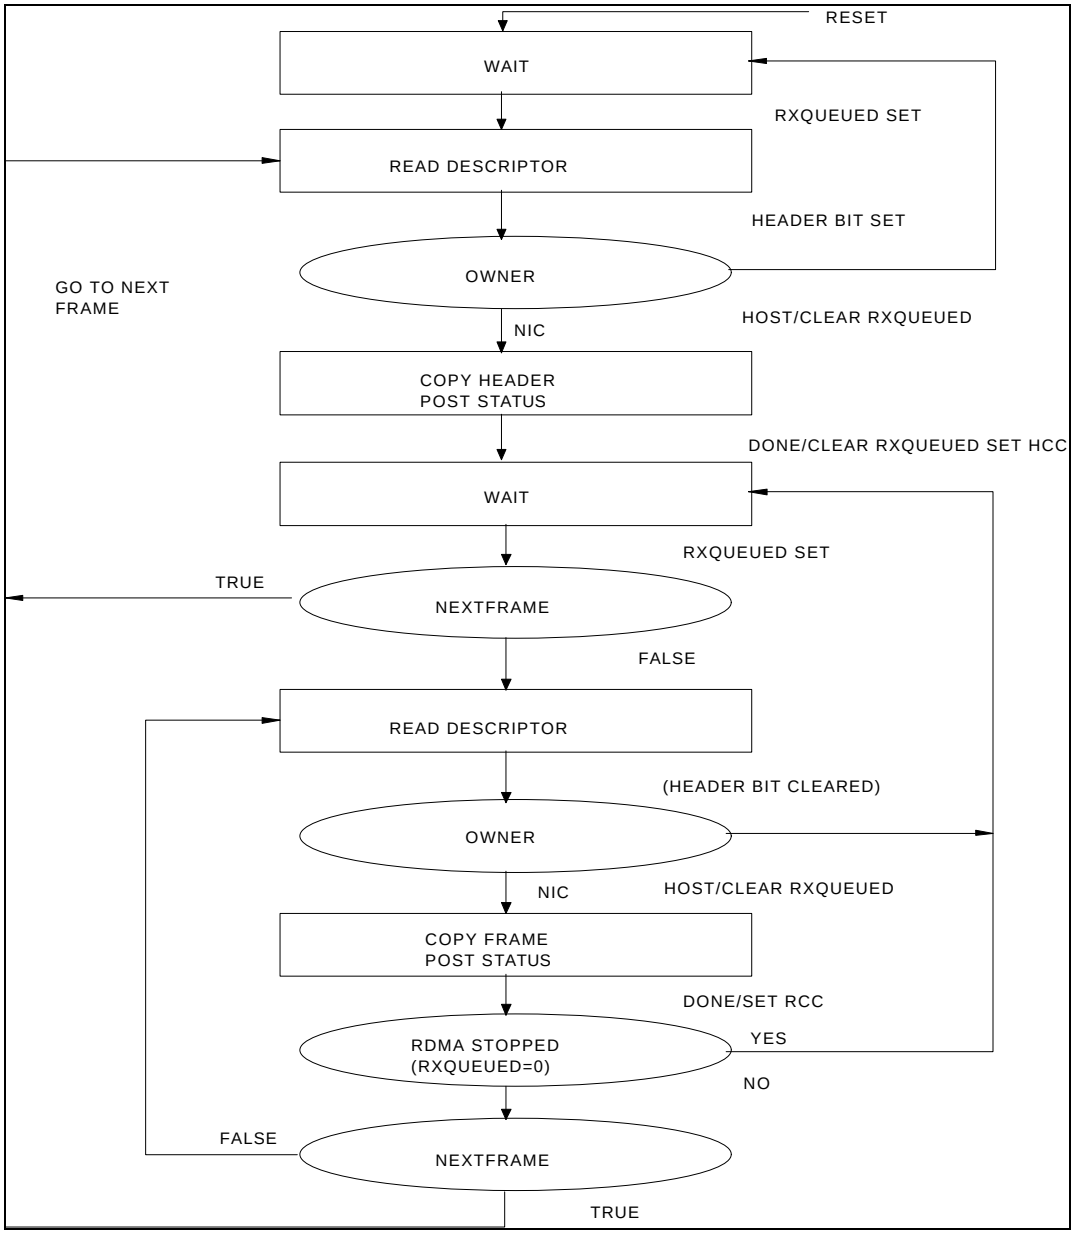


FIGURE 4 - RECEIVE LOCKAHEAD BUFFERING FLOW

Stopping the Receive DMA

The receive DMA may be halted by setting the STOP_RDMA bit in the command register. Setting this bit forces RXQUEUED to 0. The CSMA/CD receiver should also be taken off-line to prevent it from continuing to buffer receive frames. The receive DMA will attempt to complete any copy in progress. When finished, it will return to its idle state. When the CSMA/CD receiver is off-line and has also returned to its idle state, the RXIDLE bit in the interrupt status register will become true (1). If the DMA reads a descriptor owned by the host before it completes its current copy, it will set the receive queued empty interrupt and return to the idle state. The DMA will continue the copy when more buffers are queued. The software driver can tell if a copy is still in progress or if there are any more frames in the local receive RAM by reading the RCIP and RBE bits in the interrupt status register.

The STOP_RDMA bit can be set when the receive DMA has read and saved the information in a descriptor, but there are no frames in the local receive RAM. In this case, the receive DMA will reset its current descriptor pointer back to that descriptor and return to the idle state. When the RXQUEUED bit is set again, the DMA will be re-read the descriptor.

Maximum Receive Size and Burst Rate:

The receive DMA supports frame sizes up to 64 Kbytes. The maximum size for a single data buffer (fragment) is also 64 Kbytes. The receive DMA will run at the maximum CardBus data rate of 132 Mbps when the target memory system supports zero wait state writes. DMA bursts at this rate will run for a limited number of dwords. The length of each burst is dependent on the FIFO threshold level and access to the local receive RAM. The receive DMA loads data into the receive burst FIFO at a maximum rate of 100 Mbps (when reception is not in progress) or 83 Mbps (when reception is in progress). The receive DMA will automatically initiate a burst on the CardBus bus whenever the FIFO reaches programmed threshold level. The receive DMA will continue to load data into the FIFO while it is being emptied onto the CardBus bus. The burst will continue until the FIFO is empty or the receive DMA loses control of the CardBus bus (to the internal transmit DMA or to another CardBus master). Another burst will begin when the FIFO again reaches the threshold level, or when the last of the data for the current copy has been loaded into the FIFO. The CardBus bus will be requested immediately if the receive DMA loses possession of the bus while the FIFO is above the threshold level.

THR_SEL [1]	THR_SEL [0]	THRESHOLD LEVEL
0	0	1/4 Full (32 Bytes)
0	1	1/2 Full (64 Bytes)
1	0	3/4 Full (96 Bytes)
1	1	Full (128 Bytes)

A lower threshold allows the LAN83C175 to begin moving data on the CardBus bus sooner, while a higher threshold may allow longer bursts. A higher threshold level will not result in parity generation and error detection. This block is also responsible for responding to all slave operations according to CardBus bus protocol (including address recognition and parity generation and error detection).

TRANSMIT/RECEIVE ARBITRATION FOR CardBus BUS

Another major function of the CardBus Bus Master/Slave Interface block is to arbitrate between the transmit and receive DMA controllers for access to the CardBus bus. Two programmable priority select bits determine the relative priority of each DMA controller. When RXPRI is set, the receive DMA process may preempt the transmit DMA process (when the CardBus Latency Timer expires). The receive DMA takes control of the CardBus bus if a transmit fragment copy is suspended by a target disconnect before the Latency Timer expires. When RXPRI is cleared, the receive process has to wait until the transmit DMA is finished before it has access to the CardBus bus. When TXPRI is set, the transmit DMA process may preempt the receive DMA process (when the CardBus Latency Timer expires). The transmit DMA also takes control of the CardBus bus if a receive fragment copy is suspended by a target disconnect before the Latency Timer expires. When TXPRI is cleared, the transmit process has to wait until the receive DMA is finished before it has access to the CardBus bus. When both bits are set, either process may preempt the other. When neither bit is set, no preemptions occur. (Note: Preemption does not occur when either process has only one dword left to transfer).

SYSTEM ERRORS

There are four types of CardBus bus errors that are considered fatal by the LAN83C175. They are Master Abort, Target Abort, Address Parity Error and Data Parity Error (see interrupt status register for details). If any of these errors occurs, the LAN83C175 will set the appropriate interrupt and immediately discontinue all DMA activity. The receiver will automatically be taken off-line and any transmissions in progress will be completed without a valid CRC appended (in case transmit data was corrupted). Normal operation may only be resumed by resetting the LAN83C175 with the soft reset bit. The software driver should make sure the transmitter and receiver have returned to their idle states (by polling the TXIDLE and RXIDLE bits in the interrupt status register) before resetting the device.

BIG/LITTLE ENDIAN SUPPORT

In order to run in Big Endian machines, the LAN83C175 can be programmed to swap bytes on the data bus in certain circumstances. In Macintosh Power PC computers the bridge between the Big Endian processor data bus and the Little Endian CardBus bus swaps the order of the bytes on the data bus (during data phase only - addresses are never modified). This means that byte size quantities transferred over the data bus will always end up in the correct location for their given address, but when 32 bit (dword) quantities are transferred they will end up with their bytes reversed.

When programmed into Big Endian mode, the LAN83C175 will automatically swap the data bytes internally when reading or writing descriptor tables or fragment lists. This allows the software driver to treat the descriptor and fragment list entries as 32 bit quantities and not worry about byte ordering.

In order to comply with the CardBus specification, the LAN83C175 will not swap the data bytes on reads or writes to the configuration or control register space. The software driver will be responsible for correctly interpreting the bytes when performing 32 bit register read or writes on a Big Endian machine.

When reading or writing Ethernet packet data, the LAN83C175 will not perform any byte swapping internally because the data on the CardBus bus will already be in the correct order.

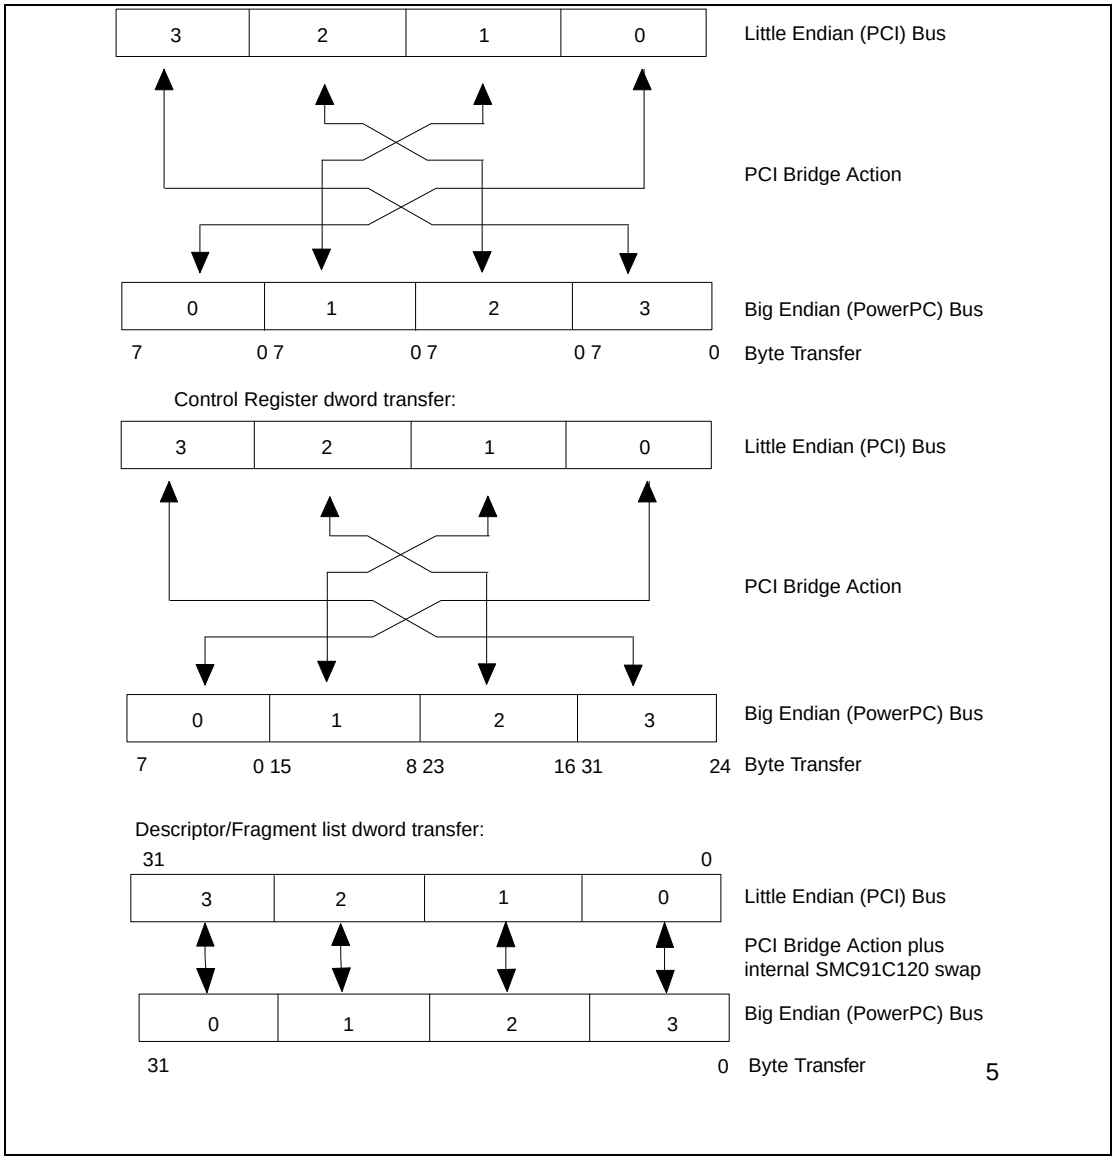


FIGURE 5 - LITTLE ENDIAN/BIG ENDIAN BYTE TRANSFER

The number in the box refers to the address of the byte. The numbers above and below the boxes refer to the bit number (the bit ordering increases from LSB to MSB for both formats, although some other documents choose to label them differently).

MAC Operation

The LAN83C175 is compliant with the 802.3 standard CSMA/CD protocol for 10 or 100 Mbps Ethernet networks.

MAC Receiver

The LAN83C175 CSMA/CD receiver is capable of operating with network data rates of 10 and 100 Mbps. It supports current implementations of 10 Mbps physical layer devices, and the 802.3u Media Independent Interface for 10 and 100 Mbps.

Basic Function

The receiver processes serial or nibble wide data streams at data rates of 10 Mbps or 100 Mbps. The receiver detects start of frame, provides destination address recognition and filtering, transfers recognized frames to memory, and provides error detection and reporting.

Interface to Physical Layers

The receiver interfaces to the physical layer in serial or parallel mode. When in the serial mode, data is transferred serially on the RXD[0] pin synchronous to the falling edge of the receive data clock (RX_CLK). RX_CLK is a 10 MHz clock signal recovered by the physical layer device from the data stream. The CRS and COL signals provide carrier sense and collision detect respectively.

In parallel mode, the physical layer device transfers data to the LAN83C175 four bits at a time on the RXD[3-0] data bus. The data is transferred synchronously to the falling edge of RXC. The signal Receive Data Valid (RX_DV) informs the MAC of the RXD bus status. The physical layer can also notify the LAN83C175 of invalid data on the medium with the Receive Error signal (RX_ER). Selecting the receiver interface mode is performed by programming the MII Configuration register.

Packet Reception/Serial Mode

After detection of carrier, serial bits received on RXD[0] are synchronized to the rising edge of RX_CLK. Each bit is shifted through an 8-bit shift register scanning for a Start of Frame Delimiter (SFD) pattern of '10101011' received from left to right. Following detection of SFD, all bits are byte aligned in the serial to parallel shift register. Bits are received from least significant bit to most significant bit within the byte. Data from the shift register is transferred to the receive FIFO where it waits for the receive DMA to transfer it into local memory. The receive process continues while CRS or COL are active.

Parallel Mode

Packet reception begins with the first nibble after detecting RX_DV active. Nibbles transferred on RXD[3-0] are synchronized to the rising edge of RX_CLK and shifted into a 2-nibble shift register. RXD[0] is the least significant bit (LSB). SFD is detected when the shift register contains the value '10101011' from LSB to MSB. The preamble and SFD pattern received from the PHY device is required to be nibble aligned. Bytes are aligned in the 2-nibble shift register after detection of SFD. Each byte is transferred to the receive FIFO. Packet reception continues while RXDV is active and ends with the nibble preceding the falling edge of RX_DV. While RX_DV is de-asserted, the value of RXD[3-0] has no effect on the MAC.

Error Detection

The receiver computes the CRC of incoming frames for all data following the detection of SFD in both parallel and serial mode until the end of frame, including the CRC field.

Computation stops after the reception of the last whole byte following loss of carrier in serial mode or the transition of RX_DV from active to inactive in parallel mode. The final value of the CRC must be "C704DD7B" for the packet to be validated. The CRC polynomial used is AUTODIN II (X32 + X26 + X23 +X22 + X16 + X12 + X11 + X10 + X8 + X7 + X5 + X4 + X2 + X1 + 1).

In addition, in parallel mode, the receive error signal, RXER, forces a CRC error when it is asserted while RX_DV is active.

Address Recognition

The receiver is capable of recognizing individual, multicast, and broadcast addresses. It can also be programmed to operate in promiscuous mode and receive all frames regardless of address. In all cases, address recognition begins with the first byte following SFD and ends with the sixth byte after SFD. Individual destination addresses are compared against a 6 byte register station address. Multicast addresses are recognized by taking a 6 bit snapshot of the partially computed CRC as the end of the destination address field passes through the CRC checker. If the address has the multicast bit set, the 6 bits are used as a hashed index to a 64 bit Multicast Filter table. If reception of multicast frames has been enabled and if the 6 bit hash index points to a bit in the table that has been set, the multicast frame will be recognized. Broadcast frames are received when the broadcast enable bit is set and the destination address specifies a broadcast frame, or when the hashed bit in the Multicast Filter table has been set.

Reception of all multicast and broadcast frames can be achieved by setting all bits in the Multicast filter table and enabling reception of multicast frames. If the address is not recognized by any of the above means, then the frame will be ignored.

When an address is recognized, the entire frame will be saved into local memory.

Frame Processing

Frame processing begins following the detection of SFD and continues until the last bit or nibble of the frame has been received. Frame processing counts the number of bytes in the receive frame, transfers data to the receive FIFO, checks for errors in both size and data, posts status, generates interrupts, and counts events. Frame processing can be controlled by the receive control register to allow flexible control of frame reception.

Receive Byte Count

The receive byte counter begins counting with the first byte of SFD and counts all bytes of the frame until the end of frame is detected or an error condition causes the frame processing to be aborted. The counter filters runt frames by comparing the current byte count value to the slot time programmed in the Transmit Control register. The frame is considered a runt until the byte count exceeds the slot time value. Runt frames are not received under default conditions. Reception of runt frames can be enabled by setting the receive runts bit in the receive control register.

Data Transfer

Receive data is stored temporarily in a 8-dword receive FIFO. Data begins to be stored in the FIFO after detection of SFD. If the destination address is not recognized, data stops being transferred into the FIFO and the FIFO is reset. When the FIFO level reaches 6-dwords, a burst request to the local receive memory is made. The return of acknowledge is guaranteed to prevent the receive FIFO from overflowing. The data path to the receive local memory is 32-bits.

The data transfer process can be inhibited by operating in monitor mode. This mode checks validiity of incoming frames and maintains error statistics, but does not store the frame in memory. Frames which would otherwise have been accepted cause the Missed Packet counter to increment upon completion of the frame.

If the receive local memory becomes full during reception of a frame, the frame is aborted. The host is notified of the condition with an overflow interrupt. Additionally, the missed packet counter is incremented for each frame which could not be received due to the overflow condition.

Error Checking

Received frames are checked for CRC and alignment errors. If the CRC of a received frame is incorrect, a CRC error is indicated in the status register and the CRC error counter is incremented. Reception of the frame is aborted unless the receiver has been programmed to receive errored packets. If the frame does not terminate on a byte boundary and the CRC is incorrect, then an alignment error is also indicated in the status register. When this occurs, the alignment error counter will be incremented. A receive error interrupt is generated when a CRC error is detected and monitor mode is not set.

The receive control register can be programmed to enable long frame checking (frames longer than 1518 bytes). When a long frame is detected the CRC and alignment counters are not incremented.

Status

A status register is updated at the completion of each frame whether it completed normally or aborted in error. The status register holds important information about the frame until it is transferred with the packet data to the receive local memory. If the frame data is not being saved due to an error or monitor mode, then the contents of the status register will be lost after the completion of the following packet. A description of the status register contents is located in the register definition section of this data sheet.

Event Counters

Three event counters record CRC errors, alignment errors, and missed packets. The counters are all 8-bits wide and count from zero to 255. At 255 the counters stop until they have been read by the host. The counters are self clearing after the read. The counters generate a shared interrupt when any one of them reaches a count of 192.

The counter is also incremented for receive local memory full errors. The missed packet counter is 8 bits wide and generates an interrupt when it reaches a count of 192.

MAC TRANSMITTER

The LAN83C175 CSMA/CD transmitter is capable of generating network data at rates of 10 and 100 Mbps. It supports current implementations of 10 Mbps physical layer devices, and the 802.3u Media Independent Interface (MII) for 10 and 100 Mbps.

Basic Function

The transmitter generates serial and nibble wide data streams at 10 or 100 Mbps. It forms a proper preamble and SFD field at the beginning of each packet. The frame data is then shifted serially or by nibbles from an internal transmit buffer to the physical layer. The transmitter completes the packet by computing and appending the CRC field. During packet transmission, the transmitter monitors the network for collisions and retransmits frames after the a random backoff time when necessary. The transmitter maintains the transmit statistics and generates status

information on each attempted transmission. Optional operating modes can be selected by programming the transmit configuration register.

Preamble Generation

At the beginning of each packet, the transmitter generates 56 bits of preamble (an alternating '1010' pattern). Following the preamble, a Start of Frame Delimeter (a '10101011' sequence) is transmitted.

Transmit Serializer

The transmit serializer converts 8 bits of parallel data from the transmit buffer to serial or nibble wide data. The mode of operation is selected by the MII configuration register. In serial mode, the transmit data is shifted out of the TXD[0] pin synchronous to transmit clock. Data is shifted out least significant bit (LSB) first. In nibble mode, data is shifted synchronous to the transmit clock at a one nibble per clock rate. The data is transmitted least significant nibble first on pins TXD[3-0]. The LSB is transmitted on pin TXD[0].

CRC Generator

The transmitter calculates the CRC and appends it to each packet. CRC data is clocked out most significant bit (MSB) first. A packet can be transmitted without an attached CRC field by programming the transmit descriptor. This is provided for bridging applications in which the original checksum must remain attached to the packet until the final destination.

Transmit Protocol FSM

The transmit protocol FSM controls the transmission of packets by monitoring collisions, deferring to active carriers and collisions, and initiating backoff when needed.

Interframe Gap and Deference

Deference is initiated when both CRS and COL have terminated at the end of a packet. The transmitter deference logic initiates a 2-part timer at the end of network activity. While this timer is running, no frame transmission will be initiated. The first part of the timer (interFrame SpacingPart1) is used to observe the network for transmission activity by other stations. If this station is transmitting, carrier is sensed, or collision is detected during this part of the timer, the timer will be reset to zero and held there until the termination of line activity. When the first part of the timer elapses, line activity is no longer observed and the timer runs to completion.

If any frame is queued up for transmission at the moment of timer expiration, transmission will be initiated regardless of line activity.

The combination of interFrame SpacingPart1 and interFrame SpacingPart2 makes up the Inter-Frame Gap (IFG) as defined by the 802.3 specification.

Collision Handling Logic

When collision is detected by the transmitter section during the first slot timer of an active transmission, the transmission terminates after completion of the preamble and the jam sequence. The jam sequence is 32 bits of logic '1's. If collision is detected after the slot time is passed, the transmission will be aborted after the jam sequence. An out of window collision interrupt will be generated and the collision count status will be retained in the transmit status register for software collection. After the software has responded to the interrupt and re-enabled transmissions, the transmit status will be cleared and the packet will be automatically retransmitted.

Timers and Counters/Slot Timer

During transmit, the slot timer starts counting once the receiver recognizes that a carrier is present at the start of a returning preamble. When backing off, the slot timer starts with the end of transmit enable (TX_EN) for the collided frame and is not reset by any other incoming frames. The slot timer is programmable by the transmit control register. The default slot time is 512 bit times.

Backoff Timer

After a transmission is terminated because of a collision, a retransmission is attempted. The backoff time is determined by the truncated binary exponential backoff alogrithm. This algorithm is:
draw random integer r: 0<=r<2**k

Where k equals the number of retries already on this transmission. The value k is initialized to 0. The required backoff time is 'r' number of slot times. After the backoff time has been completed, normal transmission deferral begins.

The backoff timer is a 12 bit counter that is initialized to a random number when an attempted transmission results in a collision. The counter decrements once per slot time until it reaches zero. The transmit protocol FSM utilizes this timer to insert a variable amount of delay ahead of its attempt to retransmit the frame.

Collision Counter

Prior to the first attempt at each frame transmission, the collision counter is initialized to 0. Each attempted transmission of the frame resulting in a collision causes the collision counter to increment. If the maximum number of collisions (16) is reached before a successful attempt to transmit the frame, the frame transmission is aborted. An interrupt is generated for an aborted frame indicating transmission complete, and the collision count value in the transmit status register is 16.

Heartbeat Detection

When the transmitter is configured in serial mode, after each transmission, the transmit logic opens a window 3.6 µsec long during which it looks for a pulse on the COL pin. This pulse is normally generated by the MAU and is received through the MII interface. If the pulse is received, the CDH status bit of the transmit status register is cleared. If no pulse is received, the CDH bit is set.

MII MANAGEMENT INTERFACE

The LAN83C175 supports the 802.3 specification for the MII Serial Management Interface.

EEPROM INTERFACE

The LAN83C175 has a 8-bit parallel interface to an external EEPROM. The parallel EEPROM contains the LAN Address for the adapter and a several bytes of configuration information. The LAN address and configuration information is automatically recalled from the first eight words (each word is 16 bits) of the serial EEPROM after reset. Access to the LAN83C175 is disabled during the initial EEPROM recall. Any attempted access results in a CardBus target retry. The initial recall may be bypassed through a test "jumper".

EEPROM Format

The format of the EEPROM is shown in the following Table. Note that this denotes only the first 7 Dwords of the EEPROM. The CIS registers for the modem and ethernet functions are also located in this EEPROM at the locations pointed to by the CIS pointer in each of the function's configuration space.

Table 1 - EEPROM Format

DWORD	BITS	NAME
0	7-0	LAN Address Byte 0
0	15-8	LAN Address Byte 1
0	23-16	LAN Address Byte 2
0	31-24	LAN Address Byte 3
1	7-0	LAN Address Byte 4
1	15-8	LAN Address Byte 5
1	23-16	LAN Address Checksum
1	31-24	Board ID
2	7-0	Non-Volatile Control Ethernet
2	15-8	Non-Volatile Control Ethernet (15 unused)
2	23-16	Non-Volatile Control Ethernet (unused)
2	31-24	Non-Volatile Control Ethernet (unused)
3	7-0	Non-Volatile Control Modem
3	15-8	Non-Volatile Control Modem (15 unused)
3	23-16	Non-Volatile Control Modem (unused)
3	31-24	Non-Volatile Control Modem (unused)
4	7-0	CIS Address Ethernet
4	15-8	CIS Address Ethernet
4	23-16	CIS Address Ethernet
4	31-24	CIS Address Ethernet
5	7-0	CIS Address Modem
5	15-8	CIS Address Modem
5	23-16	CIS Address Modem
5	31-24	CIS Address Modem
6	7-0	Subsystem Vendor ID
6	15-8	Subsystem Vendor ID
6	23-16	Subsystem ID
6	31-24	Subsystem ID
7	7-0	PCI Minimum Grant Desired Setting
7	15-8	PCI Maximum Latency Desired Setting

The remaining words in the EEPROM are available to software for general purpose non-volatile storage. The eeprom can be accessed through the base address designated by the Expansion Rom Base Address in the configuration space for both the modem and ethernet function.

POWER DOWN MODE

The LAN83C175 has a power down feature which allows it to consume less power when not in use. The host may power down the LAN83C175 by writing a 1 to the power down bit in the general control register. When the bit is set, the chip's internal system clock is gated off to reduce switching current (the transmit and receive clocks will be shut off internally if the LAN83C175 is in loopback mode when power down is set). While the LAN83C175 is powered down, the host may read and write the configuration registers or the general control register. All other functions are disabled (attempting any other operation will cause unpredictable behavior). The power down bit must only be set when the LAN83C175 is in its idle state.

When the nRST pin is asserted, the LAN83C175 will automatically enter power down mode after recalling the contents of the EEPROM. The host may power up the LAN83C175 by writing a 0 to the power down bit. If the host wishes to issue a software reset to the LAN83C175, the power down bit must be cleared. When the software reset has completed, the power down bit will remain cleared and the LAN83C175 will be ready to operate.

The power down bit does not affect the CardBus clock inside the LAN83C175. Instead, the LAN83C175 supports the CardBus clock run function which allows the host system to slow down or temporarily shut off the CardBus clock at its source. The clock run function is implemented according to the CardBus Mobile design guide (revision 1.0).

JUMPER OPTIONS

There are several operational modes in the LAN83C175 which are selected by "jumpers" at power-up reset. Actual jumpers do not need to be installed on the board. The options can be set by external pull-up or pull-down resistors at manufacturing time. Pins MD[2:0] are used to make the jumper selections. The pins are latched shortly after nRST goes inactive. The jumpers are not sampled after soft reset. A pull-down resistor sets the jumper value to 0, and a pull-up sets it to 1. The jumpers are defined as follows:

MD[2] BYPASS EEPROM RECALL - When set to 1, the EEPROM recall is not performed after power-up reset. Used for test purposes only.

MD[1:0] These should be pulled down to 0.

SOFT RESET

The software driver may reset the LAN83C175 to its initial state by setting the soft reset bit in the general control register. All state machines and pointers to the internal RAMS will be reset. Soft reset can only take place when the LAN83C175 is powered up. Soft reset does NOT affect the configuration of the LAN83C175. The configuration registers (excluding EEPROM control) will only be reset and the EEPROM will only be recalled after hard reset.

Each time the software driver is loaded, it must set soft reset before enabling the LAN83C175 to act as a bus master. The driver may be loaded after a warm boot, and the LAN83C175 DMA controllers could be left in an unknown state. If the LAN83C175 is enabled as a bus master before a soft reset is issued, the DMA controllers could corrupt host memory with a bus master operation that was started before the warm boot. When the soft reset bit is set, the LAN83C175 takes 15 CardBus clocks to re-initialize itself. The device must not be accessed within that time period.

CONFIGURATION

The LAN83C175 is automatically configured by the host system power-up software before the machine is booted to an operating system. Configuration is performed through the CardBus configuration space. The LAN83C175 indicates its requirements and the power-up software allocates the appropriate resources. Note that there is a separate configuration space for the ethernet function and the modem function.

The LAN83C175 has the following requirements for both the ethernet and modem functions:

A) 256 byte I/O space (may be mapped anywhere in 32-bit I/O address space)

B) 4 Kbyte memory space (may be mapped anywhere in 32-bit host memory space - may be disabled on any host with I/O space).

C) 64 Kbyte expansion ROM space (may be mapped anywhere in 32-bit host memory space - will be disabled after boot sequence).

D) Interrupt hardwired to CardBus nINTA line.

Because resources are relocatable, device drivers must read the configuration registers after boot time to determine where the device is mapped.

Mapping of ROM and Control Functions

The LAN83C175 control registers are mapped into both host I/O and memory space (to accommodate host systems with no I/O space). In machines with I/O space, mapping into memory address space may optionally be disabled by a bit in EEPROM. Any change in the memory map enable bit will not take effect until the system is reset (hard reset). The I/O base address for the control registers will be stored in the I/O Base Address Register (10h in the configuration space). The memory base address for the control registers will be stored in the Memory Base Address Register (14h in the configuration space). The I/O space is 256 bytes long and is always naturally aligned. When mapped into memory, the control registers consume 4 Kbytes, even though only the first 256 bytes are used. They are always aligned to a 4 Kbyte boundary. Access to the control registers is enabled by the memory space and I/O space enable bits in the CardBus Command Register (04h in the configuration space). Both memory space and I/O space will be disabled after reset. All control registers are dword accessible only.

The expansion ROM is accessible when the "address decode enable" bit in the ROM base address register (30h in the configuration space) is set and the memory space enable bit is set. The ROM code is not executable in place. It must be copied into system RAM and executed from RAM (as per CardBus specification). LAN83C175 control functions will not be accessible through memory address space while the ROM address decode enable bit is set. Note that this ROM also contains the CIS information for both the ethernet and modem function.

When the expansion ROM is read, the LAN83C175 will always return all four bytes in the dword being accessed, regardless of which byte enables are active.

The LAN83C175 will write to the flash ROM on a byte basis, as decoded by the byte enables.

ROM DECODE ENABLE	MEMORY MAP ENABLE	MEM. SPACE ENABLE	I/O SPACE ENABLE	EXPANSION ROM	CONTROL REGISTERS
1	X	1	1	Enabled	I/O Space
1	X	1	0	Enabled	Disabled
1	X	0	1	Disabled	I/O Space
1	X	0	0	Disabled	Disabled
0	1	1	1	Disabled	I/O & Memory
0	1	1	0	Disabled	Mem. Space
0	1	0	1	Disabled	I/O Space
0	1	0	0	Disabled	Disabled
0	0	X	1	Disabled	I/O Space
0	0	X	0	Disabled	Disabled

After reset, the ROM will be disabled and the ROM base address will be unknown. The system POST code will map the ROM into host memory space, copy its contents into system RAM and read the CIS structure or execute the ROM initialization code The ROM must be found since it contains the mandatory CIS structure for CardBus functions. The ROM initialization code is allowed to perform dynamic re-sizing of the runtime code in order to use as little of the host memory space as possible.

Register Map/Control Register Decode

The following table shows the address mapping of the LAN83C175 control registers. All registers are dword accessible only.

Table 2 - Ethernet Function Control Register Map

00	COMMAND	40	LAN0[1]	80	PRFDAR[1]	C0	PTFDAR[1]
04	INTSTAT	44	LAN1[1]	84	PRCDAR[1]	C4	PTCDAR[1]
08	INTMASK	48	LAN2[1]	88	PRHDAR[4]	C8	PTHDAR[4]
0C	GENCTL	4C	ID/CHK[1]	8C	PRFLAR[4]	CC	PTFLAR[4]
10	NVCTL	50	MC0[1]	90	PRDLGTH[4]	D0	PTDLGTH[4]
14	EECTL	54	MC1[1]	94	PRFCNT[4]	D4	PTFCNT[4]
18	PBLCNT	58	MC2[1]	98	PRLCAR[4]	D8	PTLCAR[4]
1C	Reserved[4]	5C	MC3[1]	9C	PRLPAR[4]	DC	ETXTHR[1]
20	CRCCNT	60	RXCON[1]	A0	PREFAR[4]	E0	PTETXC[4]
24	ALICNT	64	RXSTAT[4]	A4	PRSTAT[3]	E4	PTSTAT[4]
28	MPCNT	68	RXCNT[4]	A8	PRBUF[4]	E8	PTBUF[4]
2C	RXFIFO[4]	6C	RXTEST[4]	AC	RDNCAR[4]	EC	PTFDAR2[4]
30	MMCTL	70	TXCON[1]	B0	PRCPTHR[1]	F0	FEVTR
34	MMDATA	74	TXSTAT[2]	B4		F4	FEVTRMSKR
38	MIICFG[1]	78	TDPAR[4]	B8		F8	FPRSTSTR
3C	IPG[1]	7C	TXTEST[4]	BC	PREEMPR[1]	FC	FFRCEVTR

Notes:

[1]Used during initialization only (illegal to access when not idle).
[2]Legal to access during transmit underrun only.
[3]Legal to access only when frame is discarded after header copy and INTSTAT.RSV is 1.
[4]Legal to access only in test mode.

REGISTER DESCRIPTIONS/CONTROL REGISTERS

00 - COMMAND
Reset Value: 0000000

31 through 8 - Reserved: These bits will return unknown values and should never be written to 1.

7 - TXUGO: This bit is set to restart transmission after a transmit underrun error. Setting this bit automatically clears the transmit underrun interrupt. Writing a zero to this bit has no effect. This bit always returns 0 when read.

6 - STOP_RDMA: This bit is used to halt the receive DMA. Writing a 1 to this bit clears RXQUEUED. Writing a 0 to this bit has no effect. This bit always returns 0 when read.

5 - STOP_TDMA: This bit is used to halt the transmit DMA. Writing a 1 to this bit clears TXQUEUED. Writing a 0 to this bit has no effect. This bit always returns 0 when read.

4 - NEXTFRAME: This bit is set by the host to indicate that it does not need any more copies of the current receive frame. The bit will be cleared by the LAN83C175 the next time it reads a descriptor. Writing a 0 to this bit has no effect (in register test mode writing 0 clears the bit).

3 - RXQUEUED: This bit is set to queue a receive descriptor. It will be cleared by the LAN83C175 when it reads a descriptor that is still owned by the host. Setting this bit automatically clears the receive queue empty interrupt. Writing a 0 to this bit has no effect (in register test mode writing 0 clears the bit). The host may clear this bit by writing a 1 to RDMA_STOP.

2 - TXQUEUED: This bit is set to queue a transmit descriptor. It will be cleared by the LAN83C175 when it reads a descriptor that is still owned by the host. Setting this bit automatically clears the transmit queue empty interrupt. Writing a 0 to this bit has no effect (in register test mode writing 0 clears the bit). The host may clear this bit by writing a 1 to TDMA_STOP.

1 - START_RX: Writing a 1 to this bit will bring the LAN83C175 receiver online. When this bit is cleared the receiver will stay online until the stop bit is set.

0 - STOP_RX: Writing a 1 to this bit will take the LAN83C175 receiver off-line. When this bit is cleared the receiver will stay off-line until the start bit is set.

04 - INTERRUPT STATUS
Reset Value: 01001100000000000000000

Bits in this register are set internally by the LAN83C175. Bits are cleared by writing a 1 to their respective locations. Writing 0 to a bit has no effect (in register test mode writing 0 sets the bit).

31 through 28 - Unused

27 - PTA: CardBus Target abort - set when EPIC/C cannot complete a bus master transaction because target aborts the transaction.

26 - PMA: CardBus Master abort - set when EPIC/C cannot complete a bus master transaction because no target is found.

25 - APE: CardBus address parity error - set when an address parity error occurs on the CardBus bus while EPIC/C is not bus master. This interrupt will only be set when the Parity Error Response bit in the CardBus configuration space is set.

24 - DPE: CardBus data parity error - set when a data parity error occurs on the CardBus bus while EPIC/C is bus master. This interrupt will only be set when the Parity Error Response bit in the CardBus configuration space is set.

23 - RSV: Receive status valid (read only - does not generate an interrupt) - indicates that the PRSTAT register contains valid status for the frame currently being processed.

22 - RCTS: Receive copy threshold status (read only - does not generate an interrupt) - indicates that the copy in progress that has passed the early receive copy threshold. This bit returns zero when there is no receive copy currently in progress or when the current copy has not passed the threshold.

21 - RBE: Receive buffers empty (read only - does not generate an interrupt) - indicates that there is no data ready for copy in the receive buffer.

20 - TCIP: Transmit copy in progress (read only - does not generate an interrupt) - indicates that a transmit DMA copy is partially completed. The bit is set each time the receive DMA begins to copy a frame. The bit is reset after the copy completes and the status is posted.

19 - RCIP: Receive copy in progress (read only - does not generate an interrupt) - indicates that receive DMA copy is partially completed. The bit is set each time the receive DMA begins to copy a frame. The bit is reset after the copy completes and the status is posted.

18 - TXIDLE: Transmit idle (read only - does not generate an interrupt) - indicates that the NIC transmitter and CardBus transmit DMA have returned their reset states.

17 - RXIDLE: Receive idle (read only - does not generate an interrupt) - indicates that the NIC receiver and CardBus receive DMA have returned their reset states.

16 - INT_ACTV: Interrupt active (read only - does not generate an interrupt) - indicates that an interrupt which is not masked is currently set. This allows the host to read the interrupt status through a register, even when interrupts are disabled.

15 - GP2_INT: This interrupt becomes active when the pin GPIO2) goes low. It is typically used by the phy to indicate an event.

14-13 - Unused.

12 - FATAL_INT: This signal becomes true if any fatal error occurs. These are DPE, APE, PMA, and PTE. Note that these are also reflected in the interrupt status word (27:24).

11 - RCT: Receive copy threshold crossed - set when the receive copy in progress crosses the CardBus receive copy threshold.

10 - PREI: This preemptive interrupt event indicates that a packet is being received, with the probability that by the time the host responds to the interrupt, the packet will have been completely received, reducing latency.

9 - CNT: Counter overflow - indicates that one of the error counters is nearing its maximum count.

8 - Transmit underrun - set when an early transmit underrun occurs. This interrupt is cleared automatically when the TXUGO bit in the command register is set. Clearing this interrupt

manually (by writing to this register) does not effect the TXUGO bit.

7 - Transmit queue empty - set when NIC reads a transmit descriptor that is still owned by the host. This interrupt is cleared automatically when the TXQUEUED bit in the command register is set. Clearing this interrupt manually (by writing to this register) does not effect the TXQUEUED bit.

6 - TCC: Transmit chain complete - set when the complete transmit chain has been processed.

5 - TXC: Transmit complete - set when a packet has been successfully transmitted or aborted and the IAF bit is set for that frame.

4 - RXE: Receive error - set when a CRC error occurs and Monitor mode is off.

3 - OVW: Receive buffer overflow warning - set when a frame is received and local receive buffer space is full.

2 - RQE: Receive queue empty - set when NIC reads a receive descriptor that is still owned by the host. This interrupt is cleared automatically when the RXQUEUED bit in the command register is set. Clearing this interrupt manually (by writing to this register) does not effect the RXQUEUED bit.

1 - HCC: Header copy complete - set when receive frame header has been copied into host memory.

0 - RCC: Receive copy complete - set when receive frame has been copied into host memory.

08 - INTERRUPT MASK
Reset Value: 000000000000000

This register is used to enable certain interrupt sources selectively. Bits that are 1 allow the corresponding interrupt to cause an interrupt request. Bits that are 0 block their interrupt sources.

31 through 15: Unused.

14 through 0: Interrupt enables.

0C - GENERAL CONTROL
Reset Value: 000000100000000

31 through 15: Unused.

14 - RESET PHY: This bit is or'ed with the CardBus nRST input to generate the nPHYRST output for the physical layer device.

13 and 12 - SOFT[1:0]: These two read/write bits are provided for use by the software driver. They do not affect hardware operation.

11 through 10 - MEMORY READ CONTROL: These bits control which CardBus command the transmit DMA will use when bursting data over the CardBus bus. When bit 11 is set, the transmit DMA will use the CardBus "memory read line" command. When bit 10 is set, the transmit DMA will use the CardBus "memory read multiple" command. When neither bit is set the transmit DMA will use the CardBus "memory read" command. Use of "memory read multiple" or "memory read line" may enhance performance on some machines.

9 and 8 - RECEIVE FIFO THRESHOLD: Controls the level at which the CardBus burst state machine begins to empty the receive FIFO. Default is 1/2 full. D9 = THR_SEL[1], D8 = THR_SEL[0].

[1]	[0]	THRESHOLD LEVEL
0	0	32 Bytes (1/4 Full)
0	1	64 Bytes (1/2 Full)
1	0	96 Bytes (3/4 Full)
1	1	128 Bytes (Full)

7 - TRANSMIT DMA PRIORITY: When this bit is set, the transmit DMA may preempt the receive DMA for access to the CardBus bus. Preemption occurs when the CardBus latency timer expires.

6 - RECEIVE DMA PRIORITY: When this bit is set, the receive DMA may preempt the transmit DMA for access to the CardBus bus. Preemption occurs when the CardBus latency timer expires.

5 - BIG ENDIAN: This bit controls the order of the bytes on the data bus when the LAN83C175 is used in a big endian machine. When this bit is set to 1, the LAN83C175 performs byte swapping on the descriptor and fragment list entries to compensate for byte swapping by the CardBus bridge.

4 - ONECOPY: When this bit is set to 1, the LAN83C175 will give the host only one copy of each receive frame. This bit causes NEXTFRAME to be set automatically at the end of each frame. This bit should not be modified while the receive DMA is not idle.

3 - POWER DOWN: Setting this bit puts the LAN83C175 into a low power sleep mode. When this bit is cleared (I/O writes to this register are still enabled in sleep mode) the LAN83C175 will resume in the state it was in prior to power down. This bit may only be set when the chip is idle.

2 - SOFTWARE INTERRUPT: When this bit is set to a 1, the LAN83C175 interrupt pin nINTA will become active (driven low).

1 - INTERRUPT ENABLE: Setting this bit enables the LAN83C175 interrupt line. When one of the interrupt status bits and its corresponding mask bit are both set, the LAN83C175 will drive the nINTA pin low. Clearing this bit masks all interrupts (except software interrupt).

0 - SOFT RESET: Setting this bit to a 1 resets the LAN83C175 to its initialization state. All state machines and pointers to the internal rams will be reset. The configuration registers (except EEPROM control) and non-volatile control register will NOT be reset and EEPROM recall will not take place after a soft reset. This register will return to its reset value after the operation is complete, regardless of the data written.

10 - NON-VOLATILE CONTROL
Power Up Reset Value: 000000

31 through 15: Unused

14 - FETPWRPHY: This bit controls the FETPWRPHY output signal that is used to control a powerdown signal to the physical layer. Upon reset, it will be zero, and will then reflect the value loaded into it during EEPROM recall.

13 - MULTI_FUNC: This bit is read during configuration on bit 23 when the hdr type and latency timer are read.

12 - STSCHG_EN: This bit must be high to allow the function event register for the modem to be driven out onto the cardbus.

11 - PHYPWRDWN_N: This bit controls the nPHYPWRDWN output signal that is used to control a powerdown signal to the physical layer. Upon reset, it will be zero, and will then reflect the value loaded into it during eerecall.

10 - EN_FBTB: This enables fast back to back operations to the LAN83C175. Note that fast back to back operations will not work when writing data to the flash ram.

9 - MODEM_EN: This bit determines whether modem functionality is enabled. If this bit is low, the modem cannot be seen from the host. The modem configuration registers are not visible, nor can the modem be read from or written to.

8 - ROMWR_EN: This bit enables or disables the ability to write to the external flash rom. It must be high to enable writing.

7 - ROMSPEED: This bit must be set to 0 to accommodate ROM with a 200 ns access speed. A 1 accommodates at 120 ns access speed.

6 - STATUSREG_EN: This bit determines whether the cardbus function registers are used for logging interrupts. This bit can be used to determine whether an interrupt from the modem is logged and must be explicitly cleared by a driver through the cardbus function registers, if statusreg_en is active, or whether the interrupt line to the host reflects the interrupt line to the LAN83C175 from the modem, if statusreg_en is inactive. It must be set to 1 to be able to write to and read from the function registers for both the ethernet and modem functions.

5 - GENERAL PURPOSE I/O[2]: This bit controls the value of the GPIO[2] pin when used as an output. When read, this bit always returns the external value on GPIO[2].

4 - GENERAL PURPOSE I/O[1]: This bit controls the value of the GPIO[1] pin when used as an output. When read, this bit always returns the external value on GPIO[1].

3 - GENERAL PURPOSE OUTPUT ENABLE[2]: When set, GPIO[2] is driven by the EPIC/C. When cleared, GPIO[2] is tri-stated and may be used as an input.

2 - GENERAL PURPOSE OUTPUT ENABLE[1]: When set, GPIO[1] is driven by the EPIC/C. When cleared, GPIO[1] is tri-stated and may be used as an input.

1 - CLOCK RUN SUPPORTED: This bit enables the EPIC/C to perform the CardBus clock run function. When set, the clock run function is enabled. When cleared, the nCLKRUN output is tri-stated. This bit is only writable in register test mode. In normal operation, it should only be changed by re-programming the EEPROM and resetting the system (hard reset).

0 - ENABLE MEMORY MAP: This bit controls whether or not the EPIC/C control registers are visible in memory space. When set, the EPIC/C control registers will be mapped into I/O space and memory space (for host systems that do not have I/O space). When cleared, the control registers will only be mapped into I/O space. This bit controls how the host system maps the control registers at power up by changing the appearance of the memory base address register in CardBus configuration space. This bit is only writable in register test mode. In normal operation, it should only be changed by re-programming the EEPROM and resetting the system (hard reset). Default is disabled when EEPROM recall is bypassed.

14 - EEPROM CONTROL
Reset Value: xxx0000

6 - EEPROM SIZE: This read only bit indicates the size of the external serial EEPROM (1 = 16x16 or 64x16, 0 = 128x16 or 256x16). The size is selected by an external "jumper" at power-on reset.

5 - EERDY: This read only bit indicates when the EEPROM input data is valid and/or when any of the EEPROM outputs may be changed (1 = ready, 0 = not ready).

4 - EEDO: DATA output from EEPROM - Used to read back data from serial EEPROM. This bit is wired directly to the MD[31] input.

3 - EEDI: Data input to EEPROM - Used to supply address and data to serial EEPROM. This bit is muxed onto MA[13] when EEPROM ENABLE is set.

2 - EESK: EEPROM clock - Used to supply the clock to the serial EEPROM. The value of this bit is muxed onto MA[14] when EEPROM ENABLE is set.

1 - EECS: EEPROM chip select - This bit is wired directly to the EECS output pin on the EPIC/C.

0 - EEPROM ENABLE: When this bit is set, EESK and EEDI are multiplexed onto the MA pins.

18 - PBLCNT
Reset Value: 000000

5 through 0 - PBLCNT: The value in this register reflects the maximum number of dwords allowed to be transferred in a read or write burst. A value of zero (the reset value) means that the CardBus burst length is only limited by the amount of space available in the transmit fifo or the amount of data in the receive fifo.

20 - CRC ERROR COUNTER
Reset Value: 00000000

31 through 8: Unused.

7 through 0: Reports the number of CRC errors since the last time this register was read. The count will stick at 255. When the count reaches 192, the counter overflow interrupt will be set. The count is cleared when read.

24 - FRAME ALIGNMENT ERROR COUNTER
Reset Value: 00000000

31 through 8: Unused.

7 through 0: Reports the number of frame alignment errors since the last time this register was read. The count will stick at 255. When the count reaches 192, the counter overflow interrupt will be set. The count is cleared when read.

28 - MISSED PACKET COUNTER
Reset Value: 00000000

31 through 8: Unused.

7 through 0: Reports the number of missed packet errors since the last time this register was read. The count will stick at 255. When the count reaches 192, the counter overflow interrupt will be set. The count is cleared when read.

2C - RECEIVE FIFO
Reset Value: xxxxxxxxxxxxxxxx

31 through 16 - Unused.

15 through 0 - The receive fifo can be read and written through this I/O port (for test purposes only). The upper and lower 16 bits of each word in the receive fifo are muxed into this space.

30 - MII MANAGEMENT INTERFACE CONTROL
Reset Value: 00000000000000

This register provides management interface control for functions such as read, write, and synchronize. It also contains the PHY address field and the PHY register address field to be sent in the command word to the PHY. A management operation is executed by a writing the corresponding operation bit to this register. When the operation is complete, the bit will be automatically cleared.

31 through 14: Unused.

13 through 9 - PHY ADDRESS FIELD: This 5 bit field is sent in the management frame to the PHY. D13 is the MSB.

8 through 4 - PHY REGISTER ADDRESS FIELD: This 5 bit field is sent in the management frame to the PHY. D8 is the MSB.

3 - RESPONDER: This bit returns a 1 during a read operation if a PHY responded with a zero level on the MDIO line during the first SMCLK cycle following the idle bit time when both the management entity and the PHY do not drive the MDIO. This bit can be used to determine if a PHY responded to the read operation. This bit is self clearing following a register read. This bit is read only.

2 - Unused.

1 - WRITE: This bit is set to 1 to initiate a write operation on the management interface. When set, a properly formatted management frame is sent to the PHY. The data field of the management frame is filled with the contents of the Management Interface Data register. The bit is self clearing after completion of the operation.

0 - READ: This bit is set to 1 to initiate a read operation on the management interface. When set, a properly formatted management frame will be sent on the MDIO line with corresponding cycles on MDC. Data returned by the PHY is shifted into the Management Interface Data register. The bit is self clearing after completion of the operation.

34 - MII MANAGEMENT INTERFACE DATA
Reset Value: 0000000000000000

This 16 bit register is used by the MII management unit for all data transfers between the management and PHY(s).

31 through 16: Unused.

15 through 0 - FRAME DATA: A 16 bit value written to this register will be used in the data field of a management interface write operation. For read operations, this 16-bit value will store the data transferred from the PHY.

38 - MII CONFIGURATION
Reset Value: 0001XX00

This register provides MII configuration functions.

31 through 8: Unused.

7 - ALTERNATE DIRECTION: When set, the alternate data value is input from the MII management data pin if serial management interface is disabled.

6 - ALTERNATE DATA: Reading this bit returns the value at the MII management data pin. A value written to this bit will be driven onto the MII management data pin when the serial management interface is disabled and the alternate direction bit is set to ouput.

5 - ALTERNATE CLOCK SOURCE: This register bit is muxed to the MII management clock pin when the serial management interface is disabled. When set, the management interface clock is set.

4 - ENABLE SERIAL MANAGEMENT INTERFACE: This bit selects between the serial management interface and a general pupose interface muxed with the management interface clock and data pins. When set, the serial management interface is selected. Default is set.

3 - PHY PRESENT: This bit is read only. It is set to one when the MDIO line is at a logic one value indicating the precence of a PHY device.

2 - 694 LINK STATUS: This bit is read only and returns the value of the 694LNK pin on the LAN83C175.

1 - ENABLE 694: When set, the EN694 pin of the LAN83C175 is driven to a logic one. When clear, the EN694 pin is driven low.

0 - SERIAL MODE ENABLE: When set, the MII interface functions serially as a 7-wire interface. This mode should be enabled when the LAN83C175 is connected to a 10 Mbps serial PHY device. When clear, the MII interface operates as defined by the IEEE 802.3u Reconciliation Sublayer and Media Independent Interface Draft Standard.

3C - INTER-PACKET GAP
Reset Value: 011110001100000

This register is used to program the inter-packet gap protocol timer. It contains two values. The first 8 bit value is used to set the total inter-packet gap time used by the transmit state machine for deferral. The second 7 bit value sets the first inter-frame spacing value used in the deference process.
31 through 15 - Unused.

14 through 8 - INTERFRAME SPACING PART ONE: This 7 bit value sets the first part of the inter-frame spacing delay time. Default is 60 bit times.

7 through 0 - INTERPACKET GAP TIME: This 8 bit value sets the inter-packet gap delay time. Default is 96 bit times.

40 through 48 - LAN ADDRESS REGISTERS
Power Up Reset Value: Unknown

These registers hold the 48 bit LAN address for the adapter. They are recalled from EEPROM after reset.

31 through 16: Unused.

15 through 0 - LAN ADDRESS: The Destination address described as:

[N1][N0][N3][N2][N5][N4][N7][N6][N9][N8][N11][N10]

Where each N is one nibble, will be mapped to
the LAN address registers as follows:

LAN0 [15-12] = N3
LAN0 [11-8] = N2
LAN0 [7-4] = N1
LAN0 [3-0] = N0
LAN1 [15-12] = N7
LAN1 [11-8] = N6
LAN1 [7-4] = N5
LAN1 [3-0] = N4
LAN2 [15-12] = N11
LAN2 [11-8] = N10
LAN2 [7-4] = N9
LAN2 [3-0] = N8

4C - BOARD ID/CHECKSUM
Power Up Reset Value: XXXXXXXXXXXXXXXX

These registers hold the board ID and the checksum for the adapter. They are recalled from EEPROM after reset.

31 through 16: Unused.

15 through 8 - BOARD ID: Used as the 8 bit LAN adapter ID field.

7 through 0 - CHECKSUM: Used as the checksum for the LAN address and board ID. The sum of the 6 LAN address bytes, the board ID and the checksum should be FF.

50 through 5C - MULTICAST ADDRESS HASH TABLE
Reset Value: Unknown

These 4 registers hold the node's multicast filter table.

31 through 16: Unused.

15 through 0 - HASH TABLE: The bits in the hash table are decoded in the following order:

MC0 = 15-0
MC1 = 31-16
MC2 = 47-32
MC3 = 63-48

60 - RECEIVE CONTROL
Reset Value: XX00000000

31 through 10: Unused.

9 and 8 - EXTERNAL BUFFER SIZE SELECT: When D9:8 = <00>, external buffer access is disabled and all packets are buffered internally. D9:8 = <01> -> 16K. D9:8 = <10> -> 32K. D9:8 = <11> -> 128K. These bits are jumper set on reset.

7 - EARLY RECEIVE ENABLE: When set, the receiver operates in early receive mode. When early receive is enabled, save errored packets must be set. The runt size (slot time) must be programmed to a value greater than or equal to 224 bit times.

6 - MONITOR MODE: Disables the buffering of receive packets. Receive status and counters continue to function. Receive error interrupt will not be posted in monitor mode.

5 - PROMISCUOUS MODE: When set, address filtering is bypassed and all frames with individual addresses are received.

4 - RECEIVE INVERSE INDIVIDUAL ADDRESS FRAMES: When set, individually addressed frames that do not match the programmed LAN address register are received.

3 - RECEIVE MULTICAST FRAMES: When set, multicast address filtering is enabled. Frames that have multicast addressing and pass the multicast hash filter will be received.

2 - RECEIVE BROADCAST FRAMES: When set, broadcast frames are received.

1 - RECEIVE RUNT FRAMES: When set, frames less than one slot time in length will be received.

0 - SAVE ERRORED PACKETS: When set, frames with CRC and alignment errors are saved in the receive buffers.

64 - RECEIVE STATUS
Reset Value: 0000000

The receive status register reports the status of the most-recently received packet. It reports receive errors and address recognition type. All bits are cleared at the start of reception except for receiver disabled. The contents of the lower order bits in this register ([6:0]) make up the lower order bits of the receive packet stamp in the receive buffer.

31 through 7 - Unused.

6 - RECEIVER DISABLED: This bit is set when the receiver is in monitor mode.

5 - BROADCAST ADDRESS RECOGNIZED: This bit is set when a broadcast address has been recognized.

4 - MULTICAST ADDRESS RECOGNIZED: This bit is set when a multicast address which passes the hash filter has been recognized.

3 - MISSED PACKET: This bit is set when a packet with a recognized address and without errors (or with masked errors) is not buffered because the device is in monitor mode. This bit is also set when the packet overflows the receive buffer space and cannot be received. Always returns 0.

2 - CRC ERROR: This bit is set when a frame's computed CRC does not match the CRC appended to the frame. If the frame is a runt, this bit will be clear. In MII mode, this bit will also be set if receive error was asserted on the MII interface during reception of the frame.

1 - FRAME ALIGNMENT ERROR: This bit is set if a CRC error has occurred and the frame is not byte aligned.

0 - PACKET RECEIVED INTACT: This bit is set when a packet is received into the buffer space without error.

68 - RECEIVE BYTE COUNT
Reset Value: 0000000000000000

This 16 bit register contains the receive byte count for the most recently received frame. It is cleared by the receive unit at the start of reception of each frame.

5-0 - RECEIVE BYTE COUNT: D15 is the MSB and D0 is the LSB.

6C - RECEIVE TEST
Reset Value: 00000xx00000000

31 through 15 - Unused.
14 through 10 - RECEIVE FIFO LEVEL: This 5 bit value returns the receive fifo level.

9 and 8 - Unused.

7 - RUNT STATUS: Returns 0 when the current reception is not a runt or receive runt frames is set. Returns zero when the current receive byte count is less than the runt size. This bit is read only.

6 through 0 - Reserved: Do not write '1' to these bits.

These bits are not readable and return unknown data when read.

70 - TRANSMIT CONTROL
Reset Value: 01111000

31 through 8: Unused.

7 through 3 - SLOT TIME: Selects the number of bit times to use for the slot time. The value programmed plus one is multiplied by 32 to generate the slot time. This value is used for both the backoff timer and for runt checking. Default is 0Fh which gives a slot time of 512 bit times.

2 and 1 - LOOPBACK MODE SELECT:

D2	D1	Mode
0	0	Normal operation.
0	1	Internal loopback. Packets transmitted are internally looped back to the receiver without transmission to the MII.
1	0	External loopback. Turns on the external loopback mode to signal the PHY to loop back transmit packets.
1	1	Full Duplex mode. De-couples transmit and receive blocks to allow full duplex operation without collisions.

0 - EARLY TRANSMIT ENABLE: When set, the transmitter operates in early transmit mode.

74 - TRANSMIT STATUS
Reset Value: 0000000000000

The transmit status register reports events that occur on the media at the end of packet transmission. All bits are cleared prior to transmission of a packet and are set as needed. This register may be read when a transmit underrun occurs (before the TXUGO bit is set), otherwise it should only be accessed for test purposes.

31 through 13: Unused.

12 through 8 - COLLISION COUNT: These bits contain the number of collisions detected while attempting to transmit the current packet. Bit 12 also indicates transmit abort for excessive collisions.

7 - DEFERRING: This bit is set when the interframe gap state machine is deferring. If the PHY has asserted the collision line as a result of jabber, this bit will stay set indicating the jabber condition. Always returns 0.

6 - OUT OF WINDOW COLLISION: This bit is set if a collision is detected more than one slot time after the start of transmission. Transmission is aborted under these conditions.

5 - COLLISION DETECT HEARTBEAT: This bit is set to a '1' during transmission of each packet. It is set to '0' if a collision is detected within 36 bit times of the end of each packet transmission. If no collision is detected within this window, it remains '1'. This bit always returns zero in full duplex mode.

4 - UNDERRUN: This bit is set when the transmit DMA is unable to supply the transmitter enough data to maintain frame transmission.

3 - CARRIER SENSE LOST: This bit is set if the carrier is lost during packet transmission. Carrier sense is monitored from its rising edge at the start of the outgoing frames echo. Transmission is not aborted upon loss of carrier. This bit will always return zero in full duplex mode.

2 - TRANSMITTED WITH COLLISIONS: When set, this bit indicates the frame collided at least once with another frame on the network. It is not set for either out-of-window collisions or excessive collision aborts.

1 - NON-DEFERRED TRANSMISSION: This bit is set if the frame was transmitted successfully without deferring. A deferred transmission can only occur the first time an attempt is made to send a packet. Collisions are not deferred transmissions.

0 - PACKET TRANSMITTED: This bit is set to indicate transmission of a packet without excessive collisions or abort.

78 - TRANSMIT PACKET ADDRESS
Reset Value: 000000000

This register contains the transmit MTU's pointer to the starting address of the current frame in the local transmit ram. The register contains the dword address and is write only. Reads to this register return unknown data.
31 through 9 - Unused.

8 through 0 - Address.

7C - TRANSMIT TEST

31 through 12 - Unused.

11 through 8 - Reserved: Do not write '1' to these bits.

7 - Force collision.

6 through 0 - Reserved: Do not write '1' to these bits.

80 - CardBus RECEIVE FIRST DESCRIPTOR ADDRESS
Reset Value:
xxxxxxxxxxxxxxxxxxxxxxxxxxxxxx00

This register contains the byte address of the first descriptor for the current receive packet. It is the location in host memory where the receive status will be posted when receive copy is complete. The two lsb's are fixed at zero so the address will always be dword aligned. This register is automatically written with the same data as the PRCDAR register whenever a write to that register occurs.

31 through 2 - CardBus Address.

1 through 0 - Not writable - always return zeroes.

84 - CardBus RECEIVE CURRENT DESCRIPTOR ADDRESS
Reset Value:
XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX 00

This register contains the byte address (in host memory) of the next descriptor that the receive DMA will read. The two lsb's are fixed at zero so the address will always be dword aligned. This register must be initialized once after reset.

31 through 2 - CardBus ADDRESS

1 and 0 - Not writable - always return zeroes.

88 - CardBus RECEIVE HOST DATA ADDRESS
Reset Value: xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx

This register contains the address where receive packet data is to be written in host memory. The upper 30 bits are driven onto the CardBus bus as the dword address, and are incremented each time a dword is written to host memory. The two lsb's always contain the starting byte address of the data buffer, and are used by the receive DMA to control byte alignment.

31 through 2 - CardBus Address.

1 and 0 - Starting Byte Address.

8C - CardBus RECEIVE FRAGMENT LIST ADDRESS
Reset Value:
xxxxxxxxxxxxxxxxxxxxxxxxxxxxxx00

This register contains the current fragment list address. It is the location in host memory of the next fragment list entry that the receive DMA will read. The two lsb's are fixed at zero so the address will always be dword aligned.

31 through 2 - Address.

1 and 0 - Not writable - always return zeroes.

90 - CardBus RECEIVE DMA DATA LENGTH / CONTROL BITS
Reset Value: xxxxxxxxxxxxxxxxxxx

This register contains the number of bytes remaining in the current data buffer being filled by the receive DMA. This register is a down counter and is decremented by the number of bytes written each time data is written to the buffer. The register is also used as a temporary holding space for the offset into a frame at which a fragment list based copy begins. The receive DMA control bits may also be read and written through this I/O port.

31 through 20 Unused.

19 - OWNER: Indicates whether the last descriptor read was owned by the NIC (1) or the host (0). This bit is read only at this location. It may be written through the PRSTAT register.

18 - HEADER: Indicates that this descriptor is for a header copy.

17 - LFFORM: Fragment list format - a 1 indicates that the data length field comes before the pointer in the fragment list. A 0 indicates that the pointer comes before the data length.

16 - FRAGLIST: Indicates that this descriptor points to a fragment list.

15 through 0 - BUFFER LENGTH / OFFSET.

94 - CardBus RECEIVE FRAGMENT COUNT
Reset Value: xxxxxx

This register contains the number of fragments in the current receive DMA fragment list. It is decremented just before each fragment is read.

31 through 6 - Unused.

5 through 0 - Fragment Count.

98 - CardBus RECEIVE RAM CURRENT ADDRESS
Reset Value: xxxxxxxxxxxxxxxxxx

This register contains the byte address of the data currently being accessed in the local receive RAM.

31 through 18 - Unused.

17 through 0 - RX RAM Address.

9C - CardBus RECEIVE RAM PACKET ADDRESS
Reset Value: The PRLPAR register will always point to the starting address of the internal receive memory after reset. The actual address will be determined by the memory size jumper settings:

SIZE	RESET VALUE
128K	100000000000000000
32K	001000000000000000
16K	000100000000000000
0	000000000000000000

This register contains the byte address of the beginning of the frame currently being copied from the local receive RAM. The two lsb's are fixed at zero so the address will always be dword aligned.

31 through 18 - Unused.

17 through 2 - RX RAM Address.

1 through 0 - Not writable - always return zeroes.

A0 - CardBus RECEIVE END OF FRAME ADDRESS
Reset Value: xxxxxxxxxxxxxxxxxx

This register contains the byte address of the DWORD location immediately following the end of the current frame in the local receive RAM. The two lsb's contain the number of valid bytes in the last DWORD of the frame.

31 through 18 - Unused.

17 through 2 - RX RAM ADDRESS.
1 and 0 - ENDING BYTE COUNT.

A4 - CardBus RECEIVE DMA STATUS
Reset Value:
XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX

This register contains the status word that will be posted to the receive descriptor chain after a frame has been copied. It includes the status and length of the copied frame as well as the receive DMA status. This register may be read when the host chooses not to copy a frame in receive lookahead mode. Otherwise, it should only be accessed for test purposes.

31 through 16 - RECEIVE FRAME LENGTH: Number of bytes in the received frame.

15 - OWNER: Descriptor ownership bit - This bit is writable at this location but may only be read at bit 19 in the PRDLGTH register. When read here, this bit always returns 0 to set descriptor ownership to the host.

14 - HEADER COPIED: Set when the receive status is posted after a header copy. This bit is read only.

13 - FRAGMENT LIST ERROR: Set when all buffers in the fragment list have been filled before the entire receive frame is copied. This bit is read only.

12 - NETWORK STATUS VALID: Set when bits 6 through 0 contain the status from the current frame and bits 31-16 contain the frame length. In the case of a header copy or fragment list error, the receive status from the current frame may or may not be posted. In all other cases this bit will be set. This bit is read only.

11 through 7: Reserved.

6 - RECEIVER DISABLED: This bit is set when the receiver is in monitor mode. Always returns 0.

5 - BROADCAST ADDRESS RECOGNIZED: This bit is set when a broadcast address has been recognized.

4 - MULTICAST ADDRESS RECOGNIZED: This bit is set when a multicast address which passes the hash filter has been recognized.

3 - MISSED PACKET: This bit is set when a packet with a recognized address and without errors (or with masked errors) is not buffered because the device is in monitor mode. This bit is also set when the packet overflows the receive buffer space and cannot be received. Always returns 0.

2 - CRC ERROR: This bit is set when a frame's computed CRC does not match the CRC appended to the frame. If the frame is a runt, this bit will be clear. In MII mode, this bit will also be set if receive error was asserted on the MII interface during reception of the frame.

1 - FRAME ALIGNMENT ERROR: This bit is set if a CRC error has occurred and the frame is not byte aligned.

0 - PACKET RECEIVED INTACT: This bit is set when a packet is received into the buffer space without error.

A8 - RECEIVE RAM BUFFER
Reset Value: xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx

31 through 0 - The receive ram can be read and written through this I/O port (for test purposes only). The read or write will occur at the address specified in the PRLCAR register. The PRLCAR register will be incremented by four (one dword) each time this port is read or written.

AC - RECEIVE MTU CURRENT ADDRESS
Reset Value: 1000000000000000

This register contains the receive MTU's pointer to the next location it will write in the local receive ram. The register contains the dword address and is write only. Reads to this register return unknown data.

31 through 16 - Unused.

15 through 0 - Address.

B0 - CardBus RECEIVE COPY THRESHOLD
Reset Value: 11111111XX

This register is programmed with the CardBus receive copy threshold for the LAN83C175. An early receive warning interrupt will be generated for each frame after the number of bytes specified in this register have been copied into the receive data buffers in host memory. Bits 1 and 0 are ignored, so the granularity of the threshold is four bytes. The register should only be written at initialization time.

31 through 11: Unused.

9 through 2: Threshold.

1 and 0: Not writable - return unknown data.

BC - PREEMPTIVE INTERRUPT
Reset Value: 00000000000

This register is used to set the preemptive interrupt value, the number of bytes before the end of a packet that a packet received interrupt will be issued. The register is writable but is not readable.

10 through 0 - PREEMPTIVE INTERRUPT VALUE: This value is the number of bytes before the end of the packet that the interrupt will be issued.

C0 - CardBus TRANSMIT FIRST DESCRIPTOR ADDRESS
Reset Value:
xxxxxxxxxxxxxxxxxxxxxxxxxxxxxx00

This register contains the byte address of the first descriptor for the current transmit packet. It is the location in host memory where the transmit status will be posted when transmission is complete. The two lsb's are fixed at zero so the address will always be dword aligned. This register is automatically written with the same data as the PTCDAR register whenever a write to that register occurs.

31 through 2 - CardBus Address.

1 and 0 - Not writable - always return zeroes.

C4 - CardBus TRANSMIT CURRENT DESCRIPTOR ADDRESS
Reset Value:
XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX00

This register contains the byte address (in host memory) of the next descriptor that the transmit DMA will read. The two low significant bits are fixed at zero so the address will always be dword aligned. This register must be initialized once after reset.

31 through 2: CardBus Address.

1 and 0: Not writable - always return zeroes.

C8 - CardBus TRANSMIT HOST DATA ADDRESS
Reset Value: xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx

This register contains the address where transmit packet data is to be read from host memory. The upper 30 bits are driven onto the CardBus bus as the dword address, and are incremented each time a dword is read from host memory. The two lsb's always contain the starting byte address of the data buffer, and are used by the transmit DMA to control byte alignment.

31 through 2 - CardBus Address.

1 and 0 - Starting Byte Address.

CC - CardBus TRANSMIT FRAGMENT LIST ADDRESS
Reset Value: xxxxxxxxxxxxxxxxxxxxxxxxxxxxxx00

This register contains the current fragment list address. It is the location in host memory of the next fragment list entry that the transmit DMA will read. The two lsb's are fixed at zero so the address will always be dword aligned.

31 through 2 - Address.

1 and 0 - Not writable - always return zeroes.

D0 - CardBus TRANSMIT DMA DATA LENGTH / CONTROL BITS
Reset Value: xxxxxxxxxxxxxxxxxxxx

This register contains the number of bytes remaining in the current data buffer being read by the transmit DMA. This register is a down counter and is decremented by the number of bytes copied each time data is read from the buffer. The transmit DMA control bits may also be read and written through this I/O port.

31 through 22 - Unused.

21 - OWNER: Indicates whether the last descriptor read was owned by the NIC (1) or the host (0). This bit is read only at this location. It may be written through the PTSTAT register.

20 - LASTDESCR: Indicates that this is the last descriptor for the current transmit frame (Not used when FRAGLIST = 1).

19 - NOCRC: Disable automatic CRC generation for this packet when set.

18 - IAF: When set, interrupt after this frame is transmitted.

17 - LFFORM: Fragment list format - a 1 indicates that the data length field comes before the pointer in the fragment list. A 0 indicates that the pointer comes before the data length.

16 - FRAGLIST: Indicates that this descriptor points to a fragment list.

15 through 0 - Buffer Length.

D4 - CardBus TRANSMIT FRAGMENT COUNT
Reset Value: XXXXXX

This register contains the number of fragments in the current transmit DMA fragment list. It is decremented just before each fragment is read.

31 through 6 - Unused.

5 through 0 - Fragment Count.

D8 -- CardBus TRANSMIT RAM CURRENT ADDRESS
Reset Value: 00000000000

This register contains the byte address of the data currently being accessed in the local transmit RAM.

31 through 18 - Unused.

10 through 0 - RX RAM Address.

DC - EARLY TRANSMIT THRESHOLD
Reset Value: XXXXXXXXXXX

This register is programmed with the early transmit threshold for the LAN83C175. Transmission on the network will begin after the number of bytes specified in this register have been loaded into the local transmit RAM. Bits 1 and 0 are ignored, so the granularity of the threshold is four bytes. Data written into this register will automatically be stored in the early transmit count register at the same time. The register should only be written at initialization time.

31 through 11: Unused.

10 through 2: THRESHOLD

1 and 0: Not writable - return unknown data.

Note: There are a set of configuration registers for both the Ethernet and modem function.

E0 - CardBus EARLY TRANSMIT COUNT
Reset Value: xxxxxxxxx

This counter contains the number of bytes to be copied into the local transmit buffer before the early transmit threshold is reached. The counter is loaded with the early transmit threshold value at the beginning of each frame and counts down to zero. This register is automatically written with the same data as the ETXTHR register whenever a write to that register occurs.

31 through 11 - Unused.

10 through 2 - Early Transmit Count.

1 and 0 - Not writable - return unknown data.

E4 - CardBus TRANSMIT DMA STATUS
Reset Value: xxxxxxxxxxxxx

This register contains a copy of the transmit status from the most recently completed transmission. The value is stored in this register until it can be posted to the transmit descriptor chain. Data from the host may not be written into this register. When the register is written by the host, it will be loaded with the current value in the TXSTAT register. Reads work normally.

The transmit length register and transmit length counter are also writable through the upper word at this address.

31 through 16 - TRANSMIT LENGTH: When this register is written, these bits are stored into both the transmit length register and transmit length counter. These bits are not readable, and return unknown data when read.

15 - OWNER: Descriptor ownership bit - This bit is writable at this location but may only be read at bit 21 in the PTDLGTH register. When read here, this bit always returns 0 to set descriptor ownership to the host.

14 through 13 - Unused.

12 through 8 - COLLISION COUNT: These bits contain the number of collisions detected while attempting to transmit the current packet. Bit 12 also indicates transmit abort for excessive collisions.

7 - DEFERRING: This bit is set when the interframe gap state machine is deferring. If the PHY has asserted the collision line as a result of jabber, this bit will stay set indicating the jabber condition. Always returns 0.

6 - OUT OF WINDOW COLLISION: This bit is set if a collision is detected more than one slot time after the start of transmission. Transmission is aborted under these conditions.

5 - COLLISION DETECT HEARTBEAT: This bit is set to a '1' during transmission of each packet. It is set to '0' if a collision is detected within 36 bit times of the end of each packet transmission. If no collision is detected within this window, it remains '1'. This bit always returns zero in full duplex mode.

4 - UNDERRUN: This bit is set when the transmit DMA is unable to supply the transmitter enough data to maintain frame transmission.

3 - CARRIER SENSE LOST: This bit is set if the carrier is lost during packet transmission. Carrier sense is monitored from its rising edge at the start of the outgoing frame's echo. Transmission is not aborted upon loss of carrier. This bit will always return zero in full duplex mode.

2 - TRANSMITTED WITH COLLISIONS: When set, this bit indicates the frame collided at least once with another frame on the network. It is not set for either out-of-window collisions or excessive collision aborts.

1 - NON-DEFERRED TRANSMISSION: This bit is set if the frame was transmitted successfully without deferring. A deferred transmission can only occur the first time an attempt is made to send a packet. Collisions are not deferred transmissions.

0 - PACKET TRANSMITTED: This bit is set to indicate transmission of a packet without excessive collisions or abort.

E8 - TRANSMIT RAM BUFFER
Reset Value: xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx

31 through 0 - The transmit ram can be read and written through this I/O port (for test purposes only). The read or write will occur at the address specified in the PTLCAR register. The PTLCAR register will be incremented by four (one dword) each time this port is read or written.

EC - CardBus TRANSMIT 2 FIRST DESCRIPTOR ADDRESS
Reset Value: xxxxxxxxxxxxxxxxxxxxxxxxxxxxxx00

If two frames are loaded into the local transmit ram, this register contains the byte address of the first descriptor for the second transmit packet. It is the location in host memory where the transmit status will be posted when transmission of that frame is complete. The two lsb's are fixed at zero so the address will always be dword aligned.

31 through 2 - CardBus Address.

1 and 0 - Not writable - always return zeroes.

FO - FEVTR
Reset Value: 0xxxxxxxxxxxxxxx

This bit is used for CardBus purposes.

15 - FEVTR: This function event register bit is a register for holding interrupts in the CardBus environment.

14 through 0 - unused.

F4 - FEVTRMSKR
Reset Value: 0xxxxxxxxxxxxxxx

This bit is the mask for the fevtr bit in CardBus operations.

15 - FEVTRMSKR: This bit is used for holding the mask for the fevtr interrupt. If it is '1', an interrupt derived from fevtr will not go out to the host.

14 through 0 - unused.

F8 - FPRSTSTR
Reset Value: 01

This register is the function present register for CardBus operations.

1 - FPRST_INT: This bit reflects the interrupt status before it has been sent to the function event register.

0 - The CardBus bus functions are always present, and this will always return a '1.' It cannot be written.

FC - FFRCEVTR
Reset Value: 0

This register is the function force event register for CardBus operations.

15 - FFRCEVTR: When this bit is written to, the fevtr register will become '1'.

14 through 0 - unused.

FC - CardBus TRANSMIT DMA TEST
Reset Value: 00

This register is used for test and should never be accessed during normal operation.

31 through 2 - Reserved for test functions.

1 and 0 - TBD.

CardBus Configuration Registers

The following table shows the address mapping for the LAN83C175 configuration registers.

Registers are byte, word or dword accessible (reads always return all four bytes).

Table 3 - CardBus Configuration Registers

	31		**16** **15**	**0**
00	Device ID		Vendor ID	
04	Status		Command	
08	Class Code			Rev ID
0C	Unused	HDR Type	LAT Timer	Unused
10	I/O Base Address			
14	Memory Base Address			
18	Unused			
1C	Unused			
20	Unused			
24	Unused			
28	CIS Pointer			
2C	Subsystem ID		Subsystem Vendor ID	
30	Expansion ROM Base Address			
34	Reserved			
38	Reserved			
3C	Max Lat.	Min Gnt.	Int. Pin	Int. Line
40 . . . FF	Unused			

Note: All unused and reserved registers return zeroes when read. Writes to unused and reserved registers are ignored.

CardBus CONFIGURATION REGISTERS

00 - DEVICE ID/VENDOR ID

31 through 16 - DEVICE ID: This read only field returns the LAN83C175 device ID (0006h). Bit 31 is assigned a value to indicate SMSC System Products Division vs. Components Division (0 = System Products, 1 = Components). The remaining bits are assigned arbitrarily to uniquely identify each System Products CardBus device.

15 through 0 - VENDOR ID: This read only field returns the SMSC Vendor ID (10B8h).

04 - CardBus STATUS / COMMAND
Reset Value: 0000000010000000

Bits in this register are set internally by the LAN83C175. Bits are cleared by writing a 1 to their respective locations. Writing 0 to a bit has no effect (in register test mode writing 0 sets the bit).

31 - DETECTED PARITY ERROR: This bit is set whenever the LAN83C175 detects a parity error, even if parity error handling is disabled.

30 - SIGNALLED SYSTEM ERROR: This bit is et whenever the LAN83C175 asserts system error. The LAN83C175 asserts system error when an address parity error is detected and both the nSERR enable and Parity Error Response bits are set.

29 - RECEIVED MASTER ABORT: This bit is set whenever an LAN83C175 bus master transaction is terminated with master-abort.

28 - RECEIVED TARGET ABORT: This bit is set whenever an LAN83C175 bus master transaction is terminated with target-abort.

27 - SIGNALLED TARGET ABORT: This bit is not implemented because the LAN83C175 never signals target-abort (always returns 0).

26 and 25 - DEVSEL TIMING: These two read only bits always return "00" to indicate that the LAN83C175 always asserts DEVSEL with fast timing (zero wait states).

24 - DATA PARITY DETECTED: This bit is set whenever the following three conditions are met: 1) the LAN83C175 is acting as bus master on the CardBus bus; 2) the LAN83C175 asserts nPERR or observes nPERR asserted; 3) the Parity Error Response bit is set.

23 - FAST BACK-TO-BACK CAPABLE: This read only bit always returns 1 to indicate that the LAN83C175 is capable of accepting fast back-to-back transactions when the transactions are not to the same agent.

22 - UDF SUPPORTED: This read only bit tells the host system whether or not the LAN83C175 supports user definable features. The value of this bit is recalled from EEPROM at power up and stored in the NVCTL register. This bit should be programmed to zero in the EEPROM to indicate that the LAN83C175 does not support user definable features.

21 - 66 MHz CAPABLE: This bit always returns zero to indicate that the LAN83C175 is not 66 MHz capable.

20 through 16: Reserved (always return 0).

COMMAND REGISTER (Lower Word)
Reset Value: 0000000000000000

15 through 10: Reserved (always return 0).

9 - FAST BACK-TO-BACK ENABLE: This bit is not implemented because the LAN83C175 never

performs bus master transactions to two different devices (always returns 0).

8 - nSERR ENABLE: When this bit is set the LAN83C175 may assert nSERR. When this bit is cleared nSERR signalling is disabled.

7 - WAIT CYCLE CONTROL: This bit is not implemented because the LAN83C175 does not do address/data stepping (always returns 0).

6 - PARITY ERROR RESPONSE: When this bit is set the LAN83C175 will respond to parity errors. When cleared, the LAN83C175 will ignore parity errors.

5 through 3 - VGA PALETTE SNOOP, MEMORY WRITE AND INVALIDATE ENABLE, SPECIAL CYCLES: Not implemented (always return 0).

2 - BUS MASTER ENABLE: The LAN83C175 may only act as bus master on the CardBus bus when this bit is set. When this bit is cleared the LAN83C175 will disable its CardBus request signal.

1 - MEMORY SPACE ENABLE: The LAN83C175 may respond to memory space accesses when this bit is set. When the bit is cleared, the LAN83C175 will not respond to memory space accesses.

0 - I/O SPACE ENABLE: The LAN83C175 may respond to I/O space accesses when this bit is set. When the bit is cleared, the LAN83C175 will not respond to I/O space accesses.

08 - CLASS CODE / REVISION ID

31 through 24 - BASE CLASS: This read only field returns the Network Controller Base Class (02h). This returns (07h) when reading from the modem configuration space.

23 through 16 - SUB CLASS: This read only field returns the Ethernet Controller Sub-Class (00h). Also returns (00h) reading from the modem configuration space.

15 through 8 - PROGRAMMING INTERFACE: This read only field returns 00h (no specific register-level programming interface defined). This returns (02h) is read from the modem configuration space.

7 through 0 - REVISION ID: This read only field returns the LAN83C175 silicon revision ID (00h for XA). This returns (00h) in both configuration spaces.

0C - HEADER TYPE / LATENCY TIMER

31 THROUGH 24: Unused (returns 00h).

23 - MULTI-FUNCTION DEVICE: This bit returns 1 to indicate that the LAN83C175 is a multi function CardBus device.

22 through 16 - HEADER TYPE: Specifies the format of bytes 10h - 3Ch in the configuration space (00h).

15 through 8 - LATENCY TIMER: This byte is programmed with the value of the Latency Timer (in CardBus bus clocks) for LAN83C175 bus master operations. The bottom three bits are hardwired to 0, giving the latency timer a granularity of 8 clocks. This register is 00h after reset.

7 through 0: Unused (returns 00h).

10 - I/O BASE ADDRESS
Reset Value:
xxxxxxxxxxxxxxxxxxxxxxxx00000001

31 through 8: BASE ADDRESS

7 through 2: Return zeroes to indicate that 256 bytes of address space are required.

1: Reserved (always returns zero).

0 - I/O SPACE INDICATOR: This read only bit returns a 1 to map the control registers into I/O space.

14 - MEMORY BASE ADDRESS
Reset Value:
xxxxxxxxxxxxxxxxxxxx000000000000

31 through 12 - BASE ADDRESS: When the memory map enable bit in the NVCTL register is set to 1, these are read/write register bits. When memory mapping is disabled, these bits return zeroes.

11 through 4: Return zeroes to indicate that 4 Kbytes of address space are required.

3 - PREFETCHABLE: This read only bit returns 0 to indicate that this address space is not pre-fetchable.

2 and 1 - TYPE: These two read only bits return "00" to indicate that the control registers may be mapped anywhere in 32-bit address space.

0 - MEMORY SPACE INDICATOR: This read only bit returns a 0 to map the control registers into memory space.

28 - CIS POINTER
Reset Value:
unknown, determined by data in external Flash RAM

This read only register points to the location of the CardBus "Card Information Structure."

31: Reserved (always returns zero).

30 through 28 - ADDRESS SPACE INDICATOR: to indicate that the CIS is mapped into expansion ROM space.

27 through 24 - ROM IMAGE NUMBER: to indicate that the CIS is located in image 0 in the expansion ROM.

This is written by the EEPROM recall.

2C - SUBSYSTEM / SUBSYSTEM VENDOR ID
Reset Value:
unknown; written during EEPROM recall

This read only register is used to uniquely identify the add-in board or subsystem on which the LAN83C175 resides. The value is recalled from EEPROM after power-up reset.

31 through 16 - SUBSYSTEM ID: This field is vendor specific and may be assigned freely. Bit 31 is hardwired to 0. The remaining bits are recalled from EEPROM.

15 through 0 - SUBSYSTEM VENDOR ID: This field identifies the subsystem vendor. The value is assigned by the CardBus SIG.

30 - EXPANSION ROM BASE ADDRESS
Reset Value:
XXXXXXXXXXXXXXXX0000000000000000

31 through 16: Base Address.

15 through 1: Return zeroes to indicate that 64 Kbytes of address space are required.

1 - ADDRESS DECODE ENABLE: Controls whether or not the LAN83C175 accepts accesses to its expansion ROM.

3C - BUS REQUIREMENTS / INTERRUPT MAP

Reset Value:
00000000000000000000001xxxxxxxx

31 through 24 - MAXIMUM LATENCY: This read only field specifies how often the LAN83C175 needs to gain access to the CardBus bus.* To enable performance tuning, the value is recalled from EEPROM after reset.

23 through 16 - MINIMUM GRANT: This read only field specifies how long a burst period the LAN83C175 needs assuming a 33MHz CardBus clock rate.* To enable performance tuning, the value is recalled from EEPROM after reset.

15 through 8 - INTERRUPT PIN: This read only field returns 01h to indicate that the LAN83C175's interrupt output is connected to the nINTA pin on the CardBus connector.

7 through 0 - INTERRUPT LINE: This byte is programmed with interrupt routing information. The value indicates which input of the systems interrupt controller(s) the LAN83C175's interrupt pin is connected to. Values in this register are system architecture specific.

* The maximum latency and minimum grant registers are used to indicate the LAN83C175's desired settings for Latency Timer values. Both registers specify a period of time in units of 1/4 microsecond. For example, if the LAN83C175 needs to perform a burst 2 microseconds in length every 11 microseconds (on the average), then the maximum latency register would read 44 (1Ch) and the minimum grant register would read 8 (08h).

Modem and External Flash RAM Interface and Control

Access to the external modem is made through accesses by the host to the EPIC/C. The CardBus configuration space for the modem function must be setup during card initialization. Once this is done, I/O or memory space writes or reads on the CardBus to these defined spaces will be passed to the modem or its register space. Accesses to the modem I/O address space are defined in Table 3, with dword addresses shown. Note that accesses to the physical modem read and write addresses physically found in the modem, such as the transmit and receive FIFO's. The other registers are physically located in the EPIC/C.

I/O accesses to dword addresses 00-7C are passed to the modem itself on a byte addressed basis. For example, if a read access has the I/O base address register, with bit CAD(7) equal to '0', bits CAD(6:0) are passed directly to the modem. A modem, typically, will only use 3-6 address lines, but the EPIC/C can accommodate up to 128 byte addresses to the physical modem in the EPIC/C's I/O space.

Accesses to dword addresses 80-94 will return the registers shown in Table and defined later in the document.

Access to the external RAM is through the 64K byte configuration space defined in the Expansion ROM Base Address.

Modem Registers Map

Table 4 - Modem I/O Address Space

00	Physical Modem Address Space (must be byte addressed)	40	Physical Modem Address Space (must be byte addressed)	80	NVCTL_m	C0	Unused
04		44		84	STATUS_m	C4	
08		48		88	FEVTR	C8	
0C		4C		8C	FEVTRMSKR	CC	
10		50		90	FPRSTSTR	D0	
14		54		94	FFRCEVTR	D4	
18		58		98	Unused	D8	
1C		5C		9C		DC	
20		60		A0		E0	
24		64		A4		E4	
28		68		A8		E8	
2C		6C		AC		EC	
30		70		B0		F0	
34		74		B4		F4	
38		78		B8		F8	
3C		7C		BC		FC	

Modem Registers Bits Description

80 - NVCTL_m Register

14 - FETPWRMDM: This signal controls the fet power output to the modem. It will power up low, preventing any power from reaching the modem if the output pin is used.

13 - MDM_INT_HL: This controls the expected polarity of the interrupt from the modem. If this signal is high, the interrupt expected is active high. If this signal is low, the interrupt is expected to be low.

12 through 9 - MDM_ACS_DLY: These signals will enforce a delay between accesses to the modem during quick host accesses to the modem address space. It can be set to between 0 and 15 cbclk periods of enforced delay, depending on the requirements of the attached modem. A value of 6 in this register will enforce an interval of ~215 ns between modem accesses, and is the recommended value unless the modem used specifically allows a shorter inter-access time.

8 - MDM_XTND_SETUP: When set high, this will increase setup times during access to the external modem. During writes, the address will be driven 1 cbclk length longer than normal. During reads, the address will be driven one cbclk before chip select and output enable are active, and chip select and output enable will be driven one cbclk length longer than normal before data is strobed into the EPIC/C. For Rockwell modems, this value can be a 0, while for Lucent modems, this value should be a 1.

7 - RESETM_N: The status of this signal will be reflected on the external pin RESETM_N.

6 - INT_EVNT_MSK(1): This bit is an interrupt mask for the RDYM signal. If this bit is low, an interrupt event will not occur, preventing an interrupt to the host being issued when RDYM transitions from 0 to 1. Note that if STATUSREG_EN is high, this will also prevent a host interrupt from being generated when RDYM transitions.

5 - INT_EVNT_MSK(0): This bit is an interrupt mask for the RINGIN signal. If this bit is low, an interrupt event will not occur, preventing an interrupt to the host being issued when RINGIN transitions from 0 to 1. Note that if STATUSREG_EN is high, this will also prevent a host interrupt from being generated when RINGIN transitions.

4 and 3 - Unused.

2 - PDWNM: The value of this bit will be driven out on the POWERDWNM pin of the device. It is intended to send a powerdown signal to the external modem.

1 - STS_EVNT_MSK(1): This bit is a status event mask for the modem present state register bit 1 and modem event function register bit 1. When this signal is low, the RDYM signal transitioning from 0 to 1 will not log an event.

0 - STS_EVNT_MSK(0): This bit is a status event mask for the modem present state register bit 1. When this signal is low, the RINGIN signal transitioning from 0 to 1 will not log an event.

84 - STATUS_m Register

3 and 2 - STS_EVNT: When bit 3 of this register is 1, it indicates that RDYM has transitioned from 0 to 1. When bit 2 of this register is 1, it indicates that RINGIN has transitioned from 0 to 1. When either of these signals transition, it is considered a modem event. If these bits are not masked by NVCTL_m(1:0), an event will be logged in the modem present state register bit 1 and the modem function present state will go to 1. If these bits are not masked by NVCTL_m(6:5) an interrupt event will occur, causing an interrupt to be sent to the host system if STATUSREG_EN, from the NVCTL_E register, is 1.

1 - RDYM: This register reflects that status of the RDYM signal driven by the modem. It is not host writable.

0 - RINGIN: This register reflects that status of the RINGIN signal driven by the modem. It is not host writable.

88 - Modem Function Event Register

31 through 16 - Unused

15 - INTR_M: This indicates that the modem has signaled an interrupt condition.

3 and 2 - BVD: Battery voltage detect is not used, and a 0 is returned when this register is read.

1 - STSCHG: When this signal is true, it indicates that RDYM or RINGIN have transitioned from 0 to 1. It is reset by writing a 1 to this register location. Note also that STSCHG_EN, NVCTL_e(12) must be active for the CSTSCHG pin to be driven active to the host.

0 - WP: Write protect is not used, and 0 is returned in this bit location.

8C - Modem Function Mask Register

31 through 16 - Unused

15 - MSK_INTR_M: This is the masking bit for the modem function event register bit 15.

6 - PWM: Pulse Width Modulation audio enable. This value is always 0, as this chip does not support this type of signal.

5 - BAM: Binary Audio Enable, this controls whether binary audio from the modem will be passed to the CardBus CAUDIO pin.

3 through 2 - MSK_BVD: This value is always 0.

1 - MSK_STSCHG: This is the masking bit for the modem function event register bit 15.

0 - MSK_WP: This value is always 0.

90 - Modem Present State Register

31through 16 - Unused

15 - INTR_M: This indicates that the modem has signaled an interrupt condition.

14 through 4 - Unused

3 and 2 - BVD: Battery voltage detect is not used, and a 0 is returned when this register is read.

1 - STSCHG: When this signal is true, it indicates that RDYM or RINGIN have transitioned from 0 to 1. It is reset by writing a 1 to this register location.

0 - WP: Write protect is not used, and 0 is returned in this bit location.

94 - Modem Function Force Event Register

31 through 16 - Unused.

15 - FRC_INTR_M: Writing this location with a 1 sets the modem function event register bit 15 to a 1.

14 through 2 -Unused.

1 - FRC_STSCHG: Writing this location with a 1 sets the modem function event register bit 1 to a 1.

0 - Unused.

Physical Connection

The number of address bits attached to the modem or external memory is defined by the user.

Note: nRESETM is active low at power up, and can be set by a write to a register within the EPIC/C. RDYM and RINGIN are status bits that can be read from a register within the EPIC/C. IREQM is an interrupt request register that, when active, will drive an interrupt onto the CardBus interface. This is a maskable interrupt. The MPWRDWN signal is active high at initialization, and can be driven low by a write to a register within the EPIC/C. AUDIOIN goes straight through the EPIC/C to the CardBus pin CAUDIO. The audio signal must be in a digital format. RINGOUT will be high when MPWRDWN is low, but the modem is still in reset.

Modem and RAM Access Timing

During a write access to the modem, the timing on the address, data, chip select, and write pulse are as shown in figure 21. Writes to the external RAM have similar timing, with the option to increase the setup time. Note that the timings are affected by the settings in the MDM_ACS_DLY and MDM_XTND_SETUP bits explained in the NVCTL_m Register Definition.

During a read access from the modem, the timing on the address, data, chip select, and read pulse are as shown in figure 22. Access to the external RAM has similar timing, with the option to increase access times.

OPERATIONAL DESCRIPTION

Maximum Guaranteed Ratings

Operating Temperature Range..... 0°C To +70°C
Storage Temperature Range..... -55°C To +150°C
Lead Temperature Range (soldering, 10 Seconds)..... +325°C
Positive Voltage on any pin with respect to Ground..... V_{DD} + 0.3V
Negative Voltage on any pin with respect to Ground..... -0.3V
Maximum V_{DD} ..... +*TBD*V

The above is a stress rating only. Stresses greater than the ones listed above could damage the device permanently. Device operation outside of the above stated conditions is not recommended.

Note: When powering this device from a laboratory or system power supply, it is important that the Absolute Maximum Ratings are not exceeded. Some power supplies exhibit voltage spikes on their outputs when the AC power is switched on or off. Also, voltage transients on the AC power line may appear on the DC outputs. If such possibilities exist, a clamping circuit should be used.

DC Electrical Characteristics

(T_A = 0°C — +70°C; V_{DD} = +3.3V +/-10%)

PARAMETER	SYMBOL	MIN	TYP	MAX	UNITS	COMMENTS
Current - Startup	I_{DDP}		40		mA	LED* = 0 mA
Current - 10 or 100Mb/s Busy (Active TX &/or RX)	I_{DD}		75		mA	LED = 10 mA
Current - 10 or 100Mb/s Idle	I_{DSBY}		65		mA	LED = 5 mA
Current - S/W Power Down	I_{DPWDN}		40		mA	LED = 0 mA
Current - Bus Clock Stop &10 or 100Mb/s Idle	$I_{DSBY-nc}$		50		mA	LED = 5 mA
Current - Bus Clock Stop & Cable Removed	$I_{DSBY-nc}$		50		mA	LED = 0 mA
Current - Bus Clock Stop & S/W Power Down	$I_{DPWDN-nc}$		25		mA	LED = 0 mA

* 5mA per LED lit. LEDs' activity light pulses are stretched into milliseconds (a lot longer than the chip active time). As the chip drops back to the idle state immediately at the end of a TX or RX, the actual time-averaged current consumption will be between the Busy and Idle numbers.

PARAMETER	SYMBOL	MIN	TYP	MAX	UNITS	COMMENTS
Input Current Leakage - dc_Ik1						
Low Input Leakage	I_{IL}	-10		+10	µA	V_{IN} = 0.0V
High Input Leakage	I_{IH}	-10		+10	µA	V_{IN} = *TBD*V
Output Current Leakage - dc_Ik2						
Low Output Leakage	I_{OL}	-10		+10	µA	V_{IN} = 0.0V
High Output Leakage	I_{OH}	-10		+10	µA	V_{IN} = *TBD*V
CB Clock - I_{CBCLK}						
Low Input Voltage	V_{IL}			.325* V_{DD}	V	
High Input Voltage	V_{IH}	.475 *V_{DD}			V	
I_{CB} , IO_{CB}						
Low Input Voltage	V_{IL}			0.325 * V_{DD}	V	
High Input Voltage	V_{IH}	.475 * V_{DD}			V	
I_{TTL4}, IO_{TTL4}						V_{DD} =5.0V
Low Input Voltage	V_{IL}			0.8	V	
High Input Voltage	V_{IH}	2.2			V	
O_{TTL4} , IO_{TTL4}						I_L = 4mA, V_{DD} =5.0V
Low Output Voltage	V_{OL}			0.8	V	
High Output Voltage	V_{OH}	2.2			V	
O_{CB} , IO_{CB}						
Low Output Voltage	V_{OL}			0.1* V_{DD}	V	I_L = 0.7mA
High Output Voltage	V_{OH}	0.9* V_{DD}			V	I_L = -0.15mA

Capacitance (T_A = 25°C; f_C = 1MHz; V_{DD} = +3.3V)

PARAMETER	SYMBOL	MIN	TYP	MAX	UNITS	COMMENTS
CardBus Clock Input Capacitance	$C_{INCBCLK}$			5	pF	The pin under test tied to AC ground. All other pins tied to digital ground
Input Capacitance	C_{IN}			0.5	pF	
Output Capacitance	C_{OUT}			5.0	pF	

TIMING DIAGRAMS

All Timings are estimated at this time

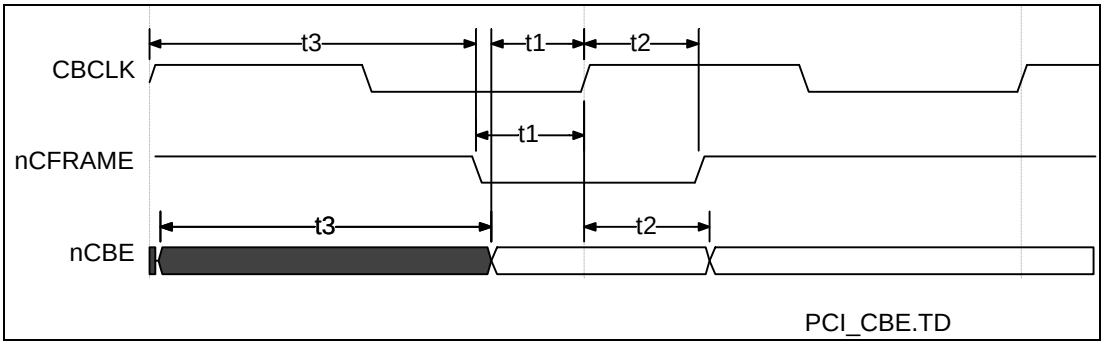


FIGURE 6 - CardBus COMMAND TIMING

	MASTER		TARGET		
NAME	**MIN**	**MAX**	**MIN**	**MAX**	**DESCRIPTION**
t1			7ns		Input setup to clock
t2	2ns	11ns	0ns		(Master) Clock to signal valid delay (Target) Input hold time from clock
t3	2ns	11ns			Clock to signal valid delay

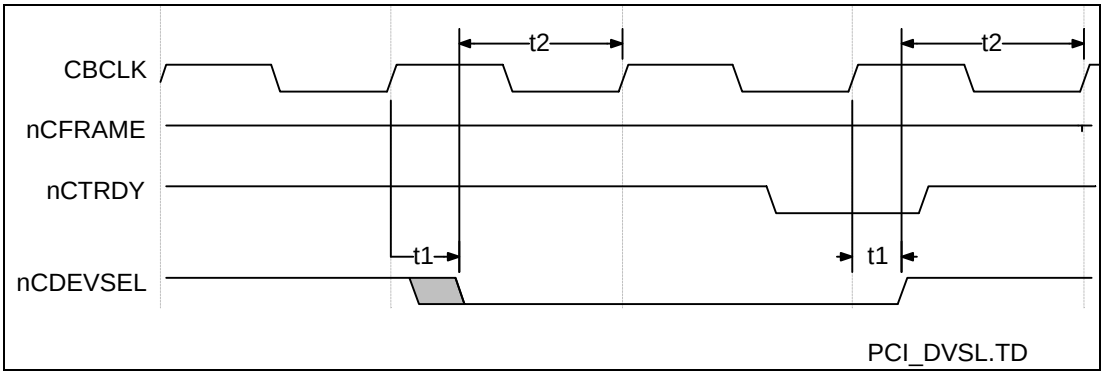


FIGURE 7 - CardBus/nCDEVSEL TIMING

	MASTER		TARGET		
NAME	**MIN**	**MAX**	**MIN**	**MAX**	**DESCRIPTION**
t1	0ns		2ns	11ns	(Master) Input hold time from clock (Target) Clock to signal valid delay
t2	7ns				Input setup to clock

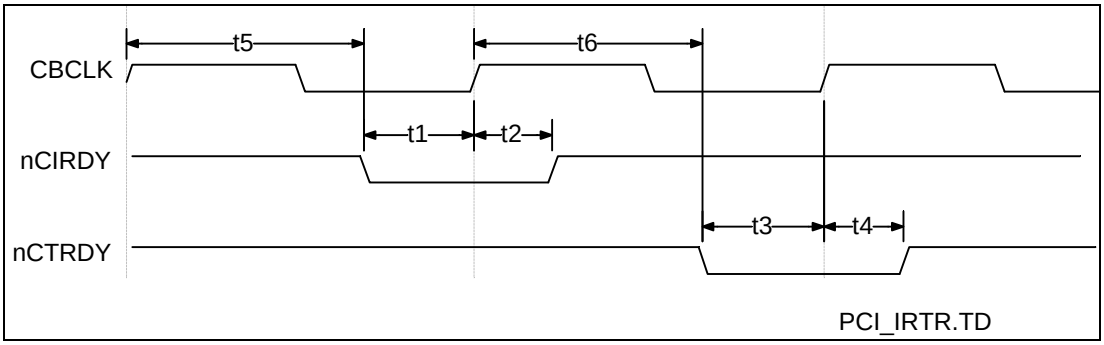


FIGURE 8 - CardBus/nCIRDY AND nCTRDY TIMING

	MASTER		TARGET		
NAME	**MIN**	**MAX**	**MIN**	**MAX**	**DESCRIPTION**
t1			7ns		Input setup time to clock
t2	2ns	11ns	0ns		(Master) Clock to signal valid delay (Target) Input hold time from clock
t3	7ns				Input setup time to clock
t4	0ns		2ns	11ns	(Master) Input hold time from clock (Target) Clock to signal valid delay
t5	2ns	11ns			Clock to signal valid delay
t6			2ns	11ns	Clock to signal valid delay

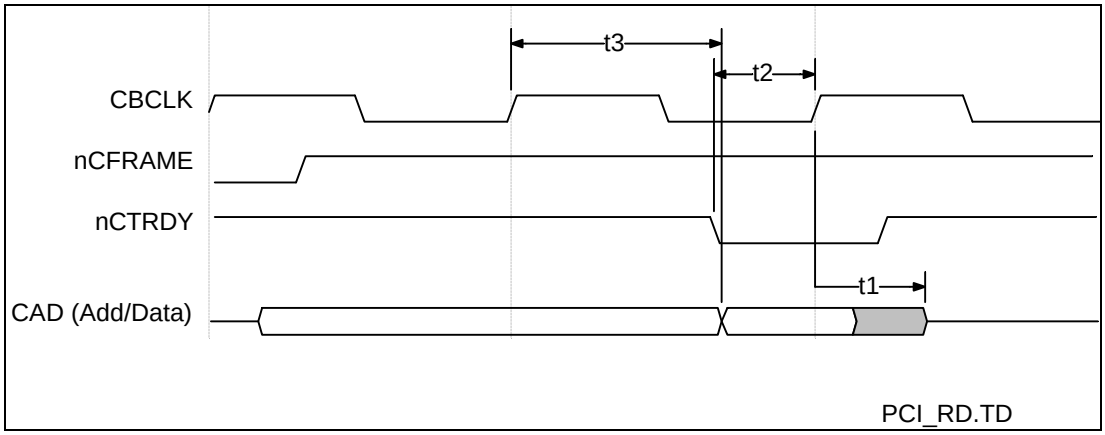


FIGURE 9 - CardBus/DATA READ TIMING

	MASTER		TARGET		
NAME	**MIN**	**MAX**	**MIN**	**MAX**	**DESCRIPTION**
t1	0ns		2ns	11ns	(Master) Input hold time from clock (Target) Clock to signal valid
t2	7ns				Input setup time to clock
t3			2ns	11ns	Clock to signal valid

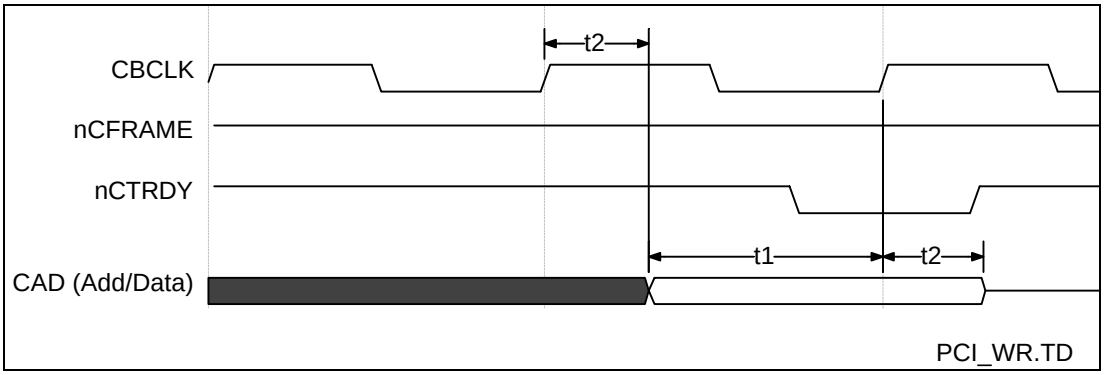


FIGURE 10 - CardBus/DATA WRITE TIMING

	MASTER		TARGET		
NAME	**MIN**	**MAX**	**MIN**	**MAX**	**DESCRIPTION**
t1			7ns		Input setup time to clock
t2	2ns	11ns	0ns		(Master) Clock to signal valid delay (Target) Input hold time from clock

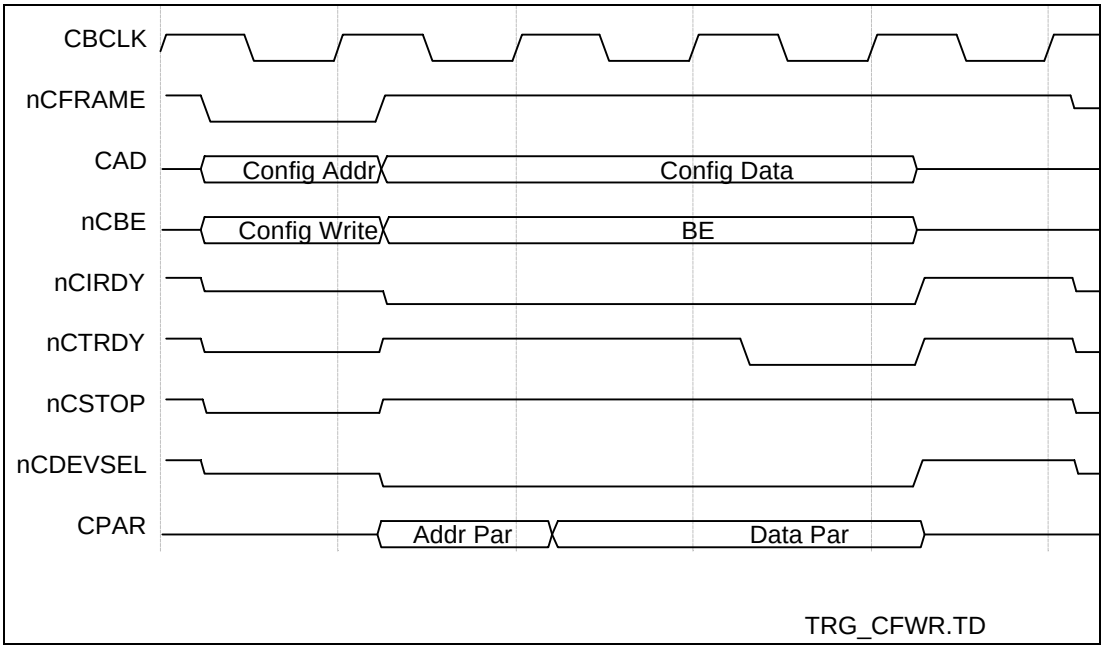


FIGURE 11 - CardBus - TYPICAL CONFIGURATION WRITE/EPIC/C IS TARGET

CardBus Bus Cycle Illustration

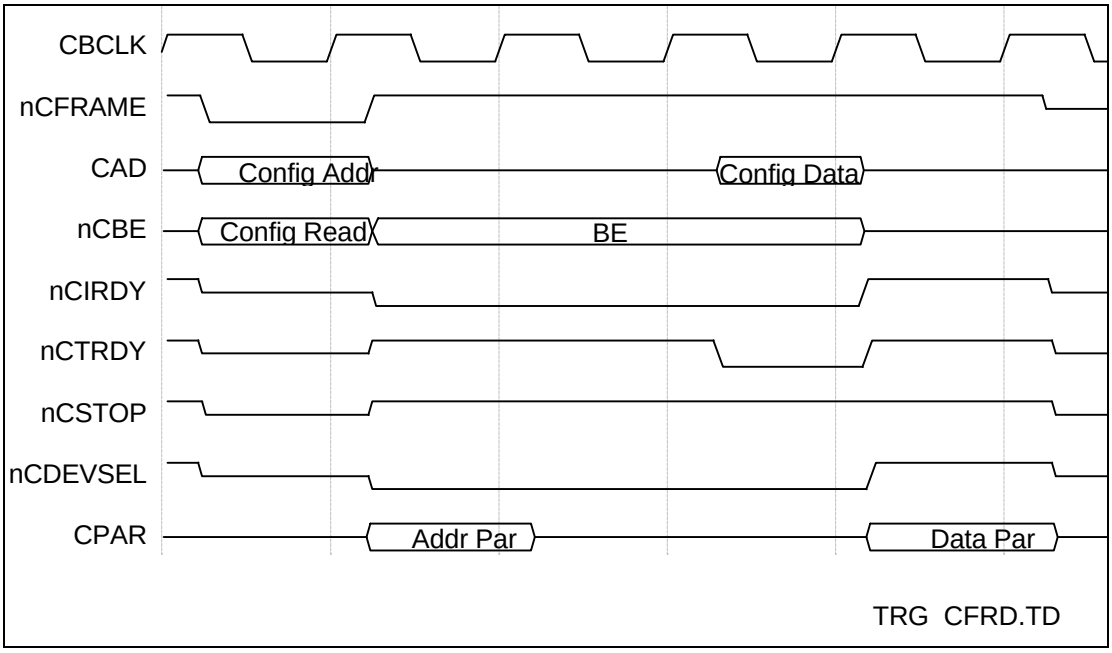


FIGURE 12 - CardBus - TYPICAL CONFIGURATION READ/EPIC/C IS TARGET

CardBus Bus Cycle Illustration

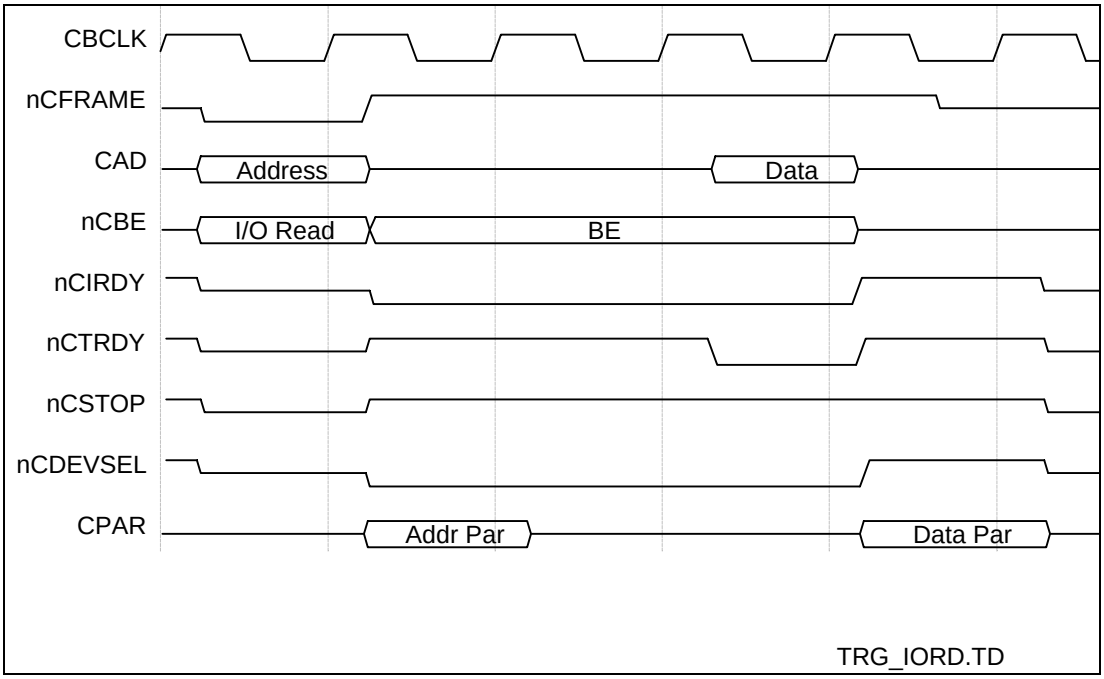


FIGURE 13 - CardBus - TYPICAL I/O READ/EPIC/C IS TARGET

CardBus Bus Cycle Illustration

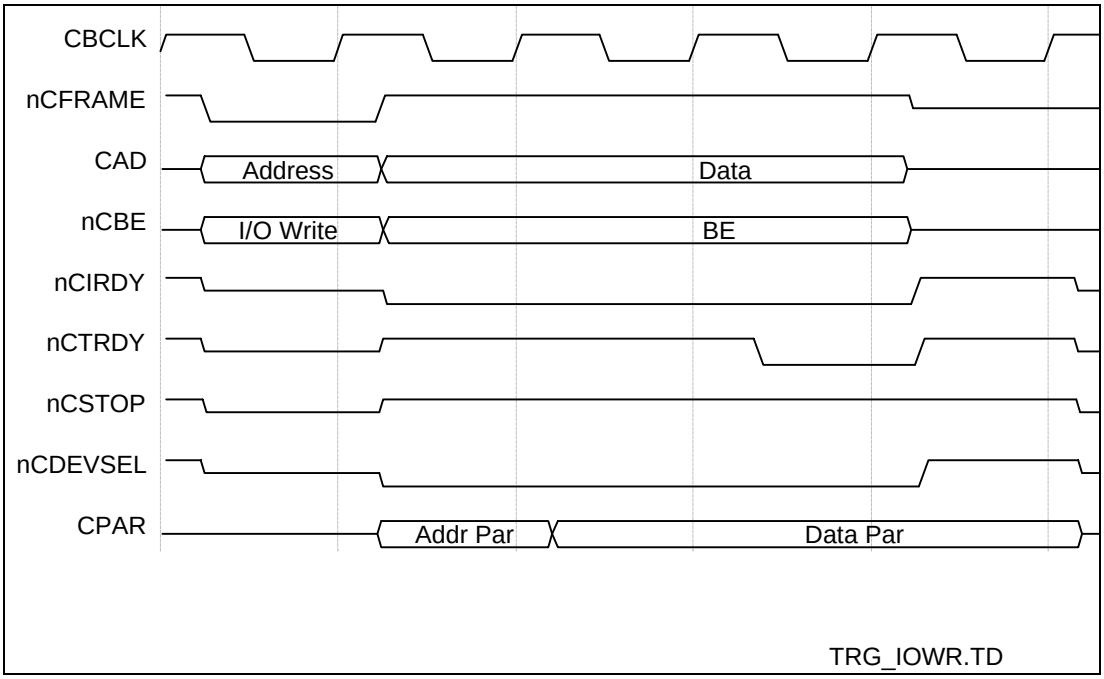


FIGURE 14 - CardBus - TYPICAL I/O WRITE/EPIC/C IS TARGET

CardBus Bus Cycle Illustration

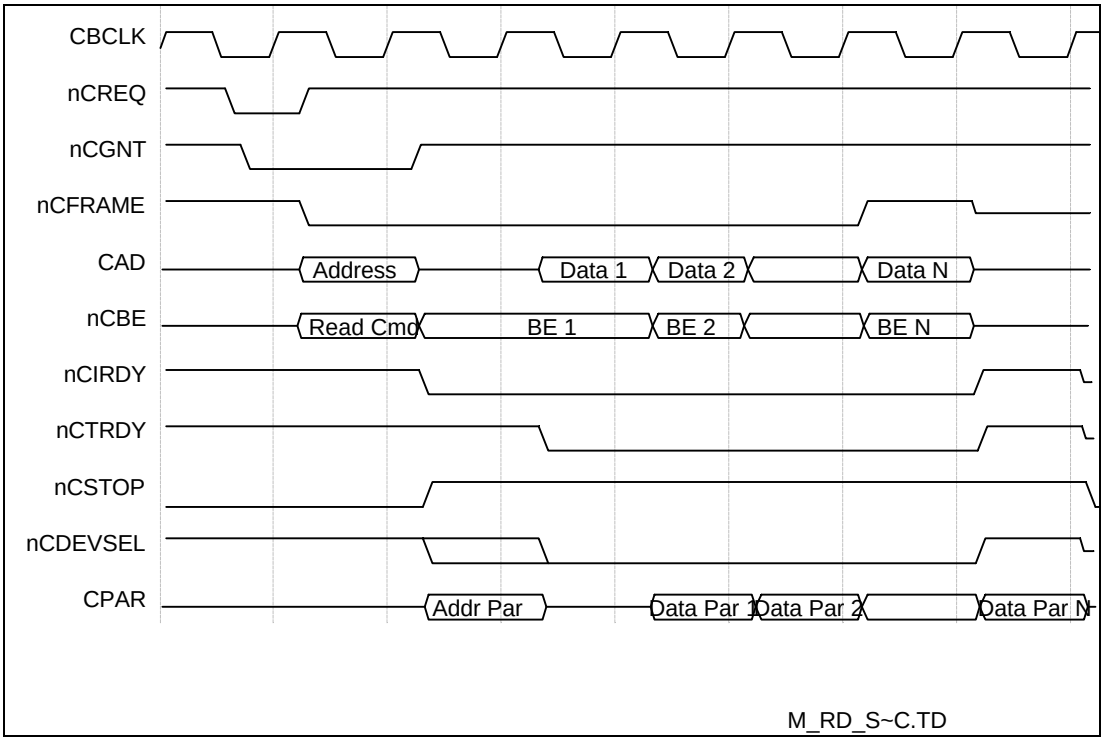


FIGURE 15 - CardBus - TYPICAL READ TRANSACTION/SYSTEM MEMORY TO CHIP EPIC/C IS BUS MASTER

CardBus Bus Cycle Illustration




FIGURE 16 - CardBus - TYPICAL WRITE TRANSACTION/CHIP TO SYSTEM MEMORY EPIC/C IS BUS MASTER

CardBus Bus Cycle Illustration

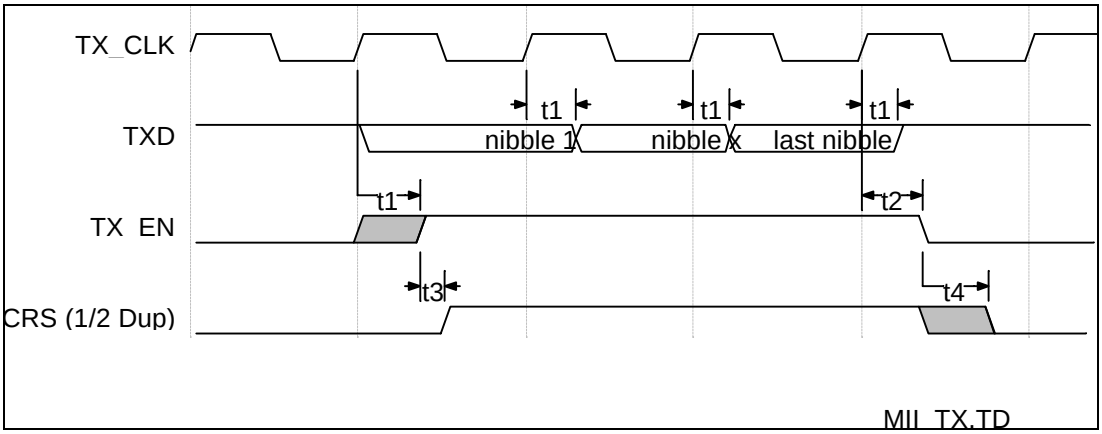


FIGURE 17 - MII - TRANSMIT TIMING FOR 10/100Mb/s

Note: Clock Frequency Changes to 2.5 MHz for 10 Mb/s Nibble Transfers

NAME	MIN	MAX	DESCRIPTION
t1, t2	0ns	25ns	Clock to output delay
t3	0ns(100Mb/s) 0ns(10Mb/s)	40ns(100Mb/s) 400ns(10Mb/s)	Min: 0 bit times Max: 4 bit times
t4	0ns(100Mb/s) 0ns(10Mb/s)	160ns(100Mb/s) 1.6µs(10Mb/s)	Min: 0 bit times Max: 16 bit times

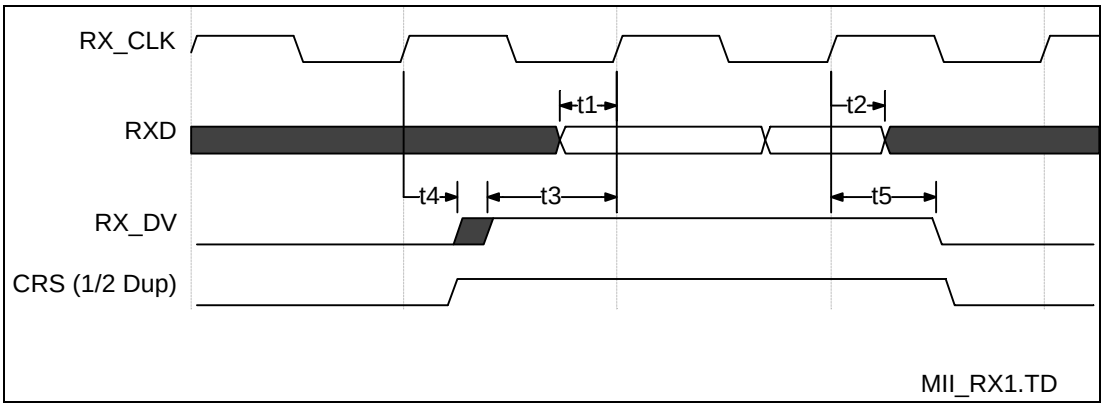


FIGURE 18 - MII - RECEIVE TIMING FOR 100Mb/s

Note: Clock Frequency Changes to 2.5MHz for 10Mb/s Nibble Transfers

NAME	MIN	MAX	DESCRIPTION
t1, t3	10ns		Input Setup Time
t2, t4, t5	10ns		Input Hold Time

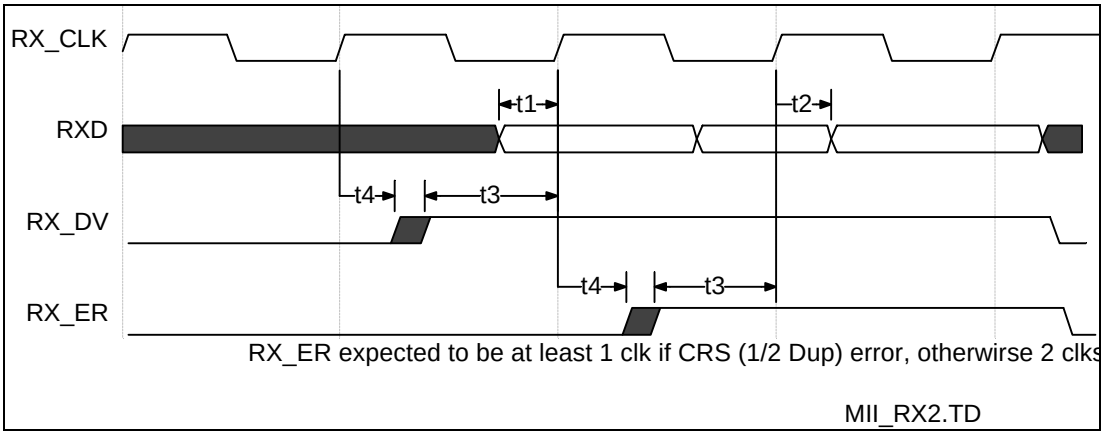


FIGURE 19 - MII - RECEIVE ERROR (RX_ER) TIMING FOR 100Mb/s

Note: Clock Frequency Changes to 2.5 MHz for 10 Mb/s Nibble Transfers

NAME	MIN	MAX	DESCRIPTION
t1, t3	10ns		Input Setup Time
t2, t4		10ns	Input Hold Time

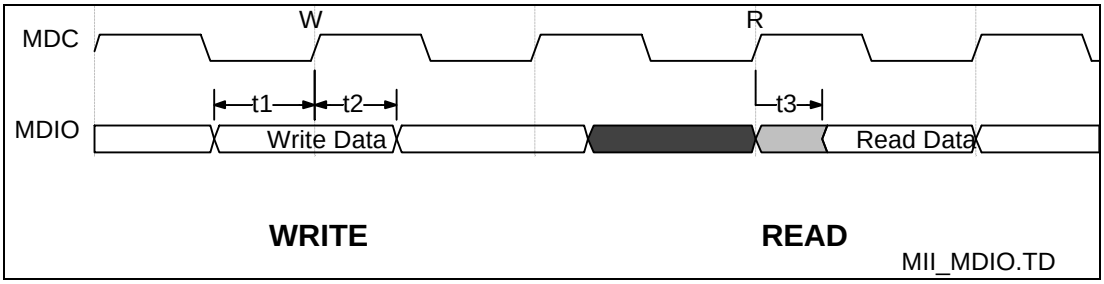


FIGURE 20 - MII - SERIAL MANAGEMENT WRITE/READ

NAME	MIN	MAX	DESCRIPTION
t1	10ns		Data ready before the rising edge of MCLK (Setup time)
t2	10ns		Data hold after the rising edge of MCLK
t3	0ns	300ns	Data ready to MCLK (Required by EPIC/C)

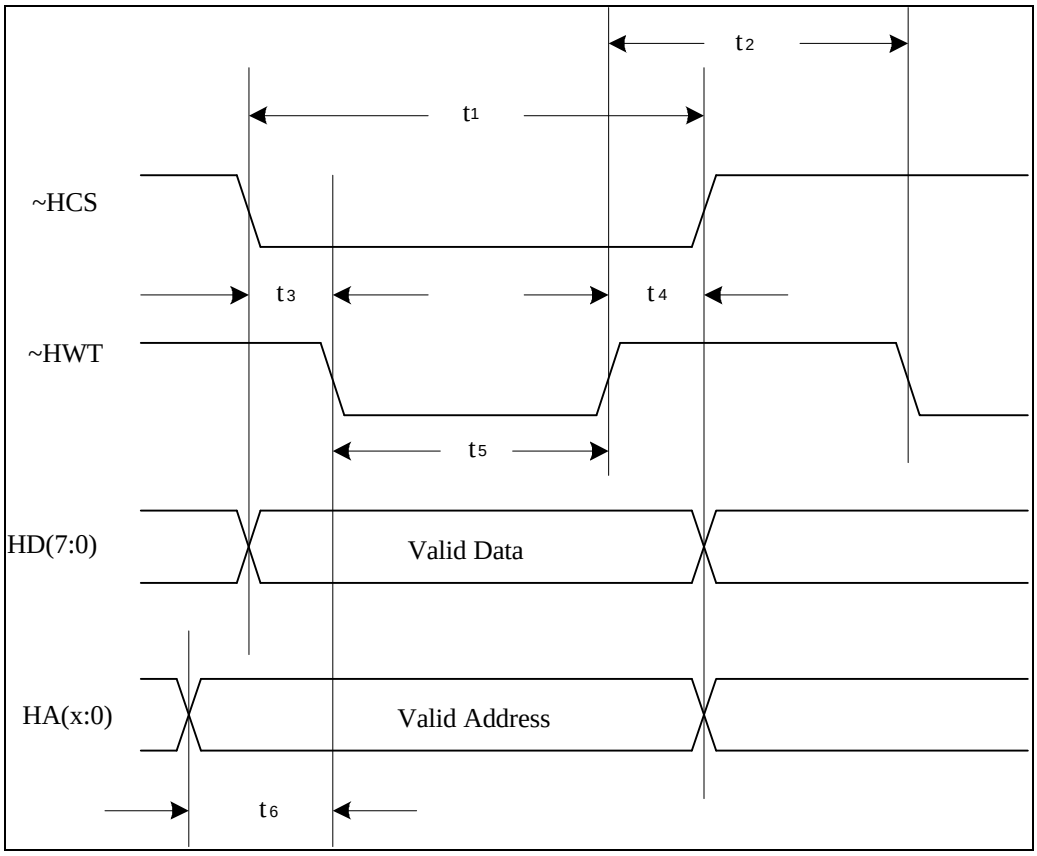


FIGURE 21 – MODEM/FLASH RAM WRITE ACCESS

See Table 5 on Page 88

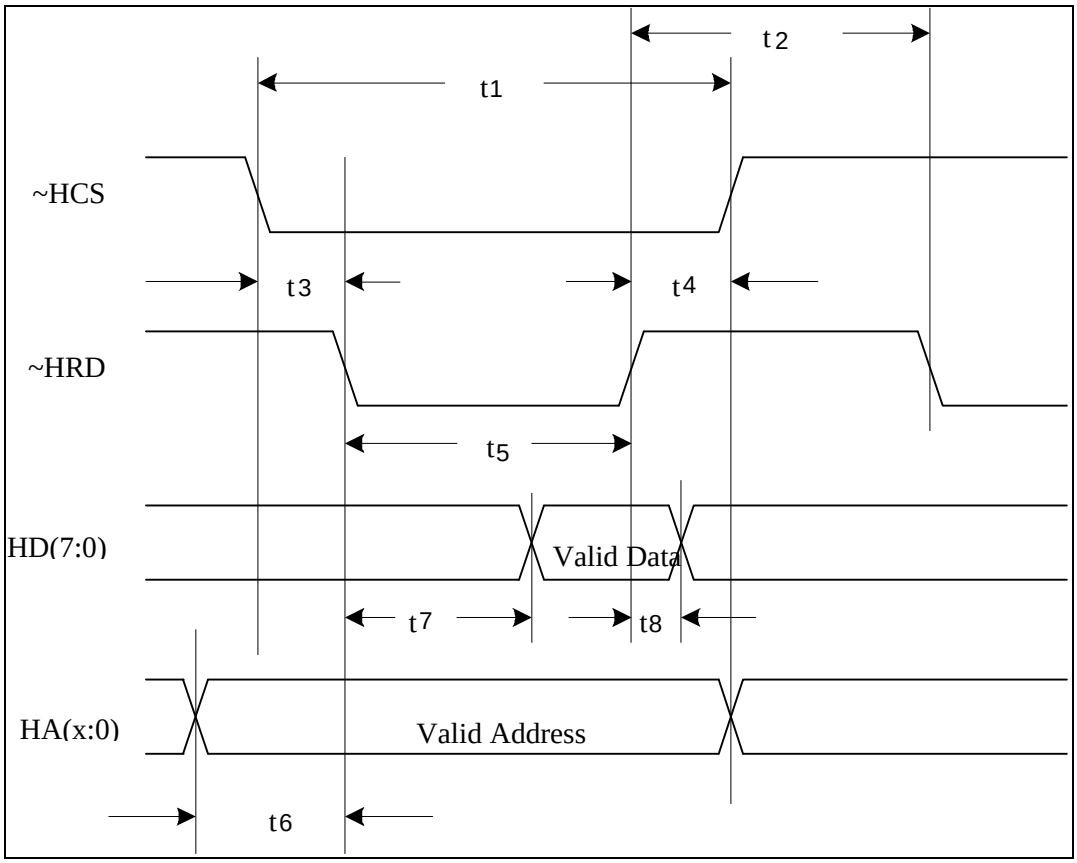


FIGURE 22 - MODEM/FLASH RAM READ ACCESS

See Table 5 on Page 88

Table 5 - Modem Access Timings

NAME	MIN (NS)	MAX (NS)	DESCRIPTION
t_1	90		Chip select pulse width.
t_3	15		Data setup time before write pulse active.
t_6	15-45		Address setup time before write or read pulse, optionally increased for devices requiring longer address setup times.
t_5	60		Write pulse width
t_4	15		Chip select, data, and address hold time after write pulse becomes inactive
t_7		50-80	Expected data valid on data pins, optionally increased for devices with slower access times.
t_8	0		Data hold time required after read pulse goes inactive.
t_2	Selectable		Minimum access delay enforced between modem accesses. Delay determined by preloaded EPIC/C internal register, NVCTL_m(12:9) from 0 to 15 cbclk periods.

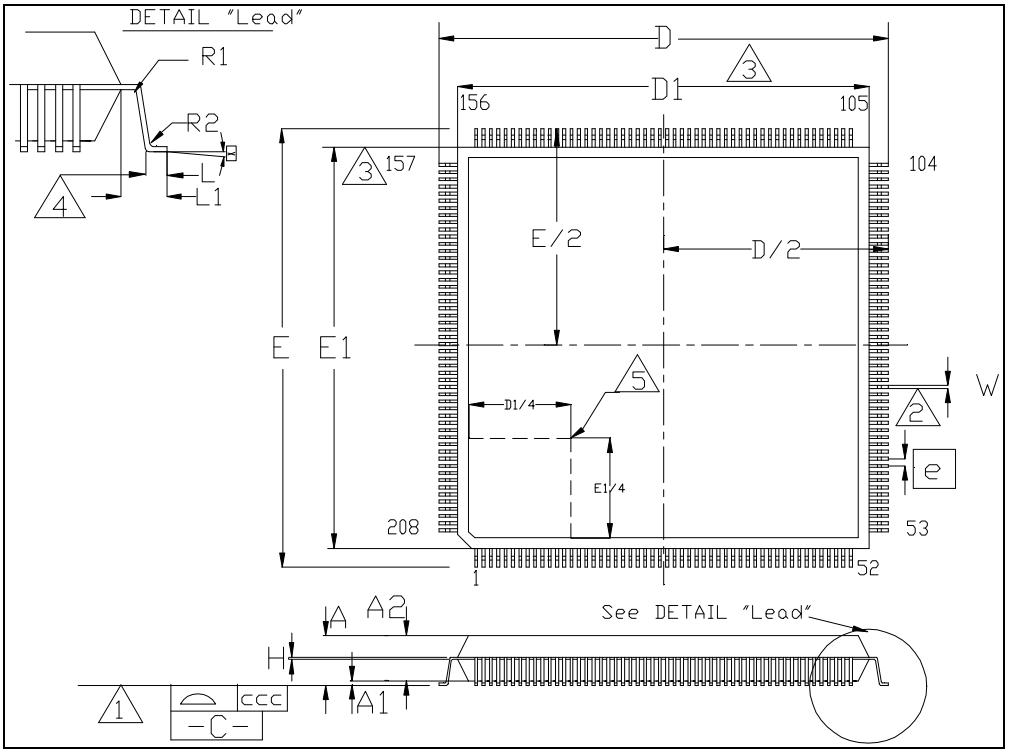


FIGURE 23 - 208 PIN TQFP, 28X28X1.4 BODY, 2 MM FOOTPRINT

See Table 6 on Page 90

Table 6 - Package Dimensions

	MIN	NOMINAL	MAX	REMARK
A	~	~	1.60	Overall Package Height
A1	0.05	~	0.15	Standoff
A2	1.35	~	1.45	Body Thickness
D	29.80	30.00	30.20	X Span
D/2	14.90	15.00	15.10	$^1/_2$ X Span Measure from Centerline
D1	27.90	28.00	28.10	X body Size
E	29.80	30.00	30.20	Y Span
E/2	14.90	15.00	15.10	$^1/_2$ Y Span Measure from Centerline
E1	27.90	28.00	28.10	Y body Size
H	0.09	~	0.23	Lead Frame Thickness
L	0.45	0.60	0.75	Lead Foot Length from Centerline
L1	~	1.00	~	Lead Length
e		0.50 Basic		Lead Pitch
q	0^o	~	7^o	Lead Foot Angle
W	0.17	~	0.27	Lead Width
R1	0.08	~	~	Lead Shoulder Radius
R2	0.08	~	0.20	Lead Foot Radius
ccc	~	~	0.08	Coplanarity

Notes:

[1] Controlling Unit: millimeter

[2] Tolerance on the position of the leads is ± 0.04 mm maximum

[3] Package body dimensions D1 and E1 do not include the mold protrusion. Maximum mold protrusion is 0.25 mm

[4] Dimension for foot length L measured at the gauge plane 0.25 mm above the seating plane is 0.78-1.08 mm

[5] Details of pin 1 identifier are optional but must be located within the zone indicated

©1997 STANDARD MICROSYSTEMS CORP.

Circuit diagrams utilizing SMSC products are included as a means of illustrating typical applications; consequently complete information sufficient for construction purposes is not necessarily given. The information has been carefully checked and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies. Furthermore, such information does not convey to the purchaser of the semiconductor devices described any licenses under the patent rights of SMSC or others. SMSC reserves the right to make changes at any time in order to improve design and supply the best product possible. SMSC products are not designed, intended, authorized or warranted for use in any life support or other application where product failure could cause or contribute to personal injury or severe property damage. Any and all such uses without prior written approval of an Officer of SMSC and further testing and/or modification will be fully at the risk of the customer.

LAN83C175 Rev. 07/07/97