











DRV2625

ZHCSEH1A - DECEMBER 2015 - REVISED DECEMBER 2015

# DRV2625 超低功耗闭环 LRA/ERM 触觉驱动器,具有内置库

## 1 特性

- 超低功耗关断模式
- 低功耗待机状态
- 基于电阻的执行器诊断
- SimpleDrive 单线制振动方案
- 自动谐振跟踪和报告
- 自动过驱动和制动
- 自动级别校准
- 可在电池放电过程进行驱动补偿
- 可配置电池监视器和电源保护
- 具有自动制动的非谐振驱动
- LRA 波形形状选择
- 己获得许可的 Immersion TouchSense®2200
- 内置库和可循环波形序列器
- 实时回放 (RTP) 模式
- I<sup>2</sup>C 控制的数字回放引擎
- 硬件和软件触发器选项
- 通过自动制动自动切换到待机模式
- 可选中断引脚
- 1.8V 兼容、VDD 耐压数字接口
- (1) 正在申请专利的控制算法

## 2 应用范围

- 手机和平板电脑
- 健身腕带和可穿戴式设备
- 远程控制、鼠标和外设器件
- 支持触觉反馈的器件
- 人机界面

## 3 说明

DRV2625 器件是一款触觉驱动器,依赖于专有闭环架构提供敏锐、强劲且恒定的触觉效果,同时实现功率最优化。

该器件具有内置库和可循环波形序列器,以及自动过驱 和制动功能,可轻松生成清晰优质的触觉效果,从而减 轻了处理单元的负担。

DRV2625 器件 特有 自动进入待机状态功能和电池保护功能,无需用户干预即可帮助降低功耗。通过 NRST 引脚可使器件进入完全关断状态,从而节省更

多的电能。 通过波形形状选择可以实现正弦波和方波驱动,从而定


通过波形形状选择可以实现正弦波和方波驱动,从而定制触感和可闻性能。具有自动制动的非谐振驱动简化了 非谐振触觉解决方案的实现。

器件信息(1)

	HH 11 1H 10.	
器件名称	封装	封装尺寸(最大值)
DRV2625	DSBGA (9)	1.498mm × 1.361mm

(1) 要了解所有可用封装,请见数据表末尾的可订购产品附录。

#### 简化电路原理图

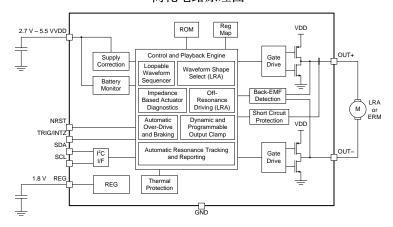



	目	录		
1	特性 1		8.3 Feature Description	10
2	应用范围 1		8.4 Device Functional Modes	20
3	说明 1		8.5 Operation During Exceptional Conditions	<mark>22</mark>
4	修订历史记录 2		8.6 Programming	23
5	Pin Configuration and Functions		8.7 Register Map	34
6	Specifications	9	Application and Implementation	<mark>59</mark>
U	6.1 Absolute Maximum Ratings		9.1 Application Information	59
	6.2 ESD Ratings		9.2 Typical Application	60
	6.3 Recommended Operating Conditions		9.3 Initialization Set Up	63
	6.4 Thermal Information	10	Power Supply Recommendations	65
	6.5 Electrical Characteristics 5	11	1 Layout	66
	6.6 Timing Requirements		11.1 Layout Guidelines	66
	6.7 Switching Characteristics		11.2 Layout Examples	<u>66</u>
	6.8 Typical Characteristics	12	2 器件和文档支持	67
7	Parameter Measurement Information 9		12.1 器件支持	67
•	7.1 Test Setup for Graphs		12.2 商标	68
8	Detailed Description		12.3 静电放电警告	68
•	8.1 Overview		12.4 Glossary	68
	8.2 Functional Block Diagram	13	<b>3</b> 机械、封装和可订购信息	69

# 4 修订历史记录


注: 之前版本的页码可能与当前版本有所不同。

Cr	nanges from Original (December 2015) to Revision A	Pag	јe
•	已将数据表状态从"产品预览"更改为"量产数据"		1



# **5 Pin Configuration and Functions**

YFF Package 9-Pin DSBGA Top View

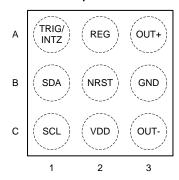

**Table 1. Pin Functions** 

PIN		1/0	DECORPORA	
NAME	NO.	I/O	DESCRIPTION	
VDD	C2	Р	Supply input (2.7 V to 5.5 V). A 0.1-µF capacitor is required.	
GND	В3	Р	Supply ground	
REG	A2	0	1.8 V regulator output. A 0.1-µF capacitor is required	
OUT-	C3	0	Negative haptic driver differential output	
OUT+	А3	0	Positive haptic driver differential output	
SDA	B1	I/O	I <sup>2</sup> C data	
SCL	C1	1	I <sup>2</sup> C clock	
TRIG/INTZ A1 I/O has an internal pull-down.		·		
NRST  B2  If pin is not used, it should be connected to ground.  Device reset pin (shutdown mode). If pin is not used, it should be con internal pull-up or pull-down).		Device reset pin (shutdown mode). If pin is not used, it should be connected to VDD (no		



## 6 Specifications

## 6.1 Absolute Maximum Ratings

over operating free-air temperature range (unless otherwise noted) (1)

		MIN	MAX	UNIT
Supply Voltage	$V_{DD}$	-0.3	6	V
	NRST	-0.3	6	V
Innut valtage	SDA	-0.3	6	V
Input voltage	SCL	-0.3	6	V
	TRIG/INTZ	-0.3	6	V
Operating free-air ten	nperature range, T <sub>A</sub>	-40	85	°C
Operating junction temperature range, T <sub>J</sub>		-40	150	°C
Storage temperature, T <sub>stg</sub>		-65	150	°C

<sup>(1)</sup> Stresses beyond those listed under Absolute Maximum Ratings may cause permanent damage to the device. These are stress ratings only, which do not imply functional operation of the device at these or any other conditions beyond those indicated under Recommended Operating Conditions. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

## 6.2 ESD Ratings

			MIN	MAX	UNIT
	Clastrostatia diasharas	Human body model (HBM), per ANSI/ESDA/JEDEC JS-001, all pins (1)	-1500	1500	V
V <sub>(ESD)</sub>	Electrostatic discharge	Charged device model (CDM), per JEDEC specification JESD22-C101, all pins (2)	-500	500	V

<sup>(1)</sup> JEDEC document JEP155 states that 500-V HBM allows safe manufacturing with a standard ESD control process.

## 6.3 Recommended Operating Conditions

over operating free-air temperature range (unless otherwise noted)

		MIN	NOM MAX	UNIT
$V_{DD}$	Supply voltage	2.7	5.5	٧
$R_L$	Load impedance	8		Ω
$C_L$	Load capacitance		100	pF
$f_{(LRA)}$	LRA frequency	45	300	Hz

## 6.4 Thermal Information

		DRV2625	
	THERMAL METRIC <sup>(1)</sup>	DSBGA	UNIT
		9 PINS	
$R_{\theta JA}$	Junction-to-ambient thermal resistance	107	°C/W
R <sub>0</sub> JC(top)	Junction-to-case (top) thermal resistance	0.9	°C/W
$R_{\theta JB}$	Junction-to-board thermal resistance	18.1	°C/W
ΨЈТ	Junction-to-top characterization parameter	3.8	°C/W
ΨЈВ	Junction-to-board characterization parameter	18.1	°C/W
R <sub>0JC(bot)</sub>	Junction-to-case (bottom) thermal resistance	_	°C/W

For more information about traditional and new thermal metrics, see the Semiconductor and IC Package Thermal Metrics application report, SPRA953.

<sup>(2)</sup> JEDEC document JEP157 states that 250-V CDM allows safe manufacturing with a standard ESD control process.



## 6.5 Electrical Characteristics

 $T_A = 25 \, ^{\circ}\text{C}$ ,  $V_{DD} = 3.6 \, \text{V}$  (unless otherwise noted)

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
V <sub>(REG)</sub>	Voltage at the REG pin			1.84		V
I <sub>IL</sub>	Digital low-level input current	NRST, TRIG/INTZ, SDA, SCL $V_{DD} = 5.5 \text{ V}, V_{I} = 0 \text{ V}$			100	nA
		SDA, SCL $V_{DD} = 5.5 \text{ V}, V_{I} = V_{DD}$			0.1	
I <sub>IH</sub>	Digital high-level input current	NRST $V_{DD} = 5.5 \text{ V}, V_{I} = V_{DD}$			1	μΑ
		TRIG/INTZ $V_{DD} = 5.5 \text{ V}, V_{I} = V_{DD}$		2.7	3.5	
V <sub>IL</sub>	Digital low-level input voltage	NRST, TRIG/INTZ, SDA, SCL			0.4	V
V <sub>IH</sub>	Digital high-level input voltage	NRST, TRIG/INTZ, SDA, SCL	1.41			V
V <sub>OL</sub>	Digital low-level output voltage	TRIG/INTZ, SDA 3-mA sink current			0.4	V
R <sub>DS(on)</sub>	Drain-source on-state resistance (LS + HS)			0.75		Ω
I <sub>(SD)</sub>	Shutdown current	V <sub>(NRST)</sub> = 0 V		105	180	nA
I <sub>(STBY)</sub>	Standby current	V <sub>(NRST)</sub> = V <sub>DD</sub> In stand-by mode		1.55	2	μΑ
$I_{(Q)}$	Quiescent current	V <sub>(NRST)</sub> = V <sub>DD</sub> In idle mode - no signal		2.5		mA
Z <sub>O(SD)</sub>	Output impedance in shutdown	OUT+ to GND, OUT- to GND		15		kΩ
Z <sub>O(STBY)</sub>	Output impedance in standby	OUT+ to GND, OUT- to GND		15		kΩ
$Z_{LOAD(th)}$	Load impedance threshold for over- current detection	OUT+ to GND, OUT- to GND		4		Ω

## 6.6 Timing Requirements

 $T_A = 25$  °C,  $V_{DD} = 3.6$  V (unless otherwise noted)


		MIN	NOM	MAX	UNIT
$f_{(SCL)}$	Frequency at the SCL pin with no wait states			400	kHz
t <sub>w(H)</sub>	Pulse duration, SCL high	0.6			μs
w(L)	Pulse duration, SCL low	1.3			μs
·su(1)	Setup time, SDA to SCL	100			ns
h(1)	Hold time, SCL to SDA	10			ns
(BUF)	Bus free time between stop and start condition	1.3			μs
su(2)	Setup time, SCL to start condition	0.6			μs
h(2)	Hold time, start condition to SCL	0.6			μs
t <sub>su(3)</sub>	Setup time, SCL to stop condition	0.6			μs

# 6.7 Switching Characteristics

 $T_A = 25 \, ^{\circ}\text{C}, \, V_{DD} = 3.6 \, \text{V} \, \text{(unless otherwise noted)}$ 

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
t <sub>(on)</sub>	Device startup time	from shutdown standby		1		ms
t <sub>(start)</sub>	Waveform startup time	from trigger to output signal		1		ms
f <sub>O(PWM)</sub>	PWM output frequency (in OUT+ and OUT-)			20.5		kHz



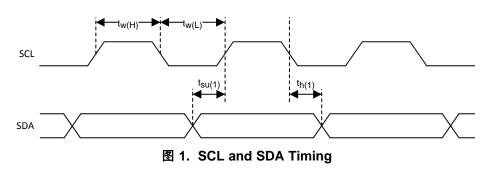


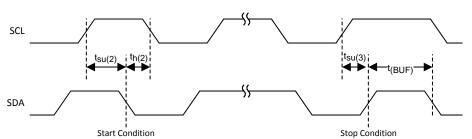


图 2. Timing for Start and Stop Conditions




## 6.8 Typical Characteristics

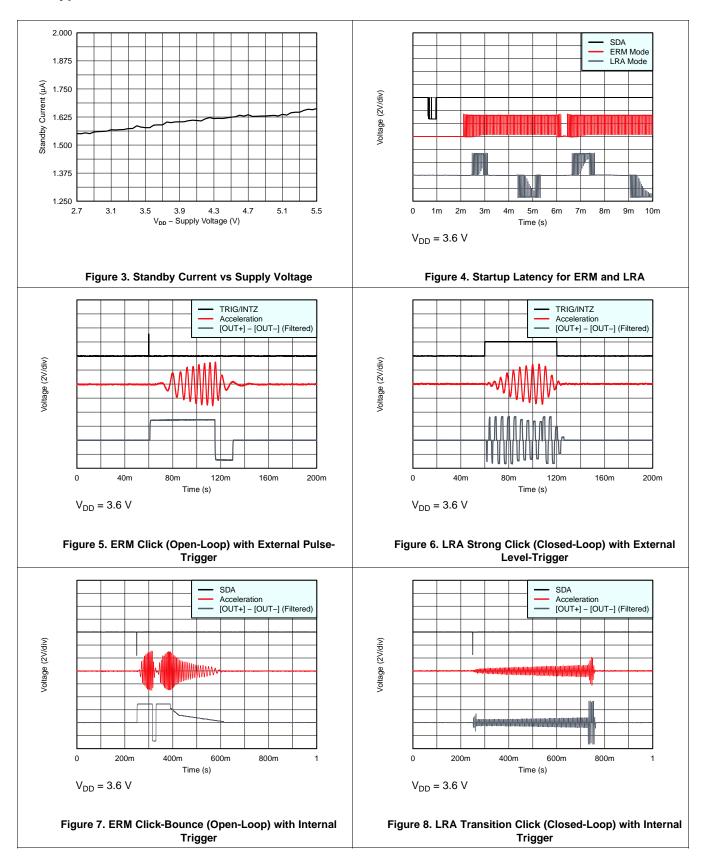

# TEXAS INSTRUMENTS

## **Typical Characteristics (continued)**

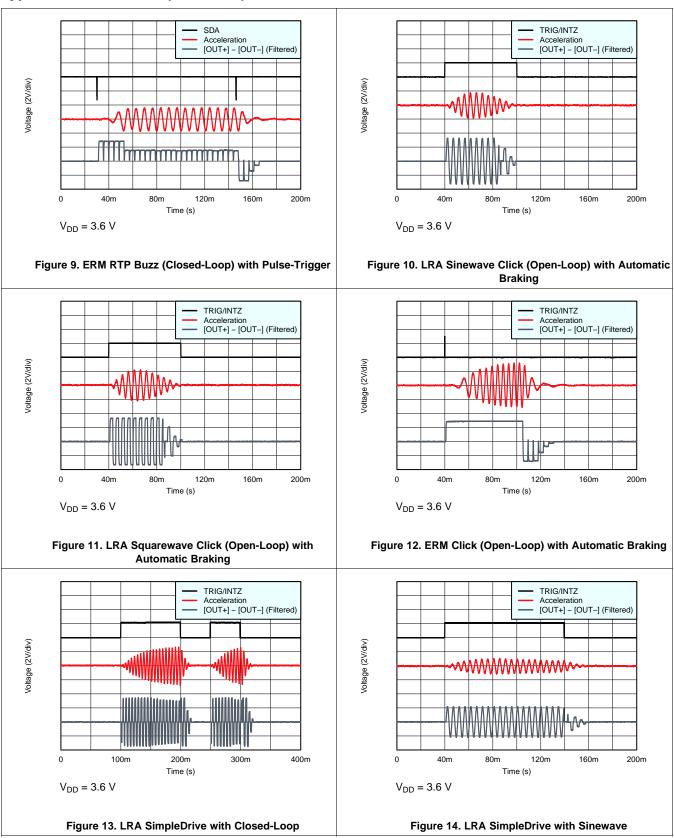



## 7 Parameter Measurement Information

## 7.1 Test Setup for Graphs




图 15. Test Setup

#### 7.1.1 Default Test Conditions

- V<sub>DD</sub> = 3.6 V, unless otherwise noted.
- Real actuators (as opposed to modeled actuators) were used as loads for both ERM and LRA modes unless otherwise noted.




## 8 Detailed Description

#### 8.1 Overview

The DRV2625 device is a haptic driver that relies on a proprietary closed-loop architecture to deliver sharp, strong, and consistent haptic effects while optimizing power consumption. The internal library and loopable waveform sequencer, the automatic overdrive, and the braking simplifies the process of generating crisp and optimum haptic effects, reducing the burden imposed into the processing unit. The DRV2625 device has an automatic go-to-standby state and a battery preservation function to help reduce power consumption without user intervention. The NRST pin allows for a full shutdown state for additional power savings. The waveform shape selection allows for sine-wave and square-wave drive to customize the haptic feel as well as the audible performance. Off-resonance driving with automatic braking simplifies the implementation of non-resonant haptic solutions.

## 8.2 Functional Block Diagram

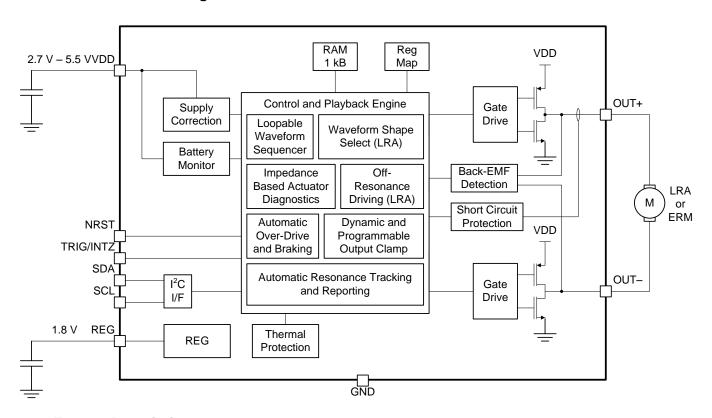

## 8.3 Feature Description

## 8.3.1 Support for ERM and LRA Actuators

The DRV2625 device supports both ERM and LRA actuators. The LRA\_ERM bit must be configured to select the type of actuator that the device uses.

## 8.3.2 Smart-Loop Architecture

The smart-loop architecture is an advanced closed-loop system that optimizes the performance of the actuator and allows for failure detection. The architecture consists of automatic resonance tracking and reporting (for an LRA), automatic level calibration, accelerated startup and braking, resistance based diagnostics routines, and other proprietary algorithms.



## 8.3.2.1 Auto-Resonance Engine for LRA

The DRV2625 auto-resonance engine tracks the resonant frequency of an LRA in real time, effectively locking onto the resonance frequency after half of a cycle. If the resonant frequency shifts in the middle of a waveform for any reason, the engine tracks the frequency from cycle to cycle. The auto-resonance engine accomplishes tracking by constantly monitoring the back-EMF of the actuator. Note that the auto-resonance engine is not affected by the auto calibration process, which is only used for level calibration. No calibration is required for the auto resonance engine.

## 8.3.2.2 Real-Time Resonance-Frequency Reporting for LRA

The smart-loop architecture makes the resonant frequency of the LRA available through I<sup>2</sup>C. Because frequency reporting occurs in real time, it must be polled while the DRV2625 device synchronizes with the LRA. The polled data should not be polled when the actuator is idle or braking.

## 8.3.2.3 Automatic Switch to Open-Loop for LRA

In the event that an LRA produces a non-valid back-EMF signal, the DRV2625 device automatically switches to open-loop operation and continues to deliver energy to the actuator in overdrive mode at a default and configurable frequency. If the LRA begins to produce a valid back-EMF signal, the auto-resonance engine automatically takes control and continues to track the resonant frequency in real time. When synchronized, this mode uses all of the benefits of the smart-loop architecture.

$$f_{\text{(LRA\_NO-BEMF)}} \approx \frac{1}{2 \times \left( t_{\text{(DRIVE\_TIME[4:0])}} - t_{\text{(ZC\_DET\_TIME[1:0])}} \right)}$$
 (1)


The DRV2625 device offers an automatic transition to open-loop mode without the re-synchronization option. This feature is enabled by setting the LRA\_AUTO\_OPEN\_LOOP bit. The transition to open-loop mode only occurs when the driver fails to synchronize with the LRA. The AUTO\_OL\_CNT[1:0] parameter can be adjusted to set the amount of non-synchronized cycles allowed before the transition to the open-loop mode. Note that the open-loop mode does not receive benefits from the smart-loop architecture, such as automatic overdrive and braking.

$$f_{(LRA\_OL)} = \frac{1}{OL\_LRA\_PERIOD[6:0] \times 97.56 \times 10^{-6}}$$
 (2)

## 8.3.2.4 Automatic Overdrive and Braking

A key feature of the DRV2625 is the smart-loop architecture which employs actuator feedback control for both ERMs and LRAs. The feedback control desensitizes the input waveform from the motor-response behavior by providing automatic overdrive and automatic braking.

An open-loop haptic system typically drives an overdrive voltage at startup that is higher than the steady-state rated voltage of the actuator to decrease the startup latency of the actuator. Likewise, a braking algorithm must be employed for effective braking. When using an open-loop driver, these behaviors must be contained in the input waveform data. Consider the example of an ERM actuator of Motor A and another of Motor B. The ideal input waveform in open loop is different (see 16). In contrast, by using the smart-loop technology with automatic overdrive and braking, the same input waveform will work optimally for both actuators (see 17). The smart-loop architecture works equally well for LRAs with a combination of feedback control and an autoresonance engine.

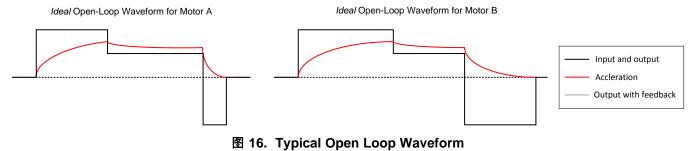

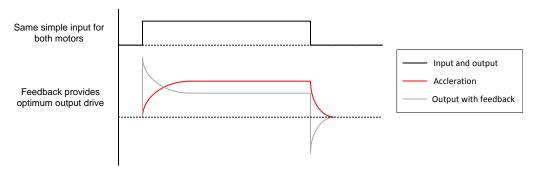


图 17. Waveform Simplification With Smart Loop

#### 8.3.2.4.1 Startup Boost

To reduce the actuator start-time performance, the DRV2625 device has an overdrive boost feature that applies higher loop gain to transient response of the actuator.

#### 8.3.2.4.2 Brake Factor

To optimize the actuator brake-time performance, the DRV2625 device provides a means to increase the gain ratio between braking and driving gain. Higher feedback-gain ratios reduce the brake time, however, these ratios also reduce the stability of the closed-loop system. The FB\_BRAKE\_FACTOR parameter can be adjusted to set the brake factor.

## 8.3.2.5 Automatic Level Calibration

The smart-loop architecture uses actuator feedback by monitoring the back-EMF behavior of the actuator. The level of back-EMF voltage can vary across actuator manufacturers because of the specific actuator construction. Auto calibration compensates for this variation and also performs scaling for the desired actuator according to the specified rated voltage and overdrive clamp-register settings. When auto calibration is performed, a 100% signal level at any of the DRV2625 input interfaces supplies the rated voltage to the actuator at steady-state. The feedback allows the output level to increase above the rated voltage level for automatic overdrive and braking, but the output level does not exceed the programmable overdrive clamp voltage.

#### 8.3.2.5.1 Automatic Compensation for Resistive Losses

The DRV2625 device automatically compensates for resistive losses in the driver. During the automatic level-calibration routine, the resistance of the actuator is checked and the compensation factor is determined and stored in the A\_CAL\_COMP parameter.

#### 8.3.2.5.2 Automatic Back-EMF Normalization

The DRV2625 device automatically compensates for differences in back-EMF magnitude between actuators. The compensation factor is determined during the automatic level-calibration routine and the factor is stored in the A\_CAL\_BEMF parameter.

## 8.3.2.5.3 Calibration Time Adjustment

The duration of the automatic level-calibration routine has an impact on accuracy. The impact is highly dependent on the start-time characteristic of the actuator. The auto-calibration routine expects the actuator to have reached a steady acceleration before the calibration factors are calculated. Because the start-time characteristic can be different for each actuator, the AUTO\_CAL\_TIME parameter can change the duration of the automatic level-calibration routine to optimize calibration performance. Alternatively, the duration of the calibration routine can be adjusted by the trigger by selecting the option in the AUTO\_CAL\_TIME parameter.



#### 8.3.2.5.4 Loop-Gain Control

The DRV2625 device allows the user to control how fast the driver attempts to match the back-EMF (and thus motor velocity) and the input signal level. Higher loop-gain (or faster settling) options result in less-stable operation than lower loop gain (or slower settling). The LOOP\_GAIN parameter controls the loop gain.

#### 8.3.2.5.5 Back-EMF Gain Control

The BEMF\_GAIN parameter sets the analog gain for the back-EMF amplifier. The auto-calibration routine automatically populates the BEMF\_GAIN bit with the most appropriate value for the actuator.

Modifying the SAMPLE\_TIME parameter also adjusts the back-EMF gain. The higher the sample time the higher the gain.

#### 8.3.2.6 Actuator Diagnostics

The DRV2625 device is capable of determining whether the actuator is not present (open) or shorted. If a fault is detected during the diagnostic process, the DIAG\_RESULT bit is asserted.

The DRV2625 device also features actuator resistance measurement, which is available in the DIAG\_Z\_RESULT parameter.

$$R_{(act)} = 478.43 \cdot \frac{DIAG_Z_RESULT[7:0]}{719 + 4 \cdot CURRENT_K[7:0]}$$
(3)

## 8.3.2.7 Automatic Re-Synchronization

For LRA actuators, the DRV2625 device features automatic re-synchronization, which automatically pushes the actuator in the correct direction when a waveform begins playing while the actuator is moving. If the actuator is at rest when the waveform begins, the DRV2625 device drives in the default direction.

#### 8.3.3 Open-Loop Operation

In the event that open-loop operation is desired the DRV2625 device includes an open-loop drive mode that overrides any close-loop parameter and is available through the digital interface.

When activated, the digital open-loop mode is available for pre-stored waveforms as well as for RTP mode.

The dynamic range for open-loop operation is set by the OD\_CLAMP[7:0], which sets the maximum peak value. Amplitude codes (either through RTP or internal memory) scales the output accordingly.

For LRA actuators, the OL\_LRA\_PERIOD parameter programs the operating frequency, which is derived from the PWM output frequency, f<sub>O(PWM)</sub>.

## 8.3.3.1 Waveform Shape Selection for LRA

The DRV2625 offers a selection of either sine-wave or square-wave waveform shape in open-loop mode. The WAVE\_SHAPE\_LRA parameter selects which shape to use. The WAVE\_SHAPE\_LRA parameter is ignored in ERM mode and in closed-loop mode.

#### 8.3.3.2 Automatic Braking in Open Loop

The DRV2625 offers automatic braking in open-loop for both ERM and LRA. To accomplish automatic braking, the DRV2625 switches to close-loop during the braking period, therefore resorting to the close-loop waveform shape. The AUTO\_BRK\_OL parameter can be use to enable or disable the automatic braking feature. To use the automatic braking feature, the device must be configured appropriately for closed-loop operation.

#### 8.3.4 Flexible Front-End Interface

The DRV2625 device offers multiple ways to launch and control haptic effects. The MODE parameter selects from either using the waveform sequencer (and hence trigger the waveforms with either an internal or external trigger), or by using RTP mode. Additional flexibility is provided by the multi-purpose TRIG/INTZ pin, which can be configured with the TRIG\_PIN\_FUNC parameter.



## 8.3.4.1 Internal Memory Interface

The DRV2625 device has two internal-ROM libraries designed by Immersion called TS2200. The first library works in closed-loop mode, and is designed for LRA actuators. The second library is specifically tuned for ERMs operated in open-loop mode. If additional adjustments are required to the library effect to optimize performance of a particular actuator model, the library parametrization parameters (ODT, SPT, SNT and BRT) can be used for fine tuning. The library selection is done by the LIB\_SEL bit.

## 表 2. Library Table

LIBRARY	ACTUATOR	RATED VOLTAGE	OVERDRIVE VOLTAGE	RISE TIME	BRAKE TIME
Α	LRA Closed-Loop	TBD	TBD	AUTO	AUTO
В	ERM Open-Loop	1.3 V	3 V	40 ms to 60 ms	20 ms to 40 ms

Using the internal library has several advantages including:

- Offloading processing requirements, such as digital streaming (RTP).
- Improving latency by only requiring a trigger signal.
- Reducing I<sup>2</sup>C traffic by eliminating the requirement to transfer waveform data

## 8.3.4.1.1 Library Parameterization

The waveforms stored in the internal library are augmented by the time offset parameters. This augmentation occurs only for the waveforms stored in the internal library and not for RTP mode. The purpose of this functionality is to add *time stretching* (or time shrinking) to the waveform. This functionality is useful for customizing the entire library of waveforms for a specific actuator rise time and fall time.

The time parameters that can be stretched or shrunk include:

**ODT** Overdrive time

SPT Sustain positive time
SNT Sustain Negative Time

**BRT** Brake Time

The time values are additive offsets and are 8-bit signed values. The default offset of these values is 0. Positive values add and negative values subtract from the *time* value of the effect that is currently played. The most positive value in the waveform is automatically interpreted as the overdrive time, and the most negative value in the waveform is automatically interpreted as the brake time. These time-offset parameters are applied to both voltage-time pairs and linear ramps. For linear ramps, linear interpolation is stretched (or shrunk) over the two operative points for the period.

$$t_{(final)} = t_{(orig)} + t_{(ofs)}$$
(4)

#### 8.3.4.1.2 Playback Interval

The internal memory ticks are by default interpreted as 5-ms intervals. if additional granularity is desired, then a 1-ms interval can be selected by using the PLAYBACK\_INTERVAL bit.

## 8.3.4.1.3 Waveform Sequencer

The waveform sequencer queues waveform identifiers for playback. Eight sequence registers queue up to eight waveforms for sequential playback. A waveform identifier is an integer value referring to the index position of a waveform in the internal library. Once the user has selected the Waveform Playback as the process to run in the MODE[1:0] parameter, playback begins at WAV\_FRM\_SEQ1 when the user triggers the process (either with the GO bit or externally, if configured to do so). When playback of that waveform ends, the waveform sequencer plays the waveform identifier held in WAV\_FRM\_SEQ2 if the next waveform is non-zero. The waveform sequencer continues in this way until it reaches an identifier value of zero or until all eight identifiers are played, whichever scenario is reached first.



The waveform identifier range is 1 to 127. The MSB of each sequence register can implement a delay between sequence waveforms. When the MSB is high, bits [6:0] indicate the length of the wait time. The wait time for that step then becomes WAV FRM SEQ[6:0] x 10 ms.

The DRV2625 allows for looping each waveform a number of times before moving onto the next waveform identifier. The waveform-looping functionality can be configured by the WAV\_SEQ\_LOOP parameters.

The DRV2625 also allows for looping the entire waveform sequencer by configuring the WAV\_SEQ\_MAIN parameter. In this case, the waveform sequencer will loop all valid WAV\_FRM\_SEQn identifiers according to the number specified in the WAV\_SEQ\_MAIN. For example, if the first and second identifiers are valid (for example 1 and 2), the third identifier is 0 (signaling to stop), and the WAV\_SEQ\_MAIN is configured to loop once (play the waveform sequence twice), then the DRV2625 device will play waveform 1, then waveform 2, then waveform 1 then waveform 2, and then go to standby.

## 8.3.4.2 Real-Time Playback (RTP) Interface

The real-time playback mode is a simple, single 8-bit register interface that holds an amplitude value. When real-time playback is enabled, the RTP\_INPUT parameter, which represents an amplitude value, is sent directly to the playback engine. Once triggered, the value is played until the user sends a stop trigger or removes the device from RTP mode. The RTP mode is a digital streaming mode where the user enters a register value over the I<sup>2</sup>C. Because of the similarity between RTP mode and legacy PWM modes, any API (application-programming interface) designed for use with a PWM generator in the host processor can write the data values over the I<sup>2</sup>C rather than writing the data values to the host timer. This ability frees a timer in the host while retaining compatibility with the original software.

For the LRA, the DRV2625 device automatically tracks the resonance frequency unless the CONTROL\_LOOP bit is set to open loop operation. If the CONTROL\_LOOP bit is set to open loop, the LRA is driven according to the open-loop frequency set in the OL\_LRA\_PERIOD parameter.

## 8.3.4.3 Process Trigger

All processes (RTP, Waveform Sequencer, Calibration and Diagnostics) in the DRV2625 device are triggered processes, which means that the user has to trigger the process before the process begins. A trigger can be achieved by software using the GO bit, or by hardware using the TRIG/INTZ pin. The process stops once it finishes, or if a stop trigger is sent. For information on external trigger functionality refer to Multi-Purpose Pin Functionality.

A typical process (either RTP, Waveform Sequencer, Calibration or Diagnostics) will start and end follwing the diagram in 图 18.

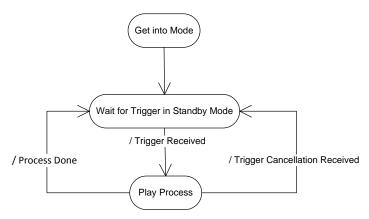


图 18. Typical Process Execution

#### 8.3.5 Noise Gate Control

The DRV2625 device features a noise gate that filters out any voltage smaller than a particular threshold to prevent unintended vibrations. The NG\_THRESH bit controls the threshold.



## 8.3.6 Edge Rate Control

The DRV2625 output driver implements edge rate control (ERC). This control ensures that the rise and fall characteristics of the output drivers do not emit levels of radiation that could interfere with other circuitry common in mobile and portable platforms. Because of ERC most system do not require external output filters, capacitors, or ferrite beads.

#### 8.3.7 Constant Vibration Strength

The DRV2625 device features power-supply feedback. If the supply voltage drifts over time (because of battery discharge, for example), the vibration strength remains the same as long as enough supply voltage is available to sustain the required output voltage.

## 8.3.8 Battery Voltage Reporting

During playback, the DRV2625 device provides cycle-by-cycle voltage measurement of the  $V_{DD}$  pin. The VBAT[7:0] parameter provides this information.

#### 8.3.9 Ultra Low-Power Shutdown

Setting the device into shutdown state by using the NRST pin reduces the power consumption to sub-micro levels, allowing the system to preserve power when haptics are not required. In this state, register content is not preserved.

## 8.3.10 Automatic Go-To-Stand-by (Low Power)

The DRV2625 automatically goes into a low power standby state when not in use. In this state, register content is preserved and I<sup>2</sup>C communication is available. The DRV2625 features a fast turn-on time from standby when requested to play a waveform

## 8.3.11 I<sup>2</sup>C Watchdog Timer

If an I<sup>2</sup>C stops unexpectedly, the possibility exists for the I<sup>2</sup>C protocol to remain in a *hanged* state. To allow for the recovery of the communication without having to power cycle the device, the DRV2625 device includes an automatic watchdog timer that resets the I<sup>2</sup>C protocol without user intervention after 4.33 ms.

#### 8.3.12 Device Protection

The DRV2625 device has integrated protection circuits for thermal and over-current protection, as well as for UVLO. When such conditions are present, the DRV2625 device will immediately stop playback and go into the standby state. The respective status bit will be set in register 0x01, which will be cleared upon reagister read. An interrupt can be fired if the DRV2625 device is configured to do so.

If the critical condition disappears (the over-current condition goes away), the DRV2625 device will proceed with normal operation, but because the status bits are sticky, they will continue to be asserted until the status register is read.

## 8.3.12.1 Thermal Sensor

The DRV2625 has a thermal circuit that immediately puts the device in standby state and sets the OVER\_TEMP bit in the event of an over-temperature condition.

If the interrupt functionality is selected in the TRIG\_PIN\_FUNC parameter and the interrupt is not masked, and interrupt will be fired to alert the host processor of a critical condition.

#### 8.3.12.2 Over-Current Protection

During waveform playback, if the impedance at the output pin of the DRV2625 device is too low, the DRV2625 device immediately goes into standby state and latches the over-current flag (OC\_DETECT bit).

If the interrupt functionality is selected in the TRIG\_PIN\_FUNC parameter and the interrupt is not masked, an interrupt will be fired to alert the host processor of a critical condition.



#### 8.3.12.3 VDD UVLO Protection

The DRV2625 device has a battery monitor that monitors the VDD level to ensure that is above a configurable threshold (using UVLO\_THRES[2:0] parameter).

In the event of a VDD droop, the DRV2625 device immediately goes into standby state to reduce current consumption and latches the UVLO flag (UVLO bit).

If the interrupt functionality is selected in the TRIG\_PIN\_FUNC parameter and the interrupt is not masked, and interrupt will be fired to alert the host processor of a critical condition.

#### 8.3.12.4 Brownout Protection

The DRV2625 device has on-chip brownout protection. When activated, a reset signal is issued that returns the DRV2625 device to the initial default state. If the regulator voltage  $V_{(REG)}$  goes below the brownout protection threshold ( $V_{(BOT)}$ ) the DRV2625 device automatically shuts down. When  $V_{(REG)}$  returns to the typical output voltage (1.8 V) the DRV2625 device returns to the initial device state. The brownout protection threshold ( $V_{(BOT)}$ ) is typically at 1.6 V.

#### 8.3.13 POR

The POR circuit was designed to enable the device only when both VDD and REG voltages are at a healthy level. If REG voltage level were to dip below the reset threshold, the device will automatically abort any process and shutdown until appropriate power levels are available, once a valid voltage is present in both VDD and REG nodes, the device will proceed with the power-up sequence and return to the default state. If VDD drops below UVLO with VREG still at a healthy level, the device will immediately go into standby state.

## 8.3.14 Silicon Revision Control

The DRV2625 has a revision control implemented in CHIPID[3:0] and REV[3:0] parameter (located in register 0x00). This feature allows an external controller to determine which device is connected to it and select the appropriate firmware to control the device, which makes firmware development easier to port from one platform to another.

#### 8.3.15 Support for LRA and ERM Actuators

The DRV2625 device supports both LRA and ERM actuators. The default state is LRA mode, but can be changed by using the LRA ERM bit.

## 8.3.16 Multi-Purpose Pin Functionality

To enhance the flexibility of the DRV2625, the TRIG/INTZ pin is a configurable, multi-purpose pin that takes different functionality depending on the mode of operation. The pin can serve as an input trigger-pulse pin, as an input trigger-level (enable) pin and as an output interrupt pin. Note that the TRIG/INTZ pin can only execute one function at a time (either trigger-edge, trigger-level (enable) or interrupt function), therefore if a particular function is selected (for example, TRIG/INTZ configured as input trigger-edge), then the other functionality will not be available (for example, interrupt).

## 8.3.16.1 Trigger-Pulse Functionality

The trigger-pulse functionality allows for an external processor to initiate the process (either waveform sequencer, RTP, diagnostics or calibration) by pulsing the TRIG/INTZ pin. The process will initiate and play until it is done, at which point it will go back into standby mode to preserve power. If a stop trigger (another trigger-pulse) is received before the routine has finished, the routine will stop and the device will go back into standby state. In the case of diagnostics mode, a stop trigger causes the diagnostic routine to abort and no result will be reported. In the case of automatic level calibration routine, a stop trigger will cause the calibration to abort unless the AUTO\_CAL\_TIME[2:0] is set to trigger control, in which case the stop trigger is required for the calibration to complete, and the calibration will graciously finish and provide the expected output. Also note that a stop trigger can also be achieved by writing 0 to the GO bit.

The minimum pulse width duration is 1 µs.

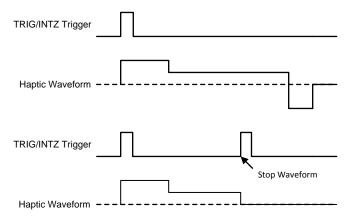


图 19. TRIG/INTZ Functionality in Trigger-Pulse Mode

## 8.3.16.2 Trigger-Level (Enable) Functionality

The trigger-level (enable) functionality allows for an external micro-controller to wake up the DRV2625 by asserting the TRIG/INTZ pin (high), which immediately starts playing the process (either waveform sequencer, RTP value, diagnostics or auto-calibration). Once the TRIG/INTZ pin de-asserts (low) the device goes back to standby state to preserve power. If braking is desired before going into standby state, the AUTO\_BRK\_INTO\_STBY bit can be set to allow automatic braking. Note that automatic braking is ignored during calibration.

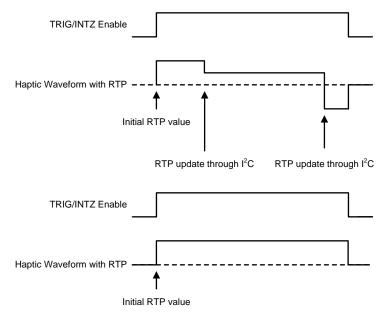


图 20. TRIG/INTZ Functionality in Trigger-Level (Enable) Mode

## 8.3.16.3 Interrupt Functionality

The interrupt functionality allows for the DRV2625 to communicate to an external processor that a particular condition has occurred. When configured as an interrupt, the TRIG/INTZ pin becomes an output in open-drain configuration. An external pull-up is required for this mode. When asserted, the TRIG/INTZ pin will pull down the node until the interrupt is cleared (which is done by a reading the status register). All interrupts are maskable. A description of the supported interrupts is as follows:

OC\_DETECT is flagged if an over-current event happens in the output stage during a process execution (such as waveform playback or auto-calibration).



OVER\_TEMP is flagged if the junction temperature goes above the thermal threshold during a process execution (such as waveform playback, diagnostics or auto-calibration).

UVLO is flagged if VDD drops below the VDD\_THRES voltage during a process execution (such as waveform playback, diagnostics or auto-calibration).

PROCESS\_DONE is flagged when the process (waveform sequencer, diagnostics or calibration) finishes. The PROCESS\_DONE bit does not assert if the process is interrupted (such as with a stop trigger or by a critical condition). Note that RTP will never cause the PROCESS\_DONE to assert because RTP never finishes on its own.

PRG\_ERROR is flagged if the data read in the RAM is corrupted.

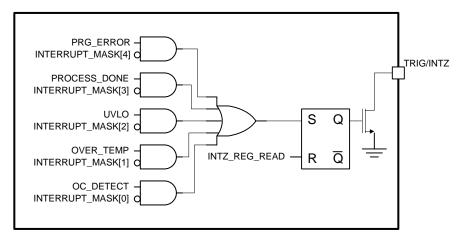


图 21. TRIG/INTZ Functionality in Interrupt Mode

Critical conditions, such as UVLO, over-temperature or over-current will not be monitored while the device is in standby state. However, UVLO and over-temperature conditions will be monitored during I<sup>2</sup>C communication is ongoing, even if the device is in standby state.

## 8.3.17 Automatic Transition to Standby State

The DRV2625 allows for automatic transition to standby state to preserve power. If the device goes into standby and a new waveform is triggered, the DRV2625 will wake-up and immediately play the requested waveform.

#### 8.3.18 Automatic Brake into Standby

The DRV2625 allows for automatic braking before going into standby. If the AUTO\_BRK\_INTO\_STBY is asserted, the device will brake the actuator (if necessary) before going into standby. This functionality will be bypassed in the event of a critical condition, such as over-temperature, over-current, UVLO, and NRST assertion.

## 8.3.19 Battery Monitoring and Power Preservation

The DRV2625 device continuously monitors the VDD voltage. In the event of a VDD voltage glitch that goes below the UVLO\_THRES[2:0] voltage, the DRV2625 immediately stops any playback and goes into standby state. The UVLO status bit will assert and, if configured, the TRIG/INTZ pin will be asserted. Note that going into standby due to a VDD glitch will bypass any braking, even if AUTO\_BRK\_INTO\_STBY is enabled. I<sup>2</sup>C communication will not be interrupted if a UVLO condition happens. However, because a UVLO condition could potentially corrupt such communication, TI recommends checking the UVLO flag after I<sup>2</sup>C transactions as a way to verify that the content was not corrupted in the process.

The DRV2625 also features a battery preservation mode that monitors the battery, and if VDD voltage drops below a specified threshold (see BAT\_LIFE\_EXT\_LVL1[7:0] and BAT\_LIFE\_EXT\_LVL2[7:0] parameters) will automatically clamp the maximum output voltage, as specified by the user (see OD\_CLAMP\_LVL1[7:0] and OD CLAMP LVL2[7:0] parameters).



#### 8.4 Device Functional Modes

#### 8.4.1 Power States

The DRV2625 device has multiple power states to optimize power consumption. In the event of a critical condition, the DRV2625 device goes immediately into the standby state. 图 22 shows the transitions into and out of each state.

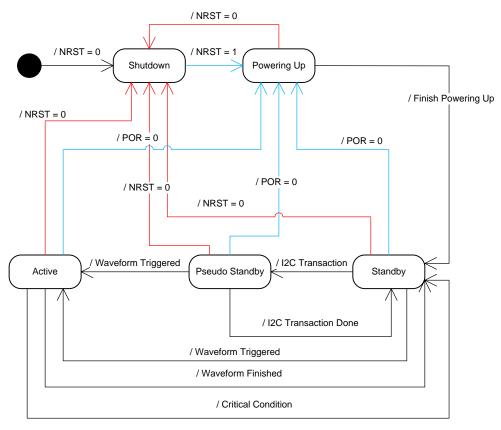


图 22. Power State Diagram

## 8.4.2 Operation With $V_{DD}$ < 2.5 V (Minimum $V_{DD}$ )

Operating the device with a V<sub>DD</sub> value below 2.5 V is not recommended.

## 8.4.3 Operation With $V_{DD} > 6 V$ (Absolute Maximum $V_{DD}$ )

The DRV2625 device is designed to operate at up to 5.5 V with an absolute maximum voltage of 6 V . If exposed to voltages above 6 V, the device can suffer permanent damage.

## 8.4.4 Operation in Shutdown State

The NRST pin of the DRV2625 device gates the power-up of the device. When NRST is asserted (logic low), all internal blocks of the device (including I<sup>2</sup>C controller) are off to achieve ultra low power.

When the NRST pin is deaserted (logic high), the DRV2625 device powers-up, loads all the default conditions and goes into standby state to preserve power.

Asserting the NRST pin has an immediate effect. Any process being executed will be aborted immediately and the device will go into shutdown state.

The DRV2625 device allows for the NRST to be permanently tied directly to VDD, in which case the shutdown state will be bypassed.



## Device Functional Modes (接下页)

## 8.4.5 Operation in STANDBY State

The DRV2625 is optimized for power preservation, therefore it will automatically go into standby when not in use.

In standby state, I<sup>2</sup>C communication is available and register content is preserved.

Stand-by state turns-off all non-essential blocks to preserve power, but features a fast turn on time that will allows for low latency haptic playback from this mode.

If the host controller wants to force the DRV2625 device into standby, the host controller can do so by sending a stop trigger, which can be done by writing a 0 to the GO bit, or, if using an external trigger, by following the appropriate mechanism as described in Process Trigger.

The DRV2625 features an automatic braking option that will make the drive brake the actuator before going into standby state. The automatic braking feature will be executed every time the device goes into standby state, with the exception of a critical condition (such as over-current, thermal shutdown or UVLO). The automatic braking feature can be enabled or disabled by using the AUTO\_BRK\_INTO\_STBY bit.

## 8.4.6 Operation in ACTIVE State

The DRV2625 goes into active mode only when it must run a process (either waveform playback, calibration or diagnostics).

When the device gets into active mode, the first thing done is to check for critical conditions (such as over-current, thermal shutdown or UVLO). If a critical condition is present, the DRV2625 device sets the appropriate flag (and fires an interrupt if configured to do so), and immediately goes into standby. If no critical condition is present, the DRV2625 device runs the routine and when finished returns to the standby state.

If a critical condition happens during a routine execution, the routine is aborted immediately and the device sets the appropriate flag (and fires an interrupt if configured to do so), and immediately goes into standby.

If a stop trigger is received while a routine is being executed, the routine will be stopped and the device will go into standby state. If the automatic braking option is enabled (AUTO\_BRK\_INTO\_STBY bit), then the DRV2625 device will brake the actuator before going into standby state.

## 8.4.7 Changing Modes of Operation

The DRV2625 device has 8 parameters that control different aspects of modes of operation, namely: LRA\_ERM, MODE[1:0], CONTROL\_LOOP, TRIG\_PIN\_FUNC, AUTO\_BRK\_INTO\_STBY, AUTO\_BRK\_OL, and LRA\_WAVE\_SHAPE. If any of these parameters are changed in the middle of a process execution (waveform playback, diagnostics or calibration), the DRV2625 will interpret the change as an abort and will go into standby.

LRA\_ERM parameter selects the actuator type.

MODE[1:0] selects between the 4 available process that can be run, namely RTP and Waveform Sequencer for waveform playback, diagnostics and calibration. The DRV2625 device will be in standby state until a trigger is received. At that point the device will execute the process selected in the MODE[1:0] parameter. Once finished, the DRV2625 device will return into standby state.

CONTROL LOOP selects between open loop and closed loop.

TRIG\_PIN\_FUNC parameter selects the functionality of the TRIG/INTZ pin among the 3 possibilities: pulse trigger, level trigger and interrupt.

AUTO\_BRK\_INTO\_STBY parameter enables automatic braking when going into standby. The DRV2625 device will monitor the back-EMF of the actuator before going into standby, and if the back-EMF is moving, the actuator will brake and then go into standby. Note that for this function to be executed in open loop, the AUTO\_BRK\_OL pin must be enabled.

AUTO\_BRK\_OL parameter enables automatic braking for open loop mode. If enabled, every time a waveform is configured with a negative amplitude, the DRV2625 device will brake the actuator. This feature assumes that the actuator has been calibrated and works under closed-loop conditions.

LRA\_WAVE\_SHAPE parameter (available for LRA only) allows for selecting the waveform shape to be used when driving the LRA in open loop. In closed-loop this parameter will be ignored.



## 8.5 Operation During Exceptional Conditions

This section lists different exceptional conditions and the ways that the DRV2625 device operates during these conditions. This section also describes how the device goes into and out of these states.

## 8.5.1 Operation With No Actuator Attached

In open loop mode, the DRV2625 device will drive the waveform as intended by the user.

In LRA closed-loop mode, if a waveform is played without an actuator connected to the OUT+ and OUT- pins, the output pins toggle. However, the toggling frequency is not predictable.

In ERM closed-loop mode, the output pins will attempt to drive, however the amplitude is not predictable.

## 8.5.2 Operation With a Non-Moving Actuator Attached

In the ERM case, the DRV2625 device will attempt to overdrive the actuator until movement is detected.

The model of a non-moving actuator can be simplified as a resistor. If a resistor (with similar loading as an LRA, such as 25  $\Omega$ ) is connected across the OUT+ and OUT- pins, and the DRV2625 device is in LRA closed-loop mode, the output pins toggle at a default f. In LRA open-loop mode the output pins toggle at the specified open-loop frequency.

## 8.5.3 Operation With a Short at REG Pin

If the REG pin is shorted to GND, the device turns off. When the short is removed, the device starts in the default condition.

## 8.5.4 Operation With a Short at OUT+, OUT-, or Both

During playback, if any of the output pins (OUT+ or OUT-) is shorted to V<sub>DD</sub>, GND, or to each other, a current-protection circuit automatically enables to shut-down the output stage, the OC\_DETECT bit is asserted (and an interrupt is fired if enabled) and the DRV2625 device will go into standby state.

The DRV2625 device only checks for shorts when running a process (either RTP, waveform sequencer, diagnostics or calibration). If the short occurs when the device is idle, the short is not detected until the device attempts to run a process.



## 8.6 Programming

## 8.6.1 Auto-Resonance Engine Programming for the LRA

## 8.6.1.1 Drive-Time Programming

The resonance frequency of each LRA actuator varies based on many factors and is generally dominated by mechanical properties. The auto-resonance engine-tracking system is optimized by providing information about the resonance frequency of the actuator. The DRIVE\_TIME[4:0] bit is used as an initial guess for the half-period of the LRA. The drive time is automatically and quickly adjusted for optimum drive. For example, if the LRA has a resonance frequency of 200 Hz, then the drive time should be set to 2.5 ms.

For ERM actuators, the DRIVE\_TIME[4:0] bit controls the rate for back-EMF sampling. Lower drive times imply higher back-EMF sampling frequencies which cause higher peak-to-average ratios in the output signal, and requires more supply headroom. Higher drive times imply lower back-EMF sampling frequencies which cause the feedback to react at a slower rate.

## 8.6.1.2 Current-Dissipation Time Programming

To sense the back-EMF of the actuator, the DRV2625 device goes into high impedance mode. However, before the device enters this mode, the device must dissipate the current in the actuator. The DRV2625 device controls the time allocated for dissipation-current through the IDISS\_TIME[3:0] parameter.

## 8.6.1.3 Blanking Time Programming

After the current in the actuator dissipates, the DRV2625 device waits for a blanking time of the signal to settle before the back-EMF analog-to-digital (AD) conversion converts. The BLANKING\_TIME[3:0] parameter controls this time.

## 8.6.1.4 Zero-Crossing Detect-Time Programming

When the blanking time expires, the back-EMF AD monitors for zero crossings. The ZC\_DET\_TIME[1:0] parameter controls the minimum time allowed for detecting zero crossings.

## 8.6.2 Automatic-Level Calibration Programming

## 8.6.2.1 Rated Voltage Programming

The rated voltage is the driving voltage that the driver will output during steady state. However, in closed-loop drive mode, temporarily having an output voltage that is higher than the rated voltage is possible.

The RATED\_VOLTAGE[7:0] parameter sets the rated voltage for the closed-loop drive modes.

$$V_{(ERM-CL_AV)} = 21.88 \times 10^{-3} RATED_VOLTAGE[7:0]$$
 (5)

$$V_{(LRA-CL\_RMS)} = \frac{20.58 \times 10^{-3} \times RATED\_VOLTAGE[7:0]}{\sqrt{1 - (4 \times t_{(SAMPLE\_TIME)} + 300 \times 10^{-6}) \times f_{(LRA)}}}$$
(6)

In open-loop mode, the RATED\_VOLTAGE[7:0] parameter is ignored. Instead, the OD\_CLAMP[7:0] parameter is used to set the full-scale voltage for the open-loop drive modes.

$$V_{(ERM-OL_AV)} = 21.59 \times 10^{-3} \text{ OD\_CLAMP}[7:0]$$
 (7)

$$V_{(LRA-OL\_RMS)} = 21.32 \times 10^{-3} \times OD\_CLAMP[7:0] \times \sqrt{1 - f_{(LRA)} \times 800 \times 10^{-6}}$$
(8)

The auto-calibration routine uses the RATED\_VOLTAGE[7:0] and OD\_CLAMP[7:0] bits as inputs and therefore these registers must be written before calibration is performed. Any modification of this register value should be followed by calibration to appropriately set A\_CAL\_BEMF[7:0].



## 8.6.2.2 Overdrive Voltage-Clamp Programming

During closed-loop operation, the actuator feedback allows the output voltage to go above the rated voltage during the automatic overdrive and automatic braking periods. The OD\_CLAMP[7:0] parameter sets a clamp so that the automatic overdrive is bounded. The OD\_CLAMP[7:0] parameter also serves as the full-scale reference voltage for open-loop operation. The OD\_CLAMP[7:0] parameter always represents the maximum *peak voltage* that is allowed, regardless of the mode.

注

If the supply voltage  $(V_{DD})$  is less than the overdrive clamp voltage, the output driver is unable to reach the clamp voltage value because the output voltage cannot exceed the supply voltage. If the rated voltage exceeds the overdrive clamp voltage, the overdrive clamp voltage has priority over the rated voltage.

$$V_{\text{(ERM\_clamp)}} = \frac{21.64 \times 10^{-3} \times \text{OD\_CLAMP[7:0]} \times (t_{\text{(DRIVE\_TIME)}} - 300 \times 10^{-6})}{t_{\text{(DRIVE\_TIME)}} + t_{\text{(IDISS\_TIME)}} + t_{\text{(BLANKING\_TIME)}}}$$
(9)

$$V_{(LRA\_clamp)} = 21.22 \times 10^{-3} \times OD\_CLAMP[7:0]$$
 (10)

## 8.6.3 I<sup>2</sup>C Interface

#### 8.6.3.1 TI Haptic Broadcast Mode

The DRV2625 device has a TI haptic broadcast mode where, if enabled using the I<sup>2</sup>C\_BCAST\_EN bit, will make the device respond to the slave address 0x58 (7-bit) or 1011000 in binary. This mode is useful in the event that multiple haptic drivers implementing the TI haptic broadcast mode as installed in the system. In such a scenario, writing the GO bit to the 0x58 slave address will cause all haptic drivers to trigger the process at the same time.

#### 8.6.3.2 PC Communication Availability

The I<sup>2</sup>C protocol is available for read/write operations during Standby, and Active states.

## 8.6.3.3 General PC Operation

The I²C bus employs two signals, SDA (data) and SCL (clock), to communicate between integrated circuits in a system. The bus transfers data serially, one bit at a time. The 8-bit address and data bytes are transferred with the most-significant bit (MSB) first. In addition, each byte transferred on the bus is acknowledged by the receiving device with an acknowledge bit. Each transfer operation begins with the master device driving a start condition on the bus and ends with the master device driving a stop condition on the bus. The bus uses transitions on the data pin (SDA) while the clock is at logic high to indicate start and stop conditions. A high-to-low transition on the SDA signal indicates a start, and a low-to-high transition indicates a stop. Normal data-bit transitions must occur within the low time of the clock period. ₹ 23 shows a typical sequence. The master device generates the 7-bit slave address and the read-write (R/W) bit to start communication with a slave device. The master device then waits for an acknowledge condition. The slave device holds the SDA signal low during the acknowledge clock period to indicate acknowledgment. When the acknowledgment occurs, the master transmits the next byte of the sequence. Each device is addressed by a unique 7-bit slave address plus a R/W bit (1 byte). All compatible devices share the same signals through a bidirectional bus using a wired-AND connection.

The number of bytes that can be transmitted between start and stop conditions is not limited. When the last word transfers, the master generates a stop condition to release the bus. 

図 23 shows a generic data-transfer sequence.

Use external pull-up resistors for the SDA and SCL signals to set the logic-high level for the bus. Pull-up resistors between 660 O and 4.7 kO are recommended. Do not allow the SDA and SCL voltages to exceed the DRV2625 supply voltage,  $V_{DD}$ .

注

The DRV2625 slave address is 0x5A (7-bit), or 1011010 in binary.



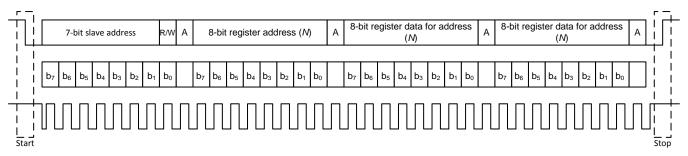


图 23. Typical I<sup>2</sup>C Sequence

The DRV2625 device operates as an  $I^2$ C-slave 1.8-V logic thresholds, but can operate up to the  $V_{DD}$  voltage. The device address is 0x5A (7-bit), or 1011010 in binary which is equivalent to 0xB4 (8-bit) for writing and 0xB5 (8-bit) for reading.

## 8.6.3.4 Single-Byte and Multiple-Byte Transfers

The serial control interface supports both single-byte and multiple-byte R/W operations for all registers.

During multiple-byte read operations, the DRV2625 device responds with data one byte at a time and beginning at the signed register. The device responds as long as the master device continues to respond with acknowledges.

The DRV2625 supports sequential I<sup>2</sup>C addressing. For write transactions, a sequential I<sup>2</sup>C write transaction has taken place if a register is issued followed by data for that register as well as the remaining registers that follow. For I<sup>2</sup>C sequential-write transactions, the register issued then serves as the starting point and the amount of data transmitted subsequently before a stop or start is transmitted determines how many registers are written.

#### 8.6.3.5 Single-Byte Write

As shown in ② 24, a single-byte data-write transfer begins with the master device transmitting a start condition followed by the I²C device address and the read-write bit. The read-write bit determines the direction of the data transfer. For a write-data transfer, the read-write bit must be set to 0. After receiving the correct I²C device address and the read-write bit, the DRV2625 responds with an acknowledge bit. Next, the master transmits the register byte corresponding to the DRV2625 internal-memory address that is accessed. After receiving the register byte, the device responds again with an acknowledge bit. Finally, the master device transmits a stop condition to complete the single-byte data-write transfer.




图 24. Single-Byte Write Transfer



## 8.6.3.6 Multiple-Byte Write and Incremental Multiple-Byte Write

A multiple-byte data write transfer is identical to a single-byte data write transfer except that multiple data bytes are transmitted by the master device to the DRV2625 device as shown in \$\mathbb{Z}\$ 25. After receiving each data byte, the DRV2625 device responds with an acknowledge bit.




图 25. Multiple-Byte Write Transfer

## 8.6.3.7 Single-Byte Read

₹ 26 shows that a single-byte data-read transfer begins with the master device transmitting a start condition followed by the I<sup>2</sup>C device address and the read-write bit. For the data-read transfer, both a write followed by a read actually occur. Initially, a write occurs to transfer the address byte of the internal memory address to be read. As a result, the read-write bit is set to 0.

After receiving the DRV2625 address and the read-write bit, the DRV2625 device responds with an acknowledge bit. The master then sends the internal memory address byte, after which the device issues an acknowledge bit. The master device transmits another start condition followed by the DRV2625 address and the read-write bit again. On this occasion, the read-write bit is set to 1, indicating a read transfer. Next, the DRV2625 device transmits the data byte from the memory address that is read. After receiving the data byte, the master device transmits a not-acknowledge followed by a stop condition to complete the single-byte data read transfer. See the note in the *General PC Operation* section.




图 26. Single-Byte Read Transfer

## 8.6.3.8 Multiple-Byte Read

A multiple-byte data-read transfer is identical to a single-byte data-read transfer except that multiple data bytes are transmitted by the DRV2625 device to the master device as shown in 27. With the exception of the last data byte, the master device responds with an acknowledge bit after receiving each data byte.




图 27. Multiple-Byte Read Transfer



## 8.6.4 Programming for Open-Loop Operation

The DRV2625 device can be used in open-loop mode and closed-loop mode. If open-loop operation is desired, the first step is to determine which actuator type is to use, either ERM or LRA.

## 8.6.4.1 Programming for ERM Open-Loop Operation

To configure the DRV2625 device in ERM open-loop operation, the ERM must be selected by writing the LRA\_ERM bit to 1, and the CONTROL\_LOOP bit to 1.

## 8.6.4.2 Programming for LRA Open-Loop Operation

To configure the DRV2625 device in LRA open-loop operation, the LRA must be selected by writing the LRA\_ERM bit to 0, and the CONTROL\_LOOP bit to 1. Additionally, the OL\_LRA\_PERIOD parameter must be configured with the appropriate LRA frequency.

## 8.6.5 Programming for Closed-Loop Operation

For closed-loop operation, the device must be calibrated according to the actuator selection. When calibrated accordingly, the user is only required to provide the desired waveform. The DRV2625 device automatically adjusts the level and, for the LRA, automatically adjusts the driving frequency.

## 8.6.6 Diagnostics Routine

The DRV2625 has a diagnostic routine that can be selected by the MODE[1:0] parameter. The purpose of the routine is to determine if the actuator can be safely and correctly driven. If a problem is detected by the diagnostic routine, the DIAG\_RESULT bit will assert (high). After running the diagnostic routine, the DIAG\_RESULT should be checked to assess the result of the diagnostic routine. If the diagnostic routine does not finish due to a critical condition, such as a UVLO, over temperature or over-current condition, the diagnostic routine will be aborted and the DIAG\_RESULT will be set to 1.

The diagnostic routine is composed of 2 sub-routines: a resistance measurement routine and a functional routine.

The resistance measurement sub-routine reports the resistance of the actuator as seen from the differential output pins (OUT+ and OUT-) and placed on the DIAG\_Z\_RESULT parameter. The resistance measurement sub-routine should always be executed during the diagnostics routine and the output is reported in the DIAG\_Z\_RESULT. The only exception is during an over-temperature or UVLO condition, in which case the diagnostic routine will abort immediately and the device will go into standby state.

注

An over-current condition will never happen in this sub-routine, even in the presence of a short, because the resistance measurement injects a small current that will not be detected by the over-current detection circuit. The resistance measurement sub-routine is the first to be executed. Also, this sub-routine will not cause the DIAG\_RESULT bit to assert.

After the resistance measurement, the diagnostic routine plays a diagnostic waveform to determine whether the actuator can be successfully driven. A short or open condition, as well as failure to detect a valid BEMF will cause the DIAG\_RESULT bit to assert. Note that if a critical problem is experienced during the diagnostic routine, such as an over-current condition, the routine can be aborted, and the DIAG\_RESULT will assert.

#### 8.6.7 Calibration Routine

The DRV2625 has a calibration routine that automatically populates all critical parameters required for successfully driving a specific actuator (the one connected and being calibrated) in closed-loop. Variation occurs between different actuators even if the actuators are of the same model. To ensure optimal results, TI recommends that the calibration routine be run at least once for each actuator.



The calibration engine requires a number of parameters as inputs before the calibration can be executed. When the inputs are configured, the calibration routine can be executed. After calibration execution occurs, the output parameters are written over the specified register locations. 图 28 shows all of the required inputs and generated outputs. To ensure proper auto-resonance operation, the LRA actuator type requires more input parameters than the ERM. The LRA parameters are ignored when the device is in ERM mode.

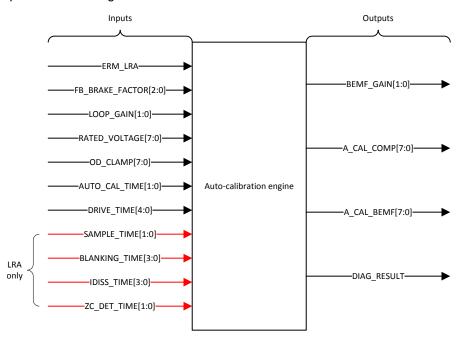


图 28. Calibration-Engine Functional Diagram

For proper calibration results, the calibration waveform must be executed long enough to achieve a steady acceleration. Therefore, the DRV2625 device has a configurable amount of time for the calibration waveform, which can be selected by the AUTO\_CAL\_TIME[1:0] parameter. Additionally, the option to control the calibration time by using a trigger is provided to accommodate for the cases that require longer times than those allowed by the AUTO\_CAL\_TIME parameter. Under the triggered control option, the calibration will start executing after the initial trigger, and then will stop execution once a stop trigger is received. At that point the output values of the calibration will be populated. Note that a minimum duration is required for the calibration to work properly.

表 3. Calibration Routine Behavior Under Different AUTO\_CAL\_TIME Selections

AUTO_CAL_TIME[1:0]	ACTION	COMMENTS
0	250 ms calibration waveform	
1	500 ms calibration waveform	
2	1 s calibration waveform	
3	Trigger controlled	Can be triggered either using the GO bit or externally. To use the external trigger, the TRIG_PIN_FUNC parameter must be configured appropriately.
	mgge. controlled	In this case the minimum duration should be 1 s, otherwise the result of the calibration can be corrupted.



The following instructions list the step-by-step register configuration for auto-calibration.

- 1. Apply a valid supply voltage to the DRV2625 device, and then pull the NRST pin high. The supply voltage should allow for adequate drive voltage of the selected actuator.
- 2. Write a value of 0x03 to the MODE parameter to set the auto-calibration routine.
- 3. Populate the input parameters required by the auto-calibration engine:
  - (a) LRA ERM selection will depend on desired actuator.
  - (b) FB\_BRAKE\_FACTOR[2:0] A value of 3 is valid for most actuators.
  - (c) LOOP\_GAIN[1:0] A value of 2 is valid for most actuators.
  - (d) RATED\_VOLTAGE[7:0] See the *Rated Voltage Programming* section for calculating the correct register value.
  - (e) OD\_CLAMP[7:0] See the *Overdrive Voltage-Clamp Programming* section for calculating the correct register value.
  - (f) AUTO\_CAL\_TIME[1:0] A value of 3 is valid for most actuators.
  - (g) DRIVE TIME[3:0] See the *Drive-Time Programming* for calculating the correct register value.
  - (h) SAMPLE TIME[1:0] A value of 3 is valid for most actuators.
  - (i) BLANKING\_TIME[3:0] A value of 1 is valid for most actuators.
  - (j) IDISS\_TIME[3:0] A value of 1 is valid for most actuators.
  - (k) ZC DET TIME[1:0] A value of 0 is valid for most actuators.
- 4. Write a 1 to the GO bit to start the auto-calibration process. When auto calibration is complete, the GO bit automatically clears. The auto-calibration results are written in the respective registers as shown in ₹ 28.
- 5. Check the status of the DIAG\_RESULT bit to ensure that the auto-calibration routine is complete without faults.
- 6. Evaluate system performance with the auto-calibrated settings. Note that the evaluation should occur during the final assembly of the device because the auto-calibration process can affect actuator performance and behavior. If any adjustment is required, the inputs can be modified and this sequence can be repeated. If the performance is satisfactory, the user can do any of the following:
  - (a) Repeat the calibration process upon subsequent power ups.
  - (b) Store the auto-calibration results in host processor memory and rewrite them to the DRV2625 device upon subsequent power ups. The device retains these settings when in STANDBY mode or when the EN pin is low.



## 8.6.8 Waveform Playback Programming

## 8.6.8.1 Data Formats for Waveform Playback

The DRV2625 uses a signed data format (2's complement) to specify the magnitude and direction of the drive. The actuator can be driven in either closed-loop or open-loop. In closed-loop, positive numbers indicate the magnitude of the drive desired. Negative numbers are interpreted as a brake signal, which is automatic in closed-loop. In open-loop, positive and negative numbers are required to specify amplitude magnitude for both driving and braking. In the case that automatic braking is selected for open loop, then any negative number will be interpreted as a brake signal.

## 8.6.8.2 Open-Loop Mode

In open-loop mode, the reference level for full-scale drive is set by the OD\_CLAMP[7:0] parameter. A mid-scale input value gives no drive signal, and a less-than mid-scale gives a negative drive value. For an ERM, a negative drive value results in counter-rotation, or braking. For an LRA, a negative drive value results in a 180-degree phase shift in commutation.

## 8.6.8.3 Closed-Loop Mode

In closed-loop mode, the DRV2625 device provides automatic overdrive and braking for both ERM and LRA devices. Positive values indicate that acceleration is desired. Negative values and 0 indicate that braking is desired.

The reference level for steady-state full-scale drive is set by the RATED\_VOLTAGE[7:0] bit (when auto-calibration is performed). The output voltage can momentarily exceed the rated voltage for automatic overdrive and braking, but does not exceed the OD\_CLAMP[7:0] voltage. Braking occurs automatically based on the input signal when the back-EMF feedback determines that braking is necessary.

In the event that the user is concerned that the overdrive time may be too high for a particular actuator, the OD\_CLAMP\_TIME[1:0] can be used to limit the amount of time spent in over-drive mode (a voltage above the rated voltage). If the overdrive time is exceeded and the DRV2625 device is still attempting to overdrive the actuator, a new clamp is enforced, which is specified in the RATED\_VOLTAGE\_CLAMP[7:0] parameter, which is enforced until a brake signal is received. During braking, the device will be allowed to overdrive for the time specified in the OD\_CLAMP\_TIME[1:0], and, if exceeded, the RATED\_VOLTAGE\_CLAMP[7:0] is enforced. This feature ensures that the actuator will not be overdriven continuously for longer than desired.



## 8.6.9 Waveform Setup and Playback

Playback of a haptic effect can occur in RTP mode or by using the waveform sequencer. And the process (either RTP or waveform sequencer) can be triggered by writing a 1 to the GO bit, or by using the external trigger in either trigger-pulse or trigger-level configuration. A waveform can be terminated prematurely by writing a 0 to the GO bit or by sending a stop trigger via the external TRIG/INTZ pin.

## 8.6.9.1 Waveform Playback Using RTP Mode

The user can enter the RTP mode by writing to the MODE[1:0] parameter. In RTP mode, when the DRV2625 device received a trigger, the device drives the actuator continuously with the amplitude specified in the RTP\_INPUT[7:0] parameter. Because the amplitude tracks the value specified in the RTP\_INPUT[7:0] parameter, the I<sup>2</sup>C bus can stream waveforms. To stop driving the user can either change modes or send a stop trigger (either write 0 to the GO bit or using the external trigger).

## 8.6.9.2 Waveform Sequencer

To play haptic effects from the internal memory, the effects must first be loaded into the waveform sequencer, and then the effects can be launched by using any of the trigger options.

The waveform sequencer queues waveform-library identifiers for playback. Eight sequence registers queue up to eight library waveforms for sequential playback. A waveform identifier is an integer value referring to the index position of a waveform in the internal memory. Playback begins at WAV\_FRM\_SEQ1 when the user triggers the waveform sequencer. When playback of that waveform ends, the waveform sequencer plays the next waveform identifier held in WAV\_FRM\_SEQ2 (if non-zero). The waveform sequencer continues in this way until the sequencer reaches an identifier value of zero or until all eight identifiers are played whichever comes first.

The waveform identifier is a 7-bit number. The MSB of each sequence register can be used to implement a delay between sequence waveforms. When the MSB is high, bits 6-0 indicate the length of the wait time. The wait time for that step then becomes WAV FRM SEQ[6:0] × 10 ms.

The DRV2625 device allows for looping of individual waveforms by using the WAVn\_SEQ\_LOOP parameters. When used, the state machine will loop the particular waveform the number of times specified in the associated WAVn\_SEQ\_LOOP parameter before moving to the next waveform. Additionally, the entire sequencer of waveforms can be looped a number of times specified by the WAV\_SEQ\_MAIN\_LOOP parameter. The waveform-looping feature is useful for long, custom haptic playbacks, such as a haptic ringtone.

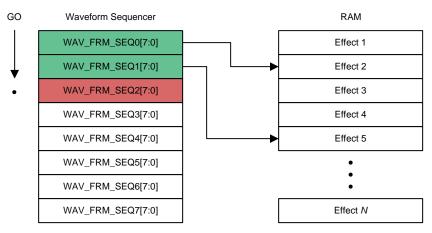


图 29. Waveform Sequencer Programming

## 8.6.9.3 Waveform Playback Triggers

The DRV2625 device has 2 modes of waveform playback: Waveform Sequencer and RTP. Both modes can be triggered externally by using the TRIG/INTZ pin or internally by using the GO bit. If using external trigger, the TRIG PIN FUNC most be selected appropriately.




## 8.6.9.3.1 Playback Trigger Without Automatic Brake into Standby

When automatic braking into standby is disabled (AUTO\_BRK\_INTO\_STBY bit set to 0), playback can be triggered in both RTP and waveform sequencer modes with internal trigger by writing a 1 to the GO bit, and stopped by writing a 0 to the GO bit. Playback can also be triggered by the external trigger by following the trigger-pulse or trigger-level specifications (see ₹ 19 and ₹ 20 for details). Note that internal trigger is not available if the external trigger pin is set to trigger-level (TRIG\_PIN\_FUNC = 1)


RTP playback (MODE[1:0] = 0), once triggered, will run indefinitely until the waveform is stopped. The waveform sequencer (MODE[1:0] = 1) will run until it reaches the end point and will automatically go into standby without a cancel trigger being received, unless an infinite loop is requested.

## 8.6.9.3.1.1 Playback Trigger With Automatic Brake into Standby (SimpleDrive)

If automatic braking into standby is enabled (AUTO\_BRK\_INTO\_STBY bit is set to 1), then the device part will go into brake mode before going into standby. This feature introduces new timing requirements that are described in below diagrams.

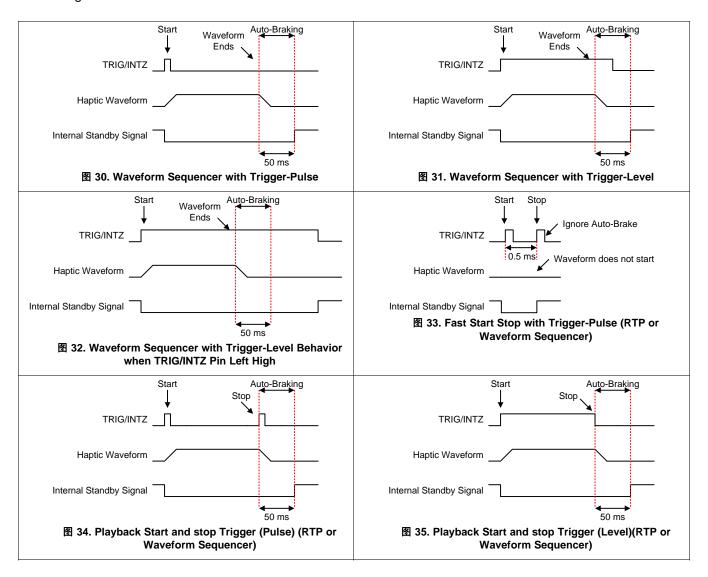



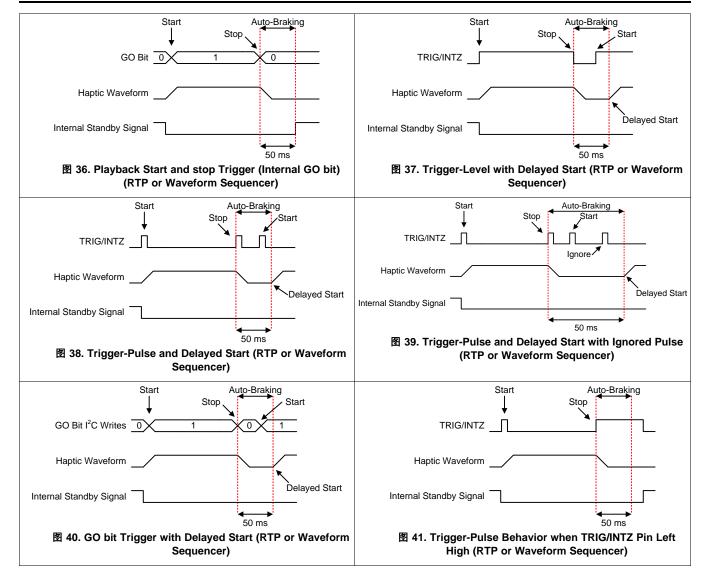



# 8.7 Register Map

## **Register Map Overview**

	Register Map Overview											
REG NO.	DEFAULT	BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0			
0x00	0x12		CHIP	ID[3:0]			REV	[3:0]				
0x01	0x00	DIAG_RESULT		Reserved		PROCESS_DONE	UVLO	OVER_TEMP	OC_DETECT			
0x02	0x18		Rese	erved			INTZ_M	ASK[3:0]				
0x03	0x00				DIAG_Z_	RESULT[7:0]						
0x04	0x00		VBAT[7:0]									
0x05	0x00			Rese	erved			LRA_PE	RIOD[9:8]			
0x06	0x00				LRA_PE	ERIOD[7:0]						
0x07	0x54	I2C_BCAST_EN	LRA_PERIOD_AVG_DIS	LINEREG_CO	DMP_SEL[1:0]	TRIG_PIN_	_FUNC[1:0]	MOD	E[1:0]			
80x0	0x88	LRA_ERM	CONTROL_LOOP	HYBRID_LOOP	AUTO_BRK_OL	AUTO_BRK_INTO_STBY	INPUT_SLOPE_CHECK	Rese	erved			
0x09	0x00	BAT_LIFE_EX	T_LVL_EN[1:0]		Reserved			UVLO_THRES[2:0]				
A0x0	0x92				BAT_LIFE_	EXT_LVL1[7:0]						
0x0B	0x8D				BAT_LIFE_	EXT_LVL2[7:0]						
0x0C	0x00				Reserved				GO			
0x0D	0x00	LIB_SEL	Reserved	PLAYBACK_INTERVAL		Reserved		DIG_MEM	_GAIN[1:0]			
0x0E	0x7F			RTP_INPUT[7:0]								
0x0F	0x01	WAIT1				WAV_FRM_SEQ1[6:0]						
0x10	0x00	WAIT2				WAV_FRM_SEQ2[6:0]						
0x11	0x00	WAIT3				WAV_FRM_SEQ3[6:0]						
0x12	0x00	WAIT4				WAV_FRM_SEQ4[6:0]						
0x13	0x00	WAIT5				WAV_FRM_SEQ5[6:0]						
0x14	0x00	WAIT6				WAV_FRM_SEQ6[6:0]						
0x15	0x00	WAIT7				WAV_FRM_SEQ7[6:0]						
0x16	0x00	WAIT8				WAV_FRM_SEQ8[6:0]						
0x17	0x00	WAV4_SEC	Q_LOOP[1:0]	WAV3_SEC	Q_LOOP[1:0]	WAV2_SEQ	_LOOP[1:0]		Q_LOOP[1:0]			
0x18	0x00	WAV8_SEC	Q_LOOP[1:0]	WAV7_SEC	Q_LOOP[1:0]	WAV6_SEQ	_LOOP[1:0]	WAV5_SEC	Q_LOOP[1:0]			
0x19	0x00			Reserved			1	WAV_SEQ_MAIN_LOOP[2:0	)]			
0x1A	0x00					T[7:0]						
0x1B	0x00				SP	T[7:0]						
0x1C	0x00					T[7:0]						
0x1D	0x00					T[7:0]						
0x1F	0x3F					OLTAGE[7:0]						
0x20	0x89				OD_CI	_AMP[7:0]						
0x21	0x0D					COMP[7:0]						
0x22	0x6D			A_CAL_BEMF[7:0]								
0x23	0x36	NG_THRESH		FB_BRAKE_FACTOR[2:0]		LOOP_G	SAIN[1:0]	BEMF_0	GAIN[1:0]			
0x24	0x64				RATED_VOLT	AGE_CLAMP[7:0]						
0x25	0x80				OD_CLAN	MP_LVL1[7:0]						



# **Register Map (continued)**

## **Register Map Overview (continued)**

REG NO.	DEFAULT	BIT 7	BIT 6	BIT 5	BIT 4	BIT 3	BIT 2	BIT 1	BIT 0	
0x26	0x00		OD_CLAMP_LVL2[7:0]							
0x27	0x10	LRA_MIN_FREQ_SEL	LRA_RESYNC_FORMAT	Reserved			DRIVE_TIME[4:0]			
0x28	0x11		BLANKING_TIME[3:0] IDISS_TIME[3:0]							
0x29	0x0C	Rese	erved	OD_CLAMF	P_TIME[1:0]	SAMPLE_TIME[1:0]		ZC_DET_TIME[1:0]		
0x2A	0x02			Rese	erved			AUTO_CAL	_TIME[1:0]	
0x2C	0x00	LRA_AUTO_OPEN_LOO P	AUTO_OL	_CNT[1:0]		Rese	erved		LRA_WAVE_SHAPE	
0x2E	0x00	Reserved OL_LRA_PERIOD[9:8]								
0x2F	0xC6		OL_LRA_PERIOD[7:0]							
0x30	0x00		CURRENT_K[7:0]							



## 8.7.1 Address: 0x00

## Figure 42. 0x00

7	6	5	4	3	2	1	0
	CHIP	D[3:0]				[3:0]	
R-0	R-0	R-0	R-1	R-0	R-0	R-1	R-0

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

## Table 4. Address: 0x00

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-4	CHIPID[3:0]	R	1 Provide device identification information	
				0 DRV2624
				1 DRV2625
3-0	REV[3:0]	R	2	Provides information on the device revision

## 8.7.2 Address: 0x01

## Figure 43. 0x01

7	6	5	4	3	2	1	0
DIAG_RESULT		Reserved		PROCESS_DO	UVLO[0]	OVER_TEMP[0	OC_DETECT[0
[0]				NE[0]		]	]
R-0		R/W-0		R-0	R-0	R-0	R-0

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

## Table 5. Address: 0x01

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION			
7	DIAG_RESULT	R	0	The meaning of this bit changes depending on the mode of operation. In diagnostics mode, bit will assert if the actuator is either open or short to itself, to ground, or to vdd. For the impedance measurement mode, refer to DIAG_Z_RESULT[7:0]. For the calibration mode, the bit asserts if the calibration fails. This bit is sticky and will clear on read.			
				0 No issue found.			
				1 Either diagnostics, or calibration failed.			
6-4	Reserved	R/W	0	Reserved			
3	PROCESS_DONE	R	0	Shows if the process executed is done. This bit is sticky and will clear on read.			
				0 Process is not done.			
				Process is done (either waveform sequencer, diagnostics or auto-calibration). This bit is cleared when read.			
2	UVLO	R	0	If VDD dropts below the UVLO_THRES[2:0], this bit will assert. This bit is sticky and will clear on read.			
				0 No VDD droop has been observed.			
				1 A VDD droop was observed. Clears on read.			
1	OVER_TEMP	R	0	Shows current status of the thermal protection. This bit is sticky and will clear on read.			
				0 Temperature is below over-temperature threshold			
				1 Temperature is above over-temperature threshold. Clears on read.			
0	OC_DETECT	R	0	Shows current status of the output overcurrent protection. This bit is sticky and will clear on read.			
				0 No over-current detected in OUT+ or OUT-			
				1 Over-current detected in OUT+ or OUT Clears on read.			



#### 8.7.3 Address: 0x02

### Figure 44. 0x02

7	6	5	4	3	2	1	0
	Res	erved			INTZ_M	ASK[3:0]	
R/W-0 R/W-1				R/W-1	R/W-0	R/W-0	R/W-0

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

# Table 6. Address: 0x02

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-5	Reserved	R/W	0	Reserved
4-0	INTZ_MASK[4:0]	R/W	24	Masks status bits to configure behavior of TRIG/INTZ pin when configured in interrupt mode. Ignored otherwise.
				0 When INTZ_MASK[0] = 1 the OC_DETECT status will not produce an interrupt
				1 When INTZ_MASK[1] = 1 the OVER_TEMP status will not produce an interrupt
				2 When INTZ_MASK[2] = 1 the UVLO status will not produce an interrupt
				3 When INTZ_MASK[3] = 1 the PROCESS_DONE status will not produce an interrupt

#### 8.7.4 Address: 0x03

# Figure 45. 0x03

7	6	5	4	3	2	1	0		
	DIAG_Z_RESULT[7:0]								
	R-0								

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 7. Address: 0x03

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	DIAG_Z_RESULT[7:0]	R	0	This parameter shows the impedance measurement of the actuator after running the diagnostics routine.

#### 8.7.5 Address: 0x04

### Figure 46. 0x04

7	6	5	4	3	2	1	0		
VBAT[7:0]									
	R-O								

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset


#### Table 8. Address: 0x04

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	VBAT[7:0]	R	0	This parameter provides a real-time reading of the supply voltage at the VDD pin. The device must be actively playing a waveform to take a reading.



#### 8.7.6 Address: 0x05

# Figure 47. 0x05



LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

#### Table 9. Address: 0x05

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-2	Reserved	R/W	0	Reserved
1-0	LRA_PERIOD[9:0]	RO	0	This parameter reports the resonance frequency of the LRA in real time. Because this register is continuously being updated, the MSB section most be read first, the LSB (and the MSB) register will be retained until the LSB is read to preserve consistency. If the waveform finishes and the LSB has not been read, the device will automatically unlock both registers (MSB and LSB) and they will start to update again upon the next playback. For this reason, TI recommends reading both registers during the same playback to get accurate readings. LRA period = LRA_PERIOD[9:0] × 24.39 us. The accuracy of the reported frequency is not guaranteed during braking.

#### 8.7.7 Address: 0x06

# Figure 48. 0x06

7	6	5	4	3	2	1	0		
	LRA_PERIOD[7:0]								
	R-0								

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 10. Address: 0x06

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	LRA_PERIOD[9:0]	R	0	This parameter reports the resonance frequency of the LRA in real time. Because this register is continuously being updated, the MSB section most be read first, the LSB (and the MSB) register will be retained until the LSB is read to preserve consistency. If the waveform finishes and the LSB has not been read, the device will automatically unlock both registers (MSB and LSB) and they will start to update again upon the next playback. For this reason, it is important to read both registers during the same playback to get accurate readings. LRA period = LRA_PERIOD[9:0] × 24.39 us. The accuracy of the reported frequency is not guaranteed during braking.



### 8.7.8 Address: 0x07

# Figure 49. 0x07

7	6	5	4	3	2	1	0
I2C_BCAST_E N[0]	LRA_PERIOD_ AVG_DIS[0]	LINEREG_CO	OMP_SEL[1:0]	TRIG_PIN_	_FUNC[1:0]	MODI	<b>≣[1:0]</b>
R/W-0	R/W-1	R/W-0	R/W-1	R/W-0	R/W-1	R/V	V-O

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

# Table 11. Address: 0x07

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7	I2C_BCAST_EN	R/W	0	When enabled, the device will respond to slave address 0x58 (or 1011000). This is useful for triggering multiple drivers at the same time.
				0 Haptic Broadcast disable.
				1 Haptic Broadcast enabled.
6	LRA_PERIOD_AVG_DIS	R/W	1	Enables/disables averaging for the resonance reporting located in LRA_PERIOD[9:0] parameter.
				0 LRA_PERIOD[9:0] reports the average period of the last 4 periods. Uses a shift register preloaded with 0.
				1 LRA_PERIOD[9:0] reports the last period.
5-4	LINEREG_COMP_SEL[1:0]	R/W	1	Applies a compensation factor to compensate for variations of LDO shifting.
				0 0%
				1 2%
				2 4%
				3 5%
3-2	TRIG_PIN_FUNC[1:0]	R/W	1	This parameter selects the function of the TRIG/INTZ pin. If this parameter is changed during process execution, the device will go into standby.
				Pin functions as external pulse trigger (input). In this mode, the GO bit can also be used to trigger or cancel processes.
				Pin functions as external level trigger - enable (input). In this mode the GO bit cannot be used.
				Pin functions as an interrupt (open drain output). In this mode, the GO bit is the only mechanism to trigger and cancel processes.
				3 Reserved
1-0	MODE[1:0]	R/W	0	This parameter is used to select the mode of operation. If the mode is changed during process execution, the device will immediately go into standby.
				0 RTP Mode
				1 Waveform Sequencer Mode
				2 Diagnostics Routine
				3 Automatic Level Calibration Routine



### 8.7.9 Address: 0x08

# Figure 50. 0x08

7	6	5	4	3	2	1	0
LRA_ERM[0]	CONTROL_LO	HYBRID_LOOP	AUTO_BRK_O	AUTO_BRK_IN	INPUT_SLOPE	Reserved	
	OP[0]	[0]	L[0]	TO_STBY[0]	_CHECK[0]		
R/W-1	R/W-0	R/W-0	R/W-0	R/W-1	R/W-0	R/W-0	

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

# Table 12. Address: 0x08

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7	LRA_ERM	R/W	1	Selects the actuator type. This bit should be set prior to running the calibration routine.
				0 ERM.
				1 LRA.
6	CONTROL_LOOP	R/W	0	Selects either closed loop or open loop mode. This applies to both ERM and LRA actuators.
				0 Closed Loop.
				1 Open Loop.
5	HYBRID_LOOP	R/W	0	Selects between full closed loop mode and hybrid closed-loop mode.
				0 Full closed loop mode.
				1 Hybrid loop mode.
4	AUTO_BRK_OL	R/W	0	Provides automatic braking for ERM and LRA when in open loop. To achieve this, when the data to be played is 0 or less, the DRV2625 device automatically goes into closed loop mode and then brakes the actuator. Note that when the data to be played is positive the device will play in open loop mode. This feature assumes that the actuator has been calibrated and that it functions correctly under closed-loop conditions. This feature is disabled by default.
				0 No automatic braking while in open loop mode.
				Automatic braking for open loop mode is enabled. Goes to closed-loop mode to break when data is 0 or less.
3	AUTO_BRK_INTO_STBY	R/W	1	This bit is used to enable automatic braking when the device goes into standby. If this bit is set and a waveform was playing, when a go-to-standby signal is received (either from the timer, or the EN functionality of the TRIG/INTZ pin), the device will first brake the actuator and then will transition to the standby mode.
				0 Go immediately to standby mode (without automatic braking).
				Before going to standby mode, check if the actuator is moving. If it is moving brake the actuator and then go to standby mode. If it is not moving then go into standby mode.
2	INPUT_SLOPE_CHECK	R/W	0	If bit is set, driver will operate in open loop and will only change to close loop if the transition requested is big enough. This bit is ignored if hybrid loop is disabled.
				0 No input slope check.
				1 Input slope check enabled
1-0	Reserved	R/W	0	Reserved



#### 8.7.10 Address: 0x09

# Figure 51. 0x09

7 6	5	4	3	2	1	0			
BAT_LIFE_EXT_LVL_EN[1:0]		Reserved			UVLO_THRES[2:0	0]			
R/W-0		R/W-0			R/W-0				

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

#### Table 13. Address: 0x09

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-6	BAT_LIFE_EXT_LVL_EN[1:0]	R/W	0	Enables the BAT_LIFE_EXT functionality.
				0 BAT_LIFE_EXT functionality disabled.
				1 BAT_LIFE_EXT_LVL1 functionality enabled.
				2 BAT_LIFE_EXT_LVL1 and BAT_LIFE_EXT_LVL2 functionality enabled.
5-3	Reserved	R/W	0	Reserved
2-0	UVLO_THRES[2:0]	R/W	0	Configures the UVLO threshold. If VDD voltage goes below this threshold, the output stage is immediately turned off and the device is placed into stand-by mode.
				0 UVLO threshold = 2.5 V.
				1 UVLO threshold = 2.6 V.
				2 UVLO threshold = 2.7 V.
				3 UVLO threshold = 2.8 V.
				4 UVLO threshold = 2.9 V.
				5 UVLO threshold = 3 V.
				6 UVLO threshold = 3.1 V.
				7 UVLO threshold = 3.2 V.

#### 8.7.11 Address: 0x0A

# Figure 52. 0x0A

7	6	5	4	3	2	1	0
			BAT_LIFE_E	XT_LVL1[7:0]			
R/W-1	R/W-0	R/W-0	R/W-1	R/W-0	R/W-0	R/W-1	R/W-0

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

#### Table 14. Address: 0x0A

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	BAT_LIFE_EXT_LVL1[7:0]	R/W		If VDD goes below the threshold specified by this parameter, the OD_CLAMP_LVL1 sets the overdrive clamp for the device. Note that OD_CLAMP_LVL1 should always be greater or equal to OD_CLAMP_LVL2. BAT_LIFE_EXT_LVL1 should be set higher than BAT_LIFE_EXT_LVL2. The VDD voltage is sampled at the beginning of the effect only.

#### 8.7.12 Address: 0x0B

### Figure 53. 0x0B

7	6	5	4	3	2	1	0
			BAT_LIFE	_EXT_LVL2[7:0]			
R/W-	1 R/W-0	R/W-0	R/W-0	R/W-1	R/W-1	R/W-0	R/W-1

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 15. Address: 0x0B

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	BAT_LIFE_EXT_LVL2[7:0]	R/W	141	If VDD goes below the threshold specified by this parameter, the OD_CLAMP_LVL2 sets the overdrive clamp for the device. Note that OD_CLAMP_LVL1 should always be greater or equal to OD_CLAMP_LVL2. BAT_LIFE_EXT_LVL1 should be set higher than BAT_LIFE_EXT_LVL2. The VDD voltage is sampled at the beginning of the effect only.



### 8.7.13 Address: 0x0C

# Figure 54. 0x0C

7	6	5	4	3	2	1	0	
	Reserved							
	R/W-0							

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 16. Address: 0x0C

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-1	Reserved	R/W	0	Reserved
0	GO	R/W	0	This bit is used to fire processes. The process fired by the GO bit is selected by the MODE parameter. The primary function of this bit is to fire playback of the waveform identifiers in he waveform sequencer (registers 0x0F to 0x16), in which case, this bit an be thought of a software trigger for haptic waveforms. The GO bit remains high until the process has completed. Clearing the GO bit during waveform playback cancels the process immediately. Using the external trigger will also assert the GO bit in a similar way as if it was written. The GO bit can be used to play effects using the waveform sequencer, run auto-calibration, and run diagnostics.

### 8.7.14 Address: 0x0D

# Figure 55. 0x0D

7	6	5	4	3	2	1	0
LIB_SEL[0]	Reserved	PLAYBACK_IN TERVAL[0]		Reserved		DIG_MEM_	_GAIN[1:0]
R/W-0	R/W-0	R/W-0		R/W-0		R/W	V-O

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 17. Address: 0x0D

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7	LIB_SEL	R/W	0	Library selection bit.
				0 LRA Library - Closed Loop (Lib A).
				1 ERM Library - Open Loop (Lib B).
6	Reserved	R/W	0	Reserved
5	PLAYBACK_INTERVAL	R/W	0	Sets the internal memory playback interval to either 5 ms or 1 ms.
				0 5 ms.
				1 1 ms.
4-2	Reserved	R/W	0	Reserved
1-0	DIG_MEM_GAIN[1:0]	R/W	0	This parameter allows for proportionally scaling down (attenuating) the effects stored in the internal library to simplify the customization of haptics. This parameter is ignored in RTP mode.
				0 Play effect with 100% strength.
				1 Play effect with 75% strength.
				2 Play effect with 50% strength.
				3 Play effect with 25% strength.



### 8.7.15 Address: 0x0E

# Figure 56. 0x0E

7	6	5	4	3	2	1	0		
	RTP_INPUT[7:0]								
R/W-0 R/W-1 R/W-1 R/W-1 R/W-1 R/W-1 R/W-1									

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 18. Address: 0x0E

В	Т	FIELD	TYPE	DEFAULT	DESCRIPTION
7-	0	RTP_INPUT[7:0]	R/W	127	This parameter is the entry point for real-time playback (RTP) data. The digital playback engine drives the RTP_INPUT[7:0] value to the load when MODE[1:0] parameter is set to RTP mode, and the RTP process is triggered. The RTP_INPUT[7:0] value can be updated in real-time by the host controller to create haptic waveforms. The TP_INPUT[7:0] value is interpreted as an 8-bit signed number.

#### 8.7.16 Address: 0x0F

# Figure 57. 0x0F

7	6	5	4	3	2	1	0
WAIT1[0]			W	AV_FRM_SEQ1[6	S:0]		
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-1

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 19. Address: 0x0F

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION	
7	WAIT1	R/W	0	When this bit is set, the WAV_FRM_SEQ1[6:0] is interpreted as a wait time in which the playback engine idles. This bit is used to insert timed delays between sequentially played waveforms. Delay time = 10 ms × WAV_FRM_SEQ1[6:0]. If this bit is 0, then WAV_FRM_SEQ1[6:0] is interpreted as a waveform dentifier for sequence playback.	
				0 WAV_FRM_SEQ1[6:0] is interpreted as a waveform identifier for sequence playback.	
				1 WAV_FRM_SEQ1[6:0] is interpreted as a delay.	
6-0	WAV_FRM_SEQ1[6:0]	R/W	1	This parameter holds the waveform identifier of the waveform to be played. A waveform identifier is an integer value referring to the index position of a waveform in the library. Playback begins at register address 0x0F when the user asserts the GO bit (register 0x0C). hen playback of that waveform ends, the waveform sequencer plays the ext waveform identifier held in register 0x10, if the next waveform identifier is non-zero. The waveform sequencer continues in this way until he sequencer reaches an identifier value of zero, or all eight identifiers are played (register addresses 0x0F through 0x16), whichever comes first. If WAIT1 is set to 1, then this parameter is used to insert a delay given by: Delay time = 10 ms x WAV_FRM_SEQ1[6:0].	
				O Signals the waveform sequencer to stop when it attempts to play this identifier.	



### 8.7.17 Address: 0x10

# Figure 58. 0x10

7	6	5	4	3	2	1	0		
WAIT2[0]			W	AV_FRM_SEQ2[6	5:0]				
R/W-0		R/W-0							

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 20. Address: 0x10

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION	
7	WAIT2	R/W	0	When this bit is set, the WAV_FRM_SEQ2[6:0] is interpreted as a wait time in which the playback engine idles. This bit is used to insert timed delays between sequentially played waveforms. Delay time = 10 ms × WAV_FRM_SEQ2[6:0]. If this bit is 0, then WAV_FRM_SEQ2[6:0] is interpreted as a waveform dentifier for sequence playback.	
				0 WAV_FRM_SEQ2[6:0] is interpreted as a waveform identifier for sequence playback	
				1 WAV_FRM_SEQ2[6:0] is interpreted as a delay.	
6-0	WAV_FRM_SEQ2[6:0]	R/W	0	This parameter holds the waveform identifier of the waveform to be played. A waveform identifier is an integer value referring to the index position of a waveform in the library. Playback begins at register address 0x0F when the user asserts the GO bit (register 0x0C). hen playback of that waveform ends, the waveform sequencer plays the ext waveform identifier held in register 0x10, if the next waveform identifier is non-zero. The waveform sequencer continues in this way until he sequencer reaches an identifier value of zero, or all eight identifiers are played (register addresses 0x0F through 0x16), whichever comes first. If WAIT2 is set to 1, then this parameter is used to insert a delay given by: Delay time = 10 ms x WAV_FRM_SEQ2[6:0].	
				O Signals the waveform sequencer to stop when it attempts to play this identifier.	

#### 8.7.18 Address: 0x11

# Figure 59. 0x11

	7	6	5	4	3	2	1	0		
	WAIT3[0]		<del>-</del>	W	/AV_FRM_SEQ3[6	:0]	· · · · · · · · · · · · · · · · · · ·	<del>-</del>		
İ	R/W-0		R/W-0							

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 21. Address: 0x11

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION	
7	WAIT3	R/W	0	When this bit is set, the WAV_FRM_SEQ3[6:0] is interpreted as a wait time in which the playback engine idles. This bit is used to insert timed delays between sequentially played waveforms. Delay time = 10 ms × WAV_FRM_SEQ3[6:0]. If this bit is 0, then WAV_FRM_SEQ31[6:0] is interpreted as a waveform identifier for sequence playback.	
				0 WAV_FRM_SEQ3[6:0] is interpreted as a waveform identifier for sequence playback.	
				1 WAV_FRM_SEQ3[6:0] is interpreted as a delay.	
6-0	WAV_FRM_SEQ3[6:0]	R/W	0	This parameter holds the waveform identifier of the waveform to be played. A waveform identifier is an integer value referring to the index position of a waveform in the library. Playback begins at register address 0x0F when the user asserts the GO bit (register 0x0C). hen playback of that waveform ends, the waveform sequencer plays the ext waveform identifier held in register 0x10, if the next waveform identifier is non-zero. The waveform sequencer continues in this way until he sequencer reaches an identifier value of zero, or all eight identifiers are played (register addresses 0x0F through 0x16), whichever comes first. If WAIT3 is set to 1, then this parameter is used to insert a delay given by: Delay time = 10 ms x WAV_FRM_SEQ3[6:0].	
				O Signals the waveform sequencer to stop when it attempts to play this identifier.	



### 8.7.19 Address: 0x12

# Figure 60. 0x12

7	6	5	4	3	2	1	0		
WAIT4[0]			W	/AV_FRM_SEQ4[6	:0]				
R/W-0		R/W-0							

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 22. Address: 0x12

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION	
7	WAIT4	R/W	0	When this bit is set, the WAV_FRM_SEQ4[6:0] is interpreted as a wait time in which the playback engine idles. This bit is used to insert timed delays between sequentially played waveforms. Delay time = 10 ms × WAV_FRM_SEQ4[6:0]. If this bit is 0, then WAV_FRM_SEQ4[6:0] is interpreted as a waveform identifier for sequence playback.	
				0 WAV_FRM_SEQ4[6:0] is interpreted as a waveform identifier for sequence playba	
				1 WAV_FRM_SEQ4[6:0] is interpreted as a delay.	
6-0	WAV_FRM_SEQ4[6:0]	R/W	0	This parameter holds the waveform identifier of the waveform to be played. A waveform identifier is an integer value referring to the index position of a waveform in the library. Playback begins at register address 0x0F when the user asserts the GO bit (register 0x0C). hen playback of that waveform ends, the waveform sequencer plays the ext waveform identifier held in register 0x10, if the next waveform identifier is non-zero. The waveform sequencer continues in this way until he sequencer reaches an identifier value of zero, or all eight identifiers are played (register addresses 0x0F through 0x16), whichever comes first. If WAIT4 is set to 1, then this parameter is used to insert a delay given by: Delay time = 10 ms x WAV_FRM_SEQ4[6:0].	
				O Signals the waveform sequencer to stop when it attempts to play this identifier.	

#### 8.7.20 Address: 0x13

# Figure 61. 0x13

7	6	5	4	3	2	1	0		
WAIT5[0]		WAV_FRM_SEQ5[6:0]							
R/W-0		R/W-0							

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 23. Address: 0x13

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION	
7	WAIT5	R/W	0	When this bit is set, the WAV_FRM_SEQ5[6:0] is interpreted as a wait time in which the playback engine idles. This bit is used to insert timed delays between sequentially played waveforms. Delay time = 10 ms × WAV_FRM_SEQ5[6:0]. If this bit is 0, then WAV_FRM_SEQ5[6:0] is interpreted as a waveform identifier for sequence playback.	
				0 WAV_FRM_SEQ5[6:0] is interpreted as a waveform identifier for sequence playback.	
				1 WAV_FRM_SEQ5[6:0] is interpreted as a delay.	
6-0	WAV_FRM_SEQ5[6:0]	R/W	0	This parameter holds the waveform identifier of the waveform to be played. A waveform identifier is an integer value referring to the index position of a waveform in the library. Playback begins at register address 0x0F when the user asserts the GO bit (register 0x0C). hen playback of that waveform ends, the waveform sequencer plays the ext waveform identifier held in register 0x10, if the next waveform identifier is non-zero. The waveform sequencer continues in this way until he sequencer reaches an identifier value of zero, or all eight identifiers are played (register addresses 0x0F through 0x16), whichever comes first. If WAIT5 is set to 1, then this parameter is used to insert a delay given by: Delay time = 10 ms x WAV_FRM_SEQ5[6:0].	
				O Signals the waveform sequencer to stop when it attempts to play this identifier.	



### 8.7.21 Address: 0x14

# Figure 62. 0x14

7	6	5	4	3	2	1	0	
WAIT6[0]			V	VAV_FRM_SEQ6[6	5:0]			
R/W-0		R/W-0						

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 24. Address: 0x14

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7	WAIT6	R/W	0	When this bit is set, the WAV_FRM_SEQ6[6:0] is interpreted as a wait time in which the playback engine idles. This bit is used to insert timed delays between sequentially played waveforms. Delay time = 10 ms × WAV_FRM_SEQ6[6:0]. If this bit is 0, then WAV_FRM_SEQ6[6:0] is interpreted as a waveform identifier for sequence playback.
				0 WAV_FRM_SEQ6[6:0] is interpreted as a waveform identifier for sequence playback.
				1 WAV_FRM_SEQ6[6:0] is interpreted as a delay.
6-0	WAV_FRM_SEQ6[6:0]	R/W	0	This parameter holds the waveform identifier of the waveform to be played. A waveform identifier is an integer value referring to the index position of a waveform in the library. Playback begins at register address 0x0F when the user asserts the GO bit (register 0x0C). hen playback of that waveform ends, the waveform sequencer plays the ext waveform identifier held in register 0x10, if the next waveform identifier is non-zero. The waveform sequencer continues in this way until he sequencer reaches an identifier value of zero, or all eight identifiers are played (register addresses 0x0F through 0x16), whichever comes first. If WAIT6 is set to 1, then this parameter is used to insert a delay given by: Delay time = 10 ms x WAV_FRM_SEQ6[6:0].
				O Signals the waveform sequencer to stop when it attempts to play this identifier.

#### 8.7.22 Address: 0x15

# Figure 63. 0x15

7	6	5	4	3	2	1	0
WAIT7[0]			W	AV_FRM_SEQ7[6	5:0]		
R/W-0				R/W-0			

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 25. Address: 0x15

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION	
7	WAIT7	R/W	0	When this bit is set, the WAV_FRM_SEQ7[6:0] is interpreted as a wait time in which the playback engine idles. This bit is used to insert timed delays between sequentially played waveforms. Delay time = 10 ms × WAV_FRM_SEQ7[6:0]. If this bit is 0, then WAV_FRM_SEQ7[6:0] is interpreted as a waveform identifier for sequence playback.	
				0 WAV_FRM_SEQ7[6:0] is interpreted as a waveform identifier for sequence playback.	
				1 WAV_FRM_SEQ7[6:0] is interpreted as a delay.	
6-0	WAV_FRM_SEQ7[6:0]	R/W	0	This parameter holds the waveform identifier of the waveform to be played. A waveform identifier is an integer value referring to the index position of a waveform in the library. Playback begins at register address 0x0F when the user asserts the GO bit (register 0x0C). hen playback of that waveform ends, the waveform sequencer plays the ext waveform identifier held in register 0x10, if the next waveform identifier is non-zero. The waveform sequencer continues in this way until he sequencer reaches an identifier value of zero, or all eight identifiers are played (register addresses 0x0F through 0x16), whichever comes first. If WAIT7 is set to 1, then this parameter is used to insert a delay given by: Delay time = 10 ms × WAV_FRM_SEQ7[6:0].	
				O Signals the waveform sequencer to stop when it attempts to play this identifier.	



### 8.7.23 Address: 0x16

# Figure 64. 0x16

7	6	5	4	3	2	1	0
WAIT8[0]			W	/AV_FRM_SEQ8[6	:0]		
R/W-0				R/W-0			

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 26. Address: 0x16

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7	WAIT8	R/W	0	When this bit is set, the WAV_FRM_SEQ8[6:0] is interpreted as a wait time in which the playback engine idles. This bit is used to insert timed delays between sequentially played waveforms. Delay time = 10 ms × WAV_FRM_SEQ8[6:0]. If this bit is 0, then WAV_FRM_SEQ8[6:0] is interpreted as a waveform identifier for sequence playback.
				0 WAV_FRM_SEQ8[6:0] is interpreted as a waveform identifier for sequence playback.
				1 WAV_FRM_SEQ8[6:0] is interpreted as a delay.
6-0	WAV_FRM_SEQ8[6:0]	R/W	0	This parameter holds the waveform identifier of the waveform to be played. A waveform identifier is an integer value referring to the index position of a waveform in the library. Playback begins at register address 0x0F when the user asserts the GO bit (register 0x0C). hen playback of that waveform ends, the waveform sequencer plays the ext waveform identifier held in register 0x10, if the next waveform identifier is non-zero. The waveform sequencer continues in this way until he sequencer reaches an identifier value of zero, or all eight identifiers are played (register addresses 0x0F through 0x16), whichever comes first. If WAIT8 is set to 1, then this parameter is used to insert a delay given by: Delay time = 10 ms x WAV_FRM_SEQ8[6:0].
				O Signals the waveform sequencer to stop when it attempts to play this identifier.

#### 8.7.24 Address: 0x17

# Figure 65. 0x17

7 6	5	4	3	2	1	0
WAV4_SEQ_LOOP[1:0	] WAV3_SEC	Q_LOOP[1:0]	WAV2_SEQ	_LOOP[1:0]	WAV1_SEC	Q_LOOP[1:0]
R/W-0	RΛ	N-0	R/V	V-0	RΛ	W-0

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

#### Table 27. Address: 0x17

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-6	WAV4_SEQ_LOOP[1:0]	R/W	0	Contains the number of times that the effect stored in WAIT4 + WAV_FRM_SEQ4[6:0] will be played before moving onto the next effect.
				0 No loop, play only once.
				1 Loop once (play twice).
				2 Loop twice (play 3 times).
				3 Loop 3 times (play 4 times).
5-4	WAV3_SEQ_LOOP[1:0]	R/W	0	Contains the number of times that the effect stored in WAIT2 + WAV_FRM_SEQ2[6:0] will be played before moving onto the next effect.
				0 No loop, play only once.
				1 Loop once (play twice).
				2 Loop twice (play 3 times).
				3 Loop 3 times (play 4 times).
3-2	WAV2_SEQ_LOOP[1:0]	R/W	0	Contains the number of times that the effect stored in WAIT2 + WAV_FRM_SEQ2[6:0] will be played before moving onto the next effect.
				0 No loop, play once.
				1 Loop once (play twice).
				2 Loop twice (play 3 times).
				3 Loop 3 times (play 4 times).



# Table 27. Address: 0x17 (continued)

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION	
1-0	WAV1_SEQ_LOOP[1:0]	R/W	0	O Contains the number of times that the effect stored in WAIT1 + WAV_FRM_SEQ1[6:0] will be played before moving onto the next effect.	
				0 No loop, play only once.	
				1 Loop once (play twice).	
				2 Loop twice (play 3 times).	
				3 Loop 3 times (play 4 times).	

### 8.7.25 Address: 0x18

# Figure 66. 0x18

7	6	5	4	3	2	1	0
WAV8_SEQ	_LOOP[1:0]	WAV7_SEQ	_LOOP[1:0]	WAV6_SEC	Q_LOOP[1:0]	WAV5_SEQ	_LOOP[1:0]
R/V	V-0	R/V	V-0	R/	W-0	R/V	V-0

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 28. Address: 0x18

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-6	WAV8_SEQ_LOOP[1:0]	R/W	0	Contains the number of times that the effect stored in WAIT8 + WAV_FRM_SEQ8[6:0] will be played before moving onto the next effect.
				0 No loop, play only once.
				1 Loop once (play twice).
				2 Loop twice (play 3 times).
				3 Loop 3 times (play 4 times).
5-4	WAV7_SEQ_LOOP[1:0]	R/W	0	Contains the number of times that the effect stored in WAIT7 + WAV_FRM_SEQ7[6:0] will be played before moving onto the next effect.
				0 No loop, play only once.
				1 Loop once (play twice).
				2 Loop twice (play 3 times).
				3 Loop 3 times (play 4 times).
3-2	WAV6_SEQ_LOOP[1:0]	R/W	0	Contains the number of times that the effect stored in WAIT6 + WAV_FRM_SEQ6[6:0] will be played before moving onto the next effect.
				0 No loop, play only once.
				1 Loop once (play twice).
				2 Loop twice (play 3 times).
				3 Loop 3 times (play 4 times).
1-0	WAV5_SEQ_LOOP[1:0]	R/W	0	Contains the number of times that the effect stored in WAIT5 + WAV_FRM_SEQ5[6:0] will be played before moving onto the next effect.
				0 No loop, play only once.
				1 Loop once (play twice).
				2 Loop twice (play 3 times).
				3 Loop 3 times (play 4 times).



#### 8.7.26 Address: 0x19

# Figure 67. 0x19

7	6	5	4	3	2	1	0
		Reserved			WAV_	SEQ_MAIN_LOC	P[2:0]
		R/W-0				R/W-0	

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

#### Table 29. Address: 0x19

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION	
7-3	Reserved	R/W	0	Reserved	
2-0	WAV_SEQ_MAIN_LOOP[2:0]	R/W	0	Loop waveform sequencer for the amount of times specified in this register. The effects will be played until an identifier of 0 is reached, or until all 8 identifiers have been played. This sequence of identifiers are the ones that will be looped.	
				0 No loop, play the identifier sequence only once.	
				1 Loop once.	
				2 Loop twice.	
				3 Loop 3 times.	
				4 Loop 4 times.	
				5 Loop 5 times.	
				6 Loop 6 times.	
				7 Inifinite loops. (stop with trigger or GO bit).	

### 8.7.27 Address: 0x1A

# Figure 68. 0x1A

7	6	5	4	3	2	1	0
			OD	Γ[7:0]			
			R/	W-0			

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

#### Table 30. Address: 0x1A

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	ODT[7:0]	R/W	0	Adds a time offset to the overdrive portion of the library waveforms. Some motors require more overdrive time than others, therefore this register allows the user to add or take away overdrive time from the library waveforms. The maximum voltage value in the library waveform is automatically determined to be the overdrive portion. This register will only be useful in open loop mode. Overdrive is automatic for closed loop mode. The offset is interpreted as two's complement, so the time offset may be positive or negative. OverDrive Time Offset (ms) = ODT[7:0] × PLAYBACK_INTERVAL.

#### 8.7.28 Address: 0x1B

# Figure 69. 0x1B

7	6	5	4	3	2	1	0
			SPT	Γ[7:0]			
			R/	W-0			

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 31. Address: 0x1B

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	SPT[7:0]	R/W	0	Adds a time offset to the positive sustain portion of the library waveforms. Some motors have faster/slower response time than others, therefore this register allows the user to add or take away positive sustain time from the library waveforms. Any positive voltage value other than the overdrive portion will be considered a sustain positive value. The offset is interpreted as two's complement, so the time offset may be positive or negative. Sustain Time Positive Offset (ms) = SPT[7:0] x PLAYBACK_INTERVAL.



#### 8.7.29 Address: 0x1C

# Figure 70. 0x1C

7	6	5	4	3	2	1	0
			SNT	Γ[7:0]			
			RΛ	W-0			

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 32. Address: 0x1C

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	SNT[7:0]	R/W	0	Adds a time offset to the negative sustain portion of the library waveforms. Some motors have faster/slower response time than others, therefore this register allows the user to add or take away negative sustain time from the library waveforms. Any negative voltage value other than the overdrive portion will be considered a sustain negative value. The offset is interpreted as two's complement, so the time offset may be positive or negative. Sustain Time Negative Offset (ms) = SNT[7:0] × PLAYBACK_INTERVAL.

#### 8.7.30 Address: 0x1D

# Figure 71. 0x1D

7	6	5	4	3	2	1	0
			BRT	Γ[7:0]			
			R/	W-0			

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

#### Table 33. Address: 0x1D

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	BRT[7:0]	R/W	0	Adds a time offset to the braking portion of the library waveforms. Some motors require more braking time than others, therefore this register allows the user to add or take away brake time from the library waveforms. The most negative voltage value in the library waveform is automatically determined to be the braking portion. This register will only be useful in open loop mode. Braking is automatic for closed loop mode. The offset is interpreted as two's complement, so the time offset may be positive or negative. Time Brake Offset (ms) = BRT[7:0] x PLAYBACK_INTERVAL.

### 8.7.31 Address: 0x1F

# Figure 72. 0x1F

7	6	5	4	3	2	1	0
			RATED_VC	LTAGE[7:0]			
R/W-0	R/W-0	R/W-1	R/W-1	R/W-1	R/W-1	R/W-1	R/W-1

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 34. Address: 0x1F

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	RATED_VOLTAGE[7:0]	R/W	63	This bit sets the reference voltage for full-scale output during closed-loop operation. The auto-calibration routine uses this register as an input, therefore this register must be written with the rated voltage value of the motor before calibration is performed. Modification of this register value should be followed by calibration to set A_CAL_BEMF appropriately.



### 8.7.32 Address: 0x20

# Figure 73. 0x20

7	6	5	4	3	2	1	0
			OD_CLA	AMP[7:0]			
R/W-1	R/W-0	R/W-0	R/W-0	R/W-1	R/W-0	R/W-0	R/W-1

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 35. Address: 0x20

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	OD_CLAMP[7:0]	R/W	137	During closed-loop operation the actuator feedback allows the output voltage to go above the rated voltage during the automatic overdrive and automatic braking periods. The device limits this voltage to a maximum voltage defined in this parameter.

#### 8.7.33 Address: 0x21

# Figure 74. 0x21

7	6	5	4	3	2	1	0
			A_CAL_C	OMP[7:0]			
R/W-0	R/W-0	R/W-0	R/W-0	R/W-1	R/W-1	R/W-0	R/W-1

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 36. Address: 0x21

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	A_CAL_COMP[7:0]	R/W	13	This register contains the voltage-compensation result after execution of the calibration routine. The value stored in the A_CAL_COMP bit compensates for any resistive losses in the driver. The calibration routine checks the impedance of he actuator to automatically determine an appropriate value.

#### 8.7.34 Address: 0x22

### Figure 75. 0x22

7	6	5	4	3	2	1	0
			A_CAL_E	BEMF[7:0]			
R/W-0	R/W-1	R/W-1	R/W-0	R/W-1	R/W-1	R/W-0	R/W-1

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

#### Table 37. Address: 0x22

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	A_CAL_BEMF[7:0]	R/W	109	The digital playback engine uses this value to automatically determine the appropriate feedback gain for closed-loop operation.



### 8.7.35 Address: 0x23

# Figure 76. 0x23

7	6	5	4	3	2	1	0
NG_THRESH[0]	FB_	BRAKE_FACTO	R[2:0]	LOOP_G	GAIN[1:0]	BEMF_GAIN[1:0]	
R/W-0	R/W-0	R/W-1	R/W-1	R/W-0	R/W-1	R/W-1	R/W-0

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 38. Address: 0x23

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7	NG_THRESH	R/W	0	Output noise gate control. If the driver intends to drive a magnitude below the threshold selected in this bit, the output driver will send 0 (no output).
				0 4% of VDD.
				1 8% of VDD.
6-4	to a pos		3	Selects the feedback gain ratio between braking gain and driving gain. In general, it is desirable to add additional feedback gain while braking so that the actuator will brake as quickly as possible. Large ratios give less stable operation than lower ones. The advanced user may choose to optimize this register. Otherwise, the default value should give good performance for most actuators. This value should be set prior to running auto calibration.
				0 1.
				1 2.
				2 3.
				3 4.
				4 6.
				5 8.
				6 16.
				7 Removes feedback during braking (braking disabled).
3-2	LOOP_GAIN[1:0]	R/W	1	Selects a loop gain for the feedback control. This sets how fast the loop tries to make the back-EMF (and thus motor velocity) match the input signal level. Higher loop gain (faster settling) options will give less stable operation than lower loop gain (slower settling). The advanced user may choose to optimize this register. Otherwise, the default value should give good performance for most actuators. This value should be set prior to running auto calibration.
				0 Very Slow.
				1 Slow.
				2 Fast.
				3 Very Fast.
1-0	BEMF_GAIN[1:0]	R/W	2	Sets the analog gain of the back-EMF amplifier. This value is interpreted differently between ERM mode and LRA mode. Auto calibration will automatically populate BEMF_GAIN with the most appropriate value for the actuator. Note that a user may overwrite this value.
				0 5x for LRA Mode, 0.34x for ERM Mode.
				1 10x for LRA Mode, 1.05x for ERM Mode.
				2 20x for LRA Mode, 1.82x for ERM Mode.
				3 30x for LRA Mode, 4x for ERM Mode.

# 8.7.36 Address: 0x24

# Figure 77. 0x24

7	6	5	4	3	2	1	0
			RATED_VOLTA	GE_CLAMP[7:0]			
R/W-0	R/W-1	R/W-1	R/W-0	R/W-0	R/W-1	R/W-0	R/W-0

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 39. Address: 0x24

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	RATED_VOLTAGE_CLAMP[ 7:0]	R/W	100	This parameter is to set a clamp for the steady state voltage provided by the driver. This clamp is enforced after the overdrive section of the waveform. Note that if the OD_CLAMP is lower than this parameter, the lower clamp will be applied. The same is true if the BAT_LIFE_EXT_LVLx is triggered.



#### 8.7.37 Address: 0x25

# Figure 78. 0x25

7	6	5	4	3	2	1	0
			OD_CLAM	IP_LVL1[7:0]			
			R/	W-1			

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

#### Table 40. Address: 0x25

BI	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	OD_CLAMP_LVL1[7:0]	R/W	128	This parameter overwrites OD_CLAMP once VBAT is below BAT_LIFE_EXT_LVL1 value. This parameter will be ignored during autocal and diagnostics.

#### 8.7.38 Address: 0x26

# Figure 79. 0x26

7	6	5	4	3	2	1	0
			OD_CLAM	IP_LVL2[7:0]			
			R/	W-0			

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

#### Table 41. Address: 0x26

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	OD_CLAMP_LVL2[7:0]	R/W	0	This parameter overwrites OD_CLAMP and OD_CLAMP_LVL1 once VBAT is below BAT_LIFE_EXT_LVL2 value. his parameter will be ignored during autocal and diagnostics.

### 8.7.39 Address: 0x27

# Figure 80. 0x27

7	6	5	4	3	2	1	0
LRA_MIN_FRE Q_SEL[0]	LRA_RESYNC _FORMAT[0]	Reserved			DRIVE_TIME[4:0	]	
R/W-0	R/W-0	R/W-0	R/W-1	R/W-0	R/W-0	R/W-0	R/W-0

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

# Table 42. Address: 0x27

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION	
7	LRA_MIN_FREQ_SEL	R/W	0	Selects the minimum frequency supported by the device.	
				0 125 Hz.	
				1 45 Hz.	
6	LRA_RESYNC_FORMAT	R/W	0	Selects the method for re-sync mode to operate.	
				0 Based on LRA_MIN_FREQ_SEL.	
				1 Based on DRIVE_TIME * 1.25.	
5	Reserved	R/W	0	Reserved	



# Table 42. Address: 0x27 (continued)

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
4-0	DRIVE_TIME[4:0]	R/W	16	LRA Mode: Sets initial guess for LRA drive time in LRA mode. Drive time is automatically adjusted for optimum drive on the fly; however, this register should be optimized for the approximate LRA frequence. If it is set too low, it may affect the actuator startup time. If it is set too high, it may cause instability. Optimum DriveTime (ms) ≈ 0.5 x LRA Period. If the LRA does not exhibit a valid BEMF, then this parameter also sets the free-running frequency when LRA is not attached or BEMF is not present. ERM Mode: Sets the sample rate for the back-EMF detection. Lower drive times cause higher peak-to-average ratios in the output signal, requiring more supply headroom. Higher drive times cause the feedback to react at a slower rate.
				0 LRA: 0.5 ms; ERM: 1 ms.
				1 LRA: 0.6 ms; ERM: 1.2 ms.
				2 LRA: 0.7 ms; ERM: 1.4 ms.
				3 LRA: 0.8 ms; ERM: 1.6 ms.
				4 LRA: 0.9 ms; ERM: 1.8 ms.
				5 LRA: 1 ms; ERM: 2 ms.
				6 LRA: 1.1 ms; ERM: 2.2 ms.
				7 LRA: 1.2 ms; ERM: 2.4 ms.
				8 LRA: 1.3 ms; ERM: 2.6 ms.
				9 LRA: 1.4 ms; ERM: 2.8 ms.
				10 LRA: 1.5 ms; ERM: 3 ms.
				11 LRA: 1.6 ms; ERM: 3.2 ms.
				12 LRA: 1.7 ms; ERM: 3.4 ms.
				13 LRA: 1.8 ms; ERM: 3.6 ms.
				14 LRA: 1.9 ms; ERM: 3.8 ms.
				15 LRA: 2 ms; ERM: 4 ms.
				16 LRA: 2.1 ms; ERM: 4.2 ms.
				17 LRA: 2.2 ms; ERM: 4.4 ms.
				18 LRA: 2.3 ms; ERM: 4.6 ms.
				19 LRA: 2.4 ms; ERM: 4.8 ms.
				20 LRA: 2.5 ms; ERM: 5 ms.
				21 LRA: 2.6 ms; ERM: 5.2 ms.
				22 LRA: 2.7 ms; ERM: 5.4 ms.
				23 LRA: 2.8 ms; ERM: 5.6 ms.
				24 LRA: 2.9 ms; ERM: 5.8 ms.
				25 LRA: 3 ms; ERM: 6 ms.
				26 LRA: 3.1 ms; ERM: 6.2 ms.
				27 LRA: 3.2 ms; ERM: 6.4 ms.
				28 LRA: 3.3 ms; ERM: 6.6 ms.
				29 LRA: 3.4 ms; ERM: 6.8 ms.
				30 LRA: 3.5 ms; ERM: 7 ms.
				31 LRA: 3.6 ms; ERM: 7.2 ms.

8.7.40 Address: 0x28



# Figure 81. 0x28

7	6	5	4	3	2	1	0
	BLANKING	6_TIME[3:0]			IDISS_T	IME[3:0]	
R/W-0	R/W-0	R/W-0	R/W-1	R/W-0	R/W-0	R/W-0	R/W-1

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

# Table 43. Address: 0x28

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-4	BLANKING_TIME[3:0]	R/W	1	Time waiting for BEMF to settle. Before ADC sampling.
				0 LRA: 15 us, ERM: 45 us.
				1 LRA: 25 us, ERM: 75 us.
				2 LRA: 50 us, ERM: 150 us.
				3 LRA: 75 us, ERM: 225 us.
				4 LRA: 90 us, ERM: NA.
				5 LRA: 105 us, ERM: NA.
				6 LRA: 120 us, ERM: NA.
				7 LRA: 135 us, ERM: NA.
				8 LRA: 150 us, ERM: NA.
				9 LRA: 165 us, ERM: NA.
				10 LRA:180 us, ERM: NA.
				11 LRA: 195 us, ERM: NA.
				12 LRA: 210 us, ERM: NA.
				13 LRA: 235 us, ERM: NA.
				14 LRA: 260 us, ERM: NA.
				15 LRA: 285 us, ERM: NA.
3-0	IDISS_TIME[3:0]	R/W	1	Time waiting for inductor current to discharge
				0 LRA: 15 us, ERM: 45 us.
				1 LRA: 25 us, ERM: 75 us.
				2 LRA: 50 us, ERM: 150 us.
				3 LRA: 75 us, ERM: 225 us.
				4 LRA: 90 us, ERM: NA.
				5 LRA: 105 us, ERM: NA.
				6 LRA: 120 us, ERM: NA.
				7 LRA: 135 us, ERM: NA.
				8 LRA: 150 us, ERM: NA.
				9 LRA: 165 us, ERM: NA.
				10 LRA: 180 us, ERM: NA.
				11 LRA: 195 us, ERM: NA.
				12 LRA: 210 us, ERM: NA.
				13 LRA:235 us, ERM: NA.
				14 LRA: 260 us, ERM: NA.
				15 LRA: 285 us, ERM: NA.



### 8.7.41 Address: 0x29

# Figure 82. 0x29

7	6	5	4	3	2	1	0
Res	erved	OD_CLAMF	P_TIME[1:0]	SAMPLE_	TIME[1:0]	ZC_DET_	TIME[1:0]
R/	R/W-0		V-0	R/V	V-1	R/V	V-0

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

### Table 44. Address: 0x29

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION				
7-6	Reserved	R/W	0	Reserved				
5-4	OD_CLAMP_TIME[1:0]	R/W	0	This parameter allows the user to select the maximum time the overshoot will be allowed during the overdrive and braking periods. If enabled, after this period the output voltage will clamp to the rated voltage clamp. Note that since the output is being clamped at a specified amount of time, it may not coincide with a zero-crossing, During autocal or diagnostics, this parameter is ignored. Autocal always uses automatic overdrive.				
				Automatic Overdrive (overdrive time clamp is disabled)				
				1 Clamp overdrive time to 25 ms				
				2 Clamp overdrive time to 50 ms				
				3 Clamp overdrive time to 100 ms				
3-2	SAMPLE_TIME[1:0]	R/W	3	Time to wait before/after zero-crossing before adc samples BEMF amplitude.				
				0 150 us.				
				1 200 us.				
				2 250 us.				
				3 300 us.				
1-0	ZC_DET_TIME[1:0]	R/W	0	Zero crossing detection time.				
				0 100 us.				
				1 200 us.				
				2 300 us.				
				3 390 us.				

#### 8.7.42 Address: 0x2A

### Figure 83. 0x2A

7	6	5	4	3	2	1	0
	Reserved						L_TIME[1:0]
	R/W-0						R/W-0

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

# Table 45. Address: 0x2A

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-2	Reserved	R/W	0	Reserved
1-0	AUTO_CAL_TIME[1:0]	R/W	2	Duration of autocal routine. Sets the length of the auto calibration time. This should be enough time for the motor acceleration to settle when driven at the RATED_VOLTAGE value.
				0 250 ms.
				1 500 ms.
				2 1000 ms.
				Duration is trigger controlled (either external trigger, enable, or internal trigger).  Minimum duration should be 1 s, otherwise the result of the calibration may be corrupted. Once the cancellation trigger is received, the calibration measurements will be taken, which can take several milliseconds to complete.



### 8.7.43 Address: 0x2C

### Figure 84. 0x2C

7	6	5	4	3	2	1	0
LRA_AUTO_O PEN_LOOP[0]	AUTO_OL	AUTO_OL_CNT[1:0]		Rese	erved		LRA_WAVE_S HAPE[0]
R/W-0	R/V	V-0		R/V	V-0		R/W-0

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

#### Table 46. Address: 0x2C

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION		
7	LRA_AUTO_OPEN_LOOP	R/W	0	When enabled, the driver will automatically switch to open loop if ZC is not detected correctly for the number of cycles specified in AutoOpenLoop_CNT. The shape of the waveform for the open-loop will always be square, the LRA_WAVE_SHAPE bit will be ignored for this function.		
				0 Disable auto-open-loop.		
				1 Enable auto-open-loop.		
6-5	AUTO_OL_CNT[1:0]	R/W	0	Counter used when AutoOpenLoop = 1 to decide when to switch to open loop		
				0 3 attempts		
				1 4 attempts		
				2 5 attempts		
				3 6 attempts		
4-1	Reserved	R/W	0	Reserved		
0	LRA_WAVE_SHAPE	R/W	0	Selects which shape to use for driving the LRA when in open loop mode.		
				0 Square Wave.		
				1 Sine Wave.		

#### 8.7.44 Address: 0x2E

# Figure 85. 0x2E

7	6	5	4	3	2	1	0
	Reserved					OL_LRA_I	PERIOD[9:8]
		RΛ	W-0			R/	W-0

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

# Table 47. Address: 0x2E

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-2	Reserved	R/W	0	Reserved
1-0	OL_LRA_PERIOD[9:0]	R/W	198	This parameter sets the frequency that will be used to drive the LRA in open loop. LRA open loop period = OL_LRA_PERIOD[9:0] × 24.39 us.

#### 8.7.45 Address: 0x2F

# Figure 86. 0x2F

7	6	5	4	3	2	1	0					
	OL_LRA_PERIOD[7:0]											
R/W-1	R/W-1 R/W-1 R/W-0 R/W-0 R/W-1 R/W-1 R/W-0											

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

#### Table 48. Address: 0x2F

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	OL_LRA_PERIOD[9:0]	R/W	198	This parameter sets the frequency that will be used to drive the LRA in open loop. LRA open loop period = OL_LRA_PERIOD[9:0] x 24.615 us.



### 8.7.46 Address: 0x30

# Figure 87. 0x30

7	6	5	4	3	2	1	0			
	CURRENT_K[7:0]									
			R	t-0						

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

# Table 49. Address: 0x30

BIT	FIELD	TYPE	DEFAULT	DESCRIPTION
7-0	CURRENT_K[7:0]	R		Stores a coefficient to be used in calculating the true impedance of the actuator from the diagnostic run. This coeficient will be used in conjunction with DIAG_Z_RESULT parameter.



# 9 Application and Implementation

注

Information in the following applications sections is not part of the TI component specification, and TI does not warrant its accuracy or completeness. TI's customers are responsible for determining suitability of components for their purposes. Customers should validate and test their design implementation to confirm system functionality.

### 9.1 Application Information

The typical application for a haptic driver is in a touch-enabled system that already has an application processor which makes the decision on when to execute haptic effects.

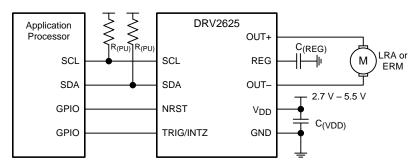


图 88. I<sup>2</sup>C Control with Optional External Trigger

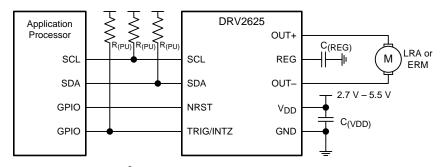


图 89. I<sup>2</sup>C Control with Optional Interrupt Pin

#### 表 50. Recommended External Components

COMPONENT	DESCRIPTION	SPECIFICATION	TYPICAL VALUE		
C <sub>(VDD)</sub>	Input capacitor	Capacitance	0.1 μF		
C <sub>(REG)</sub>	Regulator capacitor	Capacitance	0.1 μF		
R <sub>(PU)</sub>	Pull-up resistor	Resistance	2.2 kΩ		



### 9.2 Typical Application

A typical application of the DRV2625 device is in a system that has external buttons which fire different haptic effects when pressed. 图 90, 图 91 and 图 92 show typical schematics of such a system. The buttons can be physical buttons, capacitive-touch buttons, or GPIO signals coming from the touch-screen system.

Effects in this type of system are programmable.

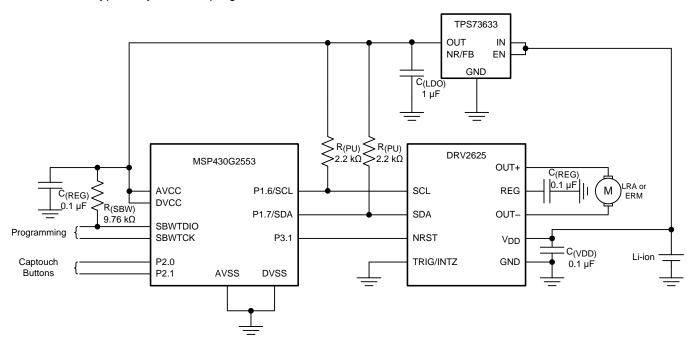


图 90. Typical Application Schematic Without External Trigger or Interrupt Pin

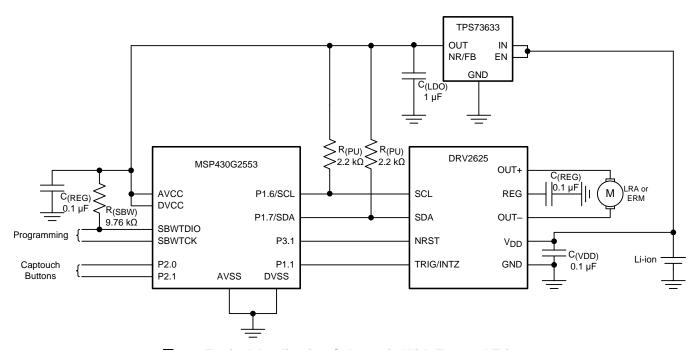


图 91. Typical Application Schematic With External Trigger



### Typical Application (接下页)

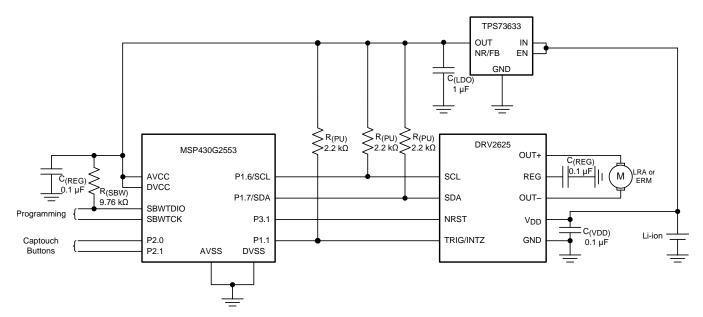


图 92. Typical Application Schematic With Interrupt Pin

#### 9.2.1 Design Requirements

For this design example, use the values listed in 表 51 as the input parameters.

表 51. Design Parameters

DESIGN PARAMETER	EXAMPLE VALUE
Interface	I <sup>2</sup> C, external trigger
Actuator type	LRA, ERM
Input power source	Li-ion/Li-polymer, 5-V boost

#### 9.2.2 Detailed Design Procedure

#### 9.2.2.1 Actuator Selection

The actuator decision is based on many factors including cost, form factor, vibration strength, power-consumption requirements, haptic sharpness requirements, reliability, and audible noise performance. The actuator selection is one of the most important design considerations of a haptic system and therefore the actuator should be the first component to consider when designing the system. The following sections list the basics of ERM and LRA actuators.

#### 9.2.2.1.1 Eccentric Rotating-Mass Motors (ERM)

Eccentric rotating-mass motors (ERMs) are typically DC-controlled motors of the bar or coin type. ERMs can be driven in the clockwise direction or counter-clockwise direction depending on the polarity of voltage across the two pins. Bidirectional drive is made possible in a single-supply system by differential outputs that are capable of sourcing and sinking current. This feature helps eliminate long vibration tails which are undesirable in haptic feedback systems.



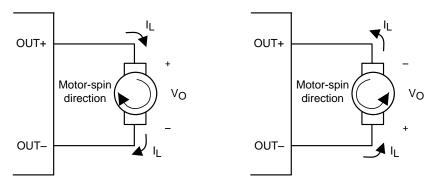


图 93. Motor Spin Direction in ERM Motors

Another common approach to driving DC motors is the concept of overdrive voltage. To overcome the inertia of the mass of the motor, these motors are often *overdriven* for a short amount of time before returning to the rated voltage of the motor to sustain the rotation of the motor. Overdrive is also used to stop (or brake) a motor quickly. Refer the data sheet of the motor for safe and reliable overdrive voltage and duration.

#### 9.2.2.1.2 Linear Resonance Actuators (LRA)

Linear resonant actuators (LRAs) vibrate optimally at the resonant frequency. LRAs have a high-Q frequency response because of a rapid drop in vibration performance at the offsets of 3 to 5 Hz from the resonant frequency. Many factors also cause a shift or drift in the resonant frequency of the actuator such as temperature, aging, the mass of the product to which the LRA is mounted, and in the case of a portable product, the manner in which the product is held. Furthermore, as the actuator is driven to the maximum allowed voltage, many LRAs will shift several hertz in frequency because of mechanical compression. All of these factors make a real-time tracking auto-resonant algorithm critical when driving LRA to achieve consistent, optimized performance.

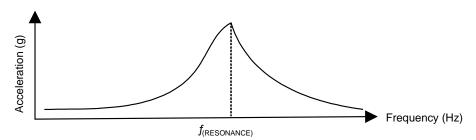


图 94. Typical LRA Response

#### 9.2.2.1.2.1 Auto-Resonance Engine for LRA

The DRV2625 auto-resonance engine tracks the resonant frequency of an LRA in real time effectively locking into the resonance frequency after half a cycle. If the resonant frequency shifts in the middle of a waveform for any reason, the engine tracks the frequency from cycle to cycle. The auto resonance engine accomplishes the tracking by constantly monitoring the back-EMF of the actuator. Note that the auto resonance engine is not affected by the auto-calibration process which is only used for level calibration. No calibration is required for the auto resonance engine.

#### 9.2.2.2 Capacitor Selection

The DRV2625 device has a switching output stage which pulls transient currents through the  $V_{DD}$  pin. Placing a 0.1- $\mu$ F low equivalent-series-resistance (ESR) supply-bypass capacitor of the X5R or X7R type near the  $V_{DD}$  supply pin is recommended for proper operation of the output driver and the digital portion of the device. Place a 0.1- $\mu$ F X5R or X7R-type capacitor from the REG pin to ground.



#### 9.2.2.3 Interface Selection

The DRV2625 device was designed with a default configuration that supports a wide variety of LRA actuators. If an actuator compatible with the default of the device is selected, then the SimpleDrive can be used without the use of  $I^2C$  interface. For this case, the user has 3 options available: controlling the NRST and TRIG/INTZ pin independently (4 pin interface: VDD, GND, NRST, TRIG/INTZ), shorting NRST with TRIG/INTZ pin and controlling them with a single GPIO (3 pin interface: VDD, GND, TRIG), or shorting NRST, TRIG/INTZ and VDD together (2 pin interface: VDD, GND). Note that for the 2-pin interface, the VDD signal must ramp faster than the startup time (about 500  $\mu$ s) otherwise a UVLO condition will be detected which will prevent the device from playing the desired waveform


The I<sup>2</sup>C interface is required to configure the device. The device can be used fully with this interface with either RTP or internal memory. The advantage of using this interface is that no additional GPIO (for the TRIG/INTZ pin) is required for firing effects. Therefore the TRIG/INTZ pin can be connected to GND. Using the external trigger pin has the advantage that no I<sup>2</sup>C transaction is required to fire the pre-loaded effect, which is a good choice for interfacing with a button.

#### 9.2.2.4 Power Supply Selection

The DRV2625 device supports a wide range of voltages in the input. Ensuring that the battery voltage is high enough to support the desired vibration strength with the selected actuator is an important design consideration. The typical application uses Li-ion or Li-polymer batteries which provide enough voltage headroom to drive most common actuators.

If very strong vibrations are desired, a boost converter can be placed between the power supply and the  $V_{DD}$  pin to provide a constant voltage with a healthy headroom (5-V rails are common in some systems) which is particularly true if 2 AA batteries in series are being used to power the system.

#### 9.2.3 Application Curves

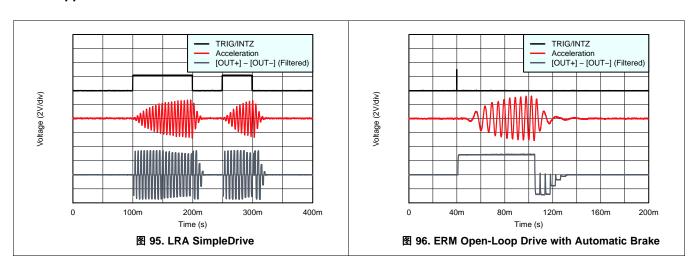

#### 9.3 Initialization Set Up

#### 9.3.1 Initialization Procedure

- 1. After power-up, wait at least 1 ms before the DRV2625 device accepts I<sup>2</sup>C commands.
- 2. Assert the NRST pin (logic high). The NRST pin can be asserted any time during or after the ?? µs wait period.
- 3. Write the MODE parameter (address 0x01) to value 0x00 to remove the device from standby mode.
- 4. Run auto-calibration to configure the DRV2625 device for the desired actuator. Alternatively, rewrite the results from a previous calibration.
- 5. If using the embedded ROM library, write the library selection bit (LIB\_SEL)to select a library.



# Initialization Set Up (接下页)

注

The DRV2625 device defaults to closed-loop mode with external trigger option selected in the level (enable) configuration and in RTP mode. To use other modes and features, refer to the regiter map.

#### 9.3.2 Typical Usage Examples

#### 9.3.2.1 Play a Waveform or Waveform Sequence from the ROM Waveform Memory

- 1. Initialize the device as listed in the *Initialization Procedure* section.
- 2. Select the desired TRIG/INTZ pin function by changing the TRIG\_PIN\_FUNC parameter.
- 3. Identify the waveform index to be played and populate the waveform sequencer.
- 4. Trigger the waveform using the desired trigger method (GO bit, or external trigger). Note that if using the interrupt functionality, only the GO bit can be used to trigger the process.
- 5. Device will automatically go into standby upon completion of the playback

#### 9.3.2.2 Play a Real-Time Playback (RTP) Waveform

- 1. Initialize the device as shown in the *Initialization Procedure* section.
- 2. Write the desired drive amplitude to the real-time playback input register RTP INPUT[7:0].
- 3. Trigger the waveform using the desired trigger method (GO bit, or external trigger). Note that if using the interrupt functionality, only the GO bit can be used to trigger the process.
- 4. Continue writing to the RTP INPUT[7:0] if/when desired to achieve the desired haptic effect.
- 5. Send a stop trigger using the desired trigger method (GO bit, or external trigger). Note that if using the interrupt functionality, only the GO bit can be used to trigger the process.
- 6. Device will automatically go into standby upon completion of the playback



# 10 Power Supply Recommendations

The DRV2625 device is designed to operate from an input-voltage supply range between 2.7 V to 5.5 V. The decoupling capacitor for the power supply should be placed closed to the device pin.



# 11 Layout

# 11.1 Layout Guidelines

The decoupling capacitor for the power supply ( $V_{DD}$  should be placed close to the device pin. The filtering capacitor for the regulator (REG) should be placed close to the device REG pin. When creating the pad size for the WCSP pins, TI recommends that the PCB layout use nonsolder mask-defined (NSMD) land. With this method, the solder mask opening is made larger than the desired land area and the opening size is defined by the copper pad width.

# 11.2 Layout Examples

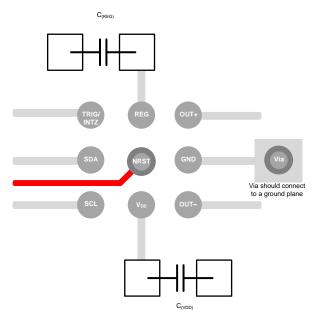


图 97. Typical Layout

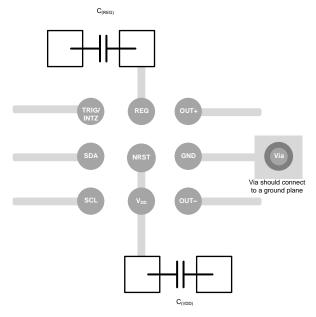


图 98. Layout without NRST Functionality



# 12 器件和文档支持

# 12.1 器件支持

# 12.1.1 Waveform Library Effects List

EFFECT ID NO.	WAVEFORM NAME	EFFECT ID NO.;	WAVEFORM NAME	EFFECT ID NO.	WAVEFORM NAME
1	Strong Click - 100%	42	Long Double Sharp Click Medium 2 – 80%	83	Transition Ramp Up Long Smooth 2 – 0 to 100%
2	Strong Click - 60%	43	Long Double Sharp Click Medium 3 – 60%	84	Transition Ramp Up Medium Smooth 1 – 0 to 100%
3	Strong Click - 30%	44	Long Double Sharp Tick 1 – 100%	85	Transition Ramp Up Medium Smooth 2 – 0 to 100%
4	Sharp Click - 100%	45	Long Double Sharp Tick 2 – 80%	86	Transition Ramp Up Short Smooth 1 – 0 to 100%
5	Sharp Click - 60%	46	Long Double Sharp Tick 3 – 60%	87	Transition Ramp Up Short Smooth 2 – 0 to 100%
6	Sharp Click - 30%	47	Buzz 1 – 100%	88	Transition Ramp Up Long Sharp 1 – 0 to 100%
7	Soft Bump - 100%	48	Buzz 2 – 80%	89	Transition Ramp Up Long Sharp 2 – 0 to 100%
8	Soft Bump - 60%	49	Buzz 3 – 60%	90	Transition Ramp Up Medium Sharp 1 – 0 to 100%
9	Soft Bump - 30%	50	Buzz 4 – 40%	91	Transition Ramp Up Medium Sharp 2 – 0 to 100%
10	Double Click - 100%	51	Buzz 5 – 20%	92	Transition Ramp Up Short Sharp 1 – 0 to 100%
11	Double Click - 60%	52	Pulsing Strong 1 – 100%	93	Transition Ramp Up Short Sharp 2 – 0 to 100%
12	Triple Click - 100%	53	Pulsing Strong 2 – 60%	94	Transition Ramp Down Long Smooth 1 – 50 to 0%
13	Soft Fuzz - 60%	54	Pulsing Medium 1 – 100%	95	Transition Ramp Down Long Smooth 2 – 50 to 0%
14	Strong Buzz - 100%	55	Pulsing Medium 2 – 60%	96	Transition Ramp Down Medium Smooth 1 – 50 to 0%
15	750 ms Alert 100%	56	Pulsing Sharp 1 – 100%	97	Transition Ramp Down Medium Smooth 2 – 50 to 0%
16	1000 ms Alert 100%	57	Pulsing Sharp 2 – 60%	98	Transition Ramp Down Short Smooth 1 – 50 to 0%
17	Strong Click 1 - 100%	58	Transition Click 1 – 100%	99	Transition Ramp Down Short Smooth 2 – 50 to 0%
18	Strong Click 2 - 80%	59	Transition Click 2 – 80%	100	Transition Ramp Down Long Sharp 1 – 50 to 0%
19	Strong Click 3 - 60%	60	Transition Click 3 – 60%	101	Transition Ramp Down Long Sharp 2 – 50 to 0%
20	Strong Click 4 - 30%	61	Transition Click 4 – 40%	102	Transition Ramp Down Medium Sharp 1 – 50 to 0%
21	Medium Click 1 - 100%	62	Transition Click 5 – 20%	103	Transition Ramp Down Medium Sharp 2 - 50 to 0%
22	Medium Click 2 - 80%	63	Transition Click 6 – 10%	104	Transition Ramp Down Short Sharp 1 – 50 to 0%
23	Medium Click 3 - 60%	64	Transition Hum 1 – 100%	105	Transition Ramp Down Short Sharp 2 - 50 to 0%
24	Sharp Tick 1 - 100%	65	Transition Hum 2 – 80%	106	Transition Ramp Up Long Smooth 1 – 0 to 50%
25	Sharp Tick 2 - 80%	66	Transition Hum 3 – 60%	107	Transition Ramp Up Long Smooth 2 – 0 to 50%
26	Sharp Tick 3 – 60%	67	Transition Hum 4 – 40%	108	Transition Ramp Up Medium Smooth 1 – 0 to 50%
27	Short Double Click Strong 1 – 100%	68	Transition Hum 5 – 20%	109	Transition Ramp Up Medium Smooth 2 – 0 to 50%
28	Short Double Click Strong 2 – 80%	69	Transition Hum 6 – 10%	110	Transition Ramp Up Short Smooth 1 – 0 to 50%
29	Short Double Click Strong 3 – 60%	70	Transition Ramp Down Long Smooth 1 – 100 to 0%	111	Transition Ramp Up Short Smooth 2 – 0 to 50%
30	Short Double Click Strong 4 – 30%	71	Transition Ramp Down Long Smooth 2 – 100 to 0%	112	Transition Ramp Up Long Sharp 1 – 0 to 50%
31	Short Double Click Medium 1 – 100%	72	Transition Ramp Down Medium Smooth 1 – 100 to 0%	113	Transition Ramp Up Long Sharp 2 – 0 to 50%
32	Short Double Click Medium 2 – 80%	73	Transition Ramp Down Medium Smooth 2 – 100 to 0%	114	Transition Ramp Up Medium Sharp 1 – 0 to 50%
33	Short Double Click Medium 3 – 60%	74	Transition Ramp Down Short Smooth 1 – 100 to 0%	115	Transition Ramp Up Medium Sharp 2 – 0 to 50%
34	Short Double Sharp Tick 1 – 100%	75	Transition Ramp Down Short Smooth 2 – 100 to 0%	116	Transition Ramp Up Short Sharp 1 – 0 to 50%
35	Short Double Sharp Tick 2 – 80%	76	Transition Ramp Down Long Sharp 1 – 100 to 0%	117	Transition Ramp Up Short Sharp 2 – 0 to 50%
36	Short Double Sharp Tick 3 – 60%	77	Transition Ramp Down Long Sharp 2 – 100 to 0%	118	Long buzz for programmatic stopping – 100%
37	Long Double Sharp Click Strong 1 – 100%	78	Transition Ramp Down Medium Sharp 1 – 100 to 0%	119	Smooth Hum 1 (No kick or brake pulse) – 50%
38	Long Double Sharp Click Strong 2 – 80%	79	Transition Ramp Down Medium Sharp 2 – 100 to 0%	120	Smooth Hum 2 (No kick or brake pulse) – 40%
39	Long Double Sharp Click Strong 3 – 60%	80	Transition Ramp Down Short Sharp 1 – 100 to 0%	121	Smooth Hum 3 (No kick or brake pulse) – 30%
40	Long Double Sharp Click Strong 4 – 30%	81	Transition Ramp Down Short Sharp 2 – 100 to 0%	122	Smooth Hum 4 (No kick or brake pulse) – 20%
41	Long Double Sharp Click Medium 1 – 100%	82	Transition Ramp Up Long Smooth 1 – 0 to 100%	123	Smooth Hum 5 (No kick or brake pulse) – 10%



The following links connect to TI community resources. Linked contents are provided "AS IS" by the respective contributors. They do not constitute TI specifications and do not necessarily reflect TI's views; see TI's Terms of Use.

TI E2E™ Online Community TI's Engineer-to-Engineer (E2E) Community. Created to foster collaboration among engineers. At e2e.ti.com, you can ask questions, share knowledge, explore ideas and help solve problems with fellow engineers.

**Design Support** *TI's Design Support* Quickly find helpful E2E forums along with design support tools and contact information for technical support.

#### 12.2 商标

E2E is a trademark of Texas Instruments.

TouchSense is a registered trademark of Immersion Corporation.

All other trademarks are the property of their respective owners.

### 12.3 静电放电警告



这些装置包含有限的内置 ESD 保护。 存储或装卸时,应将导线一起截短或将装置放置于导电泡棉中,以防止 MOS 门极遭受静电损伤。

#### 12.4 Glossary

SLYZ022 — TI Glossary.

This glossary lists and explains terms, acronyms, and definitions.



# 13 机械、封装和可订购信息

以下页中包括机械、封装和可订购信息。这些信息是针对指定器件可提供的最新数据。这些数据会在无通知且不对本文档进行修订的情况下发生改变。欲获得该数据表的浏览器版本,请查阅左侧的导航栏。


YFF0009-C01



# **PACKAGE OUTLINE**

# DSBGA - 0.625 mm max height

DIE SIZE BALL GRID ARRAY

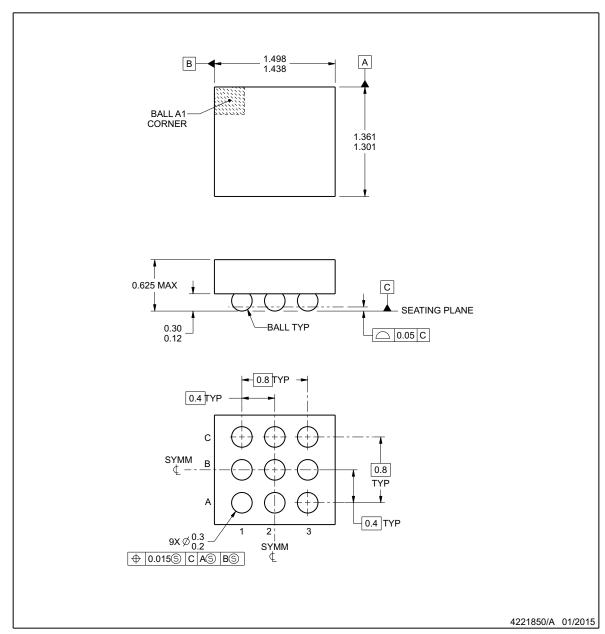

#### NOTES:

- All linear dimensions are in millimeters. Any dimensions in parenthesis are for reference only. Dimensioning and tolerancing per ASME Y14.5M.
   This drawing is subject to change without notice.




### **EXAMPLE BOARD LAYOUT**

# YFF0009-C01

# DSBGA - 0.625 mm max height

DIE SIZE BALL GRID ARRAY

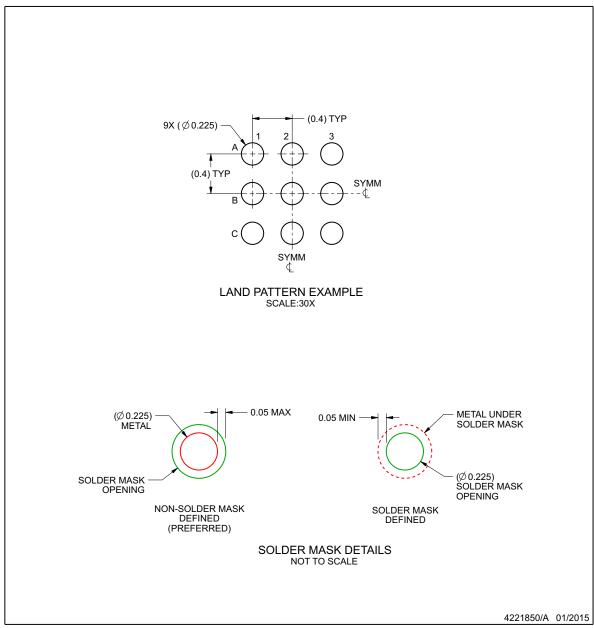

NOTES: (continued)

3. Final dimensions may vary due to manufacturing tolerance considerations and also routing constraints. For more information, see Texas Instruments literature number SNVA009 (www.ti.com/lit/snva009).




### **EXAMPLE STENCIL DESIGN**

# YFF0009-C01

# DSBGA - 0.625 mm max height

DIE SIZE BALL GRID ARRAY

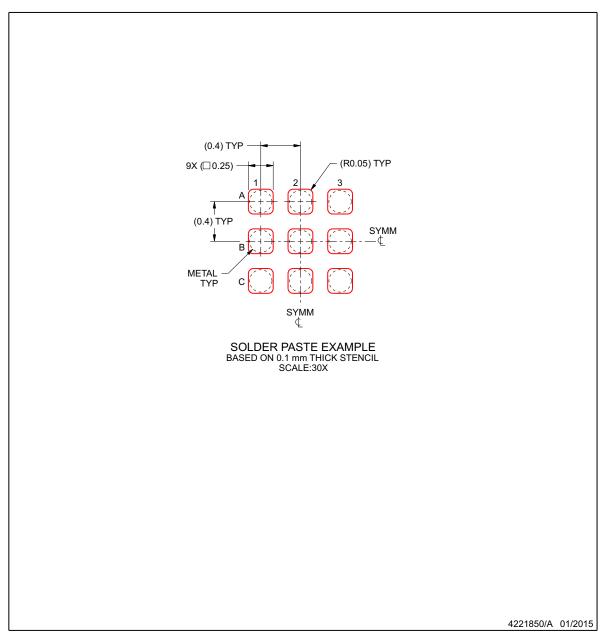

NOTES: (continued)

4. Laser cutting apertures with trapezoidal walls and rounded corners may offer better paste release.



# PACKAGE OPTION ADDENDUM

10-Dec-2020

#### **PACKAGING INFORMATION**

www.ti.com

Orderable Device	Status (1)	Package Type	Package Drawing	Pins	Package Qty	Eco Plan	Lead finish/ Ball material	MSL Peak Temp	Op Temp (°C)	Device Marking (4/5)	Samples
DRV2625YFFR	ACTIVE	DSBGA	YFF	9	3000	RoHS & Green	SNAGCU	Level-1-260C-UNLIM	-40 to 85	2625	Samples
DRV2625YFFT	ACTIVE	DSBGA	YFF	9	250	RoHS & Green	SNAGCU	Level-1-260C-UNLIM	-40 to 85	2625	Samples

(1) The marketing status values are defined as follows:

**ACTIVE:** Product device recommended for new designs.

LIFEBUY: TI has announced that the device will be discontinued, and a lifetime-buy period is in effect.

NRND: Not recommended for new designs. Device is in production to support existing customers, but TI does not recommend using this part in a new design.

PREVIEW: Device has been announced but is not in production. Samples may or may not be available.

**OBSOLETE:** TI has discontinued the production of the device.

(2) RoHS: TI defines "RoHS" to mean semiconductor products that are compliant with the current EU RoHS requirements for all 10 RoHS substances, including the requirement that RoHS substance do not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, "RoHS" products are suitable for use in specified lead-free processes. TI may reference these types of products as "Pb-Free".

RoHS Exempt: TI defines "RoHS Exempt" to mean products that contain lead but are compliant with EU RoHS pursuant to a specific EU RoHS exemption.

Green: TI defines "Green" to mean the content of Chlorine (CI) and Bromine (Br) based flame retardants meet JS709B low halogen requirements of <=1000ppm threshold. Antimony trioxide based flame retardants must also meet the <=1000ppm threshold requirement.

- (3) MSL, Peak Temp. The Moisture Sensitivity Level rating according to the JEDEC industry standard classifications, and peak solder temperature.
- (4) There may be additional marking, which relates to the logo, the lot trace code information, or the environmental category on the device.
- (5) Multiple Device Markings will be inside parentheses. Only one Device Marking contained in parentheses and separated by a "~" will appear on a device. If a line is indented then it is a continuation of the previous line and the two combined represent the entire Device Marking for that device.
- (6) Lead finish/Ball material Orderable Devices may have multiple material finish options. Finish options are separated by a vertical ruled line. Lead finish/Ball material values may wrap to two lines if the finish value exceeds the maximum column width.

**Important Information and Disclaimer:** The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.






10-Dec-2020

PACKAGE MATERIALS INFORMATION

www.ti.com 17-Oct-2019

# TAPE AND REEL INFORMATION



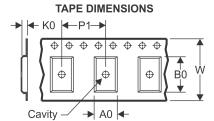

	Dimension designed to accommodate the component width
B0	Dimension designed to accommodate the component length
K0	Dimension designed to accommodate the component thickness
W	Overall width of the carrier tape
P1	Pitch between successive cavity centers

QUADRANT ASSIGNMENTS FOR PIN 1 ORIENTATION IN TAPE



#### \*All dimensions are nominal

Device	Package Type	Package Drawing		SPQ	Reel Diameter (mm)	Reel Width W1 (mm)	A0 (mm)	B0 (mm)	K0 (mm)	P1 (mm)	W (mm)	Pin1 Quadrant
DRV2625YFFR	DSBGA	YFF	9	3000	180.0	8.4	1.52	1.56	0.71	4.0	8.0	Q1
DRV2625YFFT	DSBGA	YFF	9	250	180.0	8.4	1.52	1.56	0.71	4.0	8.0	Q1

www.ti.com 17-Oct-2019




#### \*All dimensions are nominal

Device	Package Type	e Type Package Drawing		SPQ	Length (mm)	Width (mm)	Height (mm)
DRV2625YFFR	DSBGA	YFF	9	3000	182.0	182.0	20.0
DRV2625YFFT	DSBGA	YFF	9	250	210.0	185.0	35.0



DIE SIZE BALL GRID ARRAY

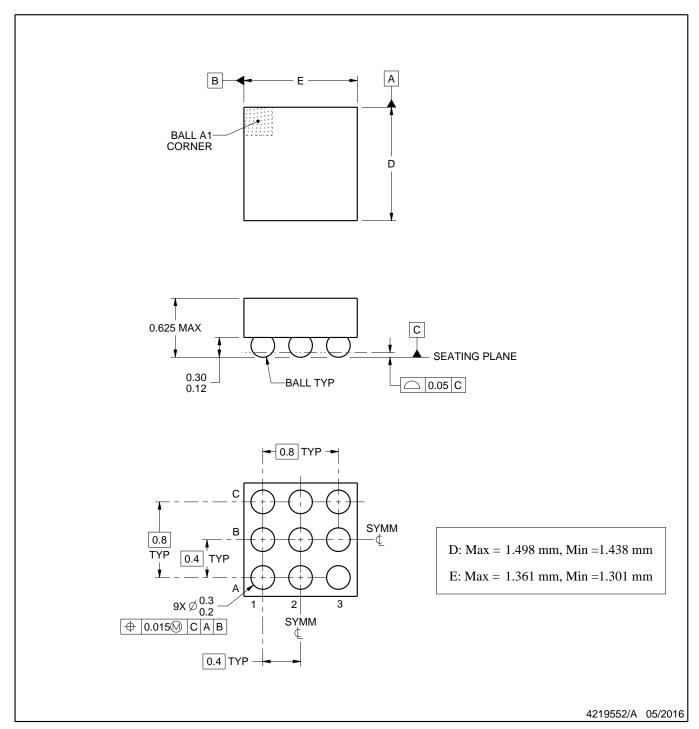


#### NOTES:

- 1. All linear dimensions are in millimeters. Any dimensions in parenthesis are for reference only. Dimensioning and tolerancing per ASME Y14.5M.

  2. This drawing is subject to change without notice.



DIE SIZE BALL GRID ARRAY

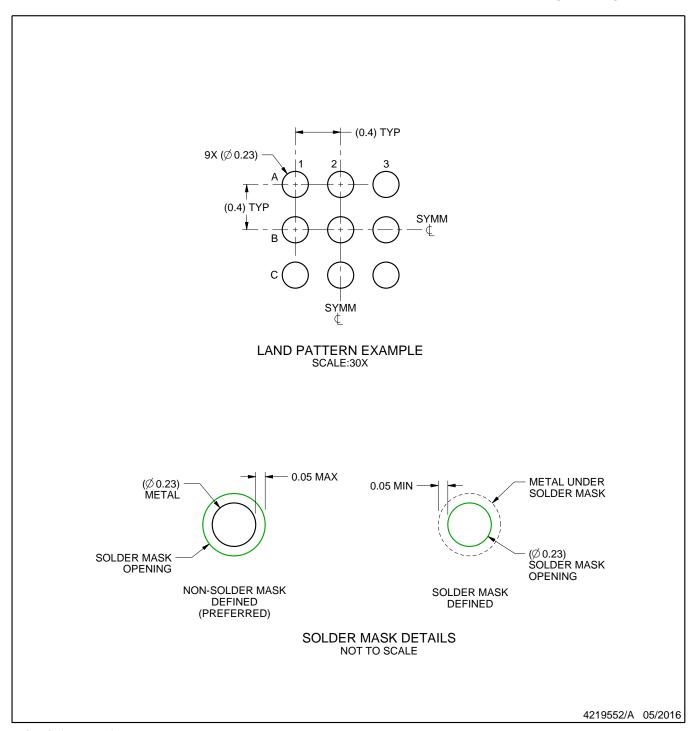


NOTES: (continued)

3. Final dimensions may vary due to manufacturing tolerance considerations and also routing constraints. For more information, see Texas Instruments literature number SNVA009 (www.ti.com/lit/snva009).



DIE SIZE BALL GRID ARRAY

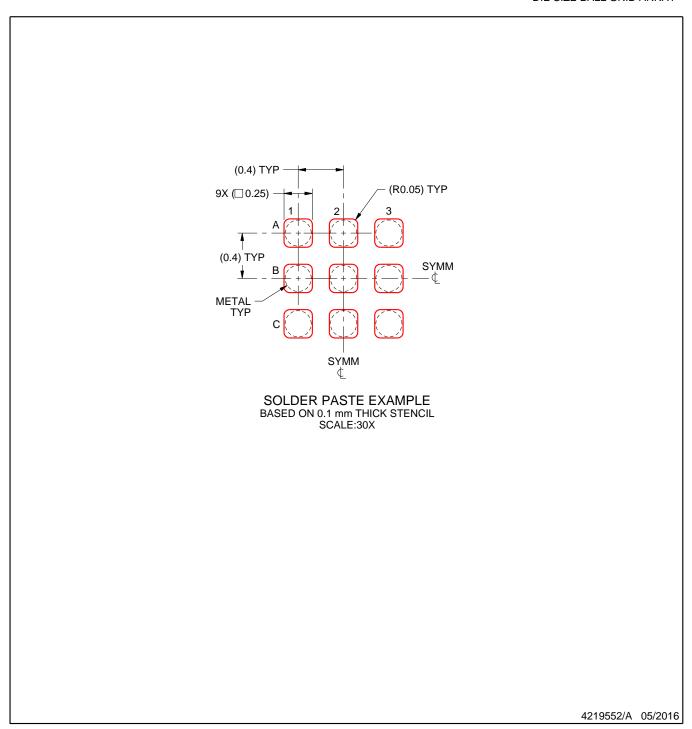

NOTES: (continued)

4. Laser cutting apertures with trapezoidal walls and rounded corners may offer better paste release.



# 重要声明和免责声明

TI 提供技术和可靠性数据(包括数据表)、设计资源(包括参考设计)、应用或其他设计建议、网络工具、安全信息和其他资源,不保证没有瑕疵且不做出任何明示或暗示的担保,包括但不限于对适销性、某特定用途方面的适用性或不侵犯任何第三方知识产权的暗示担保。

这些资源可供使用 TI 产品进行设计的熟练开发人员使用。您将自行承担以下全部责任:(1) 针对您的应用选择合适的 TI 产品,(2) 设计、验证并测试您的应用,(3) 确保您的应用满足相应标准以及任何其他安全、安保或其他要求。这些资源如有变更,恕不另行通知。TI 授权您仅可将这些资源用于研发本资源所述的 TI 产品的应用。严禁对这些资源进行其他复制或展示。您无权使用任何其他 TI 知识产权或任何第三方知识产权。您应全额赔偿因在这些资源的使用中对 TI 及其代表造成的任何索赔、损害、成本、损失和债务,TI 对此概不负责。

TI 提供的产品受 TI 的销售条款 (https://www.ti.com.cn/zh-cn/legal/termsofsale.html) 或 ti.com.cn 上其他适用条款/TI 产品随附的其他适用条款的约束。TI 提供这些资源并不会扩展或以其他方式更改 TI 针对 TI 产品发布的适用的担保或担保免责声明。

邮寄地址:上海市浦东新区世纪大道 1568 号中建大厦 32 楼,邮政编码:200122 Copyright © 2021 德州仪器半导体技术(上海)有限公司