## Single/Multi-Cell Fuel Gauge with ModelGauge m5 EZ and Integrated LED Control

## **General Description**

The MAX17263 is an ultra-low power fuel-gauge IC which implements the Maxim ModelGauge  $^{™}$  m5 algorithm. The IC monitors either a single cell battery pack or multiple-series cell battery pack with an external resistor divider. The IC drives 3 to 12 automatically-counted LEDs to indicate battery state-of-charge on a push-button press, or any other system status using I<sup>2</sup>C commands.

The ModelGauge m5 EZ algorithm makes fuel gauge implementation easy by eliminating battery characterization requirements and simplifying host software interaction. The algorithm provides tolerance against battery diversity for most lithium batteries and applications.

The algorithm combines the short-term accuracy and linearity of a coulomb counter with the long-term stability of a voltage-based fuel gauge, along with temperature compensation to provide industry-leading fuel-gauge accuracy. The IC automatically compensates for cell-aging, temperature, and discharge rate, and provides accurate state-of-charge (SOC) in percentage (%) and remaining capacity in milliampere-hours (mAh) over a wide range of operating conditions. As the battery approaches the critical region near empty, the algorithm invokes a special correction mechanism that eliminates any error. The IC provides accurate estimation of time-to-empty and time-to-full and provides three methods for reporting the age of the battery: reduction in capacity, increase in battery resistance, and cycle odometer.

The IC provides precision measurements of current, voltage, and temperature. The temperature of the battery pack is measured using an internal temperature sensor or external thermistor. A 2-wire I<sup>2</sup>C interface provides access to data and control registers. The IC is available in a 3mm x 3mm 14-pin TDFN package.

## **Applications**

- Wireless Speakers
- Medical Devices
- Drones
- Power Tools
- E-Bikes
- Headlamps and Torches
- Battery Backup
- Toys
- Home and Building Automation, Sensors


ModelGauge is a trademark of Maxim Integrated Products, Inc.

## **Benefits and Features**

- ModelGauge m5 EZ
  - No Characterization Required for EZ Performance
  - Robust Against Battery Variation
  - Eliminates Error Near Empty Voltage
  - · Eliminates Coulomb Counter Drift
  - Compensates for Age, Current, and Temperature
  - Does Not Require Empty, Full, or Idle States
- Monitors Single-Cell or Multiple-Cell Battery Packs
- Integrated LED Control with Push-Button Input
  - Drives 3 to 12 LEDs, Automatically Counted
- Custom Pattern LED Control Using I<sup>2</sup>C Commands
- Accurate Current Sensing
  - · High-Side or Low-Side Sensing Options
- Wide Sense Resistor Range:  $1m\Omega$  to  $1000m\Omega$
- PCB Metal Sensing + Temperature Compensation
- Supports Li+ and Variants Including LiFePO<sub>4</sub>
- Thermistor or ±1°C Internal Temperature
- Dynamic Power Estimates Power Capability During Discharge
- Time-to-Empty and Time-to-Full Estimation
- Predicts Remaining Capacity Under Theoretical Load
- No Calibration Required
- Alert Indicator for Voltage, SOC, Temperature, Current and 1% SOC Change

Ordering Information appears at end of data sheet.

## Simple Fuel-Gauge Circuit Diagram

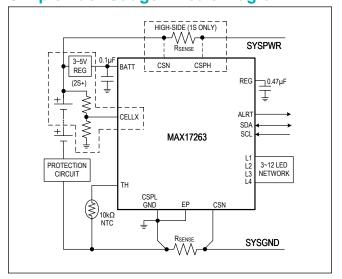



## **TABLE OF CONTENTS**

General Description	1
Applications	. 1
Benefits and Features	1
Simple Fuel-Gauge Circuit Diagram	1
Absolute Maximum Ratings	6
Package Information	. 6
TDFN	. 6
Electrical Characteristics	6
Typical Operating Characteristics	. 10
Pin Configuration(s)	. 12
TDFN	. 12
Pin Descriptions	. 12
Functional Diagram	. 13
Detailed Description	. 14
ModelGauge m5 EZ Performance	. 14
Application Notes	. 15
Standard Register Formats	. 15
ModelGauge m5 EZ Configuration Registers	. 16
DesignCap Register (18h)	. 16
VEmpty Register (3Ah).	. 16
ModelCfg Register (DBh)	. 17
IChgTerm Register (1Eh)	. 17
Config Register (1Dh) and Config2 Register (BBh)	. 17
ModelGauge m5 Algorithm	. 19
ModelGauge m5 Algorithm Output Registers	. 20
RepCap Register (05h)	. 20
RepSOC Register (06h)	. 21
FullCapRep Register (10h).	. 21
TTE Register (11h)	. 21
TTF Register (20h)	. 21
Cycles Register (17h)	. 21
Status Register (00h)	. 21
Analog Measurements	. 22
Voltage Measurement	. 22
VCell Register (09h).	. 22
AvgVCell Register (19h)	. 22
MaxMinVolt Register (1Bh)	. 22

## TABLE OF CONTENTS (CONTINUED)

Current Measurement	23
Current Register (0Ah)	23
AvgCurrent Register (0Bh)	23
MaxMinCurr Register (1Ch)	23
Temperature Measurement	24
Temp Register (08h)	24
AvgTA Register (16h)	24
MaxMinTemp Register (1Ah)	24
DieTemp Register (034h)	25
Power Register (B1h)	25
AvgPower Register (B3h)	25
Alert Function	25
VAlrtTh Register (01h)	25
TAIrtTh Register (02h)	26
SAIrtTh Register (03h)	26
IAIrtTh Register (B4h)	26
Serial Number Feature	27
Integrated LED Control	27
LED Configuration Registers	29
LEDCfg1 Register (40h)	29
LEDCfg2 Register (4Bh)	30
LEDCfg3 Register (37h)	31
CustLED Register (64h)	31
ModelGauge m5 Memory Space	. 32
Layout Guidelines	32
Typical Application Circuits	34
Ordering Information	36
Revision History	37

# Single/Multi-Cell Fuel Gauge with ModelGauge m5 EZ and Integrated LED Control

LIST OF FIGURES	
Figure 1. ModelGauge m5 EZ Configuration Performance	15
Figure 2. ModelGauge m5 Algorithm	20
Figure 3. LED Charlieplexing Circuit	28
Figure 4. LED Status vs. Reported SOC Value in 5 LEDs Example	29
Figure 5. MAX17263 Layout Guide	33
Figure 6. Multi-Cell Low-Side Current Measurement Typical Applications Circuit	34
Figure 7. Single-Cell Low-Side Current Measurement Typical Applications Circuit	35
Figure 8. High-Side Current Measurement Typical Applications Circuit	35
Figure 9. Multiple-Series Battery Typical Applications Circuit	36

## Table 1. ModelGauge m5 EZ Performance..... ..... Table 8. MaxMinVolt (1Bh) Format 23 Table 15. IAIrtTh (B4h) Format .....

 Table 16. Serial Number Format
 27

 Table 17. LED Bias Resistor Selection Guide
 28

 Table 18. LEDCfg1 (040h) Format
 30

 Table 19. LEDCfg2 (04Bh) Format
 31

 Table 20. LEDCfg3 (37h) Format
 31

 Table 21. CustLED (64h) Format
 31

 Table 22. ModelGauge m5 Register Memory Map
 32

LIST OF TABLES

## **Absolute Maximum Ratings**

BATT to GND	0.3V to +6V	L1, L2, L3, and L4 Maximum Current	75mA to +75mA
ALRT to GND	0.3V to +17V	Operating Temperature Range	40°C to +85°C
REG to GND	0.3V to +2.2V	Junction Temperature	+150°C
TH to GND	0.3 V to V <sub>BATT</sub> + 0.3 V	Storage Temperature Range	55°C to +125°C
CELLX to GND	0.3V to V <sub>BATT</sub> + 0.3V	Soldering Temperature (reflow)	+260°C
CSN to GND	0.3V to V <sub>BATT</sub> + 0.3V	Continuous Source Current for TH	1mA
CSPL to GND	0.3V to +0.3V	Continuous Sink Current for SDA, ALRT	20mA
SDA, SCL to GND	0.3V to +6V	Lead Temperature (soldering 10s)	+300°C
L1, L2, L3, and L4 to GND	0.3V to V <sub>BATT</sub> + 0.3V		

Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

## **Package Information**

#### **TDFN**

Package Code	T1433+2C			
Outline Number	21-0137			
Land Pattern Number	<u>90-0063</u>			
Thermal Resistance, Single-Layer Board:				
Junction to Ambient (θ <sub>JA</sub> )	54°C/W			
Junction to Case $(\theta_{JC})$	8°C/W			
Thermal Resistance, Four-Layer Board:				
Junction to Ambient (θ <sub>JA</sub> )	41°C/W			
Junction to Case $(\theta_{JC})$	8°C/W			

For the latest package outline information and land patterns (footprints), go to <a href="www.maximintegrated.com/packages">www.maximintegrated.com/packages</a>. Note that a "+", "#", or "-" in the package code indicates RoHS status only. Package drawings may show a different suffix character, but the drawing pertains to the package regardless of RoHS status.

Package thermal resistances were obtained using the method described in JEDEC specification JESD51-7, using a four-layer board. For detailed information on package thermal considerations, refer to <a href="https://www.maximintegrated.com/thermal-tutorial">www.maximintegrated.com/thermal-tutorial</a>.

## **Electrical Characteristics**

 $(V_{BATT} = 2.3 \text{V to } 4.9 \text{V}, T_A = -40 ^{\circ}\text{C} \text{ to } +85 ^{\circ}\text{C}, \text{ typical value for } T_A \text{ is } +25 ^{\circ}\text{C}. \text{ Limits are } 100\% \text{ tested at } T_A = +25 ^{\circ}\text{C}. \text{ The operating temperature range and relevant supply voltage range are guaranteed by design and characterization. Specifications marked "GBD" are guaranteed by design and not production tested.)$ 

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS	
POWER SUPPLY	POWER SUPPLY						
Supply Voltage	V <sub>BATT</sub>	(Note 1)	2.3		4.9	V	
Shutdown Supply Current	I <sub>DD0</sub>	T <sub>A</sub> ≤ +50°C		0.5	0.9	μΑ	
Hibernate Supply Current	I <sub>DD1</sub>	T <sub>A</sub> ≤ +50°C, average current		8.2	15	μΑ	

## **Electrical Characteristics (continued)**

 $(V_{BATT} = 2.3V \text{ to } 4.9V, T_A = -40^{\circ}\text{C} \text{ to } +85^{\circ}\text{C}, \text{ typical value for } T_A \text{ is } +25^{\circ}\text{C}. \text{ Limits are } 100\% \text{ tested at } T_A = +25^{\circ}\text{C}. \text{ The operating temperature range and relevant supply voltage range are guaranteed by design and characterization. Specifications marked "GBD" are guaranteed by design and not production tested.)}$ 

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
Active Supply Current	I <sub>DD2</sub>	T <sub>A</sub> ≤ +50°C, average current not including thermistor measurement current		15	30	μA
Regulation Voltage	V <sub>REG</sub>			1.8		V
Startup Voltage	V <sub>BATTSU</sub>				3	V
ANALOG-TO-DIGITAL C	ONVERSION					
BATT Measurement Error	V <sub>GERR</sub>	$T_A = +25^{\circ}C$ -40°C ≤ $T_A \le +85^{\circ}C$	-7.5 -20		+7.5 +20	mV
BATT Measurement Resolution	V <sub>LSB</sub>			78.125		μV
BATT Measurement Range	V <sub>FS</sub>		2.3		4.9	V
CELLX Measurement	Vyosaa	T <sub>A</sub> = +25°C	-0.2		+0.2	% of
Error	V <sub>XGERR</sub>	-40°C ≤ T <sub>A</sub> ≤ +85°C	-0.5		+0.5	Reading
CELLX Measurement Resolution	V <sub>XLSB</sub>			78.125		μV
CELLX Measurement Range	V <sub>XFS</sub>		0.92		2	V
Current Measurement Offset Error	I <sub>OERR</sub>	Long-term average without load current		±1.5		μV
Current Measurement Error	I <sub>GERR</sub>		-1		+1	% of Reading
Current Measurement Resolution	I <sub>LSB</sub>			1.5625		μV
Current Measurement Range	I <sub>FS</sub>			±51.2		mV
Internal Temperature Measurement Error	TI <sub>GERR</sub>	-40°C ≤ T <sub>A</sub> ≤ +85°C		±1		°C
Internal Temperature Measurement Resolution	TI <sub>LSB</sub>			0.00391		°C
INPUT/OUTPUT						_
External Thermistance	R <sub>EXT10</sub>	Config.R100 = 0		10		kΩ
Resistance	R <sub>EXT100</sub>	Config.R100 = 1		100		1/77
Output Drive Low, ALRT, SDA	V <sub>OL</sub>	I <sub>OL</sub> = 4mA, V <sub>BATT</sub> = 2.3V			0.4	V
LED Output Drive Low (1x drive)	V <sub>LEDDL1</sub>	I <sub>OL</sub> = 15mA, V <sub>BATT</sub> = 3.0V		0.32	1	V
LED Output Drive Low (2x drive)	V <sub>LEDDL2</sub>	I <sub>OL</sub> = 30mA, V <sub>BATT</sub> = 3.0V		0.35	1	V
LED Output Drive Low (3x drive)	V <sub>LEDDL3</sub>	I <sub>OL</sub> = 45mA, V <sub>BATT</sub> = 3.0V		0.37	1	V

## **Electrical Characteristics (continued)**

 $(V_{BATT} = 2.3V \text{ to } 4.9V, T_A = -40^{\circ}\text{C} \text{ to } +85^{\circ}\text{C}, \text{ typical value for } T_A \text{ is } +25^{\circ}\text{C}. \text{ Limits are } 100\% \text{ tested at } T_A = +25^{\circ}\text{C}. \text{ The operating temperature range and relevant supply voltage range are guaranteed by design and characterization. Specifications marked "GBD" are guaranteed by design and not production tested.)}$ 

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
LED Output Drive High	V <sub>LEDDH</sub>	I <sub>OH</sub> = 15mA, V <sub>BATT</sub> = 3.0V	V <sub>BATT</sub> -	V <sub>BATT</sub> - 0.27		V
Input Logic High, ALRT, SCL, SDA	V <sub>IH</sub>		1.5			V
Input Logic Low, ALRT, SCL, SDA	V <sub>IL</sub>				0.5	V
Battery-Detach Detection Threshold	V <sub>DET</sub>	Measured as a fraction of V <sub>BATT</sub> on TH rising	91	96.2	99	%
Battery-Detach Detection Threshold Hysteresis	V <sub>DET-HYS</sub>	Measured as a fraction of V <sub>BATT</sub> on TH falling		1		%
Battery-Detach Comparator Delay	t <sub>TOFF</sub>	TH step from 70% to 100% of V <sub>BATT</sub> (Alrtp = 0, EnAIN = 1, FTHRM = 1)			100	μs
RESISTANCE AND LEAF	KAGE		•			
Leakage Current, CSN, ALRT	ILEAK	V <sub>ALRT</sub> < 15V	-1		+1	μA
Leakage Current, L1, L2, L3, and L4	ILEAK	V <sub>ALRT</sub> < 15V	-1		+1	μA
Leakage Current, CELLX	ILEAK_CELLX	V <sub>CELLX</sub> < 2.0V	-60	±5	+60	nA
Input Pulldown Current	I <sub>PD</sub>	V <sub>SDA</sub> = 0.4V, V <sub>SCL</sub> = 0.4V	0.05	0.2	0.4	μA
2-WIRE INTERFACE	•		•			•
SCL Clock Frequency	f <sub>SCL</sub>	(Note 2)	0		400	kHz
Bus Free Time Between a STOP and START Condition	<sup>t</sup> BUF		1.3			μѕ
Hold Time (Repeated) START Condition	thd:STA	(Note 3)	0.6			μs
Low Period of SCL Clock	t <sub>LOW</sub>		1.3			μs
High Period of SCL Clock	tHIGH		0.6			μs
Setup Time for a Repeated START Condition	tsu:sta		0.6			μѕ
Data Hold Time	t <sub>HD:DAT</sub>	(Notes 4, 5)	0		0.9	μs
Data Setup Time	t <sub>SU:DAT</sub>	(Note 4)	100			ns
Rise Time of Both SDA and SCL Signals	t <sub>R</sub>		5		300	ns
Fall Time of Both SDA and SCL Signals	t <sub>F</sub>		5		300	ns
Setup Time for STOP Condition	tsu:sto		0.6			μs

## **Electrical Characteristics (continued)**


 $(V_{BATT} = 2.3 \text{V to } 4.9 \text{V}, T_{A} = -40 ^{\circ} \text{C}$  to  $+85 ^{\circ} \text{C}$ , typical value for  $T_{A}$  is  $+25 ^{\circ} \text{C}$ . Limits are 100% tested at  $T_{A} = +25 ^{\circ} \text{C}$ . The operating temperature range and relevant supply voltage range are guaranteed by design and characterization. Specifications marked "GBD" are guaranteed by design and not production tested.)

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
Spike Pulse Width Suppressed by Input Filter	t <sub>SP</sub>	(Note 6)			50	ns
Capacitive Load for Each Bus Line	C <sub>B</sub>	(Note 7)			400	pF
SCL, SDA Input Capacitance	C <sub>BIN</sub>			6		pF
TIMING						
Time-Base Accuracy	t <sub>ERR</sub>	T <sub>A</sub> = +25°C	-1		+1	%
TH Precharge Time	t <sub>PRE</sub>		8.48	-		ms

- Note 1: All voltages are referenced to GND.
- Note 2: Timing must be fast enough to prevent the IC from entering shutdown mode due to bus low for a period greater than the shutdown timer setting.
- Note 3: f<sub>SCL</sub> must meet the minimum clock low time plus the rise/fall times.
- Note 4: The maximum t<sub>HD:DAT</sub> has only to be met if the device does not stretch the low period (t<sub>LOW</sub>) of the SCL signal.
- Note 5: This device internally provides a hold time of at least 100ns for the SDA signal (referred to the minimum V<sub>IH</sub> of the SCL signal) to bridge the undefined region of the falling edge of SCL.
- Note 6: Filters on SDA and SCL suppress noise spikes at the input buffers and delay the sampling instant.
- Note 7: CB represents total capacitance of one bus line in pF.


## **Typical Operating Characteristics**

(T<sub>A</sub> = +25°C, unless otherwise noted.)

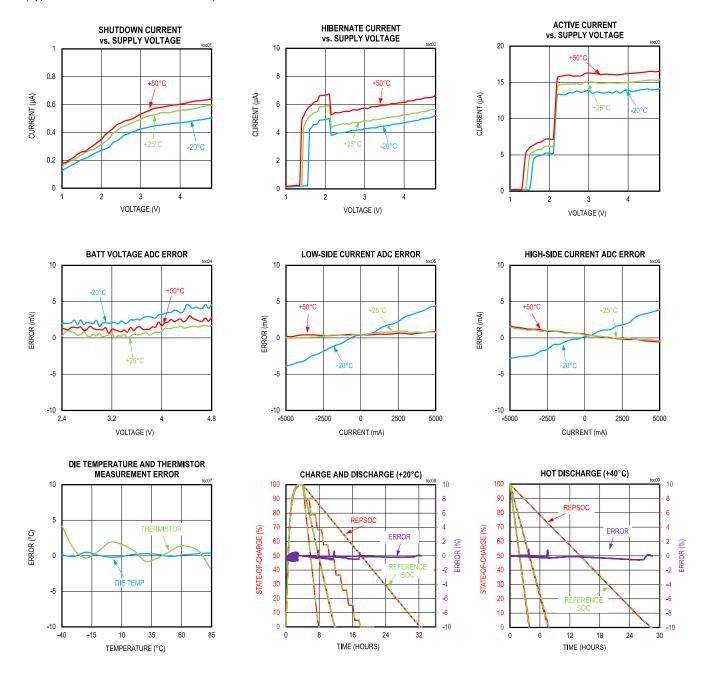


## **Typical Operating Characteristics (continued)**

 $(T_A = +25^{\circ}C, \text{ unless otherwise noted.})$ 

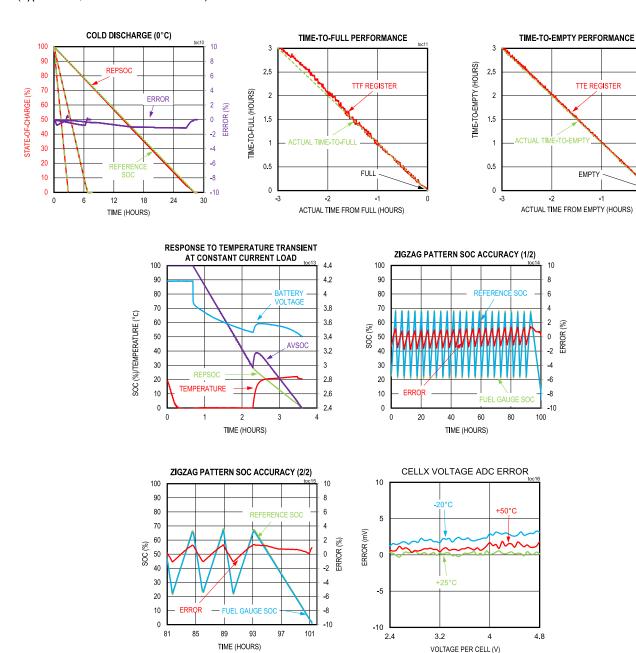

## **Pin Configuration(s)**

### **TDFN**

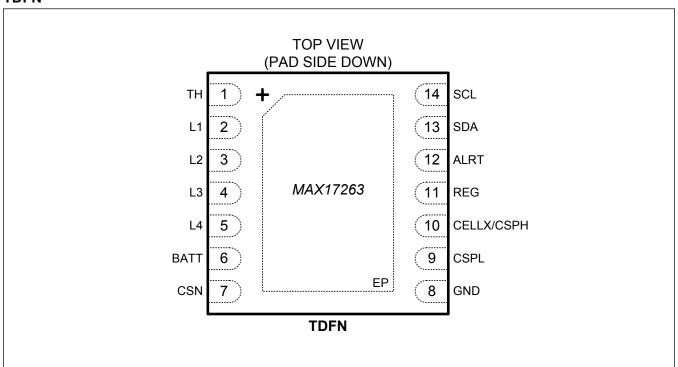


## **Pin Descriptions**

PIN	NAME	FUNCTION
1	TH	Thermistor Input. Connect a thermistor from TH to GND. TH also provides battery insertion/removal detection. Connect to BATT if not used.
14	SCL	Serial Clock Input. 2-wire clock line. Input only. SCL has an internal pulldown (I <sub>PD</sub> ) for sensing disconnection.
13	SDA	Serial Data Input/Output. 2-wire data line. Open-drain output driver. SDA has an internal pulldown (I <sub>PD</sub> ) for sensing disconnection.
7	CSN	Sense Resistor Negative Sense Point. On start up, the CSN voltage is measured to determine whether it is a high-side or low-side application. For a low-side application, Kelvin connect to the system side of the sense resistor; for a high-side application, Kelvin connect to the cell side of the sense resistor.
10	CELLX/ CSPH	Multiple Function Pin. In multi-cell application, connect to an external voltage divider circuit to measure 40% of 1-cell voltage. In single cell high-side current measurement, Kelvin connect to the system side of the sense resistor. For single cell low-side current measurement application, connect to the BATT pin.
9	CSPL	Low-Side Sense Resistor Positive Sense Point. Kelvin connect to the cell side of the sense resistor.
6	BATT	IC Power Supply. For single cell applications, connect to the positive terminal of a battery cell. For multiple-series cells, connect to an external voltage regulator. Bypass with a 0.1µF capacitor to GND.
8	GND	IC Ground.
11	REG	Internal 1.8V Regulator Output. Bypass with an external 0.47µF capacitor to GND. Do not load externally.

## **Pin Descriptions (continued)**

PIN	NAME	FUNCTION
12	ALRT	Alert Output. The ALRT pin is an open-drain active-low output which indicates fuel-gauge alerts. Connect to GND if not used.
2	L1	LED Push/Pull/Tri-state Driver Pin. Input for push-button LED control.
3	L2	LED Push/Pull/Tri-state Driver Pin.
4	L3	LED Push/Pull/Tri-state Driver Pin
5	L4	LED Push/Pull/Tri-state Driver Pin

## **Functional Diagram**

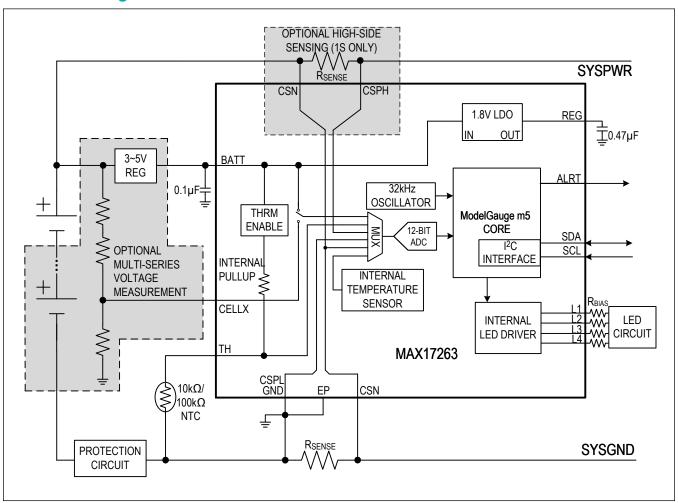

## **Detailed Description**

The MAX17263 is an ultra-low power fuel gauge IC which implements the Maxim ModelGauge m5 EZ algorithm. The IC monitors either a single cell battery pack or multiple-series cell battery pack with an external resistor divider. The IC measures voltage, current, and temperature accurately to produce fuel gauge results. The ModelGauge m5 EZ robust algorithm provides tolerance against battery diversity. This additional robustness enables simpler implementation for most applications and batteries by avoiding time-consuming battery characterization. The IC features integrated control up to 12 LEDs. Simply connect the LEDs into the Charlieplexing network; the IC counts the populated LEDs and display the current SOC reported automatically. The features of LED control are detailed in the [[Integrated LED Control]] section.

The ModelGauge m5 algorithm combines the short-term accuracy and linearity of a coulomb-counter with the long-term stability of a voltage-based fuel gauge, along with temperature compensation to provide industry-leading fuel gauge accuracy. The IC automatically compensates for aging, temperature, and discharge rate and provides accurate state of charge (SOC) in percentage (%) and remaining capacity in milliampere-hours (mAh) over a wide range of operating conditions. Fuel gauge error always converges to 0% as the cell approaches empty.

The IC has a register set that is compatible with Intel's DBPT v2 dynamic power standard. This allows the system designer to safely estimate the maximum allowed CPU turbo-boost power level in complex power conditions. The IC provides accurate estimation of time-to-empty and time-to-full and provides three methods for reporting the age of the battery: reduction in capacity, increase in battery resistance, and cycle odometer.

The IC contains a unique serial number. It can be used for cloud-based authentication. See the <u>Serial Number</u> Feature section for more information.

Communication to the host occurs over standard I<sup>2</sup>C interface. For information about I<sup>2</sup>C communication, refer to the <u>User Guide 6597: MAX1726x ModelGauge m5 EZ User Guide</u>.

#### ModelGauge m5 EZ Performance

ModelGauge m5 EZ performance provides plug-and-play operation when the IC is connected to most lithium batteries. While the IC can be custom tuned to the application's specific battery through a characterization process for ideal performance, the IC has the ability to provide good performance for most applications with no custom characterization required. Table 1 and Figure 1 show the performance of the ModelGauge m5 algorithm in applications using ModelGauge m5 EZ configuration.

The ModelGauge m5 EZ provides good performance for most cell types. For some chemistries, such as lithium-iron-phosphate (LiFePO<sub>4</sub>) and Panasonic NCR/NCA series cells, it is suggested that the customer request a custom model from Maxim for best performance.

For even better fuel-gauging accuracy than ModelGauge m5 EZ, contact Maxim for information regarding cell characterization.

Table 1. ModelGauge m5 EZ Performance

DESCRIPTION	AFTER FIRST CYCLE* (%)	AFTER SECOND CYCLE* (%)
Tests with less than 3% error	95	97
Tests with less than 5% error	98.7	99
Tests with less than 10% error	100	100

<sup>\*</sup>Test conditions: +20°C and +40°C, run time of > 3 hours.

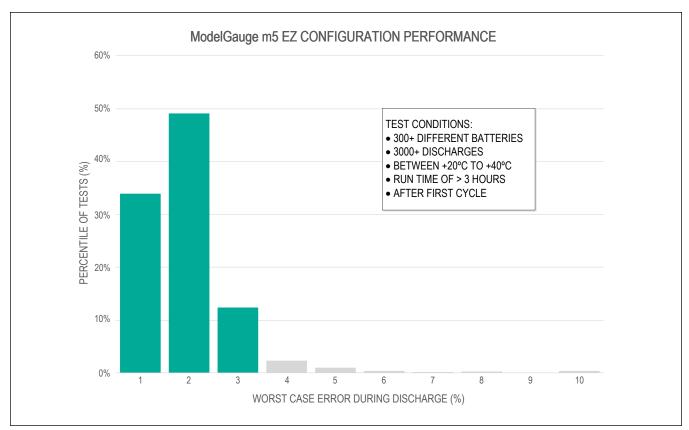


Figure 1. ModelGauge m5 EZ Configuration Performance

#### **Application Notes**

Refer to the following application notes for additional reference material:

- <u>User Guide 6597: MAX1726x ModelGauge m5 EZ User Guide</u>
  - · Documents full register set
  - More details about ModelGauge m5 algorithm
  - · Discusses additional applications
- <u>User Guide 6595: MAX1726x Software Implementation Guide</u>
  - · Guidelines for software drivers including example code

#### **Standard Register Formats**

Unless otherwise stated during a given register's description, all IC registers follow the same format depending on the type of register. See <u>Table 2</u> for the resolution and range of any register described hereafter. Note that current and capacity values are displayed as a voltage and must be divided by the sense resistor to determine Amps or Amp-hours.

Table 2. ModelGauge m5 Register Standard Resolutions

REGISTER TYPE	LSb SIZE	MINIMUM VALUE	MAXIMUM VALUE	NOTES
Capacity	5.0μVh/ R <sub>SENSE</sub>	0.0µVh	327.675mVh/ R <sub>SENSE</sub>	Equivalent to 0.5mAh with a 0.010Ω sense resistor.

Table 2. ModelGauge m5 Register Standard Resolutions (continued)

REGISTER TYPE	LSb SIZE	MINIMUM VALUE	MAXIMUM VALUE	NOTES
Percentage	1/256%	0.0%	255.9961%	1% LSb when reading only the upper byte.
Voltage	78.125μV	0.0V	5.11992V	On per-cell basis.
Current	1.5625µV/ R <sub>SENSE</sub>	-51.2mV/ R <sub>SENSE</sub>	51.1984mV/ R <sub>SENSE</sub>	Signed 2's complement format. Equivalent to 156.25 $\mu A$ with a $0.010\Omega$ sense resistor.
Temperature	1/256°C	-128.0°C	127.996°C	Signed 2's complement format. 1°C LSb when reading only the upper byte.
Resistance	1/4096Ω	0.0Ω	15.99976Ω	
Time	5.625s	0.0s	102.3984h	
Special				Format details are included with the register description.

#### ModelGauge m5 EZ Configuration Registers

The following registers are inputs to the ModelGauge m5 algorithm and store characterization information for the application cells as well as important application specific parameters. They are described briefly here.

Only the following information is required for configuring ModelGauge m5 EZ:

- Label Capacity—DesignCap
- Empty Voltage—VEmpty
- Charge Termination Current—ICHGTerm

Refer to the MAX1726x Software Implementation Guide for more details on how to initialize the fuel gauge.

#### DesignCap Register (18h)

Register Type: Capacity Initial value: 0x0BB8

The DesignCap register holds the nominal capacity of the cell.

#### VEmpty Register (3Ah)

Register Type: Special

Initial Value: 0xA561 (3.3V/3.88V)

The VEmpty register sets thresholds related to empty detection during operation. <u>Table 3</u> shows the register format.

## Table 3. VEmpty (3Ah) Format

D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
	VE											VR			

**VE**: Empty voltage target, during load. The fuel gauge provides capacity and percentage relative to the empty voltage target, eventually declaring 0% at VE. A 10mV resolution gives a 0V to 5.11V range. This value defaults to 3.3V after reset

**VR:** Recovery voltage. Sets the voltage level for clearing empty detection. Once the cell voltage rises above this point, empty voltage detection is reenabled. A 40mV resolution gives a 0V to 5.08V range. This value defaults to 3.88V, which is recommended for most applications.

#### ModelCfg Register (DBh)

Register Type: Special

The ModelCFG register controls basic options of the EZ algorithm. Table 4 shows the register format.

## Table 4. ModelCFG (DBh) Format

D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
Refresh	0	R100	0	0	VChg	0	0	ModelID			VSEL	CSEL	0	0	

Refresh: Set Refresh to 1 to command the model reload. After completion, the IC clears Refresh to 0.

**R100:** if using  $100k\Omega$  NTC, set R100 = 1; if using  $10k\Omega$  NTC, set R100 = 0.

0: Bit must be written 0. Do not write 1.

**ModelID:** Choose from one of the following Lithium models. For the majority of batteries, use ModelID = 0.

ModelID = 0: Use for most lithium cobalt-oxide variants (a large majority of lithium in the market-place). Supported by EZ without characterization.

ModelID = 2: Use for lithium NCR or NCA cells such as Panasonic. Custom characterization is recommended in this case.

ModelID = 6: Use for lithium iron-phosphate (LiFePO4). Custom characterization is recommended in this case.

VChg: Set VChg to 1 for charge voltage higher than 4.25V (4.3V to 4.4V). Set VChg to 0 for 4.2V charge voltage.

**CSEL:** High-side/low-side current sense selection. The current-sense schematic is automatically determined at bootup, and CSEL is initialized to the appropriate setting. Applications should generally not change CSEL to preserve the autodetected setting.

**VSEL:** Single/Multi-Series Cell Selection. This is automatically detected. Applications should generally not change VSEL to preserve the auto-detected setting.

#### IChgTerm Register (1Eh)

Register Type: Current

Initial Value: 0x0640 (250mA on  $10m\Omega$ )

The IChgTerm register allows the device to detect when charge termination has occurred. Program IChgTerm to the exact charge termination current used in the application.

Refer to the *End-of-Charge Detection* section of the *User Guide 6597: MAX1726x ModelGauge m5 EZ User Guide* for more details.

#### Config Register (1Dh) and Config2 Register (BBh)

Register Type: Special

Initial Value: 0x2210 for Config, 0x3658 for Config2

The Config registers hold all shutdown enable, alert enable, and temperature enable control bits. Writing a bit location enables the corresponding function within one task period. <u>Table 5</u> and <u>Table 6</u> show the register formats.

## Table 5. Config (1Dh) Format

D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
TSel	SS	TS	VS	IS	THSH	Ten	Tex	SHDN	COMMSH	0	ETHRM	FTHRM	Aen	Bei	Ber

## Table 6. Config2 (BBh) Format

D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
0	0	AtRateEn	DPEn		POW	/R		dSOCen	TAIrtEn	LDMdl	1	DR	Cfg	CPMode	0

0: Bit must be written 0. Do not write 1.

1: Bit must be written 1. Do not write 0.

**TSEL:** Temperature sensor select. Set to 0 to use internal die temperature. Set to 1 to use temperature information from thermistor. ETHRM bit must be set to 1 when TSel is 1.

**SS:** SOC ALRT Sticky. When SS = 1, SOC alerts can only be cleared through software. When SS = 0, SOC alerts are cleared automatically when the threshold is no longer exceeded.

**TS:** Temperature ALRT Sticky. When TS = 1, temperature alerts can only be cleared through software. When TS = 0, temperature alerts are cleared automatically when the threshold is no longer exceeded.

**VS:** Voltage ALRT Sticky. When VS = 1, voltage alerts can only be cleared through software. When VS = 0, voltage alerts are cleared automatically when the threshold is no longer exceeded.

**IS:** Current ALRT Sticky. When IS = 1, current alerts can only be cleared through software. When IS = 0, current alerts are cleared automatically when the threshold is no longer exceeded.

**THSH:** TH Pin Shutdown. Set to 1 to enable device shutdown when the IC is mounted host-side and the battery is removed. The IC enters shutdown if the TH pin remains high ( $V_{TH} > V_{BATT} - V_{DET}$ ) for longer than the timeout of the ShdnTimer register. This also configures the device to wake up when TH is pulled low with a thermistor on-cell insertion. Note that if COMMSH and THSH are both set to 0, the device wakes up on any edge of SDA.

Ten: Enable Temperature Channel. Set to 1 and set ETHRM or FTHRM to 1 to enable temperature measurement.

**Tex:** Temperature External. When set to 1, the fuel gauge requires external temperature measurements to be written from the host. When set to 0, the ICs own measurements are used instead.

**SHDN:** Shutdown. Write this bit to logic 1 to force a shutdown of the device after timeout of the ShdnTimer register (default 45s delay). SHDN is reset to 0 at power-up and upon exiting shutdown mode. In order to command shutdown within 45 seconds, first write HibCFG = 0x0000 to enter active mode.

**COMMSH:** Communication Shutdown. Set to logic 1 to force the device to enter shutdown mode if both SDA and SCL are held low for more than timeout of the ShdnTimer register. This also configures the device to wake up on a rising edge of any communication. Note that if COMMSH and THSH are both set to 0, the device wakes up on any edge of SDA. Refer to the <u>User Guide 6597: MAX1726x ModelGauge m5 EZ User Guide</u> for details.

ETHRM: Enable Thermistor. Set to logic 1 to enable the TH pin measurement.

**FTHRM**: Force Thermistor Bias Switch. This allows the host to control the bias of the thermistor switch or enable fast detection of battery removal. Set FTHRM = 1 to always enable the thermistor bias switch. With a standard  $10k\Omega$  thermistor, this adds an additional  $\sim 200\mu A$  to the current drain of the circuit.

**Aen:** Enable alert on fuel-gauge outputs. When Aen = 1, any violation of the alert threshold register values by temperature, voltage, current, or SOC triggers an alert. This bit affects the ALRT pin operation only. The Smx, Smn, Tmx, Tmn, Vmx, Vmn, Imx, and Imn bits of the Status register (000h) are not disabled.

**Bei:** Enable alert on battery insertion when the IC is mounted host-side. When Bei = 1, a battery-insertion condition, as detected by the TH pin voltage, triggers an alert.

**Ber:** Enable alert on battery removal when the IC is mounted host-side. When Ber = 1, a battery-removal condition, as detected by the TH pin voltage, triggers an alert.

**AtRateEn:** AtRate enable. When this bit is set to 0, AtRate calculations are disabled and registers AtQResidual/AtTTE/ AtAvSOC/AtAvCap can be used as general purpose memory.

DPEn: Dynamic power enable. When this bit is set to 0, Dynamic Power calculations are disabled and registers

## Single/Multi-Cell Fuel Gauge with ModelGauge m5 EZ and Integrated LED Control

MaxPeakPower/SusPeakPower/MPPCurrent/SPPCurrent can be used as general purpose memory. Cannot be enabled at the same time with LEDCfg3.FullSpd bit.

**POWR:** Sets the time constant for the AvgPower register. The default POR value of 0100b gives a time constant of 11.25s. The equation setting the period is:

AvgPower time constant =  $45s \times 2^{(POWR-6)}$ 

**dSOCen:** SOC Change Alert Enable. Set this bit to 1 to enable alert output with the Status.dSOCi bit function. Write this bit to 0 to disable alert output with the Status. dSOCi bit. This bit is set to 0 at power-up.

**TAIrten:** Temperature Alert Enable. Set this bit to 1 to enable temperature based alerts. Write this bit to 0 to disable temperature alerts. This bit is set to 1 at power-up.

**LDMdI:** Host sets this bit to 1 in order to initiate firmware to finish processing a newly loaded model. Firmware clears this bit to zero to indicate that model loading is finished.

**DRCfg:** Deep relax time configuration. 00 for 0.8 to 1.6 hours, 01 for 1.6 to 3.2 hours, 10 for 3.2 to 6.4 hours and 11 for 6.4 to 12.8 hours.

**CPMode:** Constant-power mode. Set to 1 to enable constant-power mode. If it is set to 0, AtRate/AvgCurrent is used for (At)TTE/(At)QResidual/(At)AvSOC/(At)AvCap. If it is set to 1, AtRate/AvgCurrent  $x \frac{\text{AvgVCell}}{(\text{AvgVCell} + \text{VEmpty})/2}$  is used for those calculations

#### ModelGauge m5 Algorithm

Classical coulomb-counter-based fuel gauges have excellent linearity and short-term performance. However, they suffer from drift due to the accumulation of the offset error in the current-sense measurement. Although the offset error is often very small, it cannot be eliminated. It causes the reported capacity error to increase over time and requires periodic corrections. Corrections are traditionally performed at full or empty. Some other systems also use the relaxed battery voltage to perform corrections. These systems determine the true state-of-charge (SOC) based on the battery voltage after a long time of no current flow. Both have the same limitation: if the correction condition is not observed over time in the actual application, the error in the system is boundless. The performance of classic coulomb counters is dominated by the accuracy of such corrections. Voltage measurement based SOC estimation has accuracy limitations due to imperfect cell modeling, but does not accumulate offset error over time.

The IC includes an advanced voltage fuel gauge (VFG) that estimates open-circuit voltage (OCV), even during current flow, and simulates the nonlinear internal dynamics of a Li+ battery to determine the SOC with improved accuracy. The model considers the time effects of a battery caused by the chemical reactions and impedance in the battery to determine SOC. This SOC estimation does not accumulate offset error over time. The IC performs a smart empty compensation algorithm that automatically compensates for the effect of temperature condition and load condition to provide accurate state-of-charge information. The converge-to-empty function eliminates error toward empty state. The IC learns battery capacity over time automatically to improve long-term performance. The age information of the battery is available in the output registers.

The ModelGauge m5 algorithm combines a high-accuracy coulomb counter with a VFG. See <u>Figure 2</u>. The complementary combined result eliminates the weaknesses of both the coulomb counter and the VFG while providing the strengths of both. A mixing algorithm weighs and combines the VFG capacity with the coulomb counter and weighs each result so that both are used optimally to determine the battery state. In this way, the VFG capacity result is used to continuously make small adjustments to the battery state, cancelling the coulomb-counter drift.

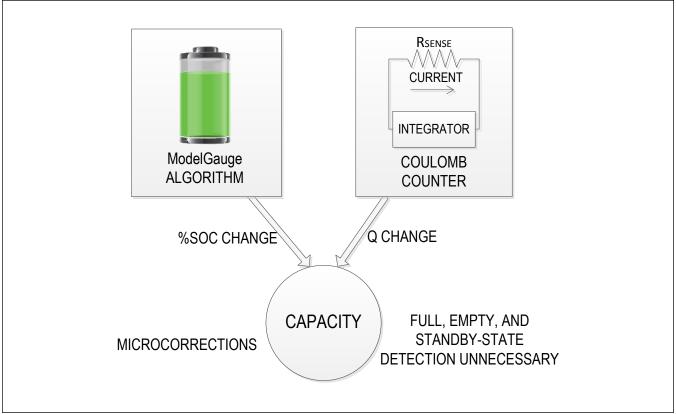


Figure 2. ModelGauge m5 Algorithm

The ModelGauge m5 algorithm uses this battery state information and accounts for temperature, battery current, age, and application parameters to determine the remaining capacity available to the system. As the battery approaches the critical region near empty, the ModelGauge m5 algorithm invokes a special error correction mechanism that eliminates any error.

The ModelGauge m5 algorithm continually adapts to the cell and application through independent learning routines. As the cell ages, its change in capacity is monitored and updated and the voltage-fuel-gauge dynamics adapt based on cell-voltage behavior in the application.

#### ModelGauge m5 Algorithm Output Registers

The following registers are outputs from the ModelGauge m5 algorithm. The values in these registers become valid 351ms after the IC is configured.

#### RepCap Register (05h)

Register Type: Capacity

RepCap or reported remaining capacity in mAh. The ModelGauge m5 algorithm prevents remaining capacity from making a sudden jump during load change conditions.

#### RepSOC Register (06h)

Register Type: Percentage

RepSOC is the reported state-of-charge percentage output for use by the application GUI.

#### FullCapRep Register (10h)

Register Type: Capacity

This register reports the full capacity that goes with RepCap, generally used for reporting to the user. A new full-capacity value is calculated at the end of every charge cycle in the application.

#### TTE Register (11h)

Register Type: Time

The TTE register holds the estimated time to empty for the application under present temperature and load conditions. TTE register is only valid when current register is negative.

#### TTF Register (20h)

Register Type: Time

The TTF register holds the estimated time to full for the application under present conditions. The TTF value is determined by learning the constant current and constant voltage portions of the charge cycle based on experience of prior charge cycles. Time-to-full is then estimated by comparing the present charge current to the charge termination current. Operation of the TTF register assumes all charge profiles are consistent in the application. The TTF register is only valid when the current register is positive.

#### Cycles Register (17h)

Register Type: Special

The Cycles register maintains a total count of the number of charge/discharge cycles of the cell. The result is stored as a fraction of a full cycle. For example, a full charge/discharge cycle results in the Cycles register incrementing by 100%. The Cycles register accumulates fractional or whole cycles. For example, if a battery is cycled 10% x 10 times, then it is equivalent to 100% of one cycle. The Cycles register has a full range of 0 to 655.35 cycles with a 1% LSb.

#### Status Register (00h)

Register Type: Special Initial Value: 0x8082

The Status register maintains all flags related to alert thresholds and battery insertion or removal. <u>Table 7</u> shows the Status register format.

#### Table 7. Status (00h) Format

D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
Br	Smx	Tmx	Vmx	Bi	Smn	Tmn	Vmn	dSOCi	lmx	Х	Х	Bst	lmn	POR	Х

**POR (Power-On Reset):** This bit is set to 1 when the device detects that a software or hardware POR event has occurred. This bit must be cleared by system software to detect the next POR event. POR is set to 1 at power-up.

Imn and Imx (Minimum/Maximum Current-Alert Threshold Exceeded): These bits are set to 1 whenever a Current register reading is below (Imn) or above (Imx) the IAIrtTh thresholds. These bits may or may not need to be cleared by system software to detect the next event. See Config.IS bit description. Imn and Imx are cleared to 0 at power-up.

Vmn and Vmx (Minimum/Maximum Voltage-Alert Threshold Exceeded): These bits are set to 1 whenever a VCell

## Single/Multi-Cell Fuel Gauge with ModelGauge m5 EZ and Integrated LED Control

register reading is below (Vmn) or above (Vmx) the VAIrtTh thresholds. These bits may or may not need to be cleared by system software to detect the next event. See Config.VS bit description. Vmn and Vmx are cleared to 0 at power-up.

Tmn and Tmx (Minimum/Maximum Temperature-Alert Threshold Exceeded): These bits are set to 1 whenever a Temperature register reading is below (Tmn) or above (Tmx) the TAIrtTh thresholds. These bits may or may not need to be cleared by system software to detect the next event. See Config.TS bit description. Tmn and Tmx are cleared to 0 at power-up.

Smn and Smx (Minimum/Maximum SOC-Alert Threshold Exceeded): These bits are set to 1 whenever SOC is below (Smn) or above (Smx) the SAIrtTh thresholds. These bits may or may not need to be cleared by system software to detect the next event. See Config.SS description. Smn and Smx are cleared to 0 at power-up.

**Bst (Battery Status):** Useful when the IC is used in a host-side application. This bit is set to 0 when a battery is present in the system, and set to 1 when the battery is absent. Bst is set to 0 at power-up.

**dSOCi** (State-of-Charge 1% Change Alert): This is set to 1 whenever the RepSOC register crosses an integer percentage boundary such as 50.0%, 51.0%, etc. Must be cleared by host software. dSOCi is set to 1 at power-up.

**Bi (Battery Insertion):** Useful when the IC is used in a host-side application. This bit is set to 1 when the device detects that a battery has been inserted into the system by monitoring the TH pin. This bit must be cleared by system software to detect the next insertion event. Bi is set to 0 at power-up.

**Br (Battery Removal):** Useful when the IC is used in a host-side application. This bit is set to 1 when the system detects that a battery has been removed from the system. This bit must be cleared by system software to detect the next removal event. Br is set to 1 at power-up.

X (Don't Care): This bit is undefined and can be logic 0 or 1.

#### **Analog Measurements**

The IC monitors voltage, current, and temperature. This information is provided to the fuel guage algorithm to predict cell capacity and also made available to the user.

#### **Voltage Measurement**

#### VCell Register (09h)

Register Type: Voltage

In multi-cell application, VCell register reports the 2.5X the voltage measured at the Cellx pin. This represents the per cell voltage of the battery pack. In single-cell application, VCell register reports the voltage measured between BATT and CND

#### AvgVCell Register (19h)

Register Type: Voltage

The AvgVCell register reports an average of the VCell register readings.

#### MaxMinVolt Register (1Bh)

Register Type: Special Initial Value: 0x00FF

The MaxMinVolt register maintains the maximum and minimum of VCell register values since device reset. At power-up, the maximum voltage value is set to 00h (the minimum) and the minimum voltage value is set to FFh (the maximum). Therefore, both values are changed to the voltage register reading after the first update. Host software can reset this register by writing it to its power-up value of 0x00FF. The maximum and minimum voltages are each stored as 8-bit values with a 20mV resolution. Table 8 shows the register format.

## Table 8. MaxMinVolt (1Bh) Format

D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
			MaxVC	ELL		•					MinV	CELL	•		

**MaxVCELL:** Maximum VCell register reading **MinVCELL:** Minimum VCell register reading

#### **Current Measurement**

The IC monitors the current flow through the battery by measuring the voltage across the current-sensing element over a ±51.2mV range. The IC is precalibrated for current-measurement accuracy in Maxim's factory.

Additionally, the IC maintains a record of the minimum and maximum current measured by the IC and an average current.

See the <u>Layout Guidelines</u> section for the recommended board layout to minimize current-sense error.

#### **Current Register (0Ah)**

Register Type: Current

The IC measures the voltage across the sense resistor, and the result is stored as a two's complement value in the Current register. Voltages outside the minimum and maximum register values are reported as the minimum or maximum value. The register value should be divided by the sense resistance to convert to amperes. The value of the sense resistor determines the resolution and the full-scale range of the current readings. Table 9 shows range and resolution values for typical sense resistances. This is for rechargeable applications. Non-rechargeable applications with long run-times should generally use higher sense resistor value.

Table 9. Current Measurement Range and Resolution vs. Sense Resistor Value

BATTERY FULL CAPACITY (mAh)	SENSE RESISTOR (mΩ)	CURRENT REGISTER RESOLUTION (μA)	CURRENT REGISTER RANGE (A)	CAPACITY RESOLUTION (mAh)
> 4000	1	1562.5	± 51.2	5
> 2000	2	781.25	± 25.6	2.5
> 800	5	312.5	± 10.24	1
> 400	10	156.25	± 5.12	0.5
> 200	20	78.125	± 2.56	0.25
> 80	50	31.25	± 1.024	0.1

#### AvgCurrent Register (0Bh)

Register Type: Current

The AvgCurrent register reports an average of Current register readings.

## MaxMinCurr Register (1Ch)

Register Type: Special Initial Value: 0x807F

The MaxMinCurr register maintains the maximum and minimum Current register values since the last IC reset or until cleared by host software. At power-up, the maximum current value is set to 80h (most negative) and the minimum current value is set to 7Fh (most positive). Therefore, both values are changed to the Current register reading after the first update. Host software can reset this register by writing it to its power-up value of 0x807F. The maximum and minimum

## Single/Multi-Cell Fuel Gauge with ModelGauge m5 EZ and Integrated LED Control

currents are each stored as two's complement 8-bit values with (0.4mV) / Rsense resolution. <u>Table 10</u> shows the register format.

## Table 10. MaxMinCurr (1Ch) Format

D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
	MaxCurrent										MinC	urrent			

**MaxCurrent:** Maximum Current register reading **MinCurrent:** Minimum Current register reading

#### **Temperature Measurement**

The IC can be configured to measure its own internal die temperature or an external NTC thermistor.

Set Config.TSEL = 0 (default) to enable die temperature measurement. Set Config.TSEL = 1 to enable thermistor measurement.

Thermistor conversions are initiated by periodically connecting the TH and BATT pins internally. Measurement results of TH pin are compared to the voltage of the BATT pin and converted to a ratiometric value from 0% to 100%. The active pullup is disabled when temperature measurements are complete. This reduces the current consumption.

The ratiometric results are converted to temperature using the temperature gain (TGain), temperature offset (TOff), and temperature curve (Curve) register values. Internal die temperature measurements are factory calibrated and are not affected by TGain, TOff, and Curve register settings. Refer to the <u>User Guide 6597: MAX1726x ModelGauge m5 EZ User Guide</u> for more details. Additionally, the IC maintains a record of the minimum and maximum temperature measured and an average temperature.

#### Temp Register (08h)

Register Type: Temperature

The Temp register provides the temperature measured by the thermistor or die temperature based on the Config register setting.

#### AvgTA Register (16h)

Register Type: Temperature

The AvgTA register reports an average of the readings from the Temp register.

#### MaxMinTemp Register (1Ah)

Register Type: Special Initial Value: 0x807F

The MaxMinTemp register maintains the maximum and minimum Temp register (08h) values since the last fuel-gauge reset or until cleared by host software. At power-up, the maximum value is set to 0x80 (most negative) and the minimum value is set to 0x7F (most positive). Therefore, both values are changed to the Temp register reading after the first update. Host software can reset this register by writing it to its power-up value of 0x807F. The maximum and minimum temperatures are each stored as two's complement 8-bit values with 1°C resolution. Table 11 shows the format of the register.

## Table 11. MaxMinTemp (1Ah) Format

D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
		N	/laxTemp	erature						1	MinTem	perature	Э		

## Single/Multi-Cell Fuel Gauge with ModelGauge m5 EZ and Integrated LED Control

**MaxTemperature:** Maximum Temp register reading **MinTemperature:** Minimum Temp register reading

#### DieTemp Register (034h)

Register Type: Temperature

The DieTemp register provides the internal die temperature measurement. If Config.TSel = 0, DieTemp and Temp registers have the value of the die temperature.

#### Power Register (B1h)

Instant power calculation from immediate current and voltage. The LSB is (8µV<sup>2</sup>) / Rsense.

#### AvgPower Register (B3h)

Filtered average power from the Power register. The LSB is  $(8\mu V^2)$  / Rsense.

#### **Alert Function**

The Alert Threshold registers allow interrupts to be generated by detecting a high or low voltage, current, temperature, or state-of-charge. Interrupts are generated on the ALRT pin open-drain output driver. An external pullup is required to generate a logic-high signal. Alerts can be triggered by any of the following conditions:

- Battery removal: (V<sub>TH</sub> > V<sub>BATT</sub> V<sub>DET</sub>) and battery removal detection enabled (Ber = 1).
- Battery insertion: (V<sub>TH</sub> < V<sub>BATT</sub> V<sub>DET-HYS</sub>) and battery insertion detection enabled (Bei = 1).
- Over/undervoltage: VAIrtTr register threshold violation (upper or lower) and alerts enabled (Aen = 1).
- Over/undertemperature: TAIrtTr register threshold violation (upper or lower) and alerts enabled (Aen = 1).
- Over/undercurrent: IAIrtTr register threshold violation (upper or lower) and alerts enabled (Aen = 1).
- Over/under SOC: SAIrtTr register threshold violation (upper or lower) and alerts enabled (Aen = 1).
- 1% SOC change: RepSOC register bit d8 (1% bit) changed (dSOCen = 1).

To prevent false interrupts, the threshold registers should be initialized before setting the Aen bit. Alerts generated by battery insertion or removal can only be reset by clearing the corresponding bit in the Status (00h) register. Alerts generated by a threshold-level violation can be configured to be cleared only by software, or cleared automatically when the threshold level is no longer violated. See the Config (1Dh) and Config2 (BBh) register descriptions for details of the alert function configuration.

#### VAIrtTh Register (01h)

Register Type: Special

Initial Value: 0xFF00 (Disabled)

The VAIrtTh register shown in <u>Table 12</u> sets upper and lower limits that generate an alert if exceeded by the VCell register value. The upper 8 bits set the maximum value and the lower 8 bits set the minimum value. Interrupt threshold limits are selectable with 20mV resolution over the full operating range of the VCell register.

## Table 12. VAIrtTh (01h) Format

VMAX	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
						VN	11N									

VMAX: Maximum voltage reading. An alert is generated if the VCell register reading exceeds this value.

## Single/Multi-Cell Fuel Gauge with ModelGauge m5 EZ and Integrated LED Control

VMIN: Minimum voltage reading. An alert is generated if the VCell register reading falls below this value.

#### TAIrtTh Register (02h)

Register Type: Special

Initial Value: 0x7F80 (Disabled)

The TAIrtTh register (<u>Table 13</u>) sets upper and lower limits that generate an alert if exceeded by the Temp register value. The upper 8 bits set the maximum value and the lower 8 bits set the minimum value. Interrupt threshold limits are stored in 2's-complement format with 1°C resolution over the full operating range of the Temp register.

## Table 13. TAIrtTh (02h) Format

D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
TMAX											TΝ	1IN			

TMAX: Maximum temperature reading. An alert is generated if the Temp register reading exceeds this value.

**TMIN:** Minimum temperature reading. An alert is generated if the Temp register reading falls below this value.

#### SAIrtTh Register (03h)

Register Type: Special

Initial Value: 0xFF00 (Disabled)

The SAIrtTh register shown (<u>Table 14</u>) sets upper and lower limits that generate an alert if exceeded by RepSOC. The upper 8 bits set the maximum value and the lower 8 bits set the minimum value. Interrupt threshold limits are configurable with 1% resolution over the full operating range of the RepSOC register.

## Table 14. SAIrtTh (03h) Format

D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
	SMAX										SN	1IN			

SMAX: Maximum state-of-charge threshold. An alert is generated if the RepSOC register exceeds this value.

SMIN: Minimum state-of-charge threshold. An alert is generated if the RepSOC register falls below this value.

#### IAIrtTh Register (B4h)

Register Type: Special

Initial Value: 0x7F80 (Disabled)

The IAIrtTh register (<u>Table 15</u>) sets upper and lower limits that generate an alert if exceeded by the Current register value. The upper 8 bits set the maximum value and the lower 8 bits set the minimum value. Interrupt threshold limits are selectable with 0.4mV/R<sub>SENSE</sub> resolution over the full operating range of the Current register.

## Table 15. IAIrtTh (B4h) Format

D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
	IMAX										IM	IN			

IMAX: Maximum current reading. An alert is generated if the current register reading exceeds this value.

IMIN: Maximum current reading. An alert is generated if the current register reading falls below this value.

#### **Serial Number Feature**

Each IC provides a unique serial number ID. To read this serial number, clear the AtRateEn and the DPEn bit in the Config2 register. The 128-bit serial information overwrites the Dynamic Power and AtRate output registers. To continue Dynamic Power and AtRate operations after reading the serial number, the host should set Config2.AtRateEn and Config2.DPEn to 1.

**Table 16. Serial Number Format** 

ADDRESS	Config2.AtRateEn = 1    Config2.DPEn = 1	Config2.AtRateEn = 0 && Config2.DPEn = 0
0xD4	MaxPeakPower	Serial Number Word0
0xD5	SusPeakPower	Serial Number Word1
0xD9	MPPCurrent	Serial Number Word2
0xDA	SPPCurrent	Serial Number Word3
0xDC	AtQResidual	Serial Number Word4
0xDD	AtTTE	Serial Number Word5
0xDE	AtAvSoc	Serial Number Word6
0xDF	AtAvCap	Serial Number Word7

### **Integrated LED Control**

The IC features an integrated LED driver for lighting up to 12 LEDs with only 4 pins by using the Charlieplexing LED network configuration. At start up, the IC performs LED auto-detection to measure the number of LEDs present in the network. Host-side software can configure the number of LEDs through I<sup>2</sup>C communication if needed. The number of LEDs that light up corresponds to the SOC value reported. The IC automatically controls the duty cycle to make sure the brightness is consistent over the battery supply voltage range. The LEDs can be initiated by push-button or directly by I<sup>2</sup>C command. Different modes of LED operation are configurable to best suite your application.

The circuit configuration should follow the Charlieplexing network as shown in <u>Figure 3</u>. For controlling less than 12 LEDs, populate sequentially from LED0. For example, if controlling 5 bar LEDs, only populate LED0 to LED4 and the four bias resistors. The LED5 through LED11 are replaced by an open circuit. <u>Figure 3</u> is an example for controlling identical LEDs. For non-identical LEDs, put bias resistor in series with each LED to bias the current correctly.

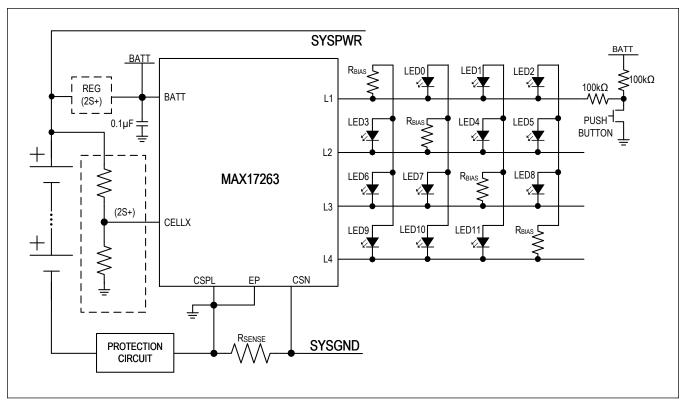


Figure 3. LED Charlieplexing Circuit

<u>Table 17</u> shows the bias resistor selection guide for typical types of LEDs. Applications using larger LED resistors or smaller sense resistors than the guidance may not achieve correct auto-count upon start up. For such applications, the LED count can be corrected by  $I^2C$  update to LEDCfg1.

**Table 17. LED Bias Resistor Selection Guide** 

LED INDICATOR COLOR	TYPICAL Vf AT 5mA CURRENT	SUGGESTED BIAS RESISTOR RANGE					
LED INDICATOR COLOR	TYPICAL VI AT SIIIA CORRENT	20mΩ R <sub>SENSE</sub>	10mΩ R <sub>SENSE</sub>	5mΩ R <sub>SENSE</sub>			
Red/Yellow	1.8	≤ 400Ω	≤ 240Ω	≤ 180Ω			
Green/Blue/White	2.8	≤ 100Ω	≤ 30Ω	≤ 10Ω			

The following LED features are available for configuration:

1. Push-button control, Always-on, or Light-up-during-charging:

In the push button mode, the stay-on timing is controllable through a timer or only while button is pressed. In always-on mode, the LED driver is always on and may be turned off by host I<sup>2</sup>C command. In light-up-during-charging mode, the LED is always on when charging current is sufficient. These features can be controlled with the LEDCfg1 register.

2. Gray-LED vs. Full-Bar:

As shown in <u>Figure 4</u>, the gray-LED mode provides "half LED bar" light level to provide higher resolution indication on current SOC level. This can be configured in the LEDCfg1 register.

3. Blinking LED:

The "gray LED" can optionally be configured as blinking LED with configurable timing. When SOC nears empty, the last LED can be configured to blink to indicate empty. The details of the configuration are described at LEDCfg2 register.

4. Empty LED:

In this configuration, one LED is configured separately as "empty LED". When the SOC reaches less than half bar, the empty LED lights up to indicate a need to recharge. This feature can be configured in the LEDCfg2 register. The following shows an example of 4 LEDs and one empty LED with full-bar mode.

RepSOC (%)	EMPTY LED	LED3	LED2	LED1	LED0
87.5 to 100	off	on	on	on	on
62.5 to 87.5	off	off	on	on	on
37.5 to 62.5	off	off	off	on	on
12.5 to 37.5	off	off	off	off	on
0 to 12.5	on	off	off	off	off

#### 5. Detect number of LEDs:

The LED auto-count functionality can be triggered by reset and then set the LEDCfg2.EnAutoLEDCnt. At start up, this functionality is automatically triggered.

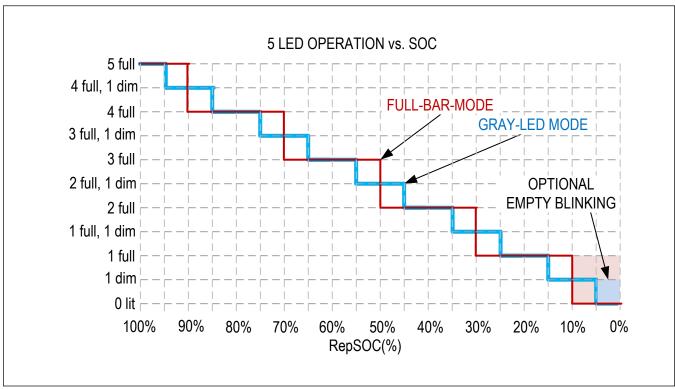


Figure 4. LED Status vs. Reported SOC Value in 5 LEDs Example

### **LED Configuration Registers**

#### LEDCfg1 Register (40h)

Initial value: 0x6070

The LEDCfg1 register configures the LED driver operation. If any LED activity is initiated, the MAX17263 automatically wakes up from hibernate mode into active mode.

## Table 18. LEDCfg1 (040h) Format

D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
LEDTimer			AniStep		Ani	Md	LEC	DMd	LChg	GrEn		NBA	ARS		

NBARS: Sets the number of LED bars. After LED auto-count, this value is updated automatically.

**GrEn:** Set GrEn = 1 to enable gray-scale for the 'remainder' LED. Otherwise, LEDs are based on proper rounding math. See the following table for example.

	RANGE WITH GrEn = 0 (ROUNDING) (%)	RANGE WITH GrEn = 1 (NO ROUNDING) (%)
6bar	100 to 91.67	100 to 83.33
5bar	91.67 to 75	83.33 to 66.67
4bar	75 to 58.33	66.67 to 50
3bar	58.33 to 41.67	50 to 33.33
2bar	41.67 to 25	33.33 to 16.67
1bar	25 to 8.33	0 to 16.7
0bar	8.33 to 0	0

	RANGE WITH GrEn = 0 (ROUNDING) (%)	RANGE WITH GrEn = 1 (NO ROUNDING) (%)
4bar	88.5 to 100	75 to 100
3bar	62.5 to 88.5	50 to 75
2bar	37.5 to 62.5	25 to 50
1bar	12.5 to 37.5	0 to 25
0bar	0 to 12.5	0

LChg: Set LChg = 1 to constantly drive LEDs when battery charging (charge current > IchgTerm register) is detected.

LEDMd: LED Mode. Set LEDMd = 00 to disable LEDs. Set LEDMd = 10 for direct push-button control. Set LEDMd = 01 for push-button start and timer-stop. Set LEDMd = 11 to force LEDs to turn on regardless of push-button and without any timer. LEDMd configuration effects LEDCtrl configuration.

**AniMd:** Animation Mode Control. Only applicable for LEDMd = 01 or 11. Set AniMd = 00 for normal behavior; solid bars with one gray. Set AniMd = 01 for animation to fill the bars. Set AniMd = 10 for breathing LEDs. Set AniMd = 11 for fill animation plus breathing animation.

AniStep: Determines the step-size of the animation-mode operation. Larger AniStep animates faster.

**LEDTimer:** LEDTimer sets the LED termination time according to the following table:

LEDTimer	0	1	2	3	4	5	6	7
termination time (s)	0.1	0.3	0.6	1.3	2.7	5.5	8.6	10.0

LEDTimer sets the blinking interval according to the following table:

LEDTimer	0	1	2	3	4	5	6	7
blinking interval (s)	0.4	0.4	0.4	0.4	0.7	1.4	2.8	5.6

## LEDCfg2 Register (4Bh)

Initial value: 0x011f

The LEDCfg2 register configures the LED driver operations.

## Table 19. LEDCfg2 (04Bh) Format

D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
DLED	VLED						EnAutoLEDCnt	GBlink	EBlink	FBlink		Br	ightne	SS	

**Brightness:** Set Brightness from 0 to 31 according to the desired brightness of the LED. The IC compensates for battery voltage effect on brightness to provide stable brightness over supply voltage.

**FBlink:** Full Blink Enable. Set FBlink = 1 to blink all LEDs when full is detected. The blinking period is controlled by LEDTimer.

**EBlink:** Empty Blink Enable. Set EBlink = 1 to blink lowest LED when empty is detected. The blinking period is controlled by LEDTimer.

**GBlink:** Gray Blink Enable. Set GBlink = 1 to blink gray LED. The blinking period is controlled by LEDTimer.

**EnAutoLEDCnt:** Enable auto LED counting. At start up, the auto counting is triggered automatically. To command an autodetect, reset and then set this bit.

**VLED:** Set VLED to the nominal LED voltage, with a 40mV LSB and a 2.52V range. The firmware compensates the LED duty according to the following equation:

LED Duty = Brightness x (Vempty-VLED)/(VCELL-VLED)

**DLED:** Set DLED = 1 to configure LED0 to operate as a "empty-battery-LED", which could be a different color from the others. For example, in a 5-bar system, 5 white LEDs indicate full, 2 white LEDs indicate 40%, and when down to less than half-bar LED (less than 10%), it instead drives the empty LED (LED0).

#### LEDCfg3 Register (37h)

Initial value: 0x8000

The LEDCfg3 register configures additional LED settings.

## Table 20. LEDCfg3 (37h) Format

D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
FullSpd	DNC	CustLEDCtrl	0	0	0	0	0	0	0	0	0	0	0	0	0

**FullSpd:** When FullSpd = 1, firmware updates LED calculations and timing operations every 175ms. When FullSpd = 0, LED calculations are only updated every 0.7 seconds.

**CustLEDCtrl:** If this bit is 0, LEDs are managed by LEDCfg1/LEDCfg2 registers. If this bit is 1, LEDs are managed by CustLED register.

**DNC:** Do-Not-Change. This bit is automatically calculated at start up according to schematic auto-detection. Do not change this bit.

Use the following sequence to write to LEDCfg3:

- 1. x = ReadWord(LEDCfg3\_address)
- 2. y = x & 0x4000
- 3. WriteWord (LEDCfg3\_address, y + (LEDCfg3\_Value&0xBFFF))

## CustLED Register (64h)

The CustLED register configures each LED individually. Enabling LEDCfg3.CustLEDCtrl is required for custom LED control.

## Table 21. CustLED (64h) Format

D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0

## Table 21. CustLED (64h) Format (continued)

		0	0	0	0	LED11	LED10	LED9	LED8	LED7	LED6	LED5	LED4	LED3	LED2	LED1	LED0
--	--	---	---	---	---	-------	-------	------	------	------	------	------	------	------	------	------	------

**LEDn:** Set the bit to turn on LED at index n. Clear the bit to turn off.

### ModelGauge m5 Memory Space

Registers that relate to functionality of the ModelGauge m5 fuel gauge are located on pages 0h-4h and are continued on pages Bh and Dh. See the <u>ModelGauge m5 EZ Algorithm</u> section for details of specific register operation. Register locations marked reserved should not be written to.

Table 22. ModelGauge m5 Register Memory Map

PAGE/	00h 10h		20h	30h	40h	B0h	D0h
WORD							
0h	Status	FullCapRep	TTF	Reserved	LEDCfg1	Status2	RSense / UserMem3
1h	VAlrtTh	TTE	DevName	Reserved	Reserved	Power	ScOcvLim
2h	TAIrtTh	QRTable00	QRTable10	QRTable20	QRTable30	ID / UserMem2	VGain
3h	SAIrtTh	FullSocThr	FullCapNom	Reserved	RGain	AvgPower	SOCHold
4h	AtRate	RCell	Reserved	DieTemp	Reserved	IAIrtTh	MaxPeakPower
5h	RepCap	Reserved	Reserved	FullCap	dQAcc	TTFCfg	SusPeakPower
6h	RepSOC	AvgTA	Reserved	Reserved	dPAcc	CVMixCap	PackResistance
7h	Age	Cycles	AIN	LEDCfg3	Reserved	CVHalfTime	SysResistance
8h	Temp	DesignCap	LearnCfg	RComp0	Reserved	CGTempCo	MinSysVoltage
9h	VCell	AvgVCell	FilterCfg	TempCo	ConvgCfg	Curve	MPPCurrent
Ah	Current	MaxMinTemp	RelaxCfg	VEmpty	VFRemCap	HibCfg	SPPCurrent
Bh	AvgCurrent	MaxMinVolt	MiscCfg	Reserved	LEDCfg2	Config2	ModelCfg
Ch	QResidual	MaxMinCurr	TGain	Reserved	Reserved	VRipple	AtQResidual
Dh	MixSOC	Config	TOff	FStat	QH	RippleCfg	AtTTE
Eh	AvSOC	IChgTerm	CGain	Timer	Reserved	TimerH	AtAvSOC
Fh	MixCap	AvCap	COff	ShdnTimer	Reserved	Reserved	AtAvCap

#### **Layout Guidelines**

Proper circuit layout as shown in <u>Figure 5</u> is essential for voltage, temperature, and current measurement accuracy. The recommended layout guidelines are as follows:

- CSN and CSPH/CSPL traces should make Kelvin connections to the sense resistor. Current is measured differentially
  through the CSN and CSPH/CSPL pins. Any shared high-current paths on these traces affect current measurement
  accuracy.
- Connect EP directly to the GND pin.
- REG capacitor trace loop area should be minimized. REG should be connected to the GND pin as close as possible
  to the IC. Run only a single GND trace to the sense resistor. This helps filter any noise from the internal regulated
  supply.
- All other ground connections should be kept separate from the current sensing traces.
  - · The kelvin lines should not be shared with other circuits.

# Single/Multi-Cell Fuel Gauge with ModelGauge m5 EZ and Integrated LED Control

- · Vias on the kelvin traces are not recommended.
- There are no limitations on any other IC connection. Other IC pins as well as any external components mounted to these pins have no special layout requirements.

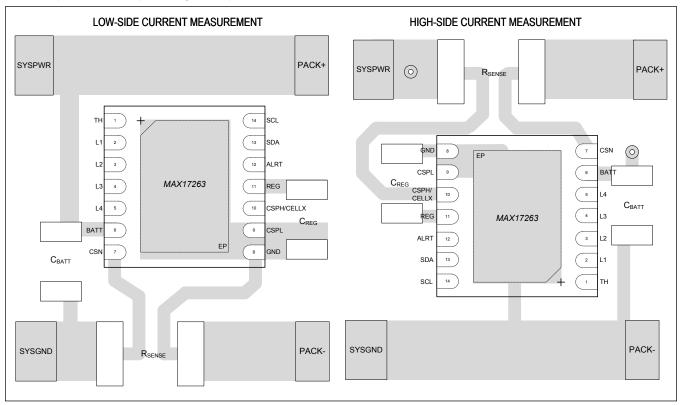


Figure 5. MAX17263 Layout Guide

## **Typical Application Circuits**

Figure 6 and Figure 7 show typical operating circuits for low-side current sensing. A sense resistor is typically used. Alternatively, a PCB trace can be used for high-current or small-form-factor applications. For better measurement, place the sensing element as close as possible to the CSN and GND pins. The IC automatically compensates for the effect of environmental temperature and trace heating on trace resistance.

Figure 8 shows the typical application circuit for single-cell high-side current measurement application. In this configuration, tie CSN pin to battery pack positive terminal. Connect a desired sense resistor or PCB trace across CSN and CSPH.

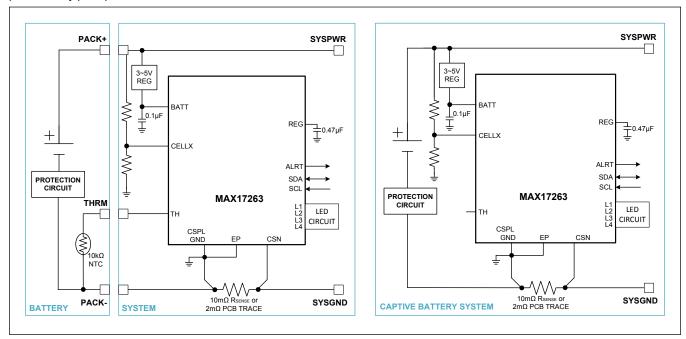


Figure 6. Multi-Cell Low-Side Current Measurement Typical Applications Circuit

## **Typical Application Circuits (continued)**

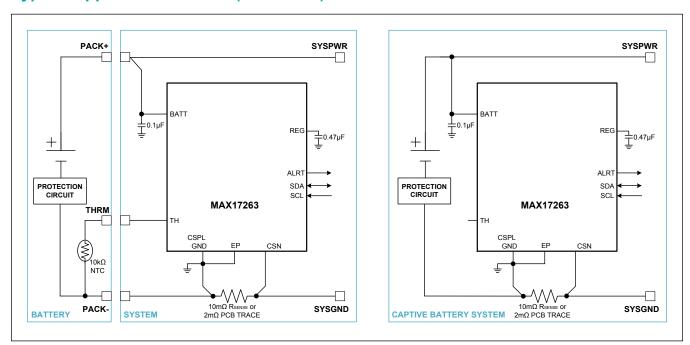


Figure 7. Single-Cell Low-Side Current Measurement Typical Applications Circuit

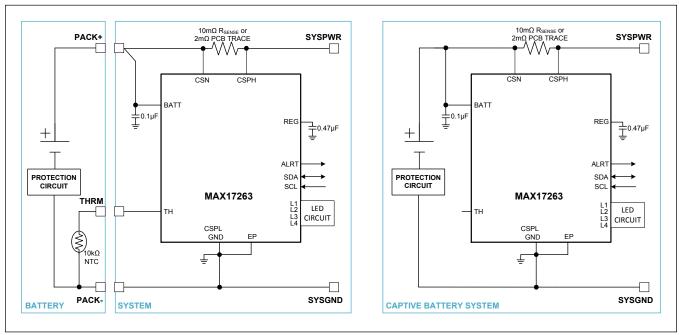


Figure 8. High-Side Current Measurement Typical Applications Circuit

Figure 9 shows the typical applications circuit for multiple-series cells. An external 3V to 5V regulator is required to provide regulated output within BATT pin supply range. In multiple-series configuration, the high-side current measurement feature is not available. Multiple-series-cells measurement requires an external voltage divider circuit. The resistor divider should be configured so that 40% of one-cell voltage is measured at analog measurement pin CELLX. As it is configured in Figure 9, the resistor divider ratio is R2/R1 = 5/2

## **Typical Application Circuits (continued)**

x (N-1) + 3/2, where R2 is the resistance between the CELLX pin and the battery pack positive terminal, R1 is the resistance between the CELLX pin and the GND pin, and N is the number of cells. If LED functionality is disabled, an N-MOSFET controlled by the L2 pin can be added to the resistor divider for reducing quiescent consupmtion. Higher resistance value for the divider circuit degrades the accuracy of analog measurement, while lower resistance causes more power consumption. The suggested R1 value is  $200k\Omega$ . For the accuracy of the voltage measurement, use 0.1% resistors.

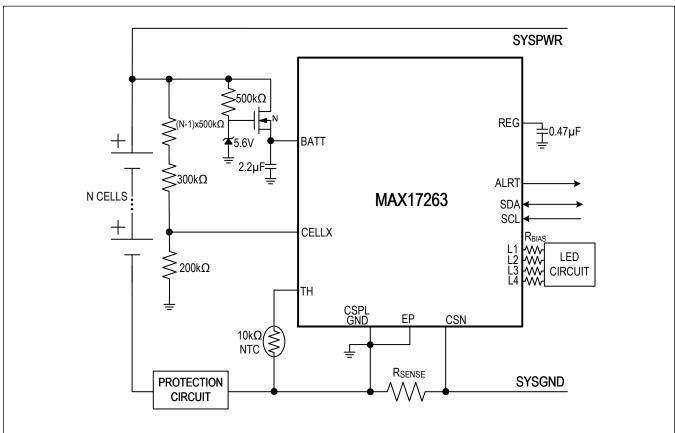


Figure 9. Multiple-Series Battery Typical Applications Circuit

## **Ordering Information**

PART NUMBER TEMP RANGE		DESCRIPTION	PIN-PACKAGE		
MAX17263LETD+	-40°C to +85°C	Single/Multi-Cell, 3 to 12 LED support	14-TDFN-EP*		
MAX17263LETD+T	-40°C to +85°C	Single/Multi-Cell, 3 to 12 LED support	14-TDFN-EP*		

<sup>+</sup>Denotes a lead(Pb)-free/RoHS-compliant package.

T = Tape and reel.

<sup>\*</sup>EP = Exposed pad.

# Single/Multi-Cell Fuel Gauge with ModelGauge m5 EZ and Integrated LED Control

## **Revision History**

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	6/18	Initial release	_

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim Integrated's website at www.maximintegrated.com.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time. The parametric values (min and max limits) shown in the Electrical Characteristics table are guaranteed. Other parametric values quoted in this data sheet are provided for guidance.