

SD3GDAEVK

User's Guide



Literature Number: SNLU130
April 2013

1	Introduction	5
2	Setup	5
	2.1 Connector Descriptions	5
	2.2 Operation	6
3	Board Layout	7
4	Schematic	10
5	Bill of Materials	11

List of Figures

1	Top Assembly Layer	7
2	Top Layer	8
3	GND Layer	8
4	VCC Layer	9
5	Bottom Layer	9
6	Schematic	10

List of Tables

1	Bill of Materials.....	11
---	------------------------	----

SD3GDAEVK

The Texas Instruments SD3GDAEVK evaluation kit (EVK) helps designers evaluate the operation and performance of the LMH0344 3 Gbps HD/SD SDI Adaptive Cable Equalizer, LMH0346 3 Gbps HD/SD SDI Reclocker, and LMH0302 3 Gbps HD/SD SDI Cable Driver in a distribution amplifier configuration.

1 Introduction

The Texas Instruments SD3GDAEVK evaluation kit (EVK) helps designers evaluate the operation and performance of the LMH0344 3 Gbps HD/SD SDI Adaptive Cable Equalizer, LMH0346 3 Gbps HD/SD SDI Reclocker, and LMH0302 3 Gbps HD/SD SDI Cable Driver in a distribution amplifier configuration.

2 Setup

This section describes the connectors and jumpers on the board as well as how to properly connect, set up, and use the SD3GDAEVK.

2.1 Connector Descriptions

Conn6, Conn7 – VCC, GND are the DC power connectors. Conn6 and Conn7 should be powered with a DC voltage of $3.3V \pm 5\%$.

Conn5 – SDI is the 75Ω BNC input connector for the LMH0344 data input. This input is intended to receive a single-ended input signal via a 75Ω coaxial cable (SMPTE 424M, SMPTE 292M, or SMPTE 259M standard levels and impedances).

Conn1, Conn2 – SDO, $\overline{SDO}$ are the 75Ω BNC output connectors for the LMH0302 data outputs. These outputs have onboard 4.7 μF AC-coupling capacitors (C3 and C4), and are SMPTE 424M, SMPTE 292M, or SMPTE 259M standard levels and impedances. The LMH0302 has a differential output driver, and when using only one output (one half of the differential pair), the unused output should be terminated with a 75Ω BNC termination.

Conn3, Conn4 – SCO/SDO2, $\overline{SCO/SDO2}$ are the 50Ω SMA output connectors for the LMH0346 secondary clock/data outputs. These outputs have onboard 4.7 μF AC-coupling capacitors (C15 and C16). The LMH0346 has a differential 50Ω CML output driver, and when using only one output (one half of the differential pair), the unused output should be terminated with a 50Ω SMA termination.

2.1.1 LMH0344 Cable Equalizer Controls and Indicators

J2 – $\overline{CD}$, MUTE is the jumper for monitoring $\overline{CD}$ and controlling MUTE. $\overline{CD}$ is asserted high when no signal is present at the LMH0344 input. MUTE may be used to force the LMH0344 outputs on or off, or tied to $\overline{CD}$ to allow automatic mute operation. To force the outputs off, set the jumper to tie MUTE to VCC. To force the outputs to be always on, set the jumper to tie MUTE to GND. For normal operation, set the jumper to tie $\overline{CD}$ to MUTE for automatic mute control.

J6 – BYPASS is the jumper for controlling the equalization bypass function. To put the equalizer into bypass mode, set this jumper to tie BYPASS to VCC. For normal operation (bypass turned off), leave J6 open.

D1 – $\overline{CD}$ is the LED for the $\overline{CD}$ status. This LED is GREEN when an input signal has been detected at the LMH0344 input, and OFF when no input signal is detected.

2.1.2 LMH0346 Reclocker Controls and Indicators

J1 – RATE0, RATE1 are the jumpers for controlling the reclocker serial data rate. These (two) jumpers may be set in any of the following three configurations:

1. RATE0=RATE1=GND for auto-rate mode (default mode if jumper is not set).
2. RATE0=VCC, RATE1=GND for 270 Mbps (SD) mode.
3. RATE0=GND, RATE1=VCC for 2967/2970 Mbps or 1483/1485 Mbps (HD/3G) mode.

J3 – SCO_EN is the jumper for selecting the function for the secondary output of the reclocker (SCO/SDO2). To select the serial clock, set the jumper to tie SCO_EN to VCC. To select the serial data output, set the jumper to tie SCO_EN to GND. The default selection (if jumper is not set) is for a second data output.

J4 – BYPASS/AUTO BYPASS is the jumper for selecting the bypass mode of the reclocker. Bypass mode (VCC) forces the device to output the data without reclocking it. Auto bypass (GND) is the default condition in which the device locks to and reclocks the data at supported data rates while automatically bypassing the reclocking function for unsupported data rates. The default selection (jumper is not set) is for auto bypass mode.

J8 – OUTPUT MUTE is the jumper for muting or enabling the reclocker outputs. To mute the outputs, set this jumper to tie OUTPUT MUTE to GND. To enable the outputs (normal operation), set the jumper to tie OUTPUT MUTE to VCC. The default selection (jumper is not set) is for the outputs to be enabled.

J10 – LOCK DETECT is the jumper for monitoring the reclocker lock detect status. This output provides an indication that the PLL is locked when high.

J9 – SD/HD is the jumper for monitoring the SD/HD output. This output indicates that the locked data rate is SD when high, and HD/3G when low. This output is only valid when the PLL is locked, and defaults to HD/3G (low) when the PLL is unlocked.

D2 – LOCK is the LED for the reclocker lock detect status. This LED is GREEN when the PLL is locked to the incoming data, and OFF when the PLL is not locked.

D3, D4 – SD/HD are the LEDs for the locked data rate. D4 is RED when the reclocker is locked to SD data. D3 is GREEN when the reclocker is locked to HD or 3G data.

2.1.3 LMH0302 Cable Driver Controls and Indicators

J5, J7 – SD/HD are the jumpers for controlling the slew rate of the cable driver output. The output complies with SMPTE 259M when high and SMPTE 424M / 292M when low. Two methods are provided to set the cable driver slew rate:

1. Auto Mode: Set J5 and leave J7 open. The LMH0346 will automatically detect the incoming data rate and control the LMH0302 slew rate. If the LMH0346 does not recognize the incoming data or is in Bypass mode, the slew rate will default to HD/3G.
2. Manual Mode: Pull J5 and set the J7 jumper to either SD or HD/3G to manually set the LMH0302 slew rate.

J11 – ENABLE is the jumper for controlling the cable driver power down function. Set this jumper to disable the cable driver. Leave this jumper open for normal operation.

2.2 Operation

Begin by applying 3.3V DC power to the Conn6 and Conn7 connectors on the board.

Set the control jumpers as desired. For default operation, set the following jumpers:

1. J2 set to tie $\overline{CD}$ to MUTE for automatic equalizer mute control.
2. J5 set to automatic LMH0346 control of the LMH0302 output slew rate.

All other jumpers may be left open if desired.

Apply a test signal via 75Ω coaxial cable to the Conn5 75Ω BNC input connector. The signal characteristics should be within the LMH0344 input specifications (typically the signal going into the cable will be a SMPTE 424M, SMPTE 292M, or SMPTE 259M compliant serial SDI signal). The LMH0344 equalizer will automatically adjust its gain to reverse the effects of the cable loss and restore the original signal.

The LMH0346 reclocker receives this signal and retimes it to reduce jitter. The primary reclocker output is sent to the LMH0302 cable driver, which drives SMPTE 424M, SMPTE 292M, or SMPTE 259M compliant serial SDI signals to the Conn1 and Conn2 75Ω BNC output connectors. Connect 75Ω coaxial cable to Conn1 and/or Conn2 to observe the single-ended output. If only one output is used, the other output should be terminated with a 75Ω BNC termination.

The secondary reclocker output may be observed via the Conn3 or Conn4 50Ω SMA output connector. Connect a matched pair of 50Ω SMA cables to Conn3 and Conn4 to observe the differential output, or connect the cable to either Conn3 or Conn4 to view the single-ended output. If only one output is used, the other output should be terminated with a 50Ω SMA termination.

To evaluate only the LMH0346 reclocker, set the J6 jumper to bypass equalization, and monitor the reclocker SCO/SDO2 outputs on Conn3 and Conn4.

3 Board Layout

Figure 1, Figure 2, Figure 3, Figure 4, and Figure 5 show the board layout for the SD3GDAEVK. The SD3GDAEVK is a 4-layer board (TOP / GND / VCC / BOTTOM).

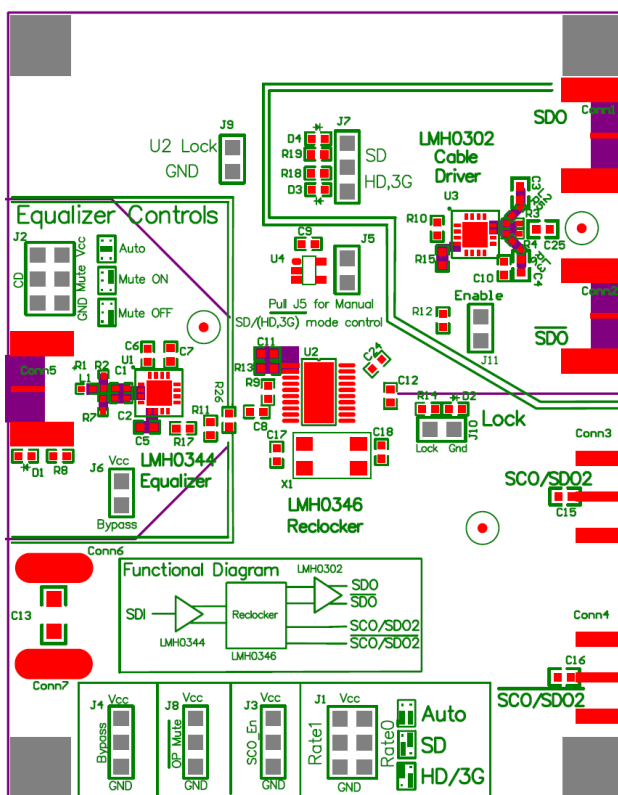


Figure 1. Top Assembly Layer

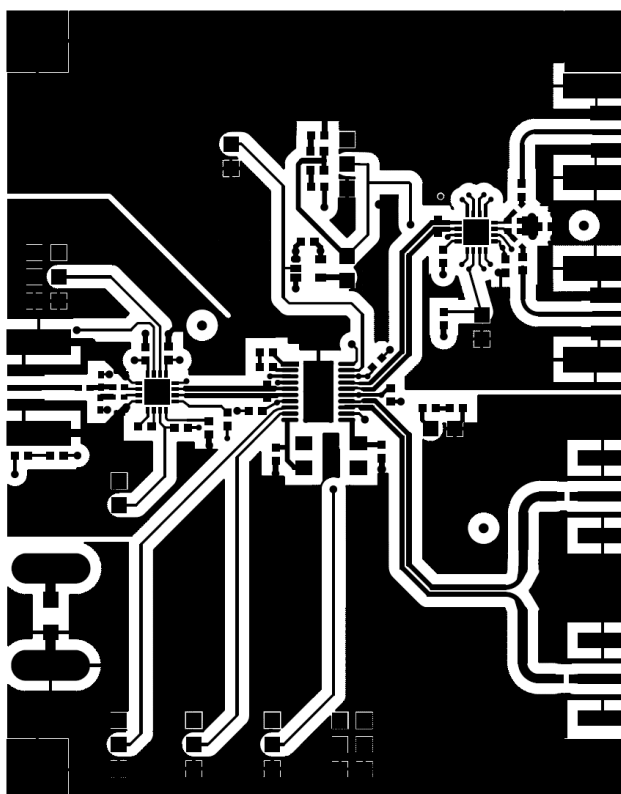


Figure 2. Top Layer

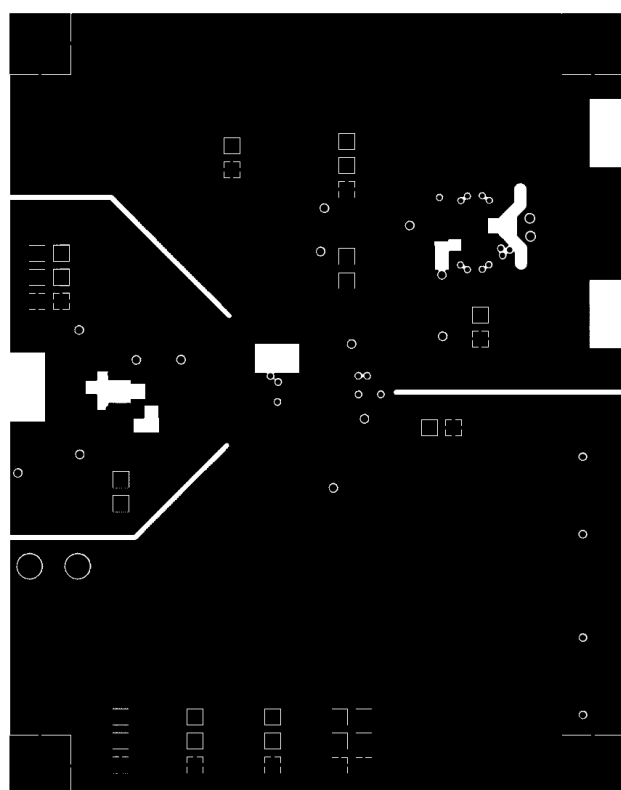


Figure 3. GND Layer

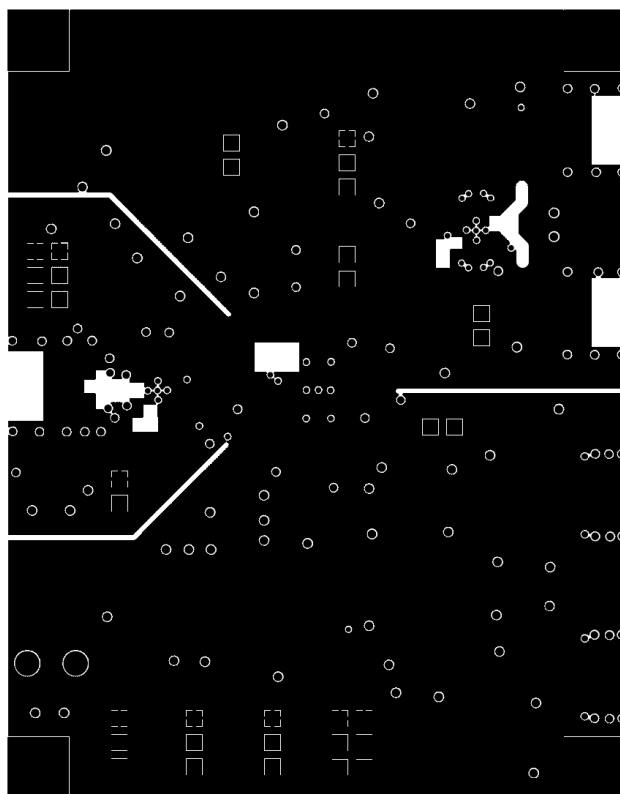


Figure 4. VCC Layer

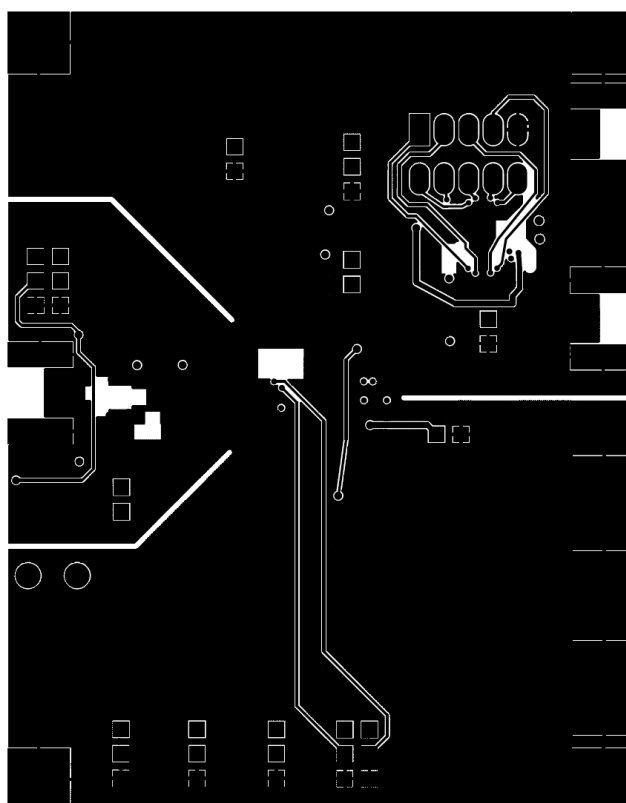


Figure 5. Bottom Layer

4 Schematic

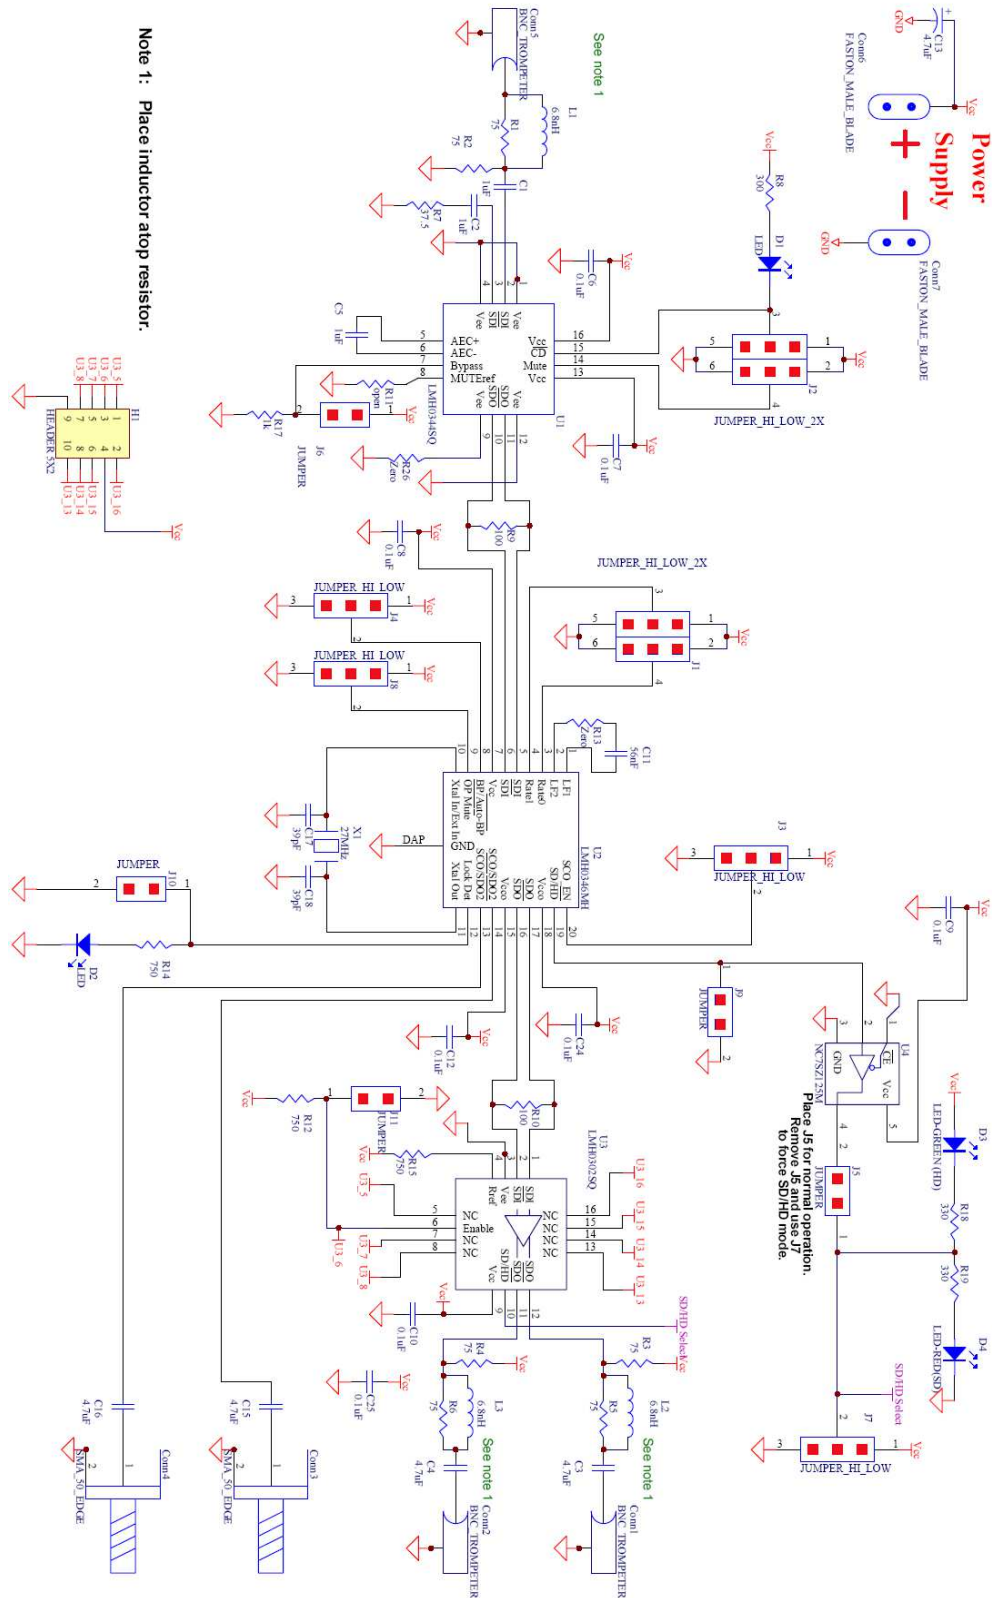


Figure 6. Schematic

5 Bill of Materials

Table 1. Bill of Materials

Reference Designator	Description	Manufacturer	Part Number
C1, C2	Capacitor, 1 μ F, 10V, X5R, 0402	Murata	GRM155R61A105KE15D
C11	Capacitor, 56nF, 16V, X7R, 0603	Murata	GRM188R71C563KA01D
C13	Capacitor, 4.7 μ F, 16V, X7R, 1206	TDK	C3216X7R1C475K160AB
C17, C18	Capacitor, 39pF, 50V, NP0, 0603	TDK	C1608C0G1H390J080AA
C3, C4, C15, C16	Capacitor, 4.7 μ F, 6.3V, X5R, 0603	Murata	GRM188R60J475KE19D
C5	Capacitor, 1 μ F, 16V, X5R, 0603	Murata	GRM188R61C105KA93D
C6, C7, C8, C9, C10, C12, C24, C25	Capacitor, 0.1 μ F, 25V, X7R, 0603	Kemet	C0603C104J3RACTU
Conn3, Conn4	SMA, 50 Ω , Edge Launch	Johnson	142-0701-851
Conn1, Conn2, Conn5	BNC, 75 Ω , Edge Launch	Trompeter	UCBJE20-1
Conn6, Conn7	Power Supply Terminal	Keystone	1287-ST
D1, D2, D3	LED, Green, 0603	Lite-On	LTST-C190GKT
D4	LED, Red, 0603	Lite-On	LTST-C190KRKT
J1, J2	Header, 2x3, 0.1"	3M	929836-02-36-RK
J3, J4, J7, J8	Header, 1x2, 0.1"	3M	929834-02-36-RK
J5, J6, J9, J10, J11	Header, 1x3, 0.1"	3M	929834-02-36-RK
L1, L2, L3	Inductor, 6.8nH, 0402	Murata	LQP15MN6N8B02D
R1, R2, R3, R4, R5, R6	Resistor, 75 Ω , 1%, 0402	Yageo America	RC0402FR-0775RL
R13, R26	Resistor, 0.0 Ω 5%, 0603	Panasonic ECG	ERJ-3GEY0R00V
R12, R14, R15	Resistor, 750 Ω , 5%, 0603	Panasonic ECG	ERJ-3GEYJ751V
R17	Resistor, 1k Ω , 1%, 0603	Yageo America	RC0603FR-071KL
R18, R19	Resistor, 330 Ω , 5%, 0603	Panasonic ECG	ERA-V15J331V
R7	Resistor, 37.4 Ω , 1%, 0402	Panasonic ECG	ERJ-2RKF37R4X
R8	Resistor, 300 Ω , 5%, 0603	Panasonic ECG	ERJ-3GEYJ301V
R9, R10	Resistor, 100 Ω , 1%, 0603	Panasonic ECG	ERJ-3EKF1000V
U1	IC, SDI Cable Equalizer, LLP-16	TI	LMH0344SQ
U2	IC, SDI Reclocker, eTSSOP-20	TI	LMH0346MH
U3	IC, SDI Cable Driver, LLP-16	TI	LMH0302SQ
U4	IC, 3-state buffer, SOT-23	Fairchild Semi	NC7SZ125M
X1	Crystal, 27MHz	Abracon	ABMM-27.000MHZ-B2-T

EVALUATION BOARD/KIT/MODULE (EVM) ADDITIONAL TERMS

Texas Instruments (TI) provides the enclosed Evaluation Board/Kit/Module (EVM) under the following conditions:

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods.

Should this evaluation board/kit not meet the specifications indicated in the User's Guide, the board/kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING LIMITED WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

Please read the User's Guide and, specifically, the Warnings and Restrictions notice in the User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For additional information on TI's environmental and/or safety programs, please visit www.ti.com/esh or contact TI.

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used. TI currently deals with a variety of customers for products, and therefore our arrangement with the user is not exclusive. TI assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.

REGULATORY COMPLIANCE INFORMATION

As noted in the EVM User's Guide and/or EVM itself, this EVM and/or accompanying hardware may or may not be subject to the Federal Communications Commission (FCC) and Industry Canada (IC) rules.

For EVMs **not** subject to the above rules, this evaluation board/kit/module is intended for use for ENGINEERING DEVELOPMENT, DEMONSTRATION OR EVALUATION PURPOSES ONLY and is not considered by TI to be a finished end product fit for general consumer use. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to part 15 of FCC or ICES-003 rules, which are designed to provide reasonable protection against radio frequency interference. Operation of the equipment may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

General Statement for EVMs including a radio

User Power/Frequency Use Obligations: This radio is intended for development/professional use only in legally allocated frequency and power limits. Any use of radio frequencies and/or power availability of this EVM and its development application(s) must comply with local laws governing radio spectrum allocation and power limits for this evaluation module. It is the user's sole responsibility to only operate this radio in legally acceptable frequency space and within legally mandated power limitations. Any exceptions to this are strictly prohibited and unauthorized by Texas Instruments unless user has obtained appropriate experimental/development licenses from local regulatory authorities, which is responsibility of user including its acceptable authorization.

For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant

Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For EVMs annotated as IC – INDUSTRY CANADA Compliant

This Class A or B digital apparatus complies with Canadian ICES-003.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Concerning EVMs including radio transmitters

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concerning EVMs including detachable antennas

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Cet appareil numérique de la classe A ou B est conforme à la norme NMB-003 du Canada.

Les changements ou les modifications pas expressément approuvés par la partie responsable de la conformité ont pu vider l'autorité de l'utilisateur pour actionner l'équipement.

Concernant les EVMs avec appareils radio

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

【Important Notice for Users of this Product in Japan】

This development kit is NOT certified as Confirming to Technical Regulations of Radio Law of Japan

If you use this product in Japan, you are required by Radio Law of Japan to follow the instructions below with respect to this product:

1. Use this product in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use this product only after you obtained the license of Test Radio Station as provided in Radio Law of Japan with respect to this product, or
3. Use of this product only after you obtained the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to this product. Also, please do not transfer this product, unless you give the same notice above to the transferee. Please note that if you could not follow the instructions above, you will be subject to penalties of Radio Law of Japan.

Texas Instruments Japan Limited
(address) 24-1, Nishi-Shinjuku 6 chome, Shinjuku-ku, Tokyo, Japan

<http://www.tij.co.jp>

【ご使用にあたっての注】

本開発キットは技術基準適合証明を受けておりません。

本製品のご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。

日本テキサス・インスツルメンツ株式会社

東京都新宿区西新宿 6 丁目 2 4 番 1 号

西新宿三井ビル

<http://www.tij.co.jp>

EVALUATION BOARD/KIT/MODULE (EVM) WARNINGS, RESTRICTIONS AND DISCLAIMERS

For Feasibility Evaluation Only, in Laboratory/Development Environments. Unless otherwise indicated, this EVM is not a finished electrical equipment and not intended for consumer use. It is intended solely for use for preliminary feasibility evaluation in laboratory/development environments by technically qualified electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems and subsystems. It should not be used as all or part of a finished end product.

Your Sole Responsibility and Risk. You acknowledge, represent and agree that:

1. You have unique knowledge concerning Federal, State and local regulatory requirements (including but not limited to Food and Drug Administration regulations, if applicable) which relate to your products and which relate to your use (and/or that of your employees, affiliates, contractors or designees) of the EVM for evaluation, testing and other purposes.
2. You have full and exclusive responsibility to assure the safety and compliance of your products with all such laws and other applicable regulatory requirements, and also to assure the safety of any activities to be conducted by you and/or your employees, affiliates, contractors or designees, using the EVM. Further, you are responsible to assure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard.
3. You will employ reasonable safeguards to ensure that your use of the EVM will not result in any property damage, injury or death, even if the EVM should fail to perform as described or expected.
4. You will take care of proper disposal and recycling of the EVM's electronic components and packing materials.

Certain Instructions. It is important to operate this EVM within TI's recommended specifications and environmental considerations per the user guidelines. Exceeding the specified EVM ratings (including but not limited to input and output voltage, current, power, and environmental ranges) may cause property damage, personal injury or death. If there are questions concerning these ratings please contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, some circuit components may have case temperatures greater than 60°C as long as the input and output are maintained at a normal ambient operating temperature. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors which can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during normal operation, please be aware that these devices may be very warm to the touch. As with all electronic evaluation tools, only qualified personnel knowledgeable in electronic measurement and diagnostics normally found in development environments should use these EVMs.

Agreement to Defend, Indemnify and Hold Harmless. You agree to defend, indemnify and hold TI, its licensors and their representatives harmless from and against any and all claims, damages, losses, expenses, costs and liabilities (collectively, "Claims") arising out of or in connection with any use of the EVM that is not in accordance with the terms of the agreement. This obligation shall apply whether Claims arise under law of tort or contract or any other legal theory, and even if the EVM fails to perform as described or expected.

Safety-Critical or Life-Critical Applications. If you intend to evaluate the components for possible use in safety critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, such as devices which are classified as FDA Class III or similar classification, then you must specifically notify TI of such intent and enter into a separate Assurance and Indemnity Agreement.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2012, Texas Instruments Incorporated

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have **not** been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products

Audio	www.ti.com/audio
Amplifiers	amplifier.ti.com
Data Converters	dataconverter.ti.com
DLP® Products	www.dlp.com
DSP	dsp.ti.com
Clocks and Timers	www.ti.com/clocks
Interface	interface.ti.com
Logic	logic.ti.com
Power Mgmt	power.ti.com
Microcontrollers	microcontroller.ti.com
RFID	www.ti-rfid.com
OMAP Applications Processors	www.ti.com/omap
Wireless Connectivity	www.ti.com/wirelessconnectivity

Applications

Automotive and Transportation	www.ti.com/automotive
Communications and Telecom	www.ti.com/communications
Computers and Peripherals	www.ti.com/computers
Consumer Electronics	www.ti.com/consumer-apps
Energy and Lighting	www.ti.com/energy
Industrial	www.ti.com/industrial
Medical	www.ti.com/medical
Security	www.ti.com/security
Space, Avionics and Defense	www.ti.com/space-avionics-defense
Video and Imaging	www.ti.com/video

TI E2E Community

e2e.ti.com