



MAX8855 Evaluation Kit

Evaluates: MAX8855

General Description

The MAX8855 evaluation kit (EV kit) is a fully assembled and tested circuit board that contains all the components necessary to evaluate the performance of the MAX8855. The device is a high-efficiency dual step-down regulator. The EV kit is powered from a 2.35V to 3.6V DC supply.

The EV kit is capable of delivering 1.8V at 5A from output 1 and 1.2V at 5A from output 2. The device switching frequency is set to 1MHz and the two outputs switch 180° out-of-phase. High-efficiency, internal dual nMOS design keeps the board cool under heavy loads. The voltage-mode control architecture and the high-bandwidth (> 15MHz typ) voltage-error amplifier allow a type III compensation scheme to be utilized to achieve fast response under both line and load transients, and also allow for ceramic output capacitors.

Programmable soft-start reduces input inrush current. Two enable inputs allow the turning on/off of each output individually, resulting in great flexibility for system-level designs. A reference input facilitates output-voltage tracking applications.

Ordering Information

PART	TYPE
MAX8855EVKIT+	EV Kit

+Denotes lead(Pb)-free and RoHS-compliant.

Features

- ◆ 2.35V to 3.6V Input Supply Voltage Range
- ◆ 1.8V at 5A Output (Step-Down Regulator 1)
- ◆ 1.2V at 5A Output (Step-Down Regulator 2)
- ◆ 180° Out-of-Phase Operation Reduces Input Ripple Current
- ◆ All-Ceramic-Capacitor Design
- ◆ High Efficiency
- ◆ 27mΩ On-Resistance Internal MOSFETs
- ◆ Fully Protected Against Overcurrent, Short Circuit, and Overtemperature
- ◆ REFIN on One Channel for Tracking or External Reference
- ◆ Integrated Boost Diodes
- ◆ Programmable Switching Frequency from 0.5MHz to 2MHz
- ◆ Adjustable Outputs from 0.6V to (0.9 × V_{IN})
- ◆ Individual Enable Inputs and PWRGD Outputs
- ◆ Low-Cost Solution
- ◆ Fully Assembled and Tested

Component Suppliers

SUPPLIER	PHONE	WEBSITE
Murata Electronics North America, Inc.	770-436-1300	www.murata-northamerica.com
TDK Corp.	847-803-6100	www.component.tdk.com
TOKO America, Inc.	847-297-0070	www.tokoam.com

Note: Indicate that you are using the MAX8855 when contacting these component suppliers.

Component List

DESIGNATION	QTY	DESCRIPTION
C1, C23	2	22μF ±20%, 6.3V X5R ceramic capacitors (1206) TDK C3216X5R0J226M Murata GRM31CR60J226K
C2, C3, C4, C6, C16, C17, C20	7	0.1μF ±10%, 16V X7R ceramic capacitors (0402) TDK C1005X7R1C104K Murata GRM155R71C104K
C5	1	Not installed, capacitor
C12	1	0.022μF ±10%, 25V X7R ceramic capacitor (0402) TDK C1005X7R1E223K

DESIGNATION	QTY	DESCRIPTION
C7	1	2200pF ±10%, 50V X7R ceramic capacitor (0402) TDK C1005X7R1H222K Murata GRM155R71H222K
C8	1	0.22μF ±10%, 16V X5R ceramic capacitor (0402) TDK C1005X5R1C224K
C9, C15	2	680pF ±10%, 50V X7R ceramic capacitors (0402) TDK C1005X7R1H681K Murata GRM155R71H681K



MAX8855 Evaluation Kit

Component List (continued)

DESIGNATION	QTY	DESCRIPTION
C10, C14	2	47pF $\pm 5\%$, 50V C0G ceramic capacitors (0402) TDK C1005C0G1H470J Murata GRM1555C1H470J
C11, C13	2	560pF $\pm 10\%$, 50V X7R ceramic capacitors (0402) Murata GRM155R71H561K
C18, C19	2	47 μ F $\pm 20\%$, 6.3V X5R ceramic capacitors (1206) TDK C3216X5R0J476M Murata GRM31CR60J476K
C21, C22	2	1000pF $\pm 10\%$, 50V X7R ceramic capacitors (0402) TDK C1005X7R1H102K Murata GRM155R71H102K
FSYNC	0	Not installed, BNC connector
JU1, JU3	2	3-pin headers
JU2	1	2-pin header

DESIGNATION	QTY	DESCRIPTION
L1, L2	2	0.47 μ H $\pm 20\%$ inductors TOKO FDV0630-R47M
R1, R19	0	Not installed, resistors (0402)
R2	1	0 Ω resistor (0402)
R3, R4, R5, R12, R13, R18	6	10k Ω $\pm 1\%$ resistors (0402)
R6	1	4.99k Ω $\pm 1\%$ resistor (0402)
R7, R10	2	8.06k Ω $\pm 1\%$ resistors (0402)
R8, R9	2	210 Ω $\pm 1\%$ resistors (0402)
R11	1	10 Ω $\pm 1\%$ resistor (0402)
R14, R15	2	20k Ω $\pm 1\%$ resistors (0402)
R16	1	49.9 Ω $\pm 1\%$ resistor (1206)
U1	1	Dual step-down regulator (32 TQFN-EP*) Maxim MAX8855ETJ+
—	2	Shunts, 2-position
—	1	PCB: MAX8855 EVALUATION KIT+

*EP = Exposed pad.

Quick Start

Recommended Equipment

- MAX8855 EV kit
- Adjustable DC power supply capable of supplying 3.6V at up to 7A
- Two electronic loads capable of sinking 5A (e.g., HP 6060B)
- Two voltmeters (DMM)

Procedure

The EV kit is fully assembled and tested. Follow these steps to verify board operation. **Do not turn on the power supply until all connections are completed:**

- 1) Set the DC power supply in the 2.35V to 3.6V range and turn off the power supply.
- 2) Connect the positive lead of the power supply to the IN pad and the negative pad to the PGND pad of the EV kit.
- 3) Verify that JU1 and JU2 do not have a shunt installed.
- 4) Verify that a shunt is across pins 1 and 2 of jumper JU3.
- 5) Connect the positive lead of a voltmeter to the OUT1 pad and the negative lead of the voltmeter to the PGND1 pad of the EV kit.
- 6) Connect the positive lead of the other voltmeter to the OUT2 pad and the negative lead of the voltmeter to the PGND2 pad of the EV kit.
- 7) Connect the positive lead of a 5A electronic load to the OUT1 pad and the negative lead of the electronic load to the PGND1 pad of the EV kit.
- 8) Connect the positive lead of the second 5A electronic load to the OUT2 pad and the negative lead of the electronic load to the PGND2 pad of the EV kit.
- 9) Turn on the power supply.
- 10) Verify that V_{OUT1} is 1.8V throughout the 2.35V to 3.6V input voltage range.
- 11) Verify that V_{OUT2} is 1.2V throughout the 2.35V to 3.6V input voltage range.
- 12) Turn on both electronic loads. Repeat steps 10 and 11.

MAX8855 Evaluation Kit

Detailed Description

The MAX8855 EV kit evaluates the MAX8855 dual step-down regulator. The regulator switching frequency is set to 1MHz by default and can be adjusted from 0.5MHz to 2MHz. The EV kit is designed to operate from a DC power supply that can provide 2.35V to 3.6V and 7A of current.

Regulator 1 (OUT1) is configured as a step-down regulator set to 1.8V and can provide 5A of current. Regulator 2 (OUT2) is configured as a step-down regulator set to 1.2V and can provide 5A of current.

The EV kit output voltages are adjustable from a minimum of 0.6V to a maximum of $0.9 \times V_{IN}$. Refer to the *Setting the Output Voltage* section of the MAX8855 IC data sheet to set other output voltages in this range for VOUT1 and VOUT2.

Enable (EN1 and EN2)

The EV kit provides separate enable inputs, EN1 and EN2, to individually control or sequence the output voltages. The enable signals EN1 and EN2 are pulled up to VDD by resistors R3 and R18, respectively. To enable OUT1, remove the shunt from JU1; to disable OUT1, place the shunt on JU1 pins 2-3. To enable OUT2, remove the shunt from JU2; to disable OUT2, place the shunt on JU2 pins 1-2.

The enable inputs can also be driven from an external logic signal. With the JU1 and JU2 shunts removed, connect the EN1 signal to pin 2 of JU1, and the EN2 signal to pin 2 of JU2. The device enable pins are active-high and TTL compatible.

Power-Good Outputs (PWRGD_)

Regulator 1 and 2 provide power-good output signals that indicate when the corresponding output is in regulation. PWRGD1 and PWRGD2 are open-drain outputs that are pulled up to VDD by a 20kΩ resistor. The power-good, open-drain output for regulator 1 (PWRGD1) is high impedance when $V_{REFIN} \geq 0.54V$ and $V_{FB1} \geq 0.9 \times V_{REFIN}$. PWRGD1 is low when $V_{REFIN} < 0.54V$, EN1 is low, VDD or VIN1 is below VUVLO, the thermal-overload protection is activated, or when $V_{FB1} < 0.9 \times V_{REFIN}$.

PWRGD2 is high impedance when $V_{SS2} \geq 0.54V$ and $V_{FB2} \geq 0.9 \times V_{SS2}$. PWRGD2 is low when $V_{SS2} < 0.54V$, EN2 is low, VDD or VIN2 is below VUVLO, the thermal-overload protection is activated, or when $V_{FB2} < 0.9 \times V_{SS2}$.

External Reference Input (REFIN)

The EV kit provides an option for an external reference input. To use an external reference, remove the shunt from JU3 and connect an external reference between

0V and VDD - 1.6V to the REFIN pad to set the FB1 regulation voltage. To use the internal 0.6V reference, place a shunt on JU3 pins 1-2 to connect REFIN to SS1 (see Table 3). When the IC is shut down, REFIN is pulled to GND through an internal 335Ω.

If additional filtering is required, a 0.22μF capacitor can be added (C5).

Tracking

The EV kit can be configured as a tracking circuit (commonly used in DDR supply applications). To configure the EV kit for tracking, install resistors R1 and R19. These resistors form a voltage-divider that sets the tracking ratio. Remove R6 so OUT1 regulates to the REFIN voltage. Set jumper JU3 to pins 2-3. Refer to the MAX8855 IC data sheet for more information on tracking circuits and component selection.

Sequencing

To enable sequencing on the EV kit, place a shunt on pins 1-2 of JU1. In this configuration, OUT1 remains disabled until OUT2 is enabled and reaches regulation. When OUT1 is disabled, OUT2 shuts down at the same time. Refer to the MAX8855 IC data sheet for more information on sequencing.

Switching Frequency and Synchronization (FSYNC)

The EV kit operates from an internal 0.5MHz to 2MHz switching frequency set by R5. The EV kit's switching frequency is set to 1MHz by default. To change the switching frequency, replace R5 with a resistor value calculated as shown in the *Setting the Switching Frequency* section of the MAX8855 IC data sheet.

The EV kit can also be synchronized to an external clock from 250kHz to 2.5MHz by connecting the clock to the FSYNC BNC input. The external clock must have a duty cycle between 10% and 90% to ensure the regulators operate 180° out-of-phase.

Thermal-Overload Protection

Thermal-overload protection limits the total power dissipation of the device. Internal thermal sensors monitor the internal die temperature of each regulator. When this temperature exceeds +165°C, the corresponding regulator is shut down, allowing the IC to cool. The thermal sensor turns the regulator on after the junction temperature cools by 20°C. In a continuous thermal-overload condition, this results in a pulsed output.

Current Limit

The EV kit provides both peak and valley current limits to achieve robust short-circuit protection.

MAX8855 Evaluation Kit

VDL Supply

VDL is the low-side gate-drive supply for the device. The high-side gate drive (BST₊) and the IC supply voltage (V_{DD}) are also derived from VDL. In the EV kit's default configuration, VDL is connected to IN through the 0Ω resistor R2, allowing the EV kit to operate from a

single input supply between 2.35V and 3.6V. VDL can optionally be powered separately from the power input. When powering VDL separately, remove resistor R2 and connect a 2.35V to 3.6V supply to the VDL pad on the EV kit.

Table 1. Jumper JU1 Functions

SHUNT LOCATION	EN1 CONNECTED TO	REGULATOR 1
Not installed (default)	Pulled up to V _{DD} through R3	Enabled
1-2	PWRGD2	Sequencing: OUT1 is enabled when OUT2 is in regulation
2-3	GND	Disabled

Table 2. Jumper JU2 Functions

SHUNT LOCATION	EN2 CONNECTED TO	REGULATOR 2
Not installed (default)	Pulled up to V _{DD} through R18	Enabled
1-2	GND	Disabled

Table 3. Jumper JU3 Functions

SHUNT LOCATION	REFIN CONNECTED TO	FUNCTION
1-2 (default)	SS1	Internal reference (0.6V)
2-3	OUT2 through R1	OUT1 tracks V _{OUT2}
Not installed	—	External reference (0V to V _{DD} - 1.6V) connected to REFIN pad

MAX8855 Evaluation Kit

Evaluates: MAX8855

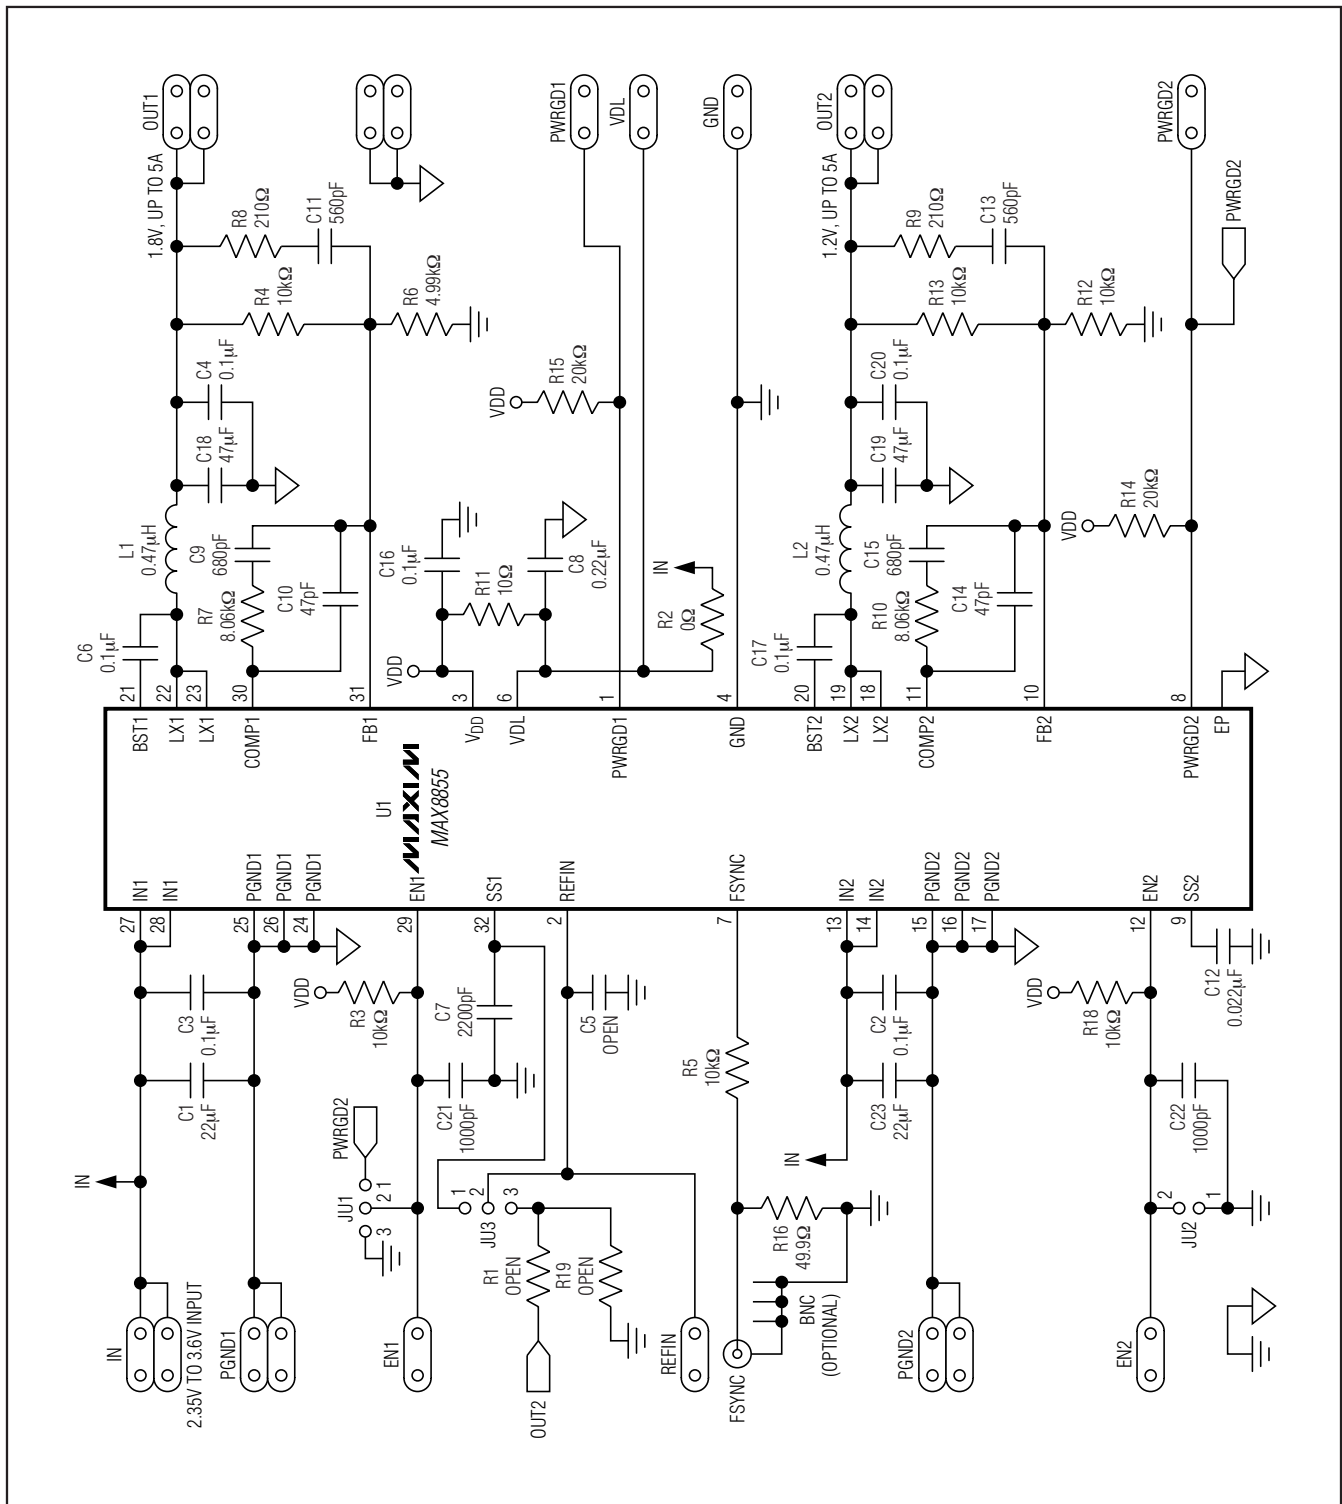


Figure 1. MAX8855 EV Kit Schematic

MAX8855 Evaluation Kit

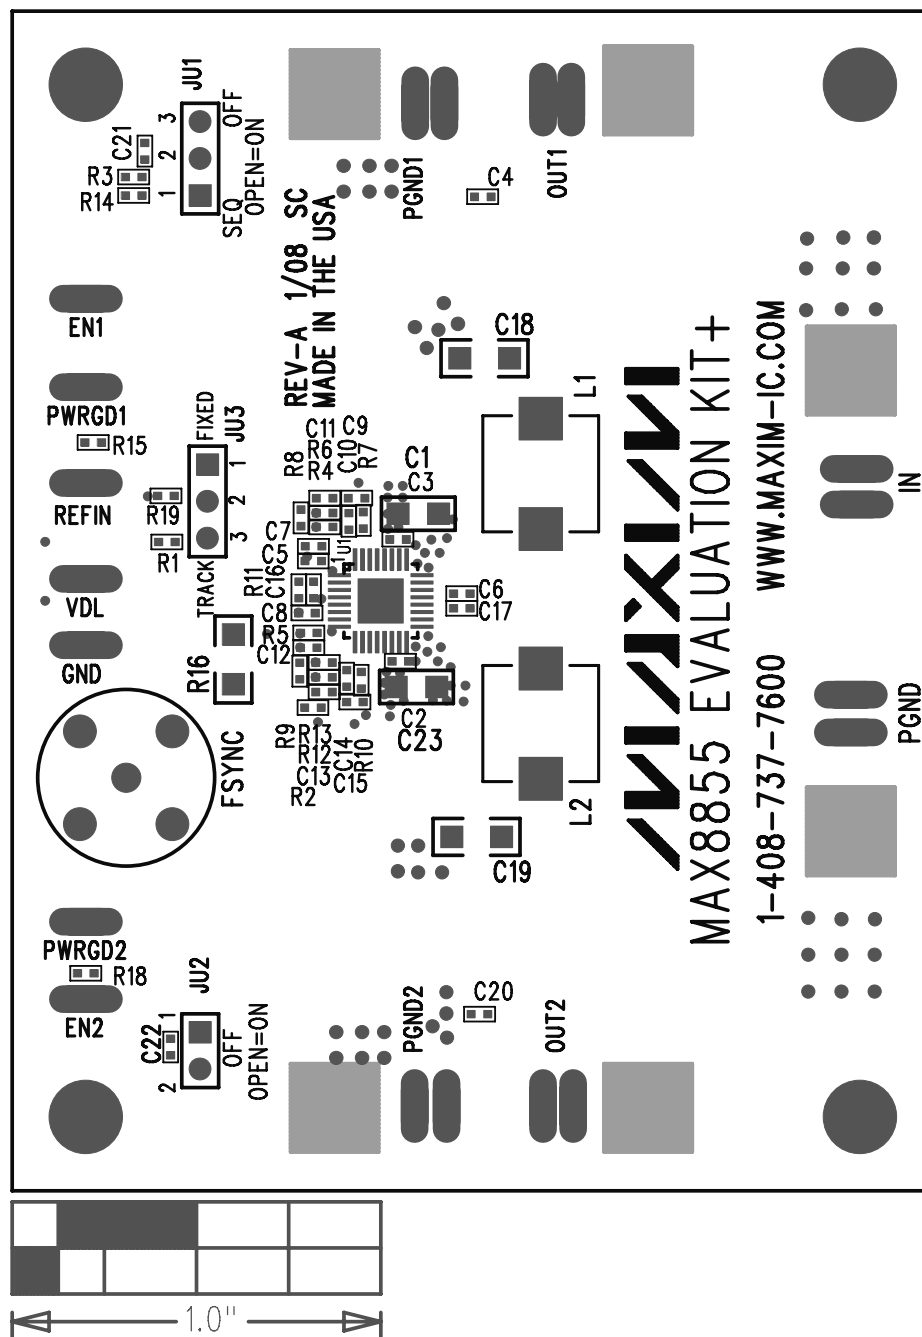


Figure 2. MAX8855 EV Kit Component Placement Guide—Component Side

MAX8855 Evaluation Kit

Evaluates: MAX8855

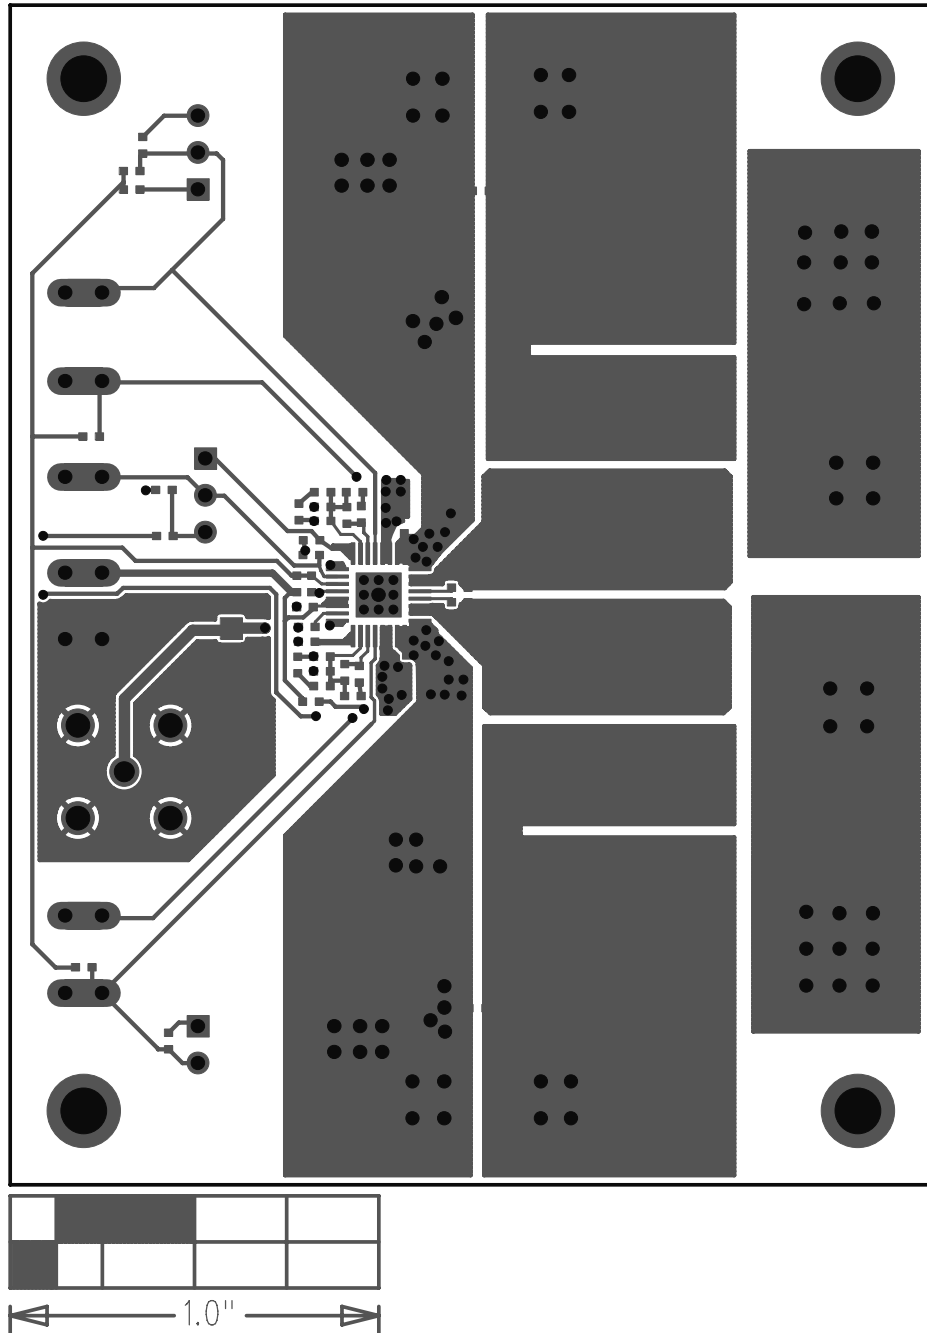


Figure 3. MAX8855 EV Kit PCB Layout—Component Side

MAX8855 Evaluation Kit

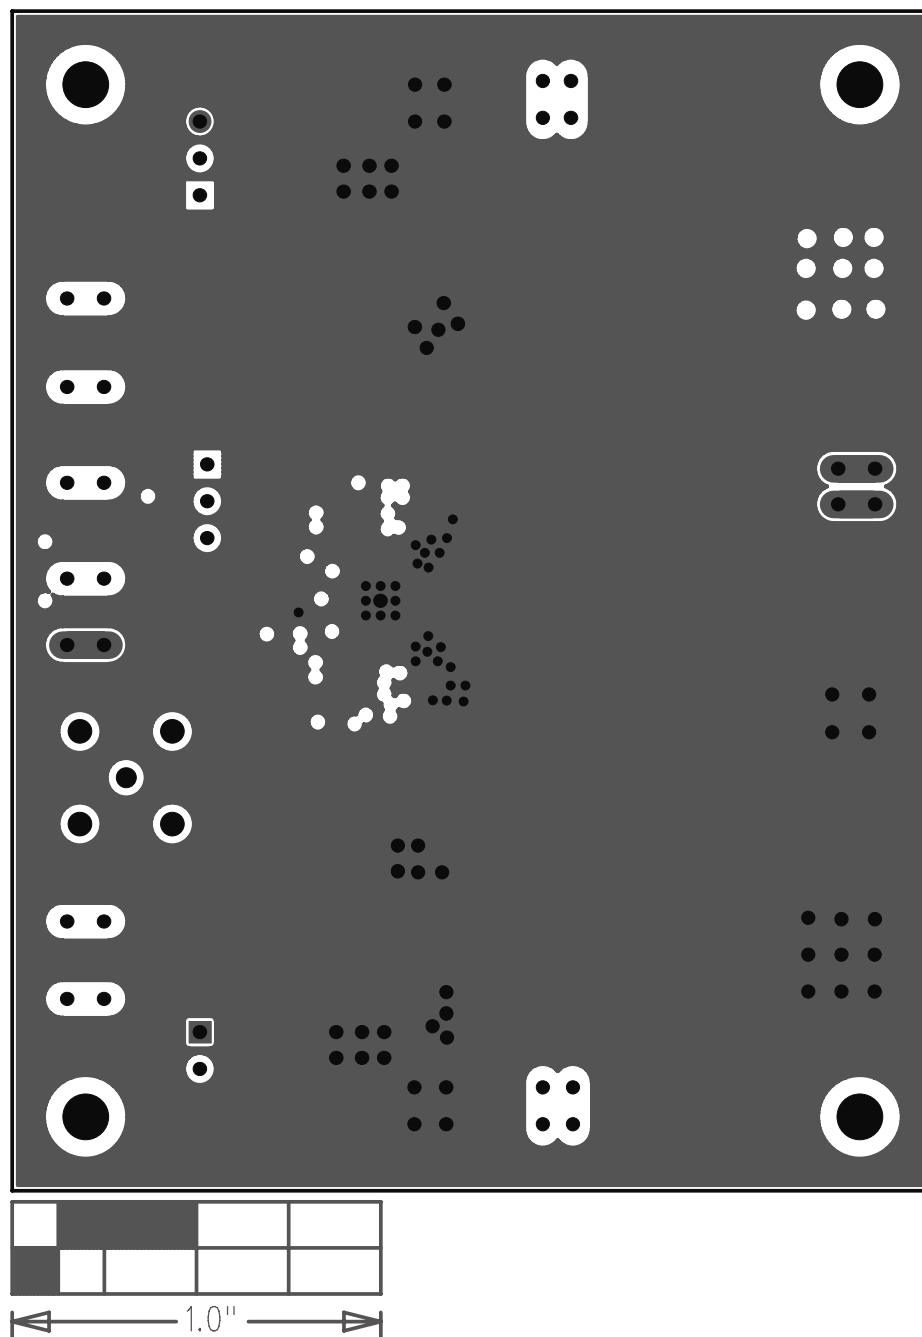


Figure 4. MAX8855 EV Kit PCB Layout—Layer 2

MAX8855 Evaluation Kit

Evaluates: MAX8855

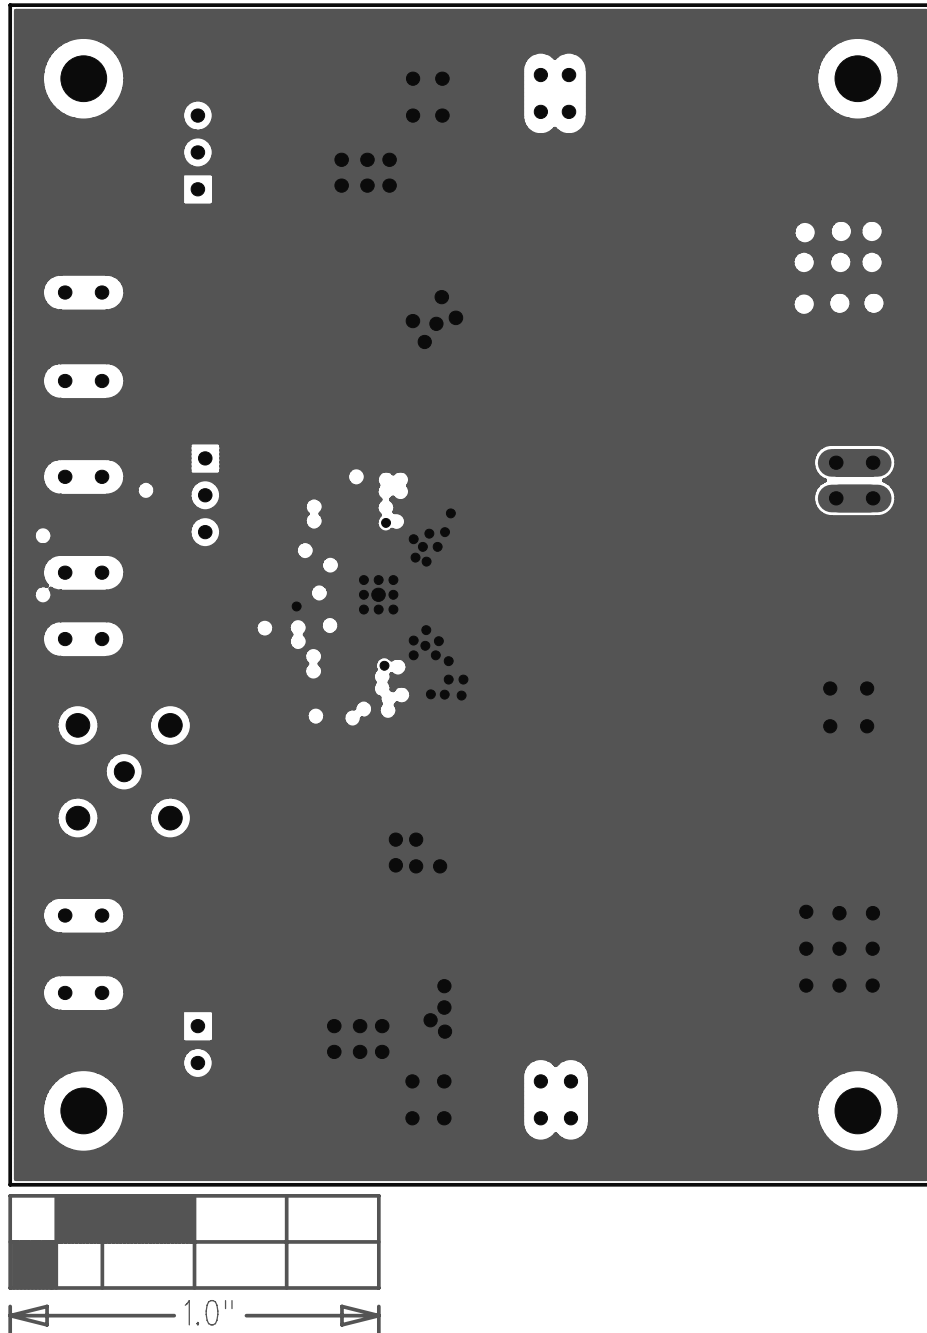


Figure 5. MAX8855 EV Kit PCB Layout—Layer 3

MAX8855 Evaluation Kit

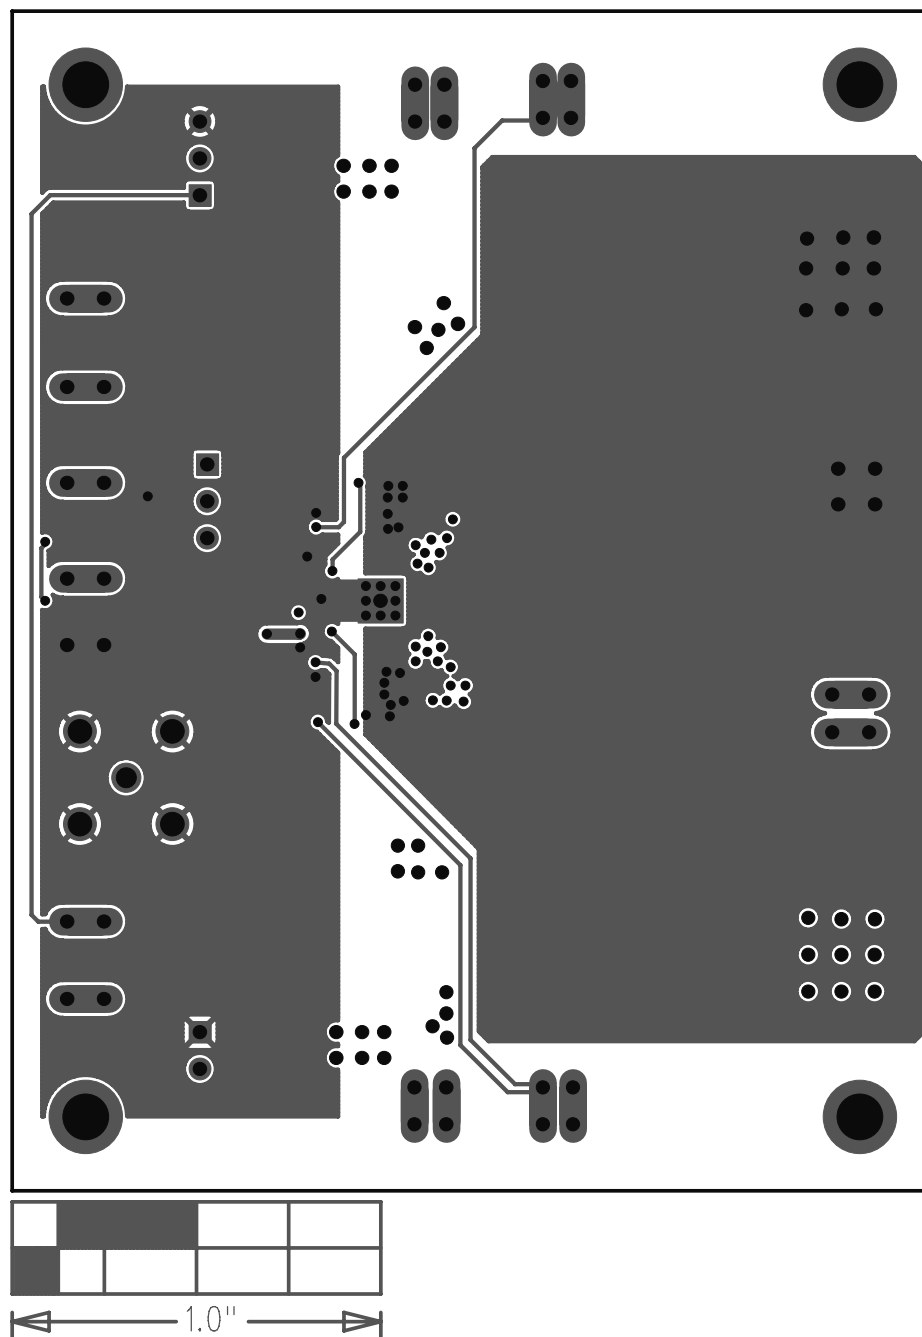


Figure 6. MAX8855 EV Kit PCB Layout—Solder Side

MAX8855 Evaluation Kit

Revision History

Evaluates: MAX8855

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	10/10	Initial release	—

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600 _____ 11