

Evaluating the **ADP2165/ADP2166** Step-Down Regulator

FEATURES

Full featured evaluation board for the **ADP2165/ADP2166**

5 A (**ADP2165**)/6 A (**ADP2166**) continuous output current

±1% output accuracy over temperature range

Input voltage range: 2.7 V to 5.5 V

Output voltage from 0.6 V to $0.9 \times V_{IN}$

Precision enable pin with hysteresis

Integrated high-side and low-side MOSFET

ADIsimPower™ design tool

GENERAL DESCRIPTION

The **ADP2165/ADP2166** are synchronous, step-down dc-to-dc regulators in a compact 4 mm × 4 mm LFCSP_WQ package. The regulator runs from input voltages of 2.7 V to 5.5 V and requires minimal external components to provide a high efficiency solution with an integrated high-side FET and a synchronous rectified FET.

The **ADP2165** evaluation board (**ADP2165-EVALZ**) and the **ADP2166** evaluation board (**ADP2166-EVALZ**) provide an easy way to evaluate the devices. This user guide describes how to quickly set up the board to collect performance data.

Complete information about the **ADP2165/ADP2166** is available in the **ADP2165/ADP2166** data sheet, which should be consulted in conjunction with this user guide when using the evaluation board.

EVALUATION BOARDS

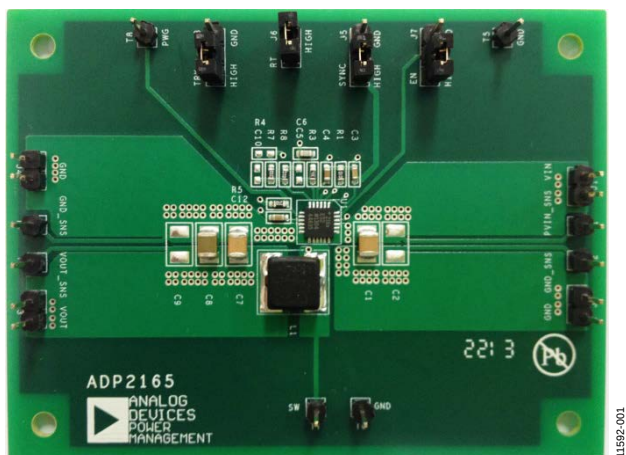


Figure 1. **ADP2165-EVALZ**

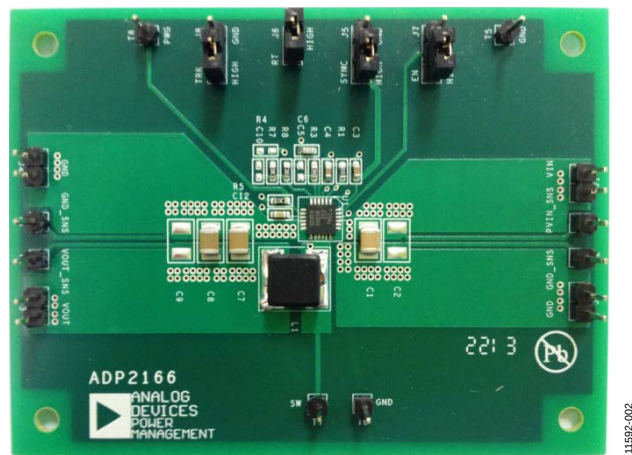


Figure 2. **ADP2166-EVALZ**

TABLE OF CONTENTS

Features	1	Powering Up the Evaluation Board	3
General Description	1	Measuring Evaluation Board Performance	4
Evaluation Boards.....	1	Evaluation Board Schematics and Artwork.....	5
Revision History	2	Ordering Information.....	8
Setting Up the Evaluation Board.....	3	Bill of Materials.....	8

REVISION HISTORY

10/14—Revision 0: Initial Version

SETTING UP THE EVALUATION BOARD

POWERING UP THE EVALUATION BOARD

The [ADP2165-EVALZ](#) and [ADP2166-EVALZ](#) evaluation boards are fully assembled and tested. Before applying power to the evaluation board, follow the setup procedures in this section.

Jumper Settings

Table 1 describes the jumper settings. Before selecting the jumper settings, make sure that the enable input, EN, is high.

Table 1. Jumper Settings

Jumper	State or Connection	Function
J5 (SYNC)	High or low External clock	Force PWM (FPWM) Synchronize to the external clock
J6 (RT)	High Floating External resistor	Set frequency to 1.2 MHz Set frequency to 620 kHz Set frequency from 250 kHz to 1.4 MHz
J7 (EN)	High Low	Enable V_{OUT} Disable V_{OUT}
J8 (TRK)	High External voltage	Tracking function not used Tracking with the external voltage

Input Power Source Connection

Before connecting the power source to the evaluation board, make sure that the board is turned off. If the input power source includes a current meter, use the meter to monitor the input current as follows:

1. Connect the positive terminal of the power source to the VIN terminal (J1) on the evaluation board.
2. Connect the negative terminal of the power source to the GND terminal (J2) on the evaluation board.

If the power source does not include a current meter, connect a current meter in series with the input source voltage as follows:

1. Connect the positive terminal of the power source to the positive terminal (+) of the current meter.
2. Connect the negative terminal of the power source to the GND terminal (J2) on the evaluation board.
3. Connect the negative terminal (–) of the current meter to the VIN terminal (J1) on the evaluation board.

Output Load Connection

Before connecting the load to the evaluation board, make sure that the board is turned off. If the load includes a current meter or if the current is not measured, connect the load directly to the evaluation board as follows:

1. Connect the positive load connection (+) to the VOUT terminal (J3) on the evaluation board.
2. Connect the negative load connection (–) to the GND terminal (J4) on the evaluation board.

If a current meter is used, connect it in series with the load as follows:

1. Connect the positive terminal (+) of the current meter to the VOUT terminal (J3) on the evaluation board.
2. Connect the negative terminal (–) of the current meter to the positive terminal (+) of the load.
3. Connect the negative terminal (–) of the load to the GND terminal (J4) on the evaluation board.

Input and Output Voltmeter Connections

Measure the input and output voltages with voltmeters. Make sure that the voltmeters are connected to the appropriate test points on the board. If the voltmeters are not connected to the correct test points, the measured voltages may be incorrect due to the voltage drop across the leads or due to the connections between the board, the power source, and/or the load.

1. Connect the positive terminal (+) of the input voltage measuring voltmeter to Test Point T1 on the evaluation board.
2. Connect the negative terminal (–) of the input voltage measuring voltmeter to Test Point T2 on the board.
3. Connect the positive terminal (+) of the output voltage measuring voltmeter to Test Point T3 on the board.
4. Connect the negative terminal (–) of the output voltage measuring voltmeter to Test Point T4 on the board.

Power On the Evaluation Board

When the power source and load are connected to the evaluation board, the board can be powered on. If the input power source is above 2.7 V, the output voltage rises to 1.2 V by default.

MEASURING EVALUATION BOARD PERFORMANCE

Measuring the Switching Waveform

To observe the switching waveform with an oscilloscope, place the oscilloscope probe tip at Test Point T4 with the probe ground connected to GND. Set the oscilloscope to a dc coupling, 2 V/division, 1 μ s/division time base. The switching waveform should alternate between 0 V and the approximate input voltage.

Measuring Load Regulation

Load regulation should be tested by increasing the load at the output and measuring the output voltage between the T3 and T4 test points.

Measuring Line Regulation

Vary the input voltage and measure the output voltage at a fixed output current. The input voltage can be measured between T1 and T2. The output voltage is measured between T3 and T4.

Measuring Efficiency

The efficiency, η , is measured by comparing the input power with the output power.

$$\eta = \frac{V_{OUT} \times I_{OUT}}{V_{IN} \times I_{IN}}$$

Measuring Inductor Current

The inductor current can be measured by removing one end of the inductor from the pad on the board and using a wire connected between the pad and the inductor. A current probe can then be used to measure the inductor current.

Measuring Output Voltage Ripple

To observe the output voltage ripple, place an oscilloscope probe across the C8 output capacitor with the probe ground lead placed at the negative capacitor terminal (–) and the probe tip placed at the positive capacitor terminal (+). Set the oscilloscope to an ac coupling, 10 mV/division, 2 μ s/division time base and 20 MHz bandwidth.

A standard oscilloscope probe has a long wire ground clip. For high frequency measurements, this ground clip picks up high frequency noise and injects it into the measured output ripple.

Figure 3 shows a simple way to properly measure the output ripple. It requires removing the oscilloscope probe sheath and wrapping a nonshielded wire around the oscilloscope probe. By keeping the ground lengths of the oscilloscope probe as short as possible, true ripple can be measured.

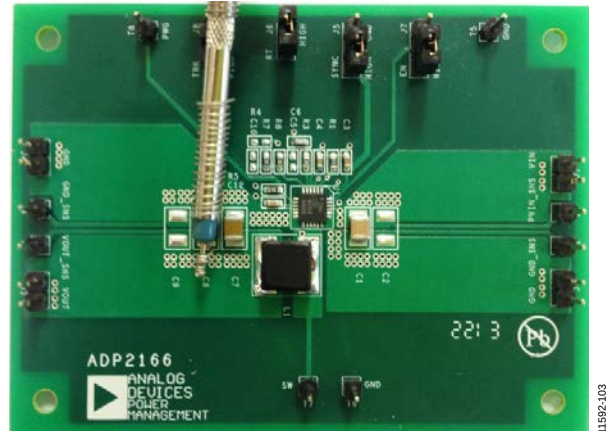


Figure 3. Output Ripple Measurement

Output Voltage Change

The output voltage of the [ADP2165-EVALZ/ADP2166-EVALZ](#) are preset to 1.2 V. However, the output voltage can be adjusted using the following equation:

$$V_{OUT} = 0.6 \text{ V} \times \left(\frac{R7 + R8}{R8} \right)$$

EVALUATION BOARD SCHEMATICS AND ARTWORK

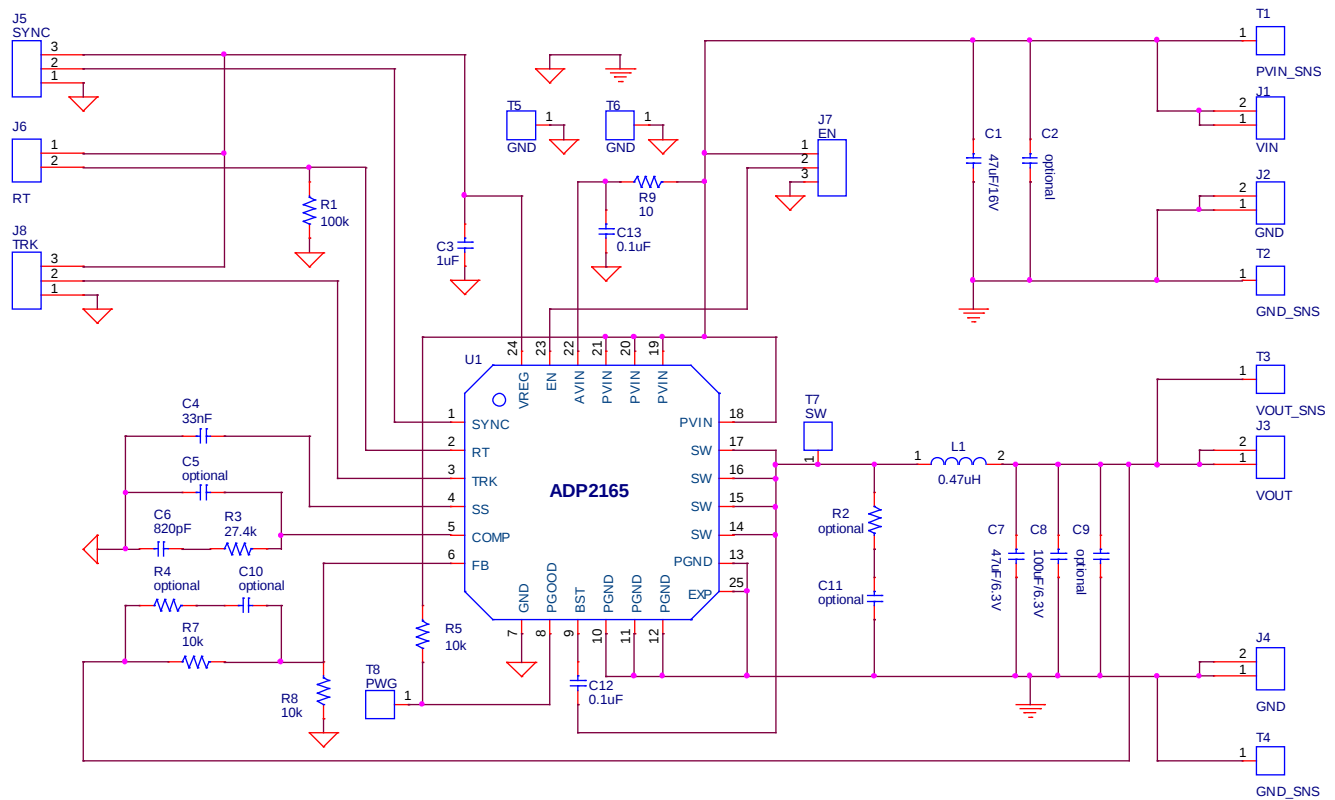


Figure 4. Schematic of the ADP2165-EVALZ

11892-009


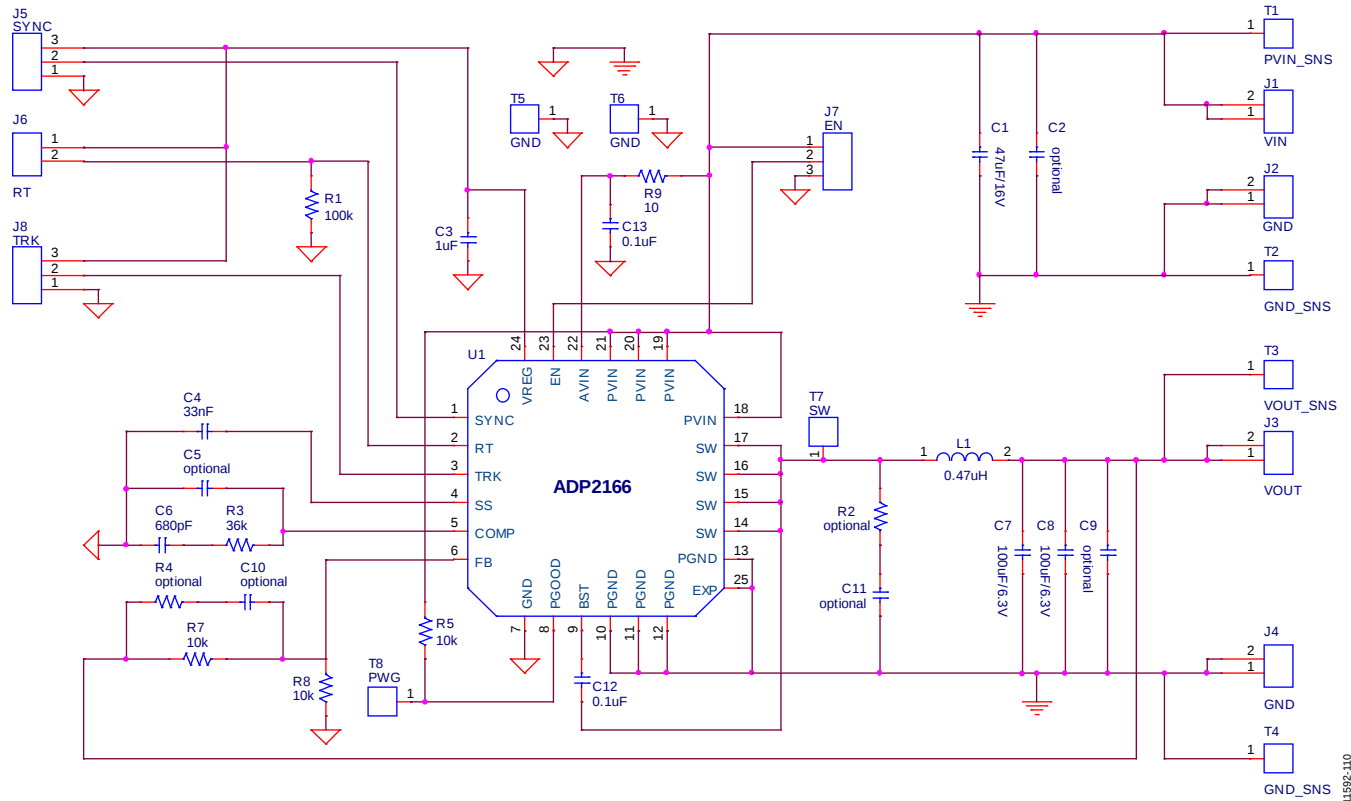



Figure 5. Schematic of the ADP2166-EVALZ

11592-110

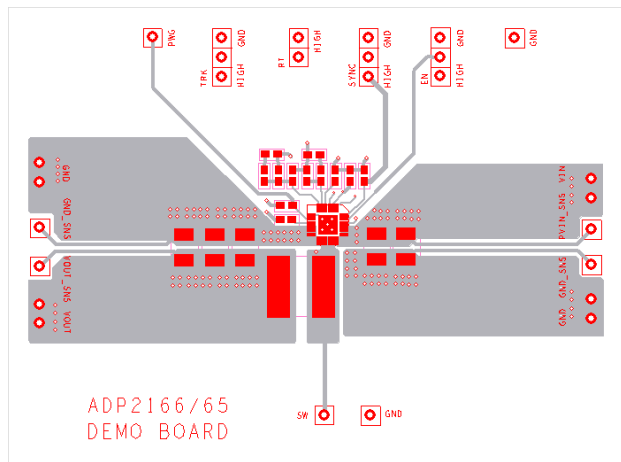


11592-010

Figure 6. Top Layer

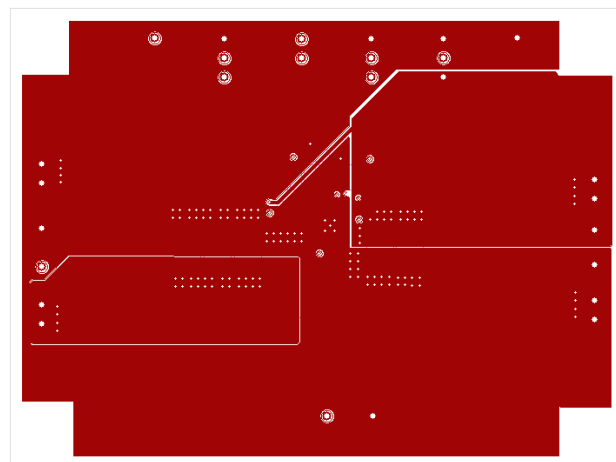


11592-011

Figure 8. Third Layer

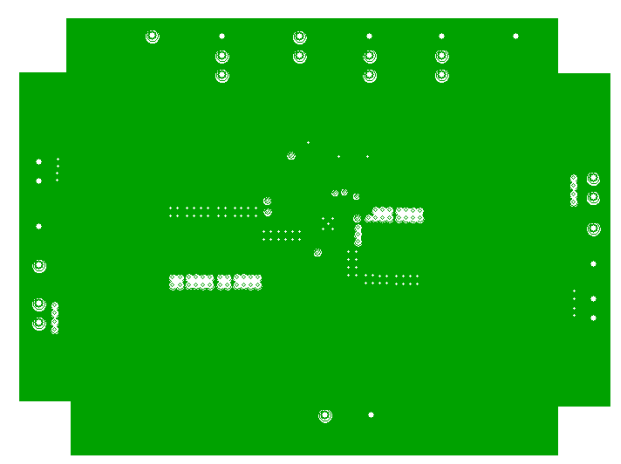

11592-012

Figure 7. Second Layer

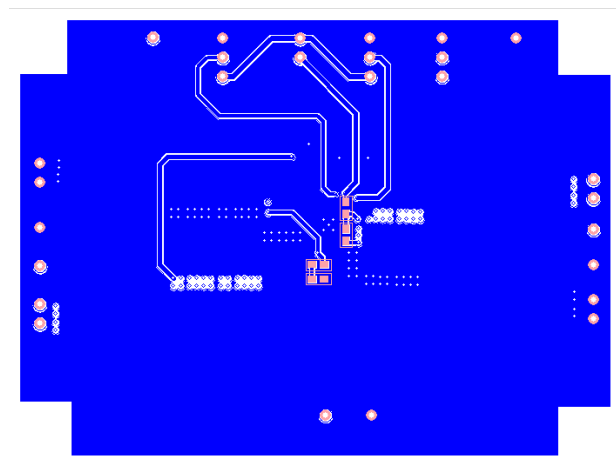

11592-013

Figure 9. Bottom Layer

ORDERING INFORMATION

BILL OF MATERIALS

Table 2.

Qty	Reference Designator	Description	PCB Footprint	Vendor	Part No.
1	C1	Capacitor, 47 μ F, 16 V	C1210	Murata	GRM32ER61C476KE15
1	C2, C9	Capacitor, optional	C1210		
1	C3	Capacitor, 1 μ F	C0603	Murata	GRM188R71E105KA12
1	C4	Capacitor, 33 nF	C0603	Murata	GRM188R71E333KA01
1	C5	Capacitor, optional	C0603	Murata	
1	C6	Capacitor, 820 pF	C0603	Murata	GRM1885C1H821JA01
1	C7	Capacitor, 47 μ F, 6.3 V	C1210	Murata	GRM32ER60J476ME20
1	C8	Capacitor, 100 μ F, 6.3 V	C1210	Murata	GRM32ER60J107ME20
2	C10, C11	Capacitor, optional	C0603		
2	C12, C13	Capacitor, 0.1 μ F	C0603	Murata	GRM188R71E104KA01
1	L1	Inductor, 0.47 μ H	Inductor, 7 $\times$ 7	Würth Elektronik	744314047
1	R1	Resistor, 100 k Ω	R0603	Vishay	CRCW0603100KFKTA
2	R2, R4	Resistor, optional	R0603		
1	R3	Resistor, 27.4 k Ω	R0603	Vishay	CRCW060327K4FKTA
3	R5, R7, R8	Resistor, 10 k Ω	R0603	Vishay	CRCW060310KFKTA
1	R9	Resistor, 10 k Ω	R0603	Vishay	CRCW060310RFKTA
1	U1	IC	24-lead LFCSP_WQ	Analog Devices, Inc.	ADP2165
4	J1, J2, J3, J4	Connector	SIP2	Harwin	M20-9990245
3	J5, J7, J8	Jumper	SIP3	Harwin	M20-9990246
1	J6	Jumper	SIP2	Harwin	M20-9990245
8	T1, T2, T3, T4, T5, T6, T7, T8	Test point	SIP1	Harwin	M20-9990245

Table 3.

Qty	Reference Designator	Description	PCB Footprint	Vendor	Part No.
1	C1	Capacitor, 47 μ F, 16 V	C1210	Murata	GRM32ER61C476KE15
1	C2, C9	Capacitor, optional	C1210		
1	C3	Capacitor, 1 μ F	C0603	Murata	GRM188R71E105KA12
1	C4	Capacitor, 33 nF	C0603	Murata	GRM188R71E333KA01
1	C5	Capacitor, optional	C0603	Murata	
1	C6	Capacitor, 680 pF	C0603	Murata	GRM1885C1H681JA01
2	C7, C8	Capacitor, 100 μ F, 6.3 V	C1210	Murata	GRM32ER60J107ME20
2	C10, C11	Capacitor, optional	C0603		
2	C12, C13	Capacitor, 0.1 μ F	C0603	Murata	GRM188R71E104KA01
1	L1	Inductor, 0.47 μ H	Inductor, 7 $\times$ 7	Würth Elektronik	744314047
1	R1	Resistor, 100 k Ω	R0603	Vishay	CRCW0603100KFKTA
2	R2, R4	Resistor, optional	R0603		
1	R3	Resistor, 36 k Ω	R0603	Vishay	CRCW060336KFKTA
3	R5, R7, R8	Resistor, 10 k Ω	R0603	Vishay	CRCW060310KFKTA
1	R9	Resistor, 10 k Ω	R0603	Vishay	CRCW060310RFKTA
1	U1	IC	24-lead LFCSP_WQ	Analog Devices	ADP2166
4	J1, J2, J3, J4	Connector	SIP2	Harwin	M20-9990245
3	J5, J7, J8	Jumper	SIP3	Harwin	M20-9990246
1	J6	Jumper	SIP2	Harwin	M20-9990245
8	T1, T2, T3, T4, T5, T6, T7, T8	Test point	SIP1	Harwin	M20-9990245

NOTES

NOTES

NOTES

**ESD Caution**

ESD (electrostatic discharge) sensitive device. Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

Legal Terms and Conditions

By using the evaluation board discussed herein (together with any tools, components documentation or support materials, the "Evaluation Board"), you are agreeing to be bound by the terms and conditions set forth below ("Agreement") unless you have purchased the Evaluation Board, in which case the Analog Devices Standard Terms and Conditions of Sale shall govern. Do not use the Evaluation Board until you have read and agreed to the Agreement. Your use of the Evaluation Board shall signify your acceptance of the Agreement. This Agreement is made by and between you ("Customer") and Analog Devices, Inc. ("ADI"), with its principal place of business at One Technology Way, Norwood, MA 02062, USA. Subject to the terms and conditions of the Agreement, ADI hereby grants to Customer a free, limited, personal, temporary, non-exclusive, non-sublicensable, non-transferable license to use the Evaluation Board FOR EVALUATION PURPOSES ONLY. Customer understands and agrees that the Evaluation Board is provided for the sole and exclusive purpose referenced above, and agrees not to use the Evaluation Board for any other purpose. Furthermore, the license granted is expressly made subject to the following additional limitations: Customer shall not (i) rent, lease, display, sell, transfer, assign, sublicense, or distribute the Evaluation Board; and (ii) permit any Third Party to access the Evaluation Board. As used herein, the term "Third Party" includes any entity other than ADI, Customer, their employees, affiliates and in-house consultants. The Evaluation Board is NOT sold to Customer; all rights not expressly granted herein, including ownership of the Evaluation Board, are reserved by ADI. CONFIDENTIALITY. This Agreement and the Evaluation Board shall all be considered the confidential and proprietary information of ADI. Customer may not disclose or transfer any portion of the Evaluation Board to any other party for any reason. Upon discontinuation of use of the Evaluation Board or termination of this Agreement, Customer agrees to promptly return the Evaluation Board to ADI. ADDITIONAL RESTRICTIONS. Customer may not disassemble, decompile or reverse engineer chips on the Evaluation Board. Customer shall inform ADI of any occurred damages or any modifications or alterations it makes to the Evaluation Board, including but not limited to soldering or any other activity that affects the material content of the Evaluation Board. Modifications to the Evaluation Board must comply with applicable law, including but not limited to the RoHS Directive. TERMINATION. ADI may terminate this Agreement at any time upon giving written notice to Customer. Customer agrees to return to ADI the Evaluation Board at that time. LIMITATION OF LIABILITY. THE EVALUATION BOARD PROVIDED HEREUNDER IS PROVIDED "AS IS" AND ADI MAKES NO WARRANTIES OR REPRESENTATIONS OF ANY KIND WITH RESPECT TO IT. ADI SPECIFICALLY DISCLAIMS ANY REPRESENTATIONS, ENDORSEMENTS, GUARANTEES, OR WARRANTIES, EXPRESS OR IMPLIED, RELATED TO THE EVALUATION BOARD INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, TITLE, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS. IN NO EVENT WILL ADI AND ITS LICENSORS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES RESULTING FROM CUSTOMER'S POSSESSION OR USE OF THE EVALUATION BOARD, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DELAY COSTS, LABOR COSTS OR LOSS OF GOODWILL. ADI'S TOTAL LIABILITY FROM ANY AND ALL CAUSES SHALL BE LIMITED TO THE AMOUNT OF ONE HUNDRED US DOLLARS (\$100.00). EXPORT. Customer agrees that it will not directly or indirectly export the Evaluation Board to another country, and that it will comply with all applicable United States federal laws and regulations relating to exports. GOVERNING LAW. This Agreement shall be governed by and construed in accordance with the substantive laws of the Commonwealth of Massachusetts (excluding conflict of law rules). Any legal action regarding this Agreement will be heard in the state or federal courts having jurisdiction in Suffolk County, Massachusetts, and Customer hereby submits to the personal jurisdiction and venue of such courts. The United Nations Convention on Contracts for the International Sale of Goods shall not apply to this Agreement and is expressly disclaimed.