



MICROCHIP

**EVB-USB3813
Evaluation Board
User's Guide**

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

Trademarks

The Microchip name and logo, the Microchip logo, dsPIC, FlashFlex, KEELOQ, KEELOQ logo, MPLAB, PIC, PICmicro, PICSTART, PIC³² logo, rPIC, SST, SST Logo, SuperFlash and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

FilterLab, Hampshire, HI-TECH C, Linear Active Thermistor, MTP, SEEVAL and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

Analog-for-the-Digital Age, Application Maestro, BodyCom, chipKIT, chipKIT logo, CodeGuard, dsPICDEM, dsPICDEM.net, dsPICworks, dsSPEAK, ECAN, ECONOMONITOR, FanSense, HI-TIDE, In-Circuit Serial Programming, ICSP, Mindi, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, mTouch, Omniscent Code Generation, PICC, PICC-18, PICDEM, PICDEM.net, PICKit, PICtail, REAL ICE, rLAB, Select Mode, SQI, Serial Quad I/O, Total Endurance, TSHARC, UniWinDriver, WiperLock, ZENA and Z-Scale are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

GestIC and ULPP are registered trademarks of Microchip Technology Germany II GmbH & Co. & KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2013, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN: 978-1-62077-431-1

QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV
= ISO/TS 16949 =

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

Object of Declaration: EVB-USB3813 Evaluation Board

EU Declaration of Conformity

This declaration of conformity is issued by the manufacturer.

The development/evaluation tool is designed to be used for research and development in a laboratory environment. This development/evaluation tool is not a Finished Appliance, nor is it intended for incorporation into Finished Appliances that are made commercially available as single functional units to end users under EU EMC Directive 2004/108/EC and as supported by the European Commission's Guide for the EMC Directive 2004/108/EC (8th February 2010).

This development/evaluation tool complies with EU RoHS2 Directive 2011/65/EU.

For information regarding the exclusive, limited warranties applicable to Microchip products, please see Microchip's standard terms and conditions of sale, which are printed on our sales documentation and available at www.microchip.com.

Signed for and on behalf of Microchip Technology Inc. at Chandler, Arizona, USA



Derek Carlson

VP Development Tools



Date

NOTES:

Table of Contents

Preface	7
Introduction	7
Document Layout	7
Conventions Used in this Guide	8
The Microchip Web Site	9
Development Systems Customer Change Notification Service	9
Customer Support	9
Document Revision History	10
Chapter 1. Overview	
1.1 Introduction	11
1.2 Features	11
1.3 General Description	12
Chapter 2. Hardware Configuration	
2.1 Hardware Description	13
2.1.1 Port Assignment	13
2.1.2 USB3813 Configuration	15
2.1.3 Clock Source – 12 MHz Oscillator	15
2.1.4 Power Source – Self-Powered	15
2.1.5 Power State LED	16
2.1.6 RESETn LED	16
2.1.7 Port Power LEDs	16
2.1.8 Hub Connect LED	16
2.1.9 Connector Description	16
Chapter 3. Battery Charging Support	
3.1 Battery Charging Modes	19
3.2 Charging Port Roles	19
3.2.1 BC1.2 Charging Downstream Port (CDP) Description	20
3.2.2 Standard Downstream Port (SDP) Description	20
3.2.3 Dedicated Charger Emulation Port (DCP) Description	20
Appendix A. EVB-USB3813 Evaluation Board	
A.1 Introduction	23
Appendix B. EVB-USB3813 Evaluation Board Schematic	
B.1 Introduction	25
Appendix C. Bill of Materials (BOM)	
C.1 Introduction	27
Worldwide Sales and Service	31

NOTES:

Preface

NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a “DS” number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is “DSXXXXA”, where “XXXX” is the document number and “A” is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB® IDE online help. Select the Help menu, and then Topics to open a list of available online help files.

INTRODUCTION

This chapter contains general information that will be useful to know before using the EVB-USB3813 Evaluation Board. Items discussed in this chapter include:

- [Document Layout](#)
- [Conventions Used in this Guide](#)
- [The Microchip Web Site](#)
- [Development Systems Customer Change Notification Service](#)
- [Customer Support](#)
- [Document Revision History](#)

DOCUMENT LAYOUT

This document describes how to use the EVB-USB3813 Evaluation Board as a demonstration platform optimized for portable applications. The manual layout is as follows:

- **Chapter 1. “Overview”** – Shows a brief description of the EVB-USB3813 Evaluation Board.
- **Chapter 2. “Hardware Configuration”** – Includes information about the hardware configuration of the EVB-USB3813 Evaluation Board.
- **Chapter 3. “Battery Charging Support”** – Provides information about the EVB-USB3813 Evaluation Board battery charging features.
- **Appendix A. “EVB-USB3813 Evaluation Board”** – This appendix shows the EVB-USB3813 Evaluation Board.
- **Appendix B. “EVB-USB3813 Evaluation Board Schematic”** – This appendix shows the EVB-USB3813 Evaluation Board schematic.
- **Appendix C. “Bill of Materials (BOM)”** – This appendix includes the EVB-USB3813 Evaluation Board Bill of Materials (BOM).

CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

DOCUMENTATION CONVENTIONS

Description	Represents	Examples
Arial font:		
Italic characters	Referenced books	<i>MPLAB® IDE User's Guide</i>
	Emphasized text	...is the <i>only</i> compiler...
Initial caps	A window	the Output window
	A dialog	the Settings dialog
	A menu selection	select Enable Programmer
Quotes	A field name in a window or dialog	"Save project before build"
Underlined, italic text with right angle bracket	A menu path	<u><i>File>Save</i></u>
Bold characters	A dialog button	Click OK
	A tab	Click the Power tab
N'Rnnnn	A number in verilog format, where N is the total number of digits, R is the radix and n is a digit.	4'b0010, 2'hF1
Text in angle brackets < >	A key on the keyboard	Press <Enter>, <F1>
Courier New font:		
Plain Courier New	Sample source code	#define START
	Filenames	autoexec.bat
	File paths	c:\mcc18\h
	Keywords	_asm, _endasm, static
	Command-line options	-Opa+, -Opa-
	Bit values	0, 1
	Constants	0xFF, 'A'
Italic Courier New	A variable argument	<i>file.o</i> , where <i>file</i> can be any valid filename
Square brackets []	Optional arguments	mcc18 [options] <i>file</i> [options]
Curly brackets and pipe character: { }	Choice of mutually exclusive arguments; an OR selection	errorlevel {0 1}
Ellipses...	Replaces repeated text	var_name [, var_name...]
	Represents code supplied by user	void main (void) { ... }

THE MICROCHIP WEB SITE

Microchip provides online support via our web site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

DEVELOPMENT SYSTEMS CUSTOMER CHANGE NOTIFICATION SERVICE

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at www.microchip.com, click on Customer Change Notification and follow the registration instructions.

The Development Systems product group categories are:

- **Compilers** – The latest information on Microchip C compilers, assemblers, linkers and other language tools. These include all MPLAB C compilers; all MPLAB assemblers (including MPASM assembler); all MPLAB linkers (including MPLINK object linker); and all MPLAB librarians (including MPLIB object librarian).
- **Emulators** – The latest information on Microchip in-circuit emulators. This includes the MPLAB REAL ICE and MPLAB ICE 2000 in-circuit emulators.
- **In-Circuit Debuggers** – The latest information on the Microchip in-circuit debuggers. This includes MPLAB ICD 3 in-circuit debuggers and PICkit 3 debug express.
- **MPLAB IDE** – The latest information on Microchip MPLAB IDE, the Windows Integrated Development Environment for development systems tools. This list is focused on the MPLAB IDE, MPLAB IDE Project Manager, MPLAB Editor and MPLAB SIM simulator, as well as general editing and debugging features.
- **Programmers** – The latest information on Microchip programmers. These include production programmers such as MPLAB REAL ICE in-circuit emulator, MPLAB ICD 3 in-circuit debugger and MPLAB PM3 device programmers. Also included are nonproduction development programmers such as PICSTART Plus and PIC-kit 2 and 3.

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at:
<http://www.microchip.com/support>

DOCUMENT REVISION HISTORY

Revision A (September 2013)

- Initial Release of this Document.

Chapter 1. Overview

1.1 INTRODUCTION

The USB3813 is a low-power, full-featured and OEM configurable Multi-Transaction Translator (MTT) USB 2.0 hub controller with three downstream ports optimized for portable applications. The USB3813 is fully compliant with the USB 2.0 Specification, USB 2.0 Link Power Management (LPM) Addendum, High-Speed Inter-Chip (HSIC) USB Electrical Specification Revision 1.0 and attaches to an upstream port as a high-speed hub. The 3-port hub supports low-speed, full-speed and high-speed downstream devices on all of the enabled (non-HSIC) downstream ports. The HSIC port supports only high-speed operation. The USB3813 supports both upstream and downstream battery charging (BC1.2) detection. The EVB-USB3813BC Evaluation Board demonstrates a stand-alone application for the USB3813 device with advanced power saving options and configurable port assignments. See [Section 1.2 “Features”](#) for more information.

1.2 FEATURES

- USB3813 in a 30-pin WLCSP RoHS compliant package
- Two USB 2.0 downstream ports with ganged port power and overcurrent sense (OCS)
- One downstream HSIC port (downstream port 1)
- High-Speed (480 Mbps), Full-Speed (12 Mbps) and Low-Speed (1.5 Mbps) compatible
- USB Battery Charging is supported on all downstream USB ports up to 2A (BC1.2 CDP, SDP and DCP)
- Multi-Transaction Translator is enabled
- Supports internal default hub configuration. Optionally supports configuration from external SPI or EEPROM
- SMBus interface header available
- Low-Cost, 4-Layer space saving design with two outer signal layers, a power inner layer and a ground inner layer
- Self-Powered operation
- Operates from one single voltage (+5.0 VDC, 4 Amp regulated) external DC power supply
- On Board MCP1725 +3.3 VDC. 0.5 Amp regulator
- +5V, Reset, Hub Connect and port power LED indicators
- ESD/EMI component footprints provided (optional)
- Single 12 MHz crystal clock source
- External GPIO pin headers
- Schematics, layout and bill of materials are available to minimize new product development time

1.3 GENERAL DESCRIPTION

The EVB-USB3813 is an evaluation and demonstration platform featuring the USB3813 Ultra Fast USB 2.0 Hub on a 4-layer RoHS compliant Printed Circuit Board (PCB).

The EVB-USB3813 is designed to demonstrate the unique features of this device using a low-cost PCB implementation with ganged port power control for the two downstream USB 2.0 ports. Both downstream USB 2.0 ports include a high current port power controller to fully support USB battery charging as a high current walk-up port.

Note: Do not exceed 4A total current consumption from 5 VDC.

The EVB-USB3813 is designed to support internal default configuration settings and an external I²C™ EEPROM (optional) for custom configured functionality. A location is provided for an external I²C EEPROM device for configuration at U8. Alternatively, a firmware can be downloaded onto a dual-output SPI Flash device located at U17.

[Figure 2-2](#) shows the top and bottom level silk screen and copper layers. A block diagram of the EVB-USB3813 is shown in [Figure 2-3](#).

Chapter 2. Hardware Configuration

2.1 HARDWARE DESCRIPTION

The EVB-USB3813 has one on board regulator. The MCP1725 (U6) generates +3.3 VDC for the hub device circuitry and performs voltage supervisor and RESETn functions. The USB3813 generates its own +1.2 VDC for internal use with on-chip +1.2 VDC regulators. The internal +1.2 VDC regulator tied to the oscillator and Phase-Locked Loop (PLL) is turned off during suspend to minimize suspend current. Downstream port power is distributed by two independent power switches at up to 2A per port via U1 and U2.

Note: Do not exceed 4A total current consumption from +5 VDC.

Downstream port 2 and port 3 have USB 2.0 connectors with USB 2.0 compliant decoupling and separate shield grounds. Downstream port 1 has U.FL connectors (J16 and J17) to support Data and Strobe HSIC signals.

2.1.1 Port Assignment

The downstream ports are numbered 1 through 3. Downstream port 1 is an HSIC port and downstream port 2 and port 3 are the USB 2.0 ports. The USB3813 allows downstream port 2 and/or port 3 to be configured for high current battery USB charging. Power to downstream port 2 and port 3 is controlled through the AP2111 devices U1 and U2. Each device provides up to 2A to the corresponding downstream port. Both of these port power controllers are enabled via a shared PRTPWR pin on the USB3813. Overcurrent sensing of both port power controllers is also monitored on the same PRTPWR pin.

Note: There is only a maximum of 4A provided across the entire evaluation board.

The EVB-USB3813 must be connected to a USB upstream host via the J0 USB 2.0 micro AB connector using the provided USB 2.0 cable. When using downstream port 1, the provided HSIC cables must be inserted into the U.FL connectors J16 (STROBE1) and J17 (DATA1). When removing these cables from the evaluation board for any reason, the provided HSIC Extraction tool must be used. Figure 2-1 shows the recommended usage of the HSIC extraction tool per the Hirose U.FL data sheet on proper use of the plugs.

FIGURE 2-1: U.FL COAXIAL CABLE EXTRACTION GUIDELINES


Usage Precautions

1. Plugs


(1) Mating/Unmating

- 1) To disconnect the connectors, insert the end portion of U.FL-LP-N-2 under the connector flanges and pull off vertically, in the direction of the connector mating axis.
- 2) To mate the connectors, the mating axes of both connectors must be aligned. The “click” confirms a fully-mated connection. Do not attempt to insert on an extreme angle.

U.FL-LP-N-2 Plug Extraction Tool

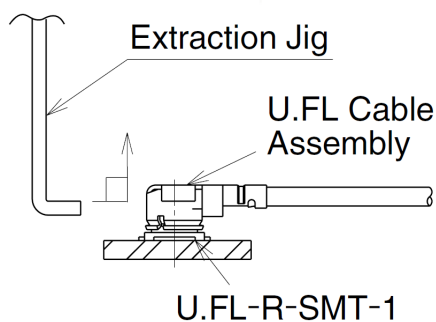

- (2) Pull forces on the cable after the connectors are mated. Do not apply a load to the cable in excess of the values indicated in the diagram below.

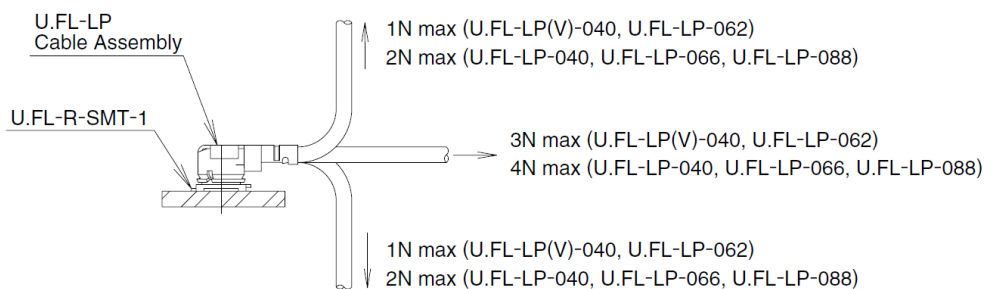

(3) Precautions

Do NOT forcefully twist or deform wires.

When an upstream USB 2.0 host is attached and detected, the HUB_CONN pin on the USB3813 asserts and the green “HubConn” LED D18 lights up.

The EVB-USB3813 is designed to allow flexible configuration options. It can be configured with default internal register settings through an SMBus or through a downloadable external firmware to an SPI Flash. It supports “Quad-Page” configuration OTP flash (four consecutive 200-byte configuration pages). The following sections detail the various configuration methods and features.

2.1.2 USB3813 Configuration

Default: Upon power-up, the USB3813 searches for an external SPI Flash device that contains a valid signature. If an SPI device is not present, the firmware checks to see whether SMBus is enabled. If the SMBus is disabled, the USB3813 attempts to load the configuration from an external I²C EEPROM. If no external options are detected, the USB3813 will operate using the internal default register settings. It also sets the vendor ID, product ID, language ID, device ID and additional settings from internal ROM code.

SPI Flash Option: If upon power-up an external SPI Flash device is present, the external ROM is enabled and code execution is initiated from the external SPI device. The SPI Flash device on the EVB-USB3813 is populated by default. To hold this device in reset, the J33 “SPI Hold” two-pin header can be shorted together, thereby tying the HOLD signal low.

SMBus Option: The SMBus interface is disabled by default via the 100 kOhm pull down resistor on SMBCLK. To enable SMBus, the SMBCLK pin must be pulled high to +3.3 VDC with a strong pull up resistor. This is often embedded within the external SMBus tool (not included) when inserted onto the J13 SMBus header. All device configuration must be performed via the Pro-Touch Programming Tool. For information on this tool, contact your local sales representative. When SMBus is enabled, the firmware configures the GPIOs to act as an SMBus slave. As an SMBus slave, the firmware waits indefinitely for the SMBus configuration.

EEPROM Option: If the USB3813 does not detect an SMBus interface, it will check for an I²C EEPROM (not populated by default). The EVB-USB3813 loads configuration from an external two-wire I²C EEPROM when present. The EEPROM must be installed either directly or through a DIP socket located at the U8 footprint and the “Manual I²C Enable” headers J11 and J12 must be set to enable this option. By default, J11 and J12 are left open so that the I²C interface are only enabled by pull ups in the external EEPROM device. When both J11 and J12 are jumpered, SDA and SCL on the I²C interface are pulled high to +3.3 VDC externally. The EEPROM must be pre-programmed before installation as the EVB-USB3813 is tied to an HSIC host. The EVB-USB3813BC is compatible with I²C EEPROMs from several manufacturers. The memory capacity must be at least 512 bytes.

2.1.3 Clock Source – 12 MHz Oscillator

By default, a 12 MHz oscillator OSC1 is populated on the evaluation board as the clock source for the USB3813. An alternative clock source can be injected into the J54 SMA “External Clock Input” connector if desired. The REFSEL[1:0] pins are both pulled high to +3.3 VDC by default to configure the USB3813 to have an input reference clock frequency of 12 MHz.

2.1.4 Power Source – Self-Powered

The EVB-USB3813 only supports self-powered operation and is powered by one +5 VDC regulated external DC power supply. The +5 VDC, 4A external DC power supply plugs into the on board 2.1 mm connector J8. The external power supply controls the on board +3.3 VDC MCP1725 voltage regulator. The evaluation board is setup so that the +5 VDC feeds VBAT on the USB3813 which feeds the internal +3.3 VDC regulator. The +3.3 VDC comes out on the VDD33 power pin which then feeds the internal +1.2

VDC regulator via the VDDCRREG pin. A +1.2 VDC is then output onto the VDDCR12 pin of the USB3813. Therefore, the USB3813 is powered completely by the +5 VDC output of the external power supply.

2.1.5 Power State LED

The LED D5 indicates when +5 VDC power is present.

2.1.6 RESETn LED

The LED D6 indicates when the RESETn signal is driven low and the USB3813 is held in the Reset state.

2.1.7 Port Power LEDs

LEDs D2 and D3 indicate when +5 VDC port power is available to the associated downstream USB port(s).

2.1.8 Hub Connect LED

The LED D18 indicates when an upstream USB 2.0 host is present.

2.1.9 Connector Description

The EVB-USB3813 has two standard USB style A connectors for downstream port 2 and port 3. The upstream port has a USB micro AB connector. Power is supplied via 2.1 mm power jack. See [Table 2-1](#) for the list of connectors. For more details, please see [Appendix A. "EVB-USB3813 Evaluation Board"](#).

TABLE 2-1: CONNECTOR DESCRIPTION

Connector	Type	Description
J0	USB uAB	Upstream USB Port 0
J2	USB A	Downstream USB Port 2
J3	USB A	Downstream USB Port 3
J7	1x2 header	External Reset Control
J8	Power Jack 2.1 mm	+5 VDC Regulated Power Supply
J9	1x2 header	VBUS 5V Optional Header
J11, J12	1x2 headers	I ² C™ External/Manual Enable
J13	2x5 header	SMBus I/F connection
J16	U.FL	Downstream HSIC Port 1 STROBE
J17	U.FL	Downstream HSIC Port 1 DATA
J18, J19	1x2 headers	Charge Detect [1:0]
J22	1x2 header	Suspend/IRQ#/Interrupt
J33	1x2 header	SPI HOLD (to hold SPI in reset)
J54	SMA	External Clock Input

Component side top and bottom layers are shown in [Figure 2-2](#) with silk screen information to identify component locations.

FIGURE 2-2: EVB-USB3813 TOP AND BOTTOM LEVEL SILK SCREEN AND COPPER LAYERS


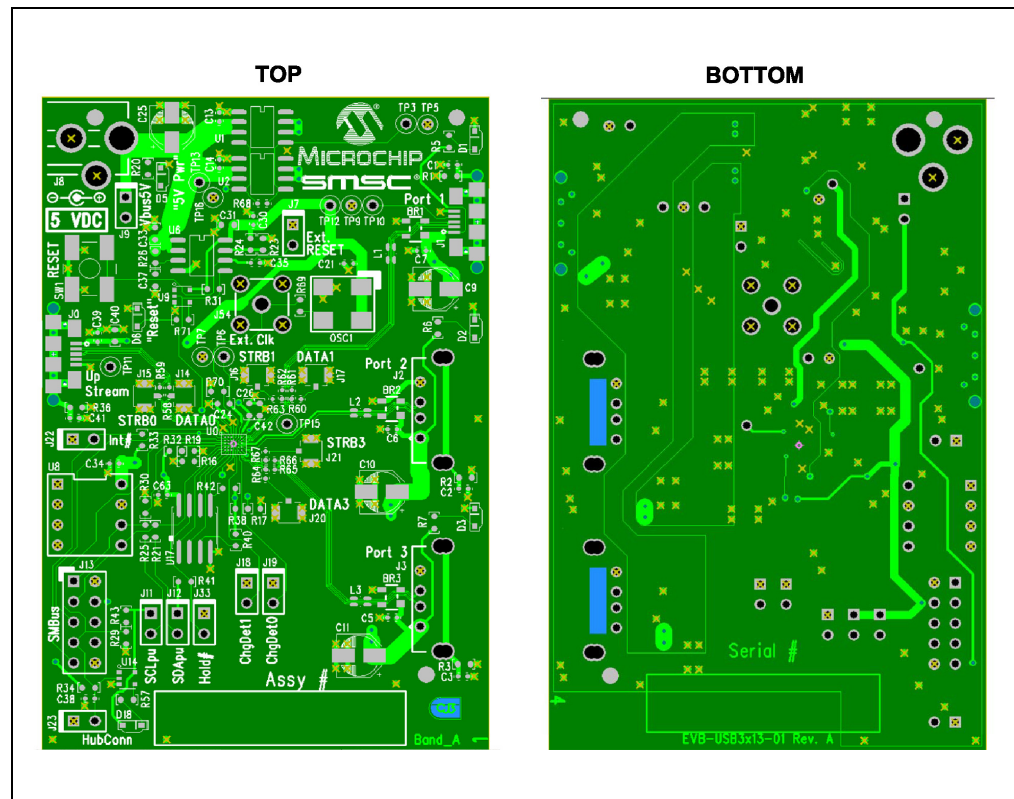


FIGURE 2-3: EVB-USB3813 BLOCK DIAGRAM

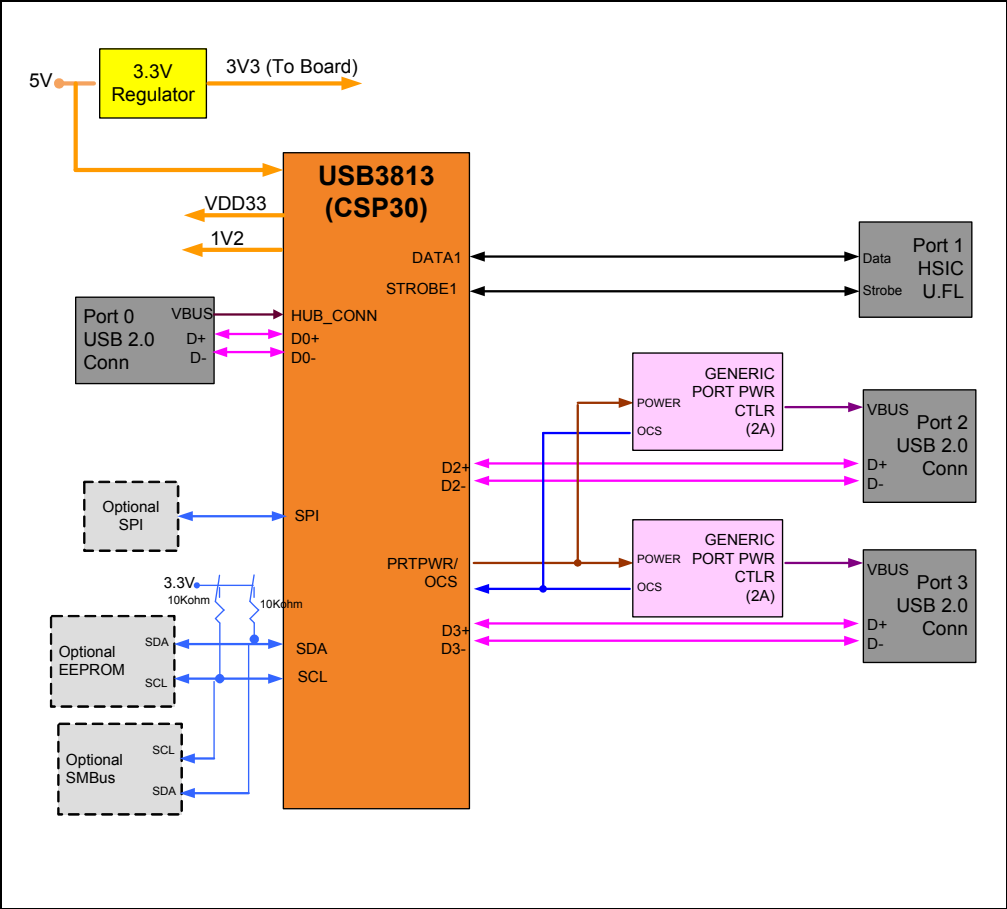

Chapter 3. Battery Charging Support

3.1 BATTERY CHARGING MODES

The EVB-USB3813 supports several different Battery Charging modes, providing an array of flexible configuration solutions. Both downstream port 2 and port 3 can be separately configured for Battery Charging via OTP, downloadable external firmware to an on board SPI Flash or through SMBus commands. Each port's configuration is independent of the other ports.

The Battery Charging mechanism automatically switches ports between states that perform the BC1.2 CDP handshake (which allows full USB communication with a USB host while charging), and states that emulate the dedicated chargers from charging device vendors. This allows support for the BC1.2 CDP mode and emulation of dedicated chargers in DCP mode, without interfering with normal USB operation of any USB 2.0 device attached to the port. Battery Charging is supported through the use of standard port power controllers.

Section 3.2 “Charging Port Roles” describes the modes of operation. For more information on battery charging, please refer to the Application Note 34.5 and the USB Battery Charging 1.2 specifications.

3.2 CHARGING PORT ROLES

The EVB-USB3813's Battery Charging enabled downstream ports automatically switches between various roles depending on the USB state of the EVB-USB3813. These roles are:

1. BC1.2 charging downstream port (CDP – 1.5A with data)
2. Standard downstream port (SDP – 0.5A with data)
3. Dedicated charger emulation port (DCP – power brick without data)
4. Custom profiles loaded via SMBus or OTP

When switching between roles, the EVB-USB3813 toggles power to the attached device if appropriate. The power toggle occurs if charger or USB renegotiation is necessary based on the following conditions:

1. If the port is in an SDP role while the hub is disconnected from the host, the port toggles power when switching to a DCP role to allow the downstream device to negotiate with the DCP mechanism.
2. If the port is in a DCP role and the port needs to switch to a CDP or SDP role, the port toggles power to allow the device to renegotiate with a CDP handshake and/or USB attach.

When Battery Charging is disabled for a EVB-USB3813 port, the port acts as a normal USB hub port.

When the EVB-USB3813's upstream port is connected to a USB host and the EVB-USB3813 is not in USB 2.0 suspend and/or USB 2.0 remote wake is enabled, Battery Charging enabled ports follow the BC1.2 specification for a CDP role. In this case, after a USB 2.0 device is attached, the port behaves in SDP role until the device is detached from the hub or the hub is detached from the host.

When a USB port is in a state in which device-host USB communication is not possible, a Battery Charging enabled port is not required to act as a USB hub port and is therefore free to enter states that emulate dedicated chargers. For the EVB-USB3813, there are two cases where this applies:

1. The EVB-USB3813 upstream port is not connected to a USB host.
2. The EVB-USB3813 is in USB suspend with remote wake on the USB 2.0 portion of the EVB-USB3813 disabled and no USB 2.0 device connected as a USB device on the downstream port. If USB 2.0 remote wake is disabled, the hub cannot generate resume signaling and does not need to detect a USB 2.0 attach.

In case 2, the EVB-USB3813's charging ports do not enter dedicated charging states when there is a USB 2.0 device attached as a USB device. There are two reasons for this behavior:

1. Entering dedicated charging states may involve changing the state of an attached device due to power toggling and/or USB linestate changing. Because the host system is unaware of the Battery Charging mechanism of the EVB-USB3813, the host could find the device in an unexpected state when exiting suspend.
2. The attached device will not be able to signal resume signaling to the host when the port is in a dedicated charging state. Hubs must propagate resume signaling from downstream devices even when remote wake generation is disabled for the hub.

If the EVB-USB3813 is in USB 2.0 suspend with USB 2.0 remote wake disabled and a USB-attached device is removed from a port, the port switches to the DCP role because possible resume propagation is no longer required.

3.2.1 BC1.2 Charging Downstream Port (CDP) Description

Devices that do not follow the BC1.2 CDP specification behave as they normally would when inserted into a standard USB port. The EVB-USB3813 ports in CDP mode allow normal USB operation or communication between normal devices and USB hosts by switching to the SDP role after downstream device detection and absence of a BC1.2 CDP handshake from the device. When a subsequent device detach is detected, the port switches back to the CDP role.

Devices that follow the BC1.2 CDP specification are also allowed to communicate normally with the USB host when inserted into the EVB-USB3813 ports in CDP mode. Additionally, prior to allowing the normal USB connection between the host and the BC1.2 device, the EVB-USB3813 port performs the BC1.2 CDP handshake to inform the BC1.2-compliant device that it may draw current exceeding the USB specified limits. When the handshake is complete, the port switches to the SDP role to allow USB functionality for the device. When a subsequent device detach is detected, the port switches back to the CDP role.

3.2.2 Standard Downstream Port (SDP) Description

When a port is in the SDP role, it behaves as a normal hub port and allow full USB functionality for an attached downstream device.

3.2.3 Dedicated Charger Emulation Port (DCP) Description

The advantage of the EVB-USB3813 dedicated charger emulation port over the BC1.2-specified DCP is that it supports BC1.2 compliant charging devices and many non-BC1.2 compliant charging devices. The following paragraphs describe the EVB-USB3813 modes of operation when its downstream ports are in dedicated charging states (when normal USB connection is not required as described in previous sections).

Dynamic Mode:

The EVB-USB3813 can be configured to dynamically react to devices inserted into the downstream ports and emulate the appropriate type of charger for the inserted device. In this configuration, the port begins in Apple® charger emulation mode and switches to China Charging, Blackberry® or BC1.2 device charger emulation when such devices are detected by the port. When a device is detached, the port starts again in Apple charger emulation mode.

Configurable 1A and 2A Apple modes are available depending on the capabilities of each port's port power controller.

An EVB-USB3813 port with a standard port power controller also supports Samsung® Galaxy Tab™ charger emulation in addition to the above modes.

Static Mode:

The EVB-USB3813 can be configured to keep the downstream ports in a fixed charger emulation state. Currently, Apple and Samsung Galaxy Tab or China Charging fixed charger emulation modes are available.


NOTES:

Appendix A. EVB-USB3813 Evaluation Board

A.1 INTRODUCTION

This appendix shows the EVB-USB3813 Evaluation Board.

FIGURE A-1: EVB-USB3813 EVALUATION BOARD

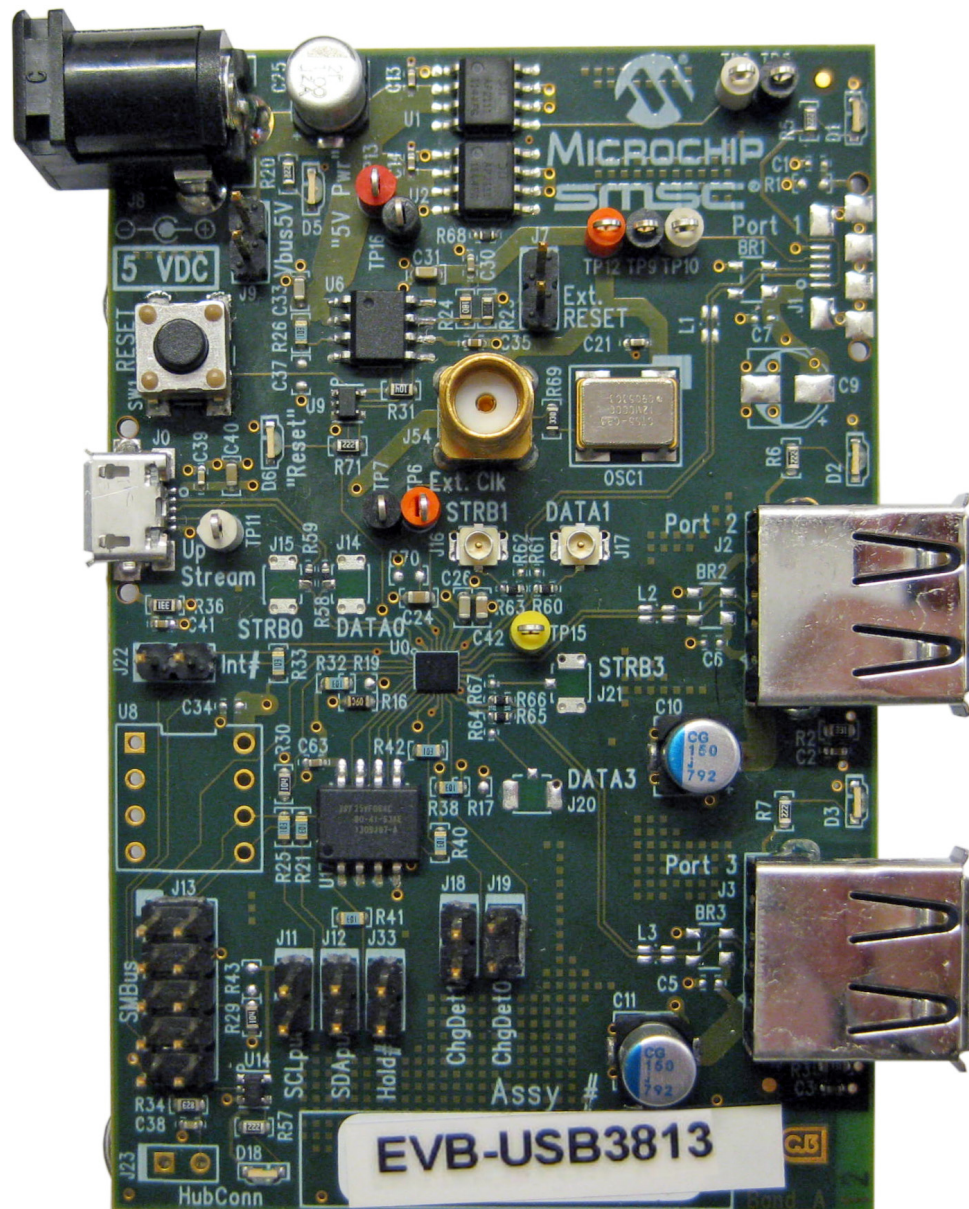

NOTES:




EVB-USB3813 EVALUATION BOARD USER'S GUIDE

Appendix B. EVB-USB3813 Evaluation Board Schematic

B.1 INTRODUCTION

This appendix shows the EVB-USB3813 Evaluation Board Schematic.

FIGURE B-1: EVB-USB3813 EVALUATION BOARD SCHEMATIC

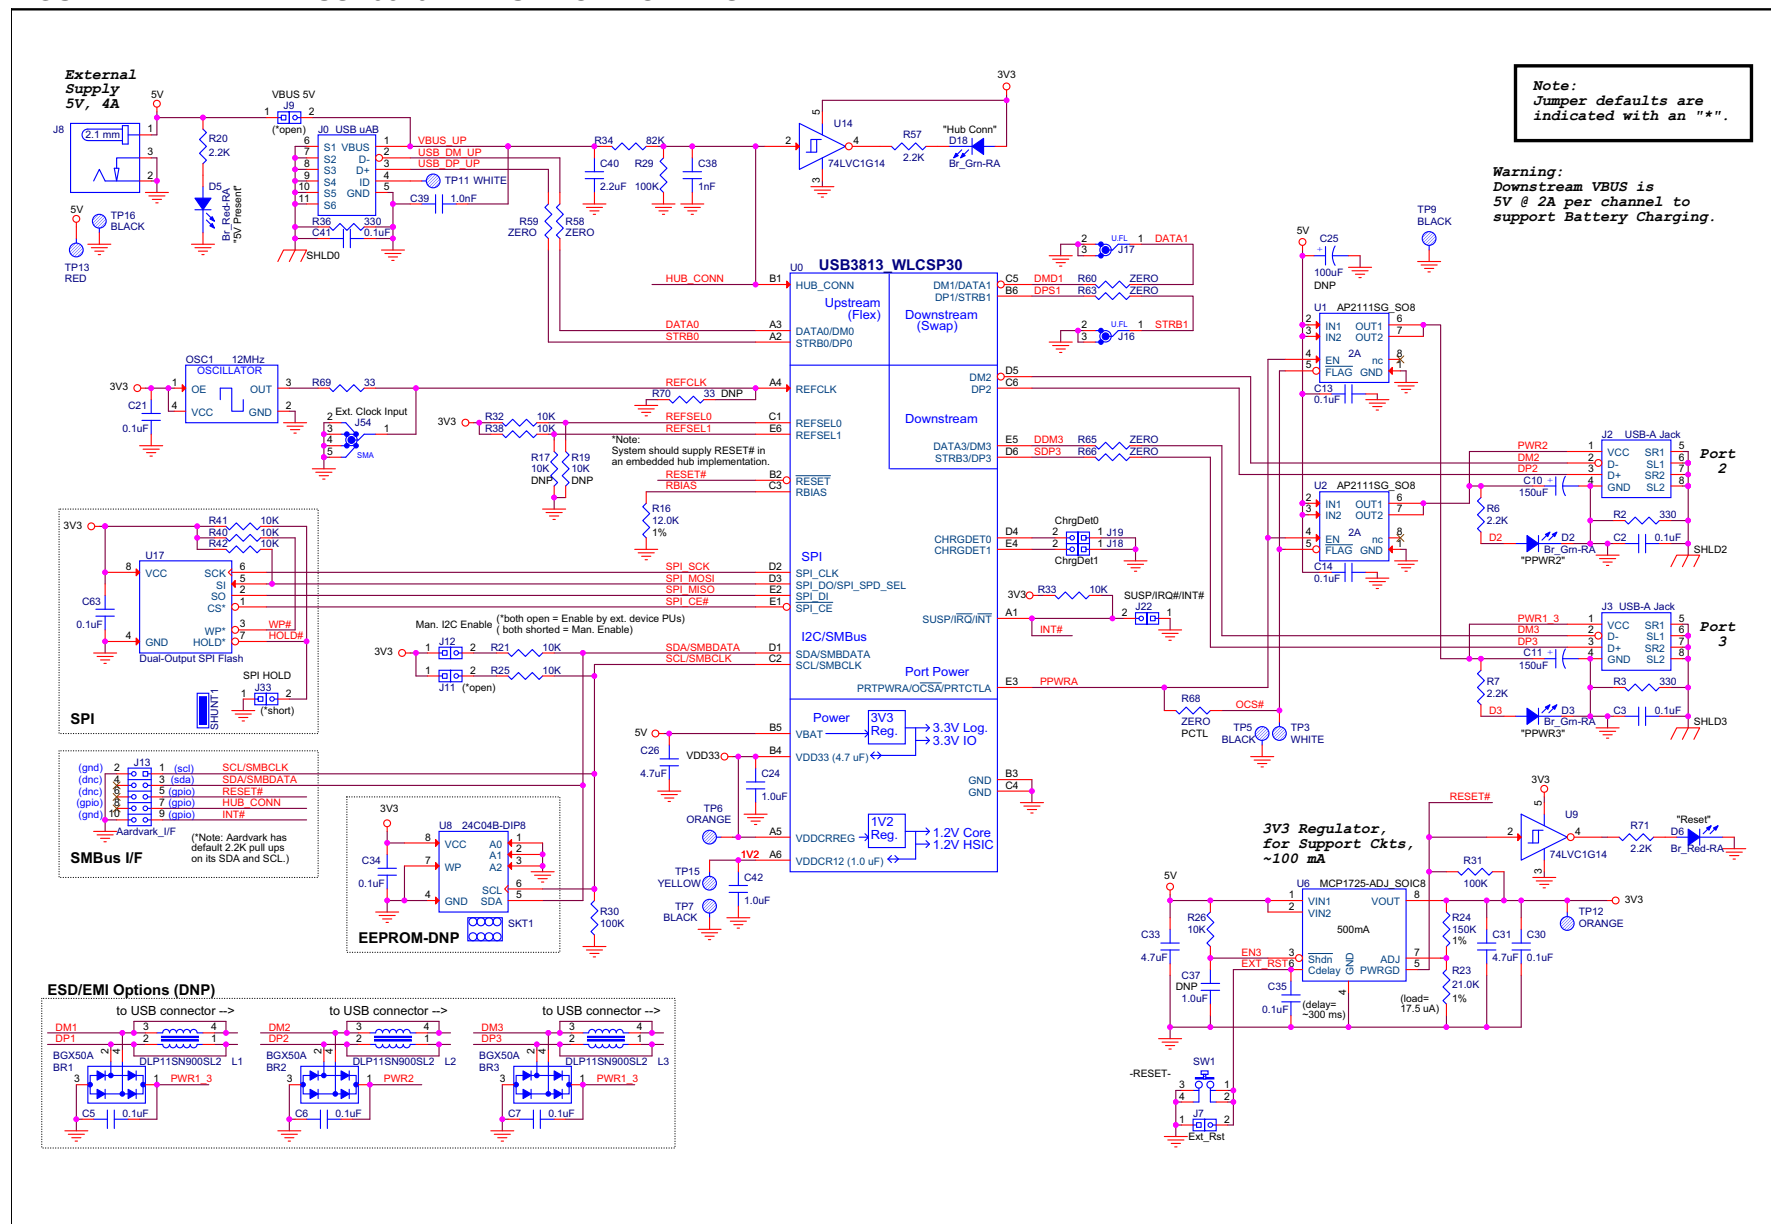



Appendix C. Bill of Materials (BOM)

C.1 INTRODUCTION

This appendix includes the EVB-USB3813 Evaluation Board Bill of Materials (BOM).

TABLE C-1: EVB-USB3813 EVALUATION BOARD BILL OF MATERIALS

Item	Qty	Qty Populated	Reference Designator(s)	Description	Manufacturer	Manufacturer Part Number	Notes
1	2	2	C10, C11	Capacitor, Low ESR, 150uF, 6.3 VDC, 20%, Aluminum, Radial-SMT, 5 mm x 5.7 mm	Lelon	VZS151M0JTR-0506	'3813
2	6	6	C2, C13, C14, C21, C30, C35	Capacitor, 0.1 uF, 25V, 10% X5R, 0402	Murata Electronics®	GRM155R61E104KA7D	
3	2	2	C3, C41	Capacitor, 0.1 uF, 25V, 10% X5R, 0402	Murata Electronics	GRM155R61E104KA7D	'3813
4	1	1	C63	Capacitor, 0.1 uF, 10V, 10%, X5R, 0402	Murata Electronics	GRM155R71A104KA01D	
5	2	2	C38, C39	Capacitor, 1000 pF, 50V, 10%, X7R, 0402	Murata Electronics	GRM155R71H102KA01D	'3813
6	2	2	C24, C42	Capacitor, 0.1 uF, 16 VDC, 10%, X5R, 0603	Murata Electronics	GRM188R61C105KA93D	
7	3	3	C26, C31, C33	Capacitor, 4.7 uF, 6.3 VDC, 20%, X5R, 0603	Murata Electronics	GRM188R60J475KE19D	
8	1	1	C40	Capacitor, 2.2 uF, 6.3 VDC, 10%, X5R, 0603	Murata Electronics	GRM185R60J225KE26D	'3813
9	6	6	R58, R59, R60, R63, R65, R66	Resistor, ZERO, 0.1W, 0402	Panasonic®	ERJ-2GE0R00X	'3813
10	1	1	R68	Resistor, ZERO, 0.1W, 0402	Panasonic	ERJ-2GE0R00X	PCTL
11	1	1	R2	Resistor, 330, 5%, 1/16W, 0603	Panasonic	ERJ-3GEYJ331V	
12	2	2	R3, R36	Resistor, 330, 5%, 1/16W, 0603	Panasonic	ERJ-3GEYJ331V	'3813
13	6	6	R5, R6, R7, R20, R57, R71	Resistor, 2.2K, 5%, 1/16W, 0603	Panasonic	ERJ-3GEYJ222V	
14	1	1	R16	Resistor, 12.0K, 1%, 1/16W, 0603	Panasonic	ERJ-3EKF1202V	
15	7	7	R26, R32, R33, R38, R40, R41, R42	Resistor, 10K, 5% 1/16W, 0603	Panasonic	ERJ-3GEYJ103V	
16	2	2	R21, R25	Resistor, 10K, 5% 1/16W, 0603	Panasonic	ERJ-3GEY103V	EEPROM
17	1	1	R23	Resistor, 21.0K, 1%, 1/16W, 0603	Yageo America	9C06031A2102FKHFT	
18	1	1	R24	Resistor, 150K, 1%, 1/10W, 0603	Panasonic	ERJ-3EKF1503V	
19	1	1	R29	Resistor, 100K, 5%, 1/16W, 0603	Panasonic	ERJ-3GEYJ104V	'3813
20	2	2	R30, R31	Resistor, 100K, 5%, 1/16W, 0603	Panasonic	ERJ-3GEYJ104V	
21	1	1	R34	Resistor, 82K, 5%, 1/16W, 0603	Panasonic	ERJ-3GEYJ823V	'3813
22	1	1	R69	Resistor, 33, 5%, 1/16W, 0603	Panasonic	ERJ-3GEYJ330V	
23	4	4	D1, D2, D3, D18	LED, Green, Bright (40 mcd), 0804, Right Angle	Stanley Electric	DG1113F	
24	2	2	D5, D6	LED, Bright Red, 0804, Right Angle	Stanley Electric	FR1113F	
25	1	1	J8	Connector, Power Jack, 2.1 mm x 5.5 mm, 12V, 4A, Right Angle, TH	Cui Stack	PJ-002AH	
26	1	1	J0	Receptacle, USB, Micro-AB, Right Angle, SMT	Hirose	ZX62-AB-5PA(11)	'3813
27	1	1	J2	Receptacle, USB, Style A, Right Angle, Through-hole	AMP	292303-1	
28	1	1	J3	Receptacle, USB, Style A, Right Angle, Through-hole	AMP	292303-1	'3813
29	2	2	J16, J17	Receptacle, Coax, U.FL, SMT, Vertical	Hirose	U.FL-R-SMT-1	'3813

TABLE C-1: EVB-USB3813 EVALUATION BOARD BILL OF MATERIALS

Item	Qty	Qty Populated	Reference Designator(s)	Description	Manufacturer	Manufacturer Part Number	Notes
30	1	1	J54	Receptacle, SMA, Vertical	AMP	221789-1	
31	2	2	J7, J33	Header, 1x2, 0.1 Inch, Vertical (cut from 1x36)	Samtec	TSW-102-14-L-S	
32	1	1	J9	Header 1x2, 0.1 Inch, Vertical	Samtec	TSW-102-14-L-S	'3813
33	5	5	J11, J12, J18, J19, J22	Header, 2x1, 0.1 Inch, Vertical (cut from 2x36)	Samtec	TSW-102-14-L-S	
34	1	1	J13	Header, 2x5, 0.1 Inch, Vertical	AMP	146256-1	SMBus
35	1	1	SW1	Switch, Momentary, SPST, 100 mA, J-lead, NO	E-Switch	TL3301xF160QJor-RJ	
36	2	2	TP3, TP10	Test Point, White, Loop, Mini, 0.04 Inch ID	Keystone	5002	
37	4	4	TP5, TP7, TP9, TP16	Test Point, Black, Loop, Mini, 0.04 Inch ID	Keystone	5001	
38	2	2	TP6, TP12	Test Point, Orange, Loop, Mini, 0.04 Inch ID	Keystone	5003	
39	1	1	TP11	Test Point, White, Loop, Mini, 0.04 Inch ID	Keystone	5002	'3813
40	1	1	TP13	Test Point, Red, Loop, Mini, 0.04 Inch ID	Keystone	5000	
41	1	1	TP15	Test Point, Yellow, Loop, Mini, 0.04 Inch ID	Keystone	5004	
42	1	1	U0	IC, USB3813, 3-Port USB 2.0/HSIC Hub, WLCSP30	Standard Microsystems Corp	USB3813	
43	2	2	U1, U2	IC, AP2111SG-13, Power Distribution Switch, SOP-8	Diodes Inc.	AP2111SG-13	
44	1	1	U6	IC, MCP1725-ADJE/SN, LDO Regulator, Adj., 500 mA, SOIC8	Microchip Technology	MCP1725(T)-ADJE/SN	
45	2	2	U9, U14	IC, 74LVC1G14, Inverter, Shottky, DCK	TI	SN74LVC1G14DCKR	
46	1	1	U17	IC, '25VF640C, 64 Mb *(8M x 8) SPI Serial FLASH, 2.5V-3.6V, 75-80 MHz, Dual Read, SO8	Microchip	SST25VF064C-80-4I-S3AE	SPI
47	1	1	OSC1	Oscillator, 12.000MHz, 50 ppm, 3.3V, SMT	CTS	CB3LV-3C-12M0000	
48	4	4		Foot, Silicone Rubber, Adhesive, Clear, Cylindrical, .375" x .190"	Richco®	RBS-35	Place bottom side, one at each corner
49	1	1	Starting SN = Band-01	Serial Number Labels, 6 mm x 27 mm			Place bottom side in white S/N box
50	1	1		Assy Labels: "EVB-USB3813", 6 mm x 27 mm			Place top side in Assy# box
51	1	1	PCB Fab	PCB, Band (EVB-USB3x13), Rev. A	ViaSystems/DDi	EVB-USB3x13	Supplied by SMSC
52	1	1	Assembly	Assembly, Band (EVB-USB3813), Rev. A1		EVB-USB3813	
53	1	0	C25	Capacitor, Low ESR, 100 uF, 6.3 VDC, 20% Aluminum, Radial-SMT, 5 mm x 5.8 mm	United Chemi-Con	EMZA6R3ADA101ME61G	DNP

TABLE C-1: EVB-USB3813 EVALUATION BOARD BILL OF MATERIALS

Item	Qty	Qty Populated	Reference Designator(s)	Description	Manufacturer	Manufacturer Part Number	Notes
54	1	0	C9	Capacitor, Low ESR, 150 uF, 6.3 VDC, 20% Aluminum, Radial-SMT, 5 mm x 5.7 mm	Lelon	VZS151M0JTR-0506	'3613
55	1	0	C1	Capacitor, 0.1 uF, 25V, 10%, X5R, 0402	Murata Electronics	GRM155R61E104KA7D	'3613
56	3	0	C5, C6, C7	Capacitor, 0.1 uF, 25V, 10% X5R, 0402	Murata Electronics	GRM155R61E104KA7D	ESD
57	1	0	C34	Capacitor, 0.1 uF, 25V, 10% X5R, 0402	Murata Electronics	GRM155R61E104KA7D	EEPROM-DNP
58	1	0	C37	Capacitor, 0.1uF, 16 VDC, 10%, X5R, 0603	Murata Electronics	GRM188R61C105KA93D	DNP
59	4	0	R61, R62, R64, R67	Resistor, ZERO, 0.1W, 0402	Panasonic	ERJ-2GE0R00X	'3613
60	1	0	R1	Resistor, 330, 5%, 1/16W, 0603	Panasonic	ERJ-3GEYJ331V	'3613
61	2	0	R17, R19	Resistor, 10K, 5%, 1/16W, 0603	Panasonic	ERJ-3GEYJ103V	DNP
62	1	0	R43	Resistor, 100K, 5%, 1/16W, 0603	Panasonic	ERJ-3GEYJ104V	'3613
63	1	0	R70	Resistor, 33, 5%, 1/16W, 0603	Panasonic	ERJ-3GEYJ330V	DNP
64	1	0	J1	Receptacle, USB, Micro-AB, Right Angle, SMT	Hirose	ZX62-AB-5PA	'3613
65	4	0	J14, J15, J20, J21	Receptacle, Coax, U.FL, SMT, Vertical	Hirose	U.FL-R-SMT-1	'3613
66	1	0	J23	Header, 1x2, 0.1 Inch, Vertical	Samtec	TSW-102-14-L-S	'3613
67	3	0	BR1, BR2, BR3	Diode, Bridge, Switching, 50V, 140 mA, KCAC, SOT-143	Infineon Tech	BGX50A	ESD
68	3	0	L1, L2, L3	Inductor, Common Mode Choke, DLP11SN900SL2, 0504	Murata Electronics	DLP11SN900SL2	ESD
69	1	0	SKT1 (Place at U8)	Socket, IC, 8-Pin DIP, Leaf Contacts, Through-hole	Assmann	A08-LC-TT-R	EEPROM-DNP
70	1	0	U8	IC, 24C04, 2-Wire Serial EPROM, 4 Kb, 2.7V, DIP-8	Microchip Technology	24LC04B-I/P	EEPROM-DNP
71	1	0	SHUNT1	Shunt, Insulated, 0.1 Inch	AMP	881545-2	DNP

Worldwide Sales and Service

AMERICAS

Corporate Office
2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support:
<http://www.microchip.com/support>
Web Address:
www.microchip.com

Atlanta
Duluth, GA
Tel: 678-957-9614
Fax: 678-957-1455

Boston
Westborough, MA
Tel: 774-760-0087
Fax: 774-760-0088

Chicago
Itasca, IL
Tel: 630-285-0071
Fax: 630-285-0075

Cleveland
Independence, OH
Tel: 216-447-0464
Fax: 216-447-0643

Dallas
Addison, TX
Tel: 972-818-7423
Fax: 972-818-2924

Detroit
Farmington Hills, MI
Tel: 248-538-2250
Fax: 248-538-2260

Indianapolis
Noblesville, IN
Tel: 317-773-8323
Fax: 317-773-5453

Los Angeles
Mission Viejo, CA
Tel: 949-462-9523
Fax: 949-462-9608

Santa Clara
Santa Clara, CA
Tel: 408-961-6444
Fax: 408-961-6445

Toronto
Mississauga, Ontario,
Canada
Tel: 905-673-0699
Fax: 905-673-6509

ASIA/PACIFIC

Asia Pacific Office
Suites 3707-14, 37th Floor
Tower 6, The Gateway
Harbour City, Kowloon
Hong Kong
Tel: 852-2401-1200
Fax: 852-2401-3431

Australia - Sydney
Tel: 61-2-9868-6733
Fax: 61-2-9868-6755

China - Beijing
Tel: 86-10-8569-7000
Fax: 86-10-8528-2104

China - Chengdu
Tel: 86-28-8665-5511
Fax: 86-28-8665-7889

China - Chongqing
Tel: 86-23-8980-9588
Fax: 86-23-8980-9500

China - Hangzhou
Tel: 86-571-2819-3187
Fax: 86-571-2819-3189

China - Hong Kong SAR
Tel: 852-2943-5100
Fax: 852-2401-3431

China - Nanjing
Tel: 86-25-8473-2460
Fax: 86-25-8473-2470

China - Qingdao
Tel: 86-532-8502-7355
Fax: 86-532-8502-7205

China - Shanghai
Tel: 86-21-5407-5533
Fax: 86-21-5407-5066

China - Shenyang
Tel: 86-24-2334-2829
Fax: 86-24-2334-2393

China - Shenzhen
Tel: 86-755-8864-2200
Fax: 86-755-8203-1760

China - Wuhan
Tel: 86-27-5980-5300
Fax: 86-27-5980-5118

China - Xian
Tel: 86-29-8833-7252
Fax: 86-29-8833-7256

China - Xiamen
Tel: 86-592-2388138
Fax: 86-592-2388130

China - Zhuhai
Tel: 86-756-3210040
Fax: 86-756-3210049

ASIA/PACIFIC

India - Bangalore
Tel: 91-80-3090-4444
Fax: 91-80-3090-4123

India - New Delhi
Tel: 91-11-4160-8631
Fax: 91-11-4160-8632

India - Pune
Tel: 91-20-3019-1500

Japan - Osaka
Tel: 81-6-6152-7160
Fax: 81-6-6152-9310

Japan - Tokyo
Tel: 81-3-6880-3770
Fax: 81-3-6880-3771

Korea - Daegu
Tel: 82-53-744-4301
Fax: 82-53-744-4302

Korea - Seoul
Tel: 82-2-554-7200
Fax: 82-2-558-5932 or
82-2-558-5934

Malaysia - Kuala Lumpur
Tel: 60-3-6201-9857
Fax: 60-3-6201-9859

Malaysia - Penang
Tel: 60-4-227-8870
Fax: 60-4-227-4068

Philippines - Manila
Tel: 63-2-634-9065
Fax: 63-2-634-9069

Singapore
Tel: 65-6334-8870
Fax: 65-6334-8850

Taiwan - Hsin Chu
Tel: 886-3-5778-366
Fax: 886-3-5770-955

Taiwan - Kaohsiung
Tel: 886-7-213-7828
Fax: 886-7-330-9305

Taiwan - Taipei
Tel: 886-2-2508-8600
Fax: 886-2-2508-0102

Thailand - Bangkok
Tel: 66-2-694-1351
Fax: 66-2-694-1350

EUROPE

Austria - Wels
Tel: 43-7242-2244-39
Fax: 43-7242-2244-393

Denmark - Copenhagen
Tel: 45-4450-2828
Fax: 45-4485-2829

France - Paris
Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79

Germany - Munich
Tel: 49-89-627-144-0
Fax: 49-89-627-144-44

Italy - Milan
Tel: 39-0331-742611
Fax: 39-0331-466781

Netherlands - Drunen
Tel: 31-416-690399
Fax: 31-416-690340

Spain - Madrid
Tel: 34-91-708-08-90
Fax: 34-91-708-08-91

UK - Wokingham
Tel: 44-118-921-5869
Fax: 44-118-921-5820