

Stellaris® LM3S811 Evaluation Board

User's Manual



Copyright

Copyright © 2006–2010 Texas Instruments, Inc. All rights reserved. Stellaris and StellarisWare are registered trademarks of Texas Instruments. ARM and Thumb are registered trademarks, and Cortex is a trademark of ARM Limited. Other names and brands may be claimed as the property of others.

Texas Instruments.
108 Wild Basin, Suite 350
Austin, TX 78746
<http://www.ti.com/stellaris>



Revision History

This table provides a summary of the document revisions.

Date	Revision	Description
September 2006	00	Initial release of doc to customers.
December 2006	01	Changed value in Table B-1 for Pad 11.
January 2009	02	Changed value in Table 3-1 for User Push Switch Input.
August 2009	03	Changed branding from Luminary Micro to Texas Instruments.
September 2009	04	Changed display and display interface information.
January 2010	05	Added Code Composer Studio™ to list of support toolchains.

Table of Contents

Chapter 1: Stellaris® LM3S811 Evaluation Board	9
Features.....	9
Block Diagram	10
Evaluation Kit Contents	10
Evaluation Board Specifications	11
System Requirements.....	11
Supported Devices.....	11
Features of the LM3S811 Microcontroller.....	11
Chapter 2: Getting Started	13
Powering the Board	13
Installing the Drivers	13
Driver Installation	13
Completing Driver Installation	13
Running the Quickstart Application.....	14
Chapter 3: Hardware Description.....	15
LM3S811 Microcontroller	15
Device Overview	15
Clocking	15
Reset.....	15
Power Supply.....	15
Debugging.....	15
USB Device Controller Functions	16
Device Overview	16
USB to JTAG/SWD	16
Virtual COM Port.....	16
Organic LED Display	16
Features.....	16
Control Interface	16
Power Supply.....	17
Design Guidelines.....	17
Further Reference	17
Other Peripherals.....	17
Thumbwheel Potentiometer	17
User LED	17
User Pushbutton	17
Bypassing Peripherals	17
Interfacing to the EVB.....	18
Using the In-Circuit Debugger Interface	18
ICDI Features.....	19
Enabling ICDI Mode.....	19
ARM Target Cable	19
Starting ICDI	19

Chapter 4: Communications	21
Using the Virtual COM Port	21
Confirming Driver Installation	21
Installing the VCP Device Driver	22
About HyperTerminal	24
Starting HyperTerminal	24
Appendix A: Schematics	27
Appendix B: Connection Details	31
Component Locations	31
Evaluation Board Dimensions	32
I/O Breakout Pads and Recommended Connectors	32
ARM Target Pinout	34

List of Figures

Figure 1-1. Evaluation Board Layout	9
Figure 1-2. LM3S811 Evaluation Board Block Diagram	10
Figure 3-1. ICD Interface Mode	18
Figure 4-1. Check VCP Driver Installation	21
Figure A-1. LM3S811 Microcontroller (sheet 1 of 3)	28
Figure A-2. LM3S811 Microcontroller (sheet 2 of 3)	29
Figure A-3. LM3S811 Microcontroller (sheet 3 of 3)	30
Figure B-1. Component Locations	31
Figure B-2. Evaluation Board Dimensions	32

List of Tables

Table 3-1. Isolating On-Board Hardware 18

Table B-1. I/O Breakout Pads 32

Table B-2. Recommended Connectors..... 33


Table B-3. 20-Pin JTAG/SWD Configuration 34

CHAPTER 1

Stellaris® LM3S811 Evaluation Board

The Stellaris® LM3S811 Evaluation Board is both a compact and versatile evaluation platform for the Stellaris LM3S811 ARM® Cortex™-M3-based microcontroller, and an In-Circuit Debug Interface (ICDI) for any Stellaris microcontroller-based target board. The EVB allows users to evaluate, prototype, and create application-specific designs.

Figure 1-1. Evaluation Board Layout

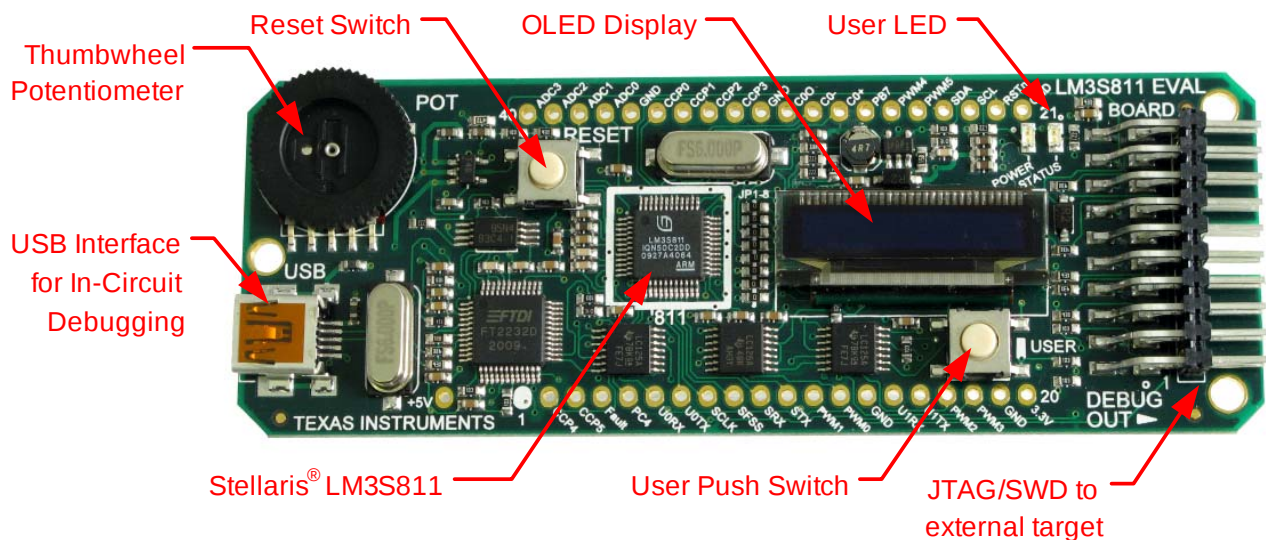


Features

The Stellaris® LM3S811 Evaluation Board includes the following features:

- Stellaris® LM3S811 microcontroller
- OLED graphics display with 96 x 16 pixel resolution
- User-programmable pushbutton and LED
- Reset pushbutton and power indicator LED
- Thumbwheel potentiometer for driving an Analog-to-Digital Converter (ADC) input
- Standard ARM® 20-pin JTAG debug connector for use as an In-Circuit Debug Interface (ICDI)
- I/O signal break-out pads for hardware prototyping
- UART0 accessible through a USB Virtual COM Port (VCP)
- USB interface for all communication and power

Block Diagram

Figure 1-2. LM3S811 Evaluation Board Block Diagram

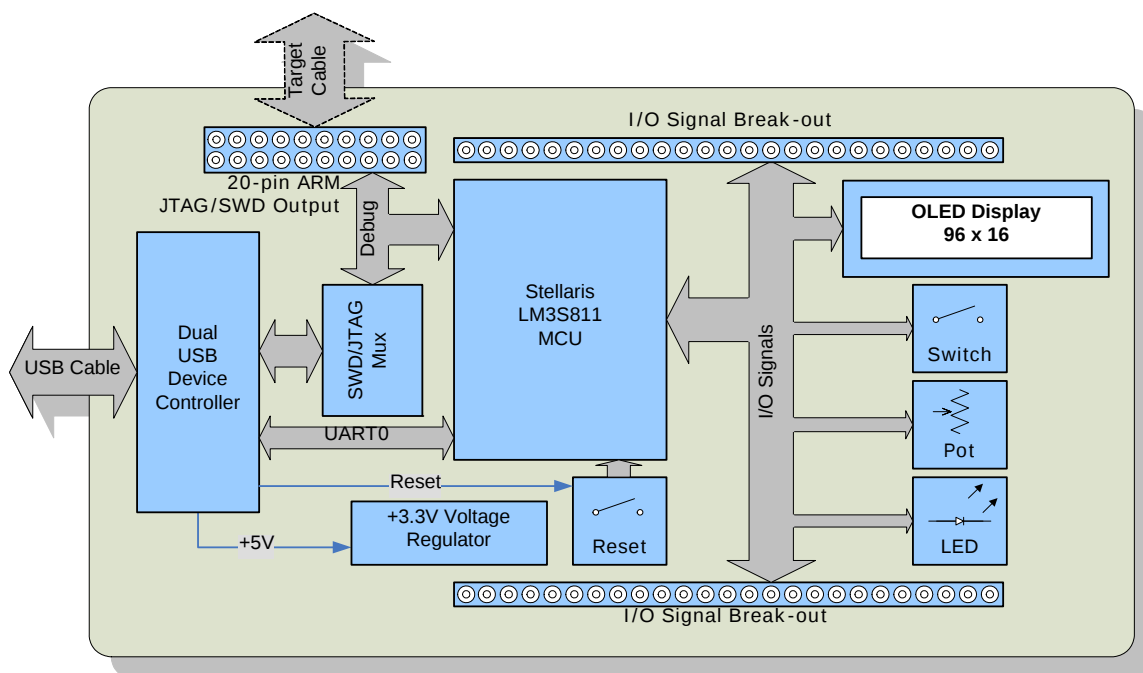

Evaluation Kit Contents

The evaluation kit contains everything needed to develop and run applications for Stellaris microcontrollers including:

- LM3S811 Evaluation Board (EVB)
- USB cable
- 20-pin JTAG/SWD target cable
- CD containing:
 - A supported version of one of the following (including a toolchain-specific Quickstart guide):
 - Keil™ RealView® Microcontroller Development Kit (MDK-ARM)
 - IAR Embedded Workbench
 - Code Sourcery GCC development tools
 - Code Red Technologies development tools
 - Texas Instruments' Code Composer Studio™ IDE
 - Complete documentation
 - Quickstart application source code
 - Stellaris® Firmware Development Package with example source code

Evaluation Board Specifications

- Board supply voltage: 4.37–5.25 Vdc from USB connector
- Board supply current: 80 mA typ (fully active, CPU at 50 MHz)
- Break-out power output: 3.3 Vdc (100 mA max)
- Dimensions: 3.90" x 1.40" x 0.30" (LxWxH)
- RoHS status: Compliant

System Requirements

- Microsoft Windows 2000, XP, or 2003
- 128 MB of RAM (512 MB recommended)
- 100 MB of available hard-disk space
- 1024 x 768 minimum screen resolution
- CD-ROM drive
- USB port

Supported Devices

In-Circuit Debug Interface (ICDI) mode presently supports all Stellaris® Family devices.

Features of the LM3S811 Microcontroller

- 32-bit ARM® Cortex™-M3 v7M architecture optimized for small-footprint embedded applications
 - Thumb®-compatible Thumb-2-only instruction set processor core for high code density
 - 50-MHz operation
 - Hardware-division and single-cycle-multiplication
 - Integrated Nested Vectored Interrupt Controller (NVIC) providing deterministic interrupt handling
 - 27 interrupt channels with eight priority levels
- 64 KB single-cycle flash with two forms of flash protection on a 2-KB block basis
- 8 KB single-cycle SRAM
- Three timers, each of which can be configured: as a single 32-bit timer, as a dual 16-bit timer with capture and simple PWM modes, or to initiate an ADC event
- Real-Time Clock (RTC) capability
- Separate watchdog clock with an enable
- Programmable interrupt generation logic with interrupt masking
- Lock register protection from runaway software
- Reset generation logic with an enable/disable Synchronous Serial Interface (SSI)
- Programmable interface operation for Freescale SPI, National Semiconductor MICROWIRE™, or Texas Instruments synchronous serial
 - Master or slave operation

- Two fully programmable 16C550-type UARTs
 - Separate 16x8 transmit (TX) and 16x12 receive (RX) FIFOs to reduce CPU interrupt service loading
 - Programmable baud-rate generator
- Analog-to-Digital Converter (ADC)
 - Single- and differential-input configurations
 - Four 10-bit channels (inputs) when used as single ended inputs
 - Sample rate of 500 thousand samples/second
- I2C Bus with Master and slave receive and transmit operation with transmission speed up to 100 Kbps in Standard mode and 400 Kbps in Fast mode
- Six motion-control PWM outputs
- 1 to 32 GPIOs, depending on user configuration
- On-chip Linear Drop-Out (LDO) voltage regulator
- 3.3-V supply brownout detection and reporting via interrupt or reset
- On-chip temperature sensor
- 48-pin RoHS-compliant LQFP
- Industrial operating temperature

Getting Started

The *Stellaris LM3S811 Evaluation Kit Quickstart* provides step-by-step instructions for getting started with your Stellaris LM3S811 Evaluation Kit. For your convenience these instructions are summarized below.

Powering the Board

The Stellaris LM3S811 Evaluation Board (EVB) is configured for immediate use. To power the EVB, use the USB cable supplied in the kit. Connect the mini-b (smaller) end of the USB cable to the connector labeled “USB” on the EVB. Connect the other end (Type A) to a free USB port on your host PC. The USB interface is capable of sourcing up to 500 mA for each attached device, which is sufficient for the evaluation board. If connecting the board through a USB hub, it must be a powered hub.

When you plug in the EVB for the first time, Windows starts the Found New Hardware Wizard. The *Stellaris LM3S811 Evaluation Kit Quickstart Guide* steps through the process of installing drivers for the Stellaris LM3S811 Evaluation Board.

Installing the Drivers

The Stellaris LM3S811 Evaluation Board requires several hardware drivers. All drivers are located in the \Tools\Ftdi directory on the Software and Documentation CD. Each time Windows requests a driver for this device, point it to the Software and Documentation CD.

Driver Installation

When the Found New Hardware Wizard starts, Windows asks if it can connect to Windows Update to search for software. Select “No, not this time,” and then click Next.

The Found New Hardware Wizard then asks you from where to install the software. Select “Install from a list or specific location (Advanced)” and click Next.

Make sure the Documentation and Software CD that came with the evaluation kit is in your CD-ROM drive. Select “Search for the best driver in these locations,” and check the “Search removable media (floppy, CD-ROM...)” option. Click Next.

A warning pops up during the Hardware Installation; click Continue Anyway.

Windows now finishes installing the drivers for “Stellaris Evaluation Board A.” When the driver install is finished, a window appears. Click Finish to close the dialog box.

Completing Driver Installation

You have just installed the drivers for “Stellaris Evaluation Board A”. The USB device built into the EVB is a composite USB device. After you click Finish, a new Found New Hardware Wizard window appears asking to install drivers for another device. This is for the “Stellaris Evaluation Board B” part of the composite USB device. Follow the same instructions as above to install the drivers for this device.

The Found New Hardware Wizard appears one last time. This is to install the drivers for the “Stellaris Virtual COM Port”. Again, follow the same instructions above to install the drivers for this device.

Now all of the hardware drivers for the LM3S811 Evaluation Board have been installed. These drivers give the debugger access to the JTAG interface and the host PC access to the Virtual COM Port.

Running the Quickstart Application

The quickstart application is a game in which you navigate a ship through an endless tunnel. Use the potentiometer (POT) to move the ship up and down, and the user pushbutton (USER) to fire a missile to destroy obstacles in the tunnel. Score accumulates for survival and destroying obstacles. The game lasts for only one ship; the score displays at the end of the game.

Since the OLED display on the evaluation board has burn-in characteristics similar to a CRT, the application also contains a screen saver. The screen saver only becomes active if two minutes have passed without the user pushbutton being pressed while waiting to start the game (i.e., the screen saver never appears during game play). An implementation of the Game of Life is run with a field of random data as the seed value.

After two minutes of running the screen saver, the display turns off and the user LED blinks. Exit either mode of screen saver (Game of Life or blank display) by pressing the user pushbutton (USER). Press the button again to start the game.

While the game is being played, a running tally of the score is output through UART0 of the LM3S811. UART0 is connected to the FTDI's second serial channel. This serial channel is available to Windows as a Virtual COM Port. To view the score, open up a terminal application such as HyperTerminal. Connect using COM#, where # is the number Windows has assigned the Virtual COM Port. Set the serial connection to a baud rate of 115200, 8 data bits, no parity, 1 stop bit, and no flow control.

Important: The quickstart application will not run if one or more jumpers are removed.

Hardware Description

This chapter provides the hardware description for the LM3S811 microcontroller including the peripherals included in the evaluation kit.

LM3S811 Microcontroller

Device Overview

The heart of the EVB is a Stellaris LM3S811 ARM® Cortex™-M3-based microcontroller. The LM3S811 offers 64 KB flash memory, 50-MHz operation, a 4-channel ADC, and a wide range of peripherals. Refer to the LM3S811 data sheet (order number DS-LM3S811) for complete device details.

The LM3S811 microcontroller is factory programmed with a quickstart demo program. The quickstart program resides in the LM3S811 on-chip flash memory and runs each time power is applied, unless ICDI mode is in use, or the quickstart has been replaced with a user program.

Clocking

A single external 6.0-MHz crystal drives the LM3S811 microcontroller. All required internal clocks are generated automatically within the device. The LM3S811 microcontroller is designed to run the ARM Cortex core at 50 MHz on this evaluation board.

Reset

The LM3S811 microcontroller shares its external reset input with the OLED display. Reset is asserted (Active Low) under any one of the following conditions:

- Power-on reset (duration set by resistor R1 and capacitor C2)
- Reset switch SW2 is held down
- In ICDI mode
- By the USB device controller (U2 FT2232), when instructed by the debugger

The Keil RVMDK debugger does not support external reset. Instead, the target device is reset using JTAG operations. In ICDI mode, the reset push-switch has no effect.

Power Supply

The LM3S811 is powered from a +3.3-V supply rail that is common to all devices on the EVB. A low-dropout (LDO) regulator regulates +5 V power from the USB cable to +3.3 V. +3.3 V at up to 100 mA is available for powering external circuits at break-out pin 20.

Debugging

Stellaris microcontrollers support programming and debugging using either JTAG or SWD. JTAG uses the TCK, TMS, TDI, and TDO signals. SWD requires fewer signals—SWCLK, SWDIO, and SWO. The debugger determines which debug protocol is used. For example, Keil RVMDK tools support only JTAG debugging.

JTAG/SWD signals are multiplexed with GPIO functions inside the Stellaris microcontroller. Do not configure JTAG/SWD pins (including PB7/TRST) as GPIO. Doing this prevents in-circuit programming and debugging.

USB Device Controller Functions

Device Overview

An FT2232 device from Future Technology Devices International Ltd manages USB-to-serial conversion. The FT2232 is factory configured to implement a JTAG/SWD port (synchronous serial) on channel A and a Virtual COM Port (VCP) on channel B. This feature allows two simultaneous communications links between the host computer and the target device using a single USB cable. Separate Windows drivers for each function are provided on the Documentation and Software CD.

A small serial EEPROM holds the FT2232 configuration data. The EEPROM is not accessible by the LM3S811 microcontroller.

For full details on FT2232 operation, go to www.ftdichip.com.

USB to JTAG/SWD

The FT2232 USB device performs JTAG/SWD serial operations under the control of the debugger. Two 74LV125 hex buffers multiplex SWD and JTAG functions and provide direction control for the bi-directional data line when working in SWD mode.

Virtual COM Port

The Virtual COM Port (VCP) allows Windows applications (such as HyperTerminal) to communicate with UART0 on the LM3S811 over USB. Once the FT2232 VCP driver is installed, Windows assigns a COM port number to the VCP channel.

For more information, see Using the Virtual COM Port on page 21.

Organic LED Display

The EVB features an Organic LED (OLED) graphics display with 96 x 16 pixel resolution. OLED is a new technology that offers many advantages over LCD display technology.

Features

- RiT RGS08096016BW001 series display
- 96 columns by 16 rows
- 1 bit/pixel monochrome
- High-contrast (typ. 2000:1)
- Excellent brightness (100 cd/m²)
- Fast response

Control Interface

The OLED display has a built-in controller IC (SSD1300) with synchronous serial and I²C interfaces. I²C is used on the EVB as it only requires two microcontroller pins. The OLED display has a fixed I²C address of 0x3d. The Stellaris driver library (DriverLib) (included on the Documentation and Software CD) contains complete drivers with source-code for the OLED display.

Note that the SSD1300's I²C bus implementation is not 100% compliant with the I²C specification. Designers should refer to the SSD1300 datasheet before connecting other I²C devices to the bus.

Power Supply

A +10 V supply is needed to bias the OLED display. In addition, a boost converter has been added to the board. This supply is dedicated to the OLED display and should not be used to power other devices.

Design Guidelines

The OLED display has a lifetime of about 10,000 hours. It is also prone to degradation due to burn-in, similar to CRT and plasma displays. The quickstart application includes both a screen-saver and a power-down mode to extend display life. These factors should be considered when developing EVB applications that use the OLED display.

When using the EVB as an In-Circuit Debug Interface (ICDI), the OLED display is held in reset to reduce power consumption and eliminate display wear-out.

Further Reference

For additional information on the RGS08096016BW001 OLED display, see the www.rtdisplay.com web site..

Full details on the SSD1300 controller are available from the Solomon Systech, Ltd., web site: www.solomon-systech.com.

Other Peripherals

Thumbwheel Potentiometer

A thumbwheel potentiometer connects to Channel 0 of the Analog-to-Digital Converter (ADC). A padding resistor (R7) sets the voltage range to 0 to 3.0 V. This corresponds with the full-scale range of the LM3S811's 10-bit ADC. The ADC input voltage increases with clockwise potentiometer rotation.

User LED

A user LED (D1) is provided for general use. The LED is connected to PC5/CCP1, allowing the option of either GPIO or PWM control (brightness control). Refer to the Quickstart Application source code for an example of PWM control.

User Pushbutton

A user pushbutton (SW2) is provided for general use. The switch interfaces to PC4 of the LM3S811.

Bypassing Peripherals

The EVB's on-board peripheral circuits require eight GPIO lines, leaving up to 24 GPIO lines immediately available for connection to external circuits. If all GPIO lines are needed, then the on-board hardware can be bypassed. The EVB is populated with eight 0-ohm resistor jumpers, which can be removed to isolate on-board hardware.

Important: The quickstart application will not run if one or more jumpers are removed.

Table 3-1. Isolating On-Board Hardware

MCU Pin	EVB Function	To Isolate, Remove...
Pin 33 PB2/I2CSCL	I2C SCL to Display	JP1
Pin 34 PB3/I2CSDA	I2C SDA to Display	JP2
Pin 17 PA0/U0Rx	VCP Receive	JP3
Pin 18 PA1/U0Tx	VCP Transmit	JP4
Pin 1 ADC0	ADC Input from Thumbwheel Potentiometer	JP5
Pin 14 GPIO PC4	User Push Switch Input	JP6
Pin 29 GPIO PC5	User LED output	JP7
Pin 48 GPIO PD7	OLED Power Enable	JP8

Interfacing to the EVB

An array of accessible I/O signals makes it easy to interface the EVB to external circuits. All LM3S811 I/O lines (except those with JTAG functions) are brought out to 0.1" pitch pads. For quick reference, silk-screened labels on the PCB show primary pin functions.


Table B-1 on page 32 has a complete list of I/O signals as well as recommended connectors.

Most LM3S811 I/O signals are +5-V tolerant. 5-V tolerant pins will not be damaged when connected to 5-V logic circuits. It is recommended that datasheets be checked for compatibility when mixing logic types. Refer to the LM3S811 datasheet for detailed electrical specifications.

Using the In-Circuit Debugger Interface

The Stellaris LM3S811 Evaluation Kit can operate as an In-Circuit Debugger Interface (ICDI). ICDI acts as a USB to the JTAG/SWD adaptor, allowing debugging of any external target board that uses a Stellaris microcontroller.

Figure 3-1. ICD Interface Mode

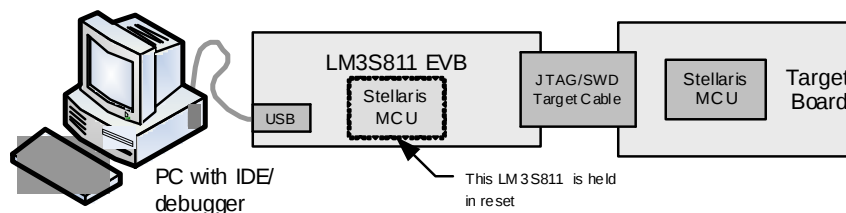

The debug interface operates in either Serial-Wire Debug (SWD) or full JTAG mode, depending on the configuration in the debugger IDE.

The Keil RVMDK does not distinguish between normal Evaluation Board mode and ICDI mode. The only requirement is that the correct Stellaris device is selected in the project configuration.

ICDI Features

ICDI includes the following features:

- Standard ARM® 20-pin JTAG debug connector
- USB 2.0 full speed interface allows JTAG/SWD debug
- Compatible with leading ARM Integrated Development Environment (IDE) packages including Keil RVMDK.

Enabling ICDI Mode

ICDI mode is enabled when the 20-pin JTAG/SWD target cable is connected to an external target. In this mode, the on-EVB LM3S811 microcontroller and OLED display are held in reset. Applications can not be executed in the on-EVB microcontroller when the EVB is connected as an ICDI device.

ARM Target Cable

The evaluation kit includes a 3-inch target cable for connecting the EVB to an external target. Cables up to 8-inch long can be used if required.

Target cable pin assignments are compatible with the ARM 20-pin standard (see Table B-3 on page 34). The target board must have GND connections on even pins from 4 through 20, otherwise the ICDI is not enabled when the target is connected. In this case, there will be conflict between the JTAG/SWD signals on the LM3S811 evaluation board and the external Stellaris device.

When using the kit as an evaluation board, do not make connections to the debug out connector.

Starting ICDI

With the USB cable removed, connect the EVB to a Stellaris microcontroller-based target board using the 20-pin JTAG/SWD target cable included in the Stellaris LM3S811 Evaluation Kit.

The red stripe on the cable should match pin 1 on both the EVB debug out connector and the target. When inserted correctly, the polarizing tab on the connector fits into the slot on the EVB PCB, so that the ribbon cable exits away from you.

Apply power to the target device, and then connect the USB cable to the LM3S811 Evaluation Board. The OLED display should not show any information. If it does display an image, then check the target JTAG/SWD connections to ensure the on-EVB LM3S811 microcontroller is being held in reset.

The Keil RVMDK is now able to program and debug the target Stellaris microcontroller.

Communications

This chapter describes available communication for the LM3S811 microcontroller through the Virtual COM Port and the Windows application, HyperTerminal.

Using the Virtual COM Port


The Virtual COM Port (VCP) is a convenient way for Windows applications to communicate with UART0 on the LM3S811 microcontroller over USB. It offers all the capabilities of a standard RS232 interface without an additional cable.

Confirming Driver Installation

The VCP device driver is normally installed as part of the quickstart process. Confirm that the VCP device driver is installed by doing the following.

1. Connect the EVB to a PC using the USB cable supplied in the evaluation kit.
2. Open the Windows Device Manager, by either holding down the Windows Key and pressing the Pause/Break key, or, from the Start Menu, selecting Control Panel and then clicking on the System Icon.
3. Select the Hardware Tab, and click the Device Manager button.
4. In Device Manager, scroll down until you see Ports (COM & LPT). Click to expand this item. You should see a device called Stellaris Virtual COM Port (COM).

Figure 4-1. Check VCP Driver Installation

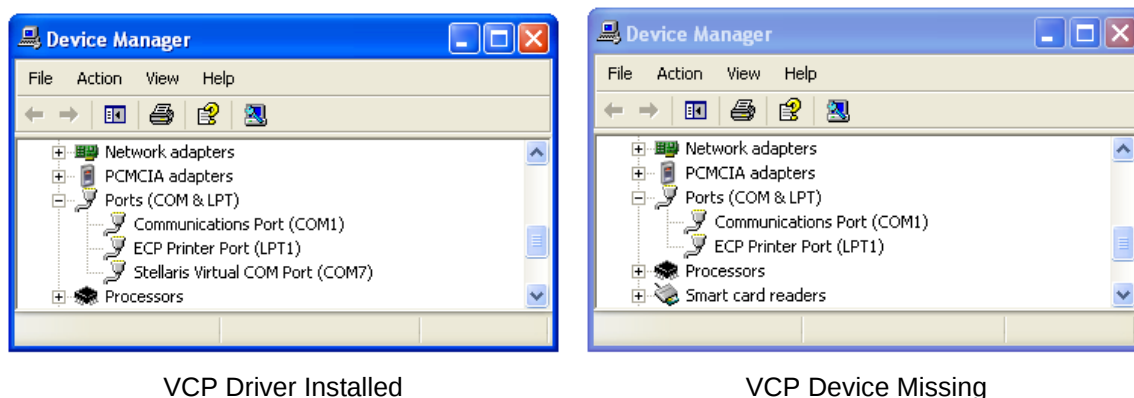

The Windows operating system assigns the COM Port number automatically. It may change if the EVB is reconnected.

If Device Manager does not show the Stellaris Virtual COM Port device, or if there is a question mark by the device, it will be necessary to install or reinstall the device driver.


Installing the VCP Device Driver

When the EVB is first connected to a USB port, Windows automatically starts a driver installation wizard. The following steps guide you through the installation wizard.


1. Connect the EVB to an available USB port using the USB cable supplied in the kit. In the Found New Hardware Wizard window, select “No, not this time” and click Next.



2. Select “Install from a list or specific location (Advanced)” and click Next.

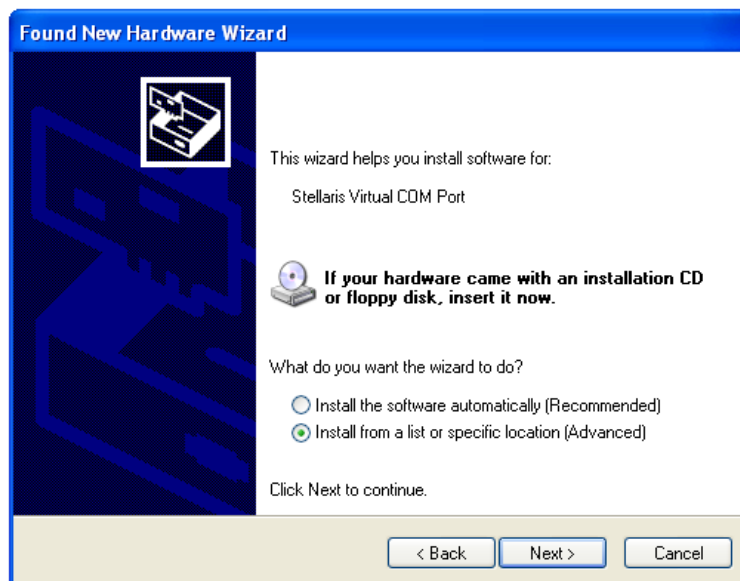

3. Insert the Stellaris® LM3S811 Evaluation Kit Documentation and Software CD in the CD-ROM drive. Select “Search removable media (floppy, DR-ROM...)” and click Next.

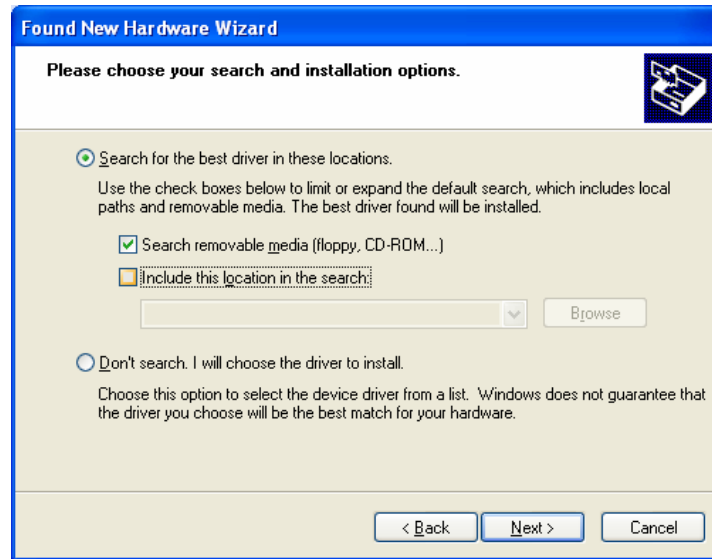

4. Windows locates the driver on the Documentation and Software CD and start installing the driver. A warning dialog like the one below pops up. Click Continue Anyway.



5. VCP drivers are now installed. Click Finish.



You may want to use Device Manager to identify the COM Port assignment.

Now that drivers are installed, Windows automatically assign a COM port to the LM3S811 Evaluation Board each time it is connected.

About HyperTerminal


HyperTerminal is an ASCII terminal emulator that is included with Windows. It provides an easy way to transfer ASCII data to and from the LM3S811 Evaluation Board using the Virtual COM port feature.

The quickstart application sends a running tally of the game score through UART0 of the LM3S811.


Starting HyperTerminal

1. From the Windows XP Start menu, select:
Start > All Programs > Accessories > Communications > HyperTerminal
2. HyperTerminal asks for a name and icon to associate with the terminal profile you are about to create. Neither the name nor the icon selection is critical.


3. Click OK to continue.

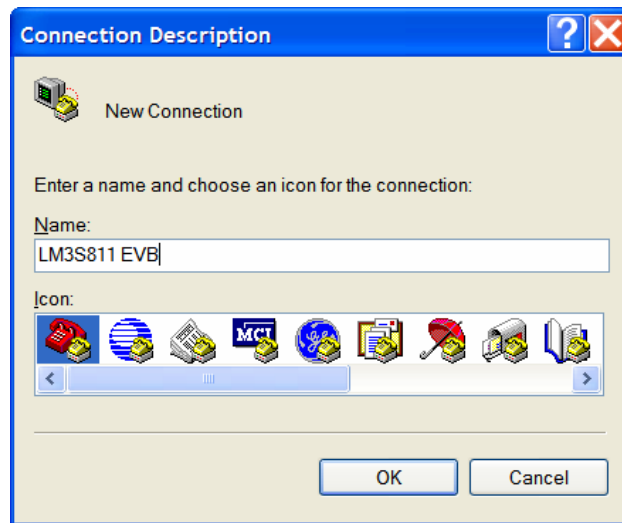


4. Select the COM port assigned to the LM3S811 Evaluation Board. In the example below, it is COM7. Click OK.

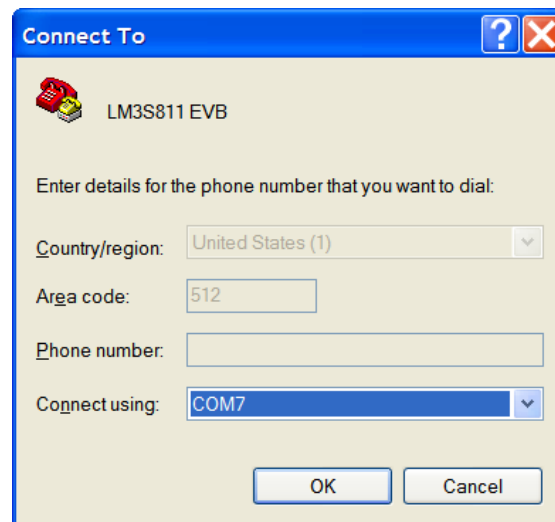

5. Use the Properties dialog box to set the Port Settings. The quickstart application sends data at 115200 baud, 8 data bits, no parity, 1 stop bit, and no flow-control. Click OK.

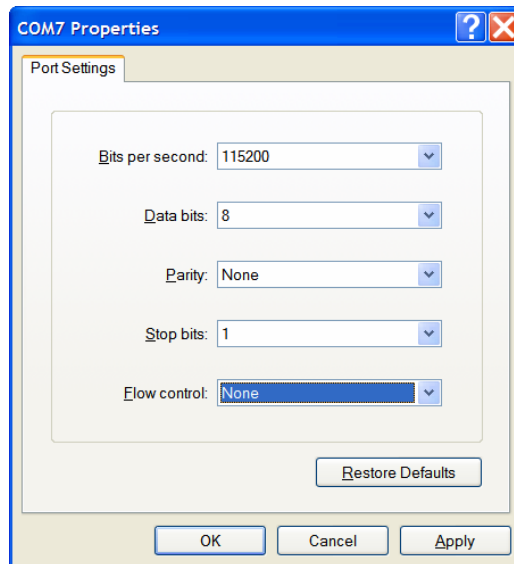

6. HyperTerminal now starts. When the quickstart game is played, score data is visible in the terminal window. Save the terminal settings when exiting HyperTerminal.

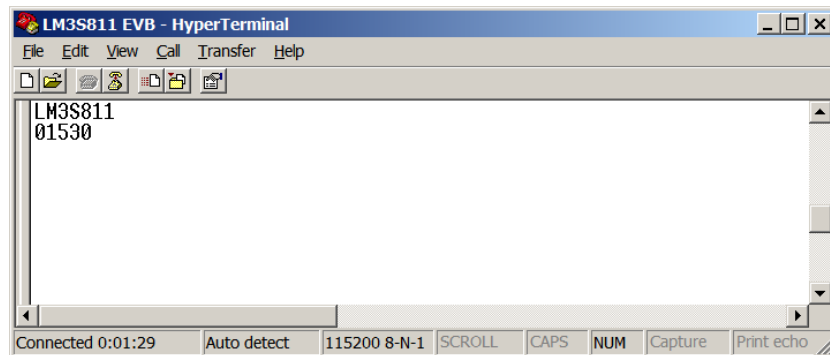

APPENDIX A

Schematics

Schematics for the Stellaris LM3S811 Evaluation Board follow.

Figure A-2. LM3S811 Microcontroller (sheet 2 of 3)


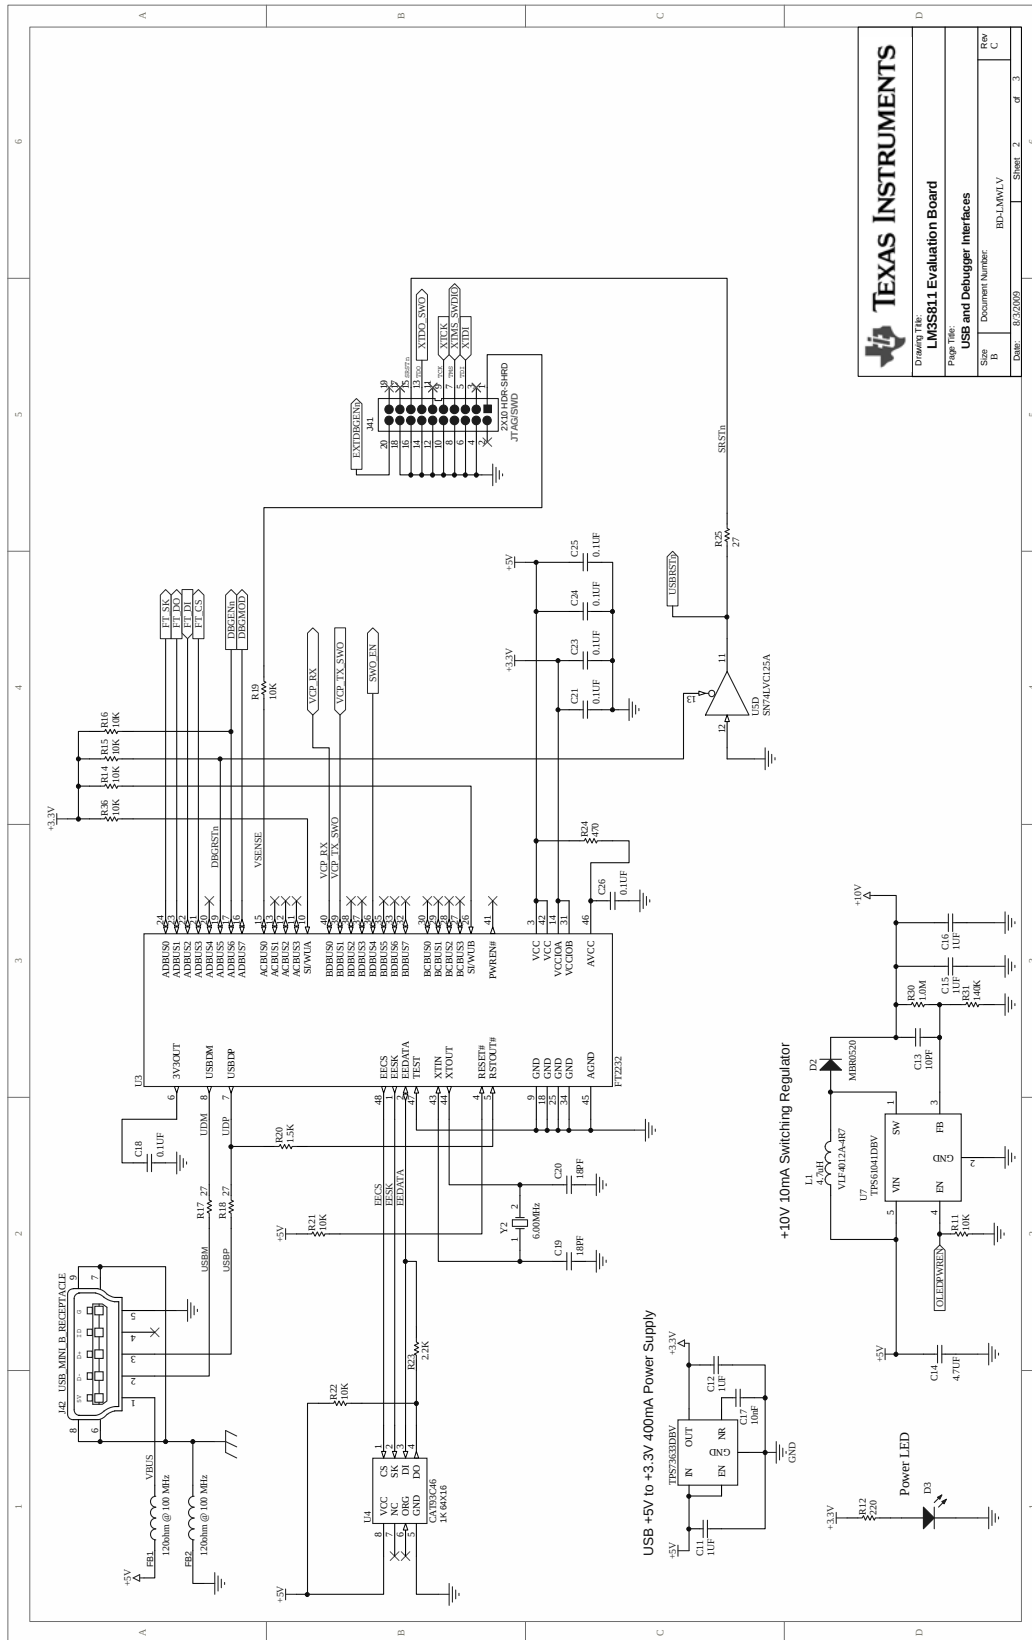


Figure A-3. LM3S811 Microcontroller (sheet 3 of 3)

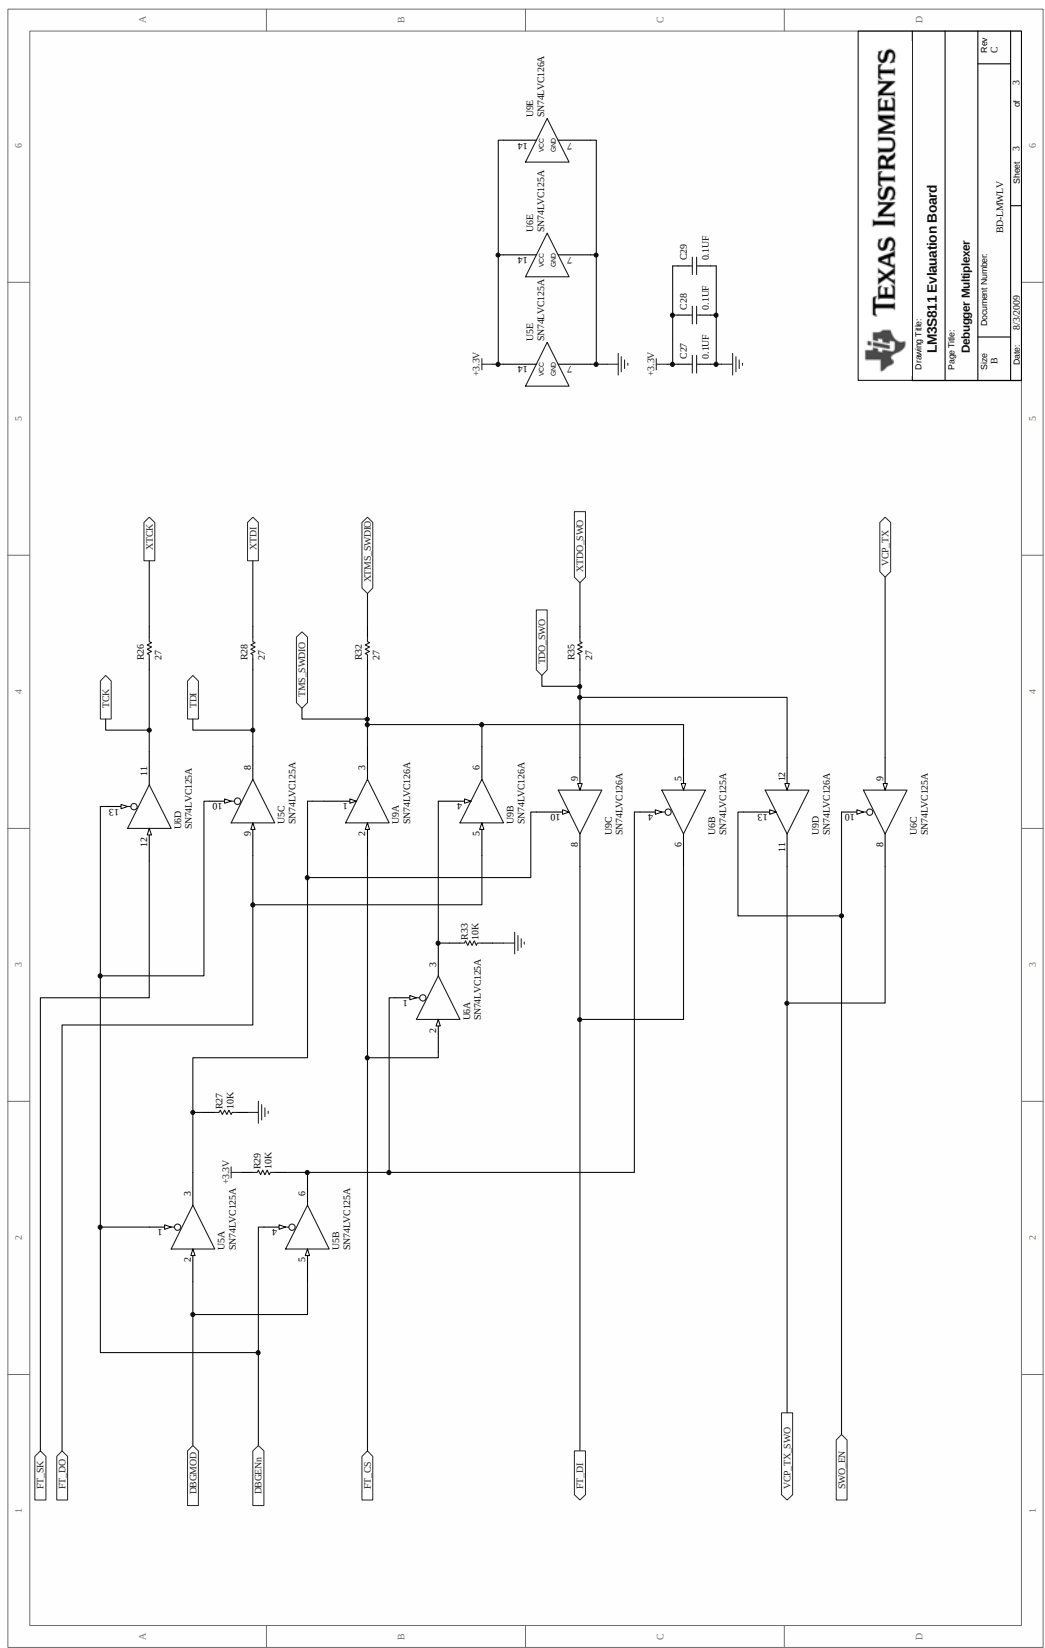

Connection Details

This appendix contains the following sections:

- Component Locations
- Evaluation Board Dimensions
- I/O Breakout Pads and Recommended Connectors
- ARM Target Pinout

Component Locations

Figure B-1. Component Locations

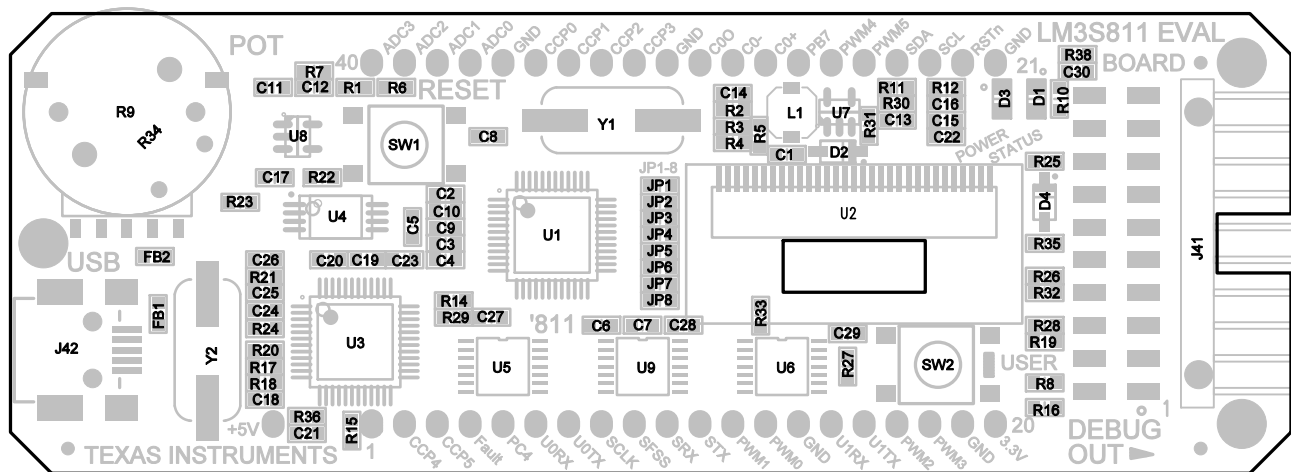


Table B-1. I/O Breakout Pads (Continued)

Pad No.	Description		Pad No.	Description
13	PD0/PWM0		28	PB6/C0+
14	GND		27	PB7 ^b
15	PD2/U1Rx		26	PE0/PWM4
16	PD3/U1Tx		25	PE1/PWM5
17	PB0/PWM2		24	PB3/I2CSDA ^a
18	PB1/PWM3		23	PB2/I2CSCL ^a
19	GND		22	RESET
20	+3.3V		21	GND

a. Indicates an I/O line that is used by EVB hardware.

b. PB7 should not be used as a GPIO.

Table B-2. Recommended Connectors

Pins 2-20 (19 way)	Socket	Sullins PPPC191LFBN-RC	Digikey S7052-ND
	Pin Header	Sullins PTC19SAAN	Digikey S1012-19-ND
Pins 21-40 (20 way)	Socket	Sullins PPPC201LFBN-RC	Digikey S7053-ND
	Pin Header	Sullins PTC20SAAN	Digikey S1012-20-ND

ARM Target Pinout

In ICDI mode, the Stellaris LM3S811 Evaluation Kit supports ARM's standard 20-pin JTAG/SWD configuration. The same pin configuration can be used for debugging over Serial Wire Debug (SWD) and JTAG interfaces. The debugger software, running on the PC, determines which interface protocol is used.

The Stellaris target board should have a 2x10 0.1" pin header with signals as indicated in Table B-3.

Table B-3. 20-Pin JTAG/SWD Configuration

Function	Pin	Pin	Function
nc	1	2	nc
nc	3	4	GND
TDI	5	6	GND
TMS	7	8	GND
TCK	9	10	GND
nc	11	12	GND
TDO	13	14	GND
$\overline{\text{RST}}$	15	16	GND
nc	17	18	GND
nc	19	20	GND

ICDI does not control the $\overline{\text{TRST}}$ (test reset) signal. This reset function is implemented as a command over JTAG/SWD, so this signal is not necessary.

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

Products		Applications	
Amplifiers	amplifier.ti.com	Audio	www.ti.com/audio
Data Converters	dataconverter.ti.com	Automotive	www.ti.com/automotive
DLP® Products	www.dlp.com	Communications and Telecom	www.ti.com/communications
DSP	dsp.ti.com	Computers and Peripherals	www.ti.com/computers
Clocks and Timers	www.ti.com/clocks	Consumer Electronics	www.ti.com/consumer-apps
Interface	interface.ti.com	Energy	www.ti.com/energy
Logic	logic.ti.com	Industrial	www.ti.com/industrial
Power Mgmt	power.ti.com	Medical	www.ti.com/medical
Microcontrollers	microcontroller.ti.com	Security	www.ti.com/security
RFID	www.ti-rfid.com	Space, Avionics & Defense	www.ti.com/space-avionics-defense
RF/IF and ZigBee® Solutions	www.ti.com/lprf	Video and Imaging	www.ti.com/video
		Wireless	www.ti.com/wireless-apps