

UM10957

PN7462AU Door Access User Manual

Rev. 1.1 — 13 September 2016
357911

User manual
COMPANY PUBLIC

Document information

Info	Content
Keywords	Door Access, HSU, SAM, MIFARE DESFire EV1, Classic
Abstract	This document serves as a User Manual for Door Access Demo Application



Revision history

Rev	Date	Description
1.1	20160913	Figures updated
1.0	20160308	First release

Contact information

For more information, please visit: <http://www.nxp.com>

1. Introduction

This document describes “Door Access application” and shows how PN7462AU Customer Demo board can be used in the door access management.

Two types of Door Access examples are available and explained here:

- Export controlled version,
- Non Export Controlled version

1.1 Door Access Application – Non Export Controlled version

In this version of the application a MIFARE Classic card is used for the authentication and for data exchange the contactless interface is used.

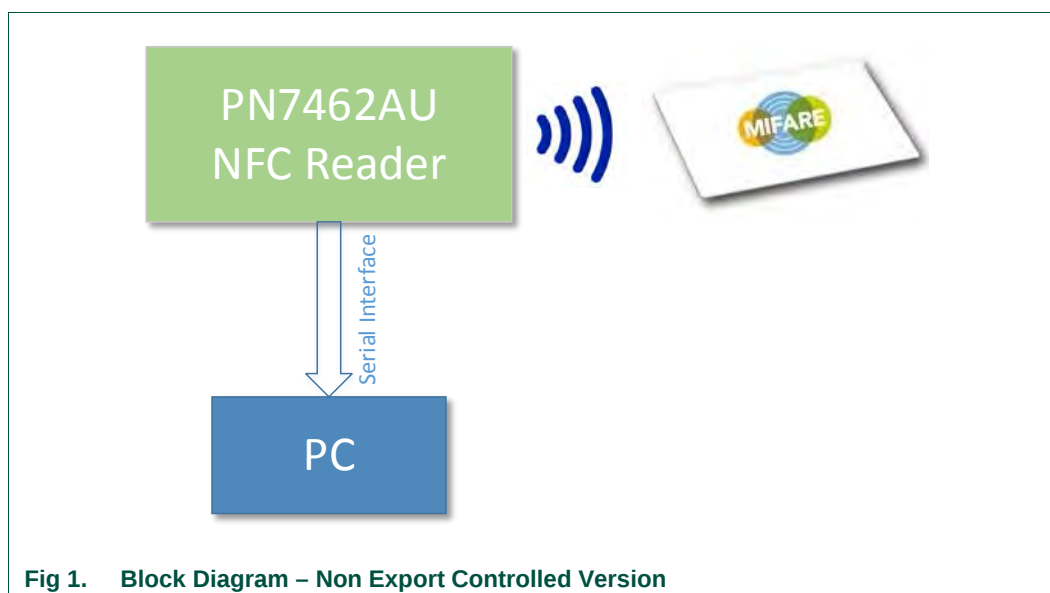


Fig 1. Block Diagram – Non Export Controlled Version

The application is running a NFC polling loop and goes to standby mode after each polling loop in case no CL card is detected by the RF field of the reader. The polling loop is implemented for Type A, B, F, ISO15693 and ISO 1800-P3M3. The application prints out the detected type of the card and UID if available. In case the NFC device is detected, the application sends a NDEF message containing the NXP webpage address.

After each polling loop the application goes to standby mode and remains for 500 ms. A timer is used as a wakeup source from standby. This process continues until a card is detected by the RF field of the reader. If a card is detected, the card type with its UID is sent via HSU and will be printed on the PC console.

In case a MIFARE Classic card is detected, application tries to authenticate the card using the default MIFARE key. If the authentication is successful a block of data is read from the card. The type of the card, UID and data are sent via HSU and printed on the PC console.

LEDs (Table 1) are used to indicate status or activity flow, like card detection, authentication pass/ fail, reading data pass/ fail. The application is using four LEDs on the demo board (green, yellow, red and blue).

Table 1. LEDs status specification

	LED	
CL card detected	Yellow	
card authenticated	Yellow + green	
Card authentication failed	Yellow + red	
Transaction successful completed	Yellow + green blinking	 blinking 3x
Transaction failed	Yellow + red blinking	 blinking 3x
Polling	all 4 LEDs blink circular	


The reader can detect Type A/B, Felica, ISO15693 and ISO18000-3M3 cards.

P2P functionality is integrated in the Non Export controlled version. When a NFC enabled phone is detected from the RF field as an active or passive target the LLCP SNEP will be activated and NDEF message will be sent to the mobile device.

If LPCD (Low Power Card Detection) is enabled, the reader checks during the wakeup time the presence of a card and enters the card detected mode when a card is present & repeats the cycle. If no card is present it goes back to standby mode. LPCD is enabled by default.

1.2 Door Access Application – Export Controlled version

This version of the application is using a MIFARE DESFire EV1 card for the authentication, data exchange is done over contactless interface and software key store or SAM (Secure Access Module) key store is used for storing the authentication key. By default the software key store is enabled. The user can use the SAM key store by enabling a Macro as explained in the section 3.5. SAM is a key storage element and it should be inserted in the CT main.

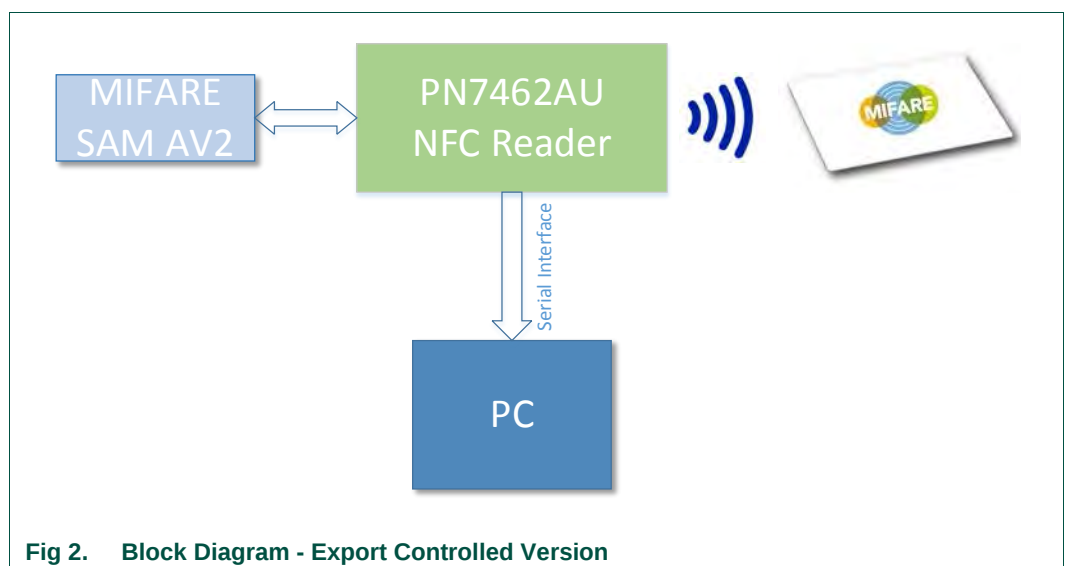

On power up, NFC Reader starts polling for (PICC) cards (Type A, B or F, ISO15693, ISO18000-3M3) and if no card is present, the reader goes to standby mode. Timer is used as a wakeup source from standby - timer periodically every 500 ms. This process continues until a card is detected by the RF field of the reader. If a card is detected, the card type with its UID is sent via HSU & this is printed on the PC console

If a MIFARE DESFire EV1 card is detected, the reader tries to select a pre written custom application on the card. It tries to authenticate the card using the key stored in SAM. If SAM is not present, then software keys can be used for authentication. If authentication is successful a block of data will be read from the card. Type of the vcard, UID along with the data read is sent via HSU & this is printed on the PC console.

LEDs (Table 2) are used to indicate status or activity flow, like card detection, authentication pass/ fail, reading data pass/ fail. Application is using four LEDs on the demo board (green, yellow, red and blue).

Table 2. LEDs status specification

	LED	
CL card detected	Yellow	
card authenticated	Yellow + green	 + 
Card authentication failed	Yellow + red	 + 
card authenticated, using SAM	Yellow + blue + green	 +  + 
Card authentication failed, using SAM	Yellow + blue + red	 +  + 
Transaction successful completed	Yellow + green blinking	 +  blinking 3x
Transaction failed	Yellow + red blinking	 +  blinking 3x
Polling	all 4 LEDs blink circular	

Reader is capable to detect Type A/B, Felica, ISO15693, and ISO18000-3M3 cards.

If LPCD (Low Power Card Detection) is enabled, the reader checks during the wakeup time the presence of a card and enters the card detected mode when a card is present & repeats the cycle. If no card is present it goes back to standby mode. LPCD is enabled by default.

1.3 Development environment

To prepare the project and build the source code the components listed in the Table 3 are required.

Table 3. Development environment

Item	Version	Purpose
PN7462AU Customer Board	2.1	Engineering development board.
LPC-Link2	1.0	Stand-alone debug adapter
LPCXpresso IDE	8.0.0.526	Development IDE
LPCXpresso PN7462AU Plugin	com.nxp.pn7xxxx x.update-8.0.0- SNAPSHOT-150	Add PN7462AU reader to the LPCXpresso
USBToSerial Convertor		

Note

Installation procedure of the “LPCXpresso IDE” and “LPCXpresso PN7462AU Plugin” is described in the “UM10883 - PN7462AU Quick Start Guide - Customer Board” document. Latest LPCXPresso plugin is required.

1.4 Project download link

The source code of the Door Access application is part of a delivered “PN7462AU customer support package” and the project can be found in “.\PN7462AU Software” folder.

Note:

Export controlled version is available only by NXP Docstore. Docstore tool is online tool for sharing documents and data. Access to NXP Docstore is available only to customers with valid NDA.

1.5 Driver Installation for USB to serial converter

Windows 7 driver is required for USB to serial converter and it is part of the delivered “PN7462AU customer support package” and the driver can be found in “Drivers” folder.
www.nxp.com/external/prolific

2. Door Access Use Case – Non Export Controlled Version

This section describes in detail the setup procedure and execution environment required for Non-Export Controlled version of “Door Access Use Case application”.

This version of the application is using MIFARE Classic card for the authentication and data exchange is done over contactless interface.

2.1 Hardware Setup

For preparing the project and building the source code components listed in the Table 4 are required.

Table 4. Development environment

Item	Version	Purpose
PN7462AU Customer Board	2.1	Engineering development board.
LPC-Link2	1.0	Stand-alone debug adapter
USBToSerial converter		USB To Serial
Power adapter		Optional

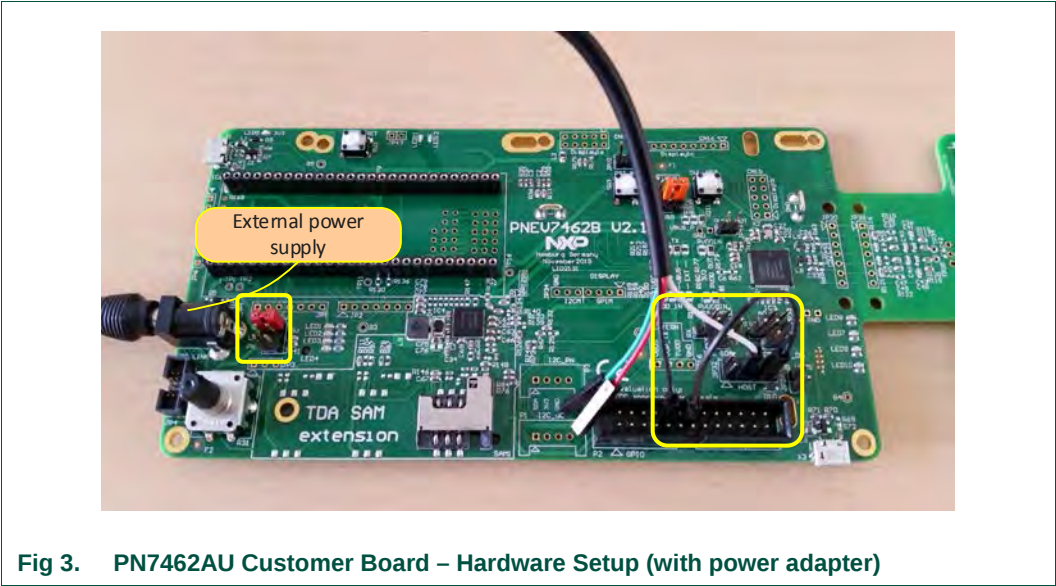


Fig 3. PN7462AU Customer Board – Hardware Setup (with power adapter)

Connection Details:

- 1) **DC Power Supply of 7.5 V**
Board is powered using the 7.5 V power adapter.
- 2) **Power supply selection jumper**
Jumper should be placed to connect JP41.1 -> JP41.2
This is to choose the external power supply to the board.

3) Connect Rx of 'USB - Serial converter' to ATX_B

Take a USB to Serial converter (USB to TTL to UART RS232 COM Cable Module Converter) as shown in the Fig 4.

One side of this cable has USB connector and other side has 4 wires.

- Vcc (Red wire)
- Tx (Green wire)
- Rx (White wire)
- Ground (Black wire)



Fig 4. USB to serial converter

Connect the RX line to the ATX_B (jp32.3) pin of the Customer Board.

4) Common Ground connection

Connect ground wire (Black wire) of the 'USB to Serial converter' to one of the common ground pins on the customer board as shown Fig 3.

5) CTS to ground connection

Connect ATX_D (JP32.7) pin of the Customer board to one of the common ground pins using a wire. This grounds the CTS line and this connection is necessary to print on the PC console using USB to serial converter.

2.1.1 Hardware setup without any external supply

To eliminate the use of external power supply, we can power the board using Vcc line (+5 V) of USB to serial converter. For this, Vcc line (Red wire) of USB to serial converter should be connected to JP41.2 of the board. (Remember to remove any external power supply selection jumper already placed on JP41).

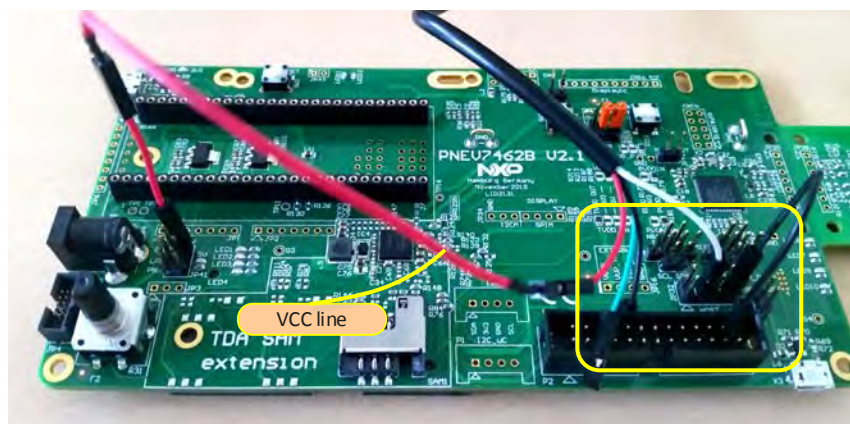


Fig 5. USB powered setup (setup without any external power supply)

2.1.2 LPC-Link2 Debug Adapter Connection

To flash the binary or to debug the code LPC-Link2 debug adapter should be used. It can be connected to JTag connector (JP4) of the customer board as shown in the figure below.

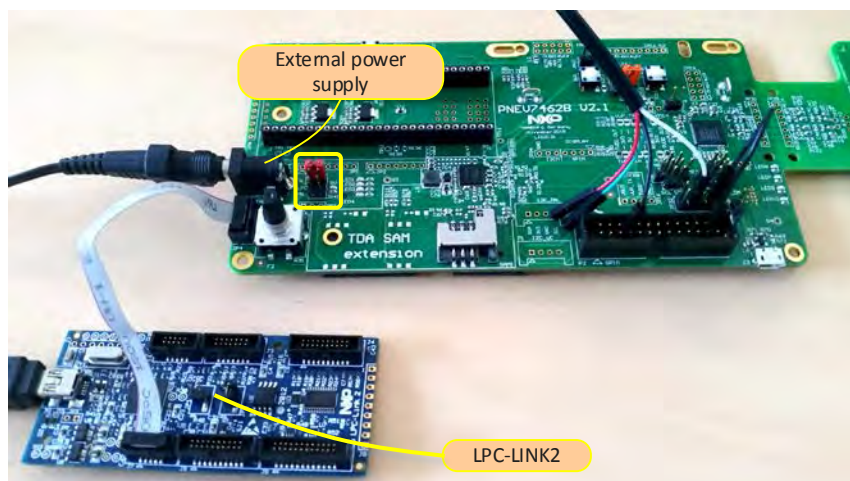


Fig 6. LPC Link2 connection for debugging and flashing

2.2 Importing project

After installation of the “PN7462AU FW & SW Examples Full Version” please follow steps described below.

The sequence of preparing the project is:

- Open the LPCXpresso IDE and select an empty workspace
- Select the option “Import project(s)” in Quick Panel

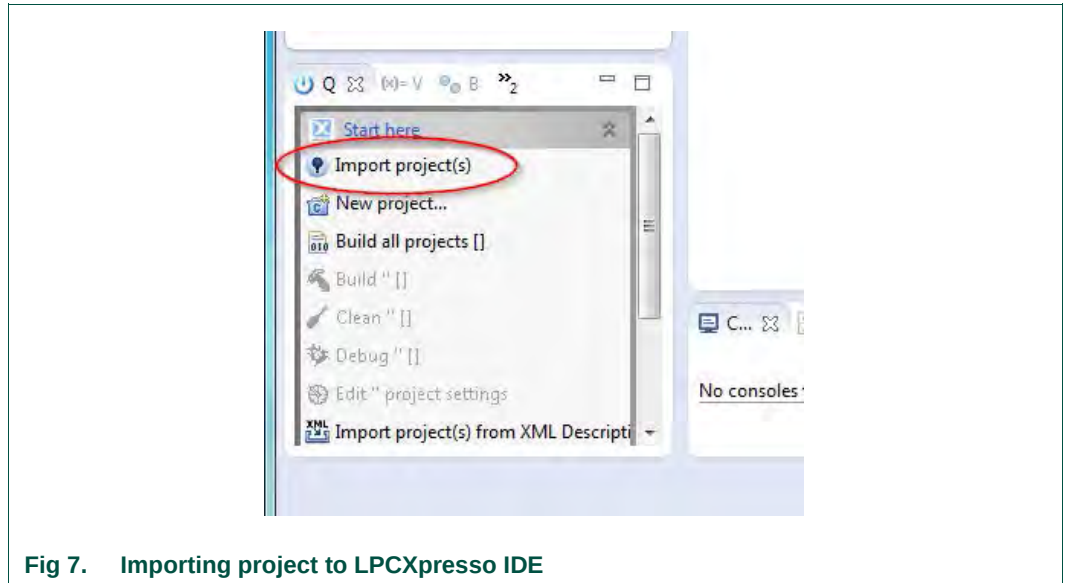


Fig 7. Importing project to LPCXpresso IDE

The dialog for project import opens.

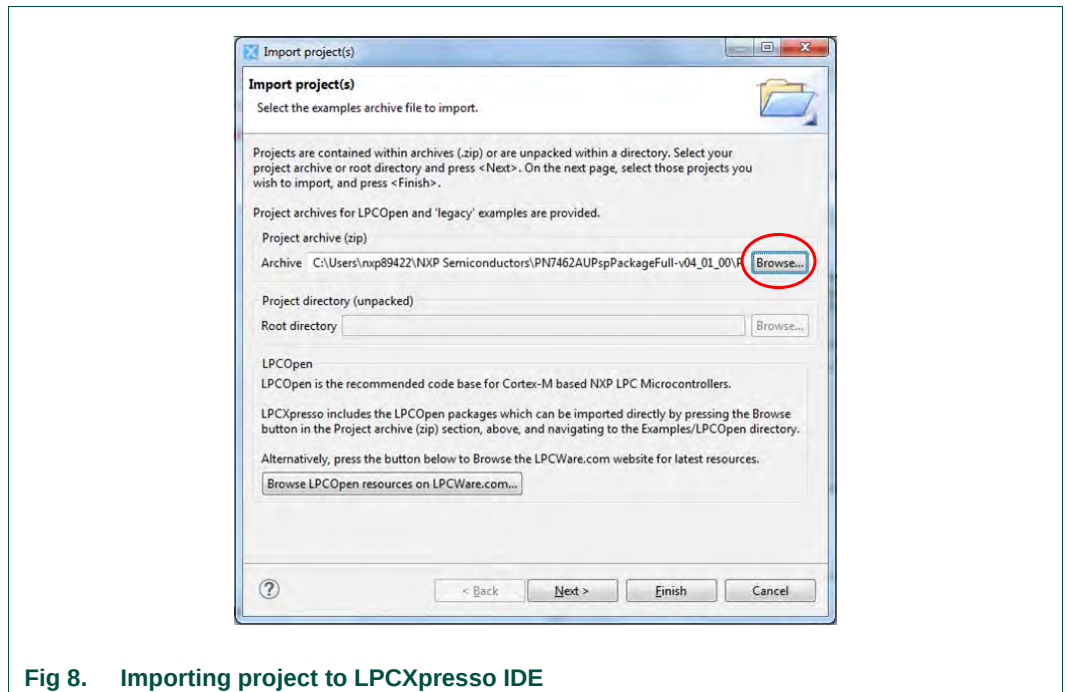


Fig 8. Importing project to LPCXpresso IDE

Browse to the project zip file “.IPN7462AU Software\PN7462AU-FW_v04.01.00.zip” and click “Next”.

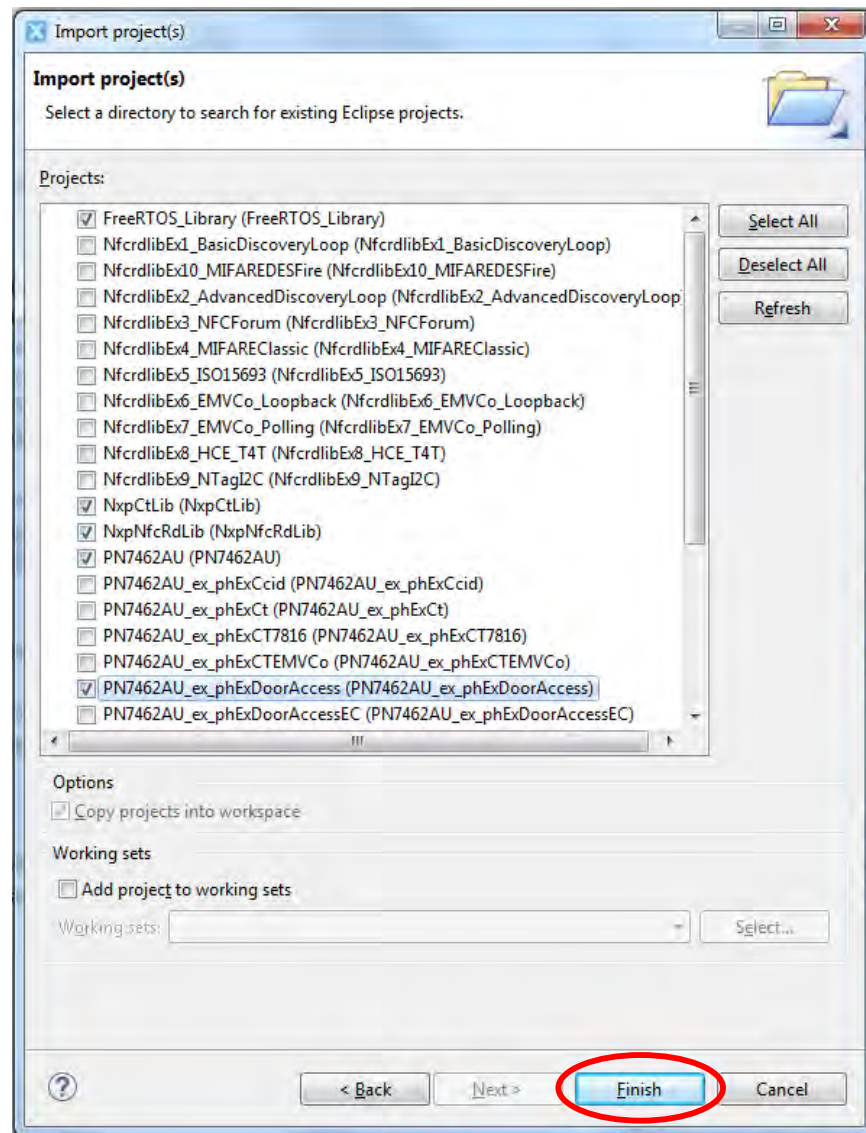


Fig 9. Select project

In the projects window all available projects in the package will be listed. To import only DoorAccess examples, it is mandatory to select next projects in the list:

- FreeRTOS_Library
- NxpCtLib
- NxpNfcRdLib
- PN7462AU
- PN7462AU_ex_phExDoorAccess

All projects in the list can be also selected and imported to the workspace.

Select appropriate projects and click Finish. Selected applications are going to be imported to the workspace.

2.3 Building project

Building projects in a workspace is a simple case of using the “Quickstart Panel” - ‘Build all projects’. Alternatively a single project can be selected in the “Project Explorer View” and built separately. Note that building a single project may also trigger a build of any associated library projects.

To build the project select appropriate project and press “Build” as shown in the figure below.

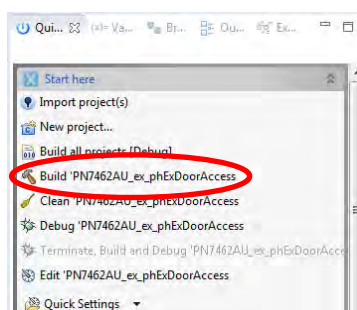


Fig 10. Build project

As a part of the build output, the binary for Flash file is created. This binary file can be used to update PN7462AU Flash via USB mass storage interface or by using Flash tool or debug in LPCXpresso IDE.

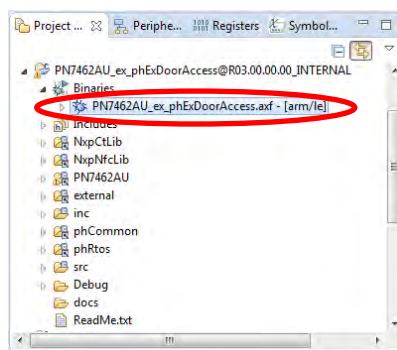


Fig 11. Build output - flash binary file

Note:

Due to legal issues, NXP cannot provide source code for the FreeRTOS and the

FreeRTOS source code should be integrated by users. Detailed description on how to integrate source code of the FreeRTOS to the project it is described in the “AN11784 PN7462AU How to integrate RTOS” document.


After successful integration of the FreeRTOS source code, project build should be compiled without errors as shown on the picture below.



Fig 12. Successful build

2.4 Activity flow

The activity flow of Non Exported version project is as shown below

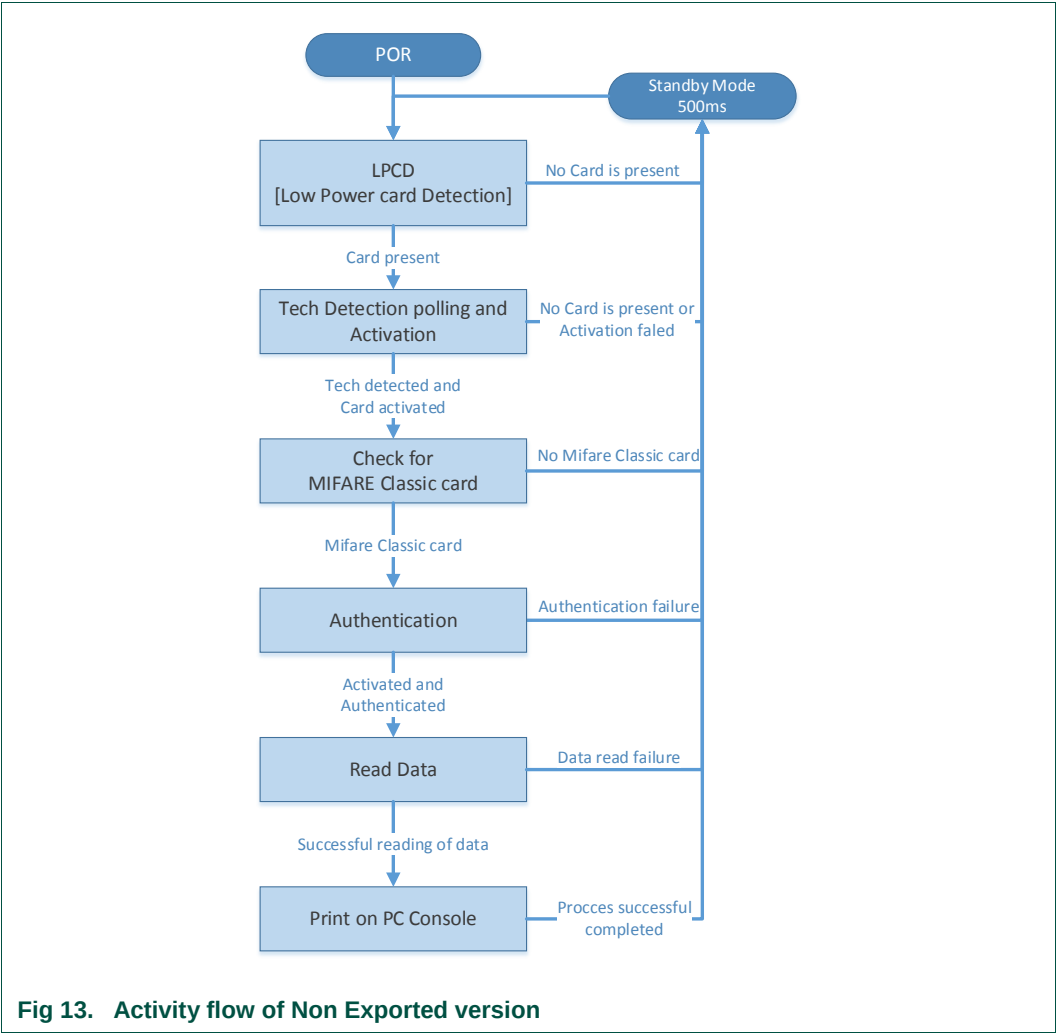

3. Door Access Use Case – Export Controlled Version

This section describes in detail the setup procedure and execution environment required for Export Controlled version of Door Access Use Case application.

This version of the application is using MIFARE DESFire EV1 card for the authentication, data exchange is done over contactless interface and software key store or SAM (Secure Access Module) key store is used for key storing.

3.1 Hardware Setup

For preparing the project and building the source code components listed in the Table 5 are required.

Table 5. Development environment

Item	Version	Purpose
PN7462AU Customer Board	2.1	Engineering development board.
LPC-Link2	1.0	Stand-alone debug adapter

Item	Version	Purpose
USBToSerial converter		USB To Serial
Power adapter		Optional
SAM card		MIFARE SAM AV2 in AV1 mode

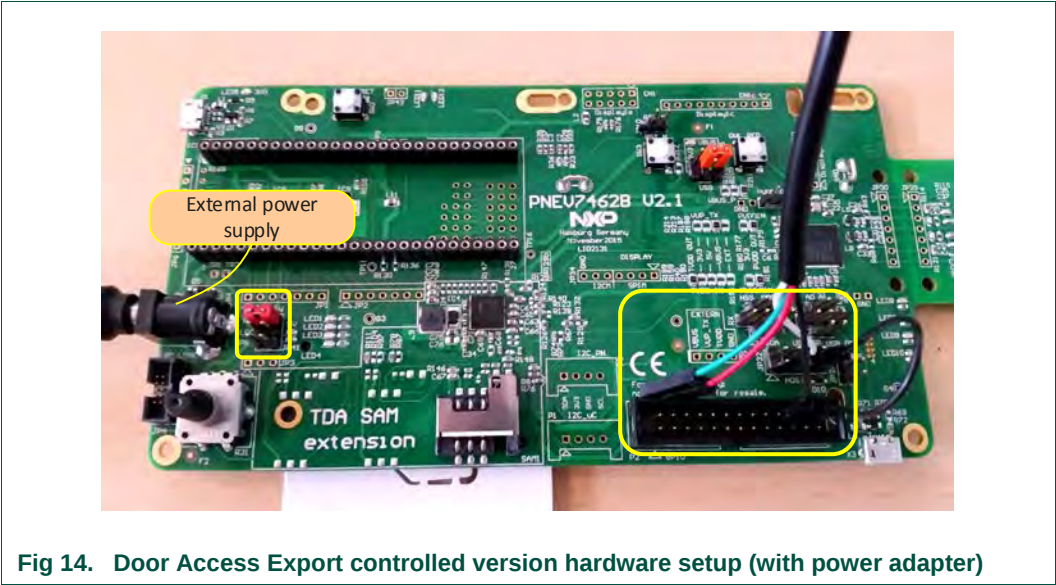


Fig 14. Door Access Export controlled version hardware setup (with power adapter)

Connection Details:

- 1) **DC Power Supply of 7.5 V**
Board is powered using the 7.5 V power adapter.
- 2) **Power supply selection jumper**
Jumper should be placed to connect JP41.1 -> JP41.2
This is to choose the external power supply to the board.
- 3) **SAM in main CT slot**
MIFARE SAM AV2 in AV1 mode must be insert in CT main slot.
- 4) **Connect Rx of 'USB - Serial converter' to ATX_B**
Take a USB to Serial converter (USB to TTL to UART RS232 COM Cable Module Converter) as shown in the figure.
One side of this cable has USB connector and other side has 4 wires.
 - Vcc (Red wire)
 - Tx (Green wire)
 - Rx (White wire)
 - Ground (Black wire)



Fig 15. USB to serial converter

Connect the RX line to the ATX_B (jp32.3) pin of the Customer Board.

5) Common Ground connection


Connect ground wire (Black wire) of the 'USB to Serial converter' to one of the common ground pins in the customer board as shown Fig 14.

6) CTS to ground connection

Connect ATX_D (JP32.7) pin of the Customer board to one of the common ground pins using a wire. This grounds the CTS line and this connection is necessary to print on the PC console using USB to serial converter.


3.1.1 Hardware setup without external supply

To eliminate the use of external power supply, we can power the board using Vcc line (+5 V) of USB to serial converter. For this, Vcc line (Red wire) of USB to serial converter should be connected to JP41.2 of the board. (Remember to remove any external power supply selection jumper already placed on JP41).

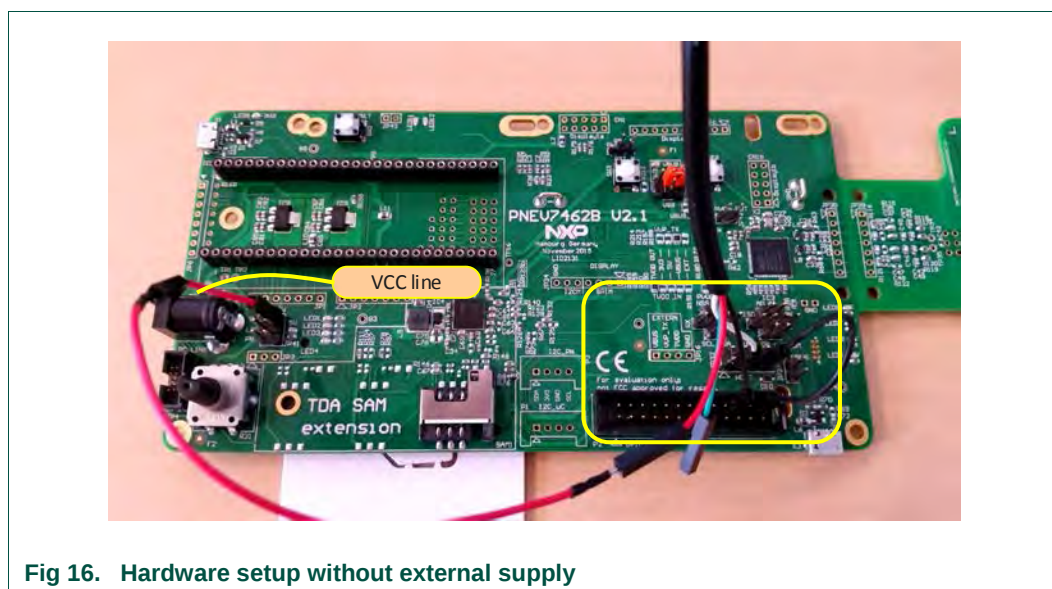

3.1.2 LPC-Link2 Debug Adapter Connection

To flash the binary or to debug the code LPC-Link2 debug adapter should be used. It can be connected to JTag connector (JP4) of the customer board as shown in the figure below.

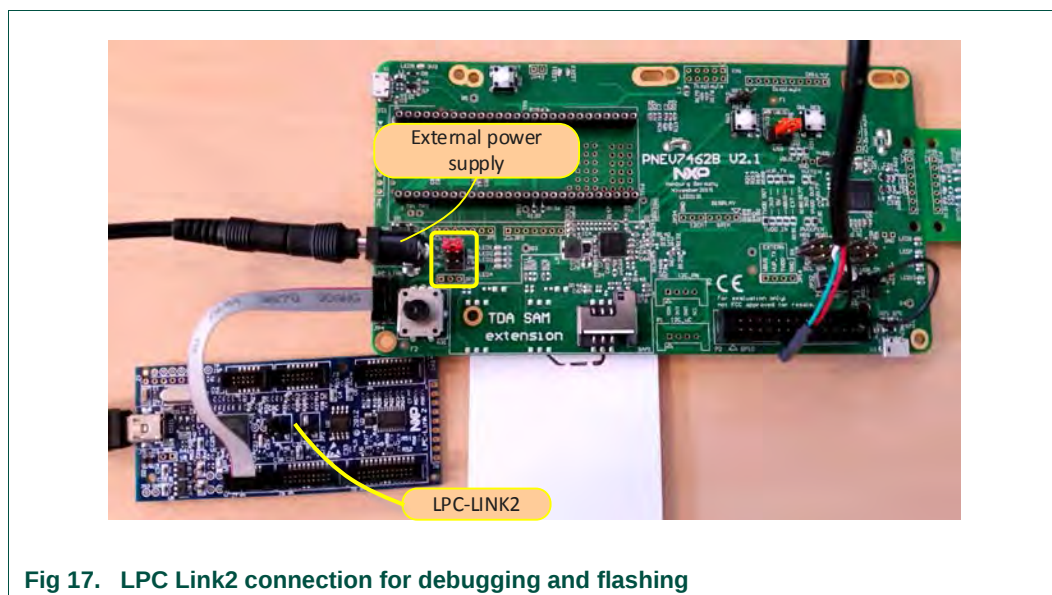

3.2 Importing project

After installation of the “PN7462AU FW & SW Examples Full Version” please follow steps described below.

The sequence of preparing the project is:

- Open the LPCXpresso IDE and select an empty workspace
- Select the option “Import project(s)” in Quick Panel

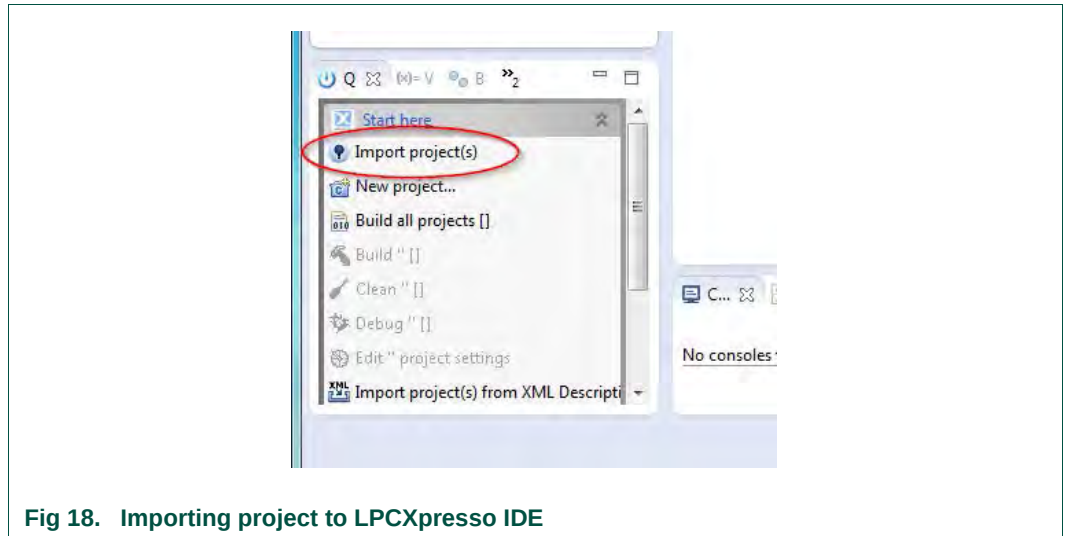


Fig 18. Importing project to LPCXpresso IDE

The dialog for project import opens.

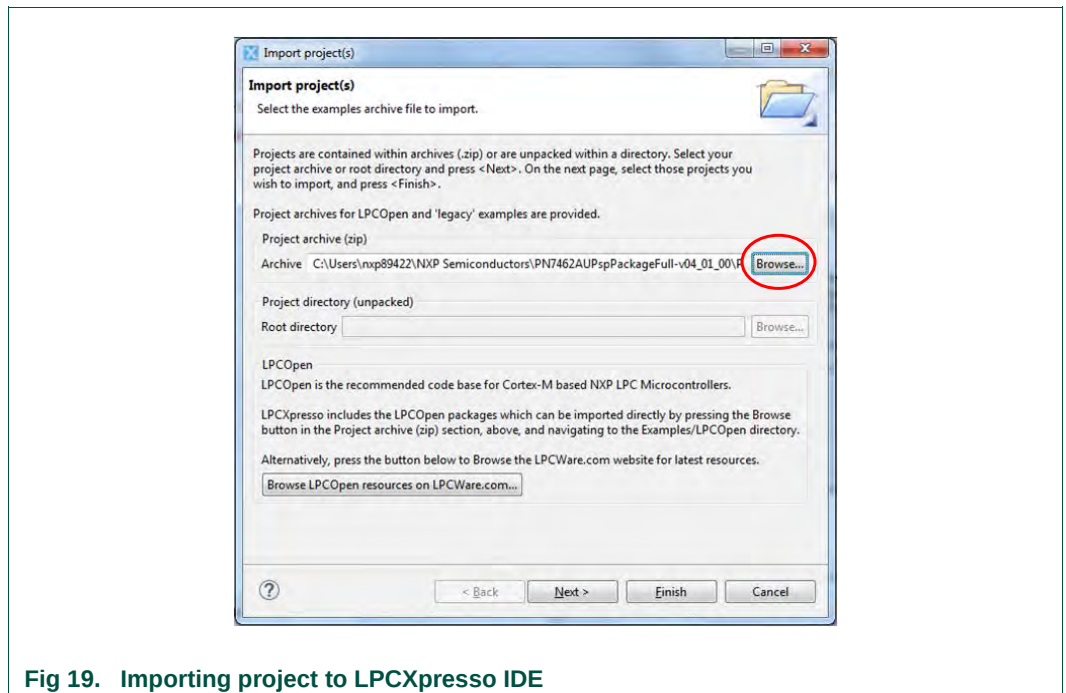


Fig 19. Importing Project to LPCXpresso IDE

Browse to the project zip file “.\\PN7462AU Software\\PN7462AU-FW_v04.01.00-Full.zip” and click “Next”.

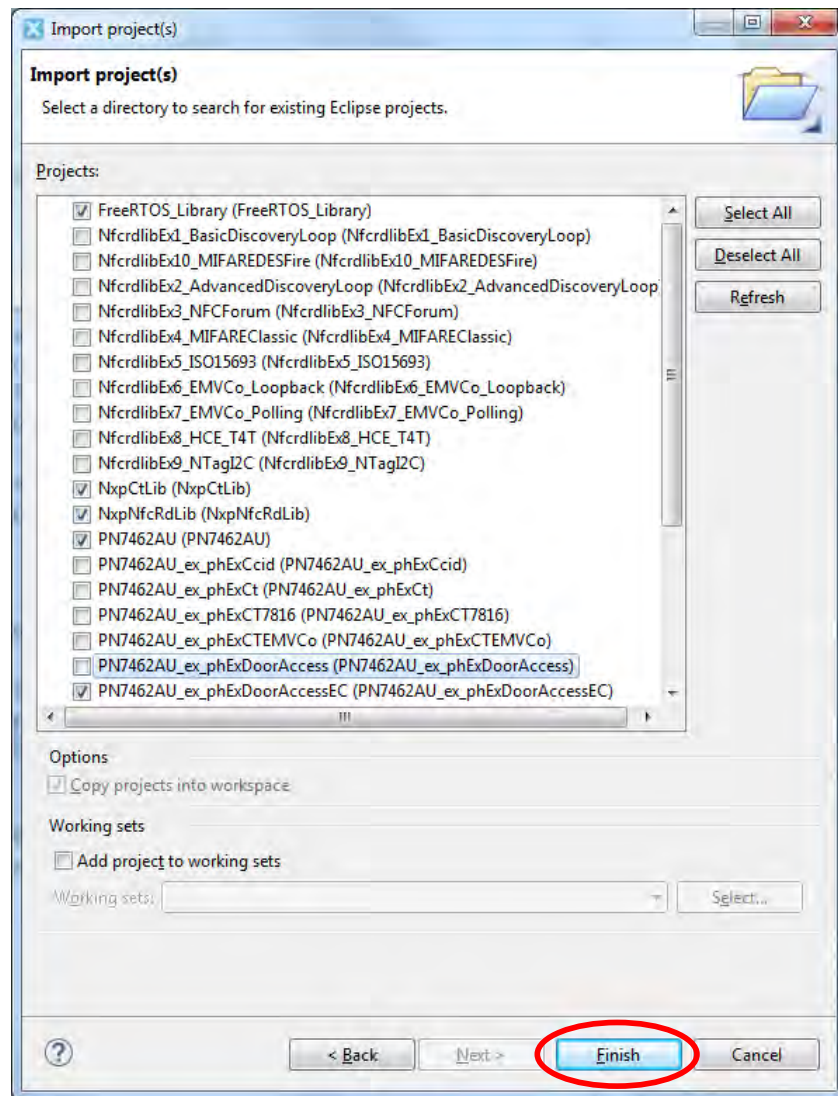


Fig 20. Select project

In the projects window all available projects in the package will be listed. To import only Door Access Export Controlled example, it is mandatory to select next projects in the list:

- FreeRTOS_Library
- NxpCtLib
- NxpNfcRdLib
- PN7462AU

- PN7462AU_ex_phExDoorAccessEC

All projects in the list can be also selected and imported to the workspace.

Select appropriate projects and click Finish. Selected applications are going to be imported to the workspace.

3.3 Building project

Building projects in a workspace is a simple case of using the “Quickstart Panel” - ‘Build all projects’. Alternatively a single project can be selected in the “Project Explorer View” and built separately. Note that building a single project may also trigger a build of any associated library projects.

To build the project select appropriate project and press “Build” as shown in the figure below.

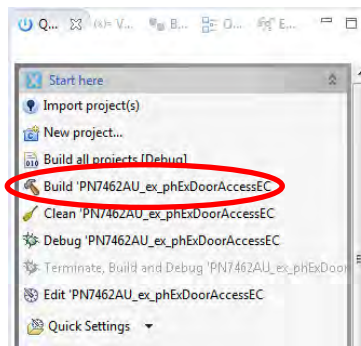


Fig 21. Build project

As a part of the build output, the binary for Flash file is created. This binary file can be used to update PN7462AU Flash via USB mass storage interface or by using Flash tool or debug in LPCXpresso IDE.

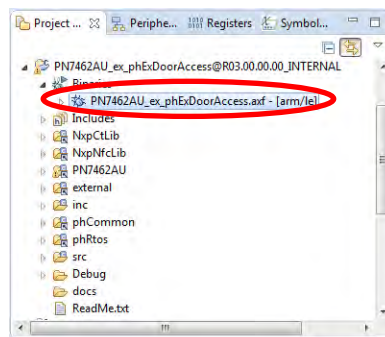


Fig 22. Build output - flash binary file

Note:

Due to legal issues, NXP cannot provide source code for the FreeRTOS and the FreeRTOS source code should be integrated by users. Detailed description on how to integrate source code of the FreeRTOS to the project it is described in the “AN11784 PN7462AU How to integrate RTOS” document.

After successful integration of the FreeRTOS source code, project build should be compiled without errors as shown on the picture below.

```

CDT Build Console [PN7462AU_ex_phExDoorAccess@R03.00.00.00_INTERNAL]

Finished building: D:\Projects\PN7462AU\Gate\RC03.00.00.00\RC03.00.00.00_INTERNAL\pnpCtLib\pnpCtLib\src\pnpCtLib.T1.c

Building target: PN7462AU_ex_phExDoorAccess@R03.00.00.00_INTERNAL.axf
Invoking: GNU linker
arm-none-eabi-gcc -nostdlib -L"D:\Projects\PN7462AU\Gate\RC03.00.00.00\RC03.00.00.00_INTERNAL\PN7462AU\pnpCtLib\pnpCtLib" -Xlinker -Map="PN7462AU_ex_phExDoorAccess@R03.00.00.00_INTERNAL.map" -o "PN7462AU_ex_phExDoorAccess@R03.00.00.00_INTERNAL.axf"
Finished building target: PN7462AU_ex_phExDoorAccess@R03.00.00.00_INTERNAL.axf

make --no-print-directory post-build
Performing post-build steps
arm-none-eabi-size "PN7462AU_ex_phExDoorAccess@R03.00.00.00_INTERNAL.axf"; arm-none-eabi-objcopy -v -O binary "PN7462AU_ex_phExDoorAccess@R03.00.00.00_INTERNAL.axf" "PN7462AU_ex_phExDoorAccess@R03.00.00.00_INTERNAL.bin"
110240 36 4576 122832 1df0 PN7462AU_ex_phExDoorAccess@R03.00.00.00_INTERNAL.axf
copy from "PN7462AU_ex_phExDoorAccess@R03.00.00.00_INTERNAL.axf" [elf32-little] to "PN7462AU_ex_phExDoorAccess@R03.00.00.00_INTERNAL.bin" [binary]

14:17:20 Build Finished (took 276.977ms)

```

3.4 Activity flow

Activity flow of Export controlled version without SAM and with software keys is shown as below

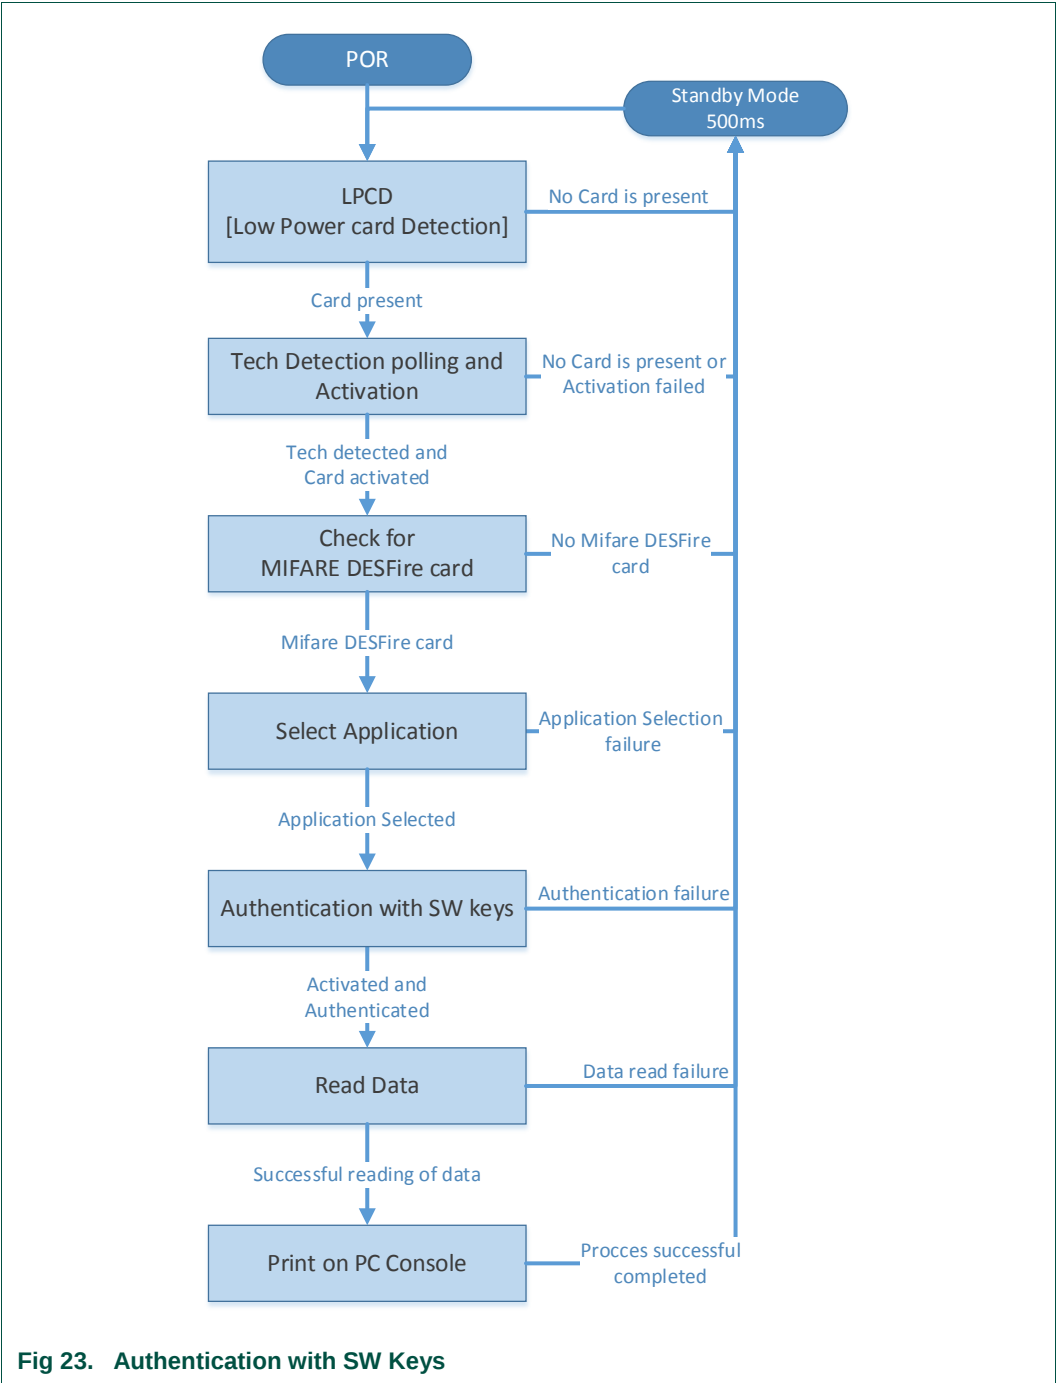


Fig 23. Authentication with SW Keys

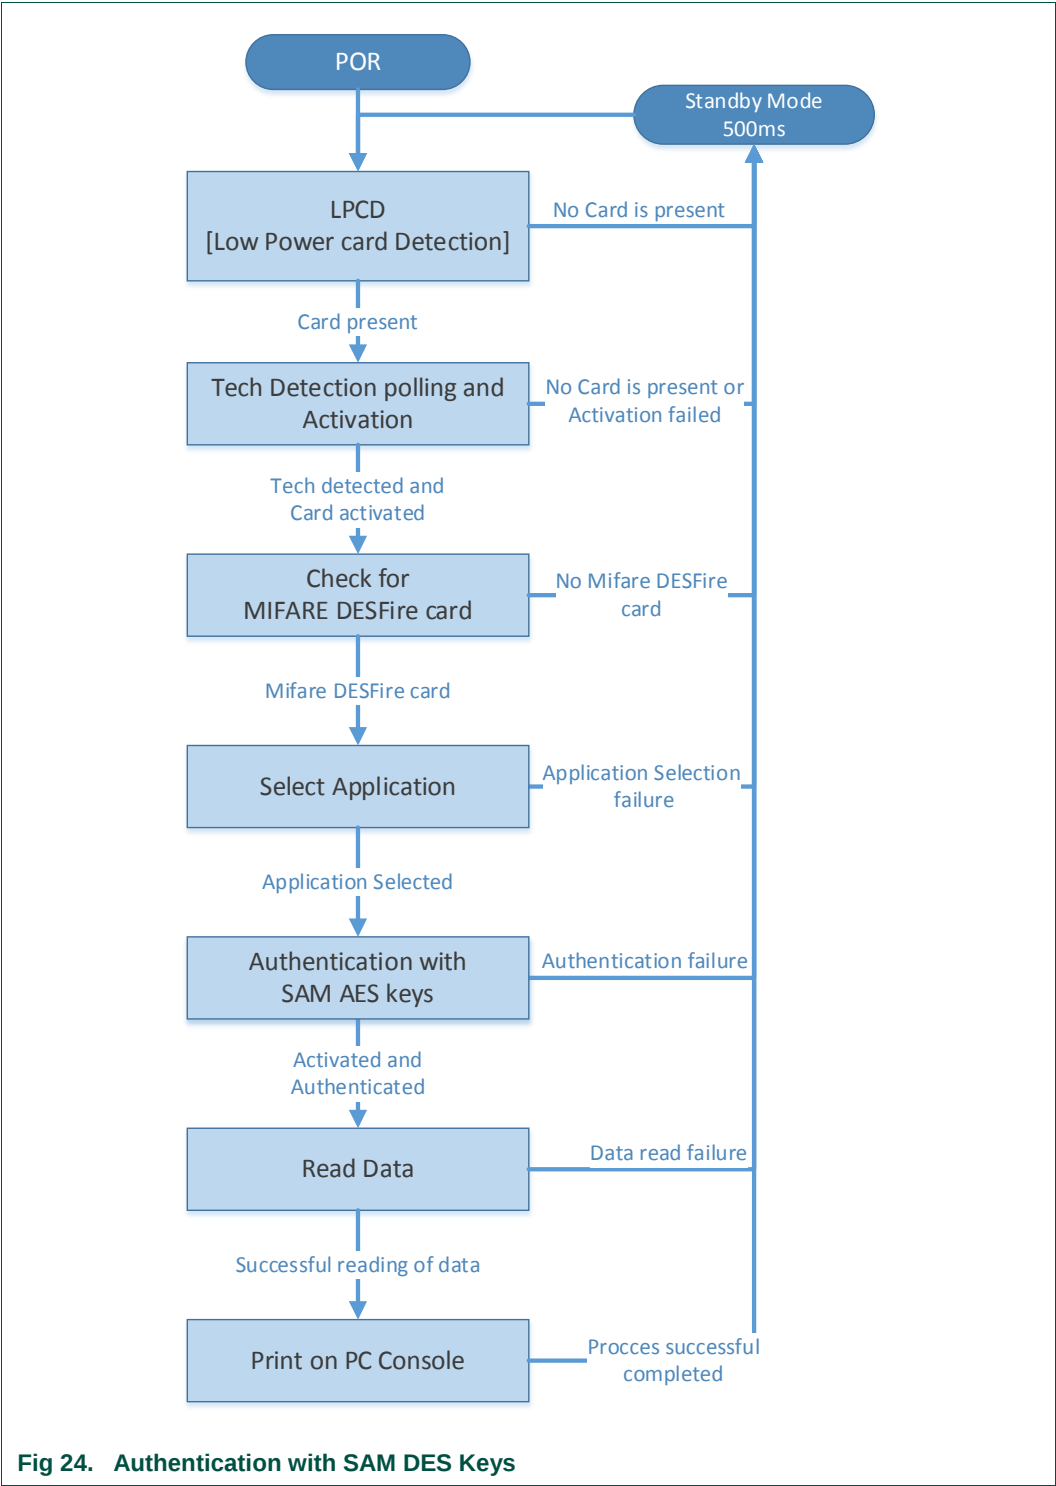


Fig 24. Authentication with SAM DES Keys

3.5 Enabling the use of SAM in Export Controlled version

In export controlled version, by default use of SAM is disabled and software keys are enabled. To enable SAM support, a macro “*PHFL_ENABLE_SAM_KEY_STORE*” should be added in the projects settings as shown below.

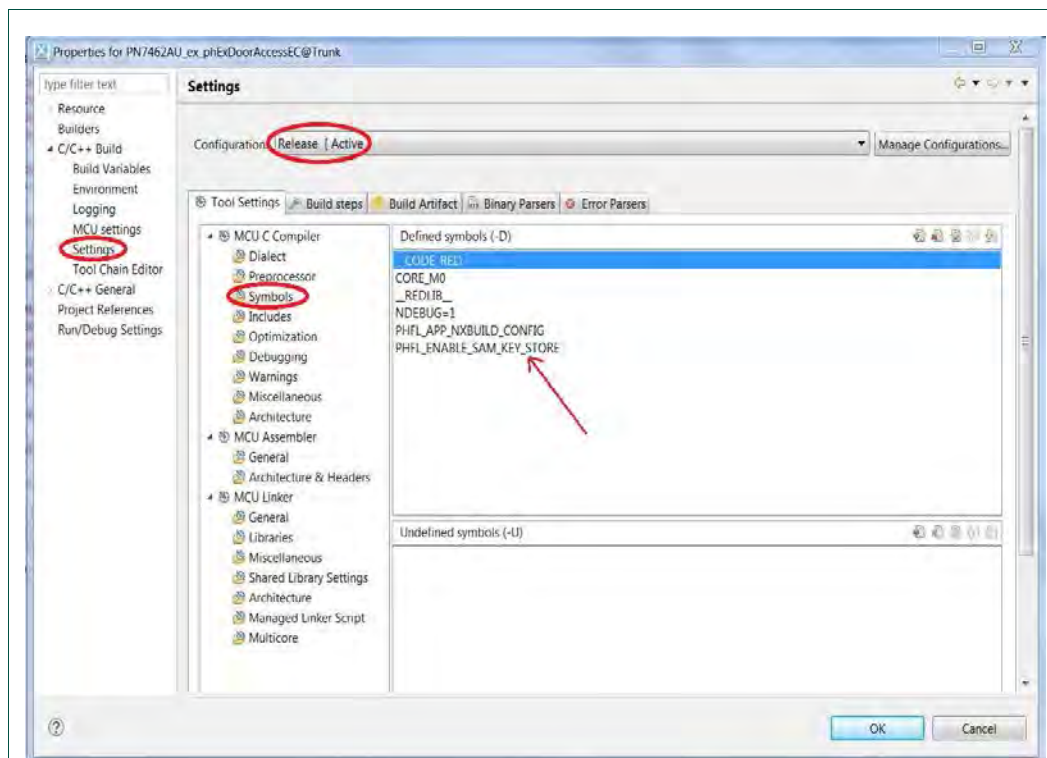


Fig 25. Enabling the use of SAM

4. Application Messages displayed in the PC console

Door Access application can send application messages through the HSU interface to the PC. Please check chapter 2.1 to see how to connect.

Type of the Card, UID and Data read will be displayed on the PC Console. This can be viewed by opening the corresponding COM port using any Serial COM tools like SSCOM.

Below figure shows the display of the prints for different cards on SSCOM tool in the case of Door Access Export Control. Here the COM port for USB to Serial connector is COM6.

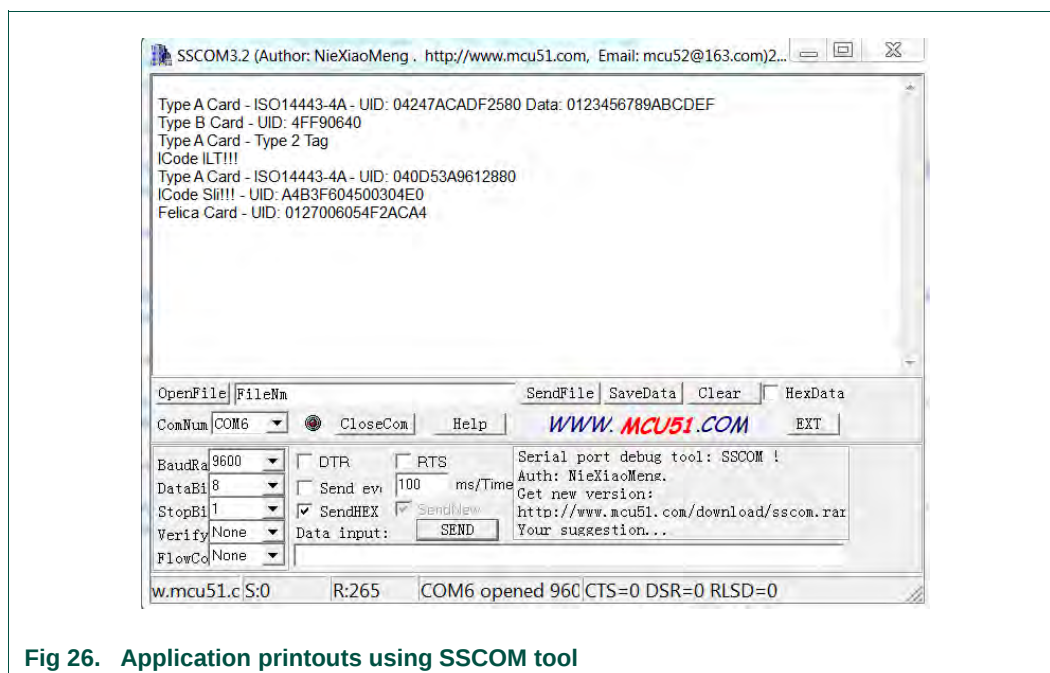


Fig 26. Application printouts using SSCOM tool

5. Enabling standby mode

By default standby mode is not enabled. It can be enabled by defining a symbol (MACRO) in the project properties:

PHFL_ENABLE_STANDBY

Standby time is set to 500 ms and LPCD also enabled.

Below figure shows how to enable Standby mode.

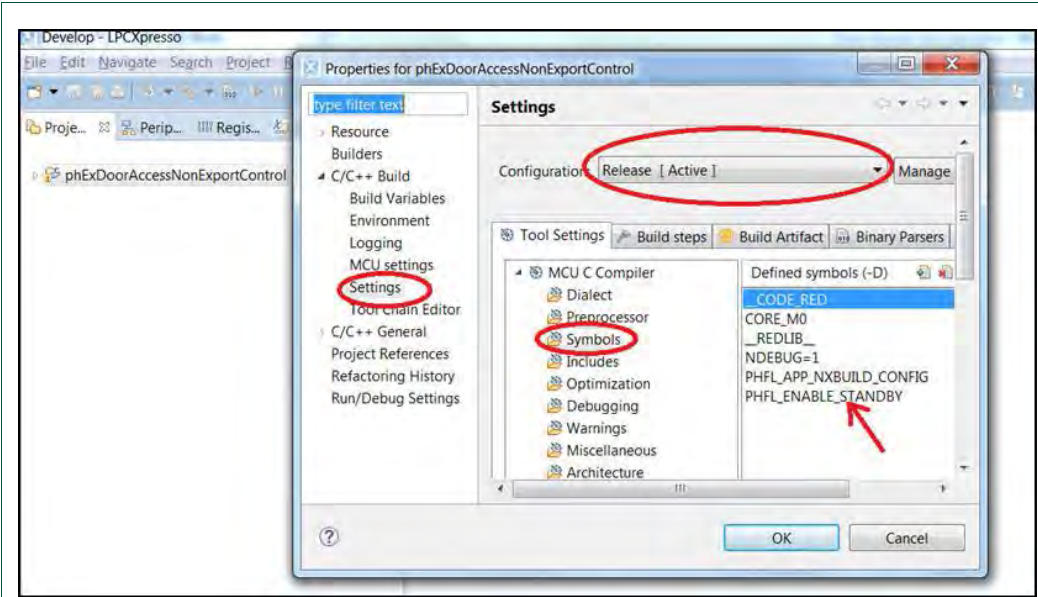


Fig 27. Project Properties – Enable Standby Mode

6. References

- [1] LPCXpresso webpage
<http://www.nxp.com/products/software-and-tools/software-development-tools/software-tools/lpc-microcontroller-utilities/lpcxpresso-ide-v8.2.2:LPCXPRESSO>
- [2] Windows drivers for USBToSerial Convertor
www.nxp.com/external/prolific

7. Legal information

7.1 Definitions

Draft — The document is a draft version only. The content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

7.2 Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms and conditions of commercial sale of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors accepts no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

Evaluation products — This product is provided on an "as is" and "with all faults" basis for evaluation purposes only. NXP Semiconductors, its affiliates and their suppliers expressly disclaim all warranties, whether express, implied or statutory, including but not limited to the implied warranties of non-infringement, merchantability and fitness for a particular purpose. The entire risk as to the quality, or arising out of the use or performance, of this product remains with customer.

In no event shall NXP Semiconductors, its affiliates or their suppliers be liable to customer for any special, indirect, consequential, punitive or incidental damages (including without limitation damages for loss of business, business interruption, loss of use, loss of data or information, and the like) arising out of the use of or inability to use the product, whether or not based on tort (including negligence), strict liability, breach of contract, breach of warranty or any other theory, even if advised of the possibility of such damages.

Notwithstanding any damages that customer might incur for any reason whatsoever (including without limitation, all damages referenced above and all direct or general damages), the entire liability of NXP Semiconductors, its affiliates and their suppliers and customer's exclusive remedy for all of the foregoing shall be limited to actual damages incurred by customer based on reasonable reliance up to the greater of the amount actually paid by customer for the product or five dollars (US\$5.00). The foregoing limitations, exclusions and disclaimers shall apply to the maximum extent permitted by applicable law, even if any remedy fails of its essential purpose.

7.3 Licenses

Purchase of NXP ICs with NFC technology

Purchase of an NXP Semiconductors IC that complies with one of the Near Field Communication (NFC) standards ISO/IEC 18092 and ISO/IEC 21481 does not convey an implied license under any patent right infringed by implementation of any of those standards. Purchase of NXP Semiconductors IC does not include a license to any NXP patent (or other IP right) covering combinations of those products with other products, whether hardware or software.

Purchase of NXP ICs with ISO 14443 type B functionality



This NXP Semiconductors IC is ISO/IEC 14443 Type B software enabled and is licensed under Innovatron's Contactless Card patents license for ISO/IEC 14443 B.

The license includes the right to use the IC in systems and/or end-user equipment.

RATP/Innovatron Technology

7.4 Trademarks

Notice: All referenced brands, product names, service names and trademarks are property of their respective owners.

MIFARE — is a trademark of NXP B.V.

1C bus logo — is a trademark of NXP B.V.

ICODE and I-CODE — are trademarks of NXP B.V.

8. List of figures

Fig 1.	Block Diagram – Non Export Controlled Version	3
Fig 2.	Block Diagram - Export Controlled Version.....	4
Fig 3.	PN7462AU Customer Board – Hardware Setup (with power adapter)	7
Fig 4.	USB to serial converter	8
Fig 5.	USB powered setup (setup without any external power supply).....	9
Fig 6.	LPC Link2 connection for debugging and flashing	9
Fig 7.	Importing project to LPCXpresso IDE	10
Fig 8.	Importing project to LPCXpresso IDE	10
Fig 9.	Select project	11
Fig 10.	Build project	12
Fig 11.	Build output - flash binary file	12
Fig 12.	Successful build	13
Fig 13.	Activity flow of Non Exported version	14
Fig 14.	Door Access Export controlled version hardware setup (with power adapter).....	15
Fig 15.	USB to serial converter	16
Fig 16.	Hardware setup without external supply	17
Fig 17.	LPC Link2 connection for debugging and flashing	17
Fig 18.	Importing project to LPCXpresso IDE	18
Fig 19.	Importing project to LPCXpresso IDE	18
Fig 20.	Select project	19
Fig 21.	Build project	20
Fig 22.	Build output - flash binary file	20
Fig 23.	Authentication with SW Keys	22
Fig 24.	Authentication with SAM DES Keys.....	23
Fig 25.	Enabling the use of SAM	24
Fig 26.	Application printouts using SSCOM tool	25
Fig 27.	Project Properties – Enable Standby Mode	26

9. List of tables

Table 1. LEDs status specification4

Table 2. LEDs status specification5

Table 3. Development environment5

Table 4. Development environment7

Table 5. Development environment14

10. Contents

1.	Introduction	3	8.	List of figures.....	29
1.1	Door Access Application – Non Export Controlled version	3	9.	List of tables	30
1.2	Door Access Application – Export Controlled version	4	10.	Contents	31
1.3	Development environment	5			
1.4	Project download link	6			
1.5	Driver Installation for USB to serial converter.....	6			
2.	Door Access Use Case – Non Export Controlled Version	7			
2.1	Hardware Setup	7			
2.1.1	Hardware setup without any external supply	8			
2.1.2	LPC-Link2 Debug Adapter Connection	9			
2.2	Importing project	9			
2.3	Building project.....	12			
2.4	Activity flow	13			
3.	Door Access Use Case – Export Controlled Version	14			
3.1	Hardware Setup	14			
3.1.1	Hardware setup without external supply	16			
3.1.2	LPC-Link2 Debug Adapter Connection	17			
3.2	Importing project	18			
3.3	Building project.....	20			
3.4	Activity flow	21			
3.5	Enabling the use of SAM in Export Controlled version	24			
4.	Application Messages displayed in the PC console.....	25			
5.	Enabling standby mode	25			
6.	References	27			
7.	Legal information	28			
7.1	Definitions	28			
7.2	Disclaimers.....	28			
7.3	Licenses.....	28			
7.4	Trademarks.....	28			

Please be aware that important notices concerning this document and the product(s) described herein, have been included in the section 'Legal information'.