

AS3911

NFC Initiator / HF Reader IC

General Description

The AS3911 is a highly integrated NFC Initiator / HF Reader IC. It includes the analog front end (AFE) and a highly integrated data framing system for ISO 18092 (NFCIP-1) initiator, ISO 18092 (NFCIP-1) active target, ISO 14443 A and B reader (including high bit rates) and FeliCa™ reader. Implementation of other standard and custom protocols is possible through using the AFE and implementing framing in the external microcontroller (Stream and Transparent modes).

Compared with concurrent NFC devices designed with the mobile phone in mind, the AS3911 is positioned perfectly for the infrastructure side of the NFC system, where users need optimal RF performance and flexibility combined with low power.

With *ams'* unique Automatic Antenna Tuning technology, the device is optimized for applications with directly driven antennas. The AS3911 is alone in the domain of HF Reader ICs in that it contains two differential low impedance (1Ω) antenna drivers.

The AS3911 includes several features, which make it incomparable for low power applications. It contains a low power capacitive sensor, which can be used to detect the presence of a card without switching on the reader field. Additionally, the presence of a card can also be detected by performing a measurement of amplitude or phase of signal on antenna LC tank and comparing it to stored reference. It also contains a low power RC oscillator and wake-up timer, which can be used to wake the system after a defined time period and check for the presence of a tag using one or more techniques of low power detection of card presence (capacitive, phase or amplitude).

The AS3911 is designed to operate from a wide power supply range from 2.4V to 5.5V; peripheral interface IO pins support power supply range from 1.65V to 5.5V.

For further understanding in regards to the contents of the datasheet, please refer to the Reference Guide located at the end of the document.

Key Benefits & Features

The benefits and features of AS3911, NFC Initiator / HF Reader IC are listed below:

Figure 1:
Added Value for AS3911

| Benefits | Features |
|--|--|
| NFC Active P2P support | ISO 18092 (NFCIP-1) Active P2P |
| | ISO14443 A, B and FeliCa (TM) |
| High data transfer with ASK VHBR and fast SPI | Support of VHBR (3.4 Mbit/s PICC to PCD framing, 6.8 Mbit/s AFE and PCD to PICC framing) |
| 6 μ A consumption at sensing every 100ms | Capacitive sensing - Wake-up |
| Antenna tuning on the fly | Automatic Antenna Tuning system providing tuning of antenna LC tank |
| Stable modulation index at ASK modulation | Automatic modulation index adjustment |
| No communication holes | AM and PM (I/Q) demodulator channels with automatic selection |
| High output power for EMVCo readers | Up to 1 W in case of differential output |
| High Rx sensitivity | User selectable and automatic gain control |
| Allows implementation of custom framings | Transparent and Stream modes to implement other standard and custom protocols |
| Multi Antenna support | Possibility of driving two antennas in single ended mode |
| Smaller Oscillator size | Oscillator input capable of operating with 13.56 MHz or 27.12 MHz crystal with fast start-up |
| Easy FIFO handling | 10 M bit SPI with 96 bytes FIFO |
| | Wide supply voltage range from 2.4 V to 5.5 V |
| Fits Temperature requirements for various applications | Wide temperature range: -40°C to 125°C |
| Small outline, good cooling through exposed pad | QFN 5x5 LD32 package |

Applications


The AS3911 is suitable for a wide range of applications including:

- EMV Payment
- Access Control
- NFC Infrastructure
- Ticketing

Block Diagram

The functional blocks of this device for reference are shown below:

Figure 2:
AS3911 Block Diagram

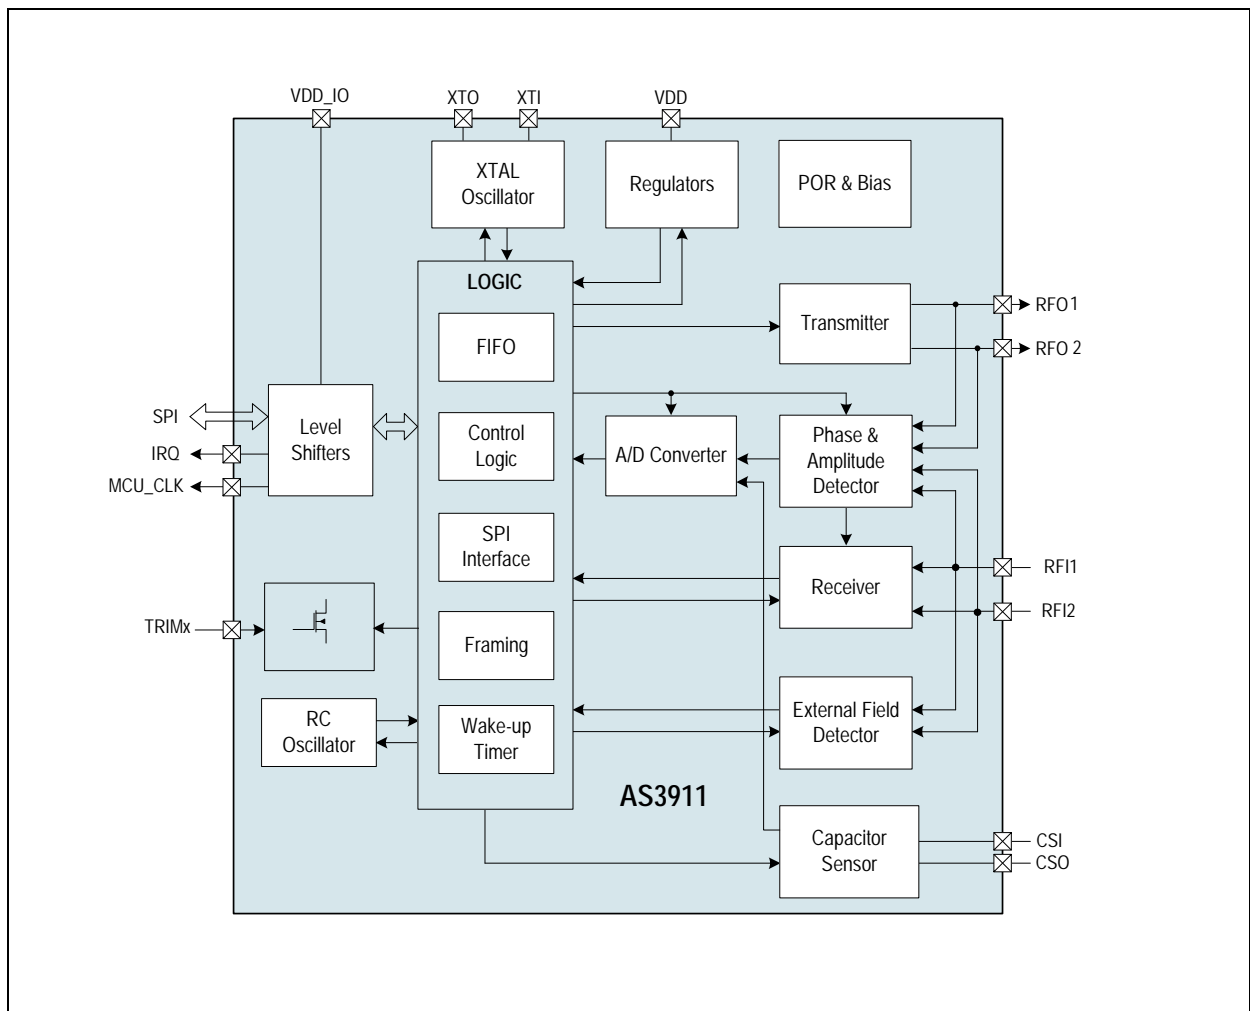

Pin Assignment

The AS3911 pin assignments are described below.

Figure 3:
Pin Diagram

AS3911 Pin Assignment: This figure shows the pin assignment and location viewed from top.

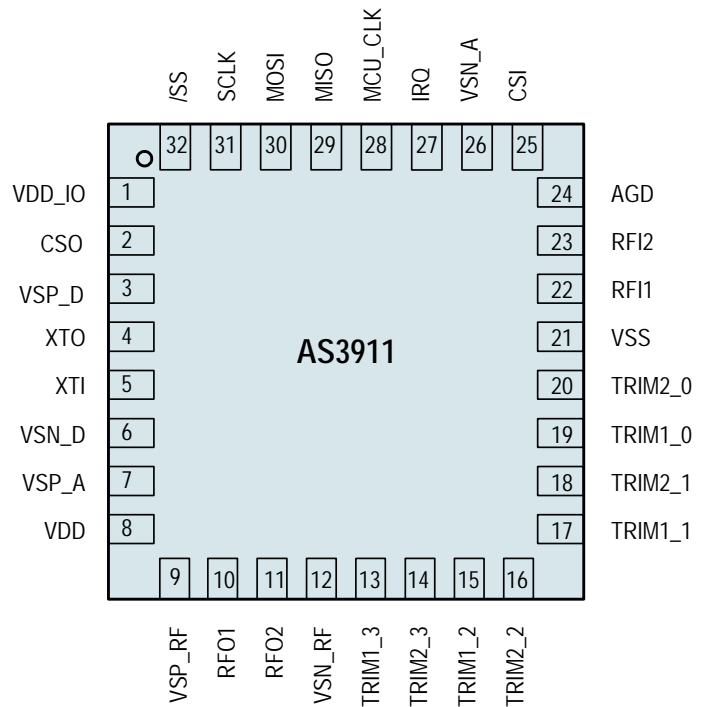


Figure 4:
Pin Description

| Pin Number | Pin Name | Pin Type | Description |
|------------|--------------------------|------------------------------|--|
| 32-pin QFN | | | |
| 1 | V_{DD_IO} | Supply pad | Positive supply for peripheral communication |
| 2 | CSO | Analog output | Capacitor sensor output |
| 3 | VSP_D | | Digital supply regulator output |
| 4 | XTO | | Xtal oscillator output |
| 5 | XTI | Analog input / Digital input | Xtal oscillator input |
| 6 | VSN_D | Supply pad | Digital ground |
| 7 | VSP_A | Analog output | Analog supply regulator output |
| 8 | V _{DD} | Supply pad | External positive supply |

| Pin Number | Pin Name | Pin Type | Description |
|------------|------------|---------------------------|--|
| 32-pin QFN | | | |
| 9 | VSP_RF | Analog output | Supply regulator output for antenna drivers |
| 10 | RFO1 | | Antenna driver output |
| 11 | RFO2 | | |
| 12 | VSN_RF | Supply pad | Ground of antenna drivers |
| 13 | TRIM1_3 | Analog input | Input to trim antenna resonant circuit |
| 14 | TRIM2_3 | | |
| 15 | TRIM1_2 | | |
| 16 | TRIM2_2 | | |
| 17 | TRIM1_1 | | |
| 18 | TRIM2_1 | | |
| 19 | TRIM1_0 | | |
| 20 | TRIM2_0 | | |
| 21 | VSS | Supply pad | Ground, die substrate potential |
| 22 | RFI1 | Analog input | Receiver input |
| 23 | RFI2 | | |
| 24 | AGD | Analog I/O | Analog reference voltage |
| 25 | CSI | Analog input | Capacitor sensor input |
| 26 | VSN_A | Supply pad | Analog ground |
| 27 | IRQ | Digital output | Interrupt request output |
| 28 | MCU_CLK | | Microcontroller clock output |
| 29 | MISO | Digital output / tristate | Serial Peripheral Interface data output |
| 30 | MOSI | Digital input | Serial Peripheral Interface data input |
| 31 | SCLK | | Serial Peripheral Interface clock |
| 32 | /SS | | Serial Peripheral Interface enable (active low) |
| # | VSS | Exposed Pad | Ground, die substrate potential, connect to VSS on PCB |

Note: Pins in **bold** have different functionality in comparison to the AS3910.

Absolute Maximum Ratings

Stresses beyond those listed under “Absolute Maximum Ratings” may cause permanent damage to the device. These are stress ratings only. Functional operation of the device at these or any other conditions beyond those indicated under “Operating Conditions” is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

Figure 5:
Absolute Maximum Ratings

| Symbol | Parameter | Min | Max | Unit | Comments |
|--|---|------|------|------|--|
| Electrical Parameters | | | | | |
| V_{DD} | DC supply voltage | -0.5 | 6.0 | V | |
| V_{DD_IO} | DC_IO supply voltage | -0.5 | 6.0 | V | |
| V_{INTRIM} | Input pin voltage TRIM pins | -0.5 | 30.0 | V | |
| V_{IN} | Input pin voltage for peripheral communication pins | -0.5 | 6.5 | V | |
| V_{INA} | Input pin voltage for analog pins | -0.5 | 6.0 | V | |
| I_{scr} | Input current (latch-up immunity) | -100 | 100 | mA | Norm: JEDEC 78 |
| I_{outmax} | Drive capability of output driver | 0 | 250 | mA | |
| Electrostatic Discharge | | | | | |
| ESD | Electrostatic discharge | ±2 | | kV | Norm: MIL 883 E method 3015 (Human Body Model) |
| Continuous Power Dissipation | | | | | |
| P_t | Total power dissipation (all supplies and outputs) | | 300 | mW | |
| Temperature Ranges and Storage Conditions | | | | | |
| T_{strg} | Storage temperature | -55 | 125 | °C | |

| Symbol | Parameter | Min | Max | Unit | Comments |
|---------------------------|--------------------------|------|-----|------|--|
| T_{body} | Package body temperature | | 260 | °C | Norm: IPC/JEDEC J-STD-020. <i>The reflow peak soldering temperature (body temperature) is specified according IPC/JEDEC J-STD-020 "Moisture/Reflow Sensitivity Classification for Non-hermetic Solid State Surface Mount Devices."</i> The lead finish for Pb-free leaded packages is matte tin (100% Sn). |
| | Humidity non-condensing | 5 | 85 | % | |
| MSL | Moisture Sensitive Level | 3 | | | Represents a max. floor life time of 168 _h |
| Thermal Resistance | | | | | |
| θ_{ja} | Theta ja | 36.4 | | C/W | @ 85°C room temperature |

Electrical Characteristics

All limits are guaranteed. The parameters with min and max values are guaranteed with production tests or SQC (Statistical Quality Control) methods.

Operating Conditions

All defined tolerances for external components in this specification need to be assured over the whole operation condition range and also over lifetime.

Figure 6:
Operating Conditions

| Symbol | Parameter | Min | Max | Unit | Comments |
|--------------|---|-----------|-----|----------|---|
| V_{DD} | Positive supply voltage | 2.4 | 5.5 | V | In case power supply is lower than 2.6V, PSSR cannot be improved using internal regulators (minimum regulated voltage is 2.4V) |
| V_{DD_IO} | Peripheral communication supply voltage | 1.65 | 5.5 | V | |
| VSS | Negative supply voltage | 0 | 0 | V | |
| T_{JUN} | Junction temperature | -40 | 125 | °C | |
| V_{RFI_A} | RFI input amplitude | 150 milli | 3 | V_{pp} | Minimum RFI input signal definition is meant for NFC receive mode. In HF reader mode and NFC transmit mode, the recommended signal level is $2.5V_{pp}$ |

DC/AC Characteristics for Digital Inputs and Outputs

CMOS Inputs:

Valid for input pins /SS, MOSI, and SCLK

Figure 7:
CMOS Inputs

| Symbol | Parameter | Min | Max | Unit |
|------------|--------------------------|--------------------|--------------------|------|
| V_{IH} | High level input voltage | $0.7 * V_{DD_IO}$ | | V |
| V_{IL} | Low level input voltage | | $0.3 * V_{DD_IO}$ | V |
| I_{LEAK} | Input leakage current | | 1 | µA |

CMOS Outputs:

Valid for output pins MISO, IRQ and MCU_CLK, $io_18=0$ (See "IO Configuration Register 2" on page 64).

Figure 8:
CMOS Outputs

| Symbol | Parameter | Conditions | Min | Type | Max | Unit |
|----------|-------------------------------|--|--------------------|------|--------------------|------------|
| V_{OH} | High level input voltage | $I_{SOURCE} = 1\text{mA}$ $I_{SINK} = 1\text{mA}$ | $0.9 * V_{DD_IO}$ | | | V |
| V_{OL} | Low level input voltage | | | | $0.1 * V_{DD_IO}$ | V |
| C_L | Capacitive load | | | | 50 | pF |
| R_O | Output Resistance | | | 250 | 500 | Ω |
| R_{PD} | Pull-down resistance pin MOSI | Pull-down can be enabled while MISO output is in tristate. The activation is controlled by register setting. | | 10 | | k Ω |

Electrical Specification

$V_{DD} = 3.3\text{V}$, Temperature 25°C unless noted otherwise.

3.3V supply mode, regulated voltages set to 3.4V, 27.12 MHz Xtal connected to XTO and XTI.

Figure 9:
Electrical Specification

| Symbol | Parameter | Min | Typ | Max | Unit | Comments |
|------------|---|-----|-----|-----|---------------|--|
| I_{PD} | Supply current in Power-down mode | | 0.7 | 2 | μA | Register 00 _h set to 0F _h (no clock on MCU_CLK), register 01 _h set to 80 _h (3V supply mode), register 02 _h set to 00 _h register 03 _h set to 08 _h , other registers in default state. |
| I_{NFCT} | Supply current in initial NFC Target mode | | 3.5 | 7 | μA | Register 00 _h set to 0F _h (no clock on MCU_CLK), register 01 _h set to 80 _h (3V supply mode), register 02 _h set to 00 _h register 03 _h set to 80 _h (enable NFC Target mode), other registers in default state. |

| Symbol | Parameter | Min | Typ | Max | Unit | Comments |
|----------|--|-----|-----|------|---------------|---|
| I_{WU} | Supply current in Wake-up mode | | 3.6 | 6 | μA | Register 00 _h set to 0F _h (no clock on MCU_CLK), register 01 _h set to 80 _h (3V supply mode), register 02 _h set to 04 _h (enable Wake-up mode), register 03 _h set to 08 _h , register 31 _h set to 08 _h (100ms timeout, IRQ at every timeout), other registers in default state. |
| I_{CS} | Capacitive sensor supply current | | 1.1 | 2 | mA | Register 00 _h set to 0F _h (no clock on MCU_CLK), register 01 _h set to 80 _h (3V supply mode), register 02 _h set to 00 _h , analog test mode 14, other registers in default state. |
| I_{RD} | Supply current in Ready mode | | 5.4 | 7.5 | mA | Register 00 _h set to 0F _h (no clock on MCU_CLK), register 01 _h set to C0 _h (3V supply mode, disable VSP_D), register 02 _h set to 80 _h , register 03 _h set to 08 _h , other registers in default state, short VSP_A and VSP_D. |
| I_{AL} | Supply current all active | | 8.7 | 12.5 | mA | Register 00 _h set to 0F _h , register 01 _h set to C0 _h (3V supply mode, disable VSP_D), register 02 _h set to E8 _h (one channel Rx, enable Tx), register 03 _h set to 08, register 0B _h set to 00, register 27 _h set to FF (all RFO segments disabled), other registers in default state, short VSP_A and VSP_D. |
| I_{LP} | Supply current all active, low power receiver mode | | 6.8 | 10 | mA | Register 00 _h set to 0F _h , register 01 _h set to C0 _h (3V supply mode, disable VSP_D), register 02 _h set to E8 _h (one channel Rx, enable Tx), register 03 _h set to 08, register 0B _h set to 80 (low power mode), register 27 _h set to FF (all RFO segments disabled), other registers in default state, short VSP_A and VSP_D. |

| Symbol | Parameter | Min | Typ | Max | Unit | Comments |
|-----------|--|------|------|------|--------------------------|--|
| R_{RFO} | RFO1 and RFO2 driver output resistance | | 0.6 | 1.8 | Ω | $I_{RFO} = 10 \text{ mA}$ The following measurement procedure which cancels resistance of measurement setup is used: <ul style="list-style-type: none"> All driver segments are switched on, resistance is measured, All driver segments except the MSB segment are switched on, resistance is measured, Difference between the two measurements is resistance of MSB segment, Resistance of MSB segment divided by two is the value of R_{RFO}. |
| V_{RFI} | RFI input sensitivity | | 0.5 | | mV_{rms} | $f_{\text{SUB}}=848 \text{ kHz}$, AM channel with peak detector input stage selected. |
| R_{RFI} | RFI input resistance | | 10 | 15 | $\text{k}\Omega$ | |
| V_{POR} | Power on Reset voltage | 1.2 | 1.65 | 2.0 | V | |
| V_{AGD} | AGD voltage | 1.4 | 1.5 | 1.6 | V | Register 00 _h set to 0F _h (no clock on MCU_CLK), register 01 _h set to C0 _h (3V supply mode, disable VSP_D), register 02 _h set to 80 _h , register 03 _h set to 08 _h , other registers in default state, short VSP_A and VSP_D. |
| V_{REG} | Regulated voltage | 2.85 | 3.0 | 3.15 | V | Manual regulator mode, regulated voltage set to 3.0V, measured on pin VSP_RF: register 00 _h set to 0F _h , register 01 _h set to 80 _h (3V supply mode), register 02 _h set to E8 _h (one channel Rx, enable Tx), register 2A _h set to D8 _h . |
| T_{OSC} | Oscillator start-up time | | 0.7 | | ms | 13.56MHz or 27.12MHz crystal $R_S = 50 \Omega$ max, load capacitance according to crystal specification, IRQ is issued once the oscillator frequency is stable. |

Detailed Description

The circuit diagram in [Figure 2](#) shows the AS3911 building blocks.

Figure 10:
Minimum Configuration with Single Sided Antenna Driving Including EMC Filter


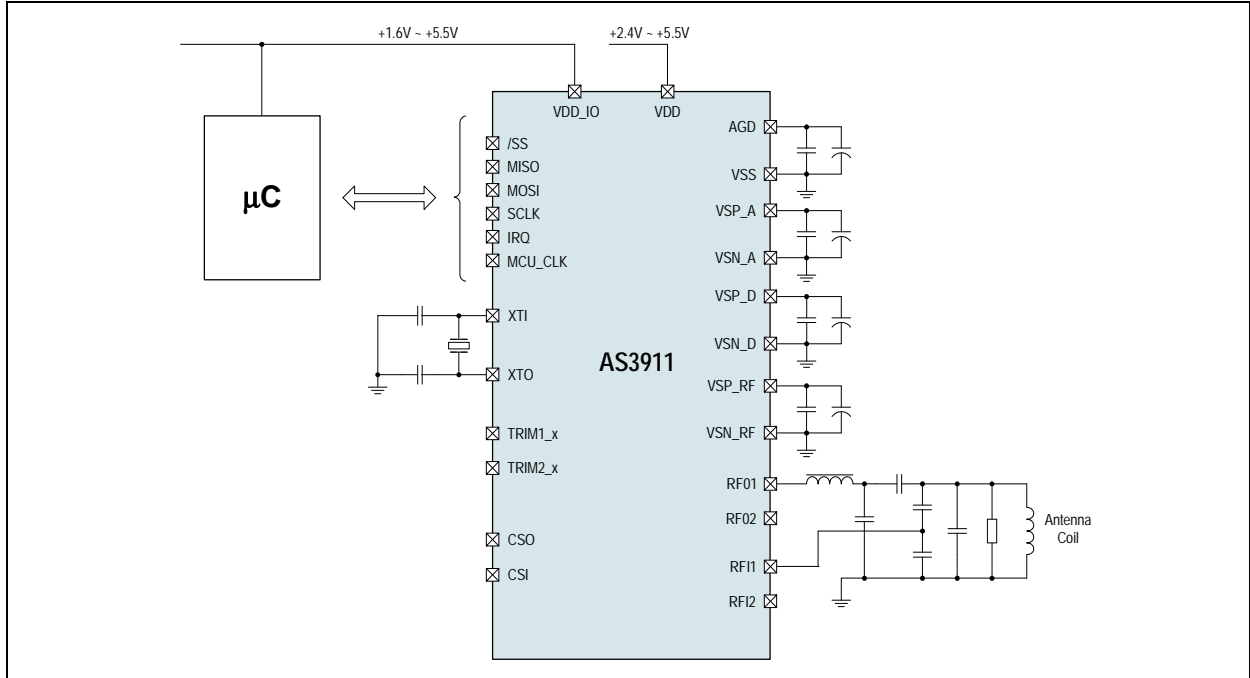


Figure 11:
Minimum Configuration with Differential Antenna Driving Including EMC Filter

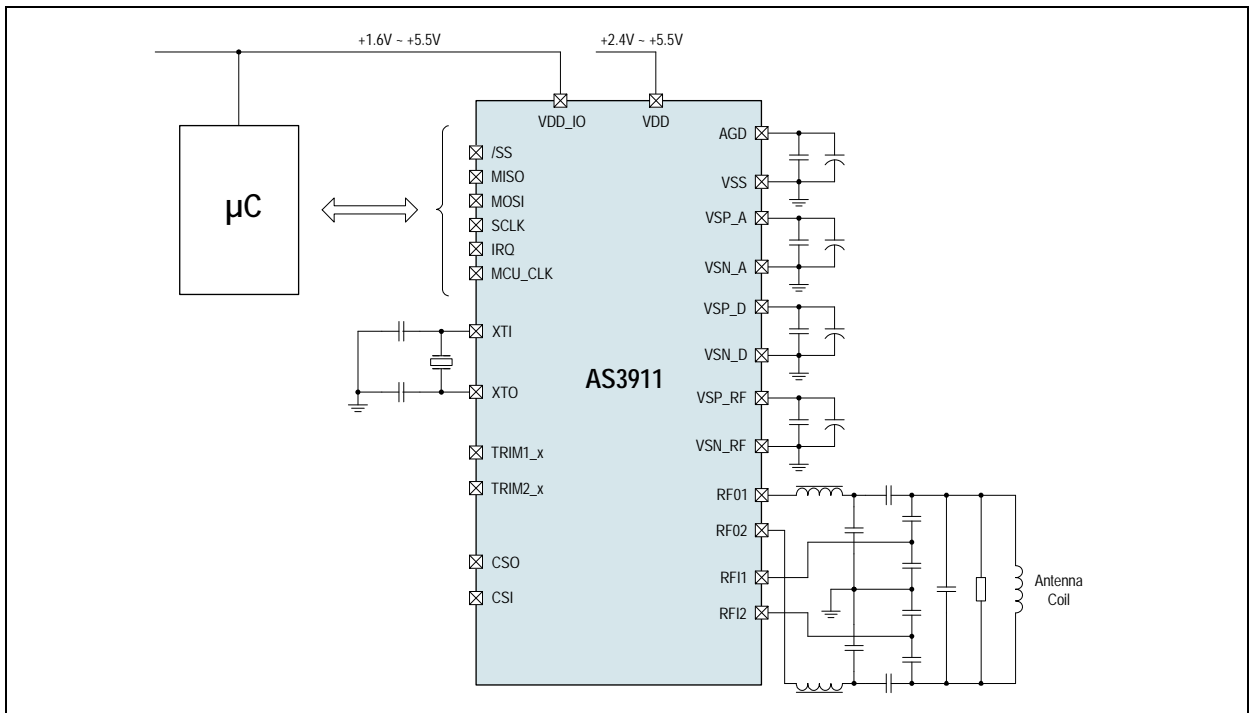

Transmitter

The transmitter incorporates drivers which drive external antenna through pins RFO1 and RFO2. Single sided and differential driving is possible. The transmitter block additionally contains a sub-block which modulates transmitted signal (OOK or configurable AM modulation).

The AS3911 transmitter is indented to directly drive antennas (without 50Ω cable, usually antenna is on the same PCB). Operation with 50Ω cable is also possible, but in that case some of the advanced features are not possible.

Receiver

The receiver detects transponder modulation superimposed on the 13.56MHz carrier signal. The receiver contains two receive chains (one for AM and another for PM demodulation) which are composed of a peak detector followed by two gain and filtering stages and a final digitizer stage. The filter characteristics are adjusted to optimize performance over different ISO modes and bit rates (sub-carrier frequencies from 212 kHz to 6.8 MHz are supported). The receiver chain inputs are RF11 and RF12 pins; output of digitizer stage is demodulated sub-carrier signal. The receiver chain incorporates several features which enable reliable operation in challenging phase and noise conditions.

Phase and Amplitude Detector

The phase detector is observing the phase difference between the transmitter output signals (RFO1 and RFO2) and the input signals RF11 and RF12. Signals RF11 and RF12 are proportional to the signal on the antenna LC tank. RF11 and RF12 signals are also used to run the self-mixer which generates output proportional to their amplitude. The phase detector and self-mixer blocks are used for several purposes:

- PM demodulation by observing RF11 and RF12 phase variation (LF signal is fed to the Receiver)
- Average phase difference between RFOx pins and RF1x pins is used to check antenna tuning
- Output of mixer is used to measure amplitude of signal present on pins RF11 and RF12

A/D Converter

The AS3911 contains a built in A/D Converter. Its input can be multiplexed from different sources and is used in several applications (measurement of RF amplitude and phase, calibration of modulation depth...). The result of A/D conversion is stored in a register which can be read through the SPI interface.

Capacitive Sensor

The Capacitive sensor is used to implement low power detection of transponder presence. Capacitive sensor performs measurement of capacitance between its two electrodes. Presence of an object (card, hand) changes the capacitance. During calibration the reference capacitance, which represents parasitic capacitance of environment is stored. In normal operation capacitance is periodically measured and compared to stored reference value. When the measured capacitance is larger than stored reference value (threshold value can be defined in a register) an interrupt is sent to external controller.

External Field Detector

The External Field Detector is a low power block which is used in NFC mode to detect presence of external RF field. It supports two different detection thresholds, Peer Detection Threshold and Collision Avoidance Threshold. Peer Detection Threshold is used in the NFCIP-1 target mode to detect presence of initiator field. It is also used in active communication initiator mode to detect activation of target field. Collision Avoidance Threshold is used to detect a presence of RF field during NFCIP-1 RF Collision Avoidance procedure.

Quartz Crystal Oscillator

The quartz crystal oscillator can operate with 13.56 MHz and 27.12 MHz crystals. At start-up the transconductance of the oscillator is increased to achieve fast start-up. Since the start-up time varies depending on crystal type, temperature and other parameters, the oscillator amplitude is observed and an interrupt is sent when stable operation is reached to inform the controller that the clock signal is stable and reader field can be switched on. The use of 27.12 MHz crystal is mandatory in case VHBR framing is used.

It also provides a clock signal to the external microcontroller (MCU_CLK) according to setting in the control register.

Power Supply Regulators

Integrated power supply regulators ensure high power supply rejection of a complete reader system. In case PSRR of the reader system has to be improved, the command [Adjust Regulators](#) is sent. As result of this command, the power supply level of V_{DD} is measured in maximum load conditions and the regulated voltage reference is set 250 mV below this measured level to assure a stable regulated supply. The resulting regulated voltage is stored in a register. It is also possible to define regulated voltage by writing a configuration register. In order to decouple any noise sources from different parts of IC there are three regulators integrated with separated external blocking capacitors (regulated voltage of all is the same in 3.3V supply mode). One regulator is for the analog blocks, one for

digital blocks, there is also a separate one for the antenna drivers. In case of low cost applications some (or all) regulators may not be used to save on external components.

This block additionally generates a reference voltage for the analog processing (AGD - analog ground). This voltage also has an associated external buffer capacitor.

POR and Bias

This block contains the bias current and voltage generator which provides bias currents and reference voltages to all other blocks. It also incorporates a Power on Reset (POR) circuit which provides a reset at power-up and at low supply levels.

RC Oscillator and Wake-up Timer

The AS3911 includes several possibilities of low power detection of a card presence (capacitive sensor, phase measurement, amplitude measurement). RC oscillator and register configurable Wake-up timer are used to schedule periodic detection. When presence of a card is detected an interrupt is sent to controller.

ISO14443 and NFCIP-1 Framing

This block performs framing for receive and transmit according to the selected ISO mode and bit rate settings.

In reception it takes demodulated sub-carrier signal from Receiver. It recognizes the SOF, EOF and data bits, performs parity and CRC check, organizes the received data in bytes and places them in the FIFO.

During transmit, it operates inversely, it takes bytes from FIFO, generates parity and CRC bits, adds SOF and EOF and performs final encoding before passing modulation signal to transmitter.

In Transparent mode, the framing and FIFO are bypassed, the digitized sub-carrier signal, which is Receiver output, is directly sent to MISO pin, signal applied to MOSI pin is directly used to modulate the transmitter.

FIFO

The AS3911 contains a 96 byte FIFO. Depending on the mode, it contains either data which has been received or data which is to be transmitted.

Control Logic

The control logic contains I/O registers which define operation of device.

SPI Interface

A 4-wire Serial Peripheral Interface (SPI) is used for communication between external microcontroller and the AS3911.

Application Information

Operating Modes

The AS3911 operating mode is defined by the contents of the [Operation Control Register](#).

At power-up all bits of the [Operation Control Register](#) are set to 0, the AS3911 is in **Power-down** mode. In this mode AFE static power consumption is minimized, only the POR and part of the bias are active, the regulators are transparent and are not operating. The SPI is still functional in this mode so all settings of ISO mode definition and configuration registers can be done.

Control bit *en* (bit 7 of the [Operation Control Register](#)) is controlling the quartz crystal oscillator and regulators. When this bit is set, the device enters in **Ready** mode. In this mode the quartz crystal oscillator and regulators are enabled. An interrupt is sent to inform the microcontroller when the oscillator frequency is stable.

Enable of Receiver and Transmitter are separated so it is possible to operate one without switching on the other (control bits *rx_en* and *tx_en*). In some cases this may be useful, in case the reader field has to be maintained and there is no transponder response expected receiver can be switched-off to save current. Another example is NFCIP-1 active communication receive mode in which RF field is generated by the initiator and only Receiver operates.

Asserting the [Operation Control Register](#) bit *wu* while the other bits are set to 0 puts the AS3911 into the **Wake-up** mode which is used to perform low power detection of card presence. In this mode the low power RC oscillator and register configurable Wake-up timer are used to schedule periodic measurement(s). When a difference to the predefined reference is detected an interrupt is sent to wake-up the micro. Capacitive sensor, phase measurement and amplitude measurement are available.

Transmitter

The Transmitter contains two identical push-pull driver blocks connected to the pins RFO1 and RFO2. These drivers are differentially driving external antenna LC tank. It is also possible to operate only one of the two drivers by setting the [IO Configuration Register 1](#) bit single. Each driver is composed of 8 segments having binary weighted output resistance. The MSB segment typical ON resistance is 2Ω , when all segments are turned on; the output resistance is typically 1Ω . Usually all segments are turned on to define the normal transmission (non-modulated) level. It is also possible to switch off certain

segments when driving the non-modulated level to reduce the amplitude of signal on the antenna and/or to reduce the antenna Q factor without making any hardware changes. The [RFO Normal Level Definition Register](#) defines which segments are turned on to define the normal transmission (non-modulated) level. Default setting is that all segments are turned on.

Using the single driver mode the number and therefore the cost of the antenna LC tank components is halved, but also the output power is reduced. In single mode it is possible to connect two antenna LC tanks to the two RFO outputs and multiplex between them by controlling the [IO Configuration Register 1](#) bit *rfo2*.

In order to transmit the data the transmitter output level needs to be modulated. The AM and OOK modulation are supported. The type of modulation is defined by setting the bit *tr_am* in the [Auxiliary Definition Register](#). For the operation modes supported by the AS3911 framing the setting of modulation type is done automatically by sending direct command [Analog Preset](#).

During the OOK modulation (for example ISO14443A) the Transmitter drivers stop driving the carrier frequency; drivers are frozen in state before the modulation. As consequence the amplitude of the antenna LC tank oscillation decays, the time constant of the decay is defined with the LC tank Q factor. The decay time in case of OOK modulation can be shortened by asserting the [Auxiliary Definition Register](#) bit *ook_hr*. When this bit is set to logic one the drivers are put in tristate during the OOK modulation.

AM modulation (for example ISO14443B) is done by increasing the output driver impedance during the modulation time. This is done by reducing the number of driver segments which are turned on. The AM modulated level can be automatically adjusted to the target modulation depth by defining the target modulation depth in the [AM Modulation Depth Control Register](#) and sending the [Calibrate Modulation Depth](#) direct command. Please refer to [AM Modulation Depth: Definition and Calibration](#) for further details.

Slow Transmitter Ramping

When transmitter is enabled it starts to drive the antenna LC tank with full power, the ramping of field emitted by antenna is defined by antenna LC tank Q factor.

However there are some reader systems where the reader field has to transition with a longer transition time when it is enabled. The STIF (Syndicat des transports d'Ile de France) specification requires a transition time from 10% to 90% of field longer than or equal to 10 μ s.

The AS3911 supports that feature. It is realized by collapsing VSP_RF regulated voltage when transmitter is disabled and ramping it when transmitter is enabled. Typical transition time is 15 μ s at 3V supply and 20 μ s at 5V supply.

Procedure to implement the slow transition:

- When transmitter is disabled set [IO Configuration Register 2](#) bit *slow_up* to 1. Keep this state at least 2 ms to allow discharge of VSP_RF.
- Enable transmitter, its output will ramp slowly.
- Before sending any command set the bit *slow_up* back to 0.

Receiver

The receiver performs demodulation of the transponder sub-carrier modulation which is superimposed on the 13.56MHz carrier frequency. It performs AM and/or PM demodulation, amplification, band-pass filtering and digitalization of sub-carrier signals. Additionally it performs RSSI measurement, automatic gain control (AGC) and Squelch function.

In typical application the Receiver inputs RF1 and RF2 are outputs of capacitor dividers connected directly to the terminals of antenna coil. Such concept assures that the two input signals are in phase to the voltage on antenna coil. Care has to be taken during design of capacitive divider that the RF1 and RF2 input signal pp value does not exceed the VSP_A supply voltage.

Receiver comprises two complete receive channels for AM demodulation and PM demodulation. In case both channels are active the selection of channel used for reception framing is done automatically by receive framing logic. The receiver is switched on when [Operation Control Register](#) bit *rx_en* is set to one. Additionally the [Operation Control Register](#) contains bits *rx_chn* and *rx_man*; *rx_chn* defines whether both, AM and PM, demodulation channels will be active or only one of them, while bit *rx_man* defines the channel selection mode in case both channels are active (automatic or manual). Operation of the Receiver is controlled by four Receiver Configuration registers.

The operation of the receiver is additionally controlled by the signal *rx_on* which is set high when modulated signal is expected on the receiver input. This signal is used to control RSSI and AGC and also enables processing of receiver output by Framing logic. Signal *rx_on* is automatically set high after Mask Receive timer expires. Signal *rx_on* can also be directly controlled by the controller by sending direct commands [Mask Receive Data](#) and [Unmask Receive Data](#). [Figure 12](#) illustrates the Receiver block diagram.

Demodulation Stage

First stage performs demodulation of transponder sub-carrier response signal, which is superimposed on HF field carrier. Two different blocks are implemented for AM demodulation: Peak Detector and AM demodulator mixer. The choice of the demodulator, which is used, is made by the [Receiver Configuration Register 1](#) bit *amd_sel*.

Peak detector performs AM demodulation using peak follower. Both, the positive and negative peaks are tracked to suppress common mode signal. It is limited in speed; it can operate for sub-carrier frequencies up to $f_c/8$ (1700 kHz). It has demodulation gain $G = 0.7$. Its input is taken from one demodulator input only (usually RF11).


AM demodulator mixer uses synchronous rectification of both receiver inputs (RFI1 and RFI2). Its gain is $G = 0.55$. Mixer demodulator is optimized for VHBR sub-carrier frequencies. ($f_c/8$ and higher). For sub-carrier frequency $f_c/8$ (1700 kHz) both peak follower and mixer can be used, while for $f_c/4$ and $f_c/2$ are supported only by mixer.

By default the Peak detector is used, for data rates $f_c/8$ and higher use of mixer is automatically preset by sending direct command [Analog Preset](#).

PM demodulation is also done by a mixer. The PM demodulator mixer has differential outputs with 60mV differential signal for 1% phase change (16.67 mV per degree). Its operation is optimized for sub-carrier frequencies up to $f_c/8$ (1700 kHz).

In case the demodulation is done externally of the AS3911 it is possible to multiplex the LF signals applied to pins RFI1 and RFI2 directly to the gain and filtering stage by selecting the [Receiver Configuration Register 2](#) bit *lf_en*.

Figure 12:
Receiver Block Diagram

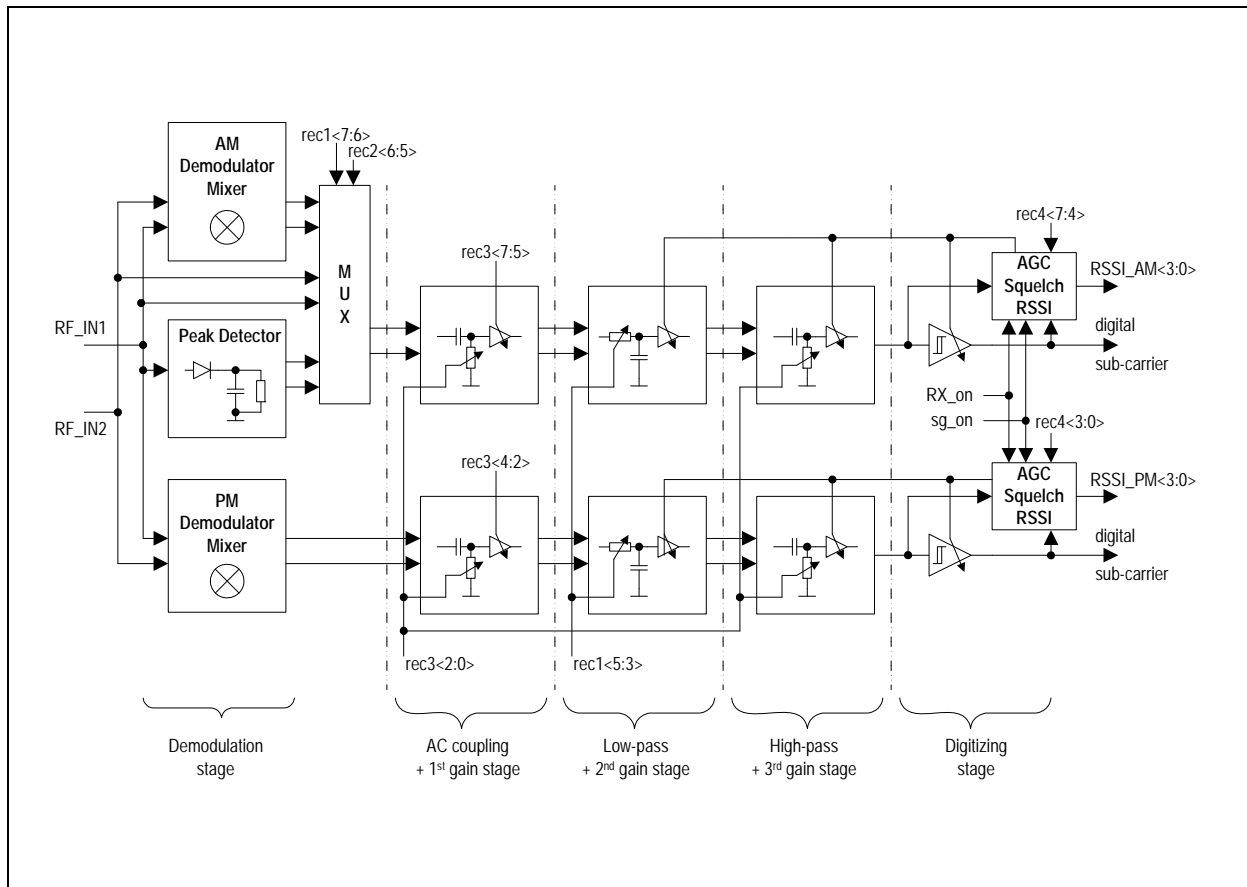

Filtering and Gain Stages

The receiver chain has band pass filtering characteristics. Filtering is optimized to pass sub-carrier frequencies while rejecting carrier frequency and low frequency noise and DC component. Filtering and gain is implemented in three stages where the first and the last stage have the first order high pass characteristics, while the mid stage has second order low pass characteristic.

Gain and filtering characteristics can be optimized for current application by writing the [Receiver Configuration Register 1](#) (filtering), [Receiver Configuration Register 3](#) (gain in first stage) and [Receiver Configuration Register 4](#) (gain in second and third stage).

Gain of first stage is about 20dB and can be reduced in six 2.5 dB steps. There is also a special boost mode available, which boosts the maximum gain for additional 5.5 dB. In case of VHBR ($f_c/8$ and $f_c/4$) the gain is lower. The first stage gain can only be modified by writing [Receiver Configuration Register 3](#). The default setting of this register is the minimum gain. Default first stage zero is located at 60 kHz, it can also be lowered to 40kHz or 12 kHz by writing option bits in the [Receiver Configuration Register 1](#). The control of the first and third stage zeros is done with common control bits (see [Figure 14](#)).

Gain in the second and third stage is 23 dB and can be reduced in six 3 dB steps. Gain of these two stages is included in AGC and Squelch loops or can be manually set in [Receiver Configuration Register 4](#). Sending of direct command [Reset Rx Gain](#) is necessary to initialize the AGC, Squelch and RSSI block. Sending this command clears the current Squelch setting and loads the manual gain reduction from [Receiver Configuration Register 4](#). Second stage has a second order low pass filtering characteristic, the pass band is adjusted according to sub-carrier frequency using the bits $lp2$ to $lp0$ of the [Receiver Configuration Register 1](#). See [Figure 13](#) for -1dB cut-off frequency for different settings.

Figure 13:
Low Pass Control

| rec1<5> $lp2$ | rec1<4> $lp1$ | rec1<3> $lp0$ | -1 dB point |
|---------------|---------------|---------------|-------------|
| 0 | 0 | 0 | 1200 kHz |
| 0 | 0 | 1 | 600 kHz |
| 0 | 1 | 0 | 300 kHz |
| 1 | 0 | 0 | 2 MHz |
| 1 | 0 | 1 | 7 MHz |
| Other | | | Not used |

Figure 14:
First and Third Stage Zero Setting

| rec1<2> h200 | rec1<1> h80 | rec1<0> z12k | First Stage Zero | Third Stage Zero |
|--------------|-------------|--------------|------------------|------------------|
| 0 | 0 | 0 | 60 kHz | 400 kHz |
| 1 | 0 | 0 | 60 kHz | 200 kHz |
| 0 | 1 | 0 | 40 kHz | 80 kHz |
| 0 | 0 | 1 | 12 kHz | 200 kHz |
| 0 | 1 | 1 | 12 kHz | 80 kHz |
| 1 | 0 | 1 | 12 kHz | 200 kHz |
| Other | | | Not used | |

Figure 15 provides information on the recommended filter settings. For all supported operation modes and receive bit rates there is an automatic preset defined, additionally some alternatives are listed. Automatic preset is done by sending direct command [Analog Preset](#). There is no automatic preset for Steam and Transparent modes. Since selection of filter characteristics also modifies gain, the gain range for different filter settings is also listed.

Figure 15:
Receiver Filter Selection and Gain Range

| rec1<5:3> lp<2:0> | rec1<2> h200 | rec1<1> h80 | rec1<0> z12k | Gain [dB] | | | | | Comment |
|----------------------|-----------------|----------------|-----------------|-----------|---------------|---------------|---------|---------------|---|
| | | | | Max All | Min1 Max23 | Max1 Min23 | Min All | With Boost | |
| 000 | 0 | 0 | 0 | 43.4 | 28 | 26.4 | 11 | 49.8 | Automatic preset for ISO14443A fc/128 and NFC Forum Type 1 Tag |
| 000 | 1 | 0 | 0 | 44 | 29 | 27.5 | 12 | 49.7 | Automatic preset for ISO14443B fc/128 ISO14443 fc/64 |
| 001 | 1 | 0 | 0 | 44.3 | 29 | 27 | 11.7 | 49.8 | Recommended for 424/484 kHz sub-carrier |
| 000 | 0 | 1 | 0 | 41.1 | 25.8 | 23.6 | 8.3 | 46.8 | Alternative choice for ISO14443 fc/32 and fc/16 |
| 100 | 0 | 1 | 0 | 32 | 17 | 17.2 | 2 | 37.6 | Automatic preset for ISO14443 fc/32 and fc/16 Alternative choice for fc/8 (1.7 kb/s) |
| 100 | 0 | 0 | 0 | 32 | 17 | 17.2 | 2 | 37.6 | Alternative choice for fc/8 (1.7 kb/s) |

| rec1 <5:3> lp <2:0> | rec1 <2> h200 | rec1 <1> h80 | rec1 <0> z12k | Gain [dB] | | | | | Comment |
|------------------------|------------------|-----------------|------------------|-----------|---------------|---------------|---------|---------------|--|
| | | | | Max All | Min1 Max23 | Max1 Min23 | Min All | With Boost | |
| 000 | 0 | 1 | 1 | 41.1 | 25.8 | 23.6 | 8.3 | 46.8 | Automatic preset FeliCa (fc/64, fc/32) Alternative choice for ISO14443 fc/32 and fc/16 |
| 101 | 0 | 1 | 0 | 30 | 20 | 12 | 2 | 34 | Alternative choice for fc/8 and fc/4 |
| 101 | 1 | 0 | 0 | 30 | 20 | 12 | 2 | 34 | Automatic preset for fc/8 and fc/4 |
| 000 | 1 | 0 | 1 | 36.5 | 21.5 | 24.9 | 9.9 | 41.5 | Automatic preset for NFCIP-1 (initiator and target) |

Digitizing Stage

Digitizing stage is producing a digital form of sub-carrier signal which is output of Receiver and input to Framing Logic. It is a window comparator with adjustable digitizing window (five possible settings, 3 dB steps, adjustment range from ± 33 mV to ± 120 mV). Adjustment of the digitizing window is included in AGC and Squelch loops or can be manually set in [Receiver Configuration Register 4](#).

AGC, Squelch and RSSI

As mentioned above second and third gain stage gain and the Digitizing stage digitizing window are included in AGC and Squelch loops. Eleven settings are available, default state features minimum digitizer window and maximum gain, first four steps increase the digitizer window in 3 dB steps, next six steps additionally reduce the gain in 2nd and 3rd gain stage also in 3 dB steps. The initial setting with which Squelch and AGC start is defined in [Receiver Configuration Register 4](#). The [Gain Reduction State Register](#) displays the actual state of gain which results from Squelch, AGC and initial settings in [Receiver Configuration Register 4](#).

Squelch

This feature is designed for operation of receiver in noisy environment. The noise can come from tags in which processing of data sent by the reader is going on and an answer is being prepared. Noise can also be generated by noisy environment. This noise may be misinterpreted as start of transponder response which results in decoding error.

During execution of the Squelch procedure the output of Digitizing comparator is observed. In case there are more than two transitions on this output in 50 μ s time period, gain is reduced for 3 dB and output is observed during next 50 μ s. This procedure is repeated until number of transitions in 50 μ s is lower or equal to 2 or until maximum gain reduction is reached. This setting is cleared by sending direct command [Reset Rx](#)

Gain.

There are two possibilities of performing squelch: automatic mode and using direct command [Squelch](#).

- Automatic mode is started in case bit *sqm_dyn* in the [Receiver Configuration Register 2](#) is set. It is activated automatically 18.88 μ s after end of Tx and is terminated with Mask Receive timer expire. This mode is primarily intended to suppress noise generated by tag processing during the time when the tag response is not expected (covered by Mask Receive timer).
- Command [Squelch](#) is accepted in case it is sent when signal *rx_on* is low. It can be used in case the time window in which noise is present is known by the controller.

AGC

AGC (automatic gain control) is used to reduce gain to keep receiver chain out of saturation. In case gain is properly adjusted the demodulation process is also less influenced by system noise.

AGC action starts when signal *rx_on* is asserted high and is reset when it is reset to low. At low to high transitions of the *rx_on* the state of the receiver gain is stored in the [Gain Reduction State Register](#), therefore reading this register later gives the information of the gain setting used during last reception.

When AGC is switched on receiver gain is reduced so that the input to digitizer stage is not saturated. The AGC system comprises a window comparator which has its window 3.5 times larger than window of digitalization window comparator. When the AGC function is enabled gain is reduced until there are no transitions on its output. Such procedure assures that the input to digitalization window comparator is less than 3.5 times larger than its window.

AGC operation is controlled by the control bits *agc_en*, *agc_m* and *agc_fast* in the [Receiver Configuration Register 2](#). Bit *agc_en* enables the AGC operation; bit *agc_m* defines the AGC mode while bit *agc_alg* define the AGC algorithm.

Two AGC modes are available, AGC can operate during complete Rx process (as long as signal *rx_on* is high) or it can be enabled only during first eight sub-carrier pulses.

Two AGC algorithms are available; AGC can either start by presetting of code 4_h (max digitizer window, max gain) or by resetting the code to 0_h (min digitizer window, max gain).

Algorithm with preset code is faster, therefore it is recommended for protocols with short SOF (like ISO14443A fc/128).

Default AGC settings are: AGC is enabled, AGC operates during complete Rx process, algorithm with preset is used.

RSSI

The receiver also performs the RSSI (Received Signal Strength Indicator) measurement of both channels. RSSI measurement is started after rising edge of **rx_on**. It stays active while signal **rx_on** is high; while **rx_on** is low it is frozen. It is a peak hold system; the value can only increase from initial zero value. Every time the AGC reduces the gain the RSSI measurement is reset and starts from zero. Result of RSSI measurements is 4-bit value which can be observed by reading the [RSSI Display Register](#). The LSB step is 2.8 dB, the maximum code is D_h (13_d).

Since the RSSI measurement is of peak hold type the RSSI measurement result does not follow any variations in the signal strength (the highest value will be kept). In order to follow RSSI variation it is possible to reset RSSI bits and restart the measurement by sending direct command [Clear RSSI](#).

Receiver in NFCIP-1 Active Communication Mode

There are several features built in receiver to enable reliable reception of active NFCIP-1 communication. All these settings are automatically preset by sending direct command [Analog Preset](#) after the NFCIP-1 mode has been configured. In addition to filtering options there are two NFC specific configuration bits stored in the [Receiver Configuration Register 3](#).

Bit *lim* enables clipping circuits which are positioned after first and second gain stages. The intention of clipping circuits is to limit the signal level for the following filtering stage (in case the NFC peer is close the input signal level can be quite high).

Bit *rg_nfc* forces gain reduction of second and third filtering stage to -6dB while keeping the digitizer comparator window at maximum level.

Capacitive Sensor

The Capacitive Sensor block provides a possibility of low power detection of tag presence.


The capacitive measurement system comprises two electrodes. One is excitation electrode emitting electrical field of a fixed frequency in range of few hundred kHz (CSO) and the second one is the sensing electrode (CSI). The amount of charge generated in sensing electrode represents the capacitance between the two electrodes. Capacitive sensor electrodes are tolerant to parasitic capacitance to ground (up to 25 pF) and to input leakage (up to 1 M Ω).

Since the charge on the sensing electrode is generated with the frequency of excitation electrode, synchronous rectifier is used to detect it. This ensures good rejection of interference and high tolerance to parasitic capacitances (to all nodes except the excitation electrode).

Capacitive sensor system depicted on figure below uses a synchronous rectifier to convert the AC charge generated by the excitation signal on the sensing electrode. This yields a DC out-

put voltage, which is linearly proportional to the capacitance between the excitation and sensing electrode. The output DC voltage is converted by an AD converter in absolute mode. Result is stored in the [A/D Converter Output Register](#) (see also [A/D Converter](#)).

Figure 16:
Capacitive Sensor Block Diagram

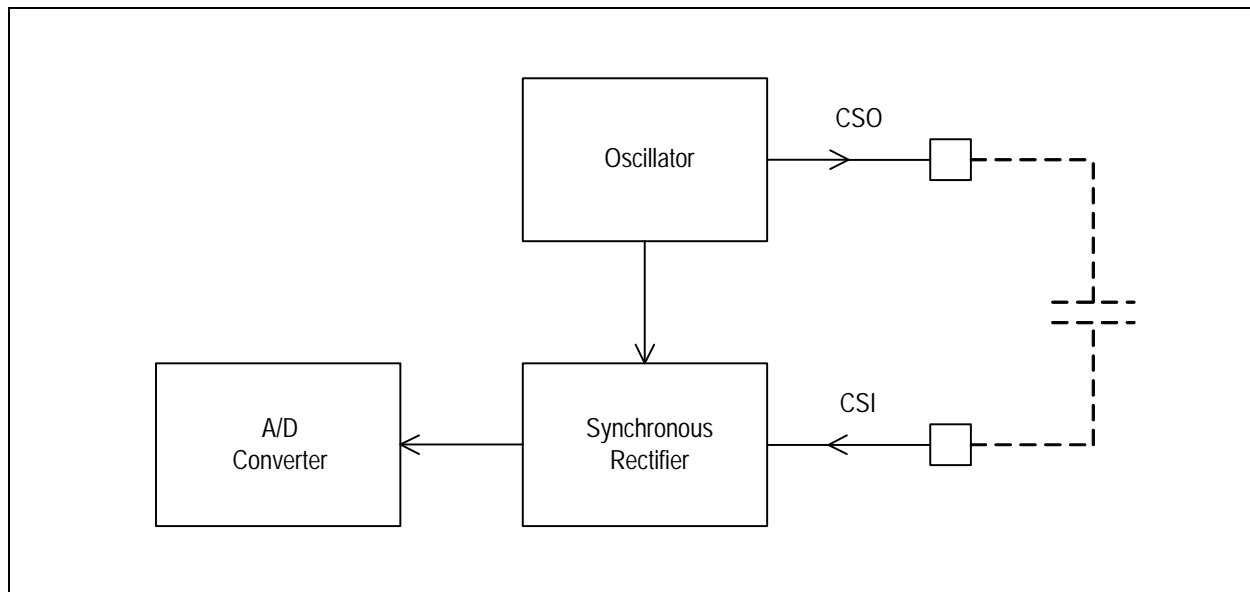

Any conductive object (human hand or tag's antenna windings) approaching the two electrodes changes the capacitance between the excitation and sensing electrode as it 'shortens' the distance between the two by providing conductance on the part of the path between the two electrodes.

Capacitance measurement is started by sending direct command [Measure Capacitance](#). The AS3911 can also be configured to periodically wake-up and perform the capacitance measurement. The result is compared to a stored reference or to an average of previous measurements and in case the difference is greater than a predefined value an IRQ is triggered to wake-up the controller (see also [Wake-up Mode](#)).

Capacitor sensor gain can be adjusted by setting in [Capacitive Sensor Control Register](#). Default gain is 2.8V/pF typ., maximum gain is 6.5V/pF typ. Since LSB of AD converter corresponds to approximately 7.8mV, the default gain results in sensitivity of 2.8 fF/LSB (1.2 fF/LSB maximum).

Capacitance measurement duration is 200 μ s, current consumption during measurement is 1.1 mA typ. In case capacitive measurement is performed every 100 ms in Wake-up mode the resulting typical average consumption is 5.8 μ A (3.6 μ A is standby consumption in Wake-up mode).

Capacitor Sensor Calibration

Capacitor sensor comprises calibration unit internally compensates the parasitic capacitances between CSI and CSO, thus leaving full measurement range for information about capacitance variation. 5 bits are used to control the calibration, minimum calibration step is 0.1 pF, calibration range is 3.1 pF. Calibration can be done manually by writing [Capacitive Sensor Control Register](#) or automatically by sending direct command [Calibrate Capacitive Sensor](#). The status of [Calibrate Capacitive Sensor](#) command and resulting calibration value are stored in the [Capacitive Sensor Display Register](#).

In order to avoid interference of Capacitive Sensor with Xtal oscillator and reader magnetic field and to assure repetitive results it is strongly recommended to perform capacitance measurement and calibration in Power-down mode only.

Wake-up Mode

Asserting the [Operation Control Register](#) bit *wu* while the other bits are set to 0 puts the AS3911 into the **Wake-up mode** which is used to perform low power detection of card presence. The AS3911 includes several possibilities of low power detection of a card presence (capacitive sensor, phase measurement, amplitude measurement). Low power 32kHz RC oscillator and register configurable Wake-up timer are used to schedule periodic detection.

Usually the presence of a card is detected by so called polling. In this process the reader is periodically turned on and the controller activates the protocol to check whether a card is present. Such procedure consumes a lot of energy since reader field has to be turned on for 5ms before a command can be issued.

Low power detection of card presence is performed by detecting a change in reader environment, which is produced by presence of a card. When a change is detected, an interrupt is sent to the controller. As a result, the controller can activate the protocol for tag detection.

In the Wake-up mode the AS3911 periodically performs the configured measurements and sends an IRQ to the controller, which is in deep sleep to minimize the current consumption, only when a difference to the build in reference is detected.

Detection of card presence can be done by performing phase, amplitude and capacitive sensor measurements.

Presence of a card close to the reader antenna coil produces due to the magnetic coupling of the two coils a change of the antenna LC tank signal phase and amplitude. The reader field activation time needed to perform the phase or the amplitude measurement is extremely short (~20µs) comparing to the

activation time needed to send a protocol activation command. Additionally the power level during the measurement can be lower than the power level during normal operation since the card does not have to be powered to produce the coupling effect. The emitted power can be reduced by increasing the [RFO Normal Level Definition Register](#).

Capacitance Sensor detects a change of the parasite capacitance between the two excitation electrodes which is caused by a card antenna and a hand holding it. See "[Capacitive Sensor](#)" on page 14 for a detailed information on the capacitive sensor.

The registries on locations from 31_h to 3D_h are dedicated to Wake-up configuration and display. The [Wake-up Timer Control Register](#) is the main Wake-up mode configuration register. The timeout period between the successive detections and the measurements which are going to be used are selected in this register. Timeouts in the range from 10 ms to 800 ms are available, 100 ms is the default value. Any combination of available measurements can be selected (one, two or all of them).

The following twelve registers (32_h to 3D_h) are configuring the three possible detection measurements and storing the results, four registers are used for each measurement.

An IRQ is sent when the difference between a measured value and reference value is larger than configured threshold value. There are two possibilities how to define the reference value:

- The AS3911 can calculate the reference based on previous measurements (auto-averaging)
- The controller determines the reference and stores it in a register

The first register in the series of four is the Measurement Configuration Register (see for e.g. [Amplitude Measurement Configuration Register](#)). The difference to reference which triggers the IRQ, the method of reference value definition and the weight of last measurement result in case of auto-averaging are defined in this register. The next register is storing the reference value in case the reference is defined by the controller. The following two registers are display registers. The first one stores the auto-averaging reference; the second one stores the result of the last measurement.

Wake-up mode configuration registers have to be configured before wake-up mode is actually entered. Any modification of Wake-up mode configuration while it is active may result in unpredictable behavior.

Auto-averaging

In case of auto-averaging the reference value is recalculated after every measurement. The last measurement value, the old reference value and the weight are used in this calculation. The following formula is used to calculate the new reference value.

$$\text{NewReference} = \text{OldReference} + \frac{\text{OldReference} - \text{MeasuredValue}}{\text{Weight}}$$

The calculation is done on 10 bits to have sufficient precision. The auto-averaging process is initialized when Wake-up mode is first time entered after initialization (power-up or using [Set Default](#) command). The initial value is taken from the Measurement Reference Register (for example [Amplitude Measurement Reference Register](#)) in case content of this register is not zero. In case content of this register is zero, the result of first measurement is taken as initial value.

Every Measurement Configuration register contains a bit which defines whether the measurement which causes an interrupt is taken in account for the average value calculation (for example bit *am_aam* of the [Amplitude Measurement Reference Register](#)).

Quartz Crystal Oscillator

The quartz crystal oscillator can operate with 13.56 MHz and 27.12 MHz crystals. The operation of quartz crystal oscillator is enabled when the [Operation Control Register](#) bit *en* is set to one. An interrupt is sent to inform the microcontroller when the oscillator frequency is stable (see [Main Interrupt Register](#)).

The status of oscillator can be observed by observing the [Auxiliary Display Register](#) bit *osc_ok*. This bit is set to '1' when oscillator frequency is stable.

The oscillator is based on an inverter stage supplied by controlled current source. A feedback loop is controlling the bias current in order to regulate amplitude on XTI pin to $1V_{pp}$. This feedback assures reliable operation even in case of low quality crystals with R_s up to 50Ω . In order to enable a fast reader start-up an interrupt is sent when oscillator amplitude exceeds 750 mV_{pp} .

Division by two assures that 13.56MHz signal has a duty cycle of 50% which is better for the Transmitter performance (no PW distortion). Use of 27.12MHz crystal is therefore recommended for better performance.

In case of 13.56 MHz crystal, the bias current of stage which is digitizing oscillator signal is increased to assure as low PW distortion as possible.

Please note that in case of VHBR reception (bit rates $f_c/8$ and above) it is mandatory to use the 27.12MHz crystal since high frequency clock is needed for receive framing.

The oscillator output is also used to drive a clock signal output pin (MCU_CLK), which can be used by the external microcontroller. The MCU_CLK pin is configured in the [IO Configuration Register 2](#).

Timers

The AS3911 contains several timers which eliminate the need to run counters in the controller, thus reducing the effort of the controller code implementation and improve portability of code to different controllers.

Every timer has one or more associated configuration registers in which the timeout duration and different operating modes are defined. These configuration registers have to be set while the corresponding timer is not running. Any modification of timer configuration while the timer is active may result in unpredictable behavior.

All timers except the Wake-up timer are stopped by direct command [Clear](#).

Exception: In case bit *nrt_emv* in the [General Purpose and No-response Timer Control Register](#) is set to one, the No-response timer is not stopped.

Mask Receive Timer and No-response Timer

Mask Receive Timer and No-response Timer are both automatically started at the end of transmission (at the end of EOF).

Mask Receive Timer

The Mask Receive Timer is blocking the Receiver and reception process in framing logic by keeping the *rx_on* signal low after the end of Tx during the time the tag reply is not expected. While the Mask Receive timer is running, the Squelch is automatically turned on (if enabled). Mask receive timer does not produce an IRQ.

The Mask Receive Timer timeout is configured in the [Mask Receive Timer Register](#).

In the NFCIP-1 active communication mode the Mask receive timer is started when the peer NFC device (a device with which communication is going on) switches on its field.

The Mask Receive timer has a special use in the low power Initial NFC Target Mode. After the initiator field has been detected the controller turns on the oscillator, regulator and receiver. Mask Receive timer is started by sending direct command [Start Mask-receive Timer](#). After the Mask Receive Timer expires the receiver output starts to be observed to detect start of the initiator message. In this mode the Mask Receive Timer clock is additionally divided by eight it (one count is $512/f_c$) to cover range up to ~9.6ms.

No-response Timer

As its name indicates this timer is intended to observe whether a tag response was detected in a configured time started by end of transmission. The *l_nre* flag in the [Timer and NFC Interrupt Register](#) is signaling interrupt events resulting from this timer timeout.

The No-response Timer is configured by writing two No-response Timer setting registers: [No-response Timer Register 1](#) and [No-response Timer Register 2](#). Operation options of the No-response timer are defined by setting bits *nrt_emv* and *nrt_step* in the [General Purpose and No-response Timer Control Register](#).

Bit *nrt_step* configures the time step of the No-response Timer. Two steps are available, 64/fc (4.72µs), which covers range up to 309ms and 4096/fc, which covers range up to 19.8s.

Bit *nrt_emv* controls the timer operation mode:

- When this bit is set to 0 (default mode) the IRQ is produced in case the No-response timer expires before a start of a tag reply is detected. In the opposite case, when start of a tag reply is detected before timeout, the timer is stopped, and no IRQ is produced.
- When this bit is set to 1 the timer unconditionally produces an IRQ when it expires, it is also not stopped by direct command [Clear](#). This means that IRQ is independent of the fact whether or not a tag reply was detected. In case at the moment of timeout a tag reply is being processed no other action is taken, in the opposite case, when no tag response is being processed additionally the signal *rx_on* is forced to low to stop receive process.

The No-response Timer can also be started using direct command [Start No-response Timer](#). The intention of this command is to extend the No-response timer timeout beyond the range defined in the No-response Timer control registers. In case this command is sent while the timer is running, it is reset and restarted.

In the NFCIP-1 active communication mode the No-response Timer is automatically started when the transmitter is turned off after the message has been sent. In case this timer expires before the peer NFC device (a device with which communication is going on) switches on its field an interrupt is sent.

General Purpose Timer

The triggering of the General Purpose Timer is configured by setting the [General Purpose and No-response Timer Control Register](#). It can be used to survey the duration of reception process (triggering by start of reception, after SOF) or to time out the PCD to PICC response time (triggered by end of reception, after EOF). In the NFCIP-1 active communication mode it is used to timeout the field switching off. In all cases an IRQ is sent when it expires.

The General Purpose Timer can also be started by sending the direct command [Start General Purpose Timer](#). In case this command is sent while the timer is running, it is reset and restarted.

Wake-up Timer

Wake timer is primarily used in the Wake-up mode (see [“Wake-up Mode” on page 26](#)). Additionally it can be used by sending a direct command [Start Wake-up Timer](#). This command is accepted in any operation mode except Wake-up mode. When this command is sent the RC oscillator, which is used as clock source for wake-up timer is started, timeout is defined by setting in the [Wake-up Timer Control Register](#). When the timer expires, an IRQ with the *I_wt* flag in the [Error and Wake-up Interrupt Register](#) is sent.

Wake-up timer is useful in the Power-down mode, in which other timers cannot be used (in the Power-down mode the crystal oscillator, which is clock source for the other timers, is not running). Please note that the tolerance of wake-up timer timeout is defined by tolerance of the RC oscillator.

A/D Converter

The AS3911 contains an 8-bit successive approximation A/D converter. Input to A/D converter can be multiplexed from different sources to be used in several direct commands and adjustment procedures. The result of last A/D conversion is stored in the [A/D Converter Output Register](#). Typical conversion time is $224/f_c$ (16.5 μ s).

The A/D converter has two operating modes, absolute and relative.

- In absolute mode the low reference is 0V and the high reference is 2V. This means that A/D converter input range is from 0 to 2V, 00_h code means input is 0V or lower, FF_h means that input is 2V - 1LSB or higher, LSB is 7.8125 mV.
- In relative mode low reference is 1/6 of VSP_A and high reference is 5/6 of VSP_A, so the input range is from 1/6 VSP_A to 5/6 VSP_A.

Relative mode is only used in phase measurement (phase detector output is proportional to power supply). In all other cases absolute mode is used.

Phase and Amplitude Detector

This block is used to provide input to A/D Converter to perform measurements of amplitude and phase, expected by direct commands [Measure Amplitude](#) and [Measure Phase](#). Several phase and amplitude measurements are also performed by direct commands [Calibrate Modulation Depth](#) and [Calibrate Antenna](#).

Phase Detector

The phase detector is observing phase difference between the transmitter output signals (RFO1 and RFO2) and the receiver input signals RF11 and RF12, which are proportional to the signal on the antenna LC tank. These signals are first passed by digitizing comparators. Digitized signals are processed by a phase detector with a strong low pass filter characteristics to get average phase difference. The Phase Detector output is inversely proportional to the phase difference between the two inputs. The 90° phase shift results in VSP_A/2 output voltage, in case both inputs are in phase output voltage is VSP_A in case they are in opposite phase output voltage is zero. During execution of direct command **Measure Phase** this output is multiplexed to A/D Converter input (A/D Converter is in relative mode during execution of command **Measure Phase**). Since the A/D converter range is from 1/6 VSP_A to 5/6 VSP_A the actual phase detector range is from 30° to 150°. Figures below depict the two inputs and output of phase detector in case of 90° and 135° phase shift.

Figure 17:
Phase Detector Inputs and Output in case of 90° Phase Shift


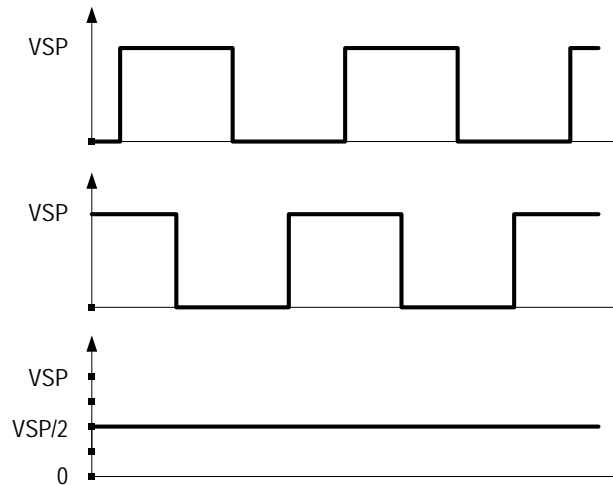


Figure 18:
Phase Detector Inputs and Output in case of 135° Phase Shift

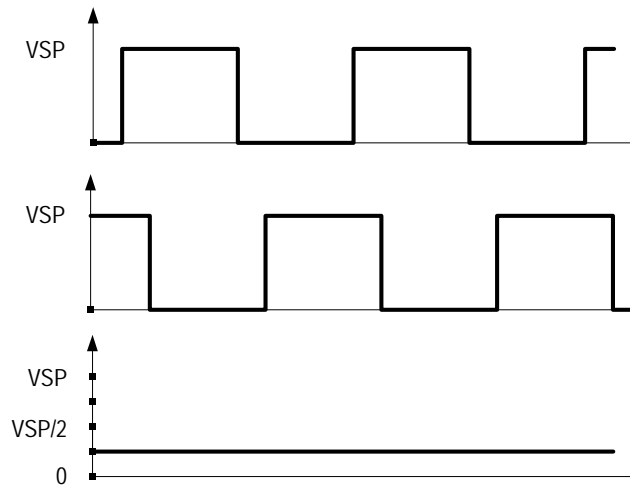

Amplitude Detector

Signals from pins RF11 and RF12 are used as inputs to the self-mixing stage. Output of this stage is DC voltage proportional to amplitude of signal on pins RF11 and RF12. During execution of direct command [Measure Amplitude](#) this output is multiplexed to A/D Converter input.

External field Detector

The External Field Detector is used to detect the presence of an external device generating an RF field. It is automatically switched on in NFCIP-1 active communication modes; it can also be used in other modes. The External Field Detector supports two different detection thresholds, Peer Detection Threshold and Collision Avoidance Threshold. The two thresholds can be independently set by writing the [External Field Detector Threshold Register](#). The actual state of the External Field Detector output can be checked by reading the [Auxiliary Display Register](#). Input to this block is the signal from the RF11 pin.

Peer Detection Threshold

This threshold is used to detect the field emitted by peer NFC device with which NFC communication is going on (initiator field in case the AS3911 is a target and the opposite, target field in case the AS3911 is an initiator). It can be selected in the range from 75mV_{pp} to 800mV_{pp}. When this threshold is enabled the External Field Detector is in low power mode. An interrupt is generated when an external field is detected and also when it is switched off. With such implementation it can also be used to detect the moment when the external field disappears. This

is useful to detect the moment when the peer NFC device (it can be either an initiator or a target) has stopped emitting an RF field.

The External Field Detector is automatically enabled in the low power Peer Detection mode when NFCIP-1 mode (initiator or target) is selected in the [Bit Rate Definition Register](#). Additionally it can be enabled by setting bit *en_fd* in the [Auxiliary Definition Register](#).

Collision Avoidance Threshold

This threshold is used during the RF Collision Avoidance sequence which is executed by sending NFC Field ON commands (see “[NFC Field ON Commands](#)” on page 51). It can be selected in the range from 25 mV_{pp} to 800 mV_{pp}.


Power Supply System

The AS3911 features two positive supply pins, V_{DD} and V_{DD_IO} . V_{DD} is the main power supply pin. It supplies the AS3911 blocks through three regulators (V_{DD_A} , V_{DD_D} and V_{DD_RF}). V_{DD} range from 2.4 to 5.5V is supported.

V_{DD_IO} is used to define supply level for digital communication pins (/SS, MISO, MOSI, SCLK, IRQ, MCU_CLK). Digital communication pins interface to the AS3911 logic through level shifters, therefore the internal supply voltage can be either higher or lower than V_{DD_IO} . V_{DD_IO} range from 1.65V to 5.5V is supported.

[Figure 19](#) shows the building blocks of the AS3911 power supply system. It contains three regulators, a power-down support block, a block generating analog reference voltage (AGD) and a block performing automatic power supply adjustment procedure. The three regulators are providing supply to analog blocks (VSP_A), logic (VSP_D) and transmitter (VSP_RF). The use of VSP_A and VSP_D regulators is mandatory at 5V power supply to provide regulated voltage to analog and logic blocks which only use 3.3V devices. The use of VSP_A and VSP_D regulators at 3V supply and VSP_RF regulator at any supply voltage is recommended to improve system PSRR. Regulated voltage can be adjusted automatically to have maximum possible regulated voltage while still having good PSRR. All regulator pins also have corresponding negative supply pins which are externally connected to ground potential (VSS). The reason for separation is in decoupling of noise induced by voltage drops on the internal power supply lines. [Figure 10](#) and [Figure 11](#) depict typical AS3911 application schematics with all regulators used. All regulator pins and AGD voltage are buffered with pairs of ceramic and electrolyte. For regulators recommended blocking capacitors values can be found in the table below are 2.2 μ F in parallel with 10nF, for pin AGD 1 μ F in parallel with 10nF is suggested.

Figure 19:
The AS3911 Power Supply System

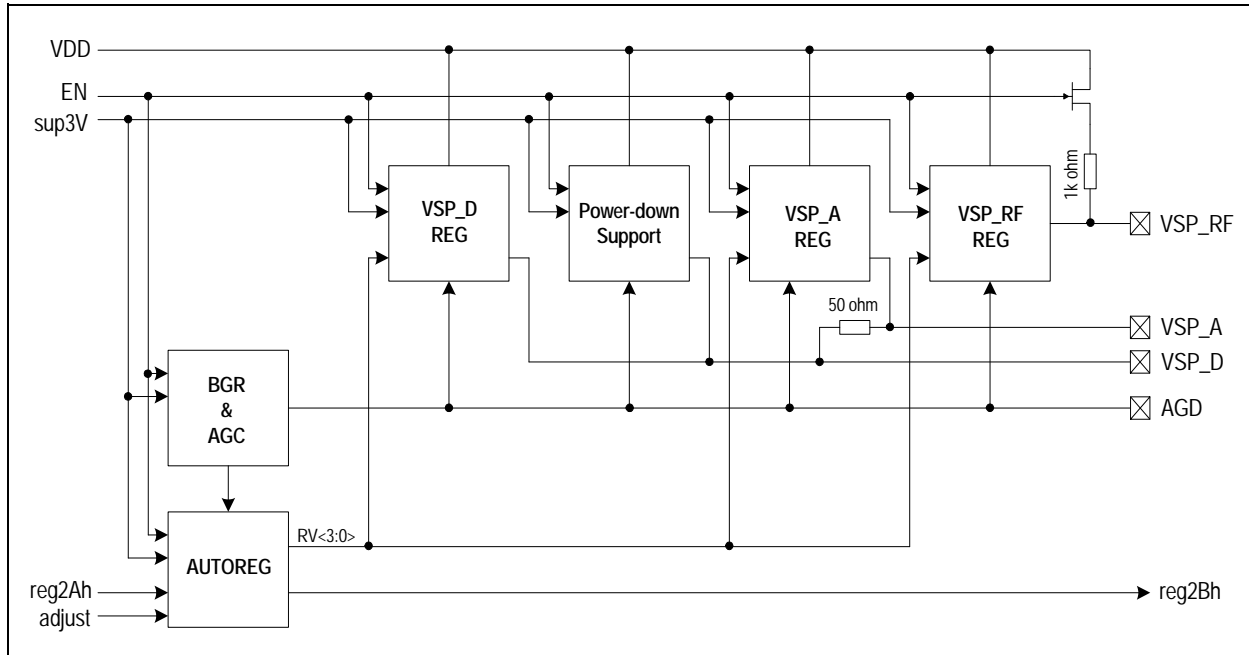

Regulators have two basic operation modes depending on supply voltage, 3.3V supply mode (max 3.6V) and 5V supply mode (max 5.5V). The supply mode is set by writing bit *sup3V* in the [IO Configuration Register 2](#). Default setting is 5V so this bit has to be set to one after power-up in case of 3.3V supply.

In 3.3V mode all regulators are set to the same regulated voltage in range from 2.4V to 3.4V, while in 5V only the VSP_RF can be set in range from 3.9V to 5.1V, while VSP_A and VSP_D are fixed to 3.4V.

[Figure 19](#) depicts signals controlling the power supply system. The regulators are operating when signal *en* is high (*en* is configuration bit in [Operation Control Register](#)). When signal *en* is low the AS3911 is in low power Power-down mode. In this mode consumption of the power supply system is also minimized.

VSP_RF Regulator

The intention of this regulator is to improve PSRR of the Transmitter (the noise of the Transmitter power supply is emitted and fed back to the Receiver). The VSP_RF regulator operation is controlled and observed by writing and reading two regulator registers:

- [Regulator Voltage Control Register](#) controls the regulator mode and regulated voltage. Bit *reg_s* controls regulator mode. In case it is set to 0 (default state) the regulated voltage is set using direct command [Adjust Regulators](#). When bit *reg_s* is asserted to 1 regulated voltage is defined by bits *rege_3* to *rege_1* of the same register. The regulated voltage adjustment range depends on the power supply mode. In case of 5V supply mode the adjustment range is between 3.9V and 5.1 V in steps of 120 mV, in case of 3.3V

supply mode the adjustment range is from 2.4V to 3.4V with steps of 100mV. Default regulated voltage is the maximum one (5.1V and 3.4V in case of 5V and 3.3V supply mode respectively).

- **Regulator and Timer Display Register** is a read only register which displays actual regulated voltage when regulator is operating. It is especially useful in case of automatic mode, since the actual regulated voltage, which is result of direct command **Adjust Regulators**, can be observed.

The VSP_RF regulator also includes a current limiter which limits the regulator current to $300\text{mA}_{\text{rms}}$ in normal operation (500mA in case of short). In case the Transmitter output current higher the $300\text{mA}_{\text{rms}}$ is required VSP_RF regulator cannot be used to supply the Transmitter, VSP_RF has to be externally connected to V_{DD} (connection of VSP_RF to supply voltage higher than V_{DD} is not allowed).

The voltage drop of the Transmitter current is the main source of the AS3911 power dissipation. This voltage drop is composed of drop in the Transmitter driver and in the drop on VSP_RF regulator. Due to this it is recommended to set regulated voltage using direct command **Adjust Regulators**. It results in good power supply rejection ration with relatively low dissipated power due to regulator voltage drop.

In Power-down mode the VSP_RF regulator is not operating. VSP_RF pin is connected to V_{DD} through 1 k Ω resistor.

Connection through resistors assures smooth power-up of the system and a smooth transition from Power-down mode to other operating modes.

VSP_A and VSP_D Regulators

VSP_A and VSP_D regulators are used to supply the AS3911 analog and digital blocks respectively. In 3.3 V mode, VSP_A and VSP_D regulator are set to the same regulated voltage as the VSP_RF regulator, in 5 V mode VSP_A and VSP_D regulated voltage is fixed to 3.4 V.

The use of VSP_A and VSP_D regulators is obligatory in 5 V mode since analog and digital blocks supplied with these two pins contain low voltage transistors which support maximum supply voltage of 3.6 V. In 3.3 supply mode the use of regulators is strongly recommended in order to improve PSRR of analog processing.

For low cost applications it is possible to disable the VSP_D regulator and to supply digital blocks through external short between VSP_A and VSP_D (configuration bit *vspd_off* in the **IO Configuration Register 2**). In case VSD_D regulator is disabled VSP_D can alternatively be supplied from V_{DD} (in 3.3 V mode only) in case VSP_A is not more than 300mV lower than V_{DD} .

Power-down Support Block

In the Power-down mode the regulators are disabled in order to save current. In this mode a low power Power-down Support block which maintains the VSP_D and VSP_A in below 3.6V is enabled. Typical regulated voltage in this mode is 3.1V at 5V supply and 2.2V at 3V supply. When 3.3 V supply mode is set the Power-down Support block is disabled, its output is connected to V_{DD} through 1k Ω resistor.

Typical consumption of Power-down Support block is 600nA at 5V supply.

Measurement of Supply Voltages

Using direct command [Measure Power Supply](#) it is possible to measure V_{DD} and regulated voltages VSP_A, VSP_D, and VSP_RF.

Communication to External Microcontroller

The AS3911 is a slave device and the external microcontroller initiates all communication. Communication is performed by a 4-wire Serial Peripheral Interface (SPI). The AS3911 asks microcontroller for its attention by sending an interrupt (pin IRQ). In addition, the microcontroller can use clock signal available on pin MCU_CLK when the oscillator is running.

Serial Peripheral Interface (SPI)

While signal /SS is high the SPI interface is in reset, while it is low the SPI interface is enabled. It is recommended to keep signal /SS high whenever the SPI interface is not in use. MOSI is sampled at the falling edge of SCLK. All communication is done in blocks of 8 bits (bytes). First two bits of first byte transmitted after high to low transition of /SS define SPI operation mode. MSB bit is always transmitted first (valid for address and data). Read and Write modes support address auto-incrementing, which means that in case after the address and first data byte some additional data bytes are sent (read), they are written to (read from) addresses incremented by '1'. [Figure 22](#) defines possible modes.

MISO output is usually in tristate, it is only driven when output data is available. Due to this the MOSI and the MISO can be externally shorted to create a bidirectional signal.

During the time the MISO output is in tristate, it is possible to switch on a 10kΩ pull down by activating option bits *miso_pd1* and *miso_pd2* in the [IO Configuration Register 2](#).

Figure 20:
Serial Data Interface (4-wire interface) Signal Lines

| Name | Signal | Signal Level | Description |
|------|------------------------------|--------------|--------------------------------|
| /SS | Digital input with pull-up | CMOS | SPI Enable (active low) |
| MOSI | Digital input | CMOS | Serial data input |
| MISO | Digital output with tristate | CMOS | Serial data output |
| SCLK | Digital input | CMOS | Clock for serial communication |

Figure 21:
Signal to Microcontroller

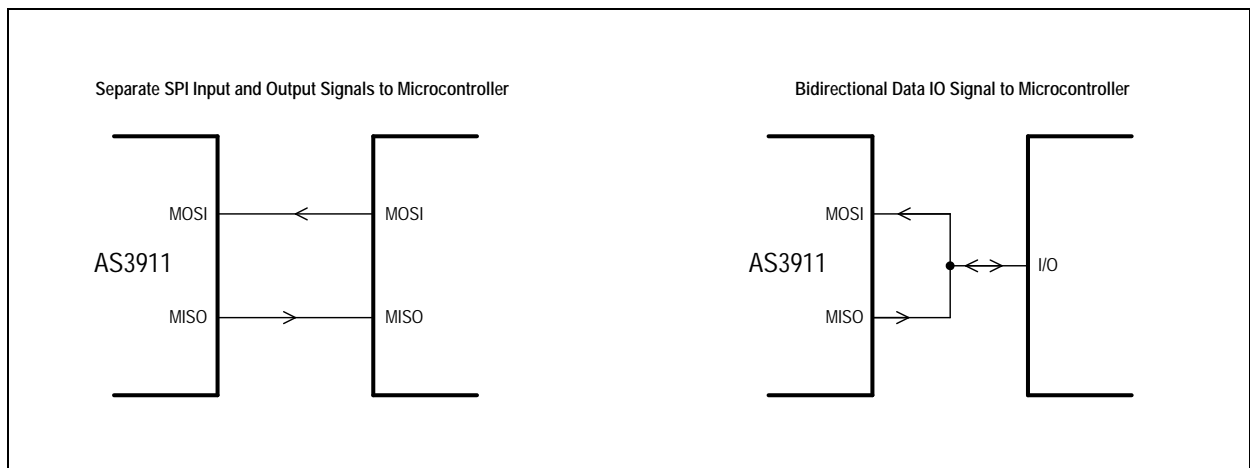


Figure 22 provides information on the SPI operation modes. Reading and writing of registers is possible in any AS3911 operation mode. FIFO operations are possible in case *en* (bit 7 of the [Operation Control Register](#)) is set and Xtal oscillator frequency is stable.

Figure 22:
SPI Operation Modes

| MODE | MODE Pattern (communication bits) | | | | | | | | MODE Related Data |
|---------------------|-----------------------------------|----|---------|----|----|----|----|----|--|
| | MODE | | Trailer | | | | | | |
| | M1 | M0 | C5 | C4 | C3 | C2 | C1 | C0 | |
| Register Write | 0 | 0 | A5 | A4 | A3 | A2 | A1 | A0 | Data byte (or more bytes in case of auto-incrementing) |
| Register Read | 0 | 1 | A5 | A4 | A3 | A2 | A1 | A0 | Data byte (or more bytes in case of auto-incrementing) |
| FIFO Load | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | One or more bytes of FIFO data |
| FIFO Read | 1 | 0 | 1 | 1 | 1 | 1 | 1 | 1 | One or more bytes of FIFO data |
| Direct Command Mode | 1 | 1 | C5 | C4 | C3 | C2 | C1 | C0 | |

Writing of Data to Addressable Registers (Write Mode)

Following figures show cases of writing a single byte and writing multiple bytes with auto-incrementing address. After the SPI operation mode bits, the address of register to be written is provided. Then one or more data bytes are transferred from the SPI, always from the MSB to the LSB. The data byte is written in register on falling edge of its last clock. In case the communication is terminated by putting /SS high before a packet of 8 bits composing one byte is sent, writing of this register is not performed. In case the register on the defined address does not exist or it is a read only register no write is performed.

Figure 23:
SPI Communication: Writing of Single Byte


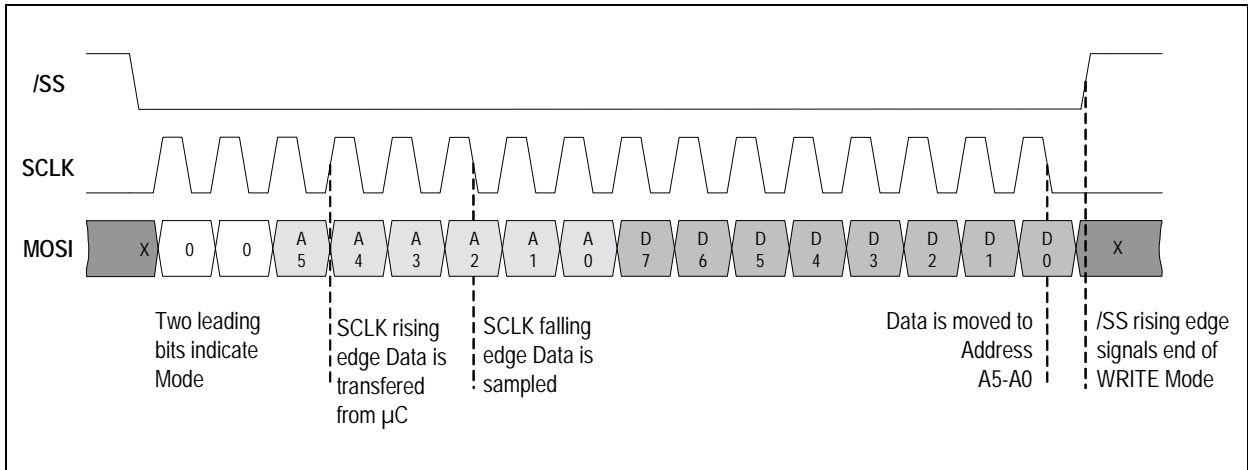


Figure 24:
SPI Communication: Writing of Multiple Bytes

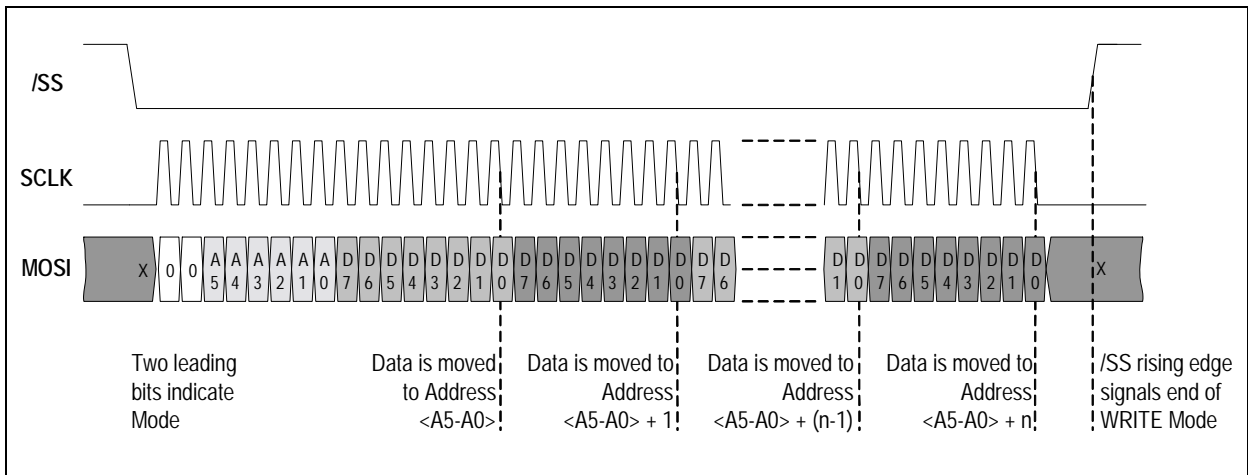

Reading of Data from Addressable Registers (Read Mode)


After the SPI operation mode bits the address of register to be read has to be provided from the MSB to the LSB. Then one or more data bytes are transferred to MISO output, always from the MSB to the LSB. As in case of the write mode also the read mode supports auto-incrementing address.

MOSI is sampled at the falling edge of SCLK (like shown in the following diagrams), data to be read from the AS3911 internal register is driven to MISO pin on rising edge of SCLK and is sampled by the master at the falling edge of SCLK.

In case the register on defined address does not exist all 0 data is sent to MISO.

Figure 25 provides an example for reading of single byte.

Figure 25:
SPI Communication: Reading of Single Byte

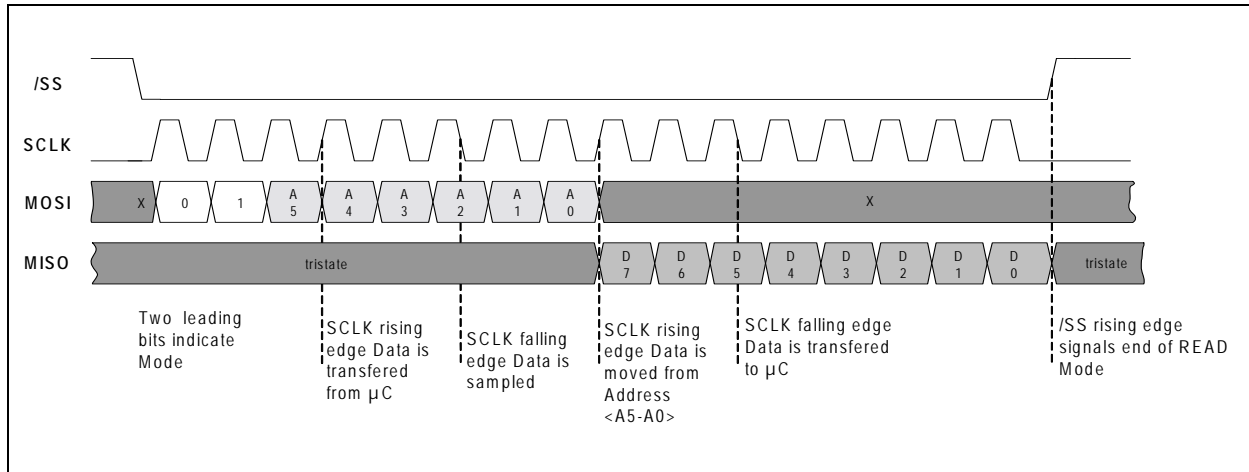


Loading Transmitting Data into FIFO

Loading the transmitting data into the FIFO is similar to writing data into an addressable registers. Difference is that in case of loading more bytes all bytes go to the FIFO. SPI operation mode bits 10 indicate FIFO operations. In case of loading transmitting data into FIFO all bits <C5 – C0> are set to 0. Then a bit-stream, the data to be sent (1 to 96 bytes), can be transferred. In case the command is terminated by putting /SS high before a packet of 8 bits composing one byte is sent, writing of that particular byte in FIFO is not performed.

Figure 26 shows how to load the Transmitting Data into the FIFO.


Figure 26:
SPI Communication: Loading of FIFO

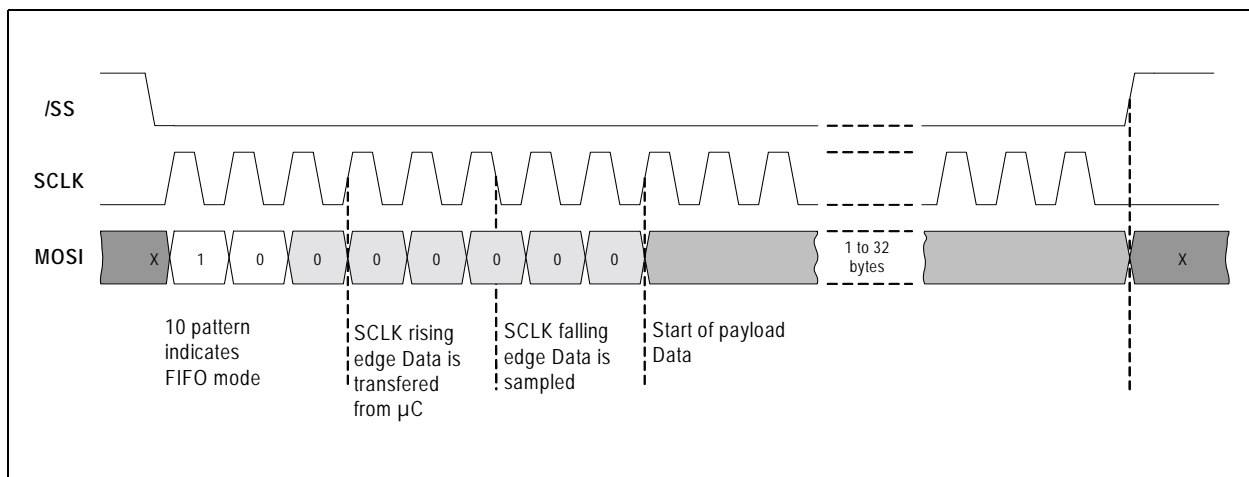

Reading Received Data from FIFO

Reading received data from the FIFO is similar to reading data from an addressable registers. Difference is that in case of reading more bytes they all come from the FIFO. SPI operation mode bits 10 indicate FIFO operations. In case of reading the received data from the FIFO all bits <C5 – C0> are set to 1. On the following SCLK rising edges the data from FIFO appears as in case of read data from addressable registers. In case the command is terminated by putting /SS high before a packet of 8 bits composing one byte is read that particular byte is considered unread and will be the first one read in next FIFO read operation.

Figure 27:
SPI Communication: Reading of FIFO

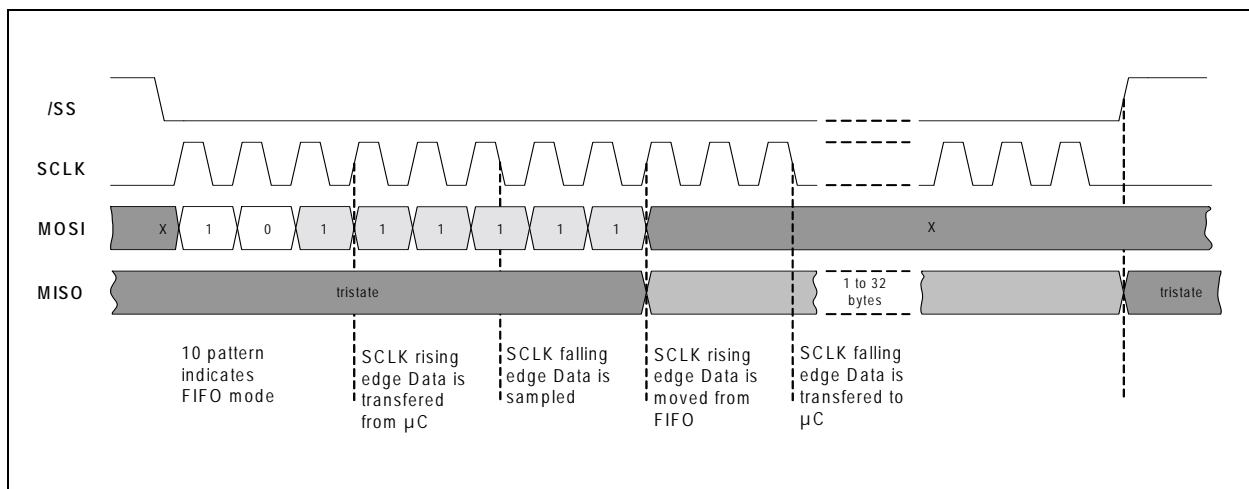


Direct Command Mode

Direct Command Mode has no arguments, so a single byte is sent. SPI operation mode bits 11 indicate Direct Command Mode. The following six bits define command code, sent MSB to the LSB. The command is executed on falling edge of last clock.

While execution of some Direct Commands is immediate, there are others which start a process of certain duration (calibration, measurement...). During execution of such commands it is not allowed to start another activity over the SPI interface. After execution of such a command is terminated an IRQ is sent.


Figure 28:
SPI Communication: Direct Command

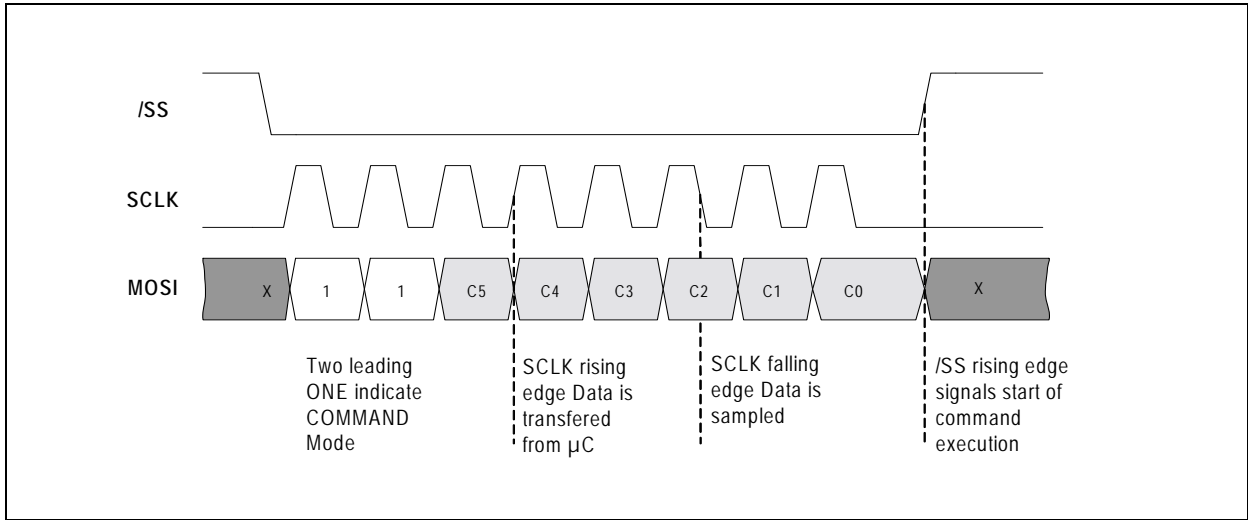

Direct Command Chaining

Direct commands with immediate execution can be followed by another SPI mode (Read, Write or FIFO) without deactivating /SS signal in between.

Figure 29:
Direct Command Chaining

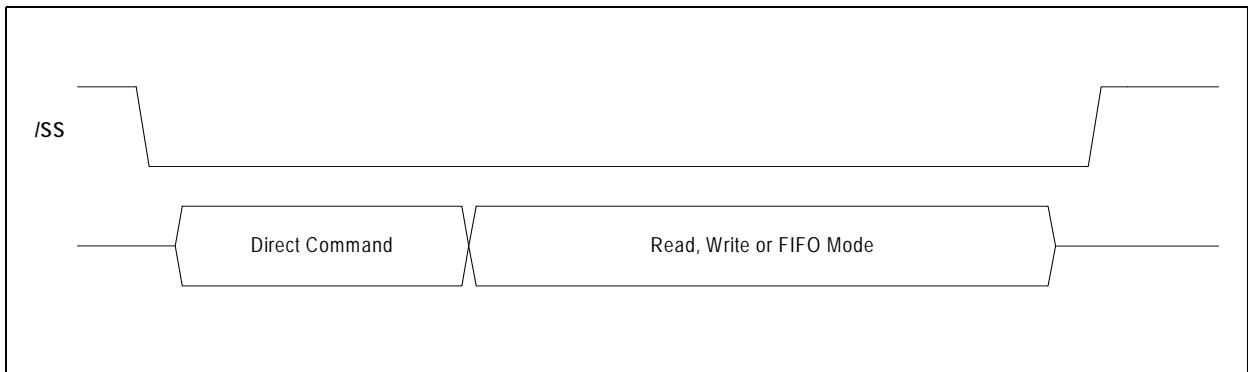

SPI Timing

Figure 30:
SPI Timing

| Symbol | Parameter | Min | Typ | Max | Unit | Notes |
|--|----------------------------------|----------|-----|-----|------|---|
| General Timing ($V_{DD} = V_{DD_IO} = V_{DD_D} = 3.3\text{ V}$, Temperature 25°C) | | | | | | |
| T_{SCLK} | SCLK period | 100 | | | ns | $T_{SCLK} = T_{SCLKL} + T_{SCLKH}$, use of shorter SCLK period may lead to incorrect operation of FIFO |
| T_{SCLKL} | SCLK low | 40 | | | ns | |
| T_{SCLKH} | SCLK high | 40 | | | ns | |
| T_{SSH} | SPI reset (/SS high) | 100 | | | ns | |
| T_{NCSL} | /SS falling to SCLK rising | 25 | | | ns | First SCLK pulse |
| $T_{NC SH}$ | SCLK falling to /SS rising | 25 (tbd) | | | ns | Last SCLK pulse |
| T_{DIS} | Data in setup time | 10 | | | ns | |
| T_{DIH} | Data in hold time | 10 | | | ns | |
| Read Timing ($V_{DD} = V_{DD_IO} = V_{DD_D} = 3.3\text{ V}$, Temperature 25°C, $C_{LOAD} \leq 50\text{ pF}$) | | | | | | |
| T_{DOD} | Data out delay | | 20 | | ns | |
| T_{DOHZ} | Data out to high impedance delay | | 20 | | ns | |

Figure 31:
SPI General Timing


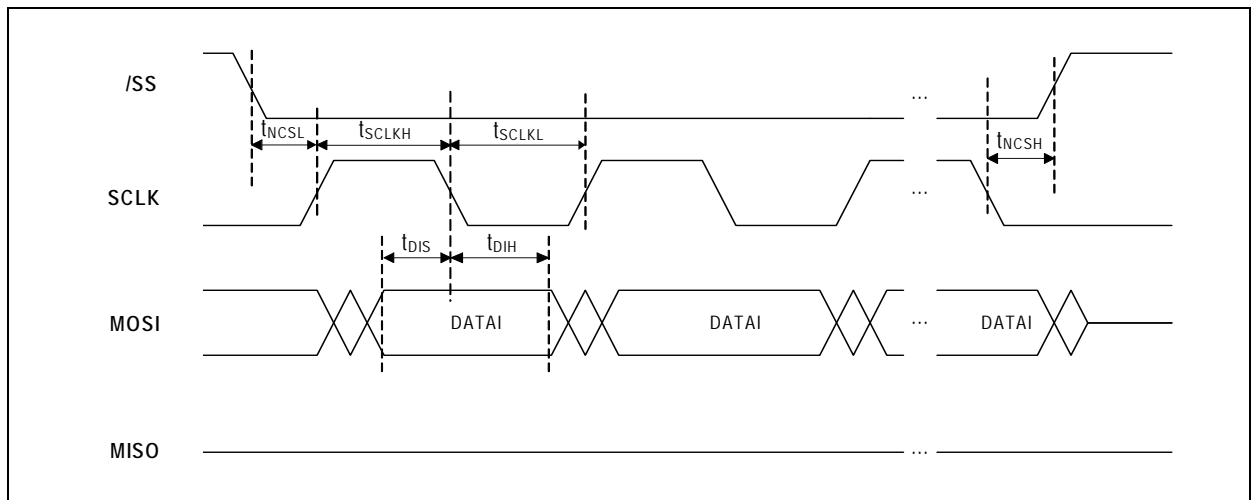


Figure 32:
SPI Read Timing

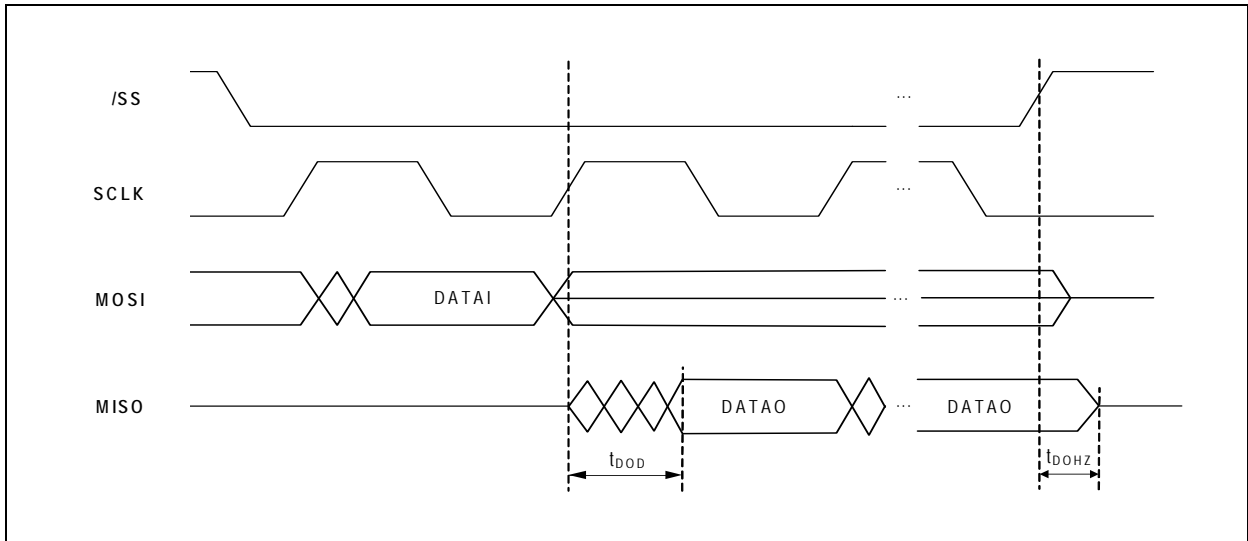

Interrupt Interface

There are three interrupt registers implemented in the AS3911 (Main Interrupt Register and auxiliary Timer and NFC Interrupt Register and Error and Wake-up Interrupt Register). Main Interrupt Register contains information about six interrupt sources, while two bits reference to interrupt sources detailed in Timer and NFC Interrupt Register and Error and Wake-up Interrupt Register.

When an interrupt condition is met the source of interrupt bit is set in the Main Interrupt Register and the IRQ pin transitions to high.

The microcontroller then reads the Main Interrupt Register to distinguish between different interrupt sources. In case the bits pointing to auxiliary Interrupt register are set, additionally corresponding auxiliary interrupt register(s) has to be read. After a particular Interrupt Register is read, its content is reset to 0. Exceptions to this rule are the bits pointing to auxiliary registers. These bits are only cleared when corresponding auxiliary register is read. IRQ pin transitions to low after the interrupt bit(s) which caused its transition to high has been read. Please note that there may be more than one interrupt bits set in case the microcontroller did not immediately read the interrupt registers after the IRQ signal was set and another event causing interrupt occurred. In that case the IRQ pin transitions to low after the last bit which caused interrupt is read.

In case an interrupt from a certain source is not required it can be disabled by setting corresponding bit in the Mask Interrupt registers. In case of masking a certain interrupt source the interrupt is not produced, but the source of interrupt bit is still set in interrupt registers.

Figure 33:
IRQ Output

| Name | Signal | Signal Level | Description |
|------|----------------|--------------|----------------------|
| IRQ | Digital output | CMOS | Interrupt output pin |

FIFO Water Level and FIFO Status Registers

The AS3911 contains a 96 byte FIFO. In case of transmitting the Control logic shifts the data, which was previously loaded by the external microcontroller to the Framing Block and further to the Transmitter. During reception, the demodulated data is stored in the FIFO and the external microcontroller can download received data once reception was terminated.

Transmit and receive capabilities of the AS3911 are not limited by the FIFO size due to a FIFO water level interrupt system. During transmission an interrupt is sent (IRQ due to FIFO water level in the [Main Interrupt Register](#)) when the content of data in the FIFO passes from (*water level + 1*) to *water level* and the complete transmit frame has not been loaded in the FIFO yet. The external microcontroller can now add more data in the FIFO. The same stands for the reception: when the number of received bytes passes from (*water level - 1*) to *water level* an interrupt is sent to inform the external controller that data has to be downloaded from FIFO in order not to lose receive data due to FIFO overflow.

During transmission water level IRQ is additionally set in case all transmission bytes have not been written in FIFO yet and if number of bytes written into FIFO is lower than water level. In this case an IRQ is sent when number of bytes in FIFO drops below 4.

It is important to note that FIFO IRQ is not produced while SPI is active in FIFO load or read mode. Due to this the FIFO loading/reading rate has to be higher than Tx/Rx bit rate, once FIFO loading/reading is finished the /SS pin has to be pulled to V_{DD} (logic remains in FIFO load/read mode as long as /SS remains low).

In case controller knows that the receive data frame is smaller than the FIFO size the water level interrupt does not have to be served. In such case the water level interrupt can be masked.

The external controller has to serve the FIFO faster than data is transmitted or received. Using SCLK frequency which is at least double than the actual receive or transmit bit rate is recommended.

There are two settings of the FIFO water level available for receive and transmit in the [IO Configuration Register 1](#).

After data reception is terminated the external microcontroller needs to know how much data is still stored in the FIFO: This information is available in the [FIFO Status Register 1](#) and [FIFO Status Register 2](#) which displays number of bytes in the FIFO

which were not read out. [FIFO Status Register 1](#) can also be read while reception and transmission processes are active to get info about current number of bytes in FIFO. In that case user has to take in account that Rx/Tx process is going on and that the number of data bytes in FIFO may have already changed by the time the reading of register is finished.

The [FIFO Status Register 2](#) additionally contains two bits which indicate that the FIFO was not correctly served during reception or transmission process (FIFO overflow and FIFO underflow).

FIFO overflow is set when too much data is written in FIFO. In case this bit is set during reception the external controller did not react on time on water level IRQ and more than 96 bytes were written in the FIFO. The received data is of course corrupted in such a case. During transmission this means that controller has written more data than FIFO size. The data to be transmitted was corrupted.

FIFO underflow is set when data was read from empty FIFO. In case this bit is set during reception the external controller read more data than was actually received. During transmission this means that controller has failed to provide the quantity of data defined in number of transmitted bytes registers on time.

Pin MCU_CLK

Pin MCU_CLK may be used as clock source for the external microcontroller. Depending on the operation mode either a low frequency clock (32 kHz) from the RC oscillator or the clock signal derived from crystal oscillator is available on pin MCU_CLK. The MCU_CLK output pin is controlled by bits *out_c1*, *out_c10* and *If_clk_off* in the [IO Configuration Register 1](#). Bits *out_c1* enable the use of pin MCU_CLK as clock source and define the division for the case the crystal oscillator is running (13.56MHz, 6.78MHz and 3.39MHz are available). Bit *If_clk_off* controls the use of low frequency clock (32kHz) in case the crystal oscillator is not running. By default configuration, which is defined at power-up, the 3.39MHz clock is selected and the low frequency clock is enabled.

In case the Transparent mode (see [“Stream Mode and Transparent Mode” on page 137](#)) is used the use of MCU_CLK is mandatory since clock which is synchronous to the field carrier frequency is needed to implement receive and transmit framing in the external controller. The use of MCU_CLK is recommended also for the case where the internal framing is used. Using MCU_CLK as the microcontroller clock source generates noise which is synchronous to the reader carrier frequency and is therefore filtered out by the receiver while using some other incoherent clock source may produce noise which perturbs the reception. Use of MCU_CLK is also better for EMC compliance.

Direct Commands

Figure 34:
List of Direct Commands

| Command Code (hex) | Command | Comments | Command Chaining | Interrupt after Termination | Operation Mode ⁽¹⁾ |
|--------------------|--------------------------------|---|------------------|-----------------------------|-------------------------------|
| C1 | Set Default | Puts the AS3911 in default state (same as after power-up) | No | No | all |
| C2, C3 | Clear | Stops all activities and clears FIFO | Yes | No | en |
| C4 | Transmit With CRC | Starts a transmit sequence using automatic CRC generation | Yes | No | en, tx_en |
| C5 | Transmit Without CRC | Starts a transmit sequence without automatic CRC generation | Yes | No | en, tx_en |
| C6 | Transmit REQA | Transmits REQA command (ISO14443A mode only) | Yes | No | en, tx_en |
| C7 | Transmit WUPA | Transmits WUPA command (ISO14443A mode only) | Yes | No | en, tx_en |
| C8 | NFC Initial Field ON | Performs Initial RF Collision avoidance and switch on the field | Yes | Yes | en ⁽⁹⁾ |
| C9 | NFC Response Field ON | Performs Response RF Collision avoidance and switch on the field | Yes | Yes | en ⁽⁹⁾ |
| CA | NFC Response Field ON with n=0 | Performs Response RF Collision avoidance with n=0 and switch on the field | Yes | Yes | en ⁽⁹⁾ |
| CB | Go to Normal NFC Mode | Accepted in NFCIP-1 active communication bit rate detection mode | Yes | No | |
| CC | Analog Preset | Presets Rx and Tx configuration based on state of Mode Definition Register and Bit Rate Definition Register | Yes | No | all |
| D0 | Mask Receive Data | Receive after this command is ignored | Yes | No | en, rx_en |

| Command Code (hex) | Command | Comments | Command Chaining | Interrupt after Termination | Operation Mode ⁽¹⁾ |
|--------------------|-----------------------------|---|------------------|-----------------------------|-------------------------------|
| D1 | Unmask Receive Data | Receive data following this command is normally processed (this command has priority over internal mask receive timer) | Yes | No | en, rx_en |
| D2 | (see note 2) | Not used | | | |
| D3 | Measure Amplitude | Amplitude of signal present on RFI inputs is measured, result is stored in A/D Converter Output Register | No | Yes | en |
| D4 | Squelch | Performs gain reduction based on the current noise level | No | No | en, rx_en |
| D5 | Reset Rx Gain | Clears the current Squelch setting and loads the manual gain reduction from Receiver Configuration Register 4 | No | No | en ⁽¹⁰⁾ |
| D6 | Adjust Regulators | Adjusts supply regulators according to the current supply voltage level | No | Yes | en ⁽⁵⁾ |
| D7 | Calibrate Modulation Depth | Starts sequence which activates the Tx, measures the modulation depth and adapts it to comply with the specified modulation depth | No | Yes | en |
| D8 | Calibrate Antenna | Starts the sequence to adjust parallel capacitances connected to TRIMx pins so that the antenna LC tank is in resonance | No | Yes | en |
| D9 | Measure Phase | Measurement of phase difference between the signal on RFO and RFI | No | Yes | en |
| DA | Clear RSSI | Clears RSSI bits and restarts the measurement | Yes | No | en |
| DC | Transparent Mode | Enter in Transparent mode | No | No | en |
| DD | Calibrate Capacitive Sensor | Calibrates capacitive sensor | No | Yes | (see note 6) |

| Command Code (hex) | Command | Comments | Command Chaining | Interrupt after Termination | Operation Mode ⁽¹⁾ |
|--------------------|-----------------------------|---------------------------------------|------------------|-----------------------------|-------------------------------|
| DE | Measure Capacitance | Performs Capacitor Sensor Measurement | No | Yes | (see note 7) |
| DF | Measure Power Supply | | No | Yes | en |
| E0 | Start General Purpose Timer | | Yes | No | en |
| E1 | Start Wake-up Timer | | Yes | No | all except wu |
| E2 | Start Mask-receive Timer | | Yes | No | (see note 8) |
| E3 | Start No-response Timer | | Yes | No | en, rx_en |
| Other Fx | | Reserved for test | | | |
| Other codes | | Not used | | | |

Note(s) and/or Footnote(s):

1. The 'Operation Mode' column in the above table defines which [Operation Control Register](#) bits have to be set in order to accept a particular command.
2. Was AD Convert in the AS3910
3. Called Measure RF in the AS3910
4. Called Check Antenna Resonance in the AS3910
5. This command is not accepted in case the external definition of the regulated voltage is selected in the [Regulator Voltage Control Register](#) (bit **reg_s** is set to high)
6. Accepted in all modes in case **cs_mcal**=0 ([Capacitive Sensor Control Register](#)), it is recommended to execute this command in Power-down mode
7. Accepted in all modes, it is recommended to execute this command in Power-down mode.
8. Accepted only in the Initial NFC Target Mode
9. After termination of this command **I_cat** or **I_cac** IRQ is sent
10. Called Clear Squelch in the AS3910

Set Default

This direct command puts the AS3911 in the same state as power-up initialization. All registers are initialized to the default state. The only exception are [IO Configuration Register 1](#), [IO Configuration Register 2](#) and [Operation Control Register](#) which are not affected by [Set Default](#) command and are only set to default state at power-up. Please note that results of different calibration and adjust commands are also lost.

This direct command is accepted in all operating modes. In case this command is sent while *en* (bit 7 of the [Operation Control Register](#)) is not set FIFO and FIFO Status Registers are *not* cleared.

Direct command chaining is not allowed since this command clears all registers.

IRQ due to termination of direct command is not produced.

Clear

This direct command stops all current activities (transmission or reception), clears FIFO, clears FIFO Status Registers and stops all timers except Wake-up timer (in case bit *nrt_emv* in the [General Purpose and No-response Timer Control Register](#) is set to one, the No-response timer is not stopped). It also clears collision and interrupt registers. This command has to be sent first in a sequence preparing a transmission before writing data to be transmitted in FIFO (except in case of direct commands [Transmit REQA](#) and [Transmit WUPA](#)).

This command is accepted in case *en* (bit 7 of the [Operation Control Register](#)) is set and Xtal oscillator frequency is stable.

Direct command chaining is possible.

IRQ due to termination of direct command is not produced.

Transmit Commands

All Transmit commands ([Transmit With CRC](#), [Transmit Without CRC](#), [Transmit REQA](#) and [Transmit WUPA](#)) are only accepted in case the Transmitter is enabled (bit *tx_en* is set).

Before sending commands [Transmit With CRC](#) and [Transmit Without CRC](#) direct command [Clear](#) has to be sent, followed by definition of number of transmitted bytes and writing data to be transmitted in FIFO.

Direct commands [Transmit REQA](#) and [Transmit WUPA](#) are used to transmit ISO14443A commands REQA and WUPA respectively. Sending command [Clear](#) before these two commands is not necessary.

Direct command chaining is possible.

IRQ due to termination of direct command is not produced.

NFC Field ON Commands

These commands are used to perform the RF collision avoidance and switch the field on in case no collision was detected. The Collision avoidance threshold defined in the [External Field Detector Threshold Register](#) is used to observe the RF_IN inputs and to determine whether there is some other device, which is emitting the 13.56 MHz field, present close to the AS3911 antenna. In case collision is not detected the reader field is switched on automatically (bit *tx_en* in the [Operation Control Register](#) is set) and an IRQ with *l_cat* flag in [Timer and NFC Interrupt Register](#) is sent after minimum guard time defined by the NFCIP-1 standard to inform the controller that message transmission using a Transmit command can be initiated.

In case a presence of external field is detected an IRQ with *l_cac* flag is sent. In such case a transmission cannot be performed, NFC Field ON command has to be repeated as long as collision is not detected any more.

Command **NFC Initial Field ON** performs Initial Collision Avoidance according to NFCIP-1 standard; number n is defined by bits nfc_n1 and nfc_n0 in **Auxiliary Definition Register**.

Command **NFC Response Field ON** performs Response Collision Avoidance according to NFCIP-1 standard; number n is defined by bits nfc_n1 and nfc_n0 in **Auxiliary Definition Register**.

Command **NFC Response Field ON with $n=0$** , performs Response Collision Avoidance where n is 0.

Implemented active delay time is on lower NFCIP-1 specification limit, since the actual active delay time will also include detection of the field deactivation, controller processing delay and sending the NFC Field ON command.

Figure 35:
Direct Command NFC Initial Field ON

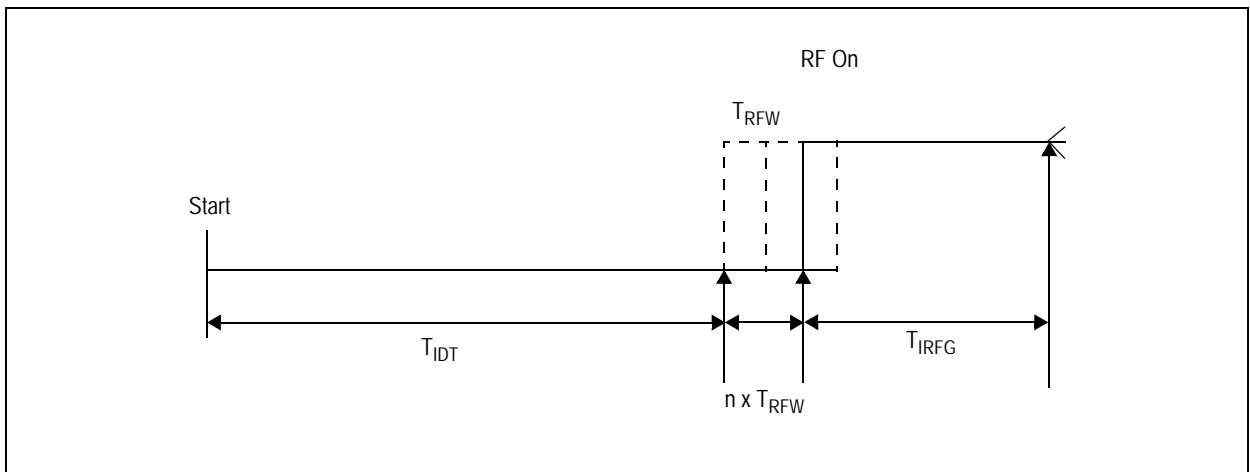


Figure 36:
Direct Command NFC Response Field ON

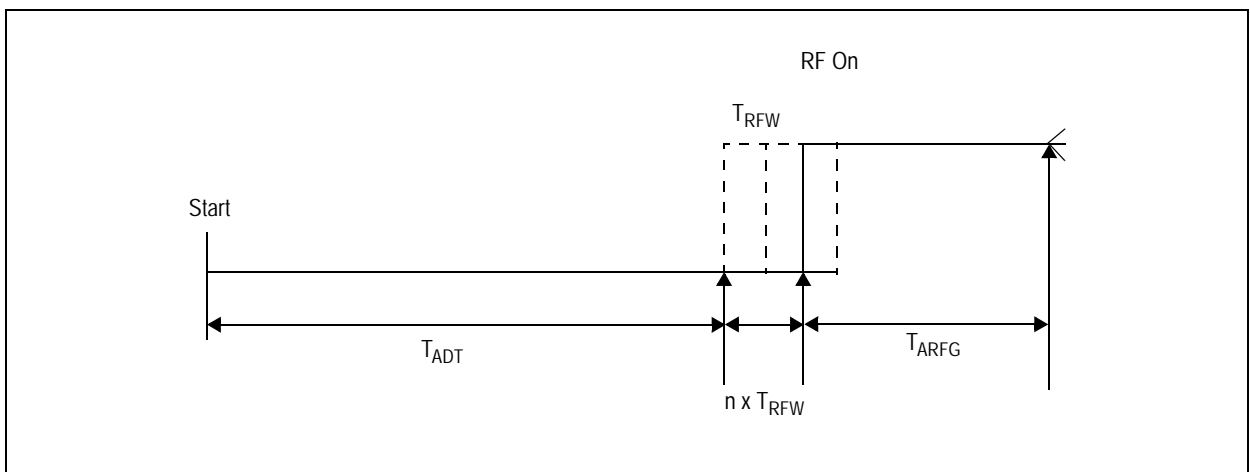


Figure 37:
Timing Parameters of NFC Field ON Commands

| Symbol | Parameter | Value | Unit | Note |
|-------------------|--------------------|-------|------|-----------------------|
| T _{IDT} | Initial delay time | 4096 | /fc | NFC Initial Field ON |
| T _{RWF} | RF waiting time | 512 | /fc | |
| T _{IRFG} | Initial guard time | >5 | ms | NFC Initial Field ON |
| T _{ADT} | Active delay time | 768 | /fc | NFC Response Field ON |
| T _{ARFG} | Active guard time | 1024 | /fc | NFC Response Field ON |

This command is accepted in case *en* (bit 7 of the [Operation Control Register](#)) is set and Xtal oscillator frequency is stable.

Go to Normal NFC Mode

This command is used to transition from NFC target bit rate detection mode to normal mode. Additionally it copies the content of the [NFCIP Bit Rate Detection Display Register](#) to the [Bit Rate Definition Register](#) and correctly sets the bit *tr_am* in the [Auxiliary Definition Register](#).

Analog Preset

This command is used to preset Receiver and Transmitter configuration based on state of [Bit Rate Definition Register](#) and [Bit Rate Definition Register](#). Please note that no preset is done in case Sub-carrier bits Stream or BPSK bit stream mode is selected. The list of configuration bits that are preset is given in [Figure 38](#).

Figure 38:
Register Preset Bits

| Bit | Bit Name | Function |
|--|----------|--|
| Address 02_n: Operation Control Register | | |
| 5 | rx_chn | 1 : one channel enabled → NFCIP-1 active communication (both initiator and target) |
| 3 | tx_en | 0 : disable TX operation → NFCIP-1 active communication (both initiator and target) |
| Note: In case of any target mode or NFCIP-1 initiator mode bit <i>tx_en</i> is set to 0 to disable transmitter in case it was enabled. In NFCIP-1 mode the switching on of the transmitter field is controlled by dedicated commands. | | |
| Address 05_n: ISO14443A and NFC 106kb/s Settings Register | | |
| 5 | nfc_f0 | 1 : Add SB (F0) and LEN byte during Tx and skip SB (F0) byte during TX → NFCIP-1 active communication (both initiator and target) |

| Bit | Bit Name | Function |
|--|----------|---|
| Address 09_h: Auxiliary Definition Register | | |
| 5 | tr_am | Tx Modulation type (depends on mode definition and Tx bit rate) 0: OOK → ISO14443A, NFCIP-1 106 kb/s (both initiator and target), NFC Forum Type 1 Tag 1: AM → ISO14443B, FeliCa, NFCIP-1 212 kb/s and 424 kb/s |
| 4 | en_fd | Enable External Field Detector with Peer Detection threshold 0: All modes except NFCIP-1 active communication 1: NFCIP-1 active communication (both initiator and target) |
| Address 0A_h: Receiver Configuration Register 1 | | |
| 7 | ch_sel | 0: Enable AM channel → NFCIP-1 active communication (both initiator and target) |
| 6 | amd_sel | AM demodulator select (depend on Rx bit rate) 0: Peak detector → All Rx bit rates equal or below $f_c/16$ (848 kb/s) 1: Mixer → All VHBR Rx bit rates ($f_c/8$ and $f_c/4$) |
| 5 | lp2 | Low pass control (depends on mode definition and Rx bit rate) (see Figure 15) |
| 4 | lp1 | |
| 3 | lp0 | |
| 2 | h200 | First and third stage zero setting (depends on mode definition and Rx bit rate) (see Figure 15) |
| 1 | h80 | |
| 0 | z12k | |
| Address 0C_h: Receiver Configuration Register 3 | | |
| 1 | lim | Clip output of 1 st and 2 nd stage 0: All modes except NFCIP-1 active communication 1: NFCIP-1 active communication (both initiator and target) |
| 0 | rg_nfc | Forces gain reduction in 2 nd and 3 rd gain stage 0: All modes except NFCIP-1 active communication 1: NFCIP-1 active communication (both initiator and target) |

Mask Receive Data and Unmask Receive Data

After the direct command [Mask Receive Data](#) the signal *rx_on*, which enables the RSSI and AGC operation of the Receiver (see also [Receiver](#)) is forced to low, processing of the receiver output by the receive data framing block is disabled. This command is useful to mask receiver and receive framing from processing the data when there is actually no input and only a noise would be processed (for example in case where a transponder processing time after receiving a command from the reader is long). Masking of receive is also possible using Mask Receive Timer. Actual masking is a logical or of the two mask receive processes.

The direct command [Unmask Receive Data](#) is enabling normal processing of the received data (signal *rx_on* is set high to enable the RSSI and AGC operation), the receive data framing block is enabled. A common use of this command is to enable again the receiver operation after it was masked by the command [Mask Receive Data](#). In case *Mask Receive Timer* is running while command [Unmask Receive Data](#) is received, reception is enabled, *Mask Receive Timer* is reset.

The commands [Mask Receive Data](#) and [Unmask Receive Data](#) are only accepted when the Receiver is enabled (bit *rx_en* is set).

Direct command chaining is possible.

IRQ due to termination of direct command is not produced.

Measure Amplitude

This command measures the amplitude on the RFI inputs and stores result in the [A/D Converter Output Register](#).

When this command is executed the Transmitter and Amplitude Detector are enabled, the output of the Amplitude Detector is multiplexed to the A/D Converter input (the A/D Converter is in absolute mode). The Amplitude Detector conversion gain is $0.6 V_{INPP} / V_{OUT}$. One LSB of the A/D converter output represents 13.02 mV_{pp} on the RFI inputs. A $3 V_{pp}$ signal, which is maximum allowed level on each of the two RFI inputs, results in 1.8 V output DC voltage and would produce a value of 1110 0110b on the A/D converter output.

Duration time: 25 μs max.

This command is accepted in case *en* (bit 7 of the [Operation Control Register](#)) is set and Xtal oscillator frequency is stable.

Direct command chaining is not possible.

IRQ due to termination of direct command is produced after command execution is terminated.

Squelch

This direct command is intended to avoid demodulation problems of transponders which produce a lot of noise during data processing. It can also be used in a noisy environment. The operation of this command is explained in ["Squelch" on page 22](#).

Duration time: 500 μs max.

This command is only accepted when the Transmitter and the Receiver are operating. Command is actually executed only in case signal *rx_on* is low.

Direct command chaining is not possible.

IRQ due to termination of direct command is not produced.

Reset Rx Gain

This command initializes the AGC, Squelch and RSSI block. Sending this command stops a squelch process in case it is going on, clears the current Squelch setting and loads the

manual gain reduction from [Receiver Configuration Register 4](#). This command is accepted in case *en* (bit 7 of the [Operation Control Register](#)) is set and Xtal oscillator frequency is stable. Direct command chaining is possible. IRQ due to termination of direct command is not produced.

Adjust Regulators

When this command is sent the power supply level of V_{DD} is measured in maximum load conditions and the regulated voltage reference is set 250 mV below this measured level to assure maximum possible stable regulated supply (See “Power Supply System” on page 34.). Using this command increases the system PSSR.

At the beginning of execution of this command, both the receiver and transmitter are switched on to have the maximum current consumption, the regulators are set to the maximum regulated voltage (5.1 V in case of 5 V supply and 3.4 V in case of 3.3 V supply mode). After 300 μ s V_{SP_RF} is compared to V_{DD} , in case V_{SP_RF} is not at least 250 mV lower the regulator setting is reduced for one step (120 mV in case of 5 V supply and 100 mV in case of 3.3 V supply mode) and measurement is done after next 300 μ s. Procedure is repeated until V_{SP_RF} drops at least 250 mV below V_{DD} or until minimum regulated voltage (3.9 V in case of 5 V supply and 2.4 V in case of 3.3 V supply mode) is reached.

Duration time: 5 ms max.

This command is accepted in case *en* (bit 7 of the [Operation Control Register](#)) is set and Xtal oscillator frequency is stable. This command is not accepted in case the external definition of the regulated voltage is selected in the [Regulator Voltage Control Register](#) (bit *reg_s* is set to H)

Direct command chaining is not possible.

IRQ due to termination of direct command is produced after command execution is terminated.

Calibrate Modulation Depth

Starts a patent pending sequence, which activates the transmission, measures the modulation depth and adapts it to comply with the modulation depth specified in the [AM Modulation Depth Control Register](#). When calibration procedure is finished result is displayed in the [AM Modulation Depth Display Register](#). Please refer to See “AM Modulation Depth: Definition and Calibration” on page 132. for details about setting the AM modulation depth and running this command.

Duration time: 275 μ s max.

This command is accepted in case *en* (bit 7 of the [Operation Control Register](#)) is set and Xtal oscillator frequency is stable. Direct command chaining is not possible.

IRQ due to termination of direct command is produced after command execution is terminated.

Calibrate Antenna

Sending this command starts a sequence which adjusts the parallel capacitances connected to TRIMx pins so that the antenna LC tank is in resonance. See [Antenna Tuning](#) for details.

Duration time: 250 μ s max.

This command is accepted in case *en* (bit 7 of the [Operation Control Register](#)) is set and Xtal oscillator frequency is stable.

Measure Phase

This command measures the phase difference between the signals on the RFO outputs and the signals on the RFI inputs and stores the result in the [A/D Converter Output Register](#).

During execution of the direct command [Measure Phase](#) the Transmitter and Phase Detector are enabled, the Phase Detector output is multiplexed on the input of A/D converter, which is set in relative mode. Since the A/D converter range is from 1/6 VSP_A to 5/6 VSP_A the actual phase detector range is from 30° to 150°. Values below 30° result in FF_h while values above 150° result in 00_h. 1 LSB of the A/D conversion output represents 0.13% of carrier frequency period (0.468°). The result of A/D conversion is in case of 90° phase shift in the middle of range (1000 0000b or 0111 1111b). Value higher than 1000 0000b means that phase detector output voltage is higher than VSP_A/2, which corresponds to case with phase shift lower than 90°. In the opposite case, when the phase shift is higher than 90°, the result of A/D conversion is lower than 0111 1111b. For example, the phase difference of 135° depicted in [Figure 18](#) results in 0.75 VSP_A, result stored in A/D converter is 31_d (1F_h).

The phase measurement result can be calculating using the following formulas:

$$\begin{aligned}
 0 \leq \phi \leq 30^\circ : result [dec] &= 255 \\
 30 < \phi < 150^\circ : result [dec] &= (1 - \{(\phi[deg]/180 - 1/6) * (3/2)\}) * 255 \\
 150 \geq \phi \geq 180^\circ : result [dec] &= 0
 \end{aligned}$$

Duration time: 25 µs max.

This command is accepted in case *en* (bit 7 of the [Operation Control Register](#)) is set and Xtal oscillator frequency is stable.

Direct command chaining is not possible.

IRQ due to termination of direct command is produced after command execution is terminated.

Clear RSSI

The Receiver automatically clears the RSSI bits in the **Receiver State Display Register** and starts to measure the RSSI of the received signal when the signal *rx_on* is asserted. Since the RSSI bits store peak value (peak-hold type) eventual variation of the receiver input signal will not be followed (this may happen in case of long message or test procedure). The direct command [Clear RSSI](#) clears the RSSI bits in the **Receiver State Display Register**, the RSSI measurement is restarted (in case of course *rx_on* is still high).

This command is accepted in case *en* (bit 7 of the [Operation Control Register](#)) is set and Xtal oscillator frequency is stable.

Direct command chaining is possible.

IRQ due to termination of direct command is not produced.

Transparent Mode

Enter in the Transparent mode. The Transparent mode is entered on the rising edge of signal /SS and is maintained as long as signal /SS is kept high. See [“Transparent Mode” on page 58](#) for more details.

This command is accepted in case *en* (bit 7 of the [Operation Control Register](#)) is set and Xtal oscillator frequency is stable.

Calibrate Capacitive Sensor

This command calibrates the Capacitive Sensor. See [“Capacitive Sensor” on page 14](#) for more details.

Duration time: 3 ms max.

This command is executed in case capacitive sensor automatic calibration mode is set (all bits *cs_mcal* in the [Capacitive Sensor Control Register](#) are set to 0). In order to avoid interference with Xtal oscillator and reader magnetic field it strongly recommended to use this command in Power-down mode only.

Direct command chaining is not possible.

IRQ due to termination of direct command is produced after command execution is terminated.

Measure Capacitance

This command performs the capacitance measurement. See “[Capacitive Sensor](#)” on page 14 for more details.

Duration time: 250 μ s max.

In order to avoid interference with Xtal oscillator and reader magnetic field it strongly recommended to use this command in Power-down mode only.

Direct command chaining is not possible.

IRQ due to termination of direct command is produced after command execution is terminated.

Measure Power Supply

This command performs the power supply measurement. Configuration bits *mpsv1* and *mpsv0* of the [Regulator Voltage Control Register](#) define which power supply is measured (V_{DD} , VSP_A, VSP_D and VSP_RF can be measured). Result of measurement is stored in the [A/D Converter Output Register](#). During the measurement the selected supply input is connected to a 1/3 resistive divider output of which is multiplexed to A/D converter in absolute mode. Due to 1/3 division one LSB represents 23.438 mV.

Duration time: 25 μ s max.

This command is accepted in case *en* (bit 7 of the [Operation Control Register](#)) is set and Xtal oscillator frequency is stable.

Direct command chaining is not possible.

IRQ due to termination of direct command is produced after command execution is terminated.

Start Timers

See “[Timers](#)” on page 29.

Registers

The 6-bit register addresses below are defined in the hexadecimal notation. The possible address range is from 00_h to 3F_h.

There are two types of registers implemented in the AS3911: configuration registers and display registers. The configuration registers are used to configure the AS3911. They can be written and read through the SPI (RW). The display registers are read only (RO); they contain information about the AS3911 internal state.

Registries are set to their default state at power-up and after sending direct command [Set Default](#). The only exceptions are the [IO Configuration Register 1](#) and the [IO Configuration Register 2](#) which are only set to default state at power-up. Configuration bits of these two registries are related to hardware configuration which is in most cases not going to change during the operation.

Figure 39:
Register Description

| Address[hex] | Content | Comment | Type |
|--|--|---------------------------------------|------|
| IO Configuration Registers | | | |
| 00 | IO Configuration Register 1 | Set to default state only at power-up | RW |
| 01 | IO Configuration Register 2 | | RW |
| Operation Control and Mode Definition Registers | | | |
| 02 | Operation Control Register | Set to default state only at power-up | RW |
| 03 | Mode Definition Register | | |
| 04 | Bit Rate Definition Register | | RW |
| Configuration Registers | | | |
| 05 | ISO14443A and NFC 106kb/s Settings Register | | RW |
| 06 | ISO14443B Settings Register 1 | | RW |
| 07 | ISO14443B and FeliCa Settings Register | | RW |
| 08 | Stream Mode Definition Register | | RW |
| 09 | Auxiliary Definition Register | | RW |
| 0A | Receiver Configuration Register 1 | | RW |
| 0B | Receiver Configuration Register 2 | | RW |
| 0C | Receiver Configuration Register 3 | | RW |
| 0D | Receiver Configuration Register 4 | | RW |
| Timer Definition Registers | | | |
| 0E | Mask Receive Timer Register | | RW |
| 0F | No-response Timer Register 1 | | RW |
| 10 | No-response Timer Register 2 | | RW |
| 11 | General Purpose and No-response Timer Control Register | | RW |
| 12 | General Purpose Timer Register 1 | | RW |
| 13 | General Purpose Timer Register 2 | | RW |
| Interrupt and Associated Reporting Registers | | | |
| 14 | Mask Main Interrupt Register | | RW |
| 15 | Mask Timer and NFC Interrupt Register | | RW |

| Address[hex] | Content | Comment | Type |
|---|--|---------|------|
| 16 | Mask Error and Wake-up Interrupt Register | | RW |
| 17 | Main Interrupt Register | | R |
| 18 | Timer and NFC Interrupt Register | | R |
| 19 | Error and Wake-up Interrupt Register | | R |
| 1A | FIFO Status Register 1 | | R |
| 1B | FIFO Status Register 2 | | R |
| 1C | Collision Display Register | | R |
| Definition of Number of Transmitted Bytes | | | |
| 1D | Number of Transmitted Bytes Register 1 | | RW |
| 1E | Number of Transmitted Bytes Register 2 | | RW |
| NFCIP Bit Rate Detection Display Register | | | |
| 1F | NFCIP Bit Rate Detection Display Register | | R |
| A/D Converter Output Register | | | |
| 20 | A/D Converter Output Register | | R |
| Antenna Calibration Registers | | | |
| 21 | Antenna Calibration Control Register | | RW |
| 22 | Antenna Calibration Target Register | | RW |
| 23 | Antenna Calibration Display Register | | R |
| AM Modulation Depth and Antenna Driver Registers | | | |
| 24 | AM Modulation Depth Control Register | | RW |
| 25 | AM Modulation Depth Display Register | | R |
| 26 | RFO AM Modulated Level Definition Register | | RW |
| 27 | RFO Normal Level Definition Register | | RW |
| | | | |
| External Field Detector Threshold Registers | | | |
| 29 | External Field Detector Threshold Register | | RW |
| Regulator Registers | | | |
| 2A | Regulator Voltage Control Register | | RW |
| 2B | Regulator and Timer Display Register | | R |

| Address[hex] | Content | Comment | Type |
|---|---|---------|------|
| Receiver State Display Registers | | | |
| 2C | RSSI Display Register | | R |
| 2D | Gain Reduction State Register | | R |
| Capacitive Sensor Registers | | | |
| 2E | Capacitive Sensor Control Register | | RW |
| 2F | Capacitive Sensor Display Register | | R |
| Auxiliary Display Register | | | |
| 30 | Auxiliary Display Register | | R |
| Wake-up Registers | | | |
| 31 | Wake-up Timer Control Register | | RW |
| 32 | Amplitude Measurement Configuration Register | | RW |
| 33 | Amplitude Measurement Reference Register | | RW |
| 34 | Amplitude Measurement Auto-averaging Display Register | | R |
| 35 | Amplitude Measurement Display Register | | R |
| 36 | Phase Measurement Configuration Register | | RW |
| 37 | Phase Measurement Reference Register | | RW |
| 38 | Phase Measurement Auto-averaging Display Register | | R |
| 39 | Phase Measurement Display Register | | R |
| 3A | Capacitance Measurement Configuration Register | | RW |
| 3B | Capacitance Measurement Reference Register | | RW |
| 3C | Capacitance Measurement Auto-averaging Display Register | | R |
| 3D | Capacitance Measurement Display Register | | R |
| IC Identity Register | | | |
| 3F | IC Identity Register | | R |

IO Configuration Register 1

Figure 40:
IO Configuration Register 1

| Address 00 _h : IO Configuration Register 1 | | | | Type: RW | | |
|---|------------|---------|--|----------|-----------|---|
| Bit | Name | Default | Function | | | Comments |
| 7 | single | 0 | 1: Only one RFO driver will be used | | | Choose between single and differential driving of antenna |
| 6 | rfo2 | 0 | 0: RFO1, RF11 1: RFO2, RF12 | | | Choose which output driver and which input will be used in case of single driving |
| 5 | fifo_lr | 0 | 0: 64 1: 80 | | | FIFO water level for receive |
| 4 | fifo_lt | 0 | 0: 32 1: 16 | | | FIFO water level for transmit |
| 3 | osc | 1 | 0: 13.56 MHz Xtal 1: 27.12 MHz Xtal | | | Selector for crystal oscillator Use of VHBR is only possible with 27.12 MHz Xtal |
| 2 | out_cl1 | 0 | out_cl1 | out_cl0 | MCU_CLK | Selection of clock frequency on MCU_CLK output in case Xtal oscillator is running. In case of "11" MCU_CLK output is permanently low. |
| | | | 1 | 0 | 3.39 MHZ | |
| | | | 0 | 1 | 6.78 MHZ | |
| | | | 1 | 0 | 13.56 MHZ | |
| 1 | out_cl0 | 0 | 1 | 0 | 13.56 MHZ | |
| | | | 1 | 1 | disabled | |
| 0 | lf_clk_off | 0 | 1: No LF clock on MCU_CLK | | | By default the 32 kHz LF clock is present on MCU_CLK output when Xtal oscillator is not running and the MCU_CLK output is not disabled. |

Note: Default setting is set at power-up only.

IO Configuration Register 2

Figure 41:
IO Configuration Register 2

| Address 01 _h : IO Configuration Register 2 | | | | Type: RW |
|---|----------|---------|---|--|
| Bit | Name | Default | Function | Comments |
| 7 | sup3 V | 0 | 0: 5 V supply 1: 3.3 V supply | 5 V supply, range: 4.1 V to 5.5 V 3.3 V supply, range: 2.4 V to 3.6 V |
| 6 | vspd_off | 0 | 1: Disable VSP_D regulator | Used for low cost applications. When this bit is set: At 3 V or 5 V supply VSP_D and VSP_A shall be shorted externally At 3.3 V applications VSP_D can alternatively be supplied from V _{DD} in case VSP_A is not more than 300 mV lower than V _{DD} |
| 5 | | | Not used | |
| 4 | miso_pd2 | 0 | 1: Pull-down on MISO, when /SS is low and MISO is not driven by the AS3911 | |
| 3 | miso_pd1 | 0 | 1: Pull-down on MISO when /SS is high | |
| 2 | io_18 | 0 | 1: Increase MISO driving level in case of 1.8 V V _{DD_IO} | |
| 1 | | | Not used | |
| 0 | slow_up | 0 | 1: Slow ramp at Tx on | ≥ 10μs 10% to 90%, for B |

Note: Default setting is set at power-up only.

Operation Control Register**Figure 42:**
Operation Control Register

| Address 02 _h : Operation Control Register | | | | Type: RW |
|--|--------|---------|--|---|
| Bit | Name | Default | Function | Comments |
| 7 | en | 0 | 1: Enables oscillator and regulator (Ready mode) | |
| 6 | rx_en | 0 | 1: Enables Rx operation | |
| 5 | rx_chn | 0 | 0: Both, AM and PM, channels enabled 1: One channel enabled | In case only one Rx channel is enabled, selection is done by the Receiver Configuration Register 1 bit <i>ch_sel</i> |
| 4 | rx_man | 0 | 0: Automatic channel selection 1: Manual channel selection | In case both Rx channels are enabled, it chooses the method of channel selection, manual selection is done by the Receiver Configuration Register 1 bit <i>ch_sel</i> |
| 3 | tx_en | 0 | 1: Enables Tx operation | This bit is automatically set by NFC Field ON commands and reset in NFC active communication modes after transmission is finished |
| 2 | wu | 0 | 1: Enables Wake-up mode | According to settings in Wake-up Timer Control Register |
| 1 | | | Not used | |
| 0 | | | | |

Note: Default setting is set at power-up only.

Mode Definition Register

Figure 43:
Mode Definition Register

| Address 03 _h : Mode Definition Register | | | | Type: RW |
|--|--------|---------|---|---|
| Bit | Name | Default | Function | Comments |
| 7 | targ | 0 | 0: Initiator 1: Target | |
| 6 | om3 | 0 | Refer to Initiator Operation Modes and Target Operation Modes | Selection of operation mode. Different for initiator and target mode. |
| 5 | om2 | 0 | | |
| 4 | om1 | 0 | | |
| 3 | om0 | 1 | | |
| 2 | | 0 | | |
| 1 | | 0 | | |
| 0 | nfc_ar | 0 | | Automatic start of Response RF Collision Avoidance sequence |

Note: Default setting is set at power-up and after [Set Default](#) command.

Figure 44:
Initiator Operation Modes

| Initiator Operation Modes | | | | |
|---------------------------|-----|-----|-----|------------------------------|
| om3 | om2 | om1 | om0 | Comment |
| 0 | 0 | 0 | 0 | NFCIP-1 active communication |
| 0 | 0 | 0 | 1 | ISO14443A |
| 0 | 0 | 1 | 0 | ISO14443B |
| 0 | 0 | 1 | 1 | FeliCa |
| 0 | 1 | 0 | 0 | NFC Forum Type 1 Tag (Topaz) |
| 1 | 1 | 1 | 0 | Sub-carrier stream mode |
| 1 | 1 | 1 | 1 | BPSK stream mode |
| Other combinations | | | | Not used |

Note: In case an operation mode which is not supported is selected, the Tx/Rx operation is disabled.

Figure 45:
Target Operation Modes

| Target Operation Modes | | | | |
|------------------------|-----|-----|-----|---|
| om3 | om2 | om1 | om0 | Comment |
| 0 | 0 | 0 | 0 | NFCIP-1 active communication, bit rate detection mode |
| 0 | 0 | 0 | 1 | NFCIP-1 active communication, normal mode |
| Other combinations | | | | Not used |

Note: In case an operation mode which is not supported is selected, the Tx/Rx operation is disabled.

Bit Rate Definition Register

Figure 46:
Bit Rate Definition Register

| Address 04 _h : Bit Rate Definition Register | | | | Type: RW |
|--|----------|---------|--|--|
| Bit | Name | Default | Function | Comments |
| 7 | tx_rate3 | 0 | Refer to Bit Rate Coding | Selects bit rate for Tx |
| 6 | tx_rate2 | 0 | | |
| 5 | tx_rate1 | 0 | | |
| 4 | tx_rate0 | 0 | | |
| 3 | rx_rate3 | 0 | | Selects bit rate for Rx in case selected protocol allows different bit rates for Rx and Tx |
| 2 | rx_rate2 | 0 | | |
| 1 | rx_rate1 | 0 | | |
| 0 | rx_rate0 | 0 | | |

Note(s) and/or Footnote(s):

1. Default setting is set at power-up and after [Set Default](#) command.
2. Automatically loaded by direct command [Go to Normal NFC Mode](#).

Figure 47:
Bit Rate Coding

| Bit Rate Coding | | | | | |
|--------------------|-------|-------|-------|-------------------|---|
| rate3 | rate2 | rate1 | rate0 | Bit rate [kbit/s] | Comment |
| 0 | 0 | 0 | 0 | fc/128 (~106) | |
| 0 | 0 | 0 | 1 | fc/64 (~212) | |
| 0 | 0 | 1 | 0 | fc/32 (~424) | |
| 0 | 0 | 1 | 1 | fc/16 (~848) | |
| 0 | 1 | 0 | 0 | fc/8 (~1695) | VHBR Tx is supported only for ISO14443B mode VHBR Rx is supported only for fc/8 and fc/4 |
| 0 | 1 | 0 | 1 | fc/4 (~3390) | |
| 0 | 1 | 1 | 0 | fc/2 (~6780) | |
| Other combinations | | | | | Not used |

Note: In case a bit rate which is not supported is selected, the Tx/Rx operation is disabled.

ISO14443A and NFC 106kb/s Settings Register

Figure 48:
ISO14443A and NFC 106kb/s Settings Register

| Address 05 _n : ISO14443A and NFC 106kb/s Settings Register | | | | Type: RW |
|---|-----------|---------|---|--|
| Bit | Name | Default | Function | Comments |
| 7 | no_tx_par | 0 | 1: No parity bit is generated during Tx | Data stream is taken from FIFO, transmit has to be done using command Transmit Without CRC |
| 6 | no_rx_par | 0 | 1: Receive without parity and CRC | When set to 1 received bit stream is put in the FIFO, no parity and CRC detection is done |
| 5 | nfc_f0 | 0 | 1: Support of NFCIP-1 Transport Frame format | Add SB (F0) and LEN bytes during Tx and skip SB (F0) byte during Rx |
| 4 | p_len3 | 0 | Refer to ISO14443A Modulation Pulse Width | Modulation pulse width; defined in number of 13.56 MHz clock periods. |
| 3 | p_len2 | 0 | | |
| 2 | p_len1 | 0 | | |
| 1 | p_len0 | 0 | | |
| 0 | antcl | 0 | 1: ISO14443 anticollision frame | Has to be set to 1 when ISO14443A bit oriented anticollision frame is sent |

Note: Default setting is set at power-up and after [Set Default](#) command.

Figure 49:
ISO14443A Modulation Pulse Width

| ISO14443A Modulation Pulse Width | | | | | | | |
|----------------------------------|--------|--------|--------|---|-------|-------|-------|
| p_len3 | p_len2 | p_len1 | p_len0 | Pulse width in number of 1/fc for different bit rates | | | |
| | | | | fc/128 | fc/64 | fc/32 | fc/16 |
| 0 | 1 | 1 | 1 | 42 | | | |
| 0 | 1 | 1 | 0 | 41 | 20 | | |
| 0 | 1 | 0 | 1 | 40 | 21 | | |
| 0 | 1 | 0 | 0 | 39 | 22 | 13 | |
| 0 | 0 | 1 | 1 | 38 | 21 | 12 | 8 |
| 0 | 0 | 1 | 0 | 37 | 20 | 11 | 7 |
| 0 | 0 | 0 | 1 | 36 | 19 | 10 | 6 |
| 0 | 0 | 0 | 0 | 35 | 18 | 9 | 5 |
| 1 | 1 | 1 | 1 | 34 | 17 | 8 | 4 |
| 1 | 1 | 1 | 0 | 33 | 16 | 7 | 3 |
| 1 | 1 | 0 | 1 | 32 | 15 | 6 | 2 |
| 1 | 1 | 0 | 0 | 31 | 14 | 5 | |
| 1 | 0 | 1 | 1 | 30 | 13 | | |
| 1 | 0 | 1 | 0 | 29 | 12 | | |
| 1 | 0 | 0 | 1 | 28 | | | |
| 1 | 0 | 0 | 0 | 27 | | | |

ISO14443B Settings Register 1
Figure 50:
ISO14443B Settings Register

| Address 06 _h : ISO14443B Settings Register 1 | | | | | | | Type: RW |
|---|----------|---------|--|------|------|---------------|---|
| Bit | Name | Default | Function | | | | Comments |
| 7 | egt2 | 0 | egt2 | egt1 | egt0 | Number of EGT | EGT time defined in number of etu |
| | | | 0 | 0 | 0 | 0 | |
| 6 | egt1 | 0 | 0 | 0 | 1 | 1 | |
| | | | . | . | . | . | |
| 5 | egt0 | 0 | 1 | 1 | 0 | 6 | |
| | | | 1 | 1 | 1 | 6 | |
| 4 | sof_0 | 0 | 0 → 10 etu, 1 → 11 etu | | | | SOF, number of etu with logic 0 (10 or 11) |
| 3 | sof_1 | 0 | 0 → 2 etu, 1 → 3 etu | | | | SOF, number of etu with logic 1 (2 or 3) |
| 2 | eof | 0 | 0 → 10 etu, 1 → 11 etu | | | | EOF, number of etu with logic 0 (10 or 11) |
| 1 | half | | 1: SOF 10.5, 2.5, EOF: 10.5 | | | | Sets SOF and EOF settings in middle of specification |
| 0 | rx_st_om | | 1: Start/stop bit omission for Rx | | | | SOF= fixed to 10 low - 2 high, EOF not defined, put in FIFO last full byte ⁽²⁾ |

Note(s) and/or Footnote(s):

1. Default setting is set at power-up and after [Set Default](#) command.
2. Start/stop bit omission for Tx can be implemented by using Stream mode.

ISO14443B and FeliCa Settings Register

Figure 51:
ISO14443B and FeliCa Settings Register

| Address 07 _h : ISO14443B and FeliCa Settings Register | | | | Type: RW |
|--|--------|---------|--|---|
| Bit | Name | Default | Function | Comments |
| 7 | tr1_1 | 0 | Refer to Minimum TR1 Coding | |
| 6 | tr1_0 | 0 | | |
| 5 | no_sof | 0 | 1: No SOF PICC to PCD | According to ISO14443-3 chapter 7.10.3.3 Support of B' |
| 4 | no_eof | 0 | 1: No EOF PICC to PCD | According to ISO14443-3 chapter 7.10.3.3 |
| 3 | eof_12 | 0 | 0: PICC EOF 10 to 11 etu 1: PICC EOF 10 to 12 etu | Support of B' ⁽²⁾ |
| 2 | phc_th | 0 | 1: Increased tolerance of phase change detection | |
| 1 | f_p1 | 0 | 00: 48 01: 64 10: 80 11: 96 | FeliCa preamble length (valid also for NFCIP-1 active communication bit rates 242 and 484 kb/s) |
| 0 | f_p0 | 0 | | |

Note(s) and/or Footnote(s):

1. Default setting is set at power-up and after [Set Default](#) command.
2. Detection of EOF requires larger tolerance range for bit rates with only one sub-carrier frequency period per bit ($f_c/16$ and higher). Due to this it is not possible to distinguish between EOF with 11 and 12 etu and setting this bit has no impact on EOF detection.

Figure 52:
Minimum TR1 Codings

| Minimum TR1 Coding | | | |
|--------------------|-------|--|---------------|
| tr1_1 | tr1_0 | Minimum TR1 for a PICC to PCD Bit Rate | |
| | | $f_c / 128$ | $> f_c / 128$ |
| 0 | 0 | 80 / fs | 80 / fs |
| 0 | 1 | 64 / fs | 32 / fs |
| 1 | 0 | Not used | Not used |
| 1 | 1 | Not used | Not used |

Note: TR1 is defined in number of sub-carrier cycles, therefore at VHBR the absolute time becomes shorter.

Stream Mode Definition Register

Figure 53:
Stream Mode Definition Register

| Address 08 _n : Stream Mode Definition Register | | | | Type: RW | | |
|---|------|---------|--|----------|------------------|---|
| Bit | Name | Default | Function | | | Comments |
| 7 | | 0 | | | | |
| 6 | scf1 | 0 | Refer to Sub-carrier Frequency Definition for Sub-carrier and BPSK Stream Mode | | | Sub-carrier frequency definition for Sub-carrier and BPSK stream mode |
| 5 | scf0 | 0 | | | | |
| 4 | scp1 | 0 | scp1 | scp0 | number of pulses | Number of sub-carrier pulses in report period for Sub-carrier and BPSK stream mode |
| | | | 0 | 0 | 1 (BPSK only) | |
| | | | 0 | 1 | 2 | |
| 3 | scp0 | 0 | 1 | 0 | 4 | |
| | | | 1 | 1 | 8 | |
| 2 | stx2 | 0 | Refer to Definition of Time Period for Stream Mode Tx Modulator Control | | | Definition of time period for Tx modulator control (for Sub-carrier and BPSK stream mode) |
| 1 | stx1 | 0 | | | | |
| 0 | stx0 | | | | | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Figure 54:
Sub-carrier Frequency Definition for Sub-carrier and BPSK Stream Mode

| Sub-carrier Frequency Definition for Sub-carrier and BPSK Stream Mode | | | |
|---|------|------------------|-----------------|
| scf1 | scf0 | Sub-carrier Mode | BPSK Mode |
| 0 | 0 | fc/64 (212 kHz) | fc/16 (848 kHz) |
| 0 | 1 | fc/32 (424 kHz) | fc/8 (1695 kHz) |
| 1 | 0 | fc/16 (848 kHz) | fc/4 (3390 kHz) |
| 1 | 1 | fc/8 (1695 kHz) | Not used |

Figure 55:
Definition of Time Period for Stream Mode Tx Modulator Control

| Definition of Time Period for Stream Mode Tx Modulator Control | | | |
|--|------|------|------------------|
| stx2 | stx1 | stx0 | Time Period |
| 0 | 0 | 0 | fc/128 (106 kHz) |
| 0 | 0 | 1 | fc/64 (212 kHz) |
| 0 | 1 | 0 | fc/32 (424 kHz) |
| 0 | 1 | 1 | fc/16 (848 kHz) |
| 1 | 0 | 0 | fc/8 (1695 kHz) |
| 1 | 0 | 1 | fc/4 (3390 kHz) |
| 1 | 1 | 0 | fc/2(6780 kHz) |
| 1 | 1 | 1 | not used |

Auxiliary Definition Register

Figure 56:
Auxiliary Definition Register

| Address 09 _n : Auxiliary Definition Register | | | | Type: RW |
|---|------------|---------|---|---|
| Bit | Name | Default | Function | Comments |
| 7 | no_crc_rx | 0 | 1: Receive without CRC | Valid for all protocols, for ISO14443A REQA, WUPA and anticollision receive without CRC is done automatically ⁽²⁾ |
| 6 | crc_2_fifo | 0 | 1: Make CRC check, but put CRC bytes in FIFO and add them to number of receive bytes | Needed for EMV compliance |
| 5 | tr_am | 0 | 0: OOK, 1: AM | Set automatically by command Analog Preset , can be modified by register write, has to be defined for transparent and bit stream mode Tx ⁽³⁾ |
| 4 | en_fd | 0 | 1: Enable External Field Detector | External Field Detector with Peer Detection threshold is activated. Preset for NFCIP-1 active communication mode |
| 3 | ook_hr | 0 | 1: Puts RFO driver in three-state during OOK modulation | Valid for all protocols using OOK modulation (also in Transparent mode) |
| 2 | rx_tol | 1 | 1: BPSK fc/32: more tolerant BPSK decoder for bit rate fc/32, ISO14443A fc/128, NFCIP-1 fc/128: more tolerant processing of first byte | |
| 1 | nfc_n1 | 0 | | Definition on n for direct commands NFC Initial Field ON and NFC Response Field ON |
| 0 | nfc_n0 | 0 | | |

Note(s) and/or Footnote(s):

1. Default setting is set at power-up and after [Set Default](#) command.
2. Receive without CRC is done automatically in case REQA and WUPA commands are sent using direct commands [Transmits REQA command](#) and [Transmits WUPA command](#), respectively, and in case anticollision is performed by setting bit antcl.
3. Automatic preset of the **tr_am**
4. 0: OOK ° ISO14443A, NFCIP-1 106 kb/s, NFC Forum Type 1 Tag
5. 1: AM ° ISO14443B, FeliCa, NFCIP-1 212 and 424 kb/s

Receiver Configuration Register 1**Figure 57:**
Receiver Configuration Register 1

| Address 0A _n : Receiver Configuration Register 1 (Filter and Demodulator Settings) | | | | Type: RW |
|---|---------|---------|---|--|
| Bit | Name | Default | Function | Comments |
| 7 | ch_sel | 0 | 0: Enable AM channel 1: Enable PM channel | In case only one Rx channel is enabled in the Operation Control Register it defines which channel is enabled. In case both channels are enabled and manual channel selection is active, it defines which channel is used for receive framing. |
| 6 | amd_sel | 0 | 0: Peak detector 1: Mixer | AM demodulator type select, VHBR automatic preset to mixer |
| 5 | lp2 | 0 | Low pass control (see Figure 13) | For automatic and other recommended filter settings, refer to Figure 15 . |
| 4 | lp1 | 0 | | |
| 3 | lp0 | 0 | | |
| 2 | h200 | 0 | First and third stage zero setting (see Figure 14) | |
| 1 | h80 | 0 | | |
| 0 | z12k | 0 | | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Receiver Configuration Register 2

Figure 58:
Receiver Configuration Register 2

| Address 0B _h : Receiver Configuration Register 2 | | | | Type: RW |
|---|---------|---------|---|---|
| Bit | Name | Default | Function | Comments |
| 7 | rx_lp | 0 | 1: Low power receiver operation | |
| 6 | lf_op | 0 | 0: Differential LF operation 1: LF input split (RFI1 to AM channel, RFI2 to PM channel) | |
| 5 | lf_en | 0 | 1: LF signal on receiver input | |
| 4 | agc_en | 1 | 1: AGC is enabled | |
| 3 | agc_m | 1 | 0: AGC operates on first eight sub-carrier pulses 1: AGC operates during complete receive period | |
| 2 | agc_alg | 0 | 0: Algorithm with preset is used 1: Algorithm with reset is used | Algorithm with preset is recommended for protocols with short SOF (like ISO14443A fc/128) |
| 1 | sqm_dyn | 1 | 1: Automatic squelch activation after end of Tx | Activated 18.88 μ s after end of Tx, terminated with Mask Receive timer expire |
| 0 | pmix_cl | 0 | 0: RFO 1: Internal signal | PM demodulator mixer clock source, in single mode internal signal is always used |

Note: Default setting is set at power-up and after [Set Default](#) command.

Receiver Configuration Register 3**Figure 59:**
Receiver Configuration Register 3

| Address 0C _n : Receiver Configuration Register 3 (1st stage gain settings) | | | | Type: RW |
|---|---------|---------|--|--|
| Bit | Name | Default | Function | Comments |
| 7 | rg1_am2 | 1 | Gain reduction/boost in first gain stage of AM channel. | 0: Full gain 1-6: Gain reduction 2.5 dB per step (15 dB total) 7: Boost +5.5 dB |
| 6 | rg1_am1 | 1 | | |
| 5 | rg1_am0 | 0 | | |
| 4 | rg1_pm2 | 1 | Gain reduction/boost in first gain stage of PM channel. | 0: Full gain 1-6: Gain reduction 2.5 dB per step (15 dB total) 7: Boost +5.5 dB |
| 3 | rg1_pm1 | 1 | | |
| 2 | rg1_pm0 | 0 | | |
| 1 | lim | 0 | 1: Clip output of 1 st and 2 nd stage | Signal clipped to 0.6 V, preset for NFCIP-1 active communication mode |
| 0 | rg_nfc | 0 | 1: Forces gain reduction in 2 nd and 3 rd gain stage to -6 dB and maximum comparator window | Preset for NFCIP-1 active communication mode |

Note: Default setting is set at power-up and after [Set Default](#) command.

Receiver Configuration Register 4

Figure 60:
Receiver Configuration Register 4

| Address 0D _h : Receiver Configuration Register 4 (2 nd and 3 rd stage gain settings) | | | | Type: RW |
|--|---------|---------|---|--|
| Bit | Name | Default | Function | Comments |
| 7 | rg2_am3 | 0 | AM channel: Gain reduction in second and third stage and digitizer | Values from 0 _h to A _h are used. Other values are not used. Settings 1 _h to 4 _h reduce gain by increasing the digitizer window in 3dB steps, values from 5 _h to A _h additionally reduce the gain in 2 nd and 3 rd gain stage also in 3 dB steps. |
| 6 | rg2_am2 | 0 | | |
| 5 | rg2_am1 | 0 | | |
| 4 | rg2_am0 | 0 | | |
| 3 | rg2_pm3 | 0 | PM channel: Gain reduction in second and third stage and digitizer | Values from 0 _h to A _h are used. Other values are not used. Settings 1 _h to 4 _h reduce gain by increasing the digitizer window in 3dB steps, values from 5 _h to A _h additionally reduce the gain in 2 nd and 3 rd gain stage also in 3 dB steps. |
| 2 | rg2_pm2 | 0 | | |
| 1 | rg2_pm1 | 0 | | |
| 0 | rg2_pm0 | 0 | | |

Note(s) and/or Footnote(s):

1. Default setting is set at power-up and after [Set Default](#) command.
2. Sending of direct command [Reset Rx Gain](#) is necessary to load the value of this register into AGC, Squelch, and RSSI block.

Mask Receive Timer Register**Figure 61:**
Mask Receive Timer Register

| Address 0E _n : Mask Receive Timer Register | | | | Type: RW |
|---|------|---------|--|---|
| Bit | Name | Default | Function | Comments |
| 7 | mrt7 | 0 | Defined in steps of 64/fc (4.72 μs). Range from 256/fc (~18.88 μs) to 16320/fc (~1.2 ms) Timeout = mrt<7:0> * 64/fc Timeout (0 ≤ mrt<7:0> ≤ 4) = 4 * 64/fc (18.88 μs) In NFCIP-1 bit rate detection mode one step is 512/fc (37.78 μs) | Defines time after end of Tx during which receiver output is masked (ignored). For the case of ISO14443A 106 kbit/s the Mask Receive Timer is defined according to PCD to PICC frame delay time definition, where mrt<7:0> define number of n/2 steps. Minimum mask receive time of 18.88 μs covers the transients in receiver after end of transmission. |
| 6 | mrt6 | 0 | | |
| 5 | mrt5 | 0 | | |
| 4 | mrt4 | 0 | | |
| 3 | mrt3 | 1 | | |
| 2 | mrt2 | 0 | | |
| 1 | mrt1 | 0 | | |
| 0 | mrt0 | 0 | | |

Note(s) and/or Footnote(s):

1. Default setting is set at power-up and after [Set Default](#) command.
2. In NFCIP-1 bit rate detection mode, the clock of the Mask Receive timer is additionally divided by eight (one count is 512/fc) to cover range up to ~9.6 ms.

No-response Timer Register 1**Figure 62:**
No-response Timer Register 1

| Address 0F _n : No-response Timer Register 1 | | | | Type: RW |
|--|-------|---------|--|---|
| Bit | Name | Default | Function | Comments |
| 7 | nrt15 | 0 | No-response Timer definition MSB bits Defined in steps of 64/fc (4.72 μs). Range from 0 to 309 ms In case bit <i>nrt_step</i> in General Purpose and No-response Timer Control Register is set the step is changed to 4096/fc | Defines timeout after end of Tx. In case this timeout expires without detecting a response a No-response interrupt is sent. In NFC mode the NO response timer is started only when external field is detected All 0: No-response timer is not started. No-response timer is reset and restarted with Start No-response Timer direct command. |
| 6 | nrt14 | 0 | | |
| 5 | nrt13 | 0 | | |
| 4 | nrt12 | 0 | | |
| 3 | nrt11 | 0 | | |
| 2 | nrt10 | 0 | | |
| 1 | nrt9 | 0 | | |
| 0 | nrt8 | 0 | | |

Note: Default setting is set at power-up and after [Set Default](#) command.

No-response Timer Register 2

Figure 63:
No-response Timer Register 2

| Address 10 _n : No-response Timer Register 2 | | | | Type: RW |
|--|------|---------|--|----------|
| Bit | Name | Default | Function | Comments |
| 7 | nrt7 | 0 | No-response Timer definition LSB bits | |
| 6 | nrt6 | 0 | | |
| 5 | nrt5 | 0 | | |
| 4 | nrt4 | 0 | | |
| 3 | nrt3 | 0 | | |
| 2 | nrt2 | 0 | | |
| 1 | nrt1 | 0 | | |
| 0 | nrt0 | 0 | | |

Note: Default setting is set at power-up and after [Set Default](#) command.

General Purpose and No-response Timer Control Register

Figure 64:
General Purpose and No-response Timer Control Register

| Address 11 _n : General Purpose and No-response Timer Control Register | | | | Type: RW |
|--|----------|---------|---|-------------------------------------|
| Bit | Name | Default | Function | Comments |
| 7 | gptc2 | 0 | Defines the timer trigger source. Refer to Timer Trigger Source . | |
| 6 | gptc1 | 0 | | |
| 5 | gptc0 | 0 | | |
| 4 | | 0 | | |
| 3 | | 0 | | |
| 2 | | 0 | | |
| 1 | nrt_emv | 0 | 1: EMV mode of No-response timer | |
| 0 | nrt_step | 0 | 0: 64/fc 1: 4096/fc | Selects the No-response timer step. |

Note: Default setting is set at power-up and after [Set Default](#) command.

Figure 65:
Timer Trigger Source

| Timer Trigger Source | | | |
|----------------------|-------|-------|---|
| gptc2 | gptc1 | gptc0 | Trigger source |
| 0 | 0 | 0 | No trigger source, start only with direct command Start General Purpose Timer . |
| 0 | 0 | 1 | End of Rx (after EOF) |
| 0 | 1 | 0 | Start of Rx |
| 0 | 1 | 1 | End of Tx in NFC mode, when General Purpose Timer expires the field is switched off |
| 1 | 0 | 0 | Not used |
| 1 | 0 | 1 | |
| 1 | 1 | 0 | |
| 1 | 1 | 1 | |

General Purpose Timer Register 1

Figure 66:
General Purpose Timer Register 1

| Address 12 _n : General Purpose Timer Register 1 | | | | Type: RW |
|--|-------|---------|--|----------|
| Bit | Name | Default | Function | Comments |
| 7 | gpt15 | | General purpose timeout definition MSB bits Defined in steps of 8/fc (590 ns) Range from 590 ns to 38,7 ms | |
| 6 | gpt14 | | | |
| 5 | gpt13 | | | |
| 4 | gpt12 | | | |
| 3 | gpt11 | | | |
| 2 | gpt10 | | | |
| 1 | gpt9 | | | |
| 0 | gpt8 | | | |

Note: Default setting is set at power-up and after [Set Default](#) command.

General Purpose Timer Register 2

Figure 67:
General Purpose Timer Register 2

| Address 13 _h : General Purpose Timer Register 2 | | | | Type: RW |
|--|------|---------|--|----------|
| Bit | Name | Default | Function | Comments |
| 7 | gpt7 | | General purpose timeout definition LSB bits Defined in steps of 8/fc (590 ns) Range from 590 ns to 38,7 ms | |
| 6 | gpt6 | | | |
| 5 | gpt5 | | | |
| 4 | gpt4 | | | |
| 3 | gpt3 | | | |
| 2 | gpt2 | | | |
| 1 | gpt1 | | | |
| 0 | gpt0 | | | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Mask Main Interrupt Register

Figure 68:
Mask Main Interrupt Register

| Address 14 _h : Mask Main Interrupt Register | | | | Type: RW |
|--|-------|---------|--|----------|
| Bit | Name | Default | Function | Comments |
| 7 | M_osc | 0 | Mask IRQ when oscillator frequency is stable | |
| 6 | M_wl | 0 | Mask IRQ due to FIFO water level | |
| 5 | M_rxs | 0 | Mask IRQ due to start of receive | |
| 4 | M_rxe | 0 | Mask IRQ due to end of receive | |
| 3 | M_txe | 0 | Mask IRQ due to end of transmission | |
| 2 | M_col | 0 | Mask IRQ due to bit collision | |
| 1 | | 0 | Not used | |
| 0 | | 0 | | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Mask Timer and NFC Interrupt Register**Figure 69:**
Mask Timer and NFC Interrupt Register

| Address 15 _n : Mask Timer and NFC Interrupt Register | | | | Type: RW |
|---|--------|---------|---|----------|
| Bit | Name | Default | Function | Comments |
| 7 | M_dct | 0 | Mask IRQ due to termination of direct command | |
| 6 | M_nre | 0 | Mask IRQ due to No-response timer expire | |
| 5 | M_gpe | 0 | Mask IRQ due to general purpose timer expire | |
| 4 | M_eon | 0 | Mask IRQ due to detection of external field higher than Target activation level | |
| 3 | M_eof | 0 | Mask IRQ due to detection of external field drop below Target activation level | |
| 2 | M_cac | 0 | Mask IRQ due to detection of collision during RF Collision Avoidance | |
| 1 | M_cat | 0 | Mask IRQ after minimum guard time expire | |
| 0 | M_nfct | 0 | Mask IRQ when in target mode the initiator bit rate was recognized | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Mask Error and Wake-up Interrupt Register

Figure 70:
Mask Error and Wake-up Interrupt Register

| Address 16 _h : Mask Error and Wake-up Interrupt Register | | | | Type: RW |
|---|--------|---------|---|----------|
| Bit | Name | Default | Function | Comments |
| 7 | M_crc | 0 | Mask IRQ due to CRC error | |
| 6 | M_par | 0 | Mask IRQ due to parity error | |
| 5 | M_err2 | 0 | Mask IRQ due to soft framing error | |
| 4 | M_err1 | 0 | Mask IRQ due to hard framing error | |
| 3 | M_wt | 0 | Mask IRQ due to wake-up interrupt | |
| 2 | M_wam | 0 | Mask Wake-up interrupt due to Amplitude Measurement | |
| 1 | M_wph | 0 | Mask Wake-up interrupt due to Phase Measurement. | |
| 0 | M_wcap | 0 | Mask Wake-up interrupt due to Capacitance Measurement | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Main Interrupt Register**Figure 71:**
Main Interrupt Register

| Address 17 _n : Main Interrupt Register | | | | Type: R |
|---|-------|---------|---|---|
| Bit | Name | Default | Function | Comments |
| 7 | I_osc | | IRQ when oscillator frequency is stable | Set after oscillator is started by setting Operation Control Register bit <i>en</i> . |
| 6 | I_wl | | IRQ due to FIFO water level | Set during receive, informing that FIFO is almost full and has to be read out. Set during transmit, informing that FIFO is almost empty and that additional data has to be sent. |
| 5 | I_rxs | | IRQ due to start of receive | |
| 4 | I_rxe | | IRQ due to end of receive | |
| 3 | I_txe | | IRQ due to end of transmission | |
| 2 | I_col | | IRQ due to bit collision | |
| 1 | I_tim | | IRQ due to timer or NFC event | Details are in Timer and NFC Interrupt Register |
| 0 | I_err | | IRQ due to error and wake-up timer | Details are in Error and Wake-up Interrupt Register |

Notes:

1. At power-up and after [Set Default](#) command, content of this register is set to 0.
2. After [Main Interrupt Register](#) has been read, its content is set to 0, except for bits 1 and 0, which are set to 0 after corresponding interrupt register is read.

Timer and NFC Interrupt Register

Figure 72:
Timer and NFC Interrupt Register

| Address 18 _n : Timer and NFC Interrupt Register | | | | Type: R |
|--|--------|---------|--|--|
| Bit | Name | Default | Function | Comments |
| 7 | I_dct | | IRQ due to termination of direct command | |
| 6 | I_nre | | IRQ due to No-response timer expire | |
| 5 | I_gpe | | IRQ due to general purpose timer expire | |
| 4 | I_eon | | IRQ due to detection of external field higher than Target activation level | |
| 3 | I_eof | | IRQ due to detection of external field drop below Target activation level | |
| 2 | I_cac | | IRQ due to detection of collision during RF Collision Avoidance | An external field was detected during RF Collision Avoidance |
| 1 | I_cat | | IRQ after minimum guard time expire | An external field was not detected during RF Collision Avoidance, field was switched on, IRQ is sent after minimum guard time according to NFCIP-1 |
| 0 | I_nfct | | IRQ when in target mode the initiator bit rate was recognized | |

Note(s) and/or Footnote(s):

1. At power-up and after [Set Default](#) command, content of this register is set to 0.
2. After [Timer and NFC Interrupt Register](#) has been read, its content is set to 0.

Error and Wake-up Interrupt Register

Figure 73:
Error and Wake-up Interrupt Register

| Address 19 _n : Error and Wake-up Interrupt Register | | | | Type: R |
|--|--------|---------|--|--|
| Bit | Name | Default | Function | Comments |
| 7 | I_crc | | CRC error | |
| 6 | I_par | | Parity error | |
| 5 | I_err2 | | Soft framing error | Framing error which does not result in corrupted Rx data |
| 4 | I_err1 | | Hard framing error | Framing error which results in corrupted Rx data |
| 3 | I_wt | | Wake-up interrupt | Timeout after execution of Start Wake-up Timer command In case option with IRQ at every timeout is selected |
| 2 | I_wam | | Wake-up interrupt due to Amplitude Measurement | Result of Amplitude Measurement was Δam larger than reference |
| 1 | I_wph | | Wake-up interrupt due to Phase Measurement. | Result of Phase Measurement was Δpm larger than reference |
| 0 | I_wcap | | Wake-up interrupt due to Capacitance Measurement | Result of Capacitance Measurement was Δcm larger than reference |

Note(s) and/or Footnote(s):

1. At power-up and after [Set Default](#) command, content of this register is set to 0
2. After [Error and Wake-up Interrupt Register](#) has been read, its content is set to 0

FIFO Status Register 1

Figure 74:
FIFO Status Register 1

| Address 1A _h : FIFO Status Register 1 | | | | Type: R |
|--|---------|---------|--|---|
| Bit | Name | Default | Function | Comments |
| 7 | | | | |
| 6 | fifo_b6 | | Number of bytes (binary coded) in the FIFO which were not read out | Valid range is from 0 (000 0000b) to 96 (110 0000b) |
| 5 | fifo_b5 | | | |
| 4 | fifo_b4 | | | |
| 3 | fifo_b3 | | | |
| 2 | fifo_b2 | | | |
| 1 | fifo_b1 | | | |
| 0 | fifo_b0 | | | |

Note: At power-up and after direct commands [Set Default](#) and [Clear](#), content of this register is set to 0.

FIFO Status Register 2

Figure 75:
FIFO Status Register 2

| Address 1B _h : FIFO Status Register 2 | | | | Type: R |
|--|----------|---------|---|---|
| Bit | Name | Default | Function | Comments |
| 7 | | | | |
| 6 | fifo_unf | | FIFO underflow | Set when more bytes than actual content of FIFO were read |
| 5 | fifo_ovr | | FIFO overflow | |
| 4 | fifo_ncp | | Last FIFO byte is not complete | |
| 3 | fifo_lb2 | | Number of bits in last FIFO byte in case it was not complete (fifo_npc=1) | In case of incomplete byte the LSB part is valid |
| 2 | fifo_lb1 | | | |
| 1 | fifo_lb0 | | | |
| 0 | np_lb | | Parity bit is missing in last byte | This is a framing error |

Note(s) and/or Footnote(s):

1. At power-up and after direct commands [Set Default](#) and [Clear](#), content of this register is set to 0.
2. If FIFO is empty, the value of register FIFO Status Register 1 (0x1A_h) is 0x00, register bits **fifo_ncp**, **fifo_lb2**, **fifo_lb1** and **fifo_lb0** in register block 0x1B_h are cleared. Correct procedure for FIFO read is to read both "FIFO Status Register 1 & 2" and then read FIFO. Second register values need to be saved in MCU, if non-complete bytes are in FIFO.

Collision Display Register

Figure 76:
Collision Display Register

| Address 1C _h : Collision Display Register (for ISO14443A and NFCIP-1bit rate fc/128 Rx) | | | | Type: R |
|--|---------|---------|--|---|
| Bit | Name | Default | Function | Comments |
| 7 | c_byte3 | | Number of full bytes before the bit collision happened. | The Collision Display Register range covers ISO14443A anticollision command. In case collision (or framing error which is interpreted as collision) happens in a longer message, the Collision Display Register is not set. |
| 6 | c_byte2 | | | |
| 5 | c_byte1 | | | |
| 4 | c_byte0 | | | |
| 3 | c_bit2 | | Number of bits before the collision in the byte where the collision happened | |
| 2 | c_bit1 | | | |
| 1 | c_bit0 | | | |
| 0 | c_pb | | Collision in parity bit | |

Note: At power-up and after direct commands [Set Default](#) and [Clear](#), content of this register is set to 0.

Number of Transmitted Bytes Register 1

Figure 77:
Number of Transmitted Bytes Register 1

| Address 1D _h : Number of Transmitted Bytes Register 1 | | | | Type: RW |
|--|-------|---------|---|---|
| Bit | Name | Default | Function | Comments |
| 7 | ntx12 | 0 | Number of full bytes to be transmitted in one command, MSB bits | Maximum supported number of bytes is 8191 |
| 6 | ntx11 | 0 | | |
| 5 | ntx10 | 0 | | |
| 4 | ntx9 | 0 | | |
| 3 | ntx8 | 0 | | |
| 2 | ntx7 | 0 | | |
| 1 | ntx6 | 0 | | |
| 0 | ntx5 | 0 | | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Number of Transmitted Bytes Register 2

Figure 78:
Number of Transmitted Bytes Register 2

| Address 1E _h : Number of Transmitted Bytes 2 | | | | Type: RW |
|---|-------|---------|---|--|
| Bit | Name | Default | Function | Comments |
| 7 | ntx4 | 0 | Number of full bytes to be transmitted in one command, MSB bits | Maximum supported number of bytes is 8191 |
| 6 | ntx3 | 0 | | |
| 5 | ntx2 | 0 | | |
| 4 | ntx1 | 0 | | |
| 3 | ntx0 | 0 | | |
| 2 | nbtx2 | | Number of bits in the split byte 000 means that there is no split byte (all bytes all complete) | Applicable for ISO14443A: <ul style="list-style-type: none"> • Bit oriented anticollision frame in case last byte is split byte • Tx is done without parity bit generation |
| 1 | nbtx1 | | | |
| 0 | nbtx0 | | | |

Note: Default setting is set at power-up and after [Set Default](#) command.

NFCIP Bit Rate Detection Display Register

Figure 79:
NFCIP Bit Rate Detection Display Register

| Address 1F _h : NFCIP Bit Rate Detection Display Register | | | | Type: R |
|---|-----------|---------|--|---|
| Bit | Name | Default | Function | Comments |
| 7 | nfc_rate3 | | Refer to Bit Rate Coding | This register stores result of automatic bit rate detection in the NFCIP-1 active communication bit rate detection mode |
| 6 | nfc_rate2 | | | |
| 5 | nfc_rate1 | | | |
| 4 | nfc_rate0 | | | |
| 3 | | | Not used | |
| 2 | | | | |
| 1 | | | | |
| 0 | | | | |

Note: At power-up and after [Set Default](#) command, content of this register is set to 0.

A/D Converter Output Register

Figure 80:
A/D Converter Output Register

| Address 20 _h : A/D Converter Output Register | | | | Type: R |
|---|------|---------|---|----------|
| Bit | Name | Default | Function | Comments |
| 7 | ad7 | | Displays result of last A/D conversion. | |
| 6 | ad6 | | | |
| 5 | ad5 | | | |
| 4 | ad4 | | | |
| 3 | ad3 | | | |
| 2 | ad2 | | | |
| 1 | ad1 | | | |
| 0 | ad0 | | | |

Note: At power-up and after [Set Default](#) command, content of this register is set to 0.

Antenna Calibration Control Register**Figure 81:**
Antenna Calibration Control Register

| Address 21 _h : Antenna Calibration Control Register | | | | Type: RW |
|--|--------|---------|---|---|
| Bit | Name | Default | Function | Comments |
| 7 | trim_s | 0 | 0: LC trim switches are defined by result of Calibrate Antenna command 1: LC trim switches are defined by bits <i>tre_x</i> written in this register | Defines source of driving switches on TRIMx pins |
| 6 | tre_3 | 0 | MSB | LC trim switches are defined by data written in this register in case trim_s=1. A bit set to 1 switch on transistor on TRIM1_x and TRIM2_x pin. |
| 5 | tre_2 | 0 | | |
| 4 | tre_1 | 0 | | |
| 3 | tre_0 | 0 | LSB | |
| 2 | | | | |
| 1 | | | | |
| 0 | | | | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Antenna Calibration Target Register

Figure 82:
Antenna Calibration Target Register

| Address 22 _h : Antenna Calibration Target Register | | | | Type: RW |
|---|------|---------|--|----------|
| Bit | Name | Default | Function | Comments |
| 7 | act7 | 0 | Define target phase for Calibrate Antenna direct command | |
| 6 | act6 | 0 | | |
| 5 | act5 | 0 | | |
| 4 | act4 | 0 | | |
| 3 | act3 | 0 | | |
| 2 | act2 | 0 | | |
| 1 | act1 | 0 | | |
| 0 | act0 | 0 | | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Antenna Calibration Display Register

Figure 83:
Antenna Calibration Display Register

| Address 23 _h : Antenna Calibration Display Register | | | | Type: R |
|--|---------|---------|-------------------------------------|--|
| Bit | Name | Default | Function | Comments |
| 7 | tri_3 | | MSB | This register stores result of Calibrate Antenna command. LC trim switches are defined by data written in this register in case <i>trim_s</i> = 0. A bit set to 1 indicates that corresponding transistor on TRIM1_x and TRIM2_x pin is switched on. |
| 6 | tri_2 | | | |
| 5 | tri_1 | | | |
| 4 | tri_0 | | LSB | |
| 3 | tri_err | | 1: Antenna calibration error | Set when Calibrate antenna sequence was not able to adjust resonance |
| 2 | | | Not used | |
| 1 | | | | |
| 0 | | | | |

Note: At power-up and after [Set Default](#) command, content of this register is set to 0.

AM Modulation Depth Control Register**Figure 84:**
AM Modulation Depth Control Register

| Address 24 _n : AM Modulation Depth Control Register | | | | Type: RW |
|--|------|---------|--|---|
| Bit | Name | Default | Function | Comments |
| 7 | am_s | 0 | 0: AM modulated level is defined by bits mod5 to mod0. Level is adjusted automatically by Calibrate Modulation Depth command 1: AM modulated level is defined by bits dram7 to dram0. | |
| 6 | mod5 | 0 | MSB | See Application Notes for details about AM modulation level definition. |
| 5 | mod4 | 0 | | |
| 4 | mod3 | 0 | | |
| 3 | mod2 | 0 | | |
| 2 | mod1 | 0 | | |
| 1 | mod0 | 0 | LSB | |
| 0 | | | | |

Note: Default setting is set at power-up and after [Set Default](#) command.

AM Modulation Depth Display Register

Figure 85:
AM Modulation Depth Display Register

| Address 25 _h : AM Modulation Depth Display Register | | | | Type: R |
|--|------|---------|----------|---|
| Bit | Name | Default | Function | Comments |
| 7 | md_7 | | MSB | Displays result of Calibrate Modulation Depth command. Antenna drivers are composed of 8 binary weighted segments. Bit <i>md_x</i> set to one indicates that this particular segment will be disabled during AM modulated state. In case of error all 1 value is set. |
| 6 | md_6 | | | |
| 5 | md_5 | | | |
| 4 | md_4 | | | |
| 3 | md_3 | | | |
| 2 | md_2 | | | |
| 1 | md_1 | | | |
| 0 | md_0 | | LSB | |

Note: At power-up and after [Set Default](#) command, content of this register is set to 0.

RFO AM Modulated Level Definition Register

Figure 86:
RFO AM Modulated Level Definition Register

| Address 26 _h : RFO AM Modulated Level Definition Register | | | | Type: RW |
|--|-------|---------|----------|--|
| Bit | Name | Default | Function | Comments |
| 7 | dram7 | 0 | MSB | Antenna drivers are composed of 8 binary weighted segments. Setting a bit dram to 1 will disable corresponding segment during AM modulated state in case am_s bit is set to 1. |
| 6 | dram6 | 0 | | |
| 5 | dram5 | 0 | | |
| 4 | dram4 | 0 | | |
| 3 | dram3 | 0 | | |
| 2 | dram2 | 0 | | |
| 1 | dram1 | 0 | | |
| 0 | dram0 | 0 | LSB | |

Note: Default setting is set at power-up and after Set Default command.

RFO Normal Level Definition Register**Figure 87:**
RFO Normal Level Definition Register

| Address 27 _n : RFO Normal Level Definition Register | | | | Type: RW |
|--|--------|---------|----------|---|
| Bit | Name | Default | Function | Comments |
| 7 | droff7 | 0 | MSB | Antenna drivers are composed of 8 binary weighted segments. Setting a bit <i>droff</i> to 1 will disable corresponding segment during normal non-modulated operation. |
| 6 | droff6 | 0 | | |
| 5 | droff5 | 0 | | |
| 4 | droff4 | 0 | | |
| 3 | droff3 | 0 | | |
| 2 | droff2 | 0 | | |
| 1 | droff1 | 0 | | |
| 0 | droff0 | 0 | LSB | |

Note: Default setting is set at power-up and after [Set Default](#) command.

External Field Detector Threshold Register**Figure 88:**
External Field Detector Threshold Register

| Address 29 _n : External Field Detector Threshold Register | | | | Type: RW |
|--|--------|---------|-----------------------------------|---|
| Bit | Name | Default | Function | Comments |
| 7 | | | Not used | |
| 6 | trg_l2 | 0 | Peer Detection Threshold MSB | Peer Detection Threshold. Refer to Peer Detection Threshold as seen on RF11 Input . |
| 5 | trg_l1 | 1 | | |
| 4 | trg_l0 | 1 | Peer Detection Threshold LSB | |
| 3 | rfe_t3 | 0 | Collision Avoidance Threshold MSB | Collision Avoidance Threshold. Refer to Collision Avoidance Threshold as seen on RF11 Input . |
| 2 | rfe_t2 | 0 | | |
| 1 | rfe_t1 | 1 | | |
| 0 | rfe_t0 | 1 | Collision Avoidance Threshold LSB | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Figure 89:
Peer Detection Threshold as seen on RF11 Input

| Peer Detection Threshold as seen on RF11 Input | | | |
|--|--------|--------|--|
| trg_l2 | trg_l1 | trg_l0 | Target Peer Detection Threshold Voltage [mV_{pp} on RF11] |
| 0 | 0 | 0 | 75 |
| 0 | 0 | 1 | 105 |
| 0 | 1 | 0 | 150 |
| 0 | 1 | 1 | 205 |
| 1 | 0 | 0 | 290 |
| 1 | 0 | 1 | 400 |
| 1 | 1 | 0 | 560 |
| 1 | 1 | 1 | 800 |

Figure 90:
Collision Avoidance Threshold as seen on RFI1 Input

| Collision Avoidance Threshold as seen on RFI1 Input | | | | |
|---|-------|-------|-------|--|
| rfe_3 | rfe_2 | rfe_1 | rfe_0 | Typical Collision Avoidance Threshold Voltage [mV _{pp} on RFI1] |
| 0 | 0 | 0 | 0 | 75 |
| 0 | 0 | 0 | 1 | 105 |
| 0 | 0 | 1 | 0 | 150 |
| 0 | 0 | 1 | 1 | 205 |
| 0 | 1 | 0 | 0 | 290 |
| 0 | 1 | 0 | 1 | 400 |
| 0 | 1 | 1 | 0 | 560 |
| 0 | 1 | 1 | 1 | 800 |
| 1 | 0 | 0 | 0 | 25 |
| 1 | 0 | 0 | 1 | 33 |
| 1 | 0 | 1 | 0 | 47 |
| 1 | 0 | 1 | 1 | 64 |
| 1 | 1 | 0 | 0 | 90 |
| 1 | 1 | 0 | 1 | 125 |
| 1 | 1 | 1 | 0 | 175 |
| 1 | 1 | 1 | 1 | 250 |

Regulator Voltage Control Register

Figure 91:
Regulator Voltage Control Register

| Address 2A _h : Regulated Voltage Control Register | | | | Type: RW |
|--|--------|---------|--|--|
| Bit | Name | Default | Function | Comments |
| 7 | reg_s | 0 | 0: Regulated voltages are defined by result of Adjust Regulators command 1: Regulated voltages are defined by <i>rege_x</i> bits written in this register | Defines mode of regulator voltage setting. |
| 6 | rege_3 | 0 | MSB | External definition of regulated voltage. Refer to Regulated Voltage for definition. In 5 V mode VSP_D and VSP_A regulators are set to 3.4 V |
| 5 | rege_2 | 0 | | |
| 4 | rege_1 | 0 | | |
| 3 | rege_0 | 0 | LSB | |
| 2 | mpsv1 | 0 | 00: V _{DD} 01: VSP_A 10: VSP_D 11: VSP_RF | Define source of direct command Measure Power Supply . |
| 1 | mpsv0 | 0 | | |
| 0 | | | | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Regulator and Timer Display Register**Figure 92:**
Regulator and Timer Display Register

| Address 2B _h : Regulator and Timer Display Register | | | | Type: R |
|--|--------|---------|--|---|
| Bit | Name | Default | Function | Comments |
| 7 | reg_3 | | MSB | This register displays actual regulated voltage setting. Refer to Regulated Voltage for definition. |
| 6 | reg_2 | | | |
| 5 | reg_1 | | | |
| 4 | reg_0 | | LSB | |
| 3 | | | | |
| 2 | gpt_on | | 1: General Purpose timer is running | |
| 1 | nrt_on | | 1: No-response timer is running | |
| 0 | mrt_on | | 1: Mask Receive timer is running | |

Note: At power-up and after [Set Default](#) command, regulated voltage is set to maximum 3.4V.

Figure 93:
Regulated Voltages

| Regulated Voltage | | | | | |
|--------------------|-----------------|-----------------|-----------------|-------------------------------|------------|
| reg_3 rege_3 | reg_2 rege_2 | reg_1 rege_1 | reg_0 rege_0 | Typical Regulated Voltage [V] | |
| | | | | 5 V Mode | 3.3 V Mode |
| 1 | 1 | 1 | 1 | 5.1 | 3.4 |
| 1 | 1 | 1 | 0 | 4.98 | 3.3 |
| 1 | 1 | 0 | 1 | 4.86 | 3.2 |
| 1 | 1 | 0 | 0 | 4.74 | 3.1 |
| 1 | 0 | 1 | 1 | 4.62 | 3.0 |
| 1 | 0 | 1 | 0 | 4.50 | 2.9 |
| 1 | 0 | 0 | 1 | 4.38 | 2.8 |
| 1 | 0 | 0 | 0 | 4.26 | 2.7 |
| 0 | 1 | 1 | 1 | 4.14 | 2.6 |
| 0 | 1 | 1 | 0 | 4.02 | 2.5 |
| 0 | 1 | 0 | 1 | 3.90 | 2.4 |
| other combinations | | | | not used | |

RSSI Display Register**Figure 94:**
RSSI Display Register

| Address 2C _h : RSSI Display Register | | | | Type: R |
|---|------------|---------|----------|--|
| Bit | Name | Default | Function | Comments |
| 7 | rss_i_am_3 | | MSB | Stores peak value of AM channel RSSI measurement. Automatically cleared at beginning of transponder message and with Clear RSSI command. |
| 6 | rss_i_am_2 | | | |
| 5 | rss_i_am_1 | | | |
| 4 | rss_i_am_0 | | LSB | |
| 3 | rss_i_pm_3 | | MSB | Stores peak value of PM channel RSSI measurement. Automatically cleared at beginning of transponder message and with Clear RSSI command. |
| 2 | rss_i_pm_2 | | | |
| 1 | rss_i_pm_1 | | | |
| 0 | rss_i_pm_0 | | LSB | |

Note(s) and/or Footnote(s):

1. At power-up and after [Set Default](#) command, content of this register is set to 0.
2. Bit 0x30[7] indicates which RSSI value is use in the logic for internal use.

Figure 95:
RSSI Table

| RSSI Table | | | | |
|------------|---------|---------|---------|--|
| rss_i_3 | rss_i_2 | rss_i_1 | rss_i_0 | Typical Signal on RFI1 [mV _{rms}] |
| 0 | 0 | 0 | 0 | ≤20 |
| 0 | 0 | 0 | 1 | >20 |
| 0 | 0 | 1 | 0 | >27 |
| 0 | 0 | 1 | 1 | >37 |
| 0 | 1 | 0 | 0 | >52 |
| 0 | 1 | 0 | 1 | >72 |
| 0 | 1 | 1 | 0 | >99 |
| 0 | 1 | 1 | 1 | >136 |
| 1 | 0 | 0 | 0 | >190 |
| 1 | 0 | 0 | 1 | >262 |
| 1 | 0 | 1 | 0 | >357 |
| 1 | 0 | 1 | 1 | >500 |
| 1 | 1 | 0 | 0 | >686 |
| 1 | 1 | 0 | 1 | >950 |
| 1 | 1 | 1 | 0 | not used |
| 1 | 1 | 1 | 1 | |

Gain Reduction State Register**Figure 96:**
Gain Reduction State Register

| Address 2D _h : Gain Reduction State Register | | | | Type: R |
|---|---------|---------|----------|--|
| Bit | Name | Default | Function | Comments |
| 7 | gs_am_3 | | MSB | Actual gain reduction of second stage of AM channel (including register gain reduction, squelch and AGC) |
| 6 | gs_am_2 | | | |
| 5 | gs_am_1 | | | |
| 4 | gs_am_0 | | LSB | |
| 3 | gs_pm_3 | | MSB | Actual gain reduction of second stage of PM channel (including register gain reduction, squelch and AGC) |
| 2 | gs_pm_2 | | | |
| 1 | gs_pm_1 | | | |
| 0 | gs_pm_0 | | LSB | |

Note: At power-up and after [Set Default](#) command, content of this register is set to 0.

Capacitive Sensor Control Register

Figure 97:
Capacitive Sensor Control Register

| Address 2E _n : Capacitive Sensor Control Register | | | | Type: RW |
|--|----------|---------|---|--|
| Bit | Name | Default | Function | Comments |
| 7 | cs_mcal4 | 0 | Manual calibration value All 0 value enables automatic calibration mode | Binary weighted, step 0.1 pF, max 3.1 pF |
| 6 | cs_mcal3 | 0 | | |
| 5 | cs_mcal2 | 0 | | |
| 4 | cs_mcal1 | 0 | | |
| 3 | cs_mcal0 | 0 | | |
| 2 | cs_g2 | 0 | 000: 2.8 V/pF 001: 6.5 V/pF 010: 1.1 V/pF 100: 0.5 V/pF 110: 0.35 V/pF Other: Not used | Capacitor sensor gain typical values |
| 1 | cs_g1 | 0 | | |
| 0 | cs_g0 | 0 | | |

Note: At power-up and after [Set Default](#) command, content of this register is set to 0.

Capacitive Sensor Display Register

Figure 98:
Capacitive Sensor Display Register

| Address 2F _h : Capacitive Sensor Display Register | | | | Type: R |
|--|------------|---------|-------------------------------------|--|
| Bit | Name | Default | Function | Comments |
| 7 | cs_cal4 | | Capacitive Sensor calibration value | Binary weighted, step 0.1 pF, max 3.1 pF |
| 6 | cs_cal3 | | | |
| 5 | cs_cal2 | | | |
| 4 | cs_cal1 | | | |
| 3 | cs_cal0 | | | |
| 2 | cs_cal_end | | 1: Calibration ended | |
| 1 | cs_cal_err | | 1: Calibration error | |
| 0 | | | | |

Note: At power-up and after [Set Default](#) command, content of this register is set to 0.

Auxiliary Display Register

Figure 99:
Auxiliary Display Register

| Address 30 _h : Auxiliary Display Register | | | | Type: R |
|--|--------|---------|--|---|
| Bit | Name | Default | Function | Comments |
| 7 | a_cha | | 0: AM 1: PM | Currently selected channel |
| 6 | efd_o | | | External Field Detector output |
| 5 | tx_on | | 1: Transmission is active | |
| 4 | osc_ok | | 1: X-tal oscillation is stable | Indication that x-tal oscillator is active and its output is stable |
| 3 | rx_on | | 1: Receive coder is enabled | |
| 2 | rx_act | | 1: Receive coder is receiving a message | |
| 1 | nfc_t | | 1: External Field Detector is active in peer detection mode | |
| 0 | en_ac | | 1: External Field Detector is active in RF collision avoidance mode | |

Note: At power-up and after [Set Default](#) command, content of this register is set to 0.

Wake-up Timer Control Register

Figure 100:
Wake-up Timer Control Register

| Address 31 _h : Wake-up Timer Control Register | | | | Type: RW |
|--|------|---------|--|---|
| Bit | Name | Default | Function | Comments |
| 7 | wur | 0 | 0: 100 ms 1: 10 ms | Wake-up timer range |
| 6 | wut2 | 0 | Refer to Typical Wake-up Time | Wake-up timer timeout value |
| 5 | wut1 | 0 | | |
| 4 | wut0 | 0 | | |
| 3 | wto | 0 | 1: IRQ at every timeout | |
| 2 | wam | 0 | 1: At timeout perform Amplitude measurement | IRQ if difference larger than Δam |
| 1 | wph | 0 | 1: At timeout perform Phase measurement | IRQ if difference larger than Δpm |
| 0 | wcap | 0 | 1: At timeout perform Capacitance measurement | IRQ if difference larger than Δcm |

Note: Default setting is set at power-up and after [Set Default](#) command.

Figure 101:
Typical Wake-up Time

| Typical Wake-up Time | | | | |
|----------------------|------|------|----------------------|---------------------|
| wut2 | wut1 | wut0 | 100 ms Range (wur=0) | 10 ms Range (wur=1) |
| 0 | 0 | 0 | 100 ms | 10 ms |
| 0 | 0 | 1 | 200 ms | 20 ms |
| 0 | 1 | 0 | 300 ms | 30 ms |
| 0 | 1 | 1 | 400 ms | 40 ms |
| 1 | 0 | 0 | 500 ms | 50 ms |
| 1 | 0 | 1 | 600 ms | 60 ms |
| 1 | 1 | 0 | 700 ms | 70 ms |
| 1 | 1 | 1 | 800 ms | 80 ms |

Amplitude Measurement Configuration Register**Figure 102:**
Amplitude Measurement Configuration Register

| Address 32 _h : Amplitude Measurement Configuration Register | | | | Type: RW |
|--|---------|---------|--|---|
| Bit | Name | Default | Function | Comments |
| 7 | am_d3 | 0 | Definition of Δam (difference to reference which triggers interrupt) | |
| 6 | am_d2 | 0 | | |
| 5 | am_d1 | 0 | | |
| 4 | am_d0 | 0 | | |
| 3 | am_aam | 0 | 0: Exclude the IRQ measurement 1: Include the IRQ measurement | Include/exclude the measurement which causes IRQ (having difference > Δam to reference) in auto-averaging |
| 2 | am_aew1 | 0 | 00: 4 01: 8 10: 16 11: 32 | Define weight of last measurement result for auto-averaging |
| 1 | am_aew2 | 0 | | |
| 0 | am_ae | 0 | 1: Use amplitude measurement auto-averaging as reference | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Amplitude Measurement Reference Register

Figure 103:
Amplitude Measurement Reference Register

| Address 33 _h : Amplitude Measurement Reference Register | | | | Type: RW |
|--|---------|---------|----------|----------|
| Bit | Name | Default | Function | Comments |
| 7 | am_ref7 | 0 | | |
| 6 | am_ref6 | 0 | | |
| 5 | am_ref5 | 0 | | |
| 4 | am_ref4 | 0 | | |
| 3 | am_ref3 | 0 | | |
| 2 | am_ref2 | 0 | | |
| 1 | am_ref1 | 0 | | |
| 0 | am_ref0 | 0 | | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Amplitude Measurement Auto-averaging Display Register

Figure 104:
Amplitude Measurement Auto-averaging Display Register

| Address 34 _h : Amplitude Measurement Auto-averaging Display Register | | | | Type: R |
|---|---------|---------|----------|----------|
| Bit | Name | Default | Function | Comments |
| 7 | am_aad7 | | | |
| 6 | am_aad6 | | | |
| 5 | am_aad5 | | | |
| 4 | am_aad4 | | | |
| 3 | am_aad3 | | | |
| 2 | am_aad2 | | | |
| 1 | am_aad1 | | | |
| 0 | am_aad0 | | | |

Note: At power-up and after [Set Default](#) command, content of this register is set to 0.

Amplitude Measurement Display Register**Figure 105:**
Amplitude Measurement Display Register

| Address 35 _n : Amplitude Measurement Display Register | | | | Type: R |
|--|---------|---------|----------|----------|
| Bit | Name | Default | Function | Comments |
| 7 | am_amd7 | | | |
| 6 | am_amd6 | | | |
| 5 | am_amd5 | | | |
| 4 | am_amd4 | | | |
| 3 | am_amd3 | | | |
| 2 | am_amd2 | | | |
| 1 | am_amd1 | | | |
| 0 | am_amd0 | | | |

Note: At power-up and after [Set Default](#) command, content of this register is set to 0.

Phase Measurement Configuration Register

Figure 106:
Phase Measurement Configuration Register

| Address 36 _n : Phase Measurement Configuration Register | | | | Type: RW |
|--|---------|---------|--|---|
| Bit | Name | Default | Function | Comments |
| 7 | pm_d3 | 0 | Definition of Δpm (difference to reference which triggers interrupt) | |
| 6 | pm_d2 | 0 | | |
| 5 | pm_d1 | 0 | | |
| 4 | pm_d0 | 0 | | |
| 3 | pm_aam | 0 | 0: Exclude the IRQ measurement 1: Include the IRQ measurement | Include/exclude the measurement which causes IRQ (having difference > Δpm to reference) in auto-averaging |
| 2 | pm_aew1 | 0 | 00: 4 01: 8 10: 16 11: 32 | Define weight of last measurement result for auto-averaging |
| 1 | pm_aew0 | 0 | | |
| 0 | pm_ae | 0 | 1: Use phase measurement auto-averaging as reference | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Phase Measurement Reference Register**Figure 107:**
Phase Measurement Reference Register

| Address 37 _n : Phase Measurement Reference Register | | | | Type: RW |
|--|---------|---------|----------|----------|
| Bit | Name | Default | Function | Comments |
| 7 | pm_ref7 | 0 | | |
| 6 | pm_ref6 | 0 | | |
| 5 | pm_ref5 | 0 | | |
| 4 | pm_ref4 | 0 | | |
| 3 | pm_ref3 | 0 | | |
| 2 | pm_ref2 | 0 | | |
| 1 | pm_ref1 | 0 | | |
| 0 | pm_ref0 | 0 | | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Phase Measurement Auto-averaging Display Register**Figure 108:**
Phase Measurement Auto-averaging Display Register

| Address 38 _n : Phase Measurement Auto-averaging Display Register | | | | Type: R |
|---|---------|---------|----------|----------|
| Bit | Name | Default | Function | Comments |
| 7 | pm_aad7 | | | |
| 6 | pm_aad6 | | | |
| 5 | pm_aad5 | | | |
| 4 | pm_aad4 | | | |
| 3 | pm_aad3 | | | |
| 2 | pm_aad2 | | | |
| 1 | pm_aad1 | | | |
| 0 | pm_aad0 | | | |

Note: At power-up and after [Set Default](#) command, content of this register is set to 0.

Phase Measurement Display Register

Figure 109:
Phase Measurement Display Register

| Address 39 _h : Phase Measurement Display Register | | | | Type: R |
|--|---------|---------|----------|----------|
| Bit | Name | Default | Function | Comments |
| 7 | pm_amd7 | | | |
| 6 | pm_amd6 | | | |
| 5 | pm_amd5 | | | |
| 4 | pm_amd4 | | | |
| 3 | pm_amd3 | | | |
| 2 | pm_amd2 | | | |
| 1 | pm_amd1 | | | |
| 0 | pm_amd0 | | | |

Note: At power-up and after [Set Default](#) command, content of this register is set to 0.

Capacitance Measurement Configuration Register

Figure 110:
Capacitance Measurement Configuration Register

| Address 3A _h : Capacitance Measurement Configuration Register | | | | Type: RW |
|--|---------|---------|--|---|
| Bit | Name | Default | Function | Comments |
| 7 | cm_d3 | 0 | Definition of Δcm (difference to reference which triggers interrupt) | |
| 6 | cm_d2 | 0 | | |
| 5 | cm_d1 | 0 | | |
| 4 | cm_d0 | 0 | | |
| 3 | cm_aam | 0 | 0: Exclude the IRQ measurement 1: Include the IRQ measurement | Include/exclude the measurement which causes IRQ (having difference > Δcm to reference) in auto-averaging |
| 2 | cm_aew1 | 0 | 00: 4 01: 8 10: 16 11: 32 | Define weight of last measurement result for auto-averaging |
| 1 | cm_aew0 | 0 | | |
| 0 | cm_ae | 0 | 1: Use capacitance measurement auto-averaging as reference | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Capacitance Measurement Reference Register

Figure 111:
Capacitance Measurement Reference Register

| Address 3B _n : Capacitance Measurement Reference Register | | | | Type: RW |
|--|---------|---------|----------|----------|
| Bit | Name | Default | Function | Comments |
| 7 | cm_ref7 | 0 | | |
| 6 | cm_ref6 | 0 | | |
| 5 | cm_ref5 | 0 | | |
| 4 | cm_ref4 | 0 | | |
| 3 | cm_ref3 | 0 | | |
| 2 | cm_ref2 | 0 | | |
| 1 | cm_ref1 | 0 | | |
| 0 | cm_ref0 | 0 | | |

Note: Default setting is set at power-up and after [Set Default](#) command.

Capacitance Measurement Auto-averaging Display Register

Figure 112:
Capacitance Measurement Auto-averaging Display Register

| Address 3C _n : Capacitance Measurement Auto-averaging Display Register | | | | Type: R |
|---|---------|---------|----------|----------|
| Bit | Name | Default | Function | Comments |
| 7 | cm_aad7 | | | |
| 6 | cm_aad6 | | | |
| 5 | cm_aad5 | | | |
| 4 | cm_aad4 | | | |
| 3 | cm_aad3 | | | |
| 2 | cm_aad2 | | | |
| 1 | cm_aad1 | | | |
| 0 | cm_aad0 | | | |

Note: At power-up and after [Set Default](#) command, content of this register is set to 0.

Capacitance Measurement Display Register**Figure 113:**
Capacitance Measurement Display Register

| Address 3D _h : Capacitance Measurement Display Register | | | | Type: R |
|--|---------|---------|----------|----------|
| Bit | Name | Default | Function | Comments |
| 7 | cm_amd7 | | | |
| 6 | cm_amd6 | | | |
| 5 | cm_amd5 | | | |
| 4 | cm_amd4 | | | |
| 3 | cm_amd3 | | | |
| 2 | cm_amd2 | | | |
| 1 | cm_amd1 | | | |
| 0 | cm_amd0 | | | |

Note: At power-up and after [Set Default](#) command, content of this register is set to 0.

IC Identity Register**Figure 114:**
IC Identity Register

| Address 3F _h : IC Identity Register | | | | Type: R |
|--|----------|---------|------------------------|--|
| Bit | Name | Default | Function | Comments |
| 7 | ic_type4 | | Code for AS3911: 00001 | 5 bit IC type code |
| 6 | ic_type3 | | | |
| 5 | ic_type2 | | | |
| 4 | ic_type1 | | | |
| 3 | ic_type0 | | | |
| 2 | ic_rev2 | | 001 | 3 bit IC revision code, 001 is code for silicon r2.0, versions previous to r2.0 do not have this register implemented. |
| 1 | ic_rev1 | | | |
| 0 | ic_rev0 | | | |

IC Identity Register: This table depicts the details of the IC identity register for AS3911.

Power-up Sequence

At power-up, the AS3911 enters the Power-down mode. The content of all registers is set to the default state.

1. Firstly, the microcontroller after a power-up must correctly configure the two IO configuration registers. The content of these two registers defines operation options related to hardware (power supply mode, Xtal type, use of MCU_CLK clock, antenna operation mode).
2. Configure the regulators. It is recommended to use direct command [Adjust Regulators](#) to improve the system PSRR.
3. If implementing the LC tank tuning, then send the direct command [Calibrate Antenna](#).
4. If using the AM modulation (ISO14443B for example), then set the modulation depth in the [AM Modulation Depth Control Register](#) and send the command [Calibrate Modulation Depth](#).
5. The AS3911 is now ready to operate.

Reader Operation

To begin with, the operation mode and data rate have to be configured by writing the [Mode Definition Register](#) and [Bit Rate Definition Register](#). Additionally, the receiver and transmitter operation options related to operation mode have to be defined. This is done automatically by sending the direct command [Analog Preset](#). If more options are required apart from those defined by [Analog Preset](#), then such options must be additionally set by writing the appropriate registers.

Next, the Ready mode has to be entered by setting the bit *en* of the [Operation Control Register](#). In this mode the oscillator is started and the regulators are enabled. When the oscillator operation is stable, an interrupt is sent.

Before sending any command to a transponder, the transmitter and receiver have to be enabled by setting the bits *rx_en* and *tx_en*. RFID protocols usually require that the reader field is turned on for a while before sending the first command (5 ms for ISO14443). General purpose timer can be used to count this time.

In case REQA or WUPA has to be sent this is simply done by sending appropriate direct command otherwise the following sequence has to be followed:

1. Send the direct command [Clear](#)
2. Define the number of transmitted bytes in the [Number of Transmitted Bytes Register 1](#) and [Number of Transmitted Bytes Register 2](#)
3. Write the bytes to be transmitted in the FIFO
4. Send the direct command [Transmit With CRC](#) or [Transmit Without CRC](#) (whichever is appropriate)

5. When all the data is transmitted an interrupt is sent to inform the microcontroller that the transmission is finished (IRQ due to end of transmission)

After the transmission is executed, the AS3911 receiver automatically starts to observe the RFI inputs to detect a transponder response. The RSSI and AGC (in case it is enabled) are started. The framing block processes the sub-carrier signal from receiver and fills the FIFO with data. When the reception is finished and all the data is in the FIFO an interrupt is sent to the microcontroller (IRQ due to end of receive), additionally the [FIFO Status Register 1](#) and [FIFO Status Register 2](#) display the number of bytes in the FIFO so the microcontroller can proceed with downloading the data.

In case there was an error or bit collision detected during reception, an interrupt with appropriate flag is sent. Microcontroller has to take appropriate action.

Transmit and Receive in case data packet is longer than FIFO:

In case a data packet is longer than FIFO the sequence explained above is modified.

Before transmit the FIFO is filled. During transmit an interrupt is sent when remaining number of bytes is lower than the water level (IRQ due to FIFO water level). The microcontroller in turn adds more data in the FIFO. When all the data is transmitted an interrupt is sent to inform the microcontroller that transmission is finished.


During reception situation is similar. In case the FIFO is loaded with more data than the receive water level, an interrupt is sent and the microcontroller in turn reads the data from the FIFO. When reception is finished an interrupt is sent to the microcontroller (IRQ due to end of receive), additionally the [FIFO Status Register 1](#) and [FIFO Status Register 2](#) display the number of bytes in the FIFO which are still to be read out.

Anticollision – ISO 14443A

Note(s): For this section, it is assumed that there are more than one ISO/IEC 14443A PICC in the reader's RF field and all are compatible to ISO/IEC 14443 up to level 4.

This section highlights on a procedure of performing anticollision with AS3911 for ISO14443A tags. After an ISO14443 type A tag enters in the reader field, the reader has to perform a selection process which brings it into the PROTOCOL state in which the actual application implemented in the tag can be executed. This selection process is described in the ISO/IEC 14443-3. The [Figure 115](#) depicts the states which a tag and a reader have to pass through to enter the protocol state.

Figure 115:
ISO14443A States for PCD and PICC

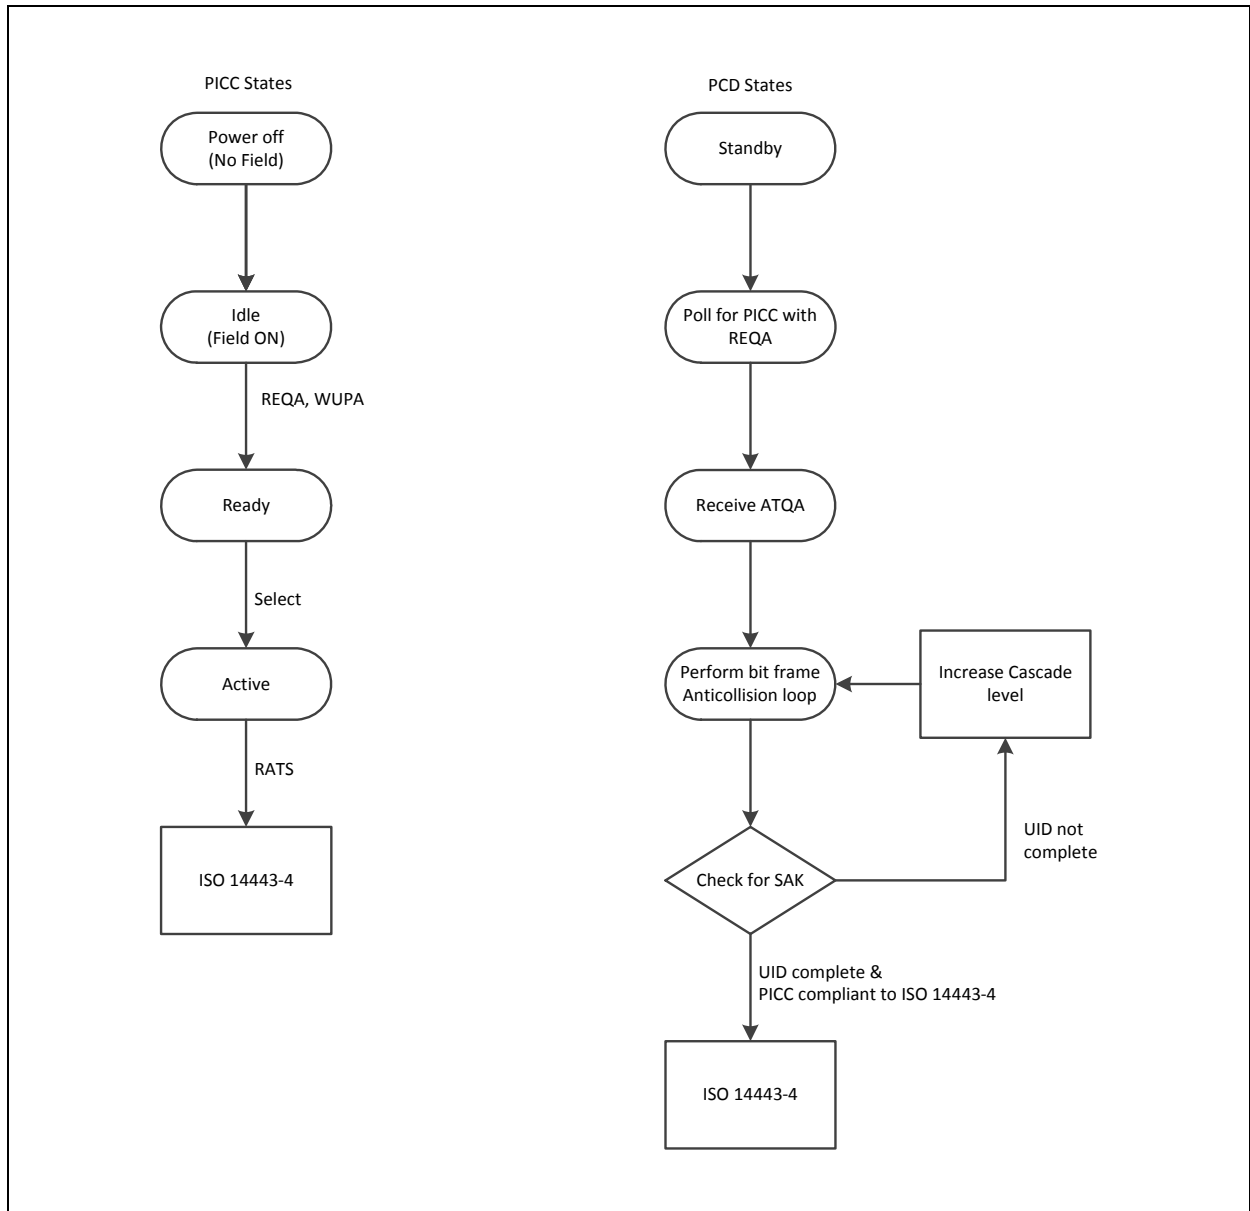

The selection procedure starts when a PICC enters the reader field and the PCD sends a REQA (or WUPA) command followed by an Anticollision procedure (incl. SELECT, RATS and PPS).

Setting up AS3911 for ISO 14443A Anticollision

To setup the AS3911 for the ISO14443A anticollision following steps are to be followed:

1. The Initiator operation mode of AS3911 must be setup for ISO 14443A in the [Mode Definition Register](#) (default is already for ISO14443A).
2. The Tx and Rx bit rates must be set up to default 106kbps in the [Bit Rate Definition Register](#).


- Set the *antcl* bit in the [ISO14443A and NFC 106kb/s Settings Register](#). This needs to be set before sending the REQA (or WUPA). As a result of setting this bit, the AS3911 will not trigger a framing error if in case the collision occurs in the ATQA or during anticollision procedure.

Note(s): This bit must be set to one for REQA, WUPA and ANTOCOLLISION commands, for other commands it has to be zero)

- Review and set the value for [Mask Receive Timer Register](#) less than the Frame delay time as required by the ISO14443A. And set the [No-response Timer Register 1](#) & [No-response Timer Register 2](#) according to the requirements. This is typically larger than the FDT.

Note(s): AS3911 offers the resolution of $n/2$ ($64/f_c$ - half steps) compared to n ($128/f_c$) as mentioned in 14443A so that the receiver can be unmasked $n/2$ step before the actual transmission from the PICC). According to ISO 14443A the FDT must be $1236/f_c$ if last transmitter bit is 1 or $1172/f_c$ if last transmitter bit is 0. As a simple rule one can follow the following.

Figure 116:
Selection of MRT & NRT for a given FDT

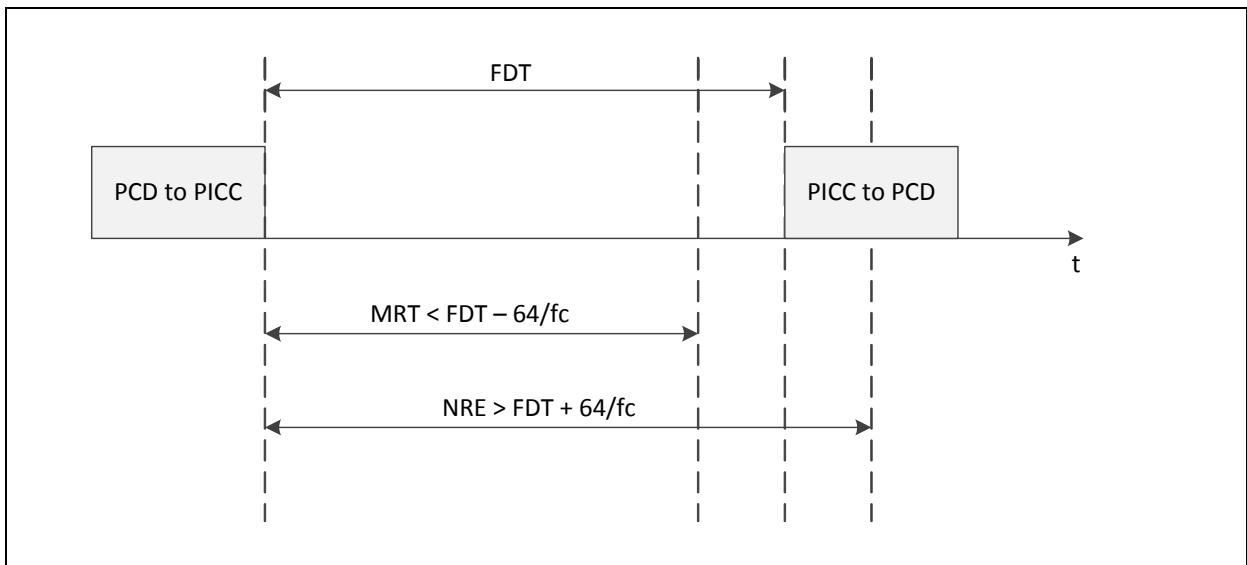

- The receiver and transmitter operation options related to operation mode have to be defined. This is done automatically by sending the direct command [Analog Preset](#). If different options are required apart from those defined by [Analog Preset](#), then such options must be additionally set by writing the appropriate registers.
- Set *rx_en* and *tx_en* in the [Operation Control Register](#). RFID protocols usually require that the reader field is turned on for a while before sending the first command (5 ms for ISO14443). General purpose timer can be used to count this time.

7. The reply form PICC for the REQA, WUPA and replies within ANTICOLLISION sequence before till before SAK do not contain CRC. In this case the *no_CRC_rx* bit in the [Auxiliary Definition Register](#) must be set to 1 (receive without CRC) before sending these commands.

REQA and WUPA

Sending of these two commands is simple since they are implemented as the AS3911 direct commands (Transmit REQA and Transmit WUPA). The end of transmission of these commands is signaled to microcontroller by an interrupt - IRQ (due to end of transmission). After the transmission is executed, the AS3911 receiver automatically starts to observe the RFI inputs to detect a transponder after the expiration of the Mask Receive Timer.

As a response to REQA (or WUPA) all the PICC in the field respond simultaneously with an ATQA. A collision can occur in this state if there are PICC with different UID size or has the Bit frame anticollision bits set differently. Hence it is important to set the *antcl* bit to 1. If there is any IRQ (except *l_nre*) that AS3911 signals, the microcontroller must consider as a valid presence of tag and must proceed with the ANTICOLLISION procedure.

If more than one PICC are expected in the field, following algorithm must be used to select multiple tags:

1. Send REQA, if there was any answer continue
2. Perform anticollision, and singulate one PICC
3. Select the found Tag and send HLTA to move it to HALT state
4. Go to 1 and repeat this procedure till all the PICC are in HALT state and all the UIDs have been extracted.

ANTICOLLISION Procedure

After receiving the ATQA from the tags in the field, the next step is to execute the anticollision procedure to singulate the tags. the procedure mainly uses the ANTICOLLISION and SELECT commands which consist of:

- Select code SEL (1byte)
- Number of valid bits NVB (1 byte)
- 0 to 40 data bits of UID CLn according to the value of NVB


The anticollision command uses standard frame which do not use CRC. In this case the transmit needs to be done with direct command [Transmit Without CRC](#) and for the receive, the *no_CRC_rx* bit in the [Auxiliary Definition Register](#) must be set to 1. The final SELECT command and its response SAK contains a CRC, so the transmit needs to be done with command [Transmit With CRC](#) and before sending this command the configuration bit *no_CRC_rx* bit in the [Auxiliary Definition Register](#) must be set back to 0.

If there are more than one PICC in the field, the collision will occur when the tags reply to the SEL command during anticollision when the PICC reply back with their UID. This collision can occur after a complete byte (called as FULL BYTE scenario) or it can occur within a byte (called as SPLIT BYTE scenario). The *antcl* bit in [ISO14443A and NFC 106kb/s Settings Register](#) must be set during this procedure too. As a result, AS3911 will not trigger a Framing Error. This bit is also responsible for correct timing of anticollision and correct parity extraction.

Note(s): It must only be set before sending an anticollision frame, REQA or WUPA. This bit must not be used in any other commands.

The [Figure 117](#) depicts the flowchart on how to implement the anticollision with AS3911.

Figure 117:
Flowchart for ISO14443A Anticollision with AS3911

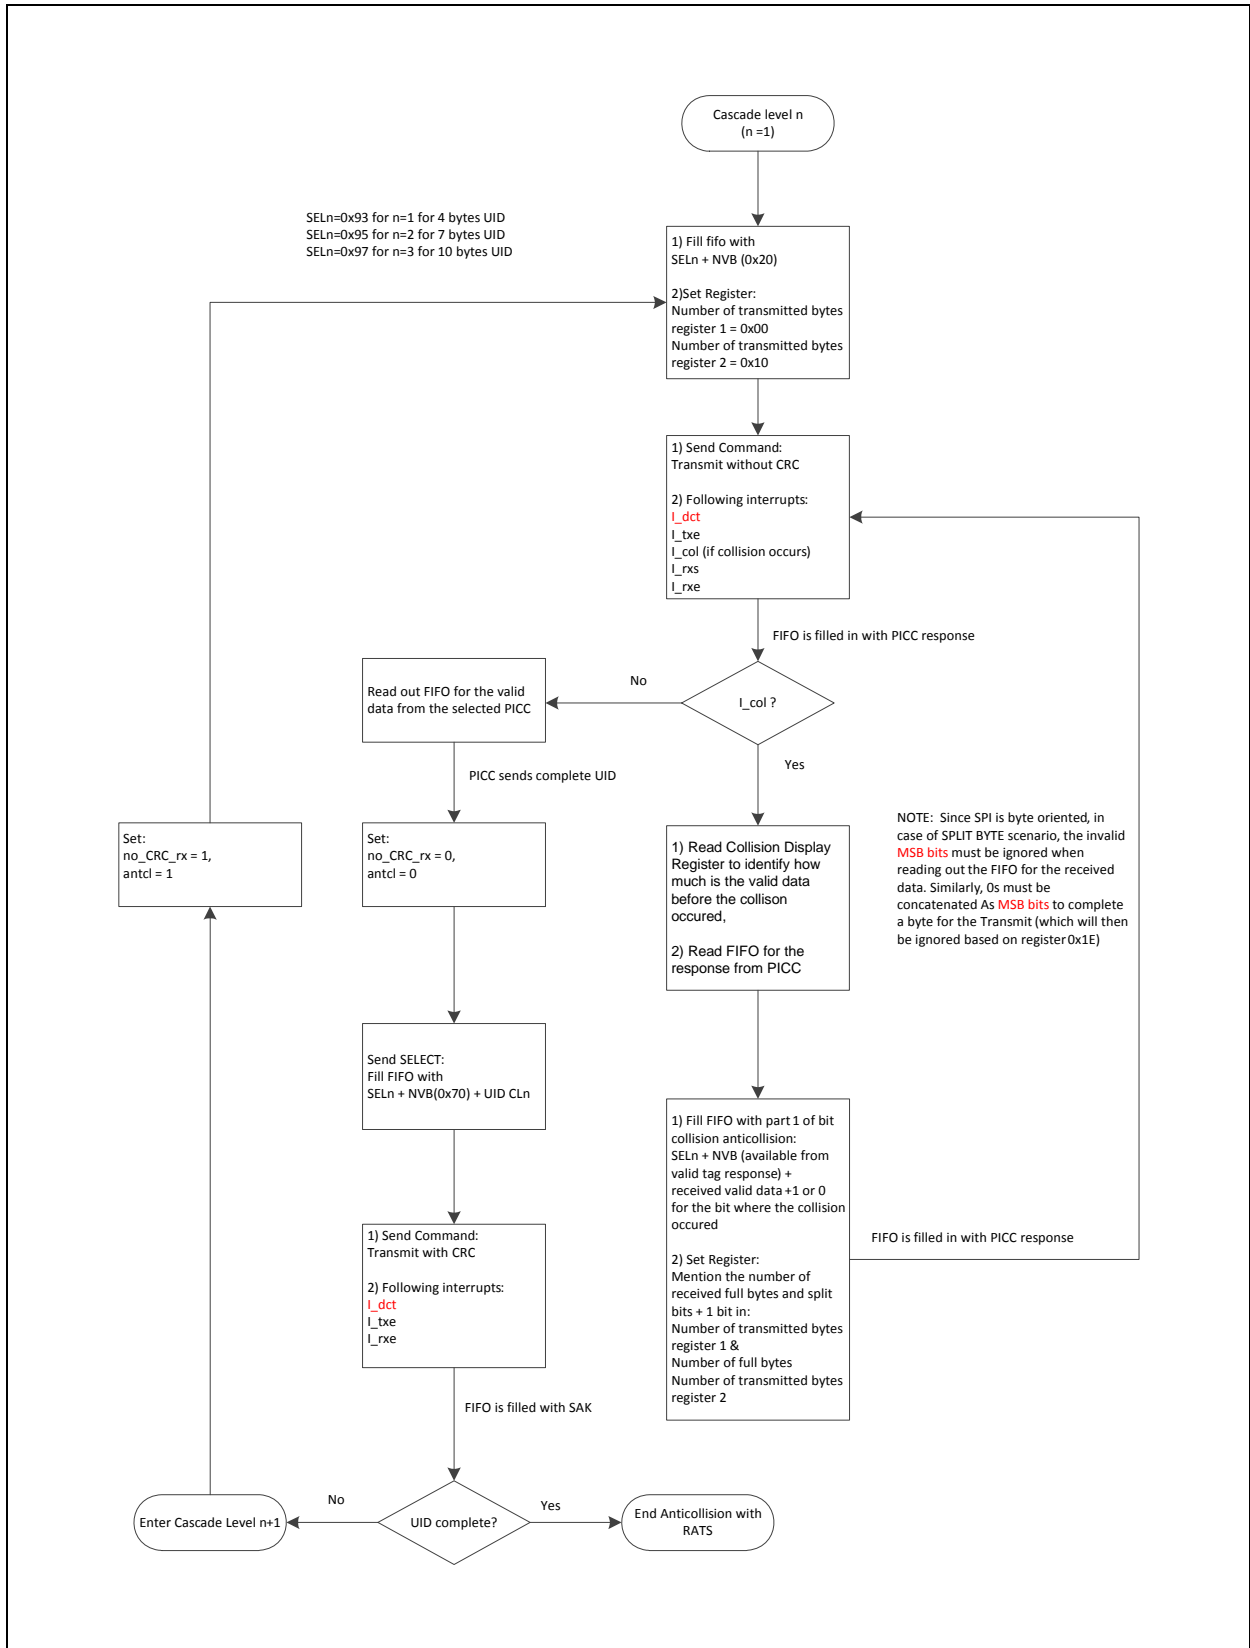


FeliCa Reader Mode

The general recommendation from previous chapter is valid also for FeliCa reader mode. Bit rates 212 and 424 kb/s are supported. Bit rates are the same in both (reader to tag and tag to reader) directions. Modulation reader to tag is AM.

In FeliCa mode the FeliCa frame format is supported.

Figure 118:
FeliCa Frame Format

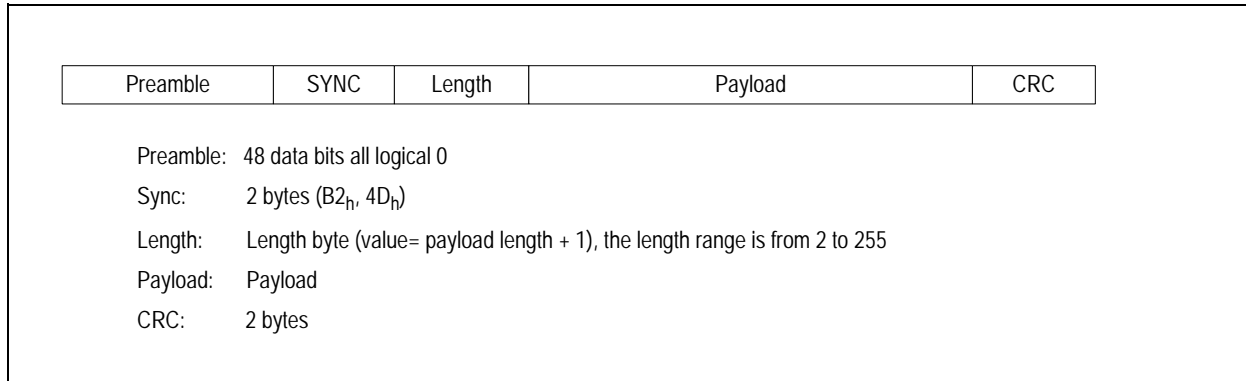

FeliCa Transmission

In order to transmit FeliCa frame only the Payload data is put in the FIFO. The number of Payload bytes is defined in the [Number of Transmitted Bytes Register 1](#) and [Number of Transmitted Bytes Register 2](#). Preamble length is defined by bits *f_p1* and *f_p0* in the [ISO14443B](#) and [FeliCa Settings Register](#), default value is 48 bits, but also other options are possible.

Transmission is triggered by sending direct command [Transmit With CRC](#). First preamble is sent, followed by SYNC and Length bytes. Then Payload stored in FIFO is sent, transmission is terminated by two CRC bytes which are calculated by the AS3911. Length byte is calculated from 'number of transmitted bytes'.

The following equation is used:

$$\text{length} = \text{payload length} + 1 = \text{number of transmitted bytes} + 1$$

FeliCa Reception

After transmission is done the AS3911 logic starts to parse the receiver output to detect the Preamble of FeliCa tag reply.

Once the Preamble followed by the two SYNC bytes is detected the Length byte and Payload data are put in the FIFO. CRC bytes are internally checked.

NFCIP-1 Operation

The AS3911 supports all NFCIP-1 initiator modes and active communication target modes. All NFCIP-1 bit rates (106, 212 and 424 kbit/s) are supported.

NFCIP-1 Passive Communication Initiator

NFCIP-1 passive communication is equivalent to reader (PCD) to tag (PICC) communication where initiator acts as a reader and target acts as tag. The only difference is that in case of the NFCIP-1 passive communication the initiator performs Initial RF Collision Avoidance procedure at the beginning of communication.

In order to act as NFCIP-1 passive communication initiator the AS3911 has to be configured according to table below:

Figure 119:
Operation Mode and Bit Rate Setting for NFCIP-1 Passive Communication

| NFCIP-1 Bit Rate [kb/s] | Operation Mode Setting | Bit Rate for Tx [kb/s] | Bit Rate for Rx [kb/s] | Comment |
|-------------------------|------------------------|------------------------|------------------------|---|
| 106 | ISO14443A | fc/128 (~106) | fc/128 (~106) | |
| 212 | FeliCa | fc/64 (~212) | x | In FeliCa mode data rate is the same in both directions |
| 424 | FeliCa | fc/32 (~424) | x | |

Initial set-up of the [Operation Control Register](#) before the start of communication is the same as in case of reader to tag communication, with the exception that the transmitter is not enabled by setting the *tx_en* bit. The direct command [NFC Initial Field ON](#) is sent instead.

This command first performs the Initial RF Collision avoidance with Collision Avoidance Threshold defined in the [External Field Detector Threshold Register](#). The timing of collision avoidance is according to NFCIP-1 standard (for timing details see [Figure 37](#)). In case collision is not detected the *tx_en* bit is automatically set to switch the transmitter on. After minimum guard time T_{IRFG} the *I_cat* IRQ is sent to inform controller that the first initiator command can be send.

From this point on communication is the same as in case of ISO14443A (for 106 kb/s) or FeliCa (for 242 and 424 kb/s) reader communication.


In case a presence of external field is detected an *I_cac* IRQ is sent. In such case a transmission should not be performed, command [NFC Initial Field ON](#) has to be repeated as long as collision is not detected any more.

Initial collision avoidance is not limited to modes supported by NFCIP-1. The initial collision avoidance according to procedure described above can be performed before any reader mode is started to avoid collision with an HF reader or an NFC device operating in proximity.

Support of NFCIP-1 Transport Frame Format

[Figure 120](#) depicts the Transport Frame according to NFCIP-1 standard.

Figure 120:
Transport Frame Format According to NFCIP-1

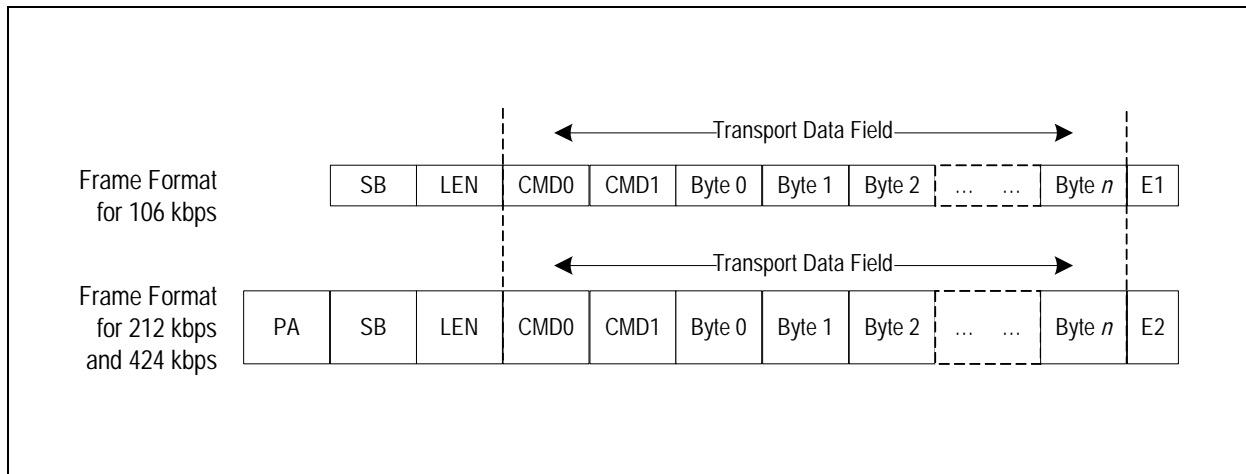

Transport Frame for bit rate 212 and 424 kb/s has the same format as communication frame used during Initialization and SDD. This format is also used in FeliCa protocol (see also [FeliCa Reader Mode](#)). In case of 106 kb/s the SB (Start byte at F0_h) and LEN (length byte) are only used in Transport Frame.

Support of Transport Frame for 106 kb/s NFCIP-1 communication is enabled by setting bit nfc_f0 in the [ISO14443A and NFC 106kb/s Settings Register](#).

Once this bit is set and ISO 14443A mode with bit rate 106 kb/s is configured, the behavior of the AS3911 framing is as follows:

Transmission

In order to transmit a Transport Frame only the Transport Data has to be put in FIFO. The number of Transport Data bytes is defined in the [Number of Transmitted Bytes Register 1](#) and [Number of Transmitted Bytes Register 2](#). Transmission is triggered by sending direct command [Transmit With CRC](#). First Start byte with value F0_h followed by Length byte are sent. Then Transport Data stored in FIFO is sent, transmission is terminated by two CRC bytes (E1 in [Figure 120](#)) which are calculated by the AS3911. Length byte is calculated from 'number of transmitted bytes'. The following equation is used:

$$\text{length} = \text{Transport Data length} + 1 = \text{number of transmitted bytes} + 1$$

Reception

After transmission is done the AS3911 logic starts to parse the receiver output to detect the start of tag reply.

Once the start of communication sequence is detected the first byte (Start Byte with value F0_h) is checked the Length byte and Transport Data bytes are put in the FIFO. CRC bytes are internally checked. In case the Start byte is not equal to F0_h the following data bytes are still put in FIFO, additionally a soft framing error IRQ is set to indicate the Start Byte error.

NFCIP-1 Active Communication Initiator

During NFCIP-1 active communication both, initiator and target switch on its field when transmitting and switch off its field when receiving. In order to operate as NFCIP-1 active communication initiator the AS3911 has to be configured according to table below (bit *targ* in the [Mode Definition Register](#) has to be 0):

Figure 121:
Operation Mode and Bit Rate Setting for NFCIP-1 Active Communication Initiator

| NFCIP-1 Bit Rate [kb/s] | Initiator Operation Mode Setting | Bit Rate for Tx [kb/s] | Bit Rate for Rx [kb/s] | Comment |
|-------------------------|----------------------------------|------------------------|------------------------|--|
| 106 | NFCIP-1 active communication | fc/128 (~106) | x | For all NFCIP-1 communication, data rate is the same in both directions. |
| 212 | NFCIP-1 active communication | fc/64 (~212) | x | |
| 424 | NFCIP-1 active communication | fc/32 (~424) | x | |

After selecting the NFCIP-1 active communication mode the Receiver and Transmitter have to be configured properly. This configuration can be done automatically by sending direct command [Analog Preset](#) (see [“Analog Preset” on page 53](#)).

During NFCIP-1 active communication the RF Collision avoidance and switching on the field is performed using ‘NFC Field ON’ commands (see [“NFC Field ON Commands” on page 51](#)), while the sending of message is performed using Transmit commands as in the case of reader communication. Alternatively the Response RF Collision Avoidance sequence is started automatically when the switching off of target field is detected in case the bit *nfc_ar* in the [Mode Definition Register](#) is set.

When NFCIP-1 mode is activated the External Field Detector is automatically enabled by setting bit *en_fd* in the [Auxiliary Display Register](#). The Peer Detection Threshold is used to detect target field. During execution of ‘NFC Field ON’ commands, the Collision Avoidance Threshold is used.

Initial set-up of the [Operation Control Register](#) before the start of communication is the same as in case of reader to tag communication with the exception that the transmitter is not enabled by setting the *tx_en* bit. The *tx_en* bit and therefore switching on of the transmitter is controlled by NFC Field ON commands. Switching off the field is performed automatically after a message has been sent. The [General Purpose and No-response Timer Control Register](#) is used to define the time during which the field stays switched on after a message has been transmitted.

In order to receive the NFCIP-1 active reply only the AM demodulation channel is used. Due to this the Receiver AM channel has to be enabled. The preset done by [Analog Preset](#) command enables only the AM demodulation channel, while PM channel is disabled to save current.

In NFCIP-1 active communication the NFCIP-1Transport Frame format (See [Figure 120](#)) is always used. Due to this the [ISO14443A and NFC 106kb/s Settings Register](#) bit *nfc_f0* is set by Analog Preset command (see [“Support of NFCIP-1Transport Frame Format” on page 126](#)).

NFCIP-1 active communication sequence when bit *nfc_ar* in the [Mode Definition Register](#) is set (automatic Response RF Collision Avoidance sequence). During this sequence bits *nfc_n1* and *nfc_n0* of the [Auxiliary Definition Register](#) have to be 0 to produce Response Collision Avoidance sequence with $n=0$:

1. First the direct command [NFC Initial Field ON](#) is sent. In case no collision was detected during RF collision avoidance the field is switched on and an IRQ with *I_cat* flag set is sent to controller after T_{IRFG} .
2. The message, which was prepared as in case of reader to tag communication, is transmitted using Transmit command.
3. After the message is sent the field is switched off. The time between the end of the message and switching off the field is defined by the General Purpose Timer. (The General Purpose Timer IRQ may be masked since controller does not need this information).
4. After switching off its field the AS3911 starts the No-response Timer and observes the External Field Detector output to detect the switching on of the target field. In case the target field is not detected before No-response Timer timeout, an IRQ due No-response Timer expire is sent.
5. When Target field is detected an IRQ with *I_eon* flag set is sent to controller and Mask-receive Timer is started. After the Mask Receive Timer expires the receiver output starts to be observed to detect start of the target response. The reception process goes on as in case of reader to tag communication.
6. When the External Field Detector detects that the target has switched off its field, it sends an IRQ with *I_eof* flag set to the controller, and in case bit *nfc_ar* is set automatically activates the sequence of direct command [NFC Response Field ON](#). In case no collision is detected during RF collision avoidance the field is switched on and an IRQ with *I_cat* flag set is sent to controller after T_{ARFG} .

7. Sequence loops through point 2. In case the last initiator command is sent in next sequence (DLS_REQ in case of NFCIP-1 protocol) the bit *nfc_ar* in the [Mode Definition Register](#) has to be put to 0 to avoid switching on the initiator field after the target has switched of its field.

NFCIP-1 Active Communication Target

The AS3911 target mode is activated by setting bit *targ* in the [Mode Definition Register](#) to 1. When target mode is activated the External Field Detector is automatically enabled by setting bit *en_fd* in the [Auxiliary Definition Register](#).

When bit *targ* is set and all bits of the [Operation Control Register](#) are set to 0, the AS3911 is in low power Initial NFC Target Mode. In this mode the External Field Detector with Peer Detection Threshold is enabled.

There are two different NFC target modes implemented (defined by mode bits of the [Mode Definition Register](#)): the bit rate detection mode and normal mode. In the bit rate detection mode the framing logic performs automatic detection of the initiator data rate and writes it in the [NFCIP Bit Rate Detection Display Register](#). In the normal mode it is supposed that the data rate defined in the [Bit Rate Definition Register](#) is used.

After selecting the NFCIP-1 active target mode the Receiver and Transmitter have to be configured properly. Configuration is the same as in case of NFCIP-1 active initiator mode. This configuration can be done automatically by sending direct command [Analog Preset](#) (see “[Analog Preset](#)” on page 53).

NFCIP-1 active communication sequence when bit *nfc_ar* in the [Mode Definition Register](#) is set (automatic Response RF Collision Avoidance sequence). During this sequence bits *nfc_n1* and *nfc_n0* of the [Auxiliary Definition Register](#) have to be 0 to produce Response Collision Avoidance with $n=0$.

The following sequence assumes that the AS3911 is in the low power Initial NFC Target Mode with the bit rate detection mode selected. Bit *nfc_ar* in the [Mode Definition Register](#) is set (automatic Response RF Collision Avoidance sequence). When the initiator field is detected the following sequence is executed:

1. An IRQ with *I_eon* flag set is sent to the controller.
2. The controller turns on the oscillator, regulator and receiver. Mask-receive Timer is started by sending direct command [Start Mask-receive Timer](#). After the Mask Receive Timer expires the receiver output starts to be observed to detect start of the initiator message.
3. Once the start of initiator message is detected, an IRQ due to start of receive is sent, the framing logic switches on a module which automatically recognizes the bit rate of signal sent by the initiator. Once the bit rate is recognized an IRQ with *I_nfct* flag set is sent and the bit rate is automatically loaded in the [NFCIP Bit Rate Detection Display Register](#). Detection of bit rate is also a condition that automatic Response RF Collision

Avoidance sequence is enabled). The received message is decoded and put into the FIFO, IRQ is sent as after any received message.

4. The controller sends direct command [Go to Normal NFC Mode](#), to copy the content of the [NFCIP Bit Rate Detection Display Register](#) to the Bit Rate Definition Register and to change the NFCIP-1 target mode to normal (the command Go To Normal Mode and reading of received data can be chained). Since the Tx modulation type depends on bit rate, the Tx modulation type also has to be correctly set at this point. The simplest way to do it is to issue direct command [Analog Preset](#).
5. When the External Field Detector detects that the target has switched off its field, it sends an IRQ with *l_eof* flag set to the controller, and in case bit *nfc_ar* is set automatically activates the sequence of direct command [NFC Response Field ON](#). Bits *nfc_n1* and *nfc_n0* of the [Auxiliary Definition Register](#) are used to define number n of Response RF Collision Avoidance sequence. In case no collision is detected during RF collision avoidance the field is switched on and an IRQ with *l_cat* flag set is sent to controller after T_{ARFG} .
6. The reply, which was prepared as in case of reader to tag communication is transmitted using Transmit command.
7. After the message is sent the field is switched off. The time between the end of the message and switching off the field is defined in the General Purpose Timer. (The General Purpose Timer IRQ may be masked since controller does not need this information).

From this point on the communication with initiator loops through the following sequence (during this sequence bits *nfc_n1* and *nfc_n0* of the [Auxiliary Definition Register](#) have to be 0 to produce Response RF Collision Avoidance with $n=0$):

1. After switching off its field the AS3911 starts the No-response Timer and observes the External Field Detector output to detect the switching on of the initiator field. In case the initiator field is not detected before No-response Timer timeout, an IRQ due No-response Timer expire is sent.
2. When initiator field is detected an IRQ with *l_eon* flag set is sent to controller and Mask-receive Timer is started. After the Mask Receive Timer expires the receiver output starts to be observed to detect start of the initiator response. The reception process goes on as in case of reader to tag communication.
3. When the External Field Detector detects that the target has switched off its field, it sends an IRQ with *l_eof* flag set to the controller, and in case bit *nfc_ar* is set automatically activates the sequence of direct command [NFC Response Field ON](#). In case no collision

is detected during RF collision avoidance the field is switched on and an IRQ with l_cat flag set is sent to controller after T_{ARFG} .

4. The reply which was prepared as in case of reader to tag communication is transmitted using Transmit command
5. After the message is sent the field is switched off. The time between the end of the message and switching off the field is defined in General Purpose Timer. In case a new command from initiator is expected the General Purpose Timer IRQ may be masked since controller does not need this information.
6. In case a new command from Initiator is expected the sequence loops through point 1. In case the target reply was the last in a sequence (DLS_RES in case of NFCIP-1 protocol) a new command from initiator is not expected. At the moment the field is switched off, a General Purpose Timer IRQ is received and the AS3911 is put back in the low power NFC Target Mode by deactivating the [Operation Control Register](#). NFC mode is changed back to rate detection mode by writing the [Mode Definition Register](#).

AM Modulation Depth: Definition and Calibration

The AS3911 Transmitter supports OOK and AM modulation. The choice between OOK and AM modulation is done by writing [Auxiliary Definition Register](#) bit tr_am . AM modulation is preset by direct command [Analog Preset](#) in case the following protocols are configured:

- ISO14443B
- FeliCa
- NFCIP-1 212 and 424 kb/s

The AM modulation depth can be automatically adjusted by setting the [AM Modulation Depth Control Register](#) and sending the direct command [Calibrate Modulation Depth](#). There is also an alternative possibility where the command [Calibrate Modulation Depth](#) is not used and the modulated level is defined by writing the Antenna driver [RFO AM Modulated Level Definition Register](#).

AM Modulation Depth Definition Using the 'Calibrate Modulation Depth' Direct Command

Before sending the direct command [Calibrate Modulation Depth](#) the [AM Modulation Depth Control Register](#) has to be configured in the following way:

- The bit 7 (am_s) has to be set to 0 to choose definition by the command [Calibrate Modulation Depth](#)
- Bits 6 to 1 ($mod5$ to $mod0$) define target AM modulation depth

Definition of Modulation Depth Using Bits mod5 to mod0:

The RFID standard documents usually define the AM modulation level in form of the modulation index. The modulation index is defined by formula $(a-b)/(a+b)$ where a is amplitude of the non-modulated carrier and b is the amplitude of the modulated carrier.

The modulation index specification is different for different standards. The ISO14443B modulation index is typically 10% with allowed range from 8% to 14%, range from 10 to 30% is defined in the ISO15693 and 8% to 30% in the FeliCa™ and NFCIP-1 212 kb/s and 424 kb/s.

The bits mod5 to mod0 are used to calculate the amplitude of the modulated level. The non-modulated level which was before measured by the A/D converter and stored in an 8 bit register is divided by a binary number in range from 1 to 1.98. The bits mod5 to mod0 define binary decimals of this number.

Example:

In case of the modulation index 10% the modulated level amplitude is 1.2222 times lower than the non-modulated level. 1.2222 converted to binary and truncated to 6 decimals is 1.001110. So in order to define the modulation index 10% the bits mod5 to mod0 have to be set to 001110.

The table below depicts setting of the mod bits for some often used modulation indexes.

Figure 122:
Setting of the mod Bits for some often used Modulation Indexes

| Modulation Index [%] | a/b [dec] | a/b [bin] | mod5.....mod0 |
|----------------------|-----------|-----------|---------------|
| 8 | 1.1739 | 1.001011 | 001011 |
| 10 | 1.2222 | 1.001110 | 001110 |
| 14 | 1.3256 | 1.010100 | 010100 |
| 20 | 1.5000 | 1.100000 | 100000 |
| 30 | 1.8571 | 1.110111 | 110111 |
| 33 | 1.9843 | 1.111111 | 111111 |

Execution of Direct Command ‘Calibrate Modulation Depth’:

The modulation level is adjusted by increasing the RFO1 and RFO2 driver output resistance. The RFO drivers are composed of 8 binary weighted segments. Usually all these segments are turned on to define the normal, non-modulated level, there is also a possibility to increase the output resistance of the non-modulated state by writing the [RFO Normal Level Definition Register](#).

Before sending the direct command [Calibrate Modulation Depth](#) the oscillator and regulators have to be turned on. When the direct command [Calibrate Modulation Depth](#) is sent the following procedure is executed:

- The Transmitter is turned on, non-modulated level is established.
- The amplitude of the non-modulated carrier level established on the inputs RF11 and RF12 is measured by the A/D converter and stored in the [A/D Converter Output Register](#).
- Based on the measurement of the non-modulated level and the target modulated level defined by the bits mod5 to mod0 the target modulated level is calculated.
- The output driver control is taken over by the *Calibrate Register*. Content of the *Calibrate Register* is modified using successive approximation algorithm as long as long as the measured level is equal or as close as possible to target modulated level calculated in previous step.
- Final state of the *Calibrate Register* is copied in the [AM Modulation Depth Display Register](#). Content of this register is used to define the AM modulated level.

Note(s): After this calibration procedure is finished, the content of the [RFO Normal Level Definition Register](#) should not be changed. Modification of this register content will change the non-modulated amplitude and therefore the ratio between the modulated and non-modulated level will be changed. Please also note that in case the calibration of antenna resonant frequency is used, command [Calibrate Antenna](#) has to be run before AM modulation depth adjustment.

AM Modulation Depth Definition using the 'RFO AM Modulated Level Definition' Register

When the bit 7 (*am_s*) of the [AM Modulation Depth Control Register](#) is set to 1 the AM modulated level is controlled by writing the [RFO AM Modulated Level Definition Register](#). In case setting of the modulated level is already known it is not necessary to run the calibration procedure, the modulated level can simply be defined by writing this register.

It is also possible to implement calibration procedure in external controller using the [RFO Normal Level Definition Register](#) and the direct command [Measure Amplitude](#). This procedure has to be used in case the target modulation depth is deeper than 33%. The procedure is the following:

- Write the non-modulated level in the [RFO Normal Level Definition Register](#) (usually it is all 0 to have the lower possible output resistance).
- Switch on the transmitter.
- Send the direct command [Measure Amplitude](#). Read result from the [A/D Converter Output Register](#).

- Calculate the target modulated level from the target modulation index and result of the previous point.
- In the following iterations content of the [RFO Normal Level Definition Register](#) is modified, the command [Measure Amplitude](#) executed and result compared to the target modulated level as long as the result is not equal or as close as possible to the target modulated level.
- At the end the content of the [RFO Normal Level Definition Register](#) which results in the target modulated level is written in the [RFO AM Modulated Level Definition Register](#) while the [RFO Normal Level Definition Register](#) is restored with the non-modulated definition value.

Antenna Tuning

The AS3911 comprises the building blocks which make possible checking and adjustment of the antenna LC tank resonance frequency. The AS3911 Phase and Amplitude Detector block is used for resonance frequency checking and adjustment.

In order to implement the antenna LC tank calibration tuning capacitors have to be connected between the two coil terminals to the pins TRIM1_3 to TRIM1_0 and TRIM2_3 to TRIM2_0. In case single driver is used only the pins TRIM1_3 to TRIM1_0 are used, pins TRIM2_3 to TRIM2_0 are left open. [Figure 123](#) depicts connection of the trim capacitors for both, single and differential driving for the simple case where the antenna LC tank is directly connected to RFO pins.

The TRIM pins contain the HVNMOS switching transistors to VSS. The on resistance of TRIM1_0 and TRIM2_0 switch transistors, which are meant to be connected to LSB tuning capacitor is 50Ω typ. at 3 V VSP_D, the on resistance of other pins is binary weighted (the on resistance of TRIM1_3 and TRIM2_3 is 6.25Ω typ.) The breakdown voltage of the HVNMOS switch transistors is 30V, which limits the maximum peak to peak voltage on LC tank in case tuning is used.

During tuning procedure the resonance frequency is adjusted by connecting some of the tuning capacitors to VSS and leaving others floating. The Switches of the same binary weight are driven from the same source and are both on or off (the switches TRIM1_2 and TRIM2_2 are for example both either On or Off).

Antenna tuning can be automatically performed by sending direct command [Calibrate Antenna](#) or by an algorithm implemented in external controller by performing phase and amplitude measurements and controlling the TRIM switches using [Antenna Calibration Control Register](#).

Antenna Tuning Using Direct Command 'Calibrate Antenna'

In order to perform the antenna LC tank using direct command [Calibrate Antenna](#) binary weighted tuning capacitors have to be connected between the two coil terminals to the pins TRIM1_3 to TRIM1_0 and TRIM2_3 to TRIM2_0.

During automatic procedure, started by sending the direct command [Calibrate Antenna](#), the AS3911 finds position of TRIM switches at which the phase difference between the RFO output signal and RFI input signal is as close as possible to target phase defined in the [Antenna Calibration Target Register](#).


In case the antenna LC tank is directly connected to RFO pins (as in case of [Figure 123](#)) there is 90° phase shift between signal on the RFO outputs and the voltage on the RFI inputs when antenna LC tank is in resonance. In case additional EMC filter is inserted between RFO outputs and antenna LC tank the phase shift in case of resonance depends on additional phase shift generated by EMC filter.

During execution of the direct command [Calibrate Antenna](#) the AS3911 runs several phase measurements and changes configuration of TRIM pins in order to find the best possible setting. Due to this the format of the [Antenna Calibration Target Register](#) is the same as the format of direct command [Measure Phase](#) result.

The TRIM pin configuration which is result of the direct command [Calibrate Antenna](#) can be observed by reading the [Antenna Calibration Display Register](#). This register also contains an error flag which is set in case the tuning to target phase was not possible.

After the execution of direct command [Calibrate Antenna](#) the actual phase can be checked by sending direct command [Measure Phase](#).

Figure 123:
Connection of Tuning Capacitors to the Antenna LC Tank in case of Single (left) and Differential Driving (right)

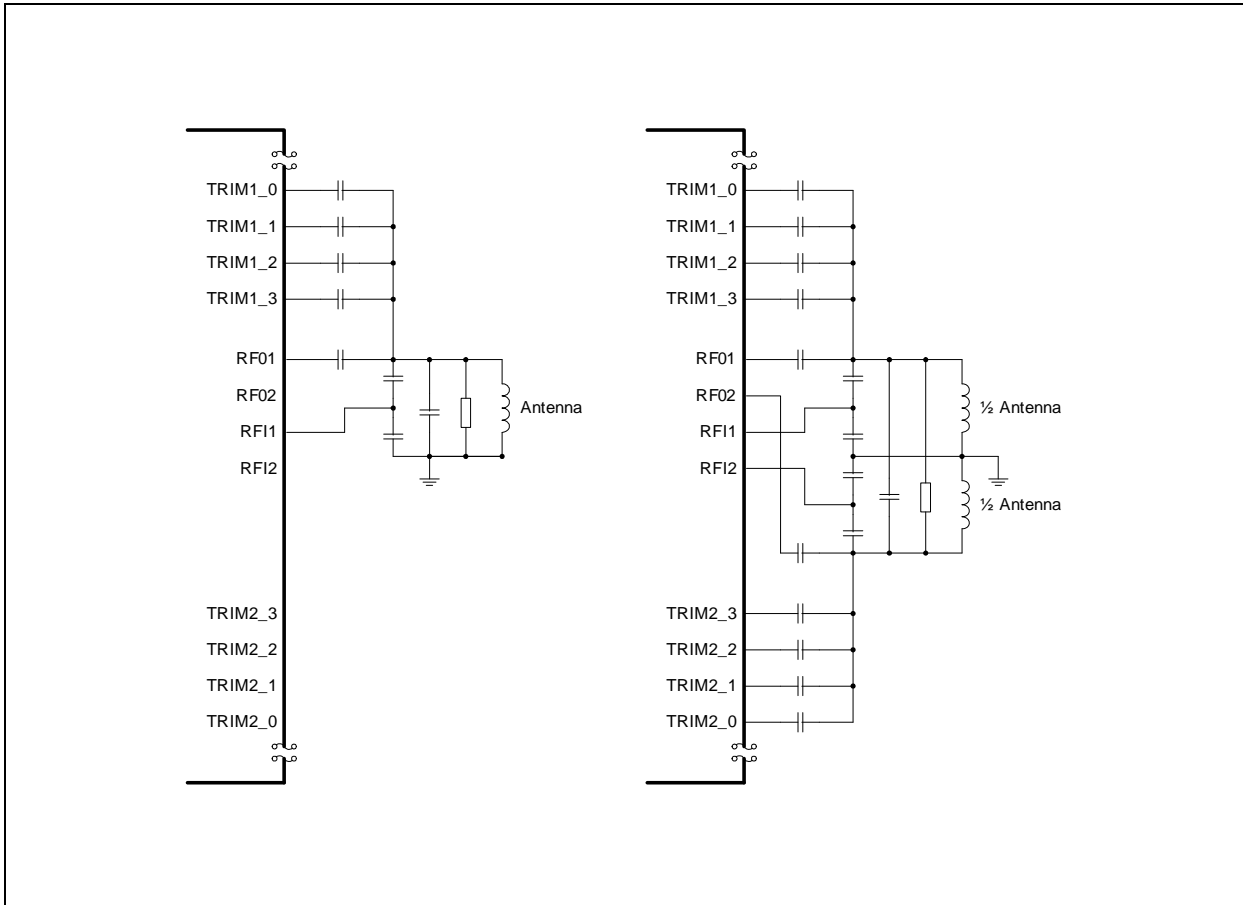

Antenna Tuning Using ‘Antenna Calibration Control’ Register

There is also a possibility to control the position of the TRIM switches by writing the [Antenna Calibration Control Register](#). When the bit *trim_s* of this register is set to 1 position of the trim switches is controlled by bits *tre_3* to *tre_0*.

Using this register and performing phase and amplitude measurements (using direct commands [Measure Phase](#) and [Measure Amplitude](#)) different tuning algorithms can be implemented in the external controller.

Stream Mode and Transparent Mode

Standard and custom 13.56 MHz RFID reader protocols, which are not supported by the AS3911 framing, can be realized using the AS3911 AFE and framing implemented in the external microcontroller.

Transparent Mode

After sending the direct command [Transparent Mode](#) the external microcontroller directly controls the transmission modulator and gets the Receiver output (control logic becomes “transparent”).

The Transparent Mode is entered on rising edge of signal /SS after sending the command [Transparent Mode](#) and is maintained as long as the signal /SS is kept high. Before sending the direct command [Transparent Mode](#) the Transmitter and Receiver have to be turned on, the AFE has to be configured properly.

While the AS3911 is in the Transparent Mode the AFE is controlled directly through SPI interface:

- Transmitter modulation is controlled by pin MOSI (high is modulator on)
- Signal *rx_on* is controlled by pin SCLK (high enables RSSI and AGC)
- Output of Receiver AM demodulation chain (digitized sub-carrier signal) is sent to pin MISO
- Output of Receiver PM demodulation chain (digitized sub-carrier signal) is sent to pin IRQ

By controlling the *rx_on* advanced Receiver features like the RSSI and AGC can be used. The receiver channel selection bits are valid also in Transparent mode, therefore it is possible to use only one of the two channel outputs. In case single channel is selected it is always multiplexed to MISO, while IRQ is kept low.

Configuration bits related to the ISO mode, framing and FIFO are of course meaningless in Transparent Mode, all other configuration bits are respected.

Use of Transparent Mode to implement active peer to peer (NFC) communication:

The framing implemented in the AS3911 supports all active modes according to the NFCIP-1 specification (ISO/IEC 18092:2004). In case any amendments to this specification or some custom active NFC communication need to be implemented Transparent mode can be used.

There is no special NFC active communication transparent mode, controlling of the Tx modulation and the Rx is done as described above. The difference comparing to the reader transparent mode is that the emission of the carrier field has to be enabled only during Tx. This is done by writing the [Operation Control Register](#) before and after Tx. Since with every SPI command the Transparent mode is lost it has to be re-entered.

In order to receive the reply in active NFC communication mode only the AM demodulation channel is used. Due to this the Receiver AM channel has to be enabled, while PM can be disabled.

Implementing active communication requires detection of external field. Setting the bit *en_fd* in the [Auxiliary Definition Register](#) enables the External Field Detector with Peer Detection Threshold. When bit *en_fd* is selected and the AS3911

is in Transparent mode, the External Field Detector output is multiplexed to pin IRQ. This enables detection of external target/initiator field and performing RF collision avoidance.

In case timing of the *NFC Field ON* command is correct for the NFC active protocol which is being implemented, these commands can be used in combination with the Transparent mode. These commands are used to perform the RF collision avoidance, switching on the field and timing out the minimum time from switching on the field to start of transmitting the message. After getting the interrupt, the controller generates the message in the Transparent mode.

When bit *en_fd* is set and all bits of the [Operation Control Register](#) are set to 0 the AS3911 is in the low power NFC Target Mode (same as in case of setting of *targ* bit, (see “[NFCIP-1 Active Communication Target](#)” on page 130). In this mode initiator field is detected. After getting an IRQ with *l_eon* flag set, the controller turns on the oscillator, regulator and receiver and performs reception in the Transparent mode.

Stream Mode

Stream mode can be used to implement protocols, where the low level framing needed for ISO14443 receive coding can be used and decoded information can be put in FIFO. The main advantage of this mode over the Transparent mode is that timing is generated in the AS3911 therefore the external controller does not have to operate in real time. The stream mode is selected in the [Mode Definition Register](#), the operating options are defined in the [Stream Mode Definition Register](#). Two different modes are supported for tag to reader communication (Sub-carrier and BPSK Stream Modes). General rule for Stream mode is that the first bit sent/received is put on the LSB position of the FIFO byte.

After selecting the stream mode the Receiver and Transmitter have to be configured properly (there is no automatic configuration for the stream mode).

Sub-carrier Stream Mode:


This mode supports protocols where during the tag to reader communication the time periods with sub-carrier signal are interchanged with time periods without modulation (like in the ISO14443A 106 kbit/s mode). In this mode the sub-carrier frequency and number of sub-carrier frequency periods in one reporting period is defined. Sub-carrier frequency in the range from $f_c/64$ (212 kHz) to $f_c/8$ (1695 kHz) are supported. Supported number of sub-carrier frequency periods in one reporting period range from two to eight.

Start of receive interrupt is sent and the first data bit is put in FIFO after the first reporting time period with sub-carrier is detected. One bit of FIFO data gives information about status of input signal during one reporting period. Logic 1 means that the sub-carrier was detected during reporting period, while 0

means that no modulation was detected during reporting period. End of receive is reported when no sub-carrier signal in more than eight reporting periods have been detected.

Figure below depicts an example for setting $scf = 01b$ and $scp = 10b$. With this setting the sub-carrier frequency is set to $fc/32$ (424 kHz) and the reporting period to four sub-carrier periods ($128/fc - \sim 106 \mu s$).

Figure 124:
Example of Sub-carrier Stream Mode for $scf = 01b$ and $scp = 10b$

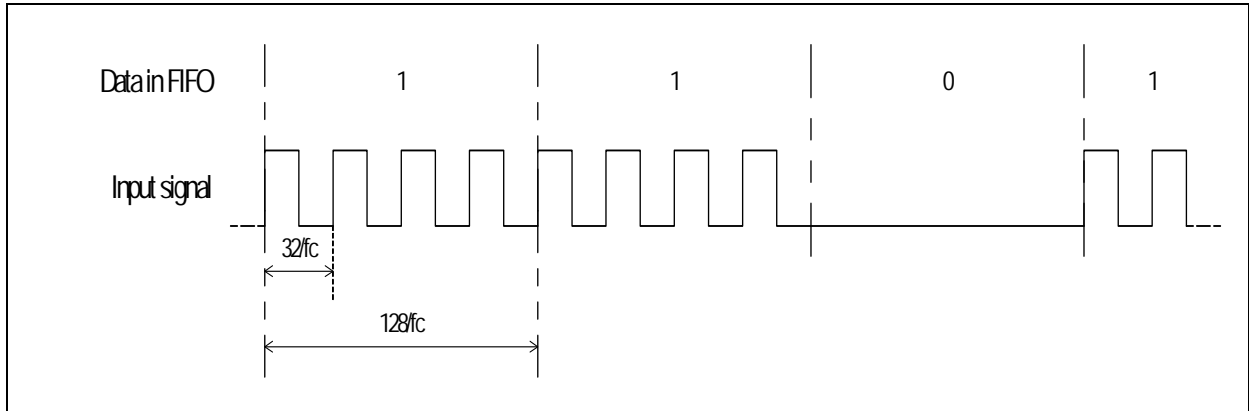


BPSK Stream Mode:

This mode supports protocols where during the tag to reader communication BPSK code is used (like in the ISO14443B mode). In this mode the sub-carrier frequency and number of sub-carrier frequency periods in one reporting period is defined. Sub-carrier frequency in the range from $fc/16$ (848 kHz) to $fc/4$ (3390 kHz) are supported. Supported number of sub-carrier frequency periods in one reporting period range from one to eight.

Start of receive interrupt is sent and the first data bit is put in FIFO after the first reporting time period with sub-carrier is detected. Logic 0 is used for the initially detected phase, while logic 1 indicates inverted phase comparing to the initial phase. End of receive is reported when the first reporting period without sub-carrier is detected.

Figure below depicts an example for setting $scf = 01b$ and $scp = 01b$. With this setting the sub-carrier frequency is set to $fc/8$ (1695 kHz) and the reporting period to two sub-carrier periods ($16/fc - \sim 1.18 \mu s$).

Figure 125:
Example of BPSK Stream Mode for scf = 01b and scp = 01b

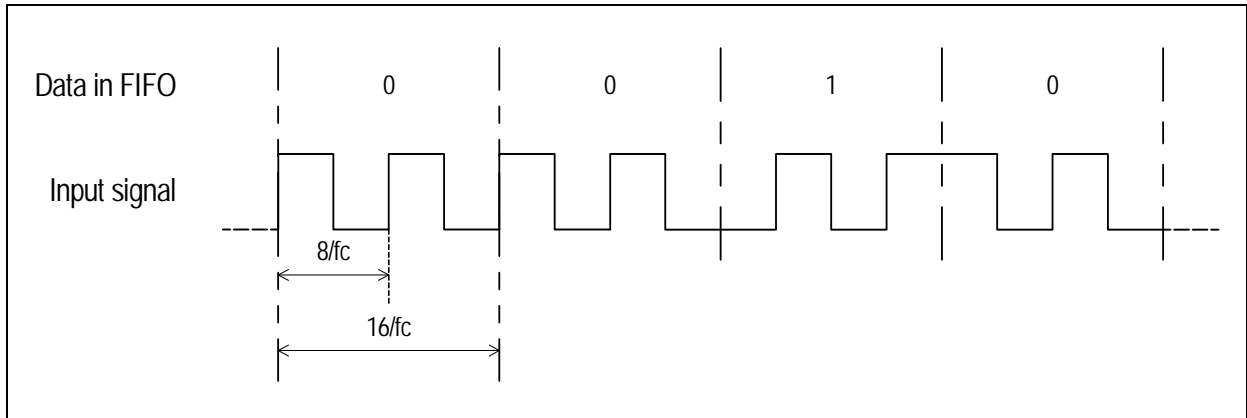


Reader to Tag Communication in Stream Mode:

Reader to tag communication control is the same for both stream modes. Reader to tag coding is defined by data put in FIFO. The *stx* bits of [Stream Mode Definition Register](#) define the Tx time period during which one bit of FIFO data define the status of transmitter. In case the data bit is set to logic 0 there is no modulation, in case it is logic 1 the transmitted carrier signal is modulated according to current modulation type setting (AM or OOK). Transmission in stream mode is started by sending direct commands [Transmit Without CRC](#) or [Transmit With CRC](#).


Figure below depicts an example for setting *stx* = 000b. With this setting the Tx time period is defined to 128/fc (~9,44µs).

Figure 126:
Example of Tx in Stream Mode for stx = 000b and OOK Modulation

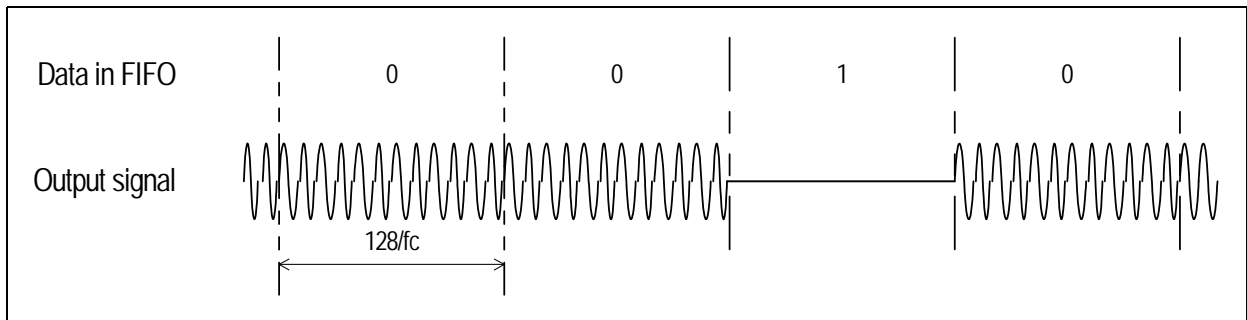

Package Drawings & Markings The device is available in a 32-pin QFN (5x5mm) package.

Figure 127:
Package Drawings

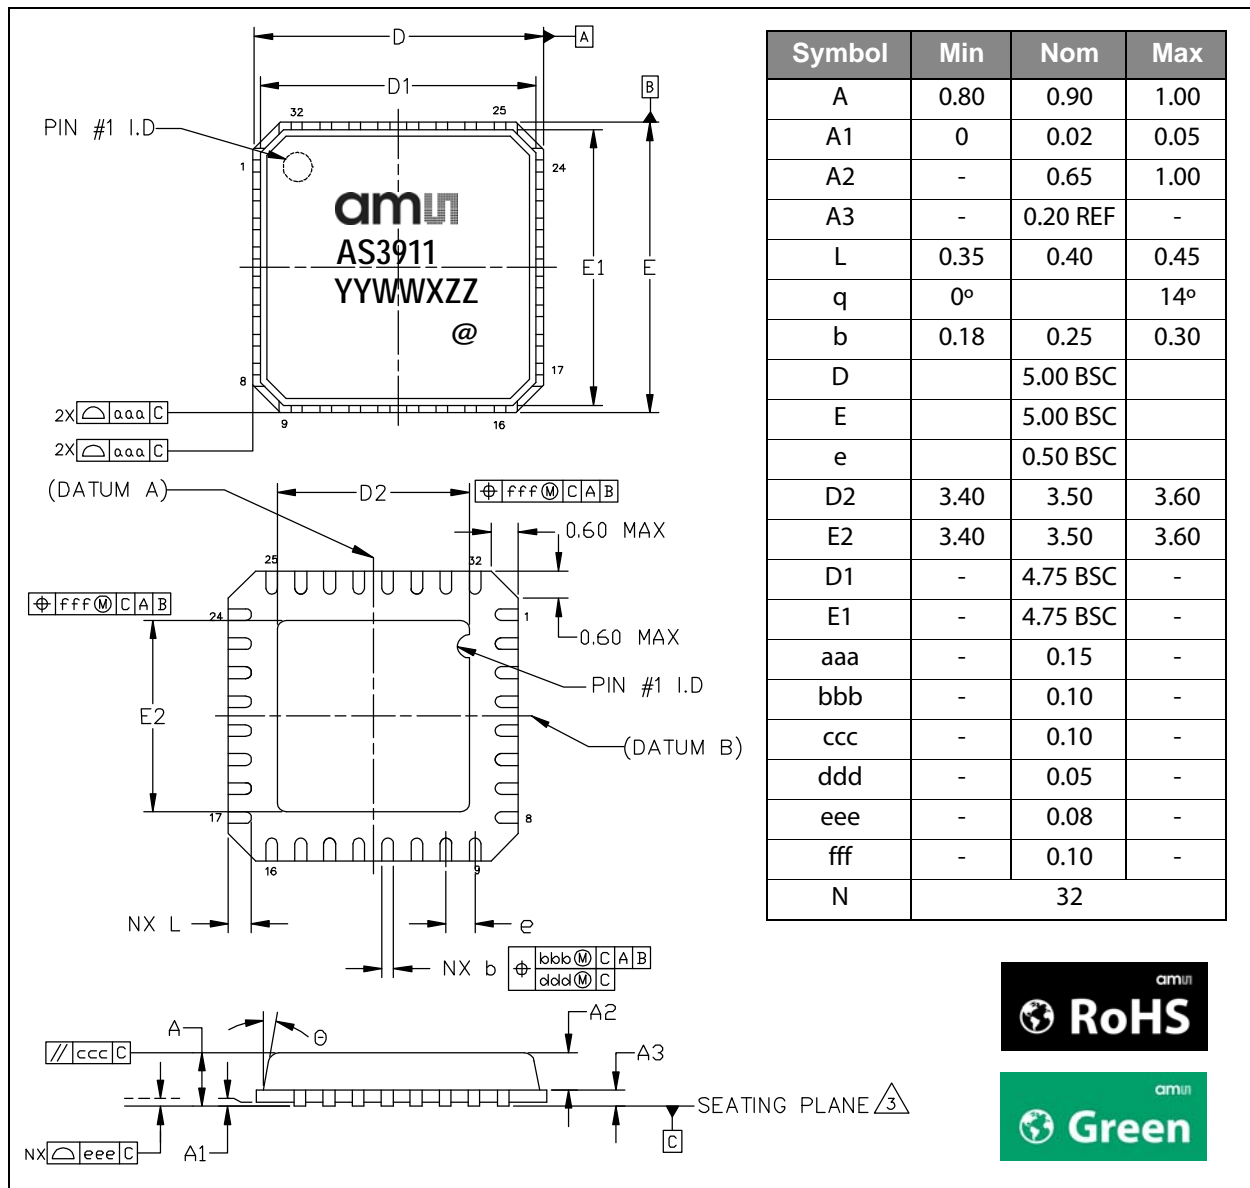

Note(s) and/or Footnote(s):

1. Dimensioning and tolerances conform to ASME Y14.5M-1994.
2. All dimensions are in millimeters. Angles are in degrees.
3. Co-planarity applies to the exposed heat slug as well as the terminal.
4. Radius on terminal is optional.
5. N is the total number of terminals.

Figure 128:
Marking YYWWXZZ

| YY | WW | X | ZZ | @ |
|---------------|--------------------|------------------|-------------------|-------------------|
| Pb-free; Year | Manufacturing week | Plant Identifier | Traceability code | Sublot Identifier |

RoHS Compliant & ams Green Statement

RoHS: The term RoHS compliant means that ams products fully comply with current RoHS directive. Our semiconductor products do not contain any chemicals for all 6 substance categories, including the requirement that lead not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, RoHS compliant products are suitable for use in specified lead-free processes.

ams Green (RoHS compliant and no Sb/Br): ams Green defines that additionally to RoHS compliance, our products are free of Bromine (Br) and Antimony (Sb) based flame retardants (Br or Sb do not exceed 0.1% by weight in homogeneous material).

Important Information: The information provided in this statement represents ams knowledge and belief as of the date that it is provided. ams bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. ams has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. ams and ams suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

Ordering & Contact Information

Figure 129:
Ordering Information

| Ordering Code | Type | Marking | Delivery Form |
|---------------|-----------------------------|---------|---------------|
| AS3911-BQFT | Packaged 32-pin QFN (5x5mm) | AS3911 | Tape & Reel |

Buy our products or get free samples online at:
www.ams.com/ICdirect

Technical Support is available at:
www.ams.com/Technical-Support

For further information and requests, e-mail us at:
ams_sales@ams.com

For sales offices, distributors and representatives, please visit:
www.ams.com/contact

Headquarters

ams AG
Tobelbaderstrasse 30
8141 Unterpremstaetten
Austria, Europe

Tel: +43 (0) 3136 500 0

Website: www.ams.com

Copyrights & Disclaimer

Copyright © ams AG, Tobelbader Strasse 30, 8141 Unterpremstaetten, Austria-Europe. Trademarks Registered. All rights reserved. The material herein may not be reproduced, adapted, merged, translated, stored, or used without the prior written consent of the copyright owner.

Devices sold by ams AG are covered by the warranty and patent indemnification provisions appearing in its Term of Sale. ams AG makes no warranty, express, statutory, implied, or by description regarding the information set forth herein. ams AG reserves the right to change specifications and prices at any time and without notice. Therefore, prior to designing this product into a system, it is necessary to check with ams AG for current information. This product is intended for use in commercial applications. Applications requiring extended temperature range, unusual environmental requirements, or high reliability applications, such as military, medical life-support or life-sustaining equipment are specifically not recommended without additional processing by ams AG for each application. This Product is provided by ams "AS IS" and any express or implied warranties, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose are disclaimed.

ams AG shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interruption of business or indirect, special, incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of ams AG rendering of technical or other services.

Reference Guide

| | |
|-----------|--|
| 1 | General Description |
| 2 | Key Benefits & Features |
| 3 | Applications |
| 3 | Block Diagram |
| 4 | Pin Assignment |
| 6 | Absolute Maximum Ratings |
| 8 | Electrical Characteristics |
| 8 | Operating Conditions |
| 8 | DC/AC Characteristics for Digital Inputs and Outputs |
| 8 | CMOS Inputs: |
| 9 | CMOS Outputs: |
| 9 | Electrical Specification |
| 12 | Detailed Description |
| 13 | Transmitter |
| 13 | Receiver |
| 13 | Phase and Amplitude Detector |
| 13 | A/D Converter |
| 14 | Capacitive Sensor |
| 14 | External Field Detector |
| 14 | Quartz Crystal Oscillator |
| 14 | Power Supply Regulators |
| 15 | POR and Bias |
| 15 | RC Oscillator and Wake-up Timer |
| 15 | ISO14443 and NFCIP-1 Framing |
| 15 | FIFO |
| 15 | Control Logic |
| 16 | SPI Interface |
| 16 | Application Information |
| 16 | Operating Modes |
| 16 | Transmitter |
| 17 | Slow Transmitter Ramping |
| 18 | Receiver |
| 18 | Demodulation Stage |
| 20 | Filtering and Gain Stages |
| 22 | Digitizing Stage |
| 22 | AGC, Squelch and RSSI |
| 24 | Receiver in NFCIP-1 Active Communication Mode |
| 24 | Capacitive Sensor |
| 26 | Capacitor Sensor Calibration |
| 26 | Wake-up Mode |
| 28 | Auto-averaging |
| 28 | Quartz Crystal Oscillator |
| 29 | Timers |
| 29 | Mask Receive Timer and No-response Timer |
| 30 | General Purpose Timer |
| 31 | Wake-up Timer |
| 31 | A/D Converter |
| 31 | Phase and Amplitude Detector |
| 32 | Phase Detector |
| 33 | Amplitude Detector |

| | |
|-----------|--|
| 33 | External field Detector |
| 33 | Peer Detection Threshold |
| 34 | Collision Avoidance Threshold |
| 34 | Power Supply System |
| 35 | VSP_RF Regulator |
| 36 | VSP_A and VSP_D Regulators |
| 37 | Power-down Support Block |
| 37 | Measurement of Supply Voltages |
| 37 | Communication to External Microcontroller |
| 37 | Serial Peripheral Interface (SPI) |
| 39 | Writing of Data to Addressable Registers (Write Mode) |
| 40 | Reading of Data from Addressable Registers (Read Mode) |
| 41 | Loading Transmitting Data into FIFO |
| 42 | Reading Received Data from FIFO |
| 42 | Direct Command Mode |
| 43 | Direct Command Chaining |
| 44 | SPI Timing |
| 45 | Interrupt Interface |
| 46 | FIFO Water Level and FIFO Status Registers |
| 47 | Pin MCU_CLK |
| 48 | Direct Commands |
| 50 | Set Default |
| 51 | Clear |
| 51 | Transmit Commands |
| 51 | NFC Field ON Commands |
| 53 | Go to Normal NFC Mode |
| 53 | Analog Preset |
| 54 | Mask Receive Data and Unmask Receive Data |
| 55 | Measure Amplitude |
| 55 | Squelch |
| 56 | Reset Rx Gain |
| 56 | Adjust Regulators |
| 56 | Calibrate Modulation Depth |
| 57 | Calibrate Antenna |
| 57 | Measure Phase |
| 58 | Clear RSSI |
| 58 | Transparent Mode |
| 58 | Calibrate Capacitive Sensor |
| 59 | Measure Capacitance |
| 59 | Measure Power Supply |
| 59 | Start Timers |
| 59 | Registers |
| 63 | IO Configuration Register 1 |
| 64 | IO Configuration Register 2 |
| 65 | Operation Control Register |
| 66 | Mode Definition Register |
| 67 | Bit Rate Definition Register |
| 68 | ISO14443A and NFC 106kb/s Settings Register |
| 70 | ISO14443B Settings Register 1 |
| 71 | ISO14443B and FeliCa Settings Register |
| 72 | Stream Mode Definition Register |
| 74 | Auxiliary Definition Register |
| 75 | Receiver Configuration Register 1 |

| | |
|-----|---|
| 76 | Receiver Configuration Register 2 |
| 77 | Receiver Configuration Register 3 |
| 78 | Receiver Configuration Register 4 |
| 79 | Mask Receive Timer Register |
| 79 | No-response Timer Register 1 |
| 80 | No-response Timer Register 2 |
| 80 | General Purpose and No-response Timer Control Register |
| 81 | General Purpose Timer Register 1 |
| 82 | General Purpose Timer Register 2 |
| 82 | Mask Main Interrupt Register |
| 83 | Mask Timer and NFC Interrupt Register |
| 84 | Mask Error and Wake-up Interrupt Register |
| 85 | Main Interrupt Register |
| 86 | Timer and NFC Interrupt Register |
| 87 | Error and Wake-up Interrupt Register |
| 88 | FIFO Status Register 1 |
| 89 | FIFO Status Register 2 |
| 90 | Collision Display Register |
| 90 | Number of Transmitted Bytes Register 1 |
| 91 | Number of Transmitted Bytes Register 2 |
| 91 | NFCIP Bit Rate Detection Display Register |
| 92 | A/D Converter Output Register |
| 93 | Antenna Calibration Control Register |
| 94 | Antenna Calibration Target Register |
| 94 | Antenna Calibration Display Register |
| 95 | AM Modulation Depth Control Register |
| 96 | AM Modulation Depth Display Register |
| 96 | RFO AM Modulated Level Definition Register |
| 97 | RFO Normal Level Definition Register |
| 97 | External Field Detector Threshold Register |
| 100 | Regulator Voltage Control Register |
| 101 | Regulator and Timer Display Register |
| 103 | RSSI Display Register |
| 105 | Gain Reduction State Register |
| 106 | Capacitive Sensor Control Register |
| 107 | Capacitive Sensor Display Register |
| 107 | Auxiliary Display Register |
| 108 | Wake-up Timer Control Register |
| 109 | Amplitude Measurement Configuration Register |
| 110 | Amplitude Measurement Reference Register |
| 110 | Amplitude Measurement Auto-averaging Display Register |
| 111 | Amplitude Measurement Display Register |
| 112 | Phase Measurement Configuration Register |
| 113 | Phase Measurement Reference Register |
| 113 | Phase Measurement Auto-averaging Display Register |
| 114 | Phase Measurement Display Register |
| 115 | Capacitance Measurement Configuration Register |
| 116 | Capacitance Measurement Reference Register |
| 116 | Capacitance Measurement Auto-averaging Display Register |
| 117 | Capacitance Measurement Display Register |
| 117 | IC Identity Register |

| | |
|------------|---|
| 118 | Power-up Sequence |
| 118 | Reader Operation |
| 119 | Anticollision – ISO 14443A |
| 120 | Setting up AS3911 for ISO 14443A Anticollision |
| 122 | REQA and WUPA |
| 123 | ANTICOLLISION Procedure |
| 125 | FeliCa Reader Mode |
| 125 | FeliCa Transmission |
| 125 | FeliCa Reception |
| 125 | NFCIP-1 Operation |
| 126 | NFCIP-1 Passive Communication Initiator |
| 128 | NFCIP-1 Active Communication Initiator |
| 130 | NFCIP-1 Active Communication Target |
| 132 | AM Modulation Depth: Definition and Calibration |
| 132 | AM Modulation Depth Definition Using the ‘Calibrate Modulation Depth’ Direct Command |
| 134 | AM Modulation Depth Definition using the ‘RFO AM Modulated Level Definition’ Register |
| 135 | Antenna Tuning |
| 136 | Antenna Tuning Using Direct Command ‘Calibrate Antenna’ |
| 137 | Stream Mode and Transparent Mode |
| 137 | Transparent Mode |
| 139 | Stream Mode |
| 142 | Package Drawings & Markings |
| 143 | RoHS Compliant & ams Green Statement |
| 144 | Ordering & Contact Information |
| 145 | Copyrights & Disclaimer |