



## Ultrasonic sensor UMB800-18H40-E5-2M-Y

- Front of transducer and housing manufactured entirely from stainless steel
- Degree of protection IP68 / IP69K
- Short version: 55 mm
- Mounting bracket MH-18H-01 included in delivery
- Program input
- Temperature compensation
- Custom configuration


Single head system



### Function

The enclosure and transducer of this ultrasonic sensor form a hermetically sealed unit. Therefore the sensor is suitable for all applications where a very high tightness is required. Since the sensor housing is made exclusively of V4A stainless steel and all seals are made of highly chemical-resistant materials, this sensor is also predestined for use in chemically aggressive environments. For reliable operation, due to the special design of this sensor, solely the enclosed mounting accessories must be used.

### Dimensions

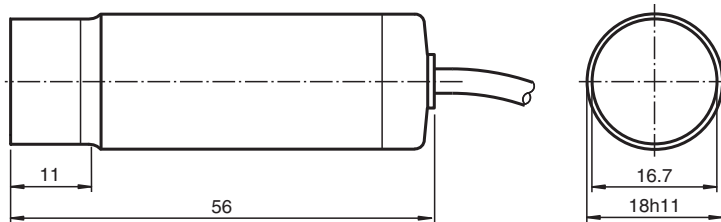

### Technical Data

#### General specifications

Sensing range	70 ... 800 mm
Adjustment range	90 ... 800 mm
Dead band	0 ... 70 mm
Standard target plate	100 mm x 100 mm
Transducer frequency	approx. 170 kHz
Response delay	approx. 100 ms

#### Electrical specifications

Operating voltage	$U_B$	10 ... 30 V DC
No-load supply current	$I_0$	≤ 15 mA

#### Input

Release date: 2021-02-05 Date of issue: 2021-02-05 Filename: 70125164\_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group  
www.pepperl-fuchs.com

USA: +1 330 486 0001  
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111  
fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091  
fa-info@sg.pepperl-fuchs.com

 PEPPERL+FUCHS

## Technical Data


Input type	1 program input operating distance 1: $-U_B \dots +1 \text{ V}$ , operating distance 2: $+6 \text{ V} \dots +U_B$ input impedance: $> 4,7 \text{ k}\Omega$ program pulse: $\geq 1 \text{ s}$	
<b>Output</b>		
Output type	1 switching output E5, PNP NO/NC, programmable	
Rated operating current	$I_e$	200 mA , short-circuit/overload protected
Voltage drop	$U_d$	$\leq 3 \text{ V}$
Repeat accuracy		$\pm 0.5 \%$ of full-scale value
Switching frequency	$f$	$\leq 4 \text{ Hz}$
Range hysteresis	$H$	1 % of the set operating distance
Temperature influence		$\pm 1.5 \%$ of full-scale value
<b>Compliance with standards and directives</b>		
Standard conformity		
Standards		EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012
<b>Approvals and certificates</b>		
CCC approval		CCC approval / marking not required for products rated $\leq 36 \text{ V}$
<b>Ambient conditions</b>		
Ambient temperature		$-25 \dots 85 \text{ }^\circ\text{C}$ ( $-13 \dots 185 \text{ }^\circ\text{F}$ )
Storage temperature		$-40 \dots 85 \text{ }^\circ\text{C}$ ( $-40 \dots 185 \text{ }^\circ\text{F}$ )
<b>Mechanical specifications</b>		
Connection type		cable PUR , 2 m , Polyether based
Core cross-section		$4 \times 0.19 \text{ mm}^2$
Degree of protection		IP68 / IP69K
Material		
Housing		stainless steel 1.4404 / AISI 316L
Transducer		Stainless steel 1.4435 / AISI 316L
Seal		Cable seal : TPU , Elastollan 1185 A10 (FDA)
Mass		90 g
<b>Factory settings</b>		
Output		Switch point A1: 90 mm Switch point A2: 800 mm Output mode: Window mode Output logic: normally open
Beam width		medium sound lobe

## Connection




## Characteristic Curve

### Characteristic response curve

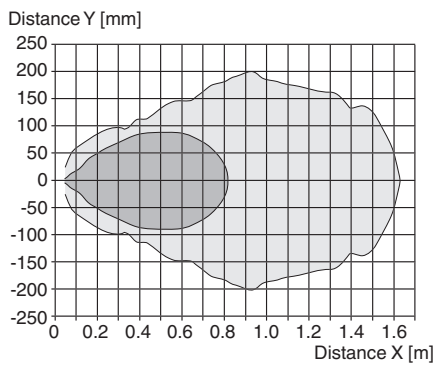

## Programming

### Switching output modes

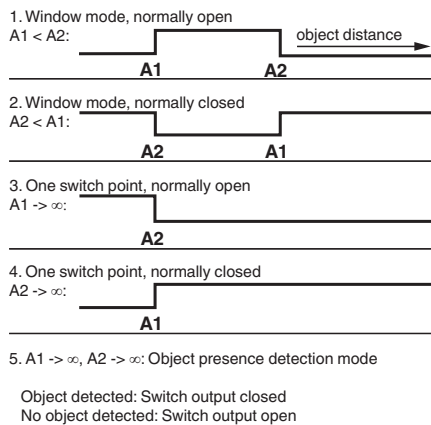

## Accessories

	<b>MH-18H-01</b>	Mounting aid, 18 mm
---	------------------	---------------------

Release date: 2021-02-05 Date of issue: 2021-02-05 Filename: 70125164\_eng.pdf

## Mounting

### Mounting instructions



Comply with the minimum permissible bending radius of 70 mm, if you install the connecting cable!



The mounting accessories included with the sensor must be used in order to ensure reliable operation!

## Commissioning

### Adjustment possibilities

The sensor is equipped with 1 switching output with 2 programmable switch points. The programming of the switch points and the of output behavior is done via the teach input of the sensor.

### Further Documentation

For information on programming and synchronisation you may refer to the commissioning instruction.