

### FEATURES

- Full-featured evaluation board for the AD5666
- On-board reference
- On-board ADC for voltage readback
- Various link options
- Direct hookup to USB port of PC
- PC software for control of DACs

### GENERAL DESCRIPTION

This data sheet describes the evaluation board for the AD5666 quad 16-bit DAC. The AD5666 operates from a single 2.7 V to 5.5 V supply. The part incorporates an internal 1.25 V or 2.5 V on-board reference to give an output voltage span of 2.5 V or 5 V, respectively. The internal reference is off at power-up allowing for the use of an external reference, which is the REF195 on this evaluation board. The part must be written to after power-up to turn on the internal reference.

Complete specifications for the AD5666 can be found in the data sheet available from Analog Devices, Inc., and should be consulted in conjunction with this data sheet when using the evaluation board.

The evaluation board interfaces to the USB port of an IBM® compatible PC. Software is available with the evaluation board allowing the user to easily program the AD5666.

### FUNCTIONAL BLOCK DIAGRAM

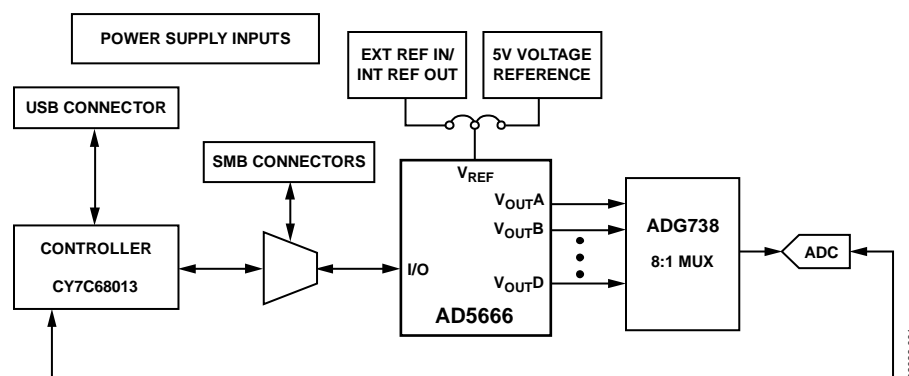


Figure 1.

### Rev. 0

Information furnished by Analog Devices is believed to be accurate and reliable. However, no responsibility is assumed by Analog Devices for its use, nor for any infringements of patents or other rights of third parties that may result from its use. Specifications subject to change without notice. No license is granted by implication or otherwise under any patent or patent rights of Analog Devices. Trademarks and registered trademarks are the property of their respective owners.

TABLE OF CONTENTS

|                                |   |  |    |
|--------------------------------|---|--|----|
| Features .....                 | 1 | Installing the Software .....                | 4  |
| General Description .....      | 1 | Software Operation .....                     | 4  |
| Functional Block Diagram ..... | 1 | Evaluation Board Schematics and Artwork..... | 6  |
| Revision History .....         | 2 | Ordering Information.....                    | 10 |
| Evaluation Board Hardware..... | 3 | Component Listing .....                      | 10 |
| Power Supplies .....           | 3 | Ordering Guide .....                         | 10 |
| Link Options .....             | 3 | ESD Caution.....                             | 10 |
| Evaluation Board Software..... | 4 |  |    |

REVISION HISTORY

7/06—Revision 0: Initial Version

## EVALUATION BOARD HARDWARE

### POWER SUPPLIES

To power the EVAL-AD5666EB, supply 5.5 V between the AVDD and AGND inputs for the analog supply of the AD5666. Alternatively, placing Link 6 in Position B powers the analog circuitry from the USB port (default setting).

Both AGND and DGND inputs are provided on the board. The AGND and DGND planes are connected at one location close to the AD5666. To avoid ground loop problems, it is recommended not to connect AGND and DGND elsewhere in the system.

Each supply is decoupled to the relevant ground plane with 10  $\mu$ F and 0.1  $\mu$ F capacitors. Each device supply pin is also decoupled with a 10  $\mu$ F and 0.1  $\mu$ F capacitor pair to the relevant ground plane.

### LINK OPTIONS

A number of link and switch options on the evaluation board should be set for the required operating setup before using the board. The functions of these link options are described in detail in Table 2. The default setup is for control by the PC via the USB port. The default link options are listed in Table 1.

**Table 1. Link Options Setup for PC Control (Default)**

| Link No.   | Option   |
|------------|----------|
| LK1 to LK4 | Inserted |
| LK5        | B        |
| LK6        | B        |
| LK7        | A        |
| LK8        | A        |
| LK9        | B        |
| LK10       | Removed  |
| LK11       | B        |
| LK12       | A        |
| LK13       | A        |

**Table 2. Link Functions**

| Link No.   | Function   |
|------------|--|
| LK1 to LK4 | This link connects the V <sub>OUTA</sub> to V <sub>OUTD</sub> pins of the AD5666 to the input/output pins of ADG738 demultiplexer to monitor the DAC output value using the on-board AD7476 ADC.   |
| LK5        | This link selects the AVDD power supply source for the analog circuitry. <ul style="list-style-type: none"> <li>Position A selects J6 as the AVDD analog circuitry power supply source.</li> <li>Position B selects the 5 V power supply source as the AVDD analog circuitry power supply source (see LK6).</li> </ul>                                       |
| LK6        | This link selects the 5 V power supply source for the digital circuitry. <ul style="list-style-type: none"> <li>Position B selects the USB port as the 5 V digital circuitry power supply source.</li> <li>Position A selects J7 as the 5 V digital circuitry power supply source.</li> </ul>  |
| LK7        | This link selects whether the AD5666 evaluation board is controlled by the PC via the USB port or by an external source via the SMB connectors J1 to J5. <ul style="list-style-type: none"> <li>Position A selects control by the PC via the USB port.</li> <li>Position B selects control by an external source via the SMB connectors J1 to J5.</li> </ul> |
| LK8        | This link sets the RESET pin on the ADG738. <ul style="list-style-type: none"> <li>Position A allows normal operation of the switch.</li> <li>Position B resets the switch.</li> </ul>   |
| LK9        | This link selects the AVDD power supply source for the REF195. <ul style="list-style-type: none"> <li>Position A selects J6 as the REF195 power supply source.</li> <li>Position B selects the AVDD as the REF195 power supply source (see LK5).</li> </ul>  |
| LK10       | This link connects a 0.1 $\mu$ F capacitor to AGND on the V <sub>REFOUT</sub> pin. It is recommended to connect this when using the internal reference.  |
| LK11       | This link selects the reference source. <ul style="list-style-type: none"> <li>Position A selects the internal reference as the reference source. The part must be written to via software to turn on the internal reference.</li> <li>Position B selects the on-board REF195 5 V reference as the reference source.</li> </ul>                              |
| LK12       | This link selects whether the part power-on resets to zero or midscale. <ul style="list-style-type: none"> <li>Position A ensures the part power-on resets to midscale.</li> <li>Position B ensures the part power-on resets to zero-scale.</li> </ul>   |
| LK13       | This link selects the DAC voltage source. <ul style="list-style-type: none"> <li>Position A selects the AVDD analog circuitry power supply source.</li> <li>Position B selects the on-board REF195 5 V reference as the power supply source.</li> </ul>  |

## EVALUATION BOARD SOFTWARE

### INSTALLING THE SOFTWARE

The AD5666 evaluation kit includes self-installing software on CD-ROM. The software is compatible with Microsoft® Windows® 2000 and Windows® XP.

The software should be installed before connecting the evaluation board to the PC's USB port. This ensures that the board is correctly recognized when connected to the PC.

1. Start the Windows operating system and insert the CD-ROM.
2. The installation software should launch automatically. If it does not, run the **setup.exe** file directly from the CD.
3. After installation from the CD-ROM is complete, power up the AD5666 evaluation board as described in the Power Supplies section. Connect the board to the PC's USB port using the cable supplied.
4. Once the software detects the evaluation board, proceed through any dialog boxes that appear to finalize the installation.

### SOFTWARE OPERATION

1. From the **Analog Devices** menu, click **Start > All Programs > Analog Devices > AD5666 > AD5666 Evaluation Software**.

For older PCs, click **Start > Programs > Analog Devices > AD5666 > AD5666 Evaluation Software**.

2. The main window of the AD5666 evaluation software opens, as shown in Figure 2. The data programmed into the 32-bit input shift register is displayed. You can select the command bits, the address bits, and the data bits by clicking the appropriate option button under each section.

#### **Command Bits**

1. To select a command to program the part, click the appropriate option button under the **Command Bits** section. For example, to program all DAC outputs with full scale, click **Write to and Update DAC channel n**.
2. Next, click **All DACs** in the **Address Bits** section.
3. Then, in the **Data Bits** section, enter the data in **Hex Value** or **Voltage**.
4. To execute, click **Write to Part**. You must click **Write to Part** to execute all writes to the part.

Other commands that the AD5666 evaluation software lets you program include the power down DAC bits, the clear code register bits and the LDAC register bits. This is done by clicking on the corresponding option button under the **Command Bits** section and then clicking **Write to Part**. You can also set the register bits for the required mode of operation. Consult the AD5666 data sheet for details.

#### **Hardware Pins**

To set  $\overline{\text{LDAC}}$  and  $\overline{\text{CLR}}$  to high or low, click the corresponding checkbox in the **Hardware Pins** section. This command is executed immediately. There is no need to click **Write to Part**.

#### **ADC**

The voltage output on each DAC channel is monitored using the on-board ADC. To read the output voltage, click the **Sample** button in the **ADC** section (upper right side of the window).



Figure 2. AD5666 Evaluation Software Main Window

### Reference Setup


The AD5666 internal reference is turned off at power-up by default, allowing the use of an external reference. To turn on (or turn off) the internal reference, click **DCEN/REF Setup Register** in the **Command Bits** section. This allows you to program the bit in the reference setup register for the required mode of operation, as shown in Figure 3. Then click **Write to Part**.



Figure 3. AD5666 Evaluation Software Main Window, Reference Setup



Rev. 0 | Page 6 of 12



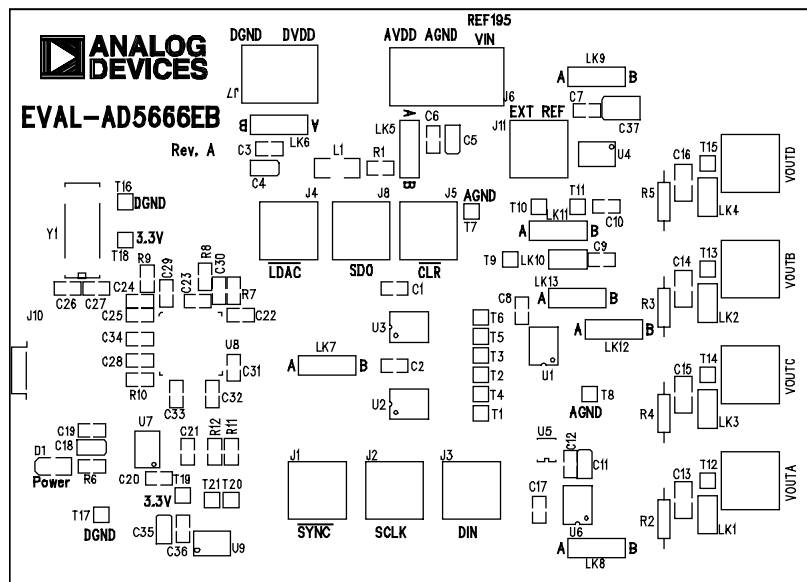


Figure 6. Component Placement Drawing

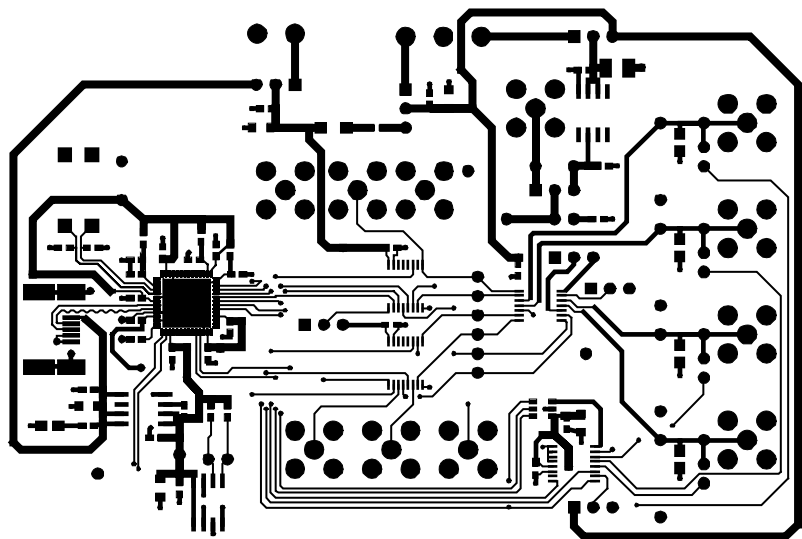


Figure 7. Component Side PCB Drawing

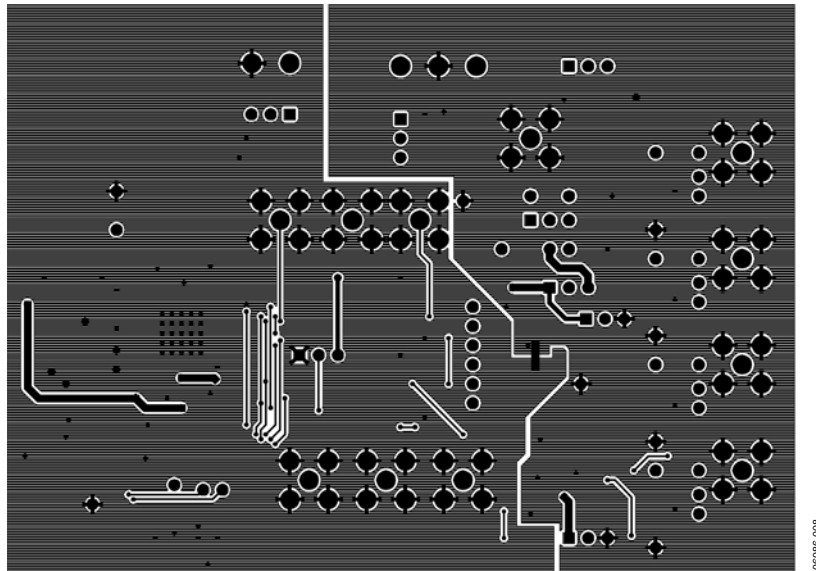


Figure 8. Solder Side PCB Drawing

# EVAL-AD5666EB

## ORDERING INFORMATION

### COMPONENT LISTING

Table 3.

| Qty | Reference Designator   | Description                                  | Supplier/Number         |
|-----|--|--|-------------------------|
| 1   | U7   | ADP3303AR-3.3                                | Analog Devices          |
| 1   | U1   | AD5666BRUZ-2 (3)                             | Analog Devices          |
| 1   | U9   | 24LC01                                       | FEC 9758070             |
| 2   | U2, U3   | ADG774BRQ                                    | Analog Devices          |
| 1   | U5   | AD7476ART                                    | Analog Devices          |
| 1   | U6   | ADG738BRU                                    | Analog Devices          |
| 1   | U4   | REF195ES                                     | Analog Devices          |
| 1   | U8   | CY7C68013-CSP                                | Embassy CY7C68013-56LFC |
| 1   | Y1   | 24 MHz crystal                               | FEC 569-872             |
| 11  | VOUTA to VOUTD; J1 to J5, J8, J11                              | Gold 50 $\Omega$ SMB jack                    | FEC 365 1228            |
| 1   | J10  | USB Mini B                                   | FEC 476-8309            |
| 1   | J6   | Power connectors                             | FEC 151-786             |
| 1   | J7   | Power connectors                             | FEC 151-785             |
| 1   | D1   | LED  | FEC 359-9681            |
| 5   | C4, C5, C11, C18, C35  | 10 $\mu$ F 10 V tantalum cap (TAJ-B package) | FEC 197-130             |
| 2   | C26, C27   | 22 pF (0603 package)                         | FEC 722-005             |
| 23  | C1 to C3, C6 to C9, C12, C17, C19 to C23, C25, C28 to C34, C36 | 0.1 $\mu$ F (0603 package)                   | FEC 882-0023            |
| 1   | C24  | 2.2 $\mu$ F (0603 package)                   | Digikey 490-1552-1-ND   |
| 1   | C10  | 1 $\mu$ F (0603 package)                     | FEC 318-8840            |
| 4   | C13 to C16   | 0805 package (not inserted)                  |                         |
| 1   | R1   | 1.5 $\Omega$                                 | FEC 758-267             |
| 4   | R2 to R5   | Wire-wrap pin (not inserted)                 |                         |
| 1   | R6   | 1 k $\Omega$ (0603 package)                  | FEC 911-239             |
| 2   | R7, R8   | 100 k $\Omega$ (0603 package)                | FEC 911 471             |
| 2   | R11, R12   | 2.2 k $\Omega$ (0603 package)                | FEC 911-276             |
| 1   | R10  | 10 k $\Omega$ (0603 package)                 | FEC 911-355             |
| 1   | R9   | 0 (0603 package)                             | FEC 772-227             |
| 5   | LK1 to LK4, LK10   | Header (2 $\times$ 1 pin)                    | FEC 511-705             |
| 8   | LK5 to LK9, LK11 to LK13                                       | Header (3 $\times$ 1 pin)                    | FEC 511-717             |
| 20  | TP1 to TP21  | Testpoint                                    | FEC 873-1144            |

### ORDERING GUIDE

| Model         | Package Description |
|---------------|---------------------|
| EVAL-AD5666EB | Evaluation Board    |

### ESD CAUTION

ESD (electrostatic discharge) sensitive device. Electrostatic charges as high as 4000 V readily accumulate on the human body and test equipment and can discharge without detection. Although this product features proprietary ESD protection circuitry, permanent damage may occur on devices subjected to high energy electrostatic discharges. Therefore, proper ESD precautions are recommended to avoid performance degradation or loss of functionality.



## **NOTES**

## NOTES