

Evaluation Board for the **AD7714-3**, 24-Bit Low Power Sigma-Delta ($\Sigma-\Delta$) ADC

FEATURES

Full featured evaluation board for the **AD7714-3**

Standalone USB interface

Various linking options

PC software for control of **AD7714-3**

EVALUATION KIT CONTENTS

EVAL-AD7714-3EBZ board

Software CD

USB cable

GENERAL DESCRIPTION

This user guide describes the evaluation board for the **AD7714-3**, which is a low power, 24-bit signal conditioning $\Sigma-\Delta$ ADC.

The **AD7714-3** is a complete analog front end for low frequency measurement applications. It can be configured to have three fully-differential inputs or five pseudo-differential inputs. It employs a sigma-delta conversion technique to realize up to 24 bits of no missing codes performance. The input signal is applied to an analog modulator. The modulator output is processed by an on-chip digital filter. The analog input channel of the **AD7714-3** accepts analog input signals of $\pm V_{REF}/\text{gain}$, with gain equal to 1 to 128. Simultaneous 50 Hz/60 Hz rejection is available when the data update rate is set to 10 Hz.

Full data on the **AD7714-3** is available in the **AD7714** datasheet available from Analog Devices, Inc. and should be consulted in conjunction with this user guide when using the evaluation board.

Note that the **AD7714-3** evaluation board software should be installed before connecting the **AD7714-3** evaluation board to the PC.

Other components on the **AD7714-3** evaluation board include the **ADP3303** high precision, low power, 3.3 V output voltage regulator, which is used to power the USB/SPI interface.

TYPICAL SETUP

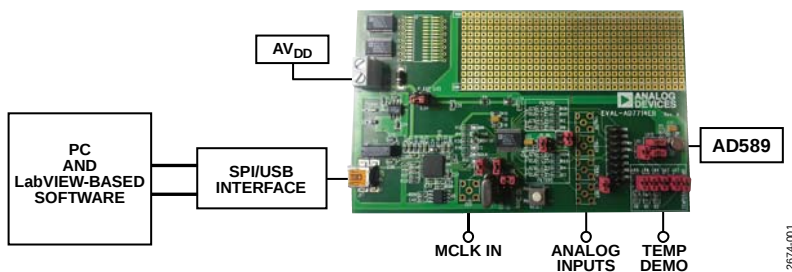


Figure 1.

TABLE OF CONTENTS

Features	1	Setup Conditions.....	5
Evaluation Kit Contents.....	1	Sockets	5
General Description	1	Push-Button Reset.....	5
Typical Setup	1	How to Use the Software	6
Revision History	2	Software Description	6
Getting Started	3	Using the Software	6
Software Install Procedures.....	3	Main Window (Registers Window)	7
Evaluation Board Setup Procedures.....	3	Cal Registers Window	8
Evaluation Board Hardware	4	Temp Demo Window	9
Power Supplies	4	Related Links	10
Links	4		

REVISION HISTORY

12/14—Rev. A to Rev. B

Updated Format	Universal
Changes to Features Section, General Description Section, and Figure 1	1
Added Evaluation Kit Contents Section	1
Added Getting Started Section	2
Deleted SKT1 Section	3
Changes to Evaluation Board Hardware Section	4
Changes to How to Use the Software Section.....	6
Deleted Figure 3.....	6
Deleted Component Listing and Manufacturers Section.....	7
Added Related Links Section	10

GETTING STARTED

SOFTWARE INSTALL PROCEDURES

Use the following steps to install the software:

1. Start Windows® and insert the CD.
2. The installation software should launch automatically. If it does not, use Windows Explorer to locate the **setup.exe** file on the CD. Double-click this file to start the installation procedure.
3. At the prompt, select a destination directory, which is **C:\Program Files\Analog Devices\AD7714-3** by default.
4. Once the directory is selected, the installation procedure copies the files into the relevant directories on the hard drive. The installation program creates a program group called **Analog Devices** with a subgroup **AD7714-3** in the **Start** menu of the taskbar.

Once the installation procedure is complete, double-click the **AD7714-3** icon to start the program.

EVALUATION BOARD SETUP PROCEDURES

Interfacing to the evaluation board is via a standard USB connector, J1. J1 is used to connect the evaluation board to the USB port of a PC. A standard USB connector cable is included with the **AD7714-3** evaluation board to allow the evaluation board to interface with the USB port of the PC.

Because the board is powered via the USB connector, there is no need for an external power supply, although if preferred one may be connected via J3.

Communication between the **AD7714-3** and the PC is via the USB/SPI interface. The on-board USB controller (U2) controls this communication.

To set up the USB/SPI interface, use the following procedure:

1. Install the **AD7714-3** evaluation board software using the supplied **AD7714-3** evaluation board CD before connecting the board to the PC.
2. After the **AD7714-3** evaluation board software has been installed, connect the board to the PC via J1 on the **AD7714-3** evaluation board and via the USB port on the PC using the supplied USB connector cable (see Figure 1). The PC automatically finds the new USB device and identifies it as the **AD779x Evaluation Board** (see Figure 2).
3. Follow the on-screen instructions that appear. During the installation process if the **Hardware Installation Wizard** appears as shown in Figure 2, select **Continue Anyway** to successfully complete the installation of the **AD7714-3** evaluation board.



Figure 2. Hardware Installation Window

EVALUATION BOARD HARDWARE

POWER SUPPLIES

The [AD7714-3](#) evaluation board is powered via the 5 V supply from the USB connector, J1. This 5 V supply can be used to power the [AD7714-3](#) directly. A 3.3 V regulated voltage from the on-board [ADP3303](#) (a high precision, low power, 3.3 V output voltage regulator) can also be used. Alternatively, the [AD7714-3](#) can be powered using an external 3 V or 5 V power supply via J3.

LINKS

There are fifteen link options that must be set for the required operating setup before using the evaluation board. The functions of these link options are outlined in Table 1.

Table 1. Evaluation Board Link Settings

Link	Default	Description
LK1	In	This link is used to externally short the AIN1 input channel to the reference. With LK1 and LK2 in place, Pin AIN1 is shorted to Pin AIN2 and both are biased at REFIN+. This allows a noise analysis to be performed. With this link out, an external voltage may be applied to AIN1 using the SMB connectors.
LK2	In	This link is used to short Pin AIN1 to Pin AIN2. When both LK1 and LK2 are inserted, noise analysis can be performed. With this link out, an external voltage can be applied to AIN2 using the SMB connectors.
LK3, LK4 LK5, LK6, LK7	Out	These links are used to connect the on-board temperature demonstration circuit to the ADC, and must all be in place when attempting to measure ambient temperature. When the on-board temperature demonstration circuit is selected in software, LK7, when in place, connects AV _{DD} to the temperature demonstration circuit. LK4 and LK5 when in place connect the 1 k Ω thermistor to the AIN1 – AIN2 analog input channel, and with LK2 and LK3 in place a ratiometric configuration of the temperature demonstration circuit is in place.
LK8, LK9	In	These links are used to connect the AD589 reference to the AD7714-3 . When both links are in place, the 1.23 V generated by the band gap reference is used as the reference source to the AD7714-3 . When these links are removed, another reference source can be applied to the AD7714-3 using the SMB connectors. LK8 and LK9 need to be removed when the temperature demonstration is operated.
LK10	A	LK10 is used to select the polarity of the AD7714-3 SCLK. With LK10 in Position A, POL is connected to DV _{DD} so that data is output on the SCLK falling edge. With LK10 in Position B, POL is connected to AGND and data is output from the AD7714-3 on the SCLK rising edge.
LK11	A	LK11 controls the $\overline{\text{STANDBY}}$ pin of the AD7714-3 . With LK11 in Position A, $\overline{\text{STANDBY}}$ is pulled high and the AD7714-3 is powered up. With LK11 in Position B, $\overline{\text{STANDBY}}$ is pulled low and the AD7714-3 is placed in power-down mode.
LK12	A	LK12 is used to enable or disable the AD7714-3 analog input buffers. With LK12 in Position A, the pin BUFFER is tied high and the analog inputs of the AD7714-3 are buffered. With LK12 in Position B, the BUFFER pin is tied low and the analog inputs of the AD7714-3 are unbuffered.
LK13, LK14	In	LK13 and LK14 are used to connect the 2.4576 MHz crystal to the AD7714-3 . When these links are in place, the on-board crystal is connected to the AD7714-3 . When these links are removed, an external clock source can be applied to the AD7714-3 via the SMB connector.
LK15	B	LK15 is used to select the power source for AV _{DD} on the AD7714-3 . LK15 in Position A selects an external power supply, supplied via J3. LK15 in Position B selects the 3.3 V regulated output from the on-board ADP3303 voltage regulator.

SETUP CONDITIONS

Ensure that all link positions are set per the required operating mode before applying power and signals to the evaluation board.

Table 2 shows the position in which all the links are initially set.

SOCKETS

There are six sockets relevant to the operation of the [AD7714-3](#) on this evaluation board. The functions of these sockets are outlined in Table 3.

PUSH-BUTTON RESET

There is also a push-button switch on the evaluation board, which is used to perform a reset. When the button is pressed, the RESET pin of the [AD7714-3](#) is tied to ground and the [AD7714-3](#) registers are set to their default conditions.

Table 2. Initial Link and Switch Positions

Link No.	Position	Function
LK1	In	AIN1 is connected to REFIN+.
LK2	In	AIN2 is shorted to AIN1.
LK3, LK4	Out	The temperature demo is not connected to AIN1 – AIN2.
LK5, LK6	Out	The reference pins of the AD7714-3 are not connected to the temperature demonstration.
LK7	Out	AV _{DD} is not connected to temperature demo circuit.
LK8, LK9	In	The AD589 is used as the reference source to the AD7714-3 .
LK10	A	POL is pulled high so data is output on the SCLK falling edge.
LK11	A	The AD7714-3 is powered up.
LK12	A	The analog inputs are operated in buffered mode.
LK13, LK14	In	The 2.4576 MHz crystal is used as the clock source to the AD7714-3 .
LK15	B	The 3.3 V regulated voltage is used as the power supply to the AD7714-3 and the AD589 .

Table 3. Socket Functions

Socket	Function
AIN1	Subminiature BNC (SMB) connector. The analog input signal for the AIN1 input of the AD7714-3 is applied to this socket.
AIN2	Subminiature BNC (SMB) connector. The analog input signal for the AIN2 input of the AD7714-3 is applied to this socket.
REFIN+	Subminiature BNC (SMB) connector. This socket is used in conjunction with REFIN– to apply an external reference to the AD7714-3 . The voltage for the REFIN+ input of the AD7714-3 is applied to this socket.
REFIN–	Subminiature BNC (SMB) connector. This socket is used in conjunction with REFIN+ to apply an external reference to the AD7714-3 . The voltage for the REFIN– input of the AD7714-3 is applied to this socket.
CLK	Subminiature BNC (SMB) connector. An external clock source can be applied to the AD7714-3 using this socket.
J2	16-pin (2×8) pin straight header. This socket is used in conjunction with the prototype area to interface any signal to the AD7714-3 .

HOW TO USE THE SOFTWARE

SOFTWARE DESCRIPTION

The AD7714-3 evaluation board is shipped with a CD containing software that can be installed onto a standard PC to control the AD7714-3. The software communicates with the AD7714-3 through the USB cable, which accompanies the board. The software allows you to configure the AD7714-3 and to read conversion data from the AD7714-3. Data can be read from the AD7714-3 and displayed or stored for later analysis. For further information, see the AD7714-3 data sheet available from Analog Devices.

USING THE SOFTWARE

Figure 3 shows the main window that is displayed when the program starts. The Main Window (Registers Window) section briefly describes the various menu and button options on the main window. The Cal Registers Window and Temp Demo Window sections describe the most commonly used evaluation software windows.

The data that has been read can be exported to other packages such as MathCAD™ or Microsoft® Excel for further analysis.

During power-up, the AD7714-3 evaluation board software configures the device to have a gain of 1, the AIN1/AIN2 channel is selected, the update rate is set to 60 Hz and the word length is set to 24.

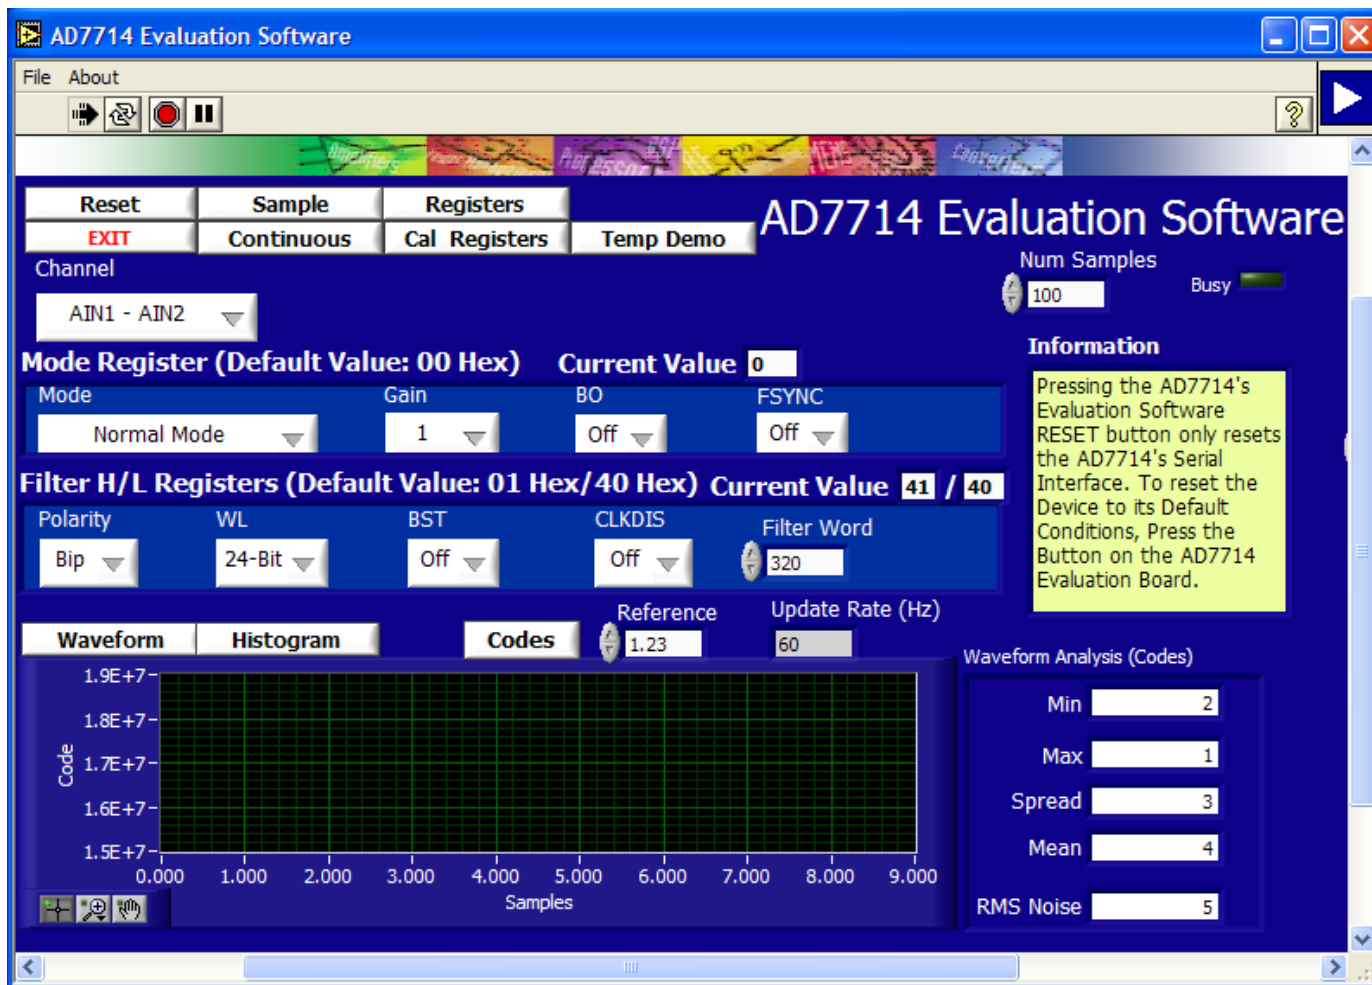


Figure 3. AD7714-3 Evaluation Software Main Window

MAIN WINDOW (REGISTERS WINDOW)

Menu Bar

File

The **File** menu allows the user to read previously stored data for display or analysis, write the current set of data to a file for later use, and exit the program.

About

The **About** menu provides information on the revision of software used.

Buttons

Reset

The **Reset** button allows the user to reset the [AD7714-3](#) and set the registers to the power up conditions as specified by the software (channel = AIN1/AIN2, gain = 1, update rate = 60 Hz).

Exit

The **Exit** button allows the user to exit the software. It serves the same purpose as **Quit** in the **File** pull-down menu.

Sample

The **Sample** button allows the user to read a number of samples from the [AD7714-3](#). Noise analysis is then performed on the samples. These samples can be stored for further analysis. The sample size is entered in the **Num Samples** text box.

Continuous

The **Continuous** button allows the user to read a number of samples continuously. The software gathers a number of samples as specified by the **Num Samples** text box, performs noise analysis on the samples, and then gathers the next group of samples.

Registers

The **Registers** button selects the main window which allows the user access to the mode register and the filter high/low registers. This window allows you to change items such as polarity, update rate, and gain. Consult the [AD7714-3](#) data sheet for further details on the bit functions.

Cal Registers

The **Cal Registers** button allows the user to access the offset register and full-scale register.

Temp Demo

The **Temp Demo** button allows the user to access the temperature demonstration software.

Waveform

The **Waveform** button gathers conversions and displays them in graph form.

Histogram

The **Histogram** button gathers samples and uses them to generate a histogram.

Codes

The **Codes** button gathers samples and can display them in codes or in voltage format. When the **Codes** option is selected, the values are displayed as code. The **Codes** button changes to **Volts**. To display the information in volts, click **Volts**.

Reference

The value of the external reference should be entered in the **Reference** text box.

CAL REGISTERS WINDOW

Click **Cal Registers** to access the **Cal Registers** window (see Figure 4). This window displays the contents of the offset calibration register and the full-scale calibration register.

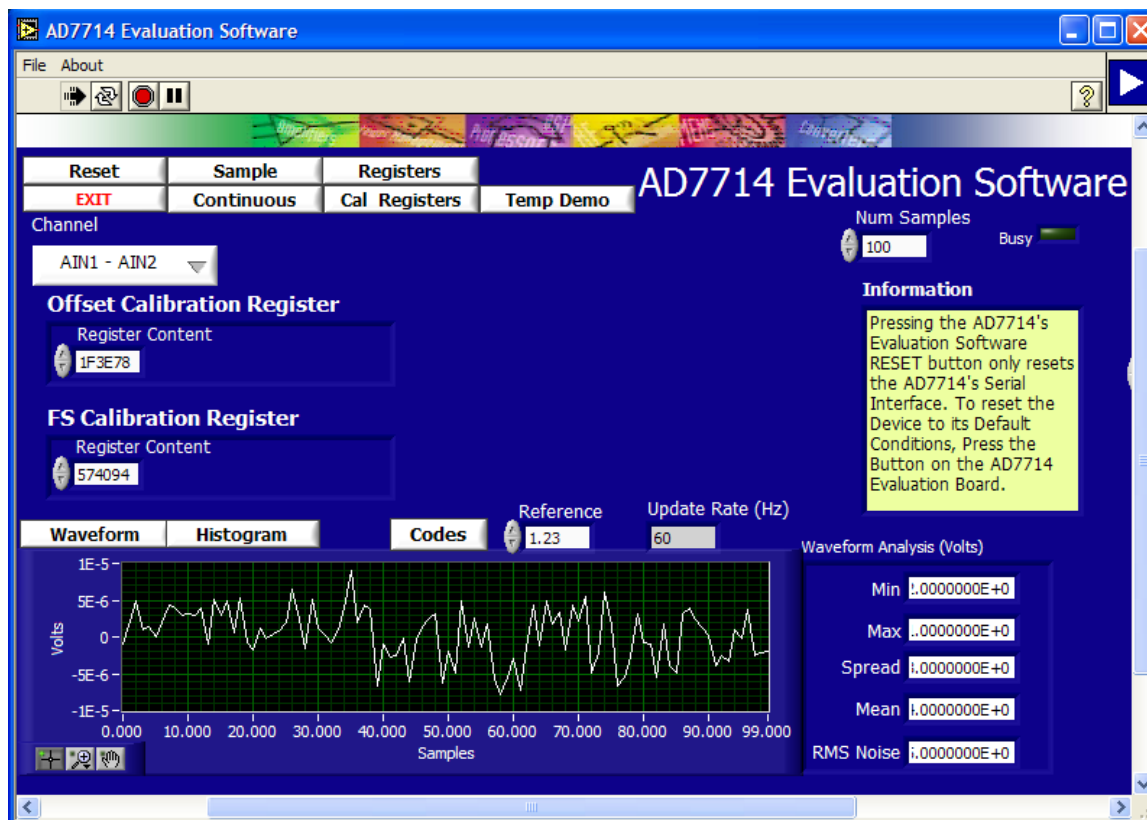


Figure 4. AD7714-3 Evaluation Software Cal Registers Window

TEMP DEMO WINDOW

Click **Temp Demo** to access the temperature demonstration window (see Figure 5). The AD7714-3 evaluation board has a temperature demonstration included on the board. To operate the temperature demonstration, LK3 to LK7 should be inserted and LK1, LK2, LK9, and LK12 should be removed. With these links in place, AV_{DD} is connected to a 1 k Ω thermistor which is connected across the AIN1/AIN2 pins. In series with the thermistor is a 5 k Ω precision resistor, which is used to generate the reference voltage so that a ratio metric configuration is used. The temperature demonstration software saves the values in the mode register, filter high/low registers, offset

register, and full scale register. The software then configures the AD7714-3 to operate with a gain of 1, the AIN1/AIN2 channel is selected as the analog input, and the update rate is set to 60 Hz. When you select **Run**, the software continuously reads the conversion from the AIN1/AIN2 channel and converts the result to temperature using a look-up table.

When **Run** is clicked again, the temperature demonstration execution is halted. To exit the temperature demonstration, click the **Back** button. The software sets the mode register, filter registers, and calibration registers to their previous values.

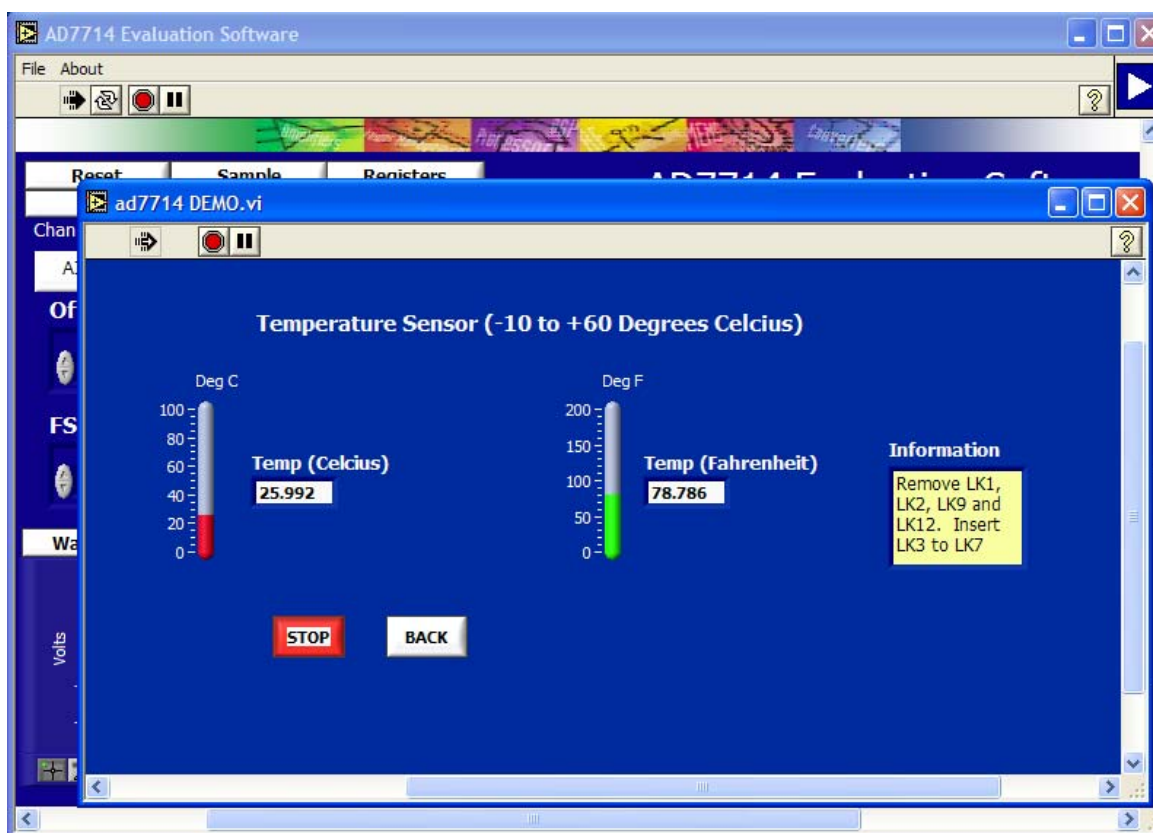


Figure 5. AD7714-3 Evaluation Software Temperature Demo Window

RELATED LINKS

Resource	Description
AD7714-3	Product Page, CMOS, 3 V/5 V, 24-Bit Sigma-Delta Conditioning ADC
ADP3303	Product Page, High Accuracy anyCAP 200 mA Low Dropout Linear Regulator
AD589	Product Page, Two-Terminal IC 1.2 V Reference

**ESD Caution**

ESD (electrostatic discharge) sensitive device. Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

Legal Terms and Conditions

By using the evaluation board discussed herein (together with any tools, components documentation or support materials, the "Evaluation Board"), you are agreeing to be bound by the terms and conditions set forth below ("Agreement") unless you have purchased the Evaluation Board, in which case the Analog Devices Standard Terms and Conditions of Sale shall govern. Do not use the Evaluation Board until you have read and agreed to the Agreement. Your use of the Evaluation Board shall signify your acceptance of the Agreement. This Agreement is made by and between you ("Customer") and Analog Devices, Inc. ("ADI"), with its principal place of business at One Technology Way, Norwood, MA 02062, USA. Subject to the terms and conditions of the Agreement, ADI hereby grants to Customer a free, limited, personal, temporary, non-exclusive, non-sublicensable, non-transferable license to use the Evaluation Board FOR EVALUATION PURPOSES ONLY. Customer understands and agrees that the Evaluation Board is provided for the sole and exclusive purpose referenced above, and agrees not to use the Evaluation Board for any other purpose. Furthermore, the license granted is expressly made subject to the following additional limitations: Customer shall not (i) rent, lease, display, sell, transfer, assign, sublicense, or distribute the Evaluation Board; and (ii) permit any Third Party to access the Evaluation Board. As used herein, the term "Third Party" includes any entity other than ADI, Customer, their employees, affiliates and in-house consultants. The Evaluation Board is NOT sold to Customer; all rights not expressly granted herein, including ownership of the Evaluation Board, are reserved by ADI. CONFIDENTIALITY. This Agreement and the Evaluation Board shall all be considered the confidential and proprietary information of ADI. Customer may not disclose or transfer any portion of the Evaluation Board to any other party for any reason. Upon discontinuation of use of the Evaluation Board or termination of this Agreement, Customer agrees to promptly return the Evaluation Board to ADI. ADDITIONAL RESTRICTIONS. Customer may not disassemble, decompile or reverse engineer chips on the Evaluation Board. Customer shall inform ADI of any occurred damages or any modifications or alterations it makes to the Evaluation Board, including but not limited to soldering or any other activity that affects the material content of the Evaluation Board. Modifications to the Evaluation Board must comply with applicable law, including but not limited to the RoHS Directive. TERMINATION. ADI may terminate this Agreement at any time upon giving written notice to Customer. Customer agrees to return to ADI the Evaluation Board at that time. LIMITATION OF LIABILITY. THE EVALUATION BOARD PROVIDED HEREUNDER IS PROVIDED "AS IS" AND ADI MAKES NO WARRANTIES OR REPRESENTATIONS OF ANY KIND WITH RESPECT TO IT. ADI SPECIFICALLY DISCLAIMS ANY REPRESENTATIONS, ENDORSEMENTS, GUARANTEES, OR WARRANTIES, EXPRESS OR IMPLIED, RELATED TO THE EVALUATION BOARD INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, TITLE, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS. IN NO EVENT WILL ADI AND ITS LICENSORS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES RESULTING FROM CUSTOMER'S POSSESSION OR USE OF THE EVALUATION BOARD, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DELAY COSTS, LABOR COSTS OR LOSS OF GOODWILL. ADI'S TOTAL LIABILITY FROM ANY AND ALL CAUSES SHALL BE LIMITED TO THE AMOUNT OF ONE HUNDRED US DOLLARS (\$100.00). EXPORT. Customer agrees that it will not directly or indirectly export the Evaluation Board to another country, and that it will comply with all applicable United States federal laws and regulations relating to exports. GOVERNING LAW. This Agreement shall be governed by and construed in accordance with the substantive laws of the Commonwealth of Massachusetts (excluding conflict of law rules). Any legal action regarding this Agreement will be heard in the state or federal courts having jurisdiction in Suffolk County, Massachusetts, and Customer hereby submits to the personal jurisdiction and venue of such courts. The United Nations Convention on Contracts for the International Sale of Goods shall not apply to this Agreement and is expressly disclaimed.