

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 447

2-PHASE DUAL OUTPUT POWER SUPPLY

LTC3728EUH

DESCRIPTION

Demonstration circuit 447 is a step-down converter featuring the LTC3728EUH regulator. The PolyPhase™ dual output controller LTC3728EUH drives two high current synchronous buck converters. Input is 5V–14V, output 1 is 2.5V with loads up to 13A and output 2 is 1.8V with loads up to 13A.

For applications with input voltage less than 5V, DC447 includes a circuit footprint on the bottom side to provide a 5V bias power supply.

Design files for this circuit board are available. Call the LTC factory.

Table 1. Performance Summary

PARAMETER	CONDITION	VALUE
Minimum Input Voltage		5V
Maximum Input Voltage		14V
V _{OUT1}	V _{IN} = 5V to 14V, I _{OUT1} = 0A to 13A	2.5V
V _{OUT2}	V _{IN} = 5V to 14V, I _{OUT1} = 0A to 13A	1.8V
Nominal Switching Frequency		450kHz

QUICK START PROCEDURE

Demonstration circuit 447 is easy to set up to evaluate the performance of the LTC3728EUH. Refer to Figure 1 for proper measurement equipment setup and follow the procedure below:

NOTE: When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly across the input or output and ground terminals. See Figure 2 for proper scope probe technique.

1. Before powering up, place the jumpers as shown in Figure 1.
2. Connect the loads at V_{OUT1} and V_{OUT2}. Set the load current to 0A.

3. With the power off, connect the input 5V–14V (recommended 12V) power supply to V_{IN} and GND. V_{OUT1} should be within 2.5V ±0.1V and V_{OUT2} should be 1.8V ±0.1V.
4. Increase the load at V_{OUT1} to 13A. With a 12V input, the input current should be less than 3.5A. Slowly decrease the input voltage to 5V. At 5V input voltage, the input current should be less than 8A.
5. Decrease the load at V_{OUT1} to 0A. Increase the input voltage to 12V.
6. Increase the load on V_{OUT2} to 13A. With a 12V input, the input current should be less than 2.5A. Slowly decrease the input voltage to 5V. At 5V input, the input current should be less than 6A.

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 447

2-PHASE DUAL OUTPUT POWER SUPPLY

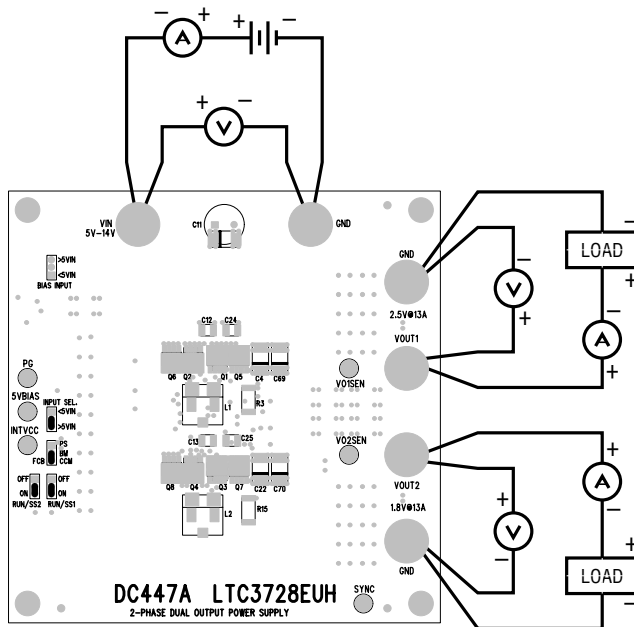


Figure 1. Proper Measurement Equipment Setup



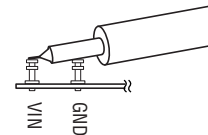


Figure 2. Scope Probe Placement for Measuring Input or Output Ripple

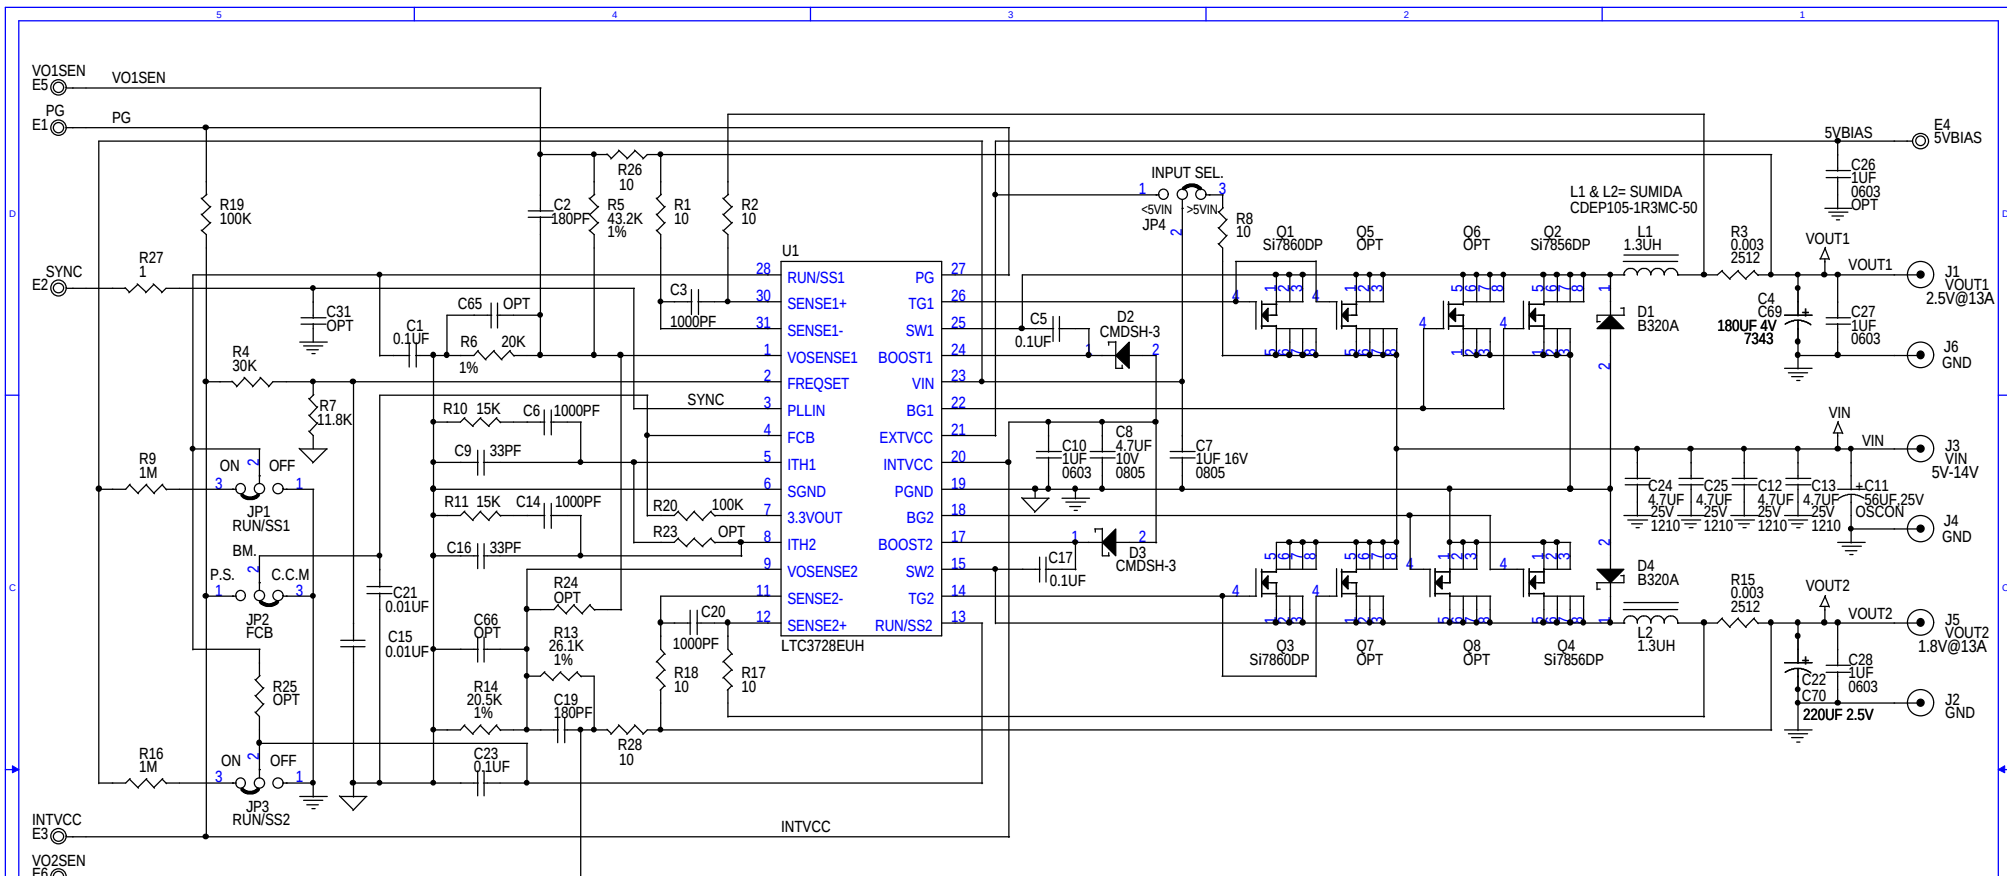


OPTIONAL DISTRIBUTED CAPS

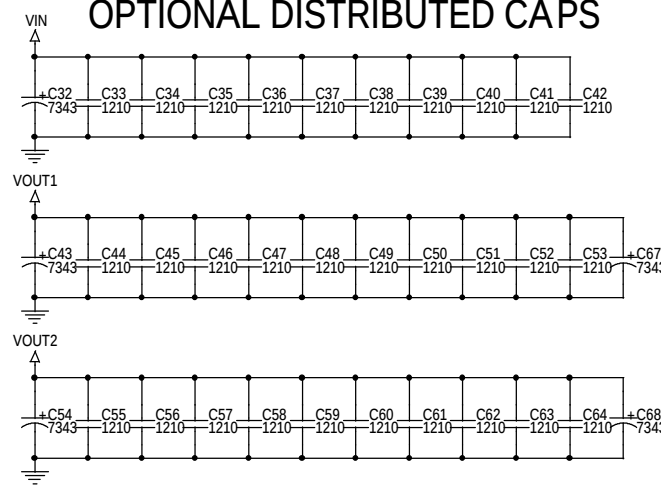

NOTES: UNLESS OTHERWISE SPECIFIED

1. ALL RESISTORS ARE IN OHMS, 0603.
2. R23=R24=R25=0 OHM WILL BE ASSEMBLED ONLY IF TWO OUTPUTS ARE TIED TOGETHER FOR HIGH CURRENT OUTPUT.
3. INSTALL SHUNTS ON JP1-JP5 PIN 2 AND 3. IF VIN<5V, INSTALL SHUNTS ON JP4 AND JP5 PIN 1 AND 2.

OPTIONAL BIAS CIRCUIT

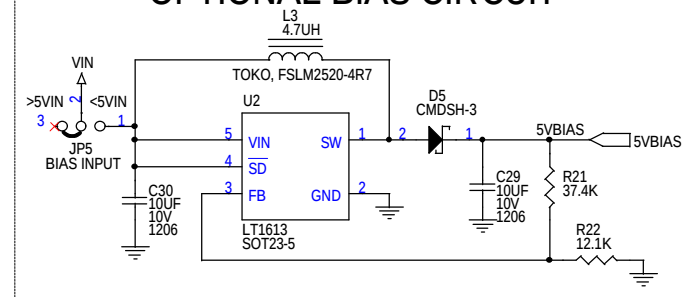

CONTRACT NO.	1630 McCarthy Blvd. Milpitas, CA 95035 Phone: (408)432-1900 Fax: (408)434-0507 LTC Confidential-For Customer Use Only		
APPROVALS			
DRAWN: KIM T.			
CHECKED:	TITLE: 2-PHASE DUAL OUTPUT POWER SUPPLY		
APPROVED:			
ENGINEER: WEI C.	SIZE A DWG NO. DC447A-1 * LTC3728EUH REV A		
DESIGNER:			
DATE: Friday, August 02, 2002	SHEET 1 OF 1		