

Evaluation Modules for the the 66AK2Gxx DSP + ARM processors (EVMK2G, EVMK2GX, and EVMK2GXS)

User's Guide



Literature Number: SPRUI65A
April 2016–Revised January 2018

Preface	7
1 Introduction	9
1.1 Features	9
1.2 Description	10
1.3 System View	10
1.4 What's in the Box?	10
1.5 What's Not in the Box?	10
1.6 Acronyms	13
2 Testing and Results	13
2.1 Overview	13
2.2 Setup	13
2.3 Test Points	14
3 System Description	15
3.1 Functional Block Diagram	15
3.2 Basic Operation	15
3.3 Over Voltage Protection Circuit	17
3.4 JTAG Emulation Overview	18
3.5 Board Management Controller (BMC)	20
3.6 Clock Distribution	22
3.7 DDR3L Interface	24
3.8 NAND Flash	25
3.9 SPI Flash	26
3.10 Quad SPI (QSPI) Flash	27
3.11 EEPROM	27
3.12 SD Card	28
3.13 eMMC	28
3.14 Gigabit Ethernet	30
3.15 PCIe	31
3.16 Display Interface	31
3.17 Touch Connector	33
3.18 Audio Codec	33
3.19 COM8 Connector	34
3.20 DCAN	34
3.21 MLB	35
3.22 USB Host	36
3.23 USB Dual Role	36
3.24 UART	37
3.25 Audio Expansion Connector	39
3.26 Serial Expansion Connector	40
3.27 I2C Address Mapping	41
3.28 McASP Configuration	42

4	Power Supply	43
4.1	Power Distribution Diagram	44
4.2	Power Supply Calculation	45
4.3	Power-Up Sequence	46
5	Booting	47
5.1	Boot Mode Selection	47
5.2	Matrix Demonstrations	47
6	Connector Descriptions	53
6.1	DC Jack (J3)	53
6.2	Mini USB for On-board XDS (J1) and CP2105 (J23)	53
6.3	COM8 (J2)	55
6.4	PCI Express (J5)	56
6.5	JTAG MIPI-60 (J19)	57
6.6	LCD (J22) and Touch Screen (J21)	58
6.7	RJ45 Ethernet (J31)	60
6.8	Stereo Analog Audio Input (J32) and Output (J33)	60
6.9	MLB (J34)	61
6.10	USB0 Host Type A (J35)	61
6.11	HDMI (J36)	62
6.12	MMC/SD (J37)	63
6.13	USB1-Micro (J38)	63
6.14	DB9 Connector (P1, P2, and P3)	64
7	Switch Descriptions	65
7.1	Slide Switch	65
7.2	Tactile Switch	66
7.3	DIP Switch	67
7.4	DIP SPST Switch	67
8	EVM Board Physical Specifications	68
8.1	Mounting of LCD and Spacers	68
8.2	Board Layout	70
8.3	System LEDs	72
8.4	Design Files	72
9	EVM with Audio Daughter Card	74
9.1	K2G Audio Daughter Card Block Diagram	75
9.2	EVM with Audio Daughter Card Connections	76
10	EVMK2GXS Secure EVM	79
10.1	Removing and Installing a K2G in the Socket	79
10.2	Initial Use of a Socketed Board	80
11	EVM Important Notice	80
	Revision History	81

List of Figures

1	EVMK2G Board Assembly Pictorial - Top View	11
2	EVMK2G Board Assembly Pictorial - Bottom View	12
3	EVMK2G Functional Block Diagram	16
4	Over Voltage Protection Circuit.....	17
5	Fault Indication Circuit	17
6	Display and Trace Resistor Multiplexing	18
7	JTAG Interface Block Diagram	19
8	Board Management Controller (BMC) Block Diagram.....	21
9	66AK2Gxx SoC Clocks Block Diagram.....	22
10	Other Clocks Block Diagram.....	23
11	DDR3L Interface Block Diagram	24
12	NAND Flash Block Diagram	25
13	SPI Flash Block Diagram.....	26
14	Quad SPI (QSPI) Flash Block Diagram	27
15	EEPROM Interface Block Diagram	27
16	SD/MMC Interface Block Diagram	28
17	eMMC Interface Block Diagram	28
18	eMMC and COM8 Resistor Multiplexing	29
19	Gigabit Ethernet Interface Block Diagram	30
20	PCIe Interface Block Diagram	31
21	Display Interface Block Diagram	32
22	Touch Interface Block Diagram.....	33
23	Audio Codec Interface Block Diagram.....	33
24	COM8 Connector Interface Block Diagram	34
25	DCAN Interface Block Diagram	34
26	MLB Interface Block Diagram.....	35
27	USB Host Interface Block Diagram	36
28	USB Dual Role Interface Block Diagram.....	36
29	UART0 Interface Block Diagram	37
30	UART1 Interface Block Diagram	38
31	UART2 Interface Block Diagram	38
32	Audio Expansion Connector Interface Block Diagram	39
33	Serial Expansion Connector Interface Block Diagram	40
34	McASP Interface Block Diagram	42
35	Power Distribution Diagram.....	44
36	Power-Up Sequence Diagram.....	46
37	EVMK2G Board Connectors.....	54
38	LCD (J22) and Touch Screen (J21) Connectors	58
39	EVMK2G Switches	65
40	DIP (SW3) Switch	67
41	EVMK2G Mechanical Drawing	69
42	EVMK2G Board Assembly Layout - Top View	70
43	EVMK2G Board Assembly Layout - Bottom View	71
44	EVMK2G Board LEDs	73
45	K2G Audio Daughter Card	74
46	K2G Audio Daughter Card Block Diagram.....	75
47	Connecting the K2G Audio Daughter Card	76

48	Ironwood Socket.....	79
----	----------------------	----

List of Tables

1	Acronyms	13
2	EVMK2G Test Points	14
3	Display and Trace Resistor Multiplexing	19
4	Muxing Between BMC UART1 and SOC_UART2	20
5	Muxing Between BMC UART0 to USB and 4-pin Header	20
6	eMMC and COM8 Resistor Multiplexing	29
7	DSS Lines Between LCD and HDMI Multiplexing	32
8	HDMI Audio Line Selection Between McASP0 and McASP2	33
9	Audio Codec Multiplexing	33
10	UART0 Multiplexing	37
11	UART1 Multiplexing	37
12	SoC Address Table	41
13	BMC I2C Address Table.....	41
14	McASP Configuration	42
15	EVMK2G Regulators.....	43
16	Power Supply Calculation	45
17	Total Current and Power Consumption	46
18	EVMK2G Board Connectors	53
19	COM8 (J2) Pin List	55
20	PCI Express (J5) Pin List.....	56
21	JTAG MIPI-60 (J19) Pin List	57
22	LCD (J22) and Touch Screen (J21) Pin List.....	58
23	RJ45 Ethernet (J31) Pin List.....	60
24	Stereo Analog Audio Input (J32) and Output (J33) Pin List	60
25	MLB (J34) Pin List.....	61
26	USB0 Host Type A (J35) Pin List	61
27	HDMI (J36) Pin List	62
28	MMC/SD (J37) Pin List	63
29	USB1-Micro (J38) Pin List.....	63
30	DB9 Connector (P1, P2, and P3) Pin List.....	64
31	EVMK2G Tactile Switches	66
32	Boot Mode Configurations for SW3.....	67
33	EVMK2G Board LEDs	72

Read This First

About This Manual

This user's guide (UG) describes the hardware architecture of the 66AK2Gxx General Purpose (GP) Evaluation Module (EVMK2G) designed and developed by Mistral Solutions Pvt. Ltd. The 66AK2Gxx is a KeyStone™ II-based DSP + ARM System-on-Chip (SoC).

There are three variants of the EVM for the K2G. These include the EVMK2G, the EVMK2GX, and the EVMK2GXS.

The EVMK2G has a 66AK2G02 operating at 600 MHz installed. This board includes the TPS659118 power supply for generating all voltages needed by the 66AK2G02.

The EVMK2GX has a 66AK2G12 operating at 1 GHz installed. This board includes the TPS65911A power supply for generating all voltages needed by the 66AK2G12.

The EVMK2GXS has a socket for installation of a 66AK2G12HS operating at 1 GHz. This board includes the TPS65911A power supply for generating all voltages needed by the 66AK2G12.

The information in this document pertains to all three versions of the board. In all cases, the EVM is referred to generically as the EVMK2G.

Glossary

TI Glossary — This glossary lists and explains terms, acronyms, and definitions.

Related Documentation From Texas Instruments

For product information, visit the Texas Instruments website at <http://www.ti.com>.

SPRUHY8— [66AK2Gx Multicore DSP+ARM KeyStone II System-on-Chip \(SoC\) Technical Reference Manual](#). Details the integration, the environment, the functional description, and the programming models for each peripheral and subsystem in the device.

Community Resources

The following links connect to TI community resources. Linked contents are provided "AS IS" by the respective contributors. They do not constitute TI specifications and do not necessarily reflect TI's views; see TI's [Terms of Use](#).

TI E2E™ Online Community— *TI's Engineer-to-Engineer (E2E) Community*. Created to foster collaboration among engineers. At e2e.ti.com, you can ask questions, share knowledge, explore ideas and help solve problems with fellow engineers.

TI Embedded Processors Wiki— *Texas Instruments Embedded Processors Wiki*. Established to help developers get started with Embedded Processors from Texas Instruments and to foster innovation and growth of general knowledge about the hardware and software surrounding these devices.

Board History

PCB Revision	History
Rev A	Pre-Proto EVM for power, Board management Controller and On-board emulator validation.
Rev B	Socketed Proto EVM for Silicon bring up.
Rev C	Modified as per change list MS_TI_EVMK2G_MC_REVC_CHNG_LIST.xls
Rev D	Over Voltage protection circuit added.

Trademarks

KeyStone, E2E, Code Composer Studio, Tiva, WiLink are trademarks of Texas Instruments.
ARM, Cortex are registered trademarks of ARM Limited.

K2G General Purpose Evaluation Module (EVMK2G)

1 Introduction

This user's guide describes the hardware architecture of the 66AK2Gxx General Purpose (GP) Evaluation Module (EVMK2G) designed and developed by Mistral Solutions Pvt. Ltd. The 66AK2Gxx is a KeyStone™ II-based DSP + ARM System-on-Chip (SoC). There are three variants of the K2G EVM.

1.1 Features

The key features of the EVMK2G are:

- Based on the KeyStone II architecture with ARM® Cortex®-A15 @ 600 MHz or 1 GHz, and TMS320C66x DSP @ 600 MHz or 1 GHz
- Board Management Controller (BMC) for board management functions like system status and Boot mode control
- 2 GByte of DDR3L with ECC
- 2 Gbit of NAND Flash
- 128 Mbit of SPI Flash
- 512 Mbit of QSPI Flash
- 128 kByte of I2C EEPROM for Boot support from I2C
- Micro SD-Card slot
- 16 GByte of eMMC
- Gigabit Ethernet port supporting 10/100/1000 Mbps data rate on RJ45 connector
- PCIe ×1 card slot
- 4.3" LCD display with Capacitive touch (not provided)
- HDMI transmitter
- Audio Line In and Line Out
- COM8 interface
- DCAN and MLB interfaces
- One USB2.0 host and one USB2.0 Dual-role ports
- One RS-232 serial interface on DB9 connector or UART over mini-USB connector, One UART interface on 6-pin header
- Audio Daughter Card (not provided) plugable to Audio Expansion, Serial Expansion headers
- MIPI 60-pin JTAG header to support all types of external emulator
- On-board XDS200 Emulator
- RoHS compliant design
- Powered by DC power-wall adapter (12V/5A) (not provided)
- ATX form factor (12" × 9.6")

1.2 Description

The EVMK2G is a high-performance, cost-efficient, standalone, general-purpose development platform that enables you to evaluate and develop applications for the Texas Instrument's Keystone II System-on-Chip (SoC) 66AK2Gxx.

The K2G SoC (66AK2Gxx) is the new device from TI's Keystone II architecture with:

- ARM® Cortex®-A15 Microprocessor Unit (ARM A15) Subsystem at up to 600 MHz or 1 GHz
- TMS320C66x Fixed- and Floating-Point VLIW DSP Subsystem at up to 600 MHz or 1 GHz
- Two Programmable Real-Time Unit and Industrial Communication Subsystems (PRU-ICSS)
- Multicore Shared Memory Controller (MSMC) with 1024KB of Shared L2 RAM
- Up to 36-Bit DDR3 External Memory Interface (EMIF) with ECC (32-Bit Data + 4-Bit ECC)
- Peripheral Component Interconnect Express (PCIe) 2.0 Port with Integrated PHY
- Three Multichannel Audio Serial Port (McASP) Peripherals
- Multichannel Buffered Serial Port (McBSP)
- Six Enhanced High-Resolution Pulse Width Modulation (eHRPWM) Modules
- Three Inter-Integrated Circuit (I2C) Interfaces
- Three Universal Asynchronous Receiver/Transmitter (UART) Interfaces
- Four Serial Peripheral Interfaces (SPI)
- Seven 64-Bit Timers
- Secure Device - Supports Standard secure boot and One-time-Programmable (OTP) memory for key storage
- 21 × 2 mm² 0.8mm pitch WBBGA

1.3 System View

The top and the bottom pictorial views of the EVMK2G are provided in [Figure 1](#) and [Figure 2](#), respectively.

1.4 What's in the Box?

The EVMK2G Kit contains the following parts:

- An on-board, high-speed XDS200 Emulator
- Parts for assembling the LCD and the spacers
- Mini-B to standard A-type USB cable
- Micro-B to standard A-type USB cable
- USB adapters: USB micro-A/B to A socket type adapter
- Ethernet cable
- Female to female RS-232 serial cable (cross cable)
- Micro-SD card 32GB
- SD card reader
- uSD to SD adapter

1.5 What's Not in the Box?

The EVMK2G Kit does not contain the following parts:

- Audio Daughter Card (TI part number [AUDK2G](#))
- Power supply (CUI, Inc., part number [SDI65-12-U-P5](#))
- LCD Touchscreen display (Newhaven Display, Intl., part number [NHD-4.3-480272EF-ATXL#-CTP](#))

Figure 1. EVMK2G Board Assembly Pictorial - Top View


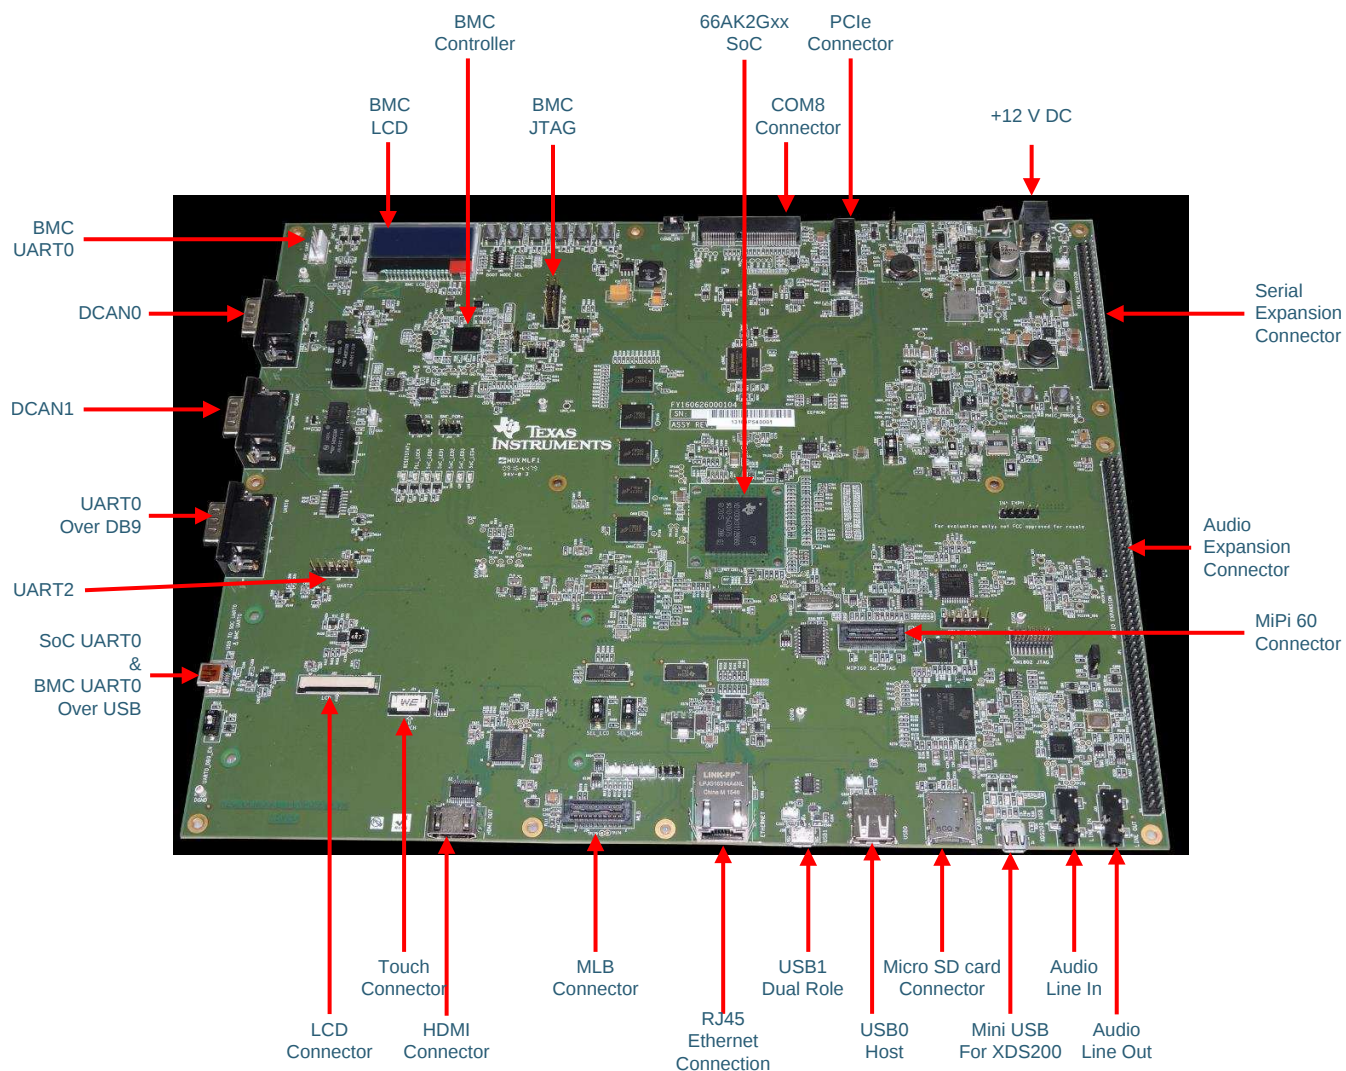


Figure 2. EVMK2G Board Assembly Pictorial - Bottom View

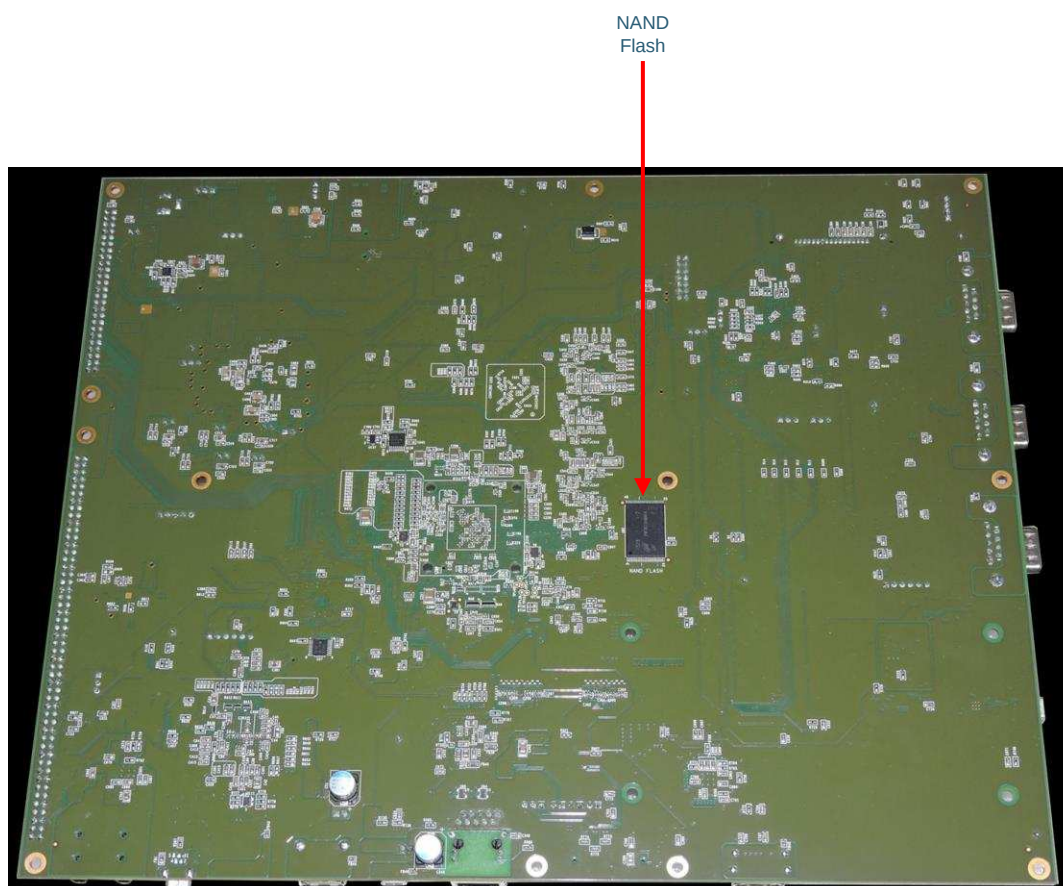

1.6 Acronyms

Table 1 is a description of some terms used in this document.

Table 1. Acronyms

Acronym	Description
ATX	Advanced Technology eXtended
BMC	Board Management Controller
CCS	Code Composer Studio
DDR3	Double Data Rate 3 Interface
DSP	Digital Signal Processor
eHRPWM	Enhanced High-Resolution Pulse Width Modulation
EEPROM	Electrically-Erasable Programmable Read-Only Memory
EMAC	Ethernet Media Access Controller
EMIF	External Memory Interface
EVM	Evaluation Module
EVMK2G	66AK2Gxx General Purpose (GP) Evaluation Module
I2C	Inter-Integrated Circuit
JTAG	Joint Test Action Group
LED	Light-Emitting Diode
McASP	Multichannel Audio Serial Port
MMC	Module Management Controller
PCIe	Peripheral Component Interconnect Express
SoC	System-on-Chip
SPI	Serial Peripheral Interfaces
UART	Universal Asynchronous Receiver/Transmitter
USB	Universal Serial Bus
XDS200	Texas Instruments' Emulator

2 Testing and Results

2.1 Overview

2.2 Setup

2.3 Test Points

The EVMK2G board has 187 test points. Each test point and its function is given in [Table 2](#).

Table 2. EVMK2G Test Points

Test Point	Signal	Test Point	Signal	Test Point	Signal	Test Point	Signal
9	Reserved for U51	61	DGND	110	LDO5_3V3	160	Reserved for U62.45
13	Reserved for U20B	62	DGND	111	U32-2.G6-GPIO5	161	Reserved for U62.45
14	Reserved for J2	63	VCC12V0_DC_IN	112	NRESPWRON1	162	Reserved for U62.45
15	Reserved for J2	64	VCC12V0_DC_IN	113	PMIC_VDD2	163	Reserved for U62.45
16	Reserved for J2	65	Reserved for U17-4	114	U32-2.EN2	164	MFP2
17	Reserved for J2	66	Reserved for U20A	115	Reserved for U39.A7	165	MFP3
18	Reserved for J2	67	Reserved for U20A	116	U32-2.EN1	166	HDMI_CEC_D
19	Reserved for U20B	68	Reserved for U20A	117	U32-2.GPIO8	167	U96-GPIO2
20	Reserved for U20G.V5	69	Reserved for U20A	118	LDO2_1V8	168	U96-GPIO1
21	Reserved for U20A	70	Reserved for U20A	119	LDO8_3V3	169	LINE2L+
22	Reserved for U20A	71	Reserved for U20A	120	LDO6_3V3	170	LINE2L-
23	Reserved for J2	72	Reserved for U20A	121	LDO7_3V3	171	LED_MODE
25	Reserved for J2	74	Reserved for U20A	122	LDO1_1V8	172	HPLCOM
26	Reserved for J2	75	Reserved for U20A	123	Reserved for U46.A7	173	HPRCOM
29	TPS65000_PG#	76	Reserved for U20A	124	MMC1POW	174	Reserved for J34
30	COM_GPIO9	77	Reserved for U20A	125	Reserved for U1-16.J3	175	U32-2 . GPIO0
31	COM_BTUARTDEBUG	78	Reserved for U20A	126	Reserved for U49.A7	176	BMC_JTAG_TRSTn
33	COM_GPIO10	79	Reserved for U20A	127	SYSCLKOUT	177	Reserved for U17-6
34	COM_GPIO12	80	Reserved for U20A	128	Reserved for U52.A7	178	Reserved for U17-9
35	COM_GPIO11	81	Reserved for U20A	129	DGND	179	Reserved for J34
36	T_TDIS	82	Reserved for U17-4	131	OBSCLK_N	180	Reserved for U20F
37	SPARE0	84	VRTC	132	RMIIREFCLK/ PROECAPOECAP SYNCOUT	181	Reserved for U20F
38	SPARE1	85	PMIC_PGOOD	133	SoC Reserved pin	182	Reserved for U20B
39	uEXP3	86	Reserved for U20B	135	OBSCLK_P	184	Reserved for U51
40	MEM_A12	88	U32-2 - GPIO3	136	SoC Reserved pin	185	Reserved for U51
41	uEXP2	89	U32-2 - TEST	138	SoC Reserved pin	186	Reserved for U51
42	VCC5V0_DCDC	90	DGND	139	SoC Reserved pin	187	Reserved for U51
43	Reserved for U17-1	91	U32-2.C6-TRAN	140	SoC Reserved pin	189	Reserved for U51
44	uEXP1	92	DGND	141	SoC Reserved pin	191	Reserved for U51
45	Reserved for U17-1	93	Reserved for U20-L	142	SoC Reserved pin	192	Reserved for U51
46	uEXP0	94	Reserved for U20-L	143	SoC Reserved pin	193	BUF_McASP2ACLKX
47	Reserved for U17-1	95	Reserved for U20-L	144	SoC Reserved pin	194	VCC3V3_DC_CONN
48	Reserved for U17-6	96	Reserved for U20-L	145	SoC Reserved pin	195	VCC3V3
49	Reserved for U17-1	97	XOSC1	146	SoC Reserved pin	196	VCC1V2_XDS
50	Reserved for U17-6	98	BMC_HIBn	147	SoC Reserved pin	197	VCC1V8_XDS
51	U18 SS/TR	100	LDO4_1V8	149	SoC Reserved pin	198	VCC3V3_XDS
52	5V_PWRGD	101	CLK32KOUT	150	SoC Reserved pin	199	VCC3V3_DCIN
53	U18.8-COMP	102	U32-2.D5-EN	151	SoC Reserved pin	200	3V3_DCIN_PG
54	Reserved for U20B	103	LDO3_1V8	152	VLED+	201	DGND
55	3V3_CONN_PG	104	DGND	153	DDR_ODT1	202	DGND
56	Reserved for U20J.A4	106	Reserved for U27.A7	154	DDR_CKE1	203	DGND
57	Reserved for U17-5.T19	107	U32-2.F6-GPIO1	155	DDR_CE1Z	204	DGND

Table 2. EVMK2G Test Points (continued)

Test Point	Signal	Test Point	Signal	Test Point	Signal	Test Point	Signal
58	Reserved for U20A	108	U32-2.H7-GPIO4	157	SOC_DSS_FID	205	BUF_McASP2FSX
59	Reserved for U20A	109	U32-2.G8-VREF	158	Reserved for U62.45	206	BUF_MCASP2AXR2
				159	SOC_SPI3_MISO	207	BUF_MCASP2AXR3
						208	HDMI_AUDD0
						209	HDMI_AUDD1
						210	HDMI_AUDD2
						211	HDMI_AUDD3
						212	HDMI_AUDMCLK
						213	HDMI_AUDBCLK
						214	HDMI_AUDFSX

3 System Description

3.1 Functional Block Diagram

The functional block diagram of the EVMK2G is shown in [Figure 3](#).

3.2 Basic Operation

The EVMK2G is a full-featured general-purpose development tool for the 66AKGxx Keystone II-based SoC. It supports a comprehensive software including the Texas Instruments Code Composer Studio™ (CCS) integrated development environment (IDE) and Processor Software Development Kit (SDK). The Processor SDK is a unified software platform for TI embedded processors providing easy setup and fast out-of-the-box access to benchmarks and demos.

The Processor SDK for the EVMK2G can be downloaded from [Processor SDK for 66AK2Gx Processors - Linux and TI-RTOS Support](#).


The latest version of CCS can be downloaded from [Code Composer Studio \(CCS\) Integrated Development Environment \(IDE\)](#). It is recommended to use CCS revision 6.1.2 or later with the EVMK2G.

The Processor SDK Linux images are preprogrammed to the SD Card that is shipped with the EVMK2G. Refer to the Processor SDK user guide for more details on running Linux with the EVM.

Refer to documentation available at [Processor SDK for 66AK2Gx Processors - Linux and TI-RTOS Support](#) for instructions on setting up CCS and exploring software packages delivered with the EVMK2G.

NOTE: For TI RTOS users, refer to the [Processor SDK RTOS Getting Started Guide](#).

Figure 3. EVMK2G Functional Block Diagram

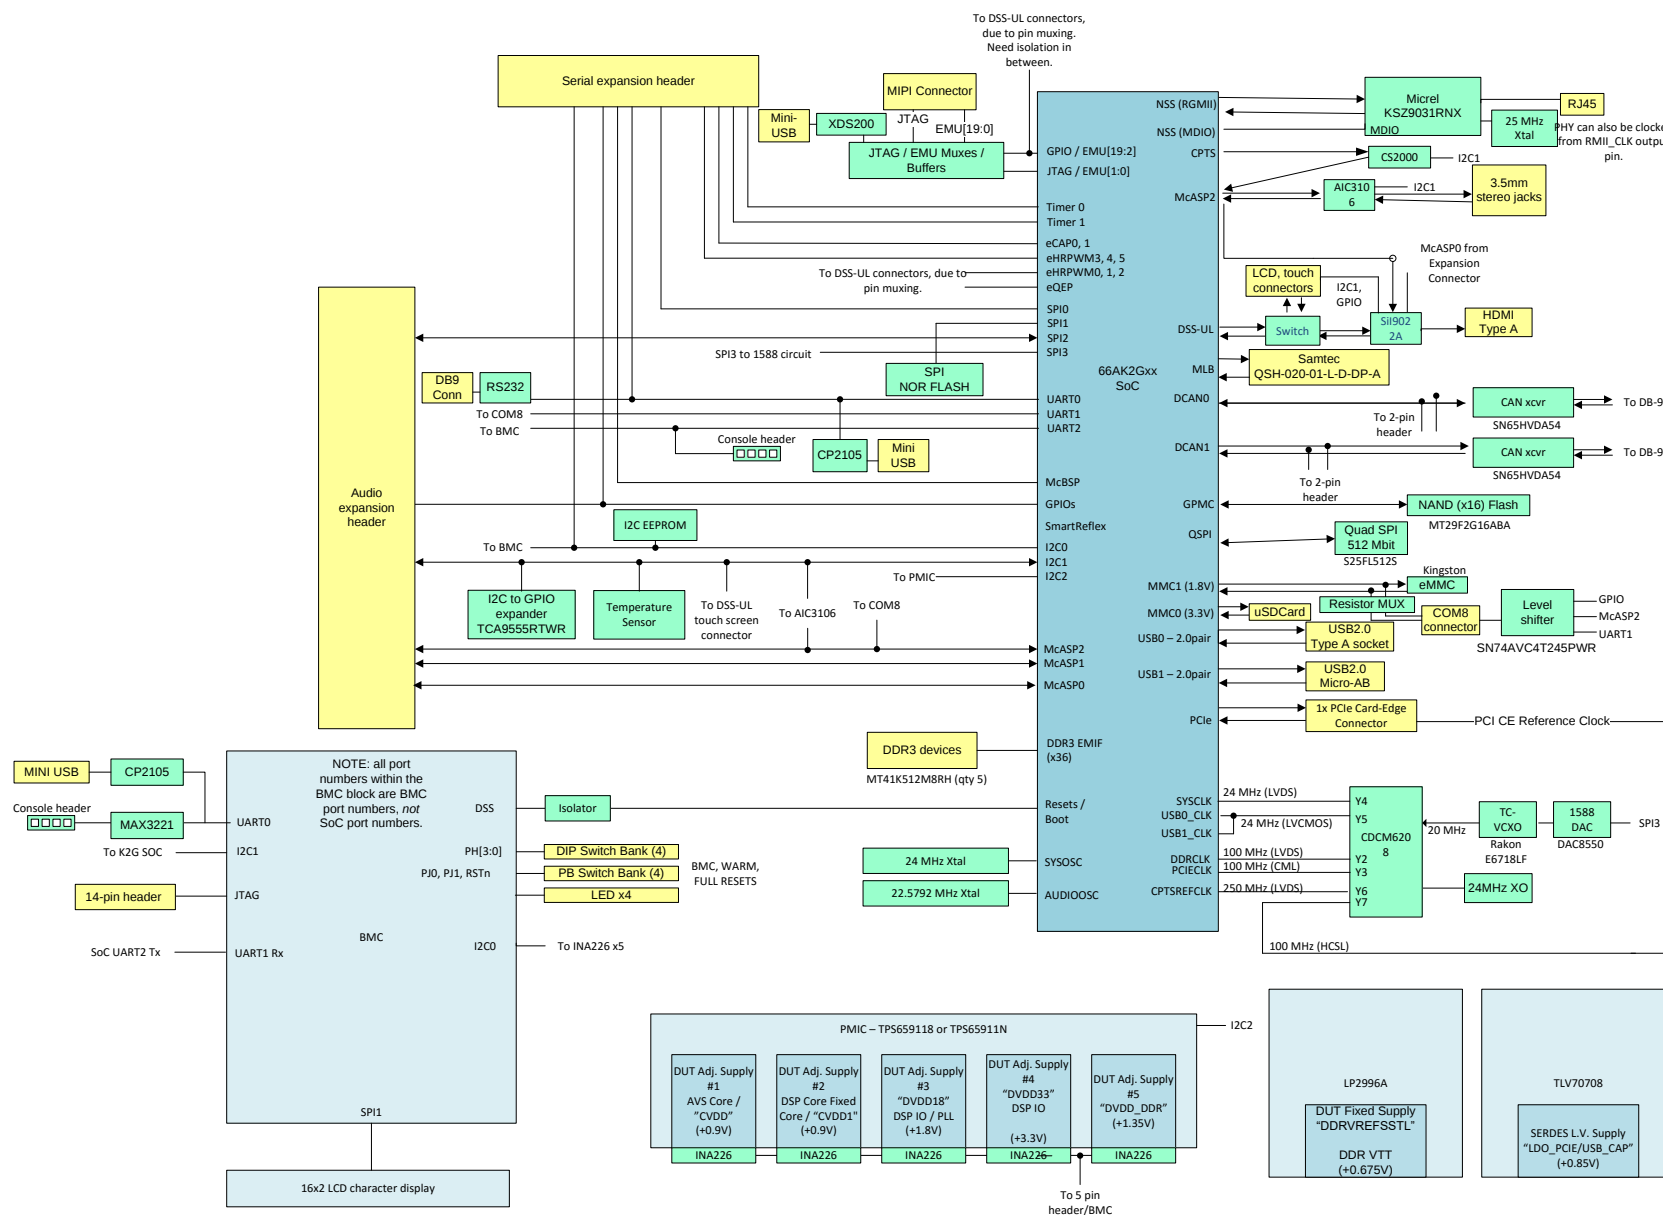


Copyright © 2018, Texas Instruments Incorporated

3.3 Over Voltage Protection Circuit

The Voltage Protection Circuit on the EVMK2G protects the board from over voltage, under voltage, transient voltage, and reverse voltage input cases. The safe operation input voltage range is 11v to 13v. Any voltage not in this range is considered a fault and the voltage protection circuit ([Figure 4](#)) isolates the board from this input. LED LD14 ([Figure 5](#)) indicates if the DC input applied to board is in a safe input range.


Figure 4. Over Voltage Protection Circuit

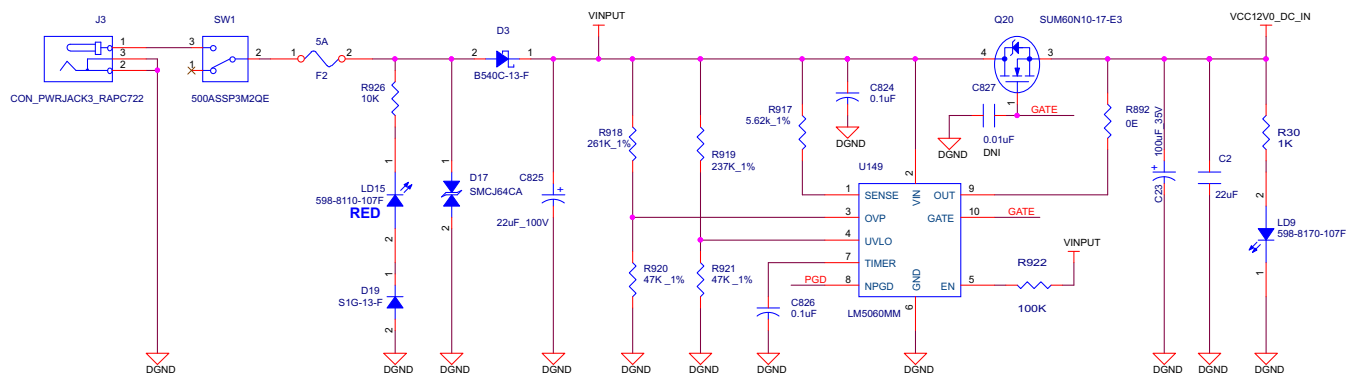

Note:-


Vinput nominal = 12V
Iinput max = 5A

Condition	LED Status(LD15)
Reverse Voltage	ON



Copyright © 2016, Texas Instruments Incorporated

Figure 5. Fault Indication Circuit

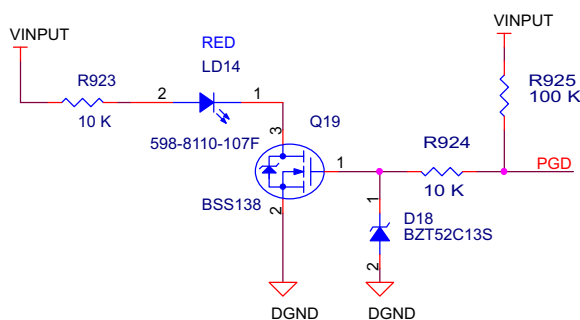

Condition	LED Status(LD14)
VININPUT between 11 to 13V & Current below 5A	OFF
VININPUT above 13V or below 11V & Current above 5A	ON

Copyright © 2016, Texas Instruments Incorporated

3.4 JTAG Emulation Overview

The EVM supports two types of Emulation: On-Board-XDS200 emulator and 60-pin MIPI Header.

When external emulator is not connected to MIPI 60-pin connector, On-board XDS200 embedded JTAG emulator is the default type of emulation (SoC JTAG signals are routed to XDS200 on-board emulator). When external emulator is connected to MIPI 60-pin header, it is automatically detected and SoC JTAG signals are routed to external emulator.

3.4.1 On-Board XDS200 Emulator

The EVMK2G has on-board XDS200 embedded JTAG emulation circuitry. Hence user does not require any external emulator to connect EVM with Code Composer Studio (CCS). You can connect the target SoC in the EVM to CCS through the USB cable supplied in the EVM kit.

3.4.2 MIPI 60-pin Header for Connecting External Emulator


In case you want to connect an external emulator to the EVM, the MIPI 60-pin JTAG header is provided on-board for high-speed real-time emulation. All JTAG and EMUx signals are terminated on the MIPI 60-pin header.

The MIPI 60-pin JTAG header supports all standard (XDS510 or XDS560) TI DSP emulators. Refer to the documentation supplied with your emulator for connection assistance.

EMU pins are pin muxed with DSS (Display Subsystem) and Boot mode pins. The EMU signals are resistor muxed with DSS signals. A Boot mode buffer is enabled during boot-up to latch the Boot mode signals.

Resistor muxing between display and trace functionality is shown in [Figure 6](#) and [Table 3](#).

Figure 6. Display and Trace Resistor Multiplexing

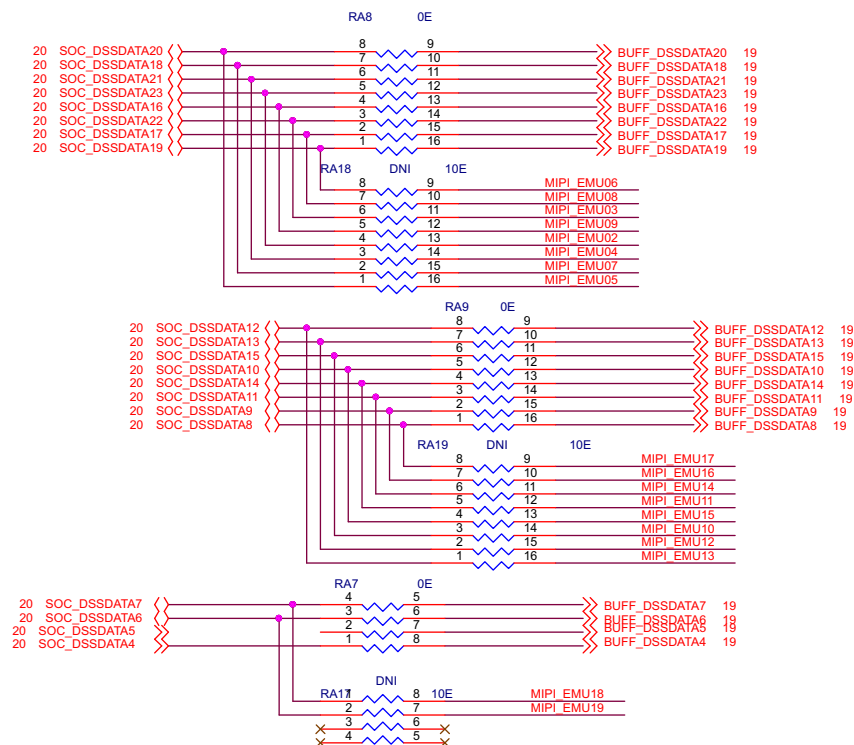


Copyright © 2016, Texas Instruments Incorporated

Table 3. Display and Trace Resistor Multiplexing

DNI	Mount	Description
RA17, RA18, RA19	RA7, RA8, RA9	For HDMI/LCD display (default)
RA7, RA8, RA9	RA17, RA18, RA19	For Trace

The JTAG interface, on-board XDS200 emulator, MIPI 60-pin header for external emulator connection details are shown in [Figure 7](#).

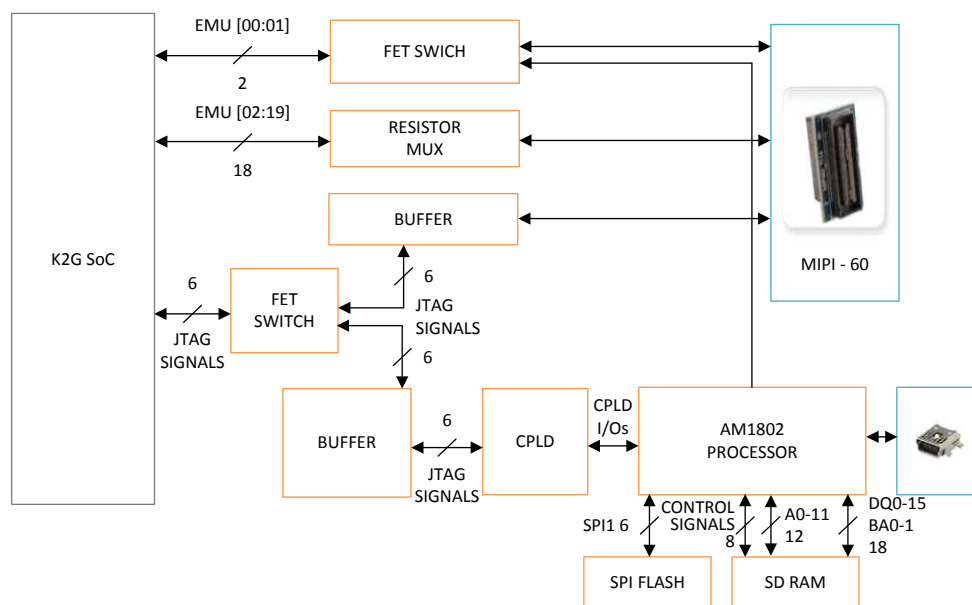Figure 7. JTAG Interface Block Diagram


Copyright © 2016, Texas Instruments Incorporated

3.5 Board Management Controller (BMC)

The Tiva™ C Series ARM® Cortex®-M4 microcontroller TM4C129XNCZAD is used as a board management controller for the EVMK2G. The BMC controls the SoC boot sequence and displays the status on the character LCD interfaced to the BMC. The BMC facilitates the selection of Boot mode, reset settings, and configuring clock generators.

The JTAG interface is provided to access and program the BMC controller. Note that the BMC is used mainly for EVM test automation and, in general, is not required for customer products.

The push buttons, DIP switches, and LEDs are connected to the BMC by way of GPIOs. The 4-bit DIP switch is used to set the processor boot mode, the three push buttons are for reset, and the remaining are user configurable.

Isolators are used between the BMC and SoC peripherals. The BMC is interfaced to the SoC through I2C1 and UART1. The BMC I2C0 is interfaced to the INA devices for processor current monitoring. The BMC UART0 is muxed between the 4-pin header through RS-232 level translator and the CP2105 for console purpose.

Table 4. Muxing Between BMC UART1 and SOC_UART2


Signal	Logic	SoC UART 2 Connected To
BMC_UART_SEL	High	UART2 header (J49)
	Low	BMC

Table 5. Muxing Between BMC UART0 to USB and 4-pin Header

Signal	Logic	BMC_UART0 Pins Connected To
BMC_UART0_DETECT	High	USB-to-UART module CP2105
	Low	BMC console 4-pin header (J6)

The BMC is powered from 12V through the LM22675 DC-DC regulator. The connection details are shown in [Figure 8](#).

Figure 8. Board Management Controller (BMC) Block Diagram

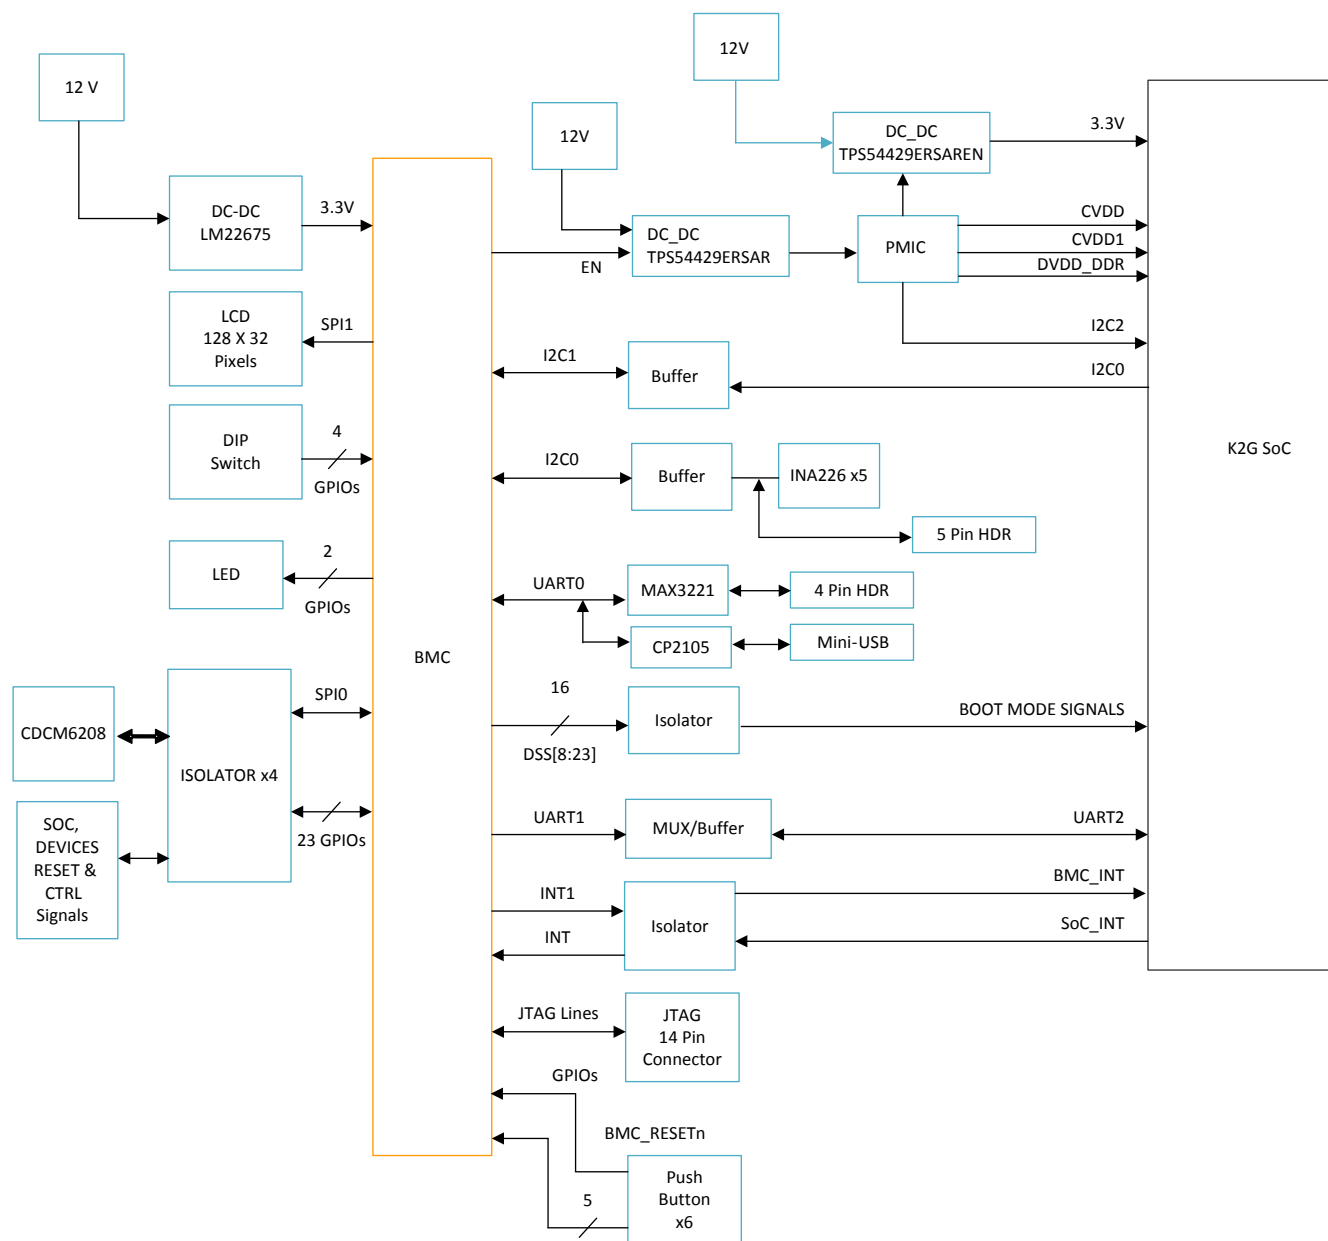


Copyright © 2016, Texas Instruments Incorporated

3.6 Clock Distribution

The EVMK2G has the following clock sources, crystals, and oscillators.


- 66AK2Gxx SoC clocks (see [Figure 9](#)):
 - Y5: 22.579 MHz Audio clock for SoC
 - Y6: 24 MHz System clock to the SoC
 - Y7: 12.28 MHz to CS2000
 - Y8: 24 MHz Secondary Reference for clock generator
 - U62: CDCM clock generator
- Other clocks (see [Figure 10](#)):
 - Y1: 32.768 kHz to AM1802 XDS
 - Y2: 24 MHz System clock to AM1802 XDS
 - Y3: 25 MHz Clock to BMC Controller
 - Y4: 32.768 kHz Real-Time Clock (RTC) to Power Management IC (TPS659118)
 - Y9: 25 MHz Clock for Ethernet PHY
 - U21: 32.768 kHz Real-Time Clock (RTC) to BMC
 - U75: 12.28 MHz Oscillator for audio clocks

Figure 9. 66AK2Gxx SoC Clocks Block Diagram

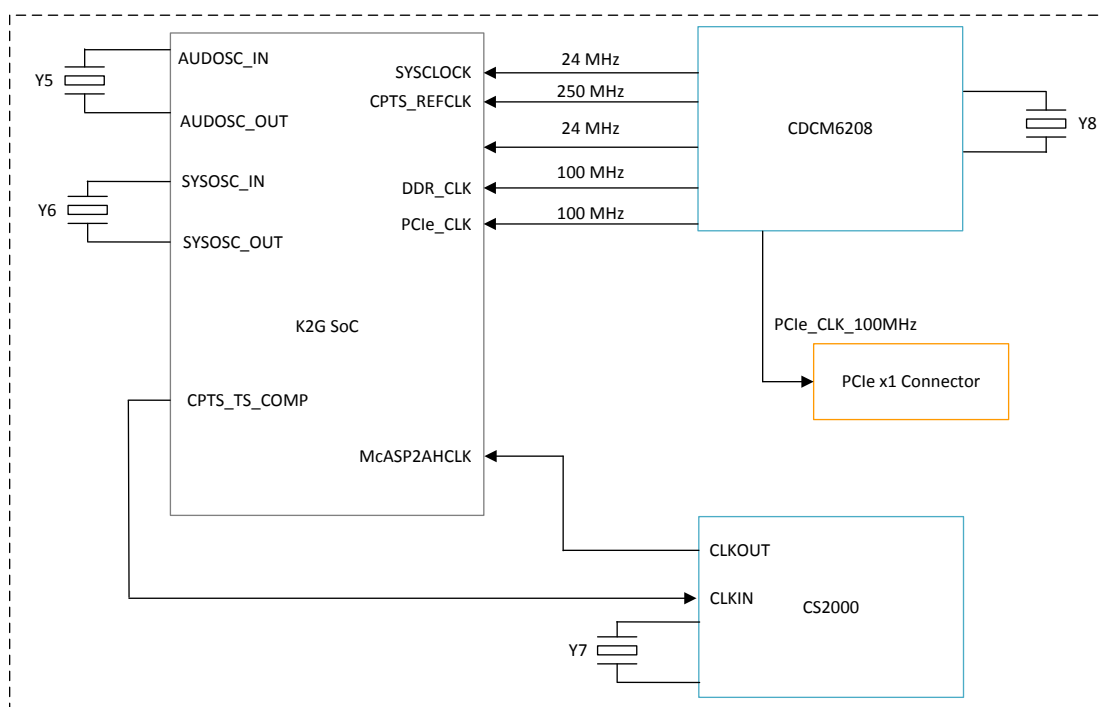

Copyright © 2016, Texas Instruments Incorporated

Figure 10. Other Clocks Block Diagram

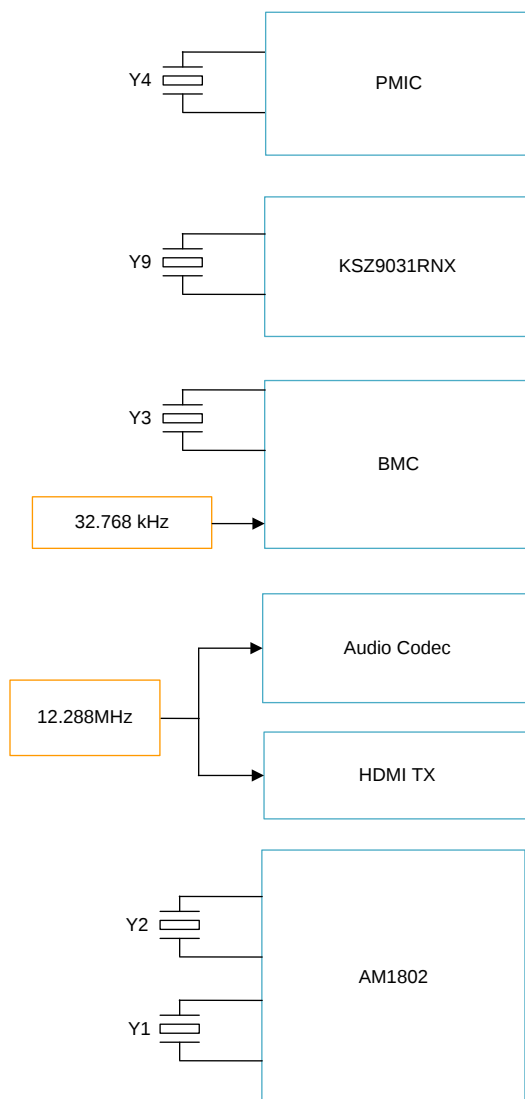


Copyright © 2016, Texas Instruments Incorporated

3.7 DDR3L Interface

The 66AK2Gxx SoC supports ×36 bit (32-bit data + 4-bit ECC) DDR3L. Four 4-Gbit (512M × 8) DDR3L chips (MT41K512M8RH-125) from Micron are used to obtain a memory size of 2GByte and one DDR3L chip is interfaced to the ECC data bus CB00-CB03, CBDQS, and CBDQM. The DDR3L chips are routed as per Fly-by topology as shown in [Figure 11](#).

Figure 11. DDR3L Interface Block Diagram

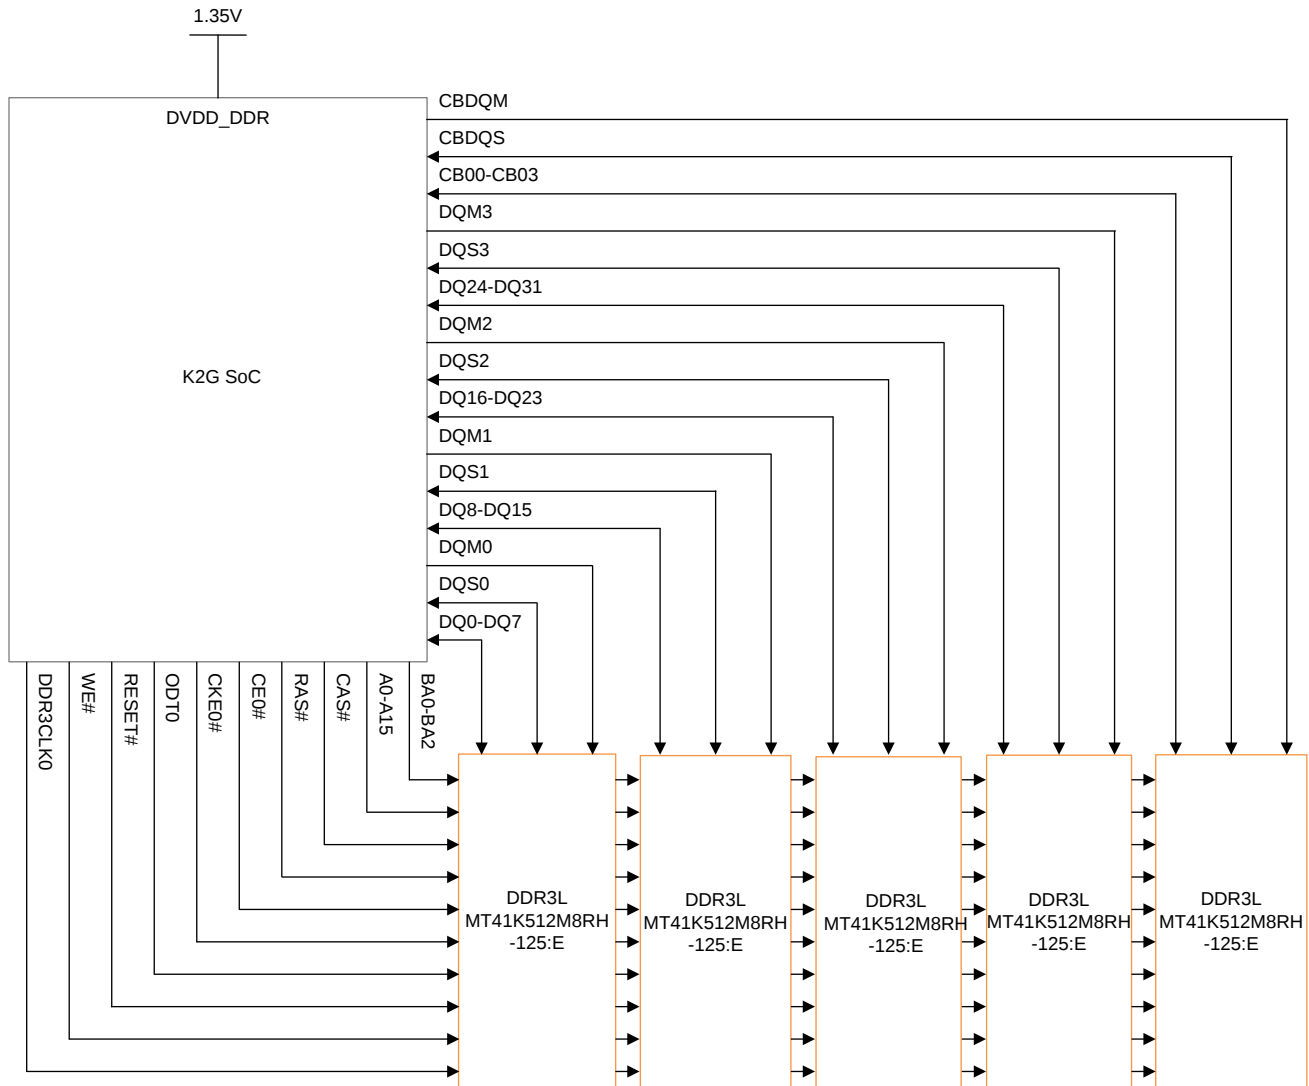


Copyright © 2016, Texas Instruments Incorporated

3.8 NAND Flash

2-Gbit NAND Flash (MT29F2G16ABA) from Micron with a 16-bit data width is interfaced to the processor GPMC (General-Purpose Memory Controller) interface. The NAND Flash is interfaced to GPMC chip select 0.

The connection details are as shown in [Figure 12](#). The operating voltage of the GPMC interface and NAND flash is 3.3v.

Figure 12. NAND Flash Block Diagram

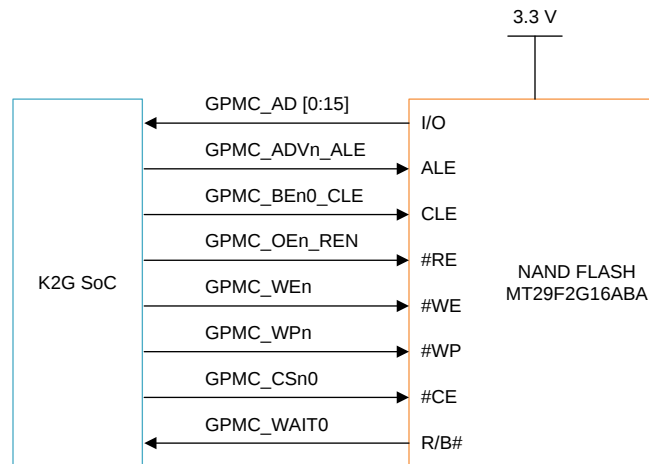


Copyright © 2016, Texas Instruments Incorporated

3.9 SPI Flash

The SPI Flash (N25Q128A13ESF40F) from Micron is a 128-Mbit Serial Flash interfaced as shown in Figure 13. The Serial Flash is interfaced to the SPI1 port of the processor and is connected to chip select 0.

The write protection for the Flash is controlled by the BMC. The Hold signal (to pause the serial communication without deselecting the device) is connected to SoC GPIO with a default pull-up.

Figure 13. SPI Flash Block Diagram

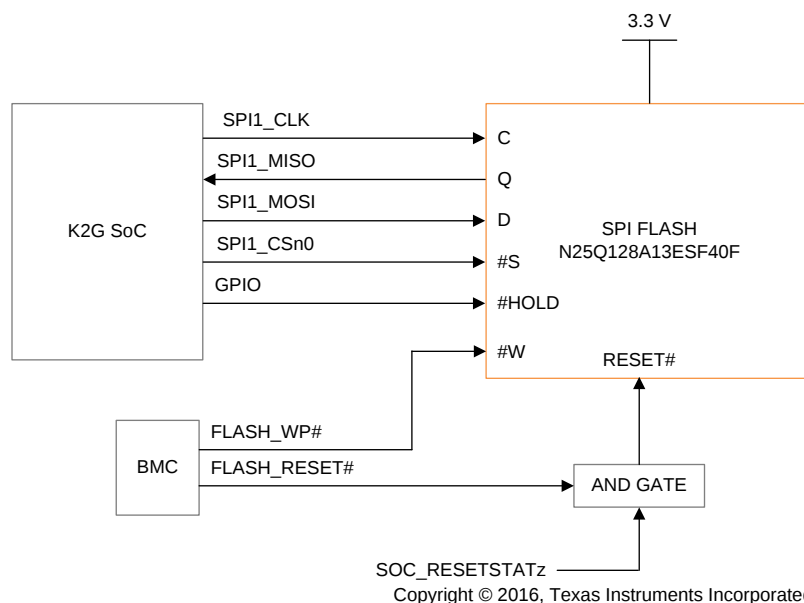


Copyright © 2016, Texas Instruments Incorporated

3.10 Quad SPI (QSPI) Flash

The Quad SPI (QSPI) Flash is a 512-Mbit device (S25FL512S) from Spansion interfaced as shown in Figure 14. The reset signal for the QSPI Flash is connected to the BMC. The Quad SPI Flash is interfaced to chip select 0 of the QSPI interface on the processor.


Figure 14. Quad SPI (QSPI) Flash Block Diagram

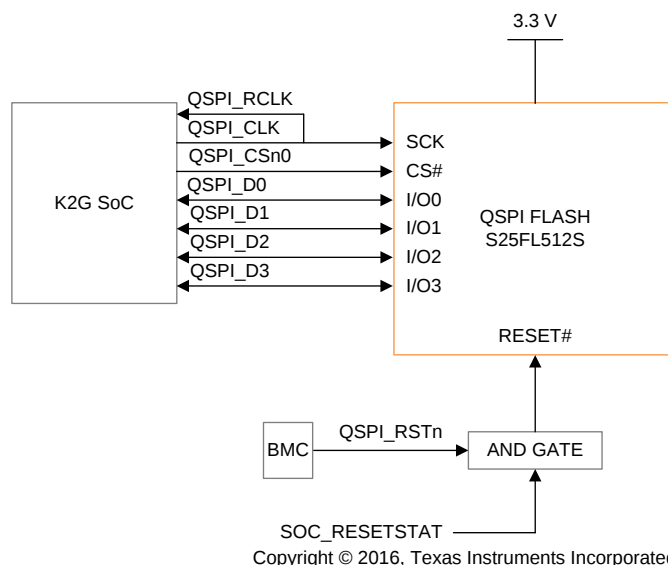

3.11 EEPROM

The Atmel AT24CM01 provides 1Mb of Serial Electrically-Erasable and Programmable Read-Only Memory (EEPROM). This is interfaced to I2C0 port of the processor as shown in Figure 15. The device address is set by the two address pins A1 and A2 that are connected to ground to give a 7-bit address 0x50. The Write protect pin of the EEPROM is connected to a GPIO of the BMC.


Figure 15. EEPROM Interface Block Diagram

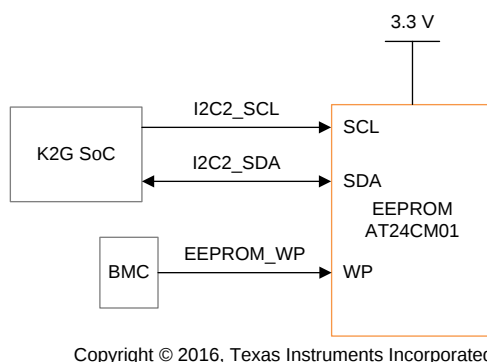

3.12 SD Card

Micro SD Card connector is connected to MMC0 interface of the processor as shown in Figure 16. ESD protection circuits are included for all the connector pins that are prone to ESD. Refer to Section 6.12 for SD Card connector pin outs.

Figure 16. SD/MMC Interface Block Diagram

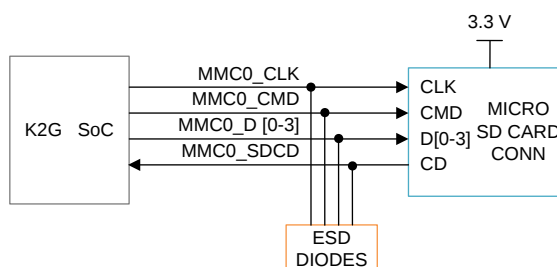


Copyright © 2016, Texas Instruments Incorporated

3.13 eMMC

The eMMC flash chip from Kingston (16GB) is interfaced with MMC1 of the processor as shown in Figure 17. MMC1 is muxed between the eMMC Flash and the COM8 connector. By default, MMC1 is connected to eMMC.

Resistor muxing between eMMC and COM8 is shown in Figure 18 and Table 6.

Figure 17. eMMC Interface Block Diagram

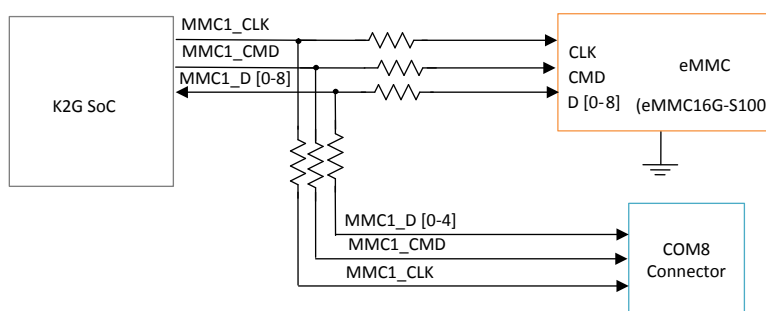

Copyright © 2016, Texas Instruments Incorporated

Figure 18. eMMC and COM8 Resistor Multiplexing

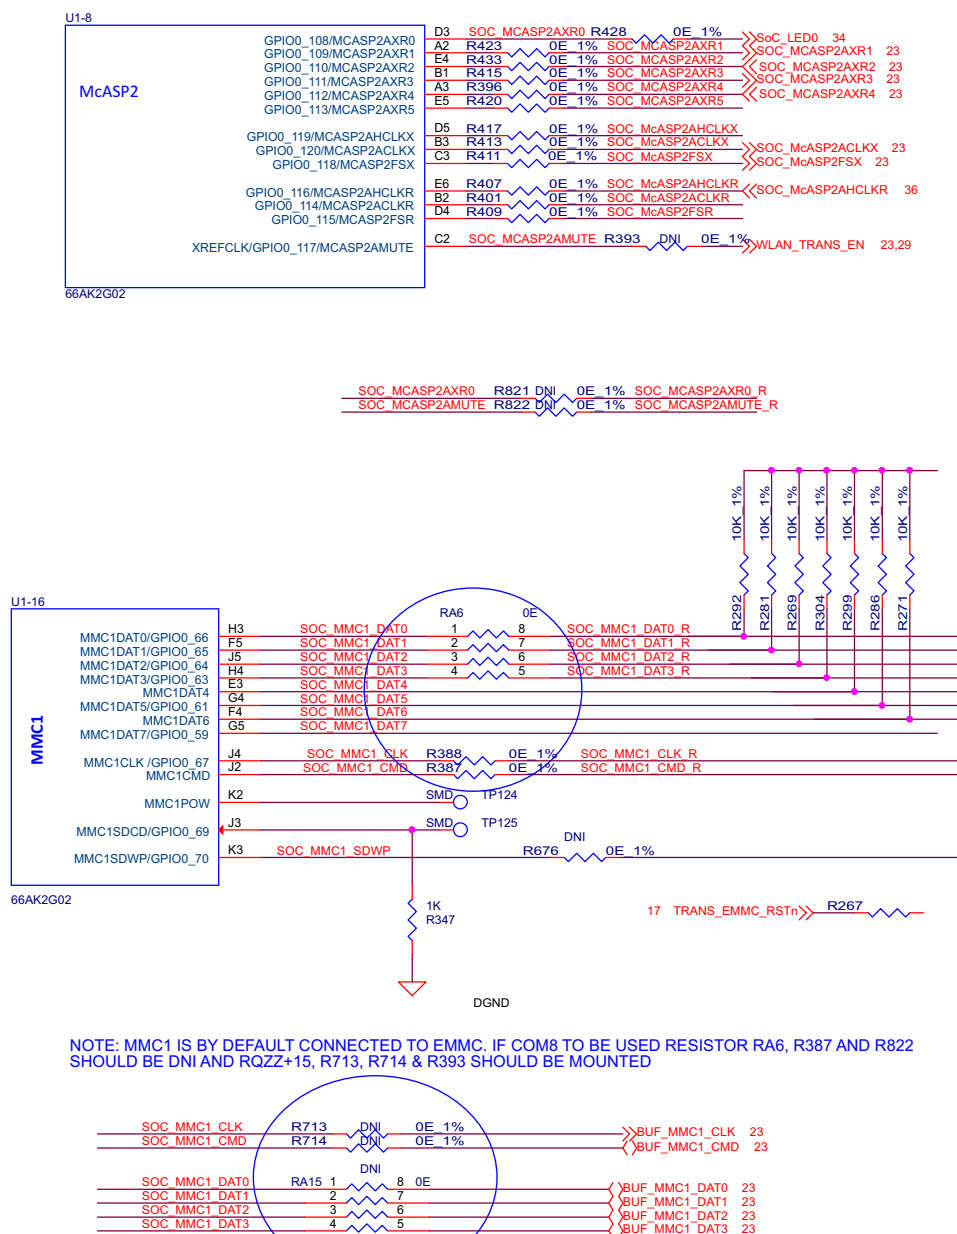


Table 6. eMMC and COM8 Resistor Multiplexing

DNI	Mount	Description
RA6, R387, R388, and R822	RA15, R713, R714, and R393	Connect MMC1 to COM8
RA15, R713, R714, and R393	RA6, R387, R388, and R822	Connect MMC1 to eMMC (default)

3.14 Gigabit Ethernet

The Gigabit Ethernet PHY (KSZ9031RNX) from MICREL is interfaced to the RGMII port of the processor as shown in [Figure 19](#).

The RJ45 connector with magnetics is interfaced to the MDI (media dependent interface) port of PHY. The PHY address, PHYAD [2:0], is sampled and latched at power-up/reset and is configurable to any value from 0 to 7. Each PHY address bit is configured as:

- Pull-up = 1
- Pull-down = 0


The MODE [3:0] pins are sampled and latched at power-up/reset. Each Mode bit is configured as:

- Pull-up = 1
- Pull-down = 0

The MODE pins are set for RGMII mode (10/100/1000 speed half/full-duplex).

Reference clock for PHY is provided by the 25-MHz crystal, Y9. (See [Section 3.6](#))

Figure 19. Gigabit Ethernet Interface Block Diagram

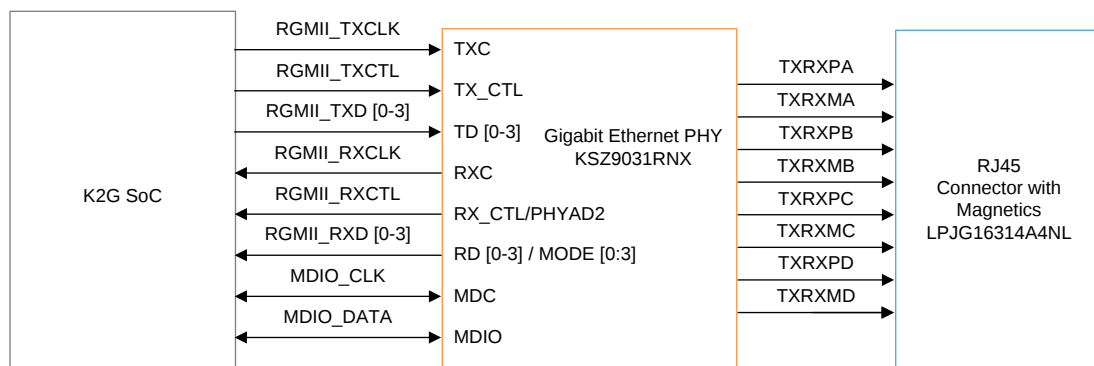


Copyright © 2016, Texas Instruments Incorporated

3.15 PCIe

The PCIe RX and TX pairs are connected to x1 PCIe edge card connector as shown in [Figure 20](#). Clock generator (CDCM6208) provides the 100-MHz reference clocks for the PCIe port of the processor and to the daughter card that connects to the edge card connector.

Figure 20. PCIe Interface Block Diagram

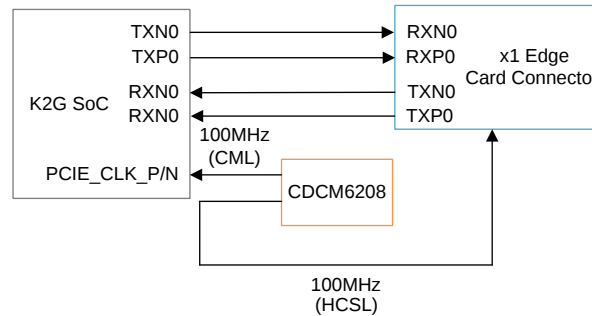

Copyright © 2016, Texas Instruments Incorporated

3.16 Display Interface

The Display interface (DSS) is muxed between the LCD and the HDMI transmitter SiI9022A as shown in [Figure 21](#). The DSS is muxed using two 32-bit buffers to connect to the LCD or the HDMI transmitter. Either the LCD or the HDMI transmitter is enabled by switches SW13 and SW14:

- for HDMI: SW13 and SW14 = ON
- for LCD: SW13 and SW14 = OFF

3.16.1 LCD


The TFT LCD module (NHD-4.3-480272EF-ATXL-CTP) from Newhaven display can be plugged into the 40-pin FPC connector on the EVMK2G. The LCD backlight is driven by DC-DC boost-converter TPS61081DRCT.

The LCD is not part of the EVMK2G kit, it should be purchased separately. More details of LCD installation procedure is provided in [Section 8](#).

3.16.2 HDMI Transmitter

The EVMK2G supports HDMI interface with the HDMI transmitter SiI9022A. The HDMI signals are terminated to a connector by way of an ESD protection device TPD12S016PWR. The HDMI interface is controlled by I2C1 of the SoC. The HDMI signals consist of three differential pairs of data lines and one differential pair of clock line.

The McASP2 is interfaced to the HDMI transmitter to support audio over HDMI and I2C1 for control. McASP2TX is shared between the HDMI transmitter and the Audio Codec. The Audio MCLK for the HDMI transmitter is derived from a 12.288-MHz Oscillator, U75, that is shared between the Audio Codec and the HDMI transmitter (See [Section 3.6](#)).

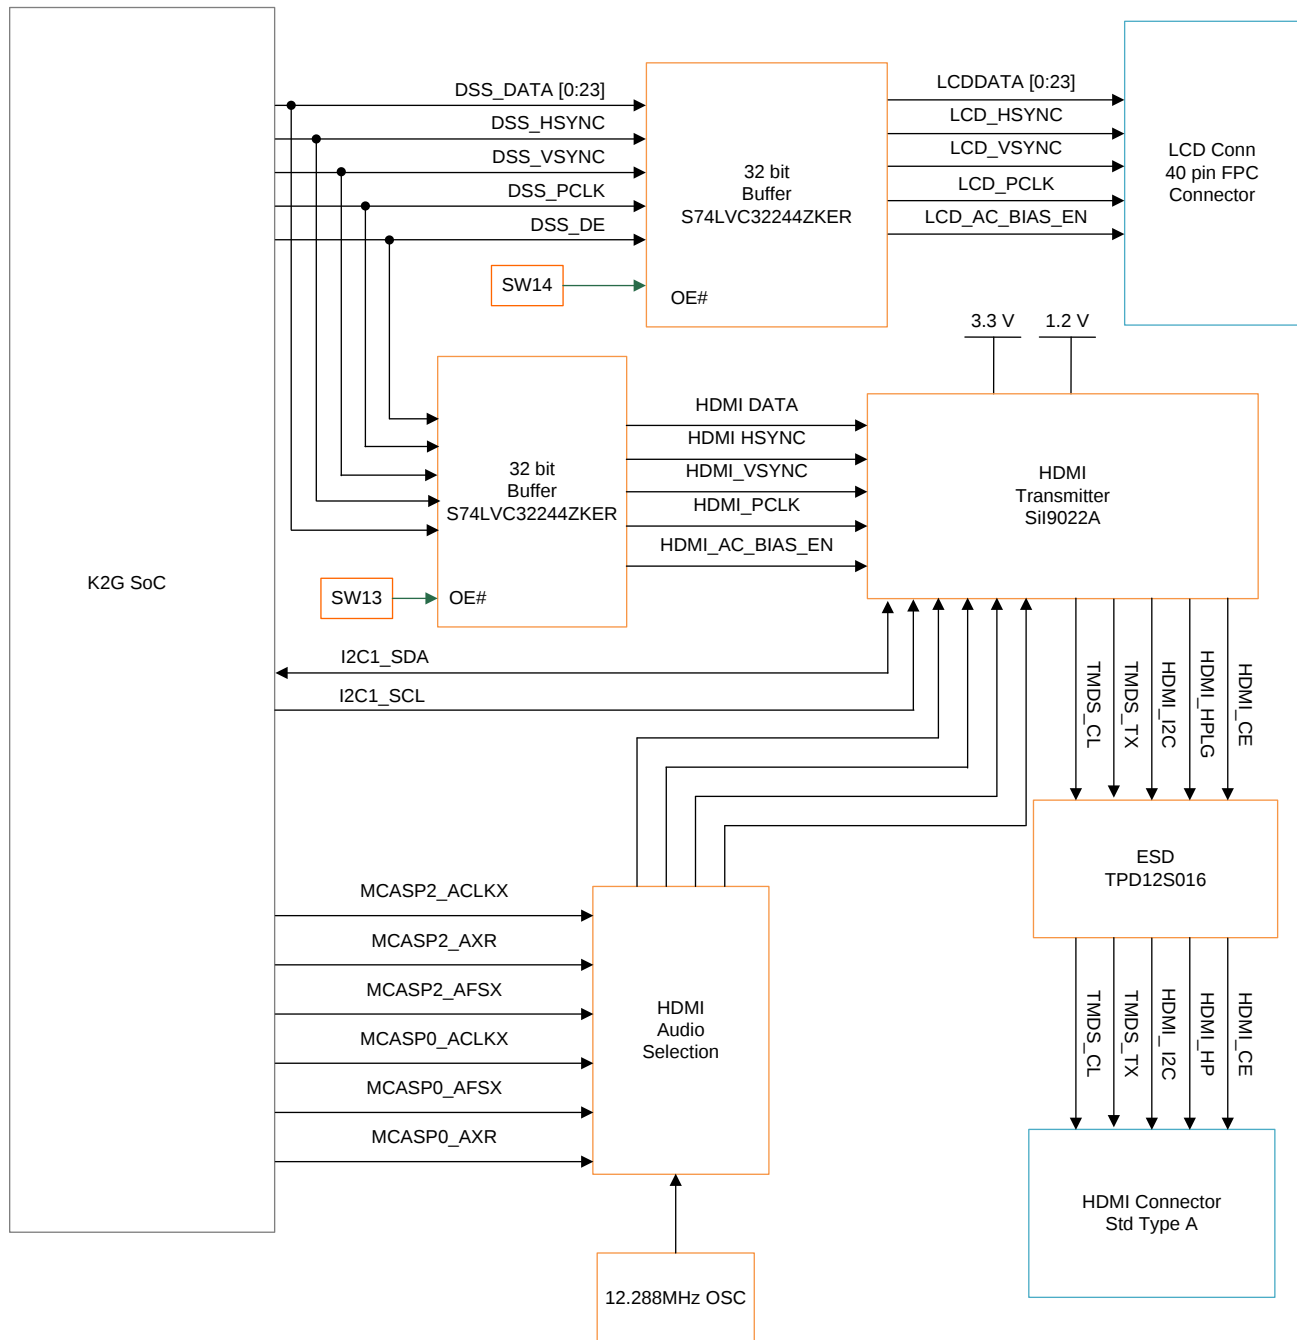Figure 21. Display Interface Block Diagram


Copyright © 2016, Texas Instruments Incorporated

Table 7. DSS Lines Between LCD and HDMI Multiplexing

SW13 and SW14 Position	Signal	Result
ON	SEL_HDMI signal is low	HDMI is enabled
OFF	SEL_LCDn signal becomes low	LCD is enabled


Table 8. HDMI Audio Line Selection Between McASP0 and McASP2

Signal	Logic	Result
DC_BRD_DET	Low	McASP2 is connected to HDMI Transmitter SiI9022A.
	High	McASP0 is connected to HDMI Transmitter SiI9022A.

3.17 Touch Connector

NOTE: The EVMK2G does not come with an LCD Touchscreen display, it should be purchased separately.


The Touch Connector interface is shown in [Figure 22](#).

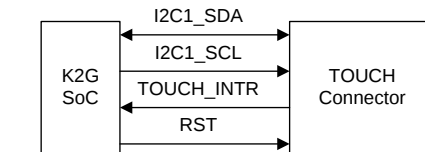Figure 22. Touch Interface Block Diagram


Copyright © 2016, Texas Instruments Incorporated

3.18 Audio Codec

The Audio Codec TLV320AIC3106IRGZT is interfaced to the McASP2 port of the processor as shown in [Figure 23](#). The ACLKX and FSX lines of McASP2 are shared between the Audio Codec, COM8, and the HDMI transmitter. Hence, a buffer with OE# is connected as shown in [Figure 23](#) for muxing. Switch SW15 is turned ON for connecting the McASP2 to the Audio Codec. Audio Line In and Line Out are provided through 3.5mm audio jacks (J32 and J33).

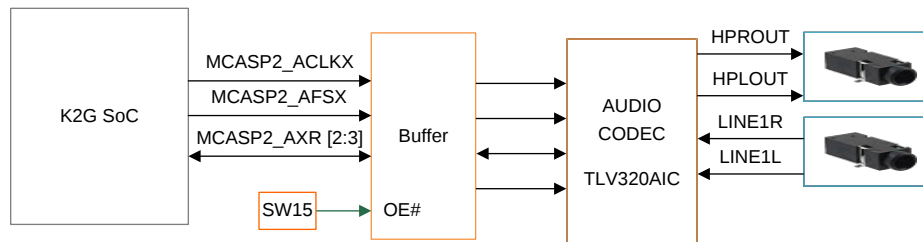Figure 23. Audio Codec Interface Block Diagram


Copyright © 2016, Texas Instruments Incorporated


Table 9. Audio Codec Multiplexing

Signal	Switch	Output
AUD_BUFF_EN	SW15 is ON	SOC_McASP2 signals are going to Audio Codec and HDMI transmitter.
COM8_BUFF_EN	SW11 is ON	COM8 signals are connected to SOC_McASP2.

3.19 COM8 Connector

The COM8 connector interface is generally used to communicate with wireless modules. It can be connected to a WiLink™ 8 module. A Level Translator SN74AVC4T245PW is used to convert the signals UART and McASP from 3.3V to 1.8V as shown in [Figure 24](#).

Figure 24. COM8 Connector Interface Block Diagram

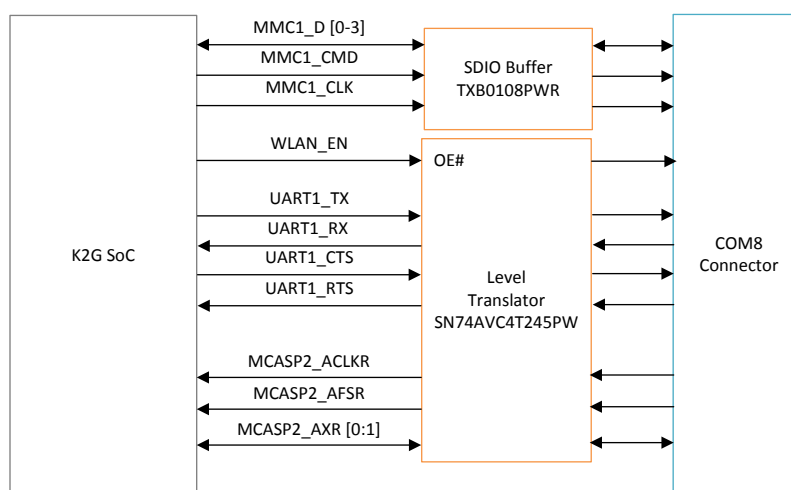


Copyright © 2016, Texas Instruments Incorporated

3.20 DCAN

The CAN transceiver ISO1050DUB is connected to DCAN0 and DCAN1 interface of the processor as shown in [Figure 25](#).

Figure 25. DCAN Interface Block Diagram

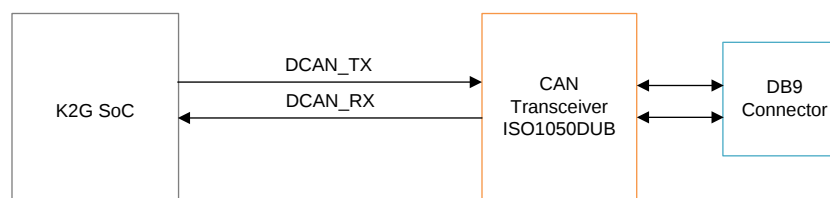


Copyright © 2016, Texas Instruments Incorporated

3.21 MLB

The Media Local Bus (MLB) interface signals are terminated in Samtec's QSH-020-01-L-D-DP-A connector as shown in [Figure 26](#).

Figure 26. MLB Interface Block Diagram

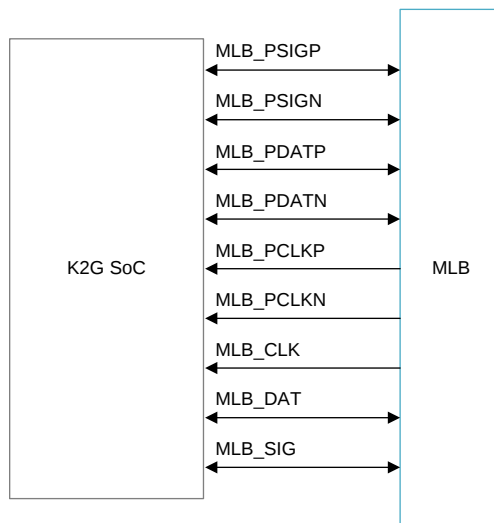


Copyright © 2016, Texas Instruments Incorporated

3.22 USB Host

USB0 shall be used for the USB Host interface in the EVMK2G. The USB0ID pin is grounded through a 0-ohm resistor in order to configure it as USB Host as shown in Figure 26. Common mode choke coil and ESD diodes (TPD2EUSB30DRTR) are used on USB data signals. A power distribution switch (TPS2051BD) is used to deliver USB power to the devices.

Figure 27. USB Host Interface Block Diagram

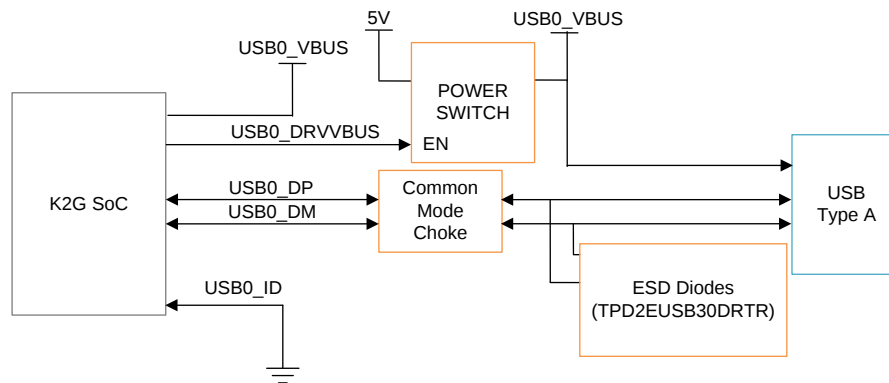


Copyright © 2016, Texas Instruments Incorporated

3.23 USB Dual Role

USB1 shall be configured as the USB Dual Role in the EVMK2G. The USB Dual Role interface is shown in Figure 28. Common mode choke coil and ESD diodes are used on USB data signals. A power distribution switch (TPS2051BD) is used to deliver USB power when it acts as a host.

Figure 28. USB Dual Role Interface Block Diagram

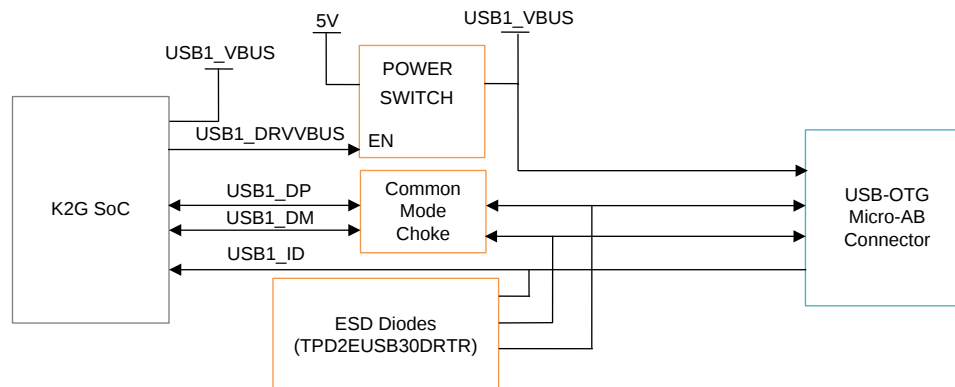

Copyright © 2016, Texas Instruments Incorporated

3.24 UART

There are three UART ports available in the EVMK2G.

UART0 debug port is multiplexed between the DB9 port, USB-to-UART converter (CP2105), and the Serial Expansion header as shown in [Figure 29](#).

Table 10. UART0 Multiplexing

Signal	SW12	Logic	SoC UART0 Pins Connected To
UART0_TXVR_EN	ON	Low	DB9 connector via RS-232 chip.
	OFF	High	USB-to-UART converter CP2105.


UART1 is connected to the COM8 connector as shown in [Figure 30](#). Connection to COM8 and eMMC is muxed and is explained in [Section 3.13](#).

Table 11. UART1 Multiplexing


Signal	Logic	Output
WLAN_TRANS_EN	Low	SoC UART1 pins are connected to COM8
	High	MMC1 connected

UART2 is muxed between the BMC UART1 and the 6-pin header, as shown in [Figure 31](#) and explained in [Section 3.5](#).


Figure 29. UART0 Interface Block Diagram

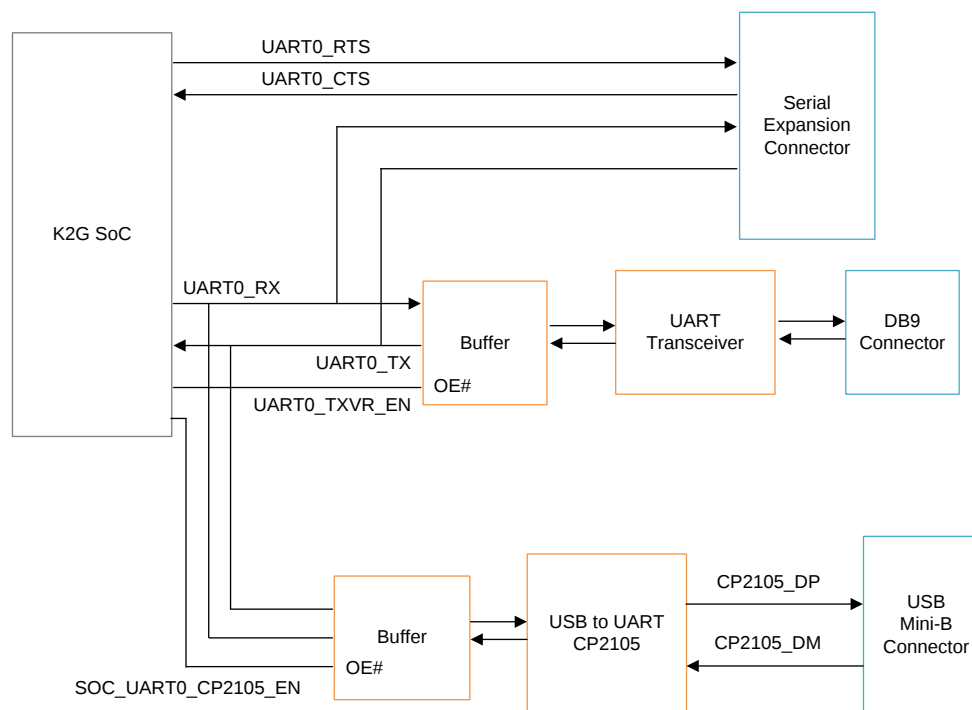

Copyright © 2016, Texas Instruments Incorporated

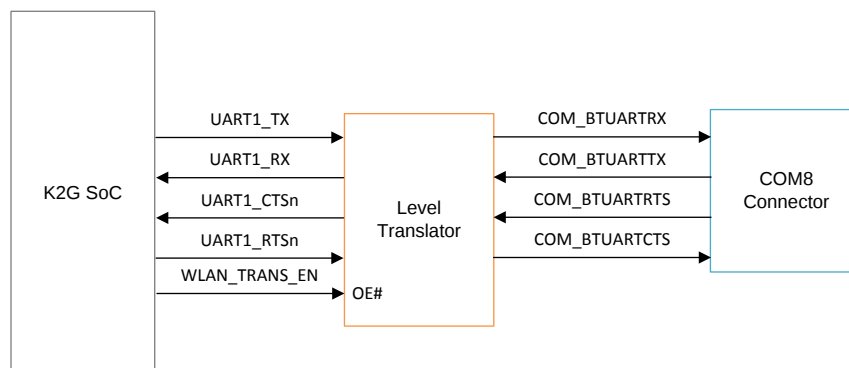Figure 30. UART1 Interface Block Diagram


Copyright © 2016, Texas Instruments Incorporated

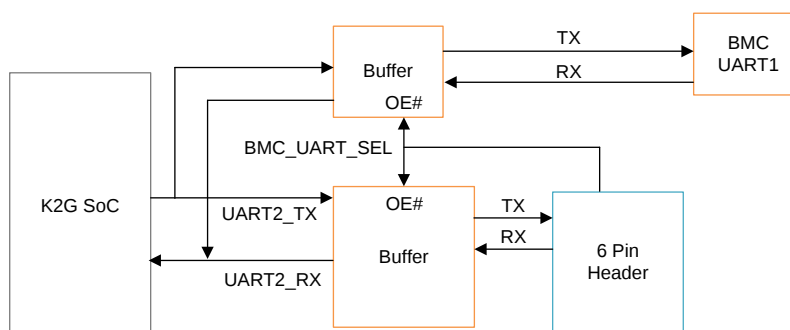
Figure 31. UART2 Interface Block Diagram


Copyright © 2016, Texas Instruments Incorporated

3.25 Audio Expansion Connector

The EVMK2G consists of an audio expansion connector for an audio daughter card. Audio expansion connector contains McASP0, McASP1, and McASP2 signals along with the I2C1, SPI2, and GPIO signals as shown in [Figure 32](#).

Figure 32. Audio Expansion Connector Interface Block Diagram

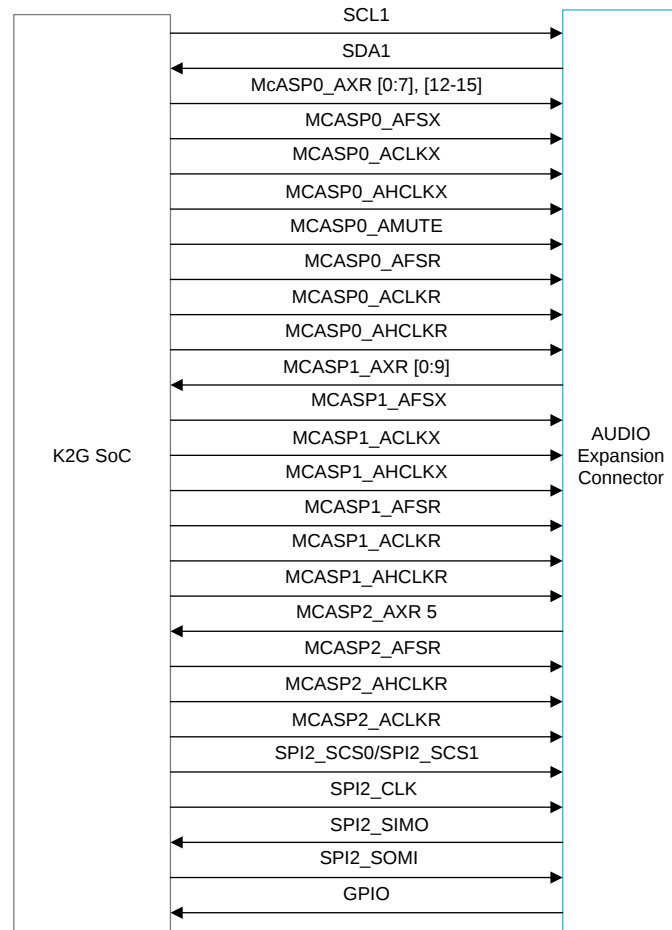


Copyright © 2016, Texas Instruments Incorporated

3.26 Serial Expansion Connector

The EVMK2G consists of a Serial Expansion connector that contains I2C0, SPI0, UART0, Timer 0, Timer1, eHRPWM3, eHRPWM4, eHRPWM5, and eCAP signals as shown in [Figure 33](#).

Figure 33. Serial Expansion Connector Interface Block Diagram

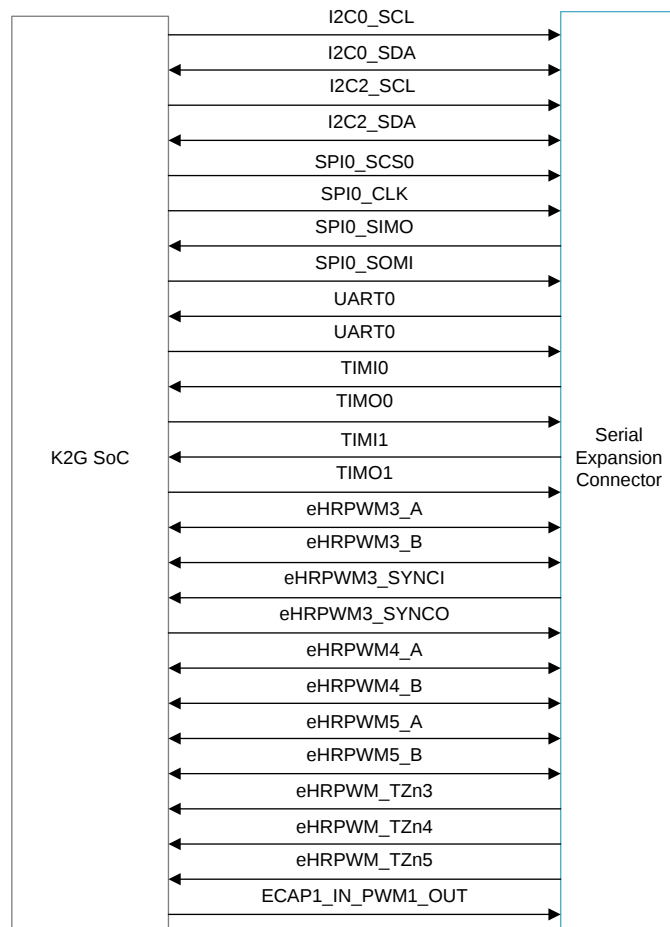

Copyright © 2016, Texas Instruments Incorporated

3.27 I2C Address Mapping

The address mapping for the I2C interface on the EVMK2G is shown in [Table 12](#) and [Table 13](#).

Table 12. SoC Address Table

I2C Used	Device	Address
I2C0	EEPROM	0x50, 0x51
	BMC	0x0 (Programmable)
	Serial Expansion Connector	TBD
	PCIe Connector	TBD
I2C1	HDMI Transmitter	0x3B, 0x3F, 0x62
	Audio Codec	0x1B
	Touch Screen	0x70, 0x71
	I/O Expander	0x20
	Temperature Sensor	0x48
	MLB Connector	TBD
	Audio Expansion Connector	0x4A, 0x4B, 0x4C, 0x4D
	Clock Generator	0x4F
I2C2	PMIC	0x2D (General Purpose) 0x12 (Voltage Scaling)


Table 13. BMC I2C Address Table

BMC I2C Used	Device	7-Bit Address
I2C0	PMBUS	0x40 : 3.3V
		0x41 : CVDD
		0x42 : CVDD1
		0x43 : 1.8V
		0x44 : DVDD_DDR
I2C1	Processor	Always Master

3.28 McASP Configuration

Table 14. McASP Configuration

McASP Port	Device	Clock Master
McASP0 RX	I2S Header	I2S Header
McASP0 TX	DAC	McASP0 TX
McASP1 RX	ADC- PCM1865 x2	McASP1 RX
McASP2 TX	HDMI Transmitter Audio Codec AIC3106	McASP2 TX McASP2 TX
McASP2 RX	DIR9001	DIR9001
	Audio Codec AIC3106	McASP2 Rx (SYNC mode)
	COM8	COM8

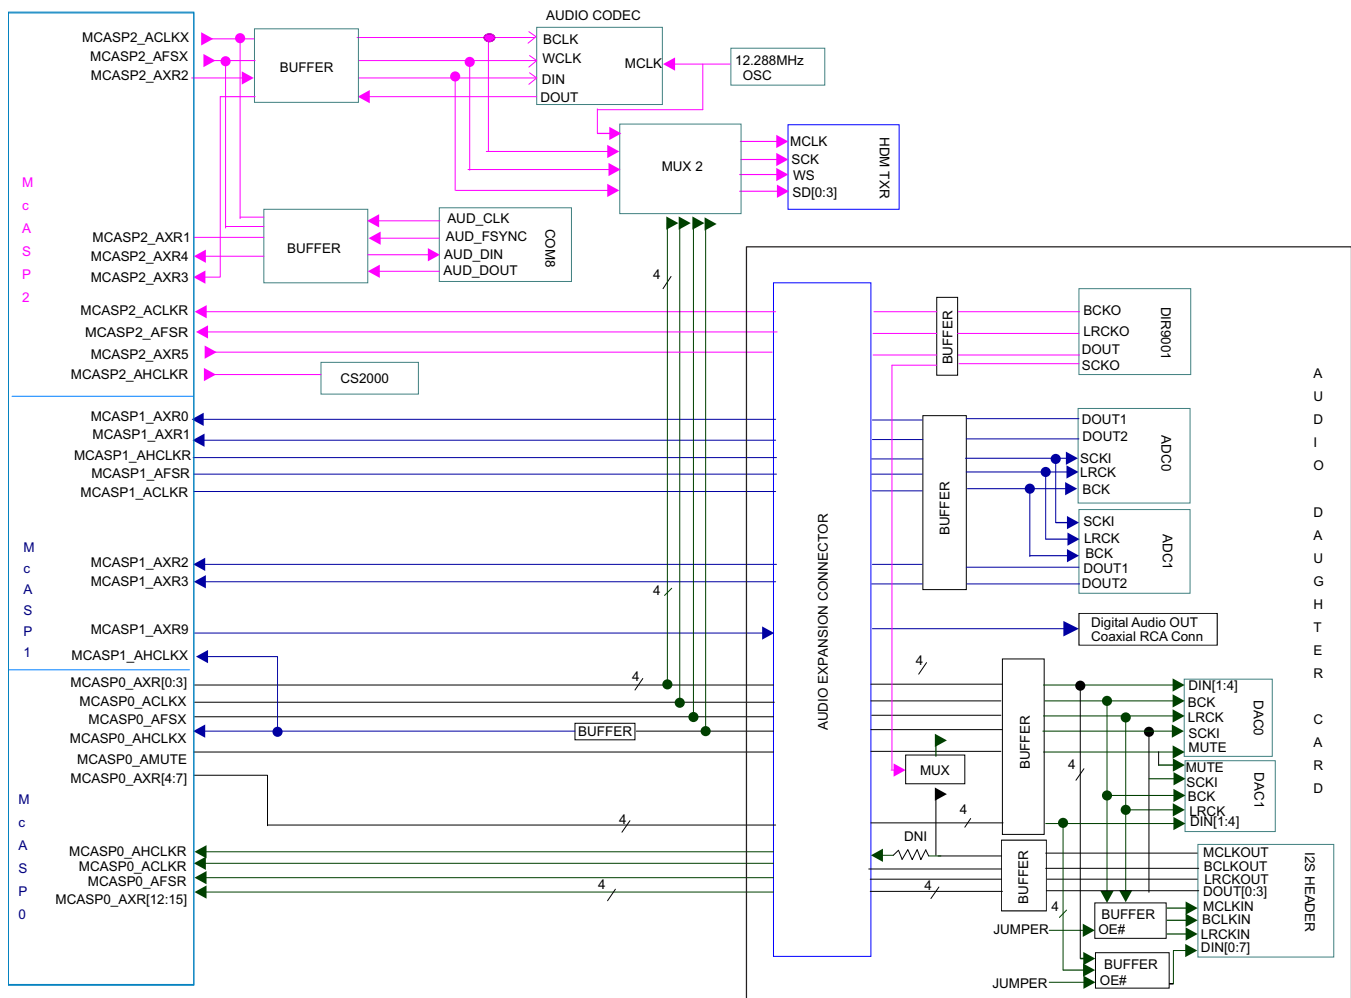Figure 34. McASP Interface Block Diagram


Copyright © 2016, Texas Instruments Incorporated

4 Power Supply

NOTE: Always use the power supply (CUI, Inc., part number SDI65-12-U-P5) or an equivalent 12V/5A model with the applicable regional product regulatory/safety certification standards such as (by example) UL, CSA, VDE, CCC, PSE, and so on.

The EVMK2G can be powered from a single +12V/5.0A DC (60W) external power supply connected to the DC power jack (J3). Internally, +12V input is converted into required voltage levels using local DC-DC converters. The regulators used in the EVM are listed in [Table 15](#).

Table 15. EVMK2G Regulators

Regulator	Purpose
TPS54429	3V3 Generation
TPS54620RGY	5V Generation
LM22675MR	3V3 Generation for BMC
TPS650006RTET	For on-board emulator circuitry
TPS79601DCQR	COM8
TPS71712	HDMI
TPS61081	LCD Backlight
LP3985IM5-3.0	BMC Display
TPS659118	All voltages for processor
LP2996A	DDR
TLV707085DQNT	PCIe, USB

The power requirements of the processor are met by the TPS659118 (U32) Power Management IC (PMIC). The generation and sequencing requirements of various powers to the 66AK2Gxx processor are also handled by the TPS659118. The TPS659118 is controlled by the I2C0 interface of the 66AK2Gxx.

- Core Voltage
 - PMIC_VDD1
 - PMIC_VDD2
 - CVDD
- LDO Voltages
 - LDO1_1V8
 - LDO2_1V8
 - LDO3_1V8
 - LDO4_1V8
 - LDO5_3V3
 - LDO6_3V3
 - LDO7_3V3
 - LDO8_3V3
- I/O Voltages
 - PMIC_VIO
- RTC Voltages
 - VRTC

4.2 Power Supply Calculation

Enter the device active percentage of utilization (1 to 100) to obtain the total power consumption.

Table 16. Power Supply Calculation

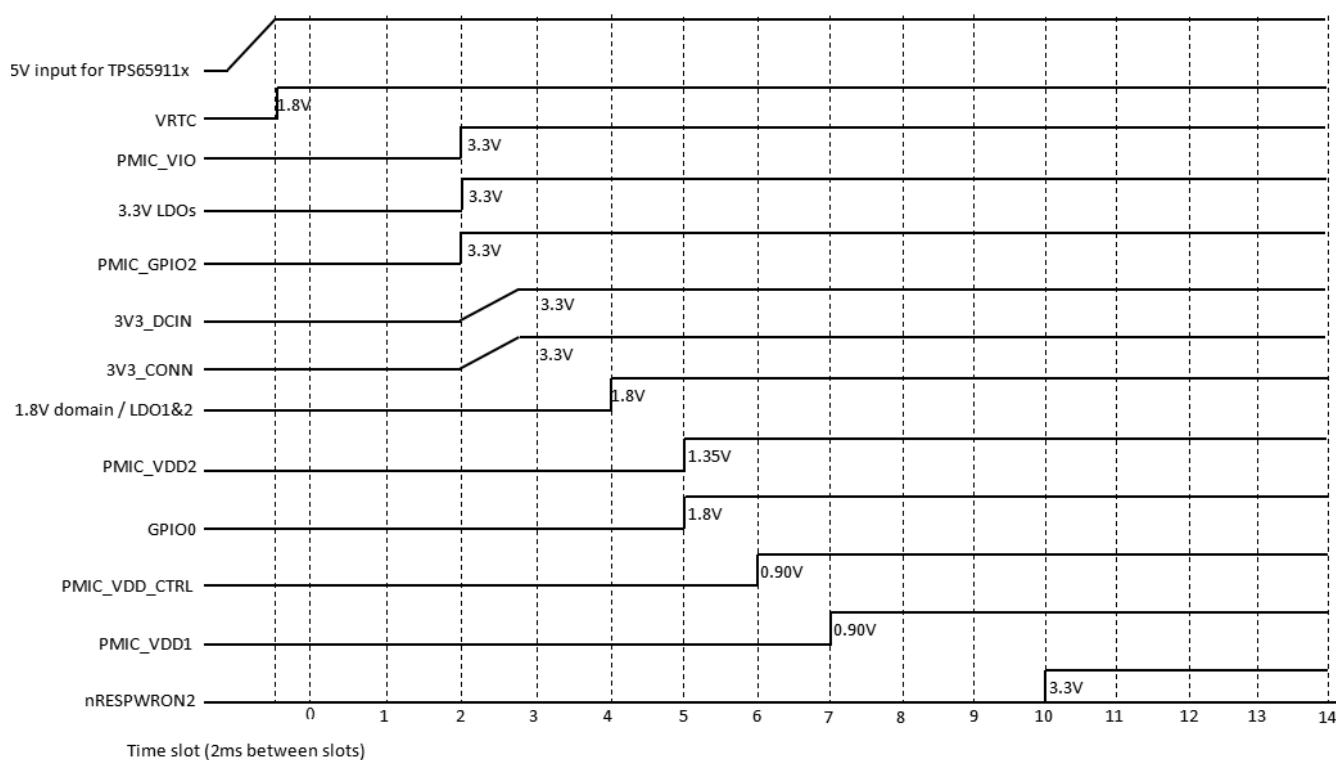
Device	Part Number	% Utilization	Current Consumption in mA (Maximum)	Current Consumption in mA (Typical)
		Active	12V Rail	12V Rail
Processor	66AK2Gxx	80	480.5495648	480.5495648
XDS200_Processor	AM1802BZWTD3	50	29.87481972	29.87481972
BMC_Processor	TM4C129XNCZADI3	80	232.9411765	232.9411765
CPLD	XC2C64A-5VQ44C	50	4.360465116	4.360465116
DDR3 *5	MT41K512M8RH-125:E	80	205.5612403	195.3786625
SDRAM	MT48LC4M16A2B4-75G	50	50.87209302	33.91472868
Ethernet PHY	KSZ9031RNXCA	50	28.74972222	28.74972222
Buffer *2	SN74LVC32244ZKER	80	96.89922481	87.20930233
HDMI Transmitter	SiI9022A CNU	80	31.1627907	24.93023256
12.288-MHz Oscillator	12.288MHZ CFPS-73I B	50	3.63372093	2.906976744
32.768-kHz Oscillator	AS EK-32.768KHZ-LRT	50	0.566176471	0.275
Backlight Power	TPS61081DRCT	50	43.60465116	35.12596899
LCD Module	NHD-4.3-480272EF-ATXL-CTP	50	7.509689922	6.298449612
QSPI Flash	S25FL512SAGMFI011	50	24.2248062	24.2248062
DCAN *2	IS O1050	50	1.356589147	1.356589147
Audio Codec	TLV320AIC3106IRGZT	50	2.00500646	2.00500646
Level Translator	TWL1200ZQCR	50	11.85077519	11.85077519
I2C EEPROM	AT24CM01	50	0.726744186	0.726744186
Clock Generator	CDCM6208V2RGZT	80	116.0573333	83.11111111
Clock Synthesizer	CS2000CP-CZZ	50	5.559593023	2.906976744
DAC	DAC8550IBDGKT	50	0.060562016	0.060562016
VCXO	E6718LF	50	1.453488372	1.453488372
USB-to-UART Module	CP2105	50	4.481589147	4.481589147
UART Transceiver *2	MAX3232ECD	50	0.484496124	0.145348837
UART Transceiver	MAX3221CPWR	50	0.161764706	0.048529412
SPI EEPROM	M95512-RMN6TP	50	4.84496124	4.84496124
NAND Flash	MT29F2G16ABAEAWP-IT:E	80	13.56589147	11.62790698
eMMC	EMMC16G-S100	80	68.65064599	68.65064599
SPI Flash	IS 25CD010-JNLE	50	7.26744186	3.63372093
BMC I2Cx Bus Repeater *2	TCA9517DGKR	50	4.040127679	2.42248062
I2C Buffer Repeater	TCA9517DGKR	50	1.21124031	1.21124031
LCD Module	NHD-C12832A1Z-NSW-BBW-3V3	50	5.661764706	4.852941176
COM8 Module	TPS79501DCQR	50	212.2416021	212.2416021
USB	—	50	244.6705426	243.4593023
PCIe Connector	—	50	1504.166667	1181.9444448
MLB Connector	—	50	56.52777778	56.52777778
DCAN Connector *2	—	50	61.11111111	61.11111111
Audio Daughter Card	—	80	600.003876	480.003876
MicroSD Card	—	80	31.00775194	31.00775194
GPIO Expander	TCA9555	50	38.75968992	38.75968992
Temperature Sensor	TMP102	20	0.001453488	0.001453488
LEDs ×7	—	50	16.95736434	16.95736434

Table 17. Total Current and Power Consumption

	Maximum	Minimum
Total Current Consumption in mA	4255.397993	3714.144867
Total Power Consumption in mW	51064.77591	44569.73841

4.3 Power-Up Sequence

The power-up sequence for the EVM, shown in Figure 36, is provided by the PMIC. This sequence is consistent with the power sequence requirements for the 66AK2Gx found in the data manual. The Power input to the PMIC is enabled by the BMC. The BMC is powered on as soon as the board is powered on. The firmware flashed in the BMC enables power to the PMIC.

Figure 36. Power-Up Sequence Diagram


5 Booting


5.1 Boot Mode Selection

The DIP Switch/Boot mode switch (SW3) is used for selecting the boot mode. The Boot mode configurations are given in [Section 7.3](#).

5.2 Matrix Demonstrations

To boot Linux images and run matrix demonstrations on the board, follow these instructions:


1. Set DIP switch (SW3) to 0111 (MSB first), as shown, to select MMC/SD boot mode.

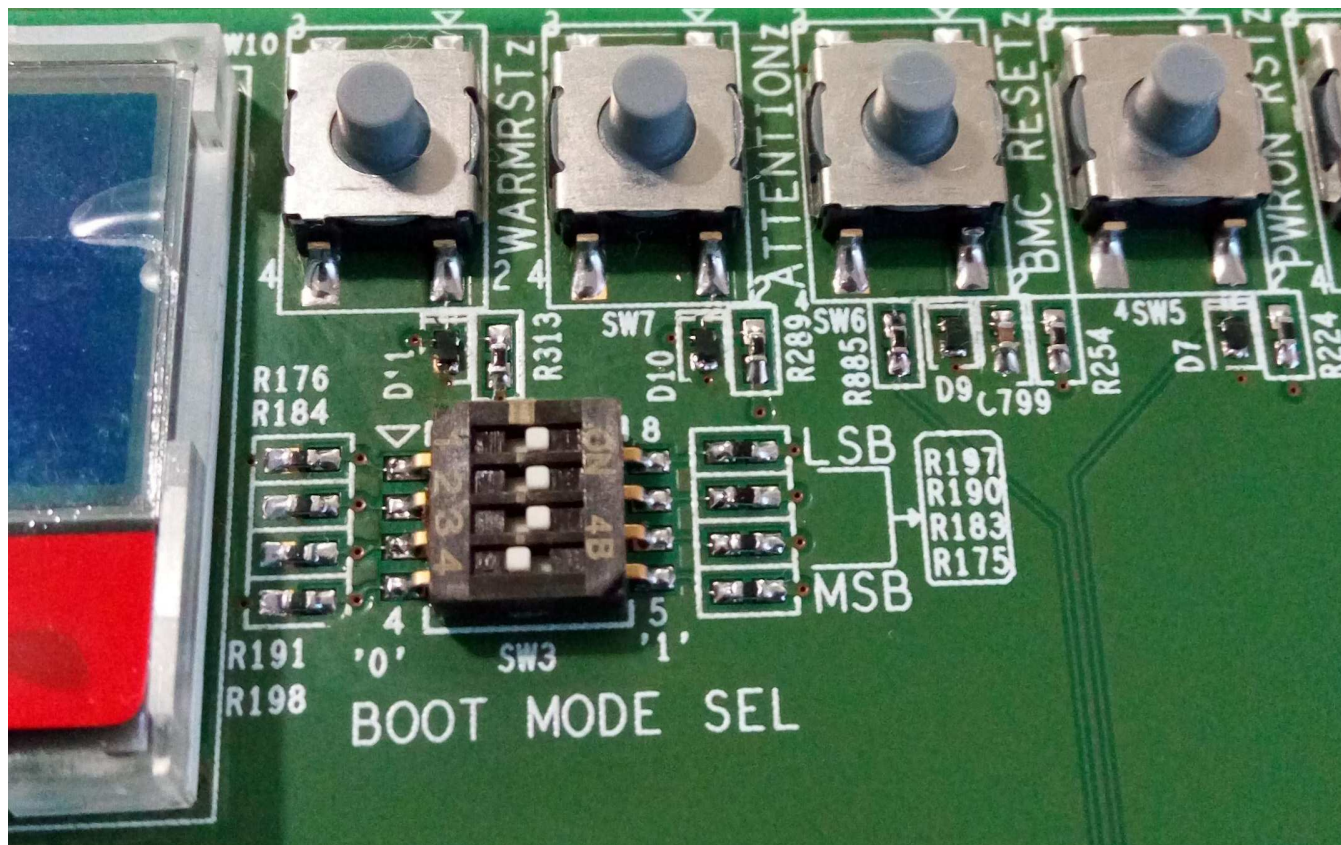


2. Insert the SD card.




3. Using the Ethernet cable, connect the EVM to a network containing a PC running a DHCP server.

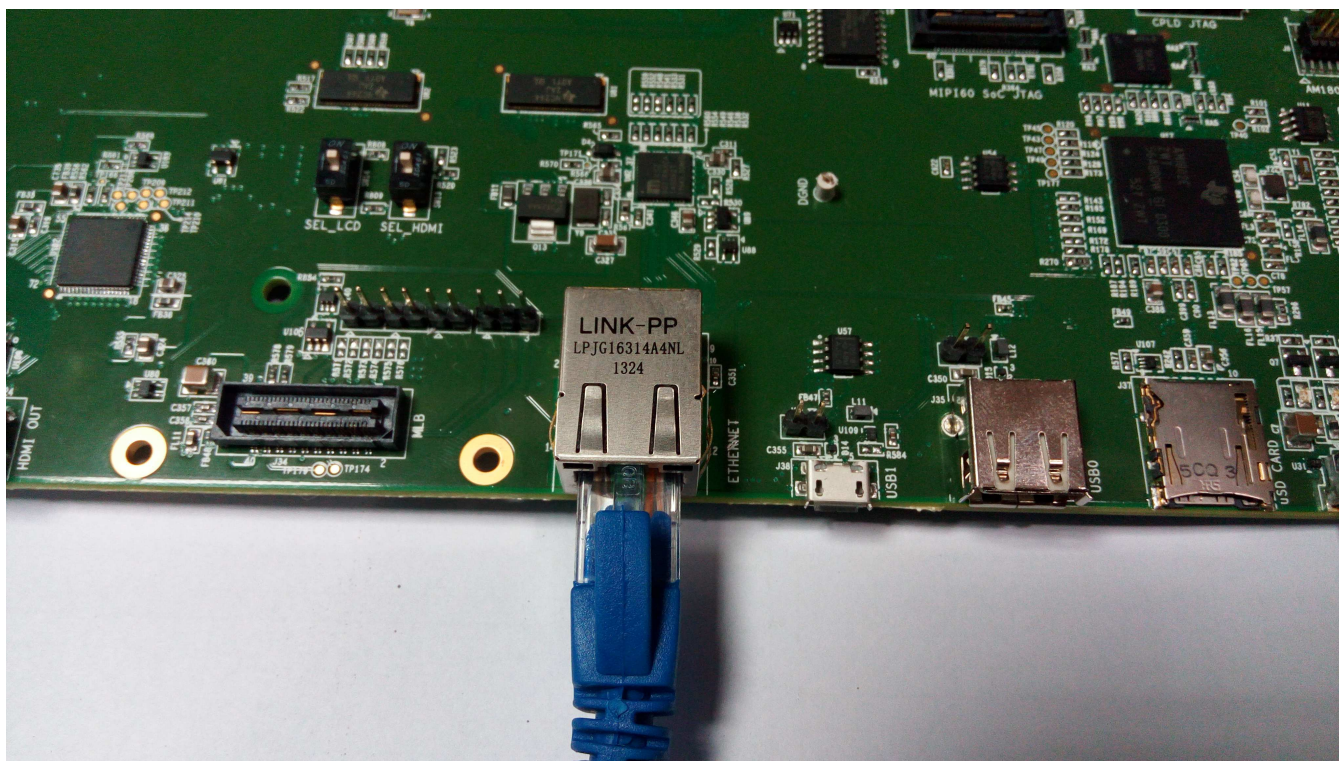


4. Connect 12V power cable to the DC power jack (J3). Slide the power switch SW1 to the ON position marked on the silkscreen. LED LD9 lights.

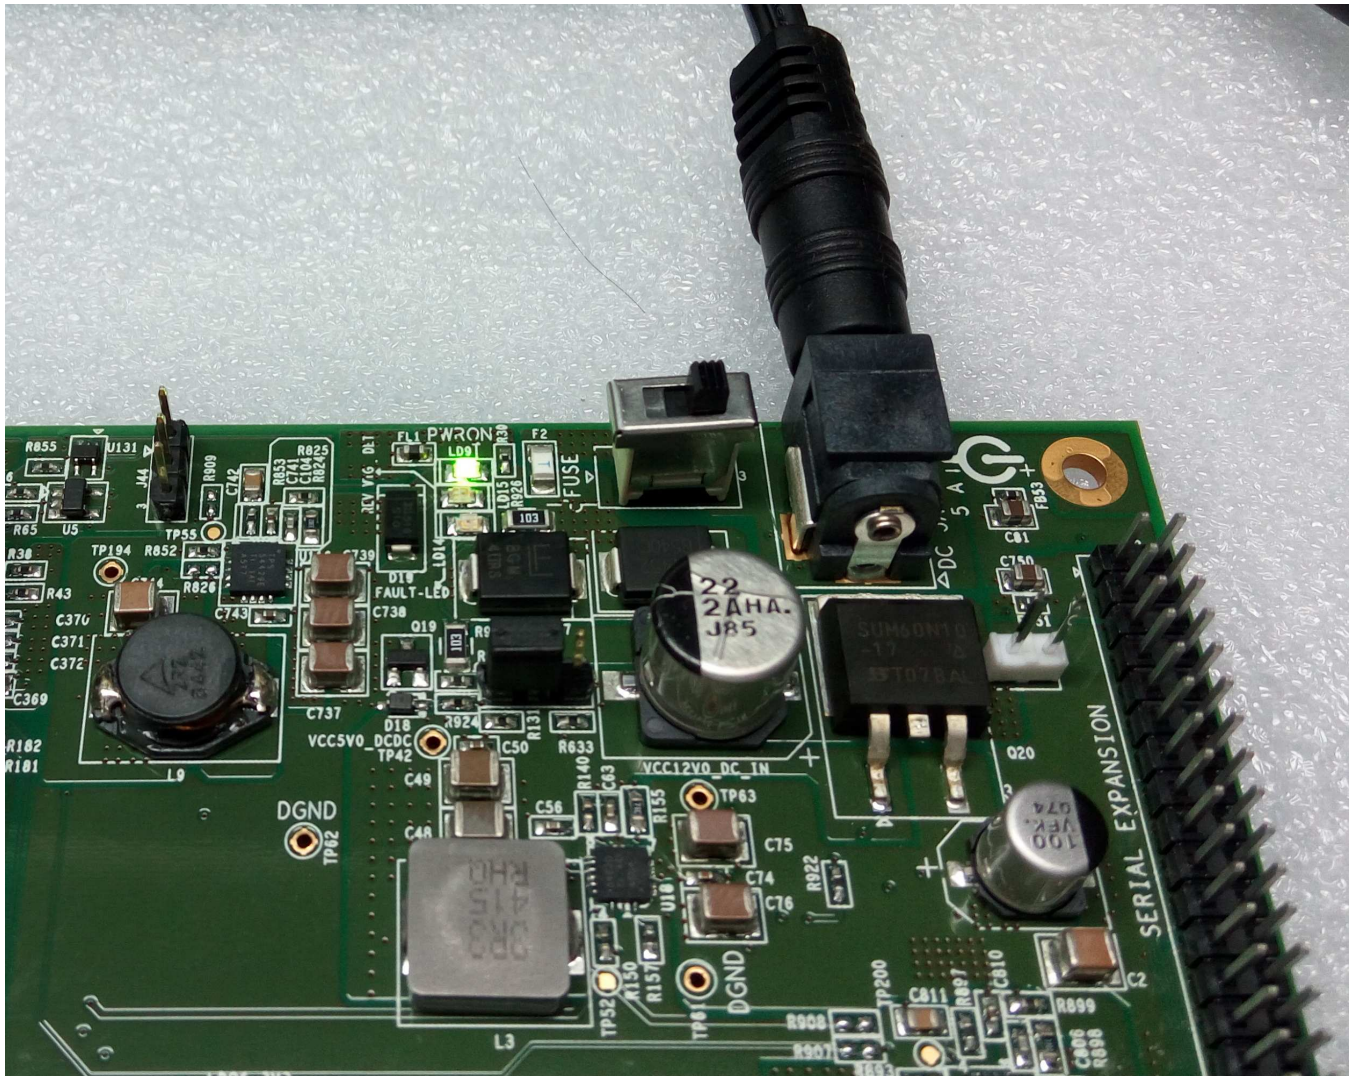

5. Note the IP address displayed on the LCD screen. Enter this address into a web browser connected to the same network as the EVM.

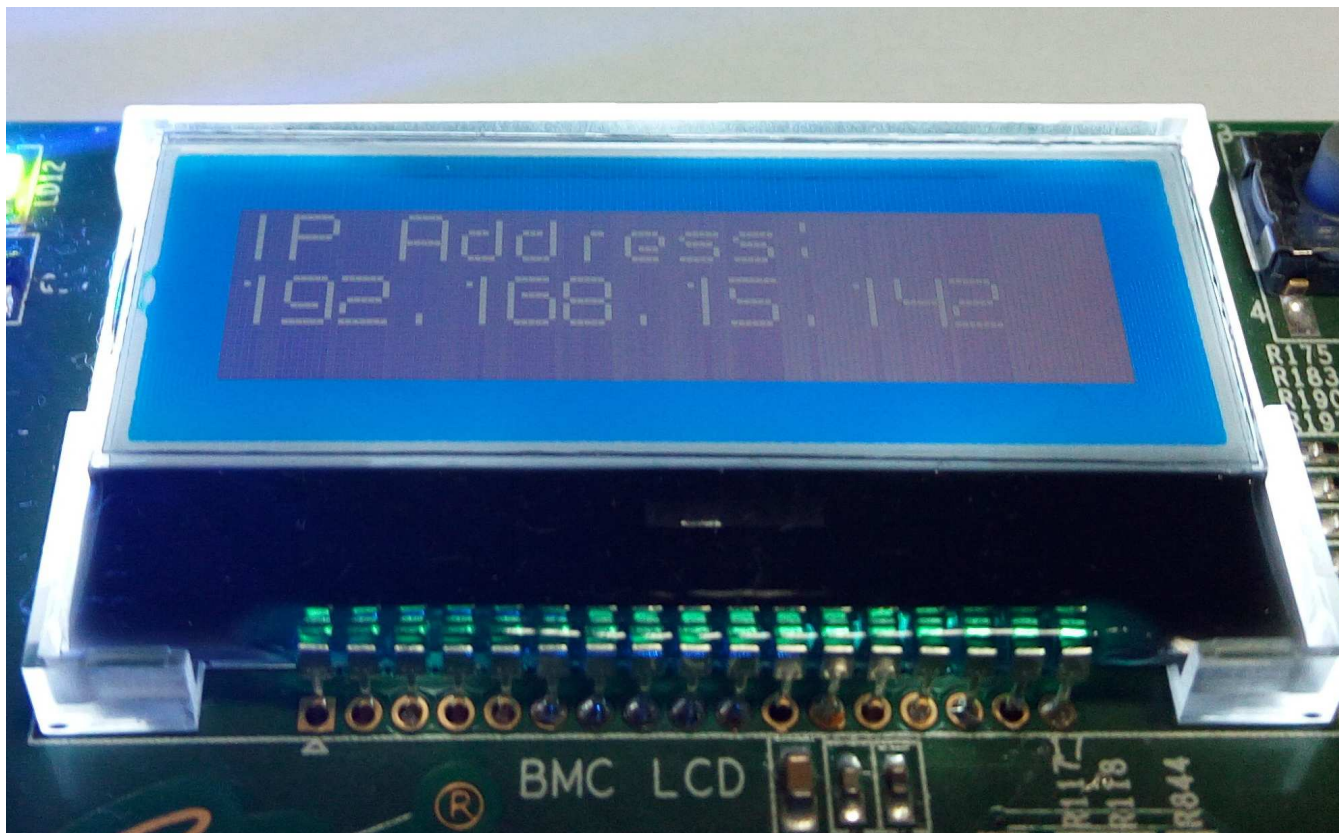

6. The host PC connects to the EVM, and the demonstration may now be run.

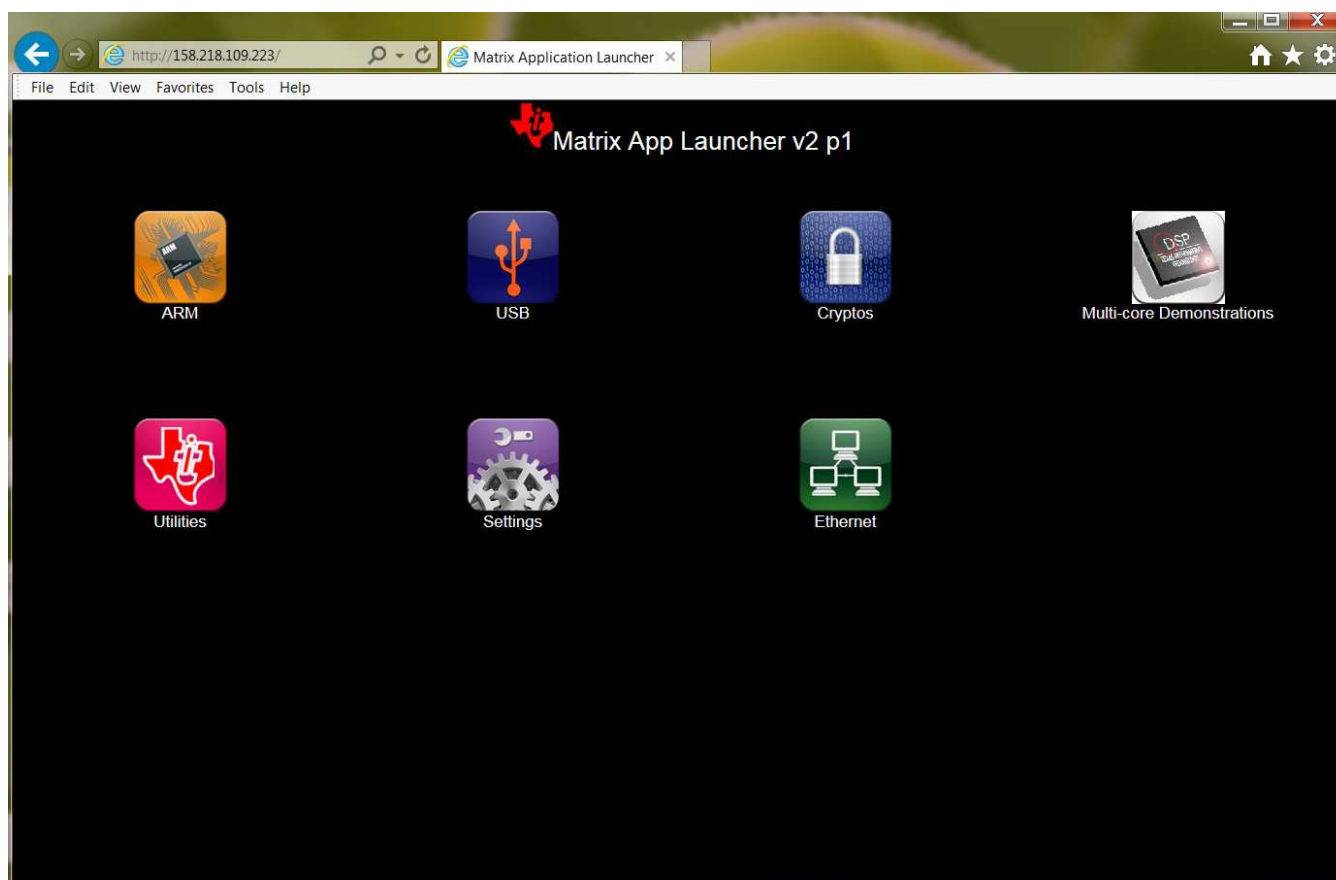

6 Connector Descriptions

The EVMK2G board has several connectors that provide access to various interfaces on the board, as listed in [Table 18](#) and shown in [Figure 37](#).

Table 18. EVMK2G Board Connectors

Connector	Part Number	Pins	Function
J1	548190519	7	Mini USB B-Type for XDS200
J2	MEC6-150-02-S-D-RA1-TR	100	COM8 connector
J3	RAPC722X	3	DC Power input jack connector
J5	10061913-100CLF	38	PCI Express connector
J19	QSH-030-01-L-D-A	60	MIPI 60 -pin SoC JTAG connector
J21	68610614122A	8	Touch Screen connector
J22	62684-401100ALF	40	LCD connector
J23	54819-0572	9	Mini USB B-Type for CP2105
J31	LPJG16314A4NL	16	RJ45 Ethernet connector
J32, J33	SJ-3524-SMT-1	4	Audio Line In and Line Out connectors
J34	QSH-020-01-L-D-DP-A	44	MLB connector
J35	87583-2010BLF	6	USB Type A - Host
J36	10029449-001RLF	23	HDMI connector
J37	DM3AT-SF-PEJM5	14	SD/MMC
J38	ZX62-AB-5PA(11)	8	USB Micro for Dual Role
P1	182-009-113R531	11	UART0 Over DB9
P2, P3	182-009-113R531	11	DB9 connectors for DCAN0 and DCAN1


6.1 DC Jack (J3)

The EVMK2G is powered by inserting the 12V-DC adapter into this power jack.

6.2 Mini USB for On-board XDS (J1) and CP2105 (J23)

The EVMK2G has 2 mini USB connectors. J1 is for on-board XDS200 circuit. J23 is for SoC UART0 and BMC console over USB.

Figure 37. EVMK2G Board Connectors

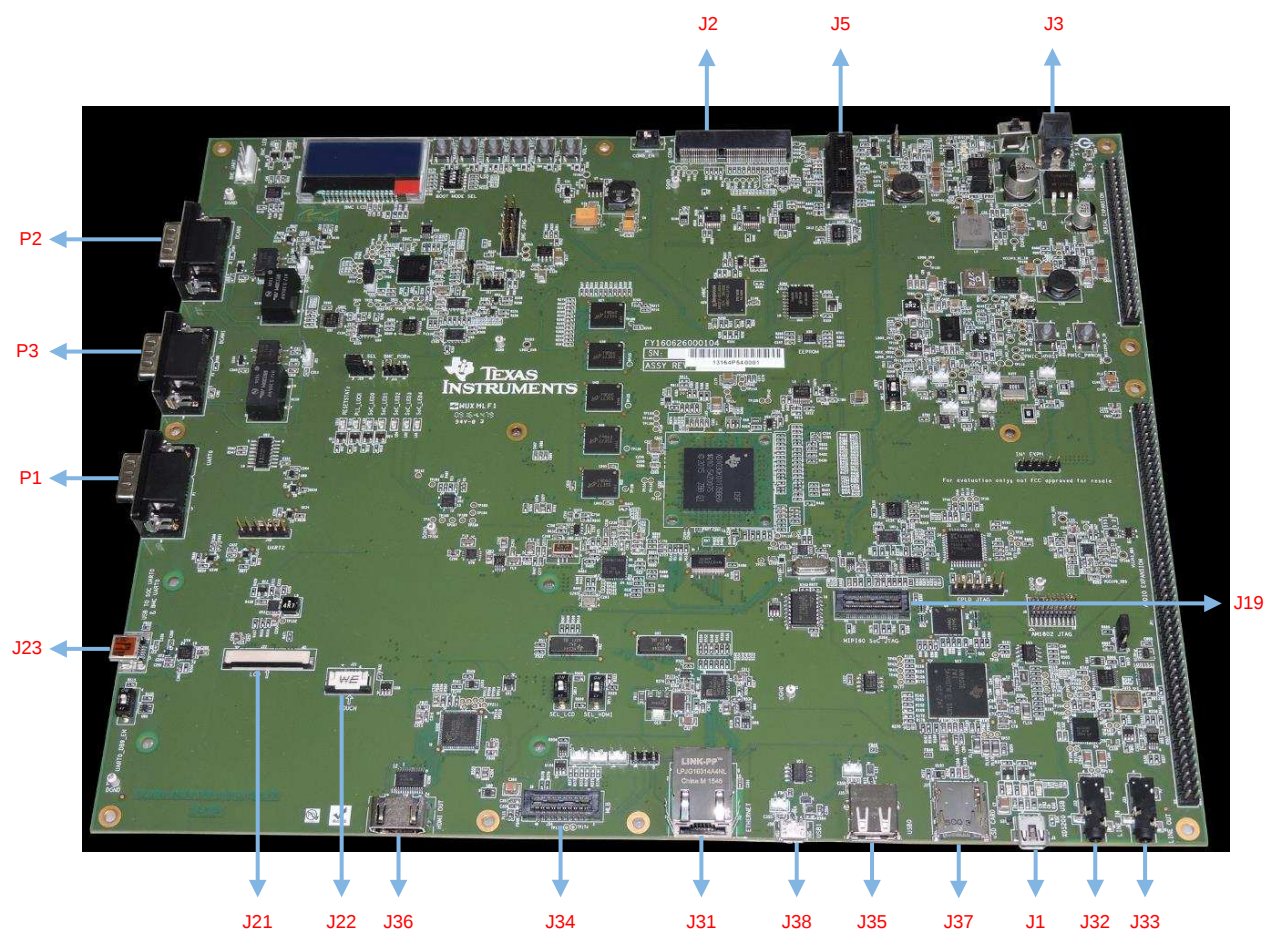

6.3 COM8 (J2)

The EVMK2G has a COM8 connector for interfacing to TI WiLink 8 modules. The pin out is given in [Table 19](#).

Table 19. COM8 (J2) Pin List

Pin	Description	Pin	Description	Pin	Description	Pin	Description
1	COM_SLOW_CLK	26	COM_SDIO_D0	51	NC	76	COM_BTUARTDEBUG
2	DGND	27	NC	52	COM_AUD_CLK	77	DGND
3	DGND	28	COM_SDIO_D1	53	NC	78	COM_GPIO9
4	COM_WL_RST	29	NC	54	COM_AUD_FSYNC	79	NC
5	VCOM_BAT	30	COM_SDIO_D2	55	NC	80	NC
6	DGND	31	NC	56	COM_AUD_IN	81	NC
7	VCOM_BAT	32	COM_SDIO_D3	57	NC	82	NC
8	V1_8D	33	NC	58	COM_AUD_OUT	83	DGND
9	DGND	34	COM_WL_IRQ	59	NC	84	NC
10	NC	35	TP17	60	DGND	85	NC
11	COM_WL_RS232_TX	36	NC	61	NC	86	NC
12	NC	37	DGND	62	TP14	87	DGND
13	COM_WL_RS232_RX	38	NC	63	NC	88	NC
14	NC	39	TP18	64	DGND	89	COM_BTRST
15	COM_WL_UART_DBG	40	NC	65	NC	90	NC
16	NC	41	NC	66	COM_BTUARTTX	91	NC
17	NC	42	DGND	67	NC	92	DGND
18	DGND	43	NC	68	COM_BTUARTRX	93	NC
19	DGND	44	NC	69	NC	94	NC
20	COM_SDIO_CLK	45	NC	70	COM_BTUARTCTS	95	DGND
21	NC	46	NC	71	NC	96	COM_GPIO11
22	DGND	47	DGND	72	COM_BTUARTRTS	97	DGND
23	NC	48	TP15	73	NC	98	COM_GPIO12
24	COM_SDIO_CMD	49	NC	74	NC	99	NC
25	NC	50	TP16	75	NC	100	COM_GPIO10

6.4 PCI Express (J5)

The EVMK2G has x1 PCI express interface to connect PCIe add-on cards. The pin out is given in [Table 20](#).

Table 20. PCI Express (J5) Pin List

Pin	Description	Pin	Description
A1	PRSNT#	B1	VCC12V0
A2	VCC12V0	B2	VCC12V0
A3	VCC12V0	B3	VCC12V0
A4	GND	B4	GND
A5	GND	B5	SCL
A6	TDI	B6	SDA
A7	NC	B7	GND
A8	TMS	B8	VCC3V3
A9	VCC3V3	B9	GND
A10	VCC3V3	B10	VCC3V3
A11	CON_PORz	B11	WAKEn
A12	GND	B12	NC
A13	CLKP_HCSL_100MHz	B13	GND
A14	CLKN_HCSL_100MHz	B14	PCIe_TXN0
A15	GND	B15	PCIe_TXP0
A16	RXN0	B16	GND
A17	RXP0	B17	PRSNT1#
A18	GND	B18	GND
SH1	PCIe_GND	SH2	PCIe_GND

6.5 JTAG MIPI-60 (J19)

The EVMK2G has an MIPI connector for JTAG communication to the SoC through an external emulator. The pin out is given in [Table 21](#).

Table 21. JTAG MIPI-60 (J19) Pin List

Pin	Description	Pin	Description	Pin	Description
1	VCC	21	EMU01	41	EMU13
2	TMS	22	NC	42	NC
3	TCK	23	EMU04	43	EMU14
4	TDO	24	NC	44	NC
5	TDI	25	EMU05	45	EMU15
6	MIPI_JTAG_RESET	26	NC	46	NC
7	RTCK	27	EMU06	47	EMU16
8	TRST	28	NC	48	NC
9	NC	29	EMU07	49	EMU17
10	NC	30	NC	50	NC
11	NC	31	EMU08	51	EMU18
12	VCC	32	NC	52	NC
13	EMU02	33	EMU09	53	EMU19
14	NC	34	NC	54	NC
15	GND	35	EMU10	55	NC
16	GND	36	NC	56	NC
17	EMU03	37	EMU11	57	GND
18	NC	38	NC	58	VCC
19	EMU00	39	EMU12	59	NC
20	NC	40	NC	60	NC

6.6 LCD (J22) and Touch Screen (J21)

The EVMK2G has a 40-pin FPC LCD and a 6-pin touch screen connector. A 4.3-inch LCD can be connected to the EVM through the connectors shown in [Figure 38](#). The pin out is given in [Table 22](#).

Figure 38. LCD (J22) and Touch Screen (J21) Connectors



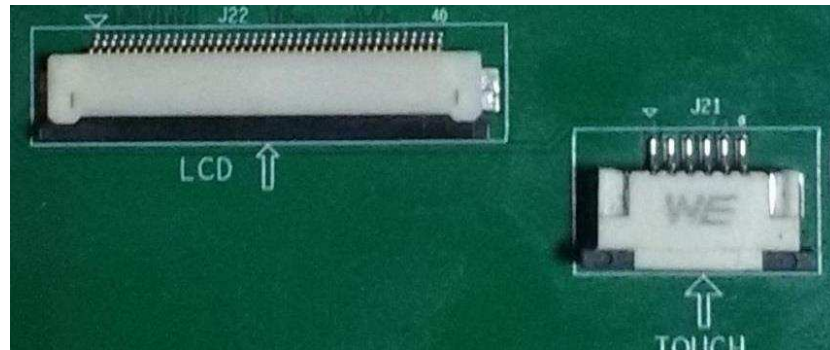


Table 22. LCD (J22) and Touch Screen (J21) Pin List

LCD Connector (J22)		Touch Screen Connector (J21)	
Pin	Description	Pin	Description
1	LED-	1	VDD
2	LED+	2	GND
3	GND	3	CLK
4	VDD	4	DATA
5-12	R0-R7	5	TOUCH INTERRUPT
13-20	G0-G7	6	RESET
21-28	B0-B7		
29	GND		
30	CLK		
31	DISP		
32	HSYNC		
33	VSNC		
34	DE		
35	NC		
36	GND		
37	NC		
38	NC		
39	NC		
40	NC		

The LCD connection procedure is:

1. Lift the tab of the connectors J22 and J21.
2. Safely insert the LCD and Touch Flex cables. Make sure the cables are correctly fitting in the connector.
3. Close the tab.
4. Install the brackets.

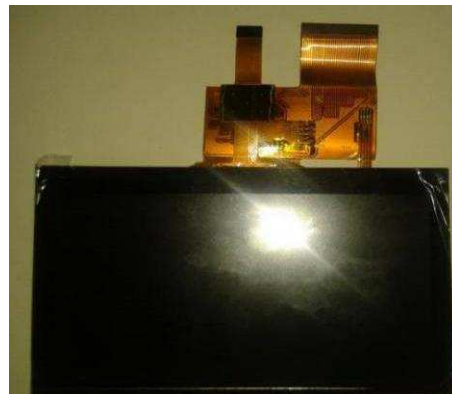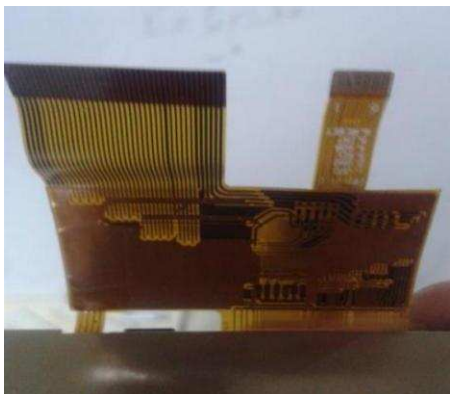

6.7 RJ45 Ethernet (J31)

The EVMK2G has one RJ45 connector with magnetics for Ethernet interface. It is connected to the Ethernet PHY Transceiver through parallel termination. The pin out is given in [Table 23](#).

Table 23. RJ45 Ethernet (J31) Pin List

Pin	Description
1	GND
2	NC
3	Data3_P
4	Data3_N
5	Data2_P
6	Data2_N
7	Data1_P
8	Data1_N
9	Data0_P
10	Data0_N
11	VDD
12	LED_ACTn
13	LED_Linkn
14	VDD
15	GND
16	GND

6.8 Stereo Analog Audio Input (J32) and Output (J33)

The EVMK2G has two 3.5-mm female stereo jacks that are connected to the AIC3106 Audio Codec:

- Line In: For connecting to the output of an mp3 player
- Line Out: For connecting to headphones or speakers

Pin out details of Audio connector is given in [Table 24](#).

Table 24. Stereo Analog Audio Input (J32) and Output (J33) Pin List

Line In Connector (J32)		Line Out Connector (J33)	
Pin	Description	Pin	Description
1	GND	1	GND
2	LEFT_IN	2	LEFT_OUT
3	RIGHT_IN	3	RIGHT_OUT
4	NC	4	NC

6.9 MLB (J34)

The EVMK2G has a single media local bus connector (QSH-020-01-L-D-DP-A) that is used for connecting the MLB daughter card (Microchip's OS81110). The pin out is given in [Table 25](#).

Table 25. MLB (J34) Pin List

Pin	Description	Pin	Description
1	SIGN	21	NC
2	MLBCLK	22	NC
3	SIGP	23	NC
4	NC	24	GPIO2
5	NC	25	Reset
6	MLBSIG	26	NC
7	NC	27	NC
8	NC	28	NC
9	DATDN	29	NC
10	MLBDAT	30	NC
11	DATDP	31	NC
12	NC	32	NC
13	NC	33	SCL
14	NC	34	TP179
15	NC	35	SDA
16	TP174	36	NC
17	PCLKN	37	VCC3V3
18	NC	38	VCC3V3
19	PCLKP	39	VCC3V3
20	NC	40	VCC12V0

6.10 USB0 Host Type A (J35)

The EVMK2G has a USB Type A connector as host. The pin out is given in [Table 26](#).

Table 26. USB0 Host Type A (J35) Pin List

Pin	Description
1	VDD
2	D-
3	D+
4	ID Pin to GND
5	USB0_GND
6	USB0_GND

6.11 HDMI (J36)

The EVMK2G has an HDMI out where it can be used to connect to the HDMI monitor via cable. It is a 23-pin Type A Receptacle connector. The pin out is given in [Table 27](#).

Table 27. HDMI (J36) Pin List

Pin	Description
1	HDMI_TX2+
2	GND
3	HDMI_TX2-
4	HDMI_TX1+
5	GND
6	HDMI_TX1-
7	HDMI_TX0+
8	GND
9	HDMI_TX0-
10	HDMI_CLK+
11	GND
12	HDMI_CLK-
13	HDMICONN_CEC
14	NC
15	HDMICONN_I2CSCL
16	HDMICONN_I2CSDA
17	GND
18	5V_OUT_HDMI
19	HDMI_HP_OUT
20	GND
21	GND
22	GND
23	GND

6.12 MMC/SD (J37)

The MMC/SD card holder is located on the top side of the board and is used to provide an interface to a MMC/SD card. It is a 14-pin MMC/SD card holder. The pin out is given in [Table 28](#).

Table 28. MMC/SD (J37) Pin List

Pin	Description
1	DAT2
2	CD/DAT3
3	CMD
4	VDD
5	CLOCK
6	VSS
7	DAT0
8	DAT1
9	CD1
10	SDCD_GND
11	SDCD_GND
12	CD2
13	SDCD_GND
14	SDCD_GND

6.13 USB1-Micro (J38)

The EVMK2G has a micro-USB connector as USB1 dual role. The pin out is given in [Table 29](#).

Table 29. USB1-Micro (J38) Pin List

Pin	Description
1	VDD
2	D-
3	D+
4	ID
5	GND
6	USB0_GND
7	USB0_GND
8	USB0_GND
9	USB0_GND

6.14 DB9 Connector (P1, P2, and P3)

The EVMK2G has three DB-9 connectors. DB9 connector (P1) is connected to the SoC UART0 through the RS-232 Transceiver. Two DB9 connectors (P2 and P3) are used for DCAN0 and DCAN1, respectively, connected to the SoC through the CAN transceiver. The pin out is given in [Table 30](#).

Table 30. DB9 Connector (P1, P2, and P3) Pin List


P1 Connector		P2 and P3 Connectors	
Pin	Description	Pin	Description
1	NC	1	NC
2	RXD	2	CANL
3	TXD	3	CAN_GND
4	NC	4	NC
5	GND	5	CAN_GND
6	NC	6	CAN_GND
7	NC	7	CANH
8	NC	8	NC
9	NC	9	VCAN
10	Shield_GND	10	Shield_GND
11	Shield_GND	11	Shield_GND

7 Switch Descriptions

The EVMK2G has a total of 15 switches (Figure 39):

- 1 Sliding switch for Powering on the board
- 8 Tactile switches for various Reset, PMIC Power on, VOL+, VOL-
- 1 DIP slide switch for boot mode configuration
- 5 DIP SPST switches for enabling various interfaces

Figure 39. EVMK2G Switches

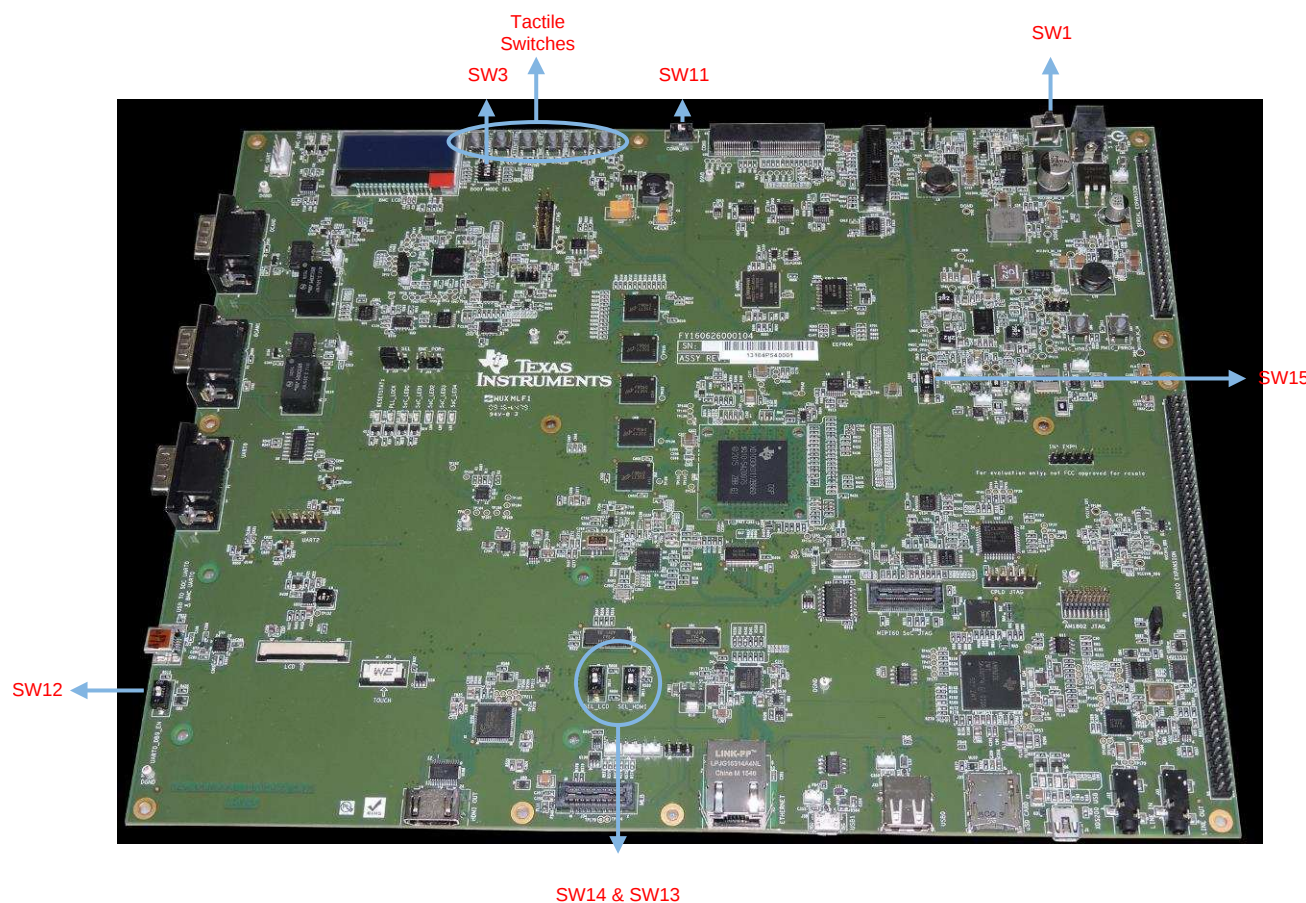

7.1 Slide Switch

The EVMK2G has one sliding switch/Power switch (SW1) for powering ON/OFF the board.

7.2 Tactile Switch

The EVMK2G has 8 tactile switches. Pressing each performs different functions. Switches and their corresponding functions are listed in [Table 31](#).

Table 31. EVMK2G Tactile Switches

Switch	Function	Description
SW2	VOL+	Currently not implemented
SW4	VOL-	Currently not implemented
SW5	PWRON_RSTz	Power-on Reset
SW6	BMC_RESETz	Pressing this switch resets the BMC
SW7	ATTENTIONz	Currently not implemented
SW8	PMIC_HDRST	PMIC Hard Reset
SW9	PMIC PWRON	PMIC Power on
SW10	WARMRSTz	Warm Reset

7.3 DIP Switch

The DIP Switch/Boot mode switch (SW3), shown in Figure 40, is used for selecting the boot mode. The Boot mode configurations are given in Table 32.

Figure 40. DIP (SW3) Switch

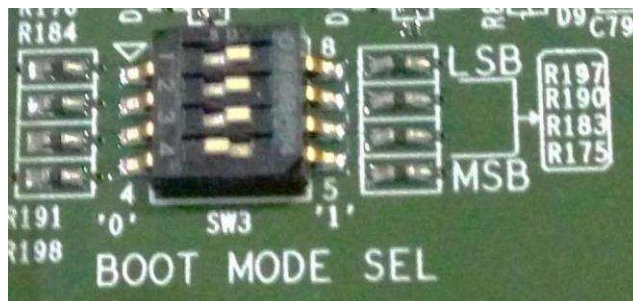


Table 32. Boot Mode Configurations for SW3

SW3 Setting (MSB first)	Boot Mode
0000	Sleep/No Boot
0001	PCIe Boot
0010	Ethernet Boot
0011	I2C PLL Boot
0100	SPI No PLL Boot
0101	SPI PLL-1 Boot
0110	USB Boot
0111	MMC/SD Boot
1000	UART Boot
1001	QSPI 96 Boot
1010	eMMC Boot
1011	NAND Boot
1100	I2C No PLL Boot
1101	SPI PLL-2 Boot
1110	SPI PLL-3 Boot
1111	QSPI 48 Boot

7.4 DIP SPST Switch

The DIP SPST switches on the board are used for enabling and disabling various interfaces. Switch and their functions are:

- **Audio Switch:** Audio switch (SW15) is to enable the Audio buffer.
- **COM8 Switch:** The COM8 switch (SW11) is to Enable/Disable COM8 Buffer.
- **LCD/HDMI Selection Switches:** The LCD and HDMI selection switches (SW14 and SW13) is to select between the LCD or the HDMI. In both OFF condition, the LCD will be functioning. In the ON condition, the HDMI will be functioning.
- **UART0 over USB/DB9 Switch:** This switch (SW12) is used to enable UART0 over USB. In the ON condition, UART0 is over DB9 connector. In the OFF condition, UART0 is over USB.

8 EVM Board Physical Specifications

This section describes the physical layout of the EVMK2G board and its connectors, switches, and test points.

NOTE: The EVMK2G does not come with an LCD Touchscreen display, it should be purchased separately.

8.1 Mounting of LCD and Spacers


CAUTION

Mount the spacers and screws while unpacking the EVM from the package box. Without the spacers, damage may occur to the board or bottom assembled components.

[Figure 41](#) shows the mechanical diagram to mount the LCD and the spacers. The EVMK2G Kit contains the following parts for assembling the LCD and the spacers:

- Spacers
- Screws
- Rubber feet
- Brackets for 4.3" LCD

Figure 41. EVMK2G Mechanical Drawing

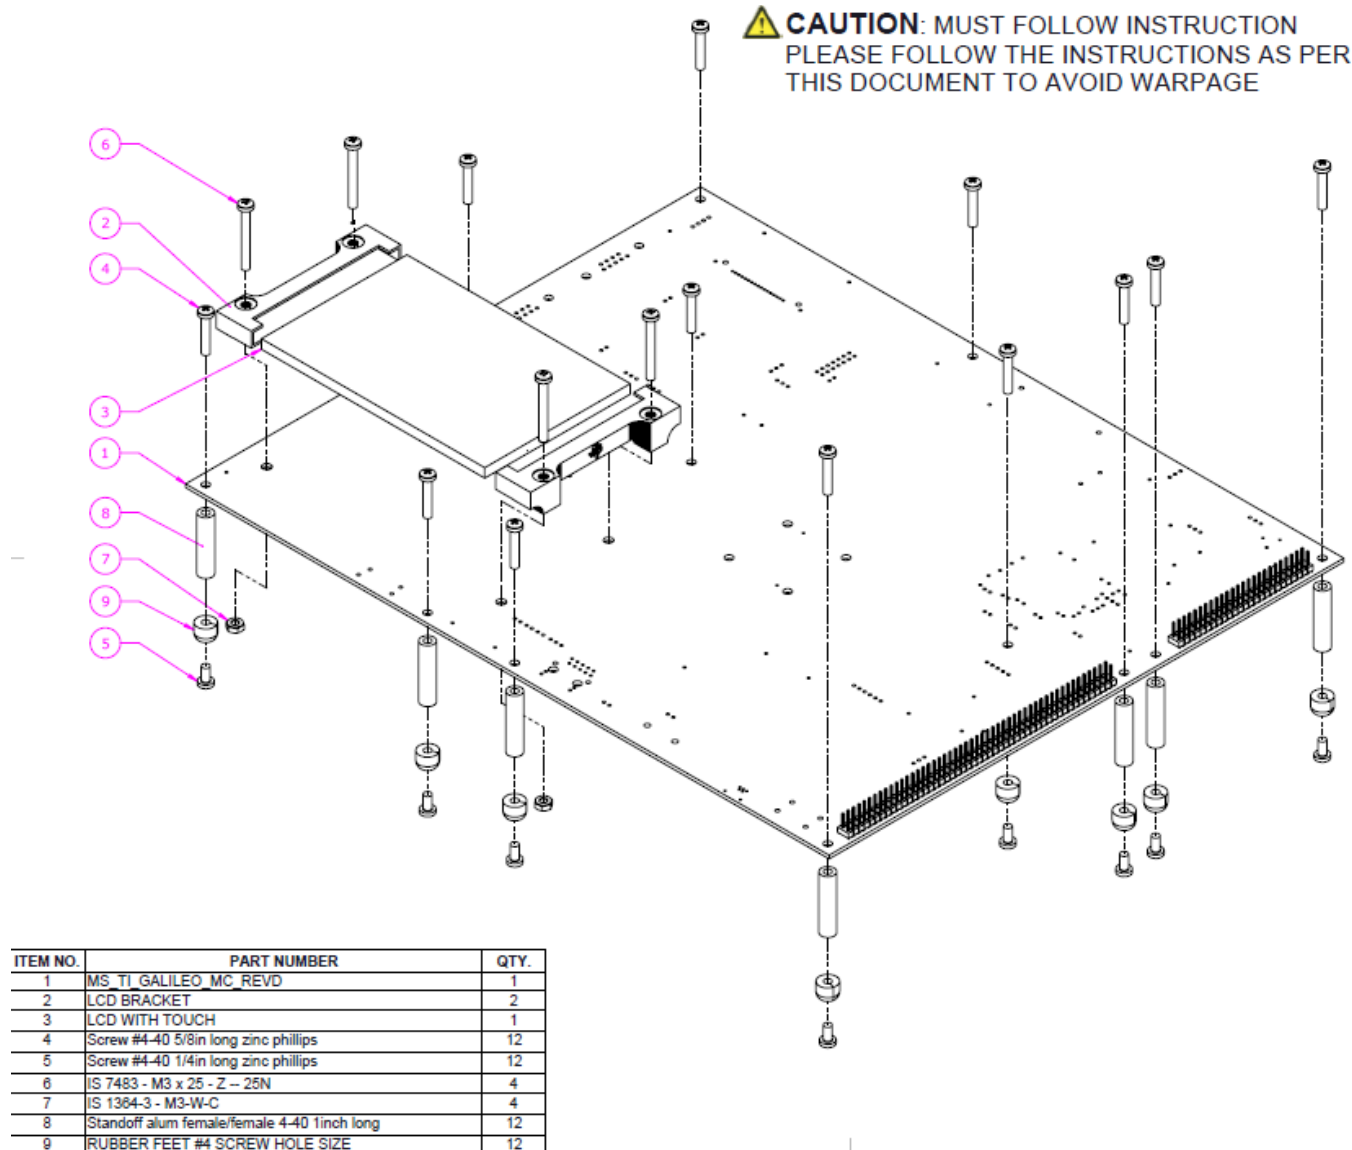

8.2 Board Layout

The EVMK2G board dimension is 12' × 9.60" (305mm × 244mm). It is a 10-layer board and powered through connector J3. The top and the bottom layout views of the EVMK2G are provided in [Figure 42](#) and [Figure 43](#), respectively.

Figure 42. EVMK2G Board Assembly Layout - Top View


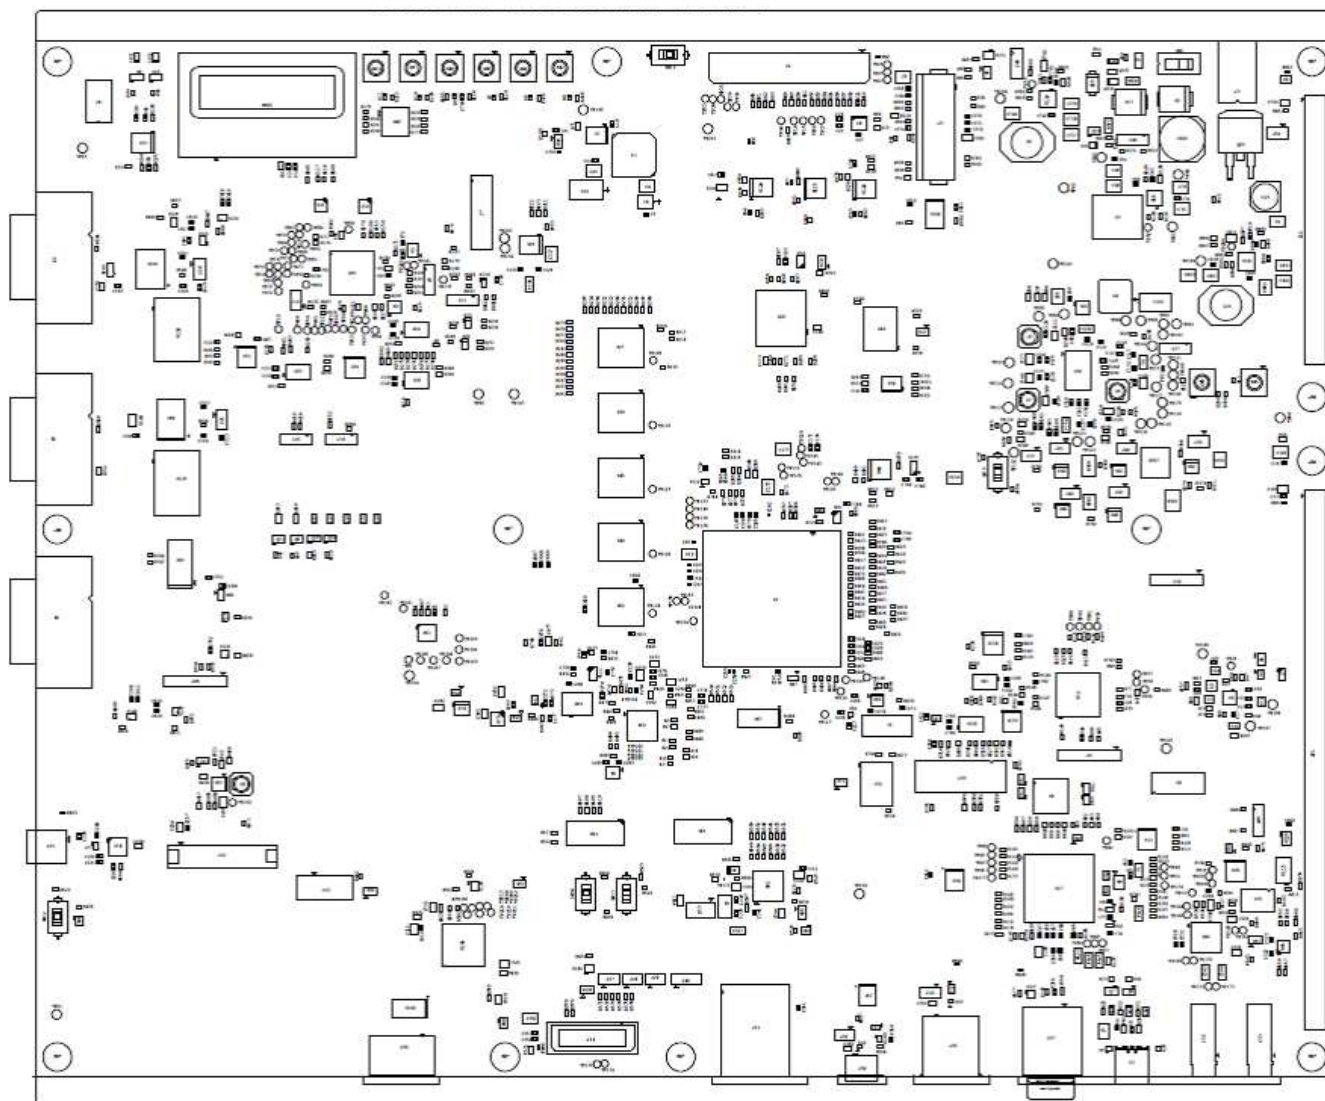


Figure 43. EVMK2G Board Assembly Layout - Bottom View

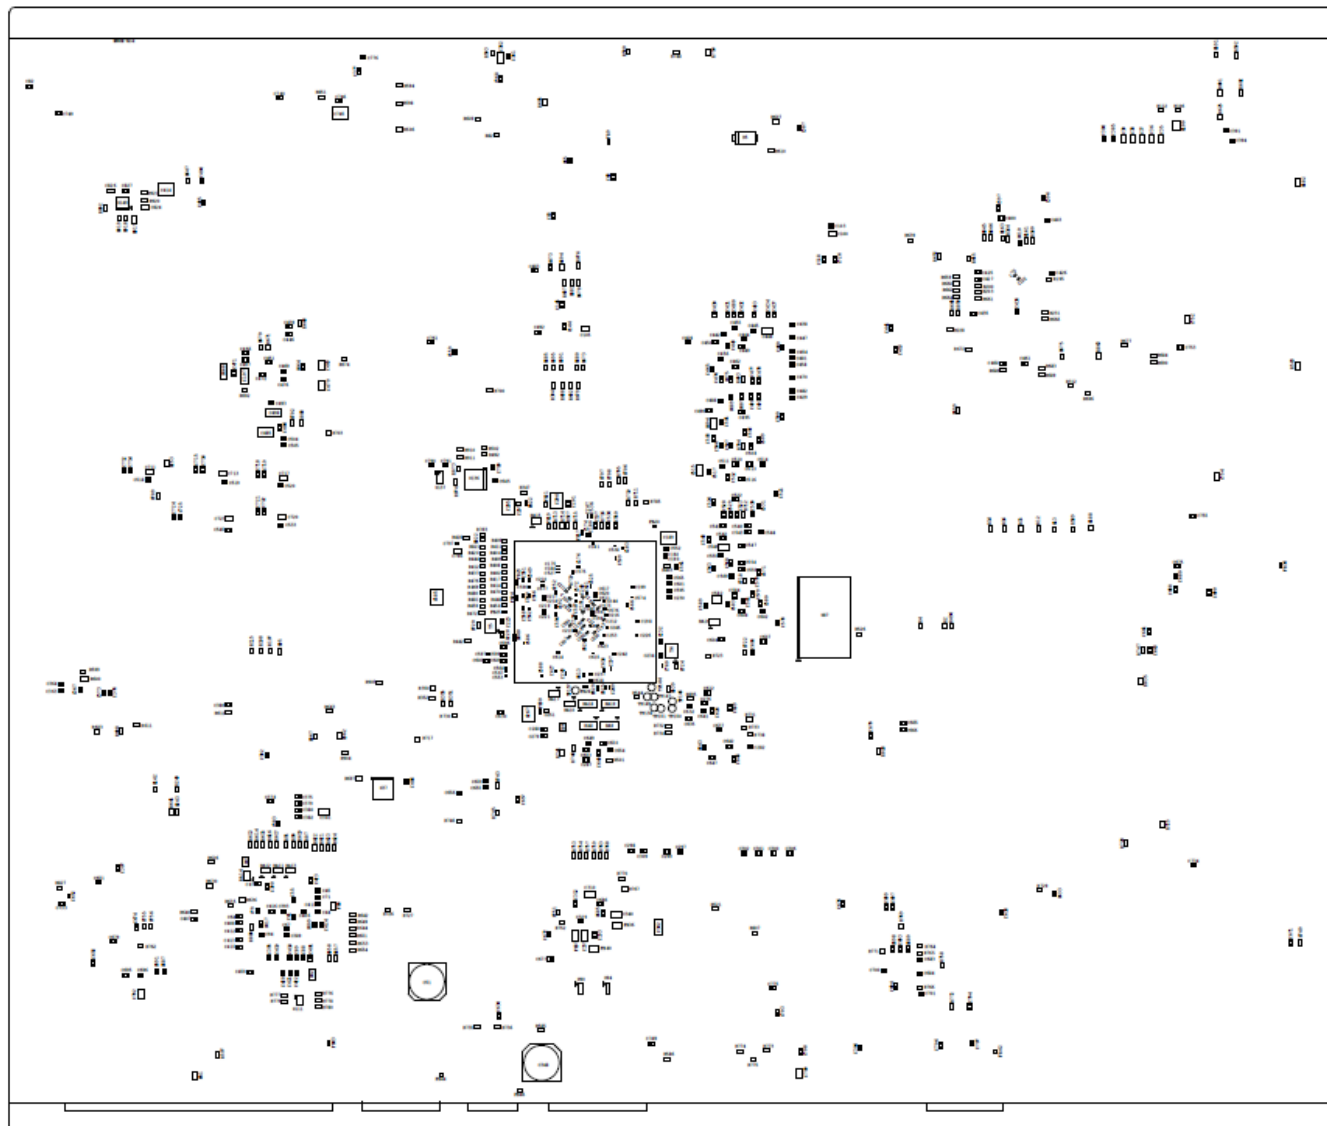

8.3 System LEDs

The EVMK2G has 13 LEDs. The description of each LED is given in [Table 33](#) and shown in [Figure 44](#).


Table 33. EVMK2G Board LEDs

LED	Color	Description
LD1	Yellow	SoC_LED1
LD2	Yellow	SoC_LED3
LD3	Yellow	SoC_LED0
LD4	Yellow	SoC_LED2
LD5	Yellow	SoC_LED4
LD6	Green	XDS Power LED
LD7	Green	EMULED1. Glows after XDS is flashed
LD8	Green	EMULED2. Glows when XDS connects with SoC
LD9	Green	Board Power (12V) ON Indication LED
LD10	Green	SOC_PLL_LOCK
LD11	Blue	Glows after BMC is programmed
LD12	Green	BMC_GREEN_LED
LD13	Blue	SOC_RESETSTATz
LD14	Red	Fault indication
LD15	Red	Reverse Voltage detection

8.4 Design Files

- K2G EVM Production Assembly Drawing ([SPRR297](#))
- K2G EVM Production CAD Gerber Files ([SPRR298](#))
- K2G EVM Production CAD ([SPRR299](#))
- K2G EVM Production Bill of Materials (BOM) ([SPRR301](#))
- K2G EVM Production Schematic ([SPRR302](#))

Figure 44. EVMK2G Board LEDs

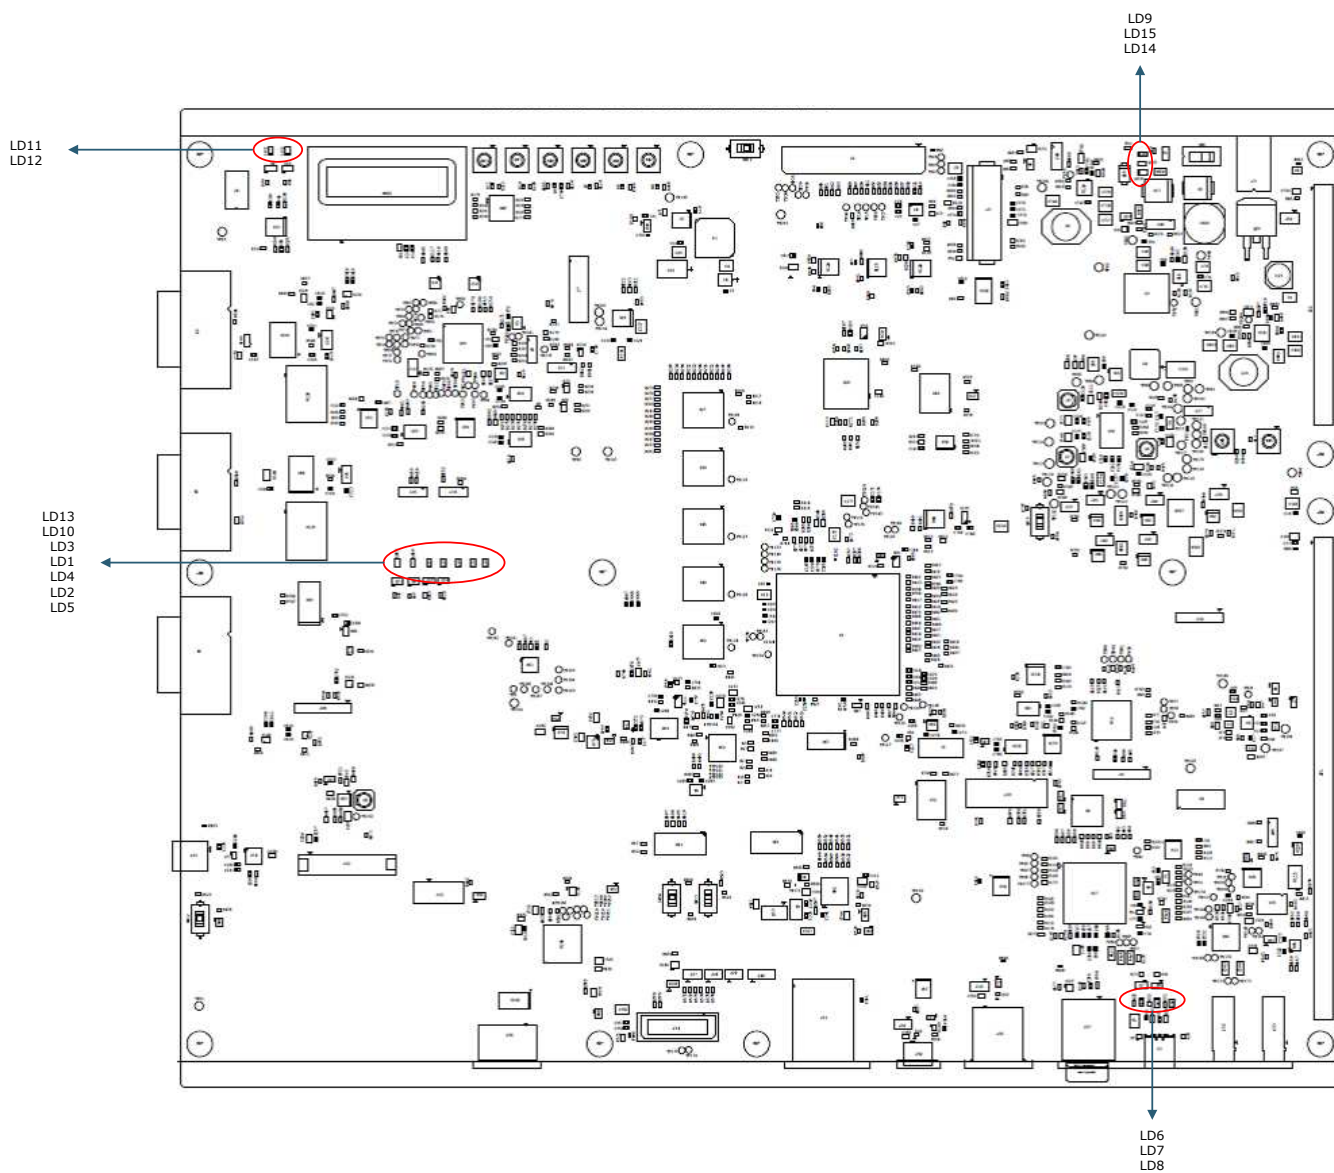


9 EVM with Audio Daughter Card

The K2G Audio Daughter Card ([Figure 45](#)) allows you to prototype and develop multichannel audio applications, such as A/V receivers, automotive amplifier systems, and mixing consoles. The Audio Daughter Card connects to the main card by way of the Audio Expansion Connector. The K2G Audio Daughter Card provides:


- 8 channels of analog input
- 16 channels of analog outputs
- S/PDIF input (optical/coaxial)
- S/PDIF output

Figure 45. K2G Audio Daughter Card

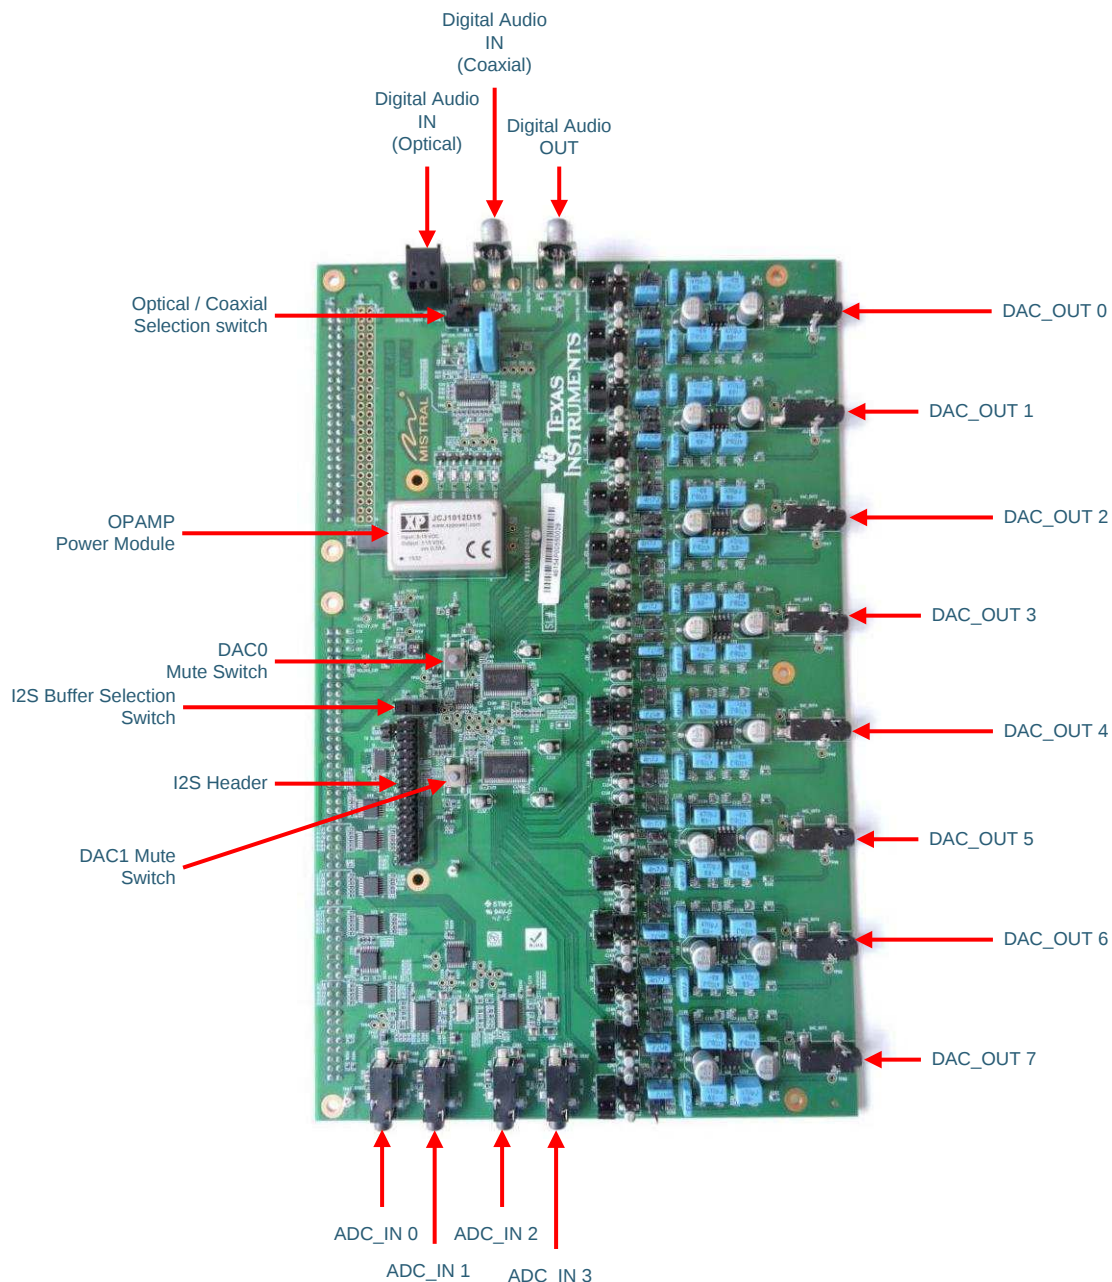

9.1 K2G Audio Daughter Card Block Diagram

Figure 46. K2G Audio Daughter Card Block Diagram

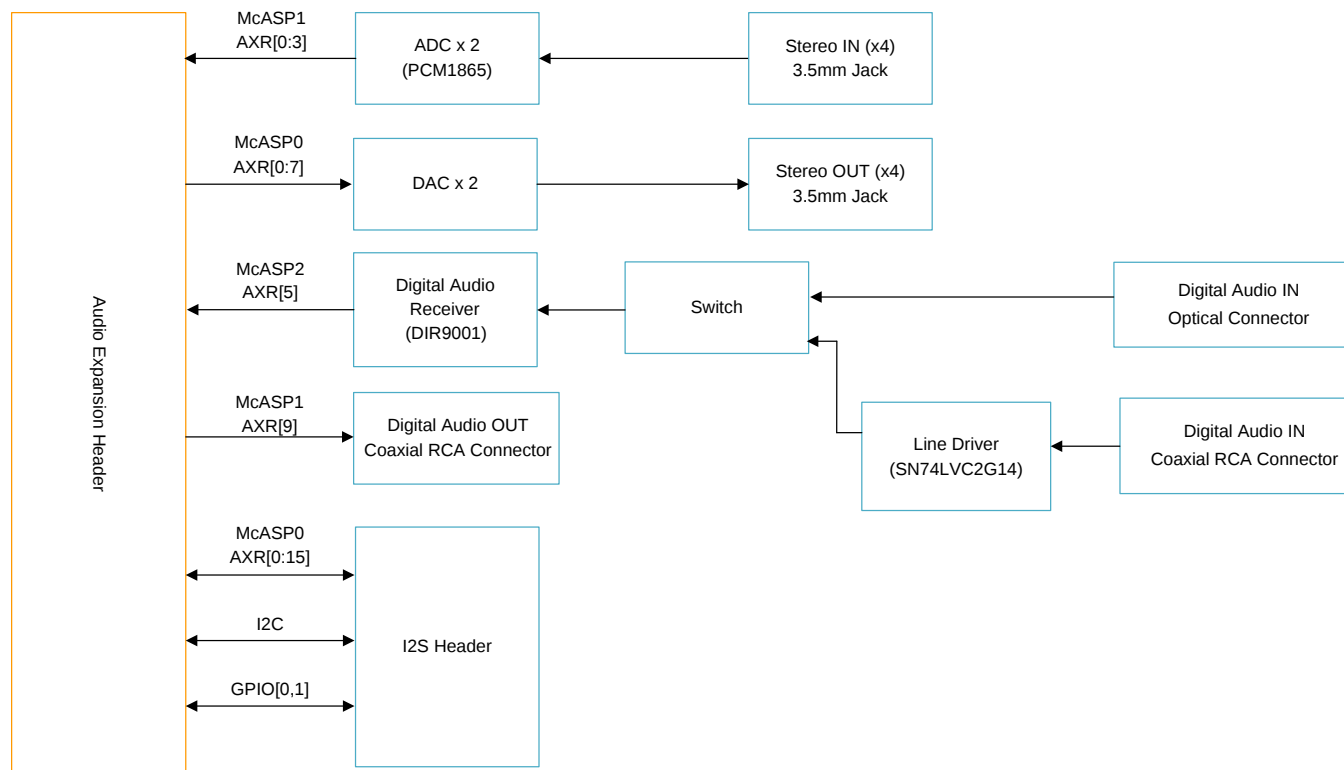

Copyright © 2016, Texas Instruments Incorporated

9.2 EVM with Audio Daughter Card Connections


Perform the following procedure to connect the K2G Audio Daughter Card to the K2G general-purpose (GP) EVM, see [Figure 47](#).

CAUTION

Follow the mechanical instructions to avoid warpage to both boards.

Mount the spacers and screws while unpacking the K2G Audio Daughter Card from the package box. Without the spacers, damage may occur to both boards.


Figure 47. Connecting the K2G Audio Daughter Card

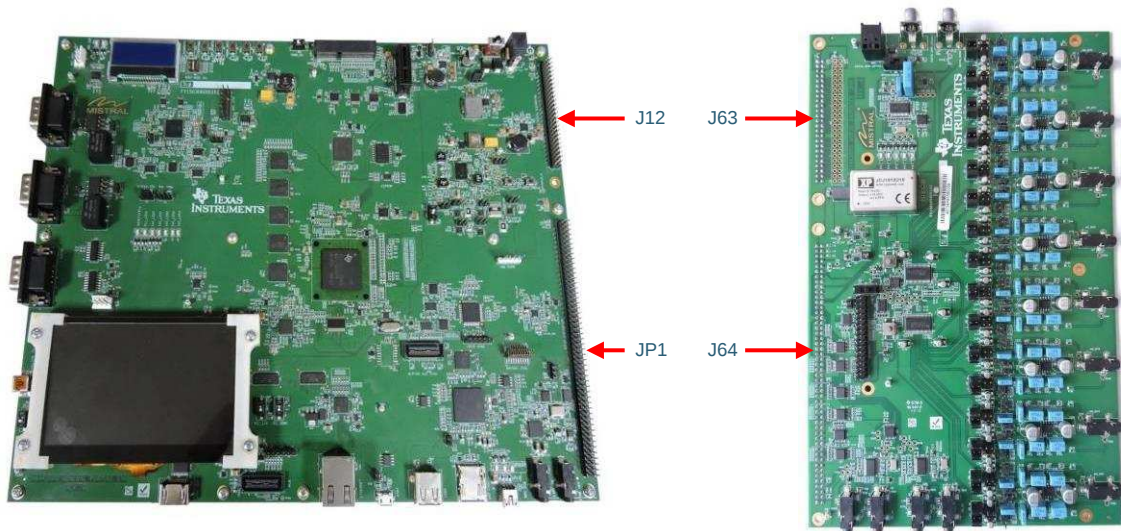

1. Mount the Audio Daughter Card onto the K2G GPEVM:
 - Align the pins of the Audio Daughter Card (connectors J63 and J64) with the main card (connectors J12 and JP1), respectively. Press gently to mate the connectors at the corners.



- Press the Audio Daughter Card connectors in the middle carefully to ensure mating at the center.

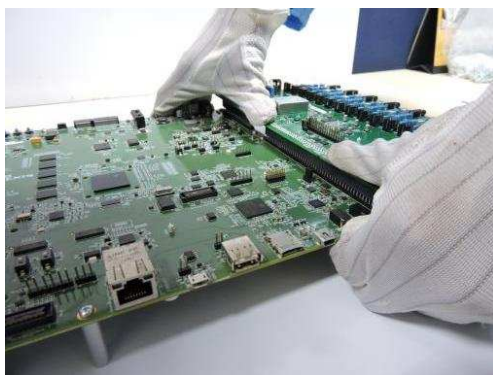


- Apply pressure on the middle and the sides evenly to ensure proper mating of the connectors.

2. The board looks, as shown, after mating the K2G GP EVM and Audio Daughter Card.




3. Powering the K2G Audio Daughter Card. The K2G Audio Daughter Card is powered from the K2G GP EVM through the expansion connectors.
 - After mounting the Audio Daughter Card and connecting all audio sources/speakers, connect the 12V/5A adapter to connector J3 on the main board.
 - Slide the switch SW1 on the GP EVM to the ON position.
 - Once the GP EVM has booted, it is safe to turn ON any powered speakers.

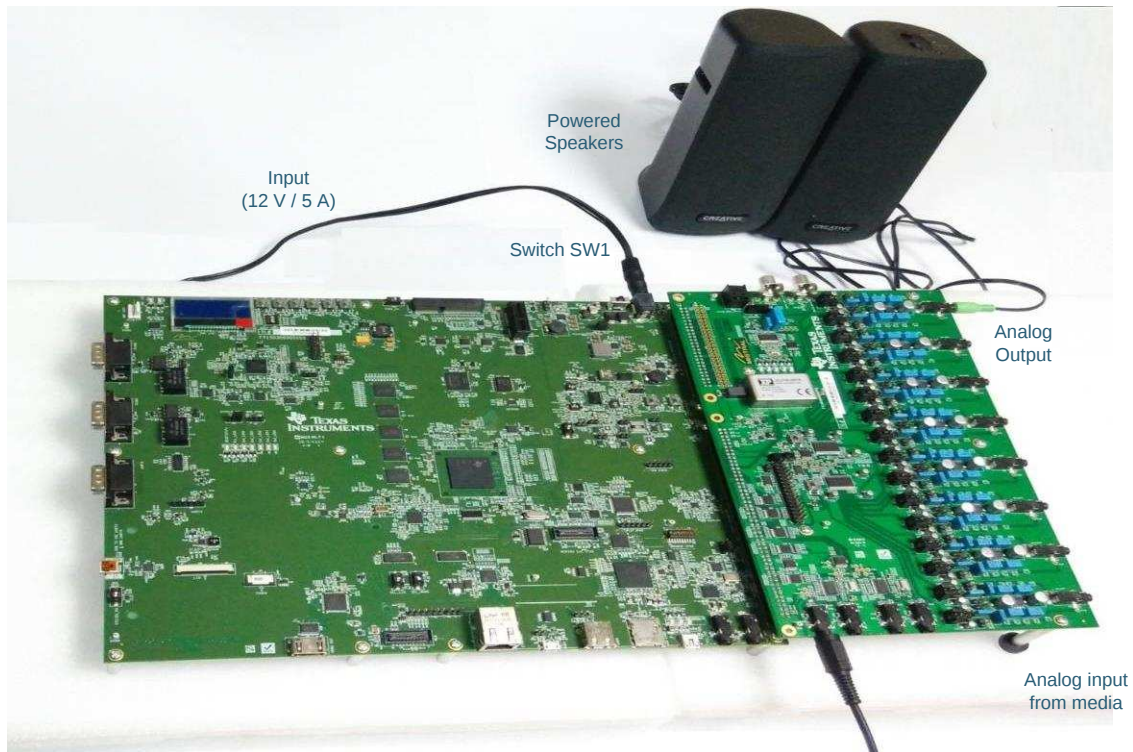

10 EVMK2GXS Secure EVM

A socketed version of the EVMK2G is available for the development of software to support a secure version of the K2G.

Figure 48. Ironwood Socket

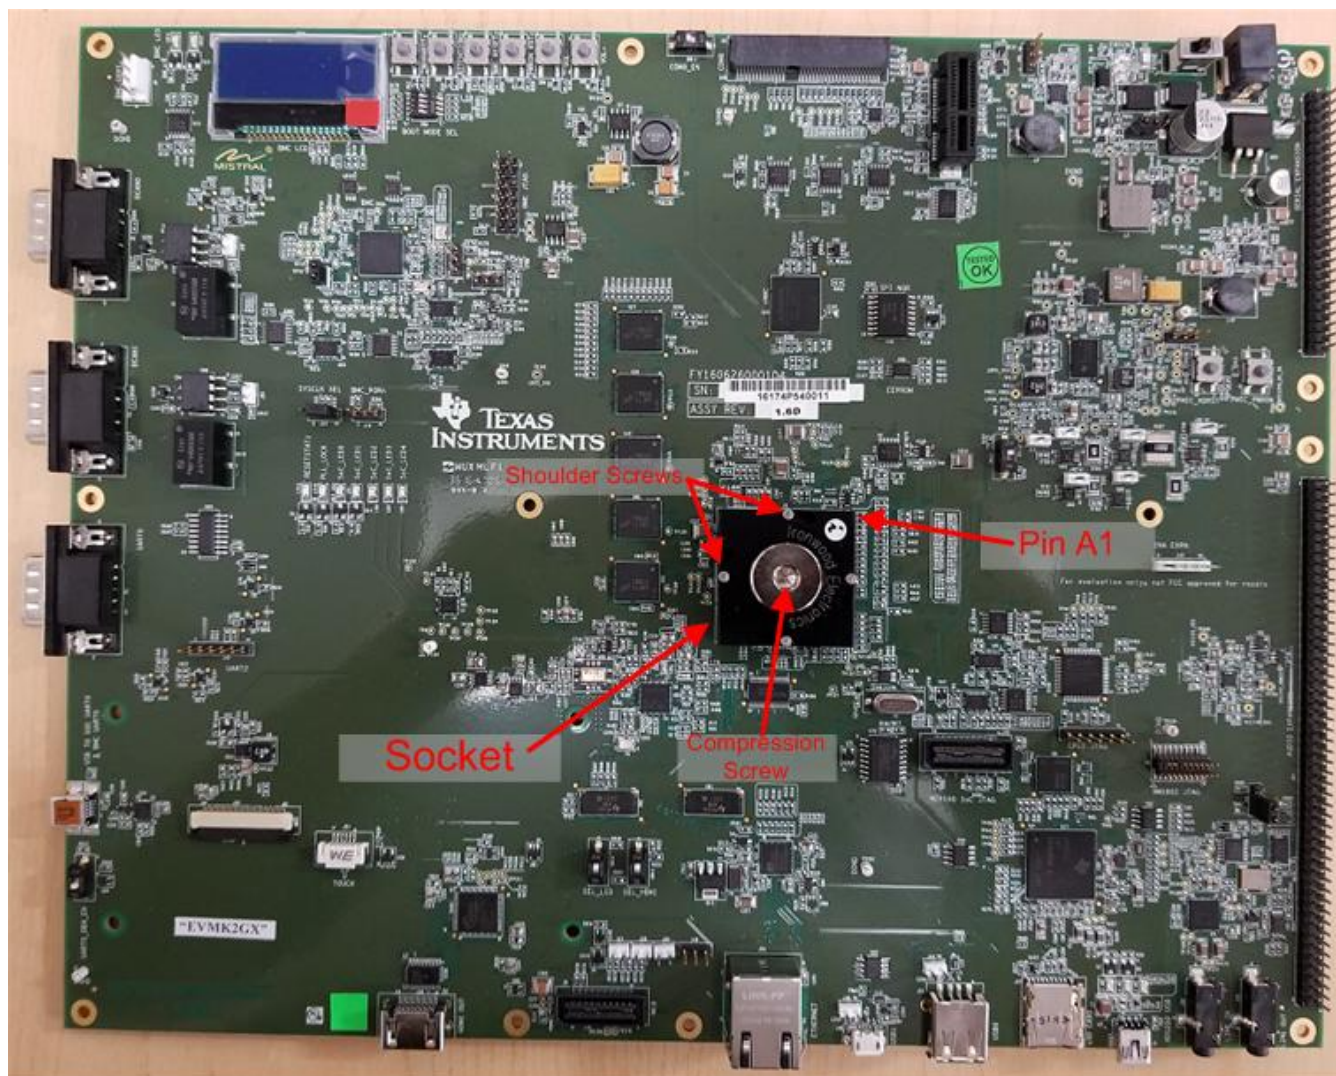

10.1 Removing and Installing a K2G in the Socket

The Ironwood Socket shown in [Figure 48](#) allows for the installation and removal of K2G components. Caution must be taken to install the component correctly, or damage to the EVM may result. The EVM arrives with the socket mounted to the board and a K2G installed. The socket consists of a base, a lid, a compression screw, a compression plate, and an IC frame. In addition, a vacuum pen is needed to remove the K2G, and a torque wrench to set the correct compression during the installation of the K2G.

Use the following steps to remove the K2G:

1. Disconnect the power supply from the EVM.
2. Loosen the compression screw until the lid can be rotated. It is not necessary to remove the compression screw from the lid.
3. Rotate the lid counter-clockwise until the heads of the shoulder screws are aligned with the round openings in the lid. The shoulder screws are permanently fixed in place and do not need to be tightened or loosened.

4. Lift of the lid with the compression screw and set it aside. This exposes the compression plate.
5. Lift off the compression plate and set it aside. This exposes the K2G with the IC frame.
6. Use the vacuum pen to carefully remove the K2G. Note the correct A1 orientation of the part.
7. Remove the IC frame and set it aside.

Use the following steps to install a K2G:

1. Disconnect the power supply from the EVM.
2. Use a vacuum pen to install the K2G in the base. Align the A1 pin correctly in the socket. Check that the component is level and not leaning on any side of the base.
3. Place the IC frame on the K2G. The IC frame provides an even compression across the K2G.
4. Place the compression plate on top of the K2G so that it is sitting flat on the top of the component.
5. Align the lid so that the holes for the shoulder screws are over the screw heads. Lower the lid over the screw heads and rotate the lid clockwise to the end of the guides. The edge of the lid should be aligned with the base.
6. Use a torque wrench to tighten the compression screw, slowly applying pressure to the K2G. The torque wrench should be set to 80 in-oz to provide the correct pressure. Continue to tighten the compression screw until the correct torque has been applied. Do not over-torque the compression screw. Applying a torque greater than 80 in-oz will damage the socket and the installed K2G.

10.2 Initial Use of a Socketed Board

Occasionally, a socketed board does not boot correctly when it is first received. During shipping, the socket may loosen or the K2G may shift, compromising the connection between the component and the board. If this occurs, follow the steps above to remove and reinstall the component.

11 EVM Important Notice

Refer to the [STANDARD TERMS AND CONDITIONS FOR EVALUATION MODULES](#).

Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

Changes from Original (April 2016) to A Revision	Page
• Updated Title.	7
• Updated About This Manual section.	7
• Added EVMK2GXS Secure EVM section.....	79

IMPORTANT NOTICE FOR TI DESIGN INFORMATION AND RESOURCES

Texas Instruments Incorporated ("TI") technical, application or other design advice, services or information, including, but not limited to, reference designs and materials relating to evaluation modules, (collectively, "TI Resources") are intended to assist designers who are developing applications that incorporate TI products; by downloading, accessing or using any particular TI Resource in any way, you (individually or, if you are acting on behalf of a company, your company) agree to use it solely for this purpose and subject to the terms of this Notice.

TI's provision of TI Resources does not expand or otherwise alter TI's applicable published warranties or warranty disclaimers for TI products, and no additional obligations or liabilities arise from TI providing such TI Resources. TI reserves the right to make corrections, enhancements, improvements and other changes to its TI Resources.

You understand and agree that you remain responsible for using your independent analysis, evaluation and judgment in designing your applications and that you have full and exclusive responsibility to assure the safety of your applications and compliance of your applications (and of all TI products used in or for your applications) with all applicable regulations, laws and other applicable requirements. You represent that, with respect to your applications, you have all the necessary expertise to create and implement safeguards that (1) anticipate dangerous consequences of failures, (2) monitor failures and their consequences, and (3) lessen the likelihood of failures that might cause harm and take appropriate actions. You agree that prior to using or distributing any applications that include TI products, you will thoroughly test such applications and the functionality of such TI products as used in such applications. TI has not conducted any testing other than that specifically described in the published documentation for a particular TI Resource.

You are authorized to use, copy and modify any individual TI Resource only in connection with the development of applications that include the TI product(s) identified in such TI Resource. NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER TI INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT OF TI OR ANY THIRD PARTY IS GRANTED HEREIN, including but not limited to any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information regarding or referencing third-party products or services does not constitute a license to use such products or services, or a warranty or endorsement thereof. Use of TI Resources may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

TI RESOURCES ARE PROVIDED "AS IS" AND WITH ALL FAULTS. TI DISCLAIMS ALL OTHER WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, REGARDING TI RESOURCES OR USE THEREOF, INCLUDING BUT NOT LIMITED TO ACCURACY OR COMPLETENESS, TITLE, ANY EPIDEMIC FAILURE WARRANTY AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

TI SHALL NOT BE LIABLE FOR AND SHALL NOT DEFEND OR INDEMNIFY YOU AGAINST ANY CLAIM, INCLUDING BUT NOT LIMITED TO ANY INFRINGEMENT CLAIM THAT RELATES TO OR IS BASED ON ANY COMBINATION OF PRODUCTS EVEN IF DESCRIBED IN TI RESOURCES OR OTHERWISE. IN NO EVENT SHALL TI BE LIABLE FOR ANY ACTUAL, DIRECT, SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF TI RESOURCES OR USE THEREOF, AND REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

You agree to fully indemnify TI and its representatives against any damages, costs, losses, and/or liabilities arising out of your non-compliance with the terms and provisions of this Notice.

This Notice applies to TI Resources. Additional terms apply to the use and purchase of certain types of materials, TI products and services. These include; without limitation, TI's standard terms for semiconductor products (<http://www.ti.com/sc/docs/stdterms.htm>), [evaluation modules](#), and [samples](http://www.ti.com/sc/docs/sampterm.htm) (<http://www.ti.com/sc/docs/sampterm.htm>).

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2018, Texas Instruments Incorporated