FGSM

🕂 🎴 XP Power

IEC Power Entry Inlet with Line Filter

- IEC320-C14 Filtered Inlet
- Dual Fuse
- Input Switch
- Screw Mount
- Compact Design
- Medical Applications
- 1, 2, 4, 6 & 10A Rating
- 6.3 x 0.8mm Faston Terminals
- Bleed Resistor
- Shielded Metal Body
- Wide Operating Temperature Range
- 3 Year Warranty




EMI Filter

Combining a double pole switch, front accessible (when the mains connector is disconnected) dual fuse holder and a low earth leakage filtered IEC320-C14 inlet in a compact single housing, the FGSM is designed for medical applications. When fitted to mains powered equipment, they provide excellent attenuation to conducted electro-magnetic interference from the mains supply, whilst reducing any conducted emissions from within the equipment onto the mains supply. Suitable for class I appliances, all models feature a shielded metal body, and are fitted with a bleed resistor to safely discharge the filter capacitors when power is disconnected. Safety approvals are EN60939-2 for passive filters & ANSI/UL1283 for EMI filters. They feature a wide operating temperature range of -40°C to +110°C with full power operation up to +50°C.

Specifications												
Characteristics	Minimum	Typical	Maximum	Units	Notes and Conditions							
Input Voltage	0	115/230	264	VAC								
Input Frequency	DC		400	Hz								
Rated Current	1		10	A	See models and ratings table							
Earth Leakage Current	2		5	μA	See models and ratings table							
MTBF	1.35			MHrs	MIL-STD 217F							
Flammability Rating	UL94V-2			•								
Temperature Operating	-40		110	°C	See derating curve							
Osfati, Assaula	EN60939-2			Passive filter units for EMI suppression								
Safety Approvals	ANSI/UL1283	3		Electromagnetic Interference Filters								
Terminals	Faston 6.3 x	Faston 6.3 x 0.8mm straight										
Protection Class	Suitable for a	opliances with prot	tection Class I									
Dielectric Strength		1500		VAC								

Electrical Schematic

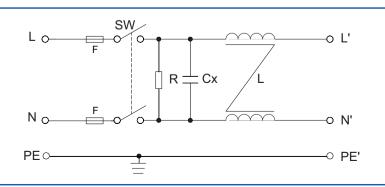


Note: Fuses not supplied

Models & Ratings


Rated current	Leakage	current	Inductance	ductance Capacitance			Weight	Application	Mounting	Filter	
	115VAC/60Hz	250VAC/50Hz	@10kHz, 0.25V	Сх	Су	Resistance	weight	Application	wounting	Filter	
1 A	2 μΑ	5 μΑ	2 x 6.5mH	0.1 µF	None	1MΩ	95g	Medical	Screw	FGSMA01BFR	
2 A	2 μΑ	5 μΑ	2 x 3.8mH	0.1 μF	None	1MΩ	95g	Medical	Screw	FGSMA02BFR	
4 A	2 μΑ	5 μΑ	2 x 1.6mH	0.1 μF	None	1MΩ	95g	Medical	Screw	FGSMA04BFR	
6 A	2 μΑ	5 μΑ	2 x 0.8mH	0.1 µF	None	1MΩ	97g	Medical	Screw	FGSMA06BFR	
10 A	2 µA	5 μΑ	2 x 0.2mH	0.1 µF	None	1MΩ	108g	Medical	Screw	FGSMA10BFR	

Thermal Derating

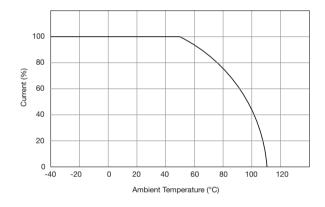

Mechanical Details

All dimensions in inches (mm)

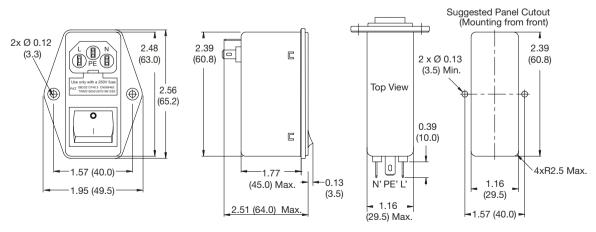

Output Terminals: 6.3 mm x 0.8 mm Fast-ons

FGSM


EMI Filter

Typical Attenuation Curves

------ Common Mode/Asymmetrical(L-G)


----- Differential Mode/Symmetrical(L-L)






FGSMA02BFR

FGSMA04BFR



FGSMA06BFR

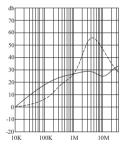

FGSMA10BFR

db			Π	Π	Π		Γ	Π	Π	Τ	Π			Π	Τ	Π	Π			1	
70			+	╢	H		╞	H	H	ł			\vdash		╀			_	+		
60		_	+	╢	H	_	╞	H	+	ł	ļ		\vdash		╀			_	+		
50		_	+	╢	H		╞	H	H	ł				7	h	Į,		_	+		
40		_		╢	\mid		\vdash	$\left \right $	╟	ł			ť		+	Ň	N				
30			+	╢	H		╞	H	H	ł		/	\vdash		╀			``			
20		_	+	⋕	H		┝		7	ł	ł	F			4			_	f		
10		_		╽		-	É	ł	ł	ĺ			\vdash		╀						
0	_	1	1	ł	1	[$\left \right $	H	ļ					╀						
10				\parallel	H		╞	$\left \right $	H	ļ	ļ				╀				\square		
20										1					1		lĺ			J	
- 10)K	100K						1M							10M						