

Four Quadrant Photodiode PR5471 / 5472 / 5473




4-Quadrant Photodiodes with Voltage Output

PR547x are 4-Quadrant Photodiodes with photocurrent amplifier and voltage output. Interference and reflection on the photodiodes are reduced by an antireflective layer. Three different versions PR5471/2/3 are available with different electrical gains of 10, 25 and 100 mV output voltage per nA of photocurrent.

APPLICATIONS

- Light beam alignment
- 2D optical tracking
- tilt sensor

BLOCK DIAGRAM

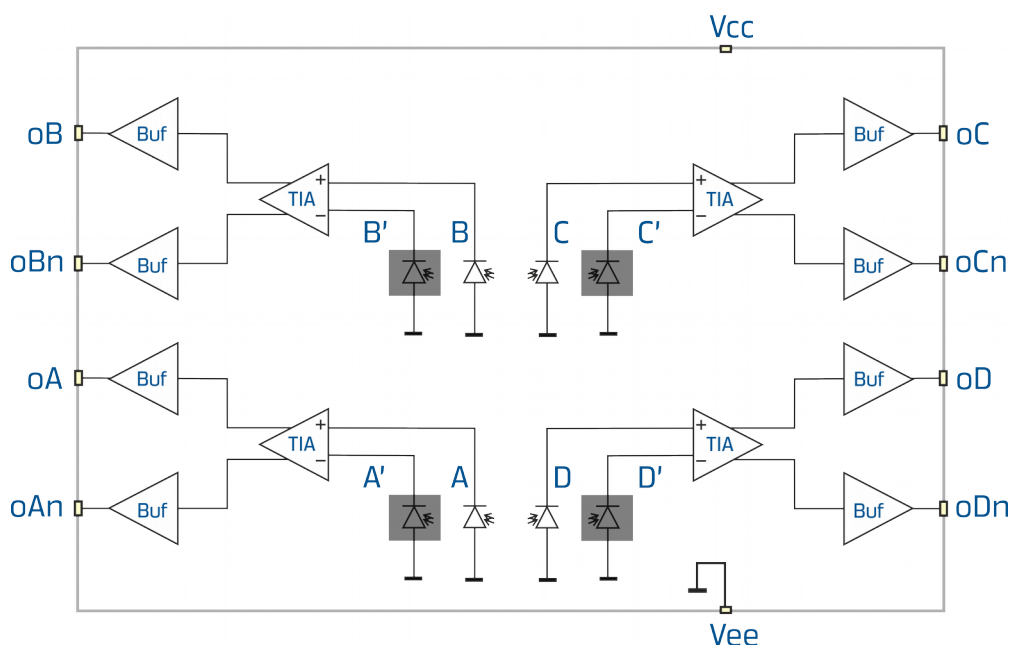

Four Quadrant Photodiode

PR5471 / 5472 / 5473



Electrical Characteristics

ABSOLUTE MAXIMUM RATINGS

Parameter	Min	Typ	Max	Units
V _{CC} (supply voltage)	-0.3		8	V
V _{PIN} (voltage @ other pins)	-0.3		V _{CC} +0.3	V
Storage Temperature Range	-55		125	°C
T _J (Junction Temperature)	-40		125	°C
Electrostatic Discharge (ESD) Protection @ all pins	HBM	4		kV

OPERATING CHARACTERISTICS


V_{CC} = 3.3 V, T_J = -40...85°C (unless otherwise noted)

Symbol	Parameter	Conditions	Min	Typ	Max	Units
V _{CC}	Supply voltage		3.0	3.3	5.5	V
I _{CC}	Supply current (no load)					mA
BW	Bandwidth			350		kHz
Output characteristics						
V _O	Output voltage	no lighting		V _{CC} /2		V
V _{out}	Output voltage range	V _{CC} = 3.3 V V _{CC} = 5.0 V	V _{CC} /2-0.75 V _{CC} /2-1.0		V _{CC} /2+0.75 V _{CC} /2+1.0	V V
I _{out}	Output current	V _{out} = V _{CC} /2±0.75V	-0.1		0.1	mA
S	Sensitivity (output differential voltage vs. photocurrent)	PR5471 PR5472 PR5473		25 100 10		mV/nA mV/nA mV/nA
Photosensors						
A _{PD}	Photodiode active area	per channel		0.47		mm ²
λ _{ar}	Spectral application range	Se(λ _{ar})=0.25*λ _{peak}	400		1050	nm
λ _{peak}	Peak sensitivity	@ 800 nm		0.38		A/W
Thermal properties						
T _J	Junction temperature	operating	-40		85	°C

Four Quadrant Photodiode PR5471 / 5472 / 5473



SPECTRAL SENSITIVITY

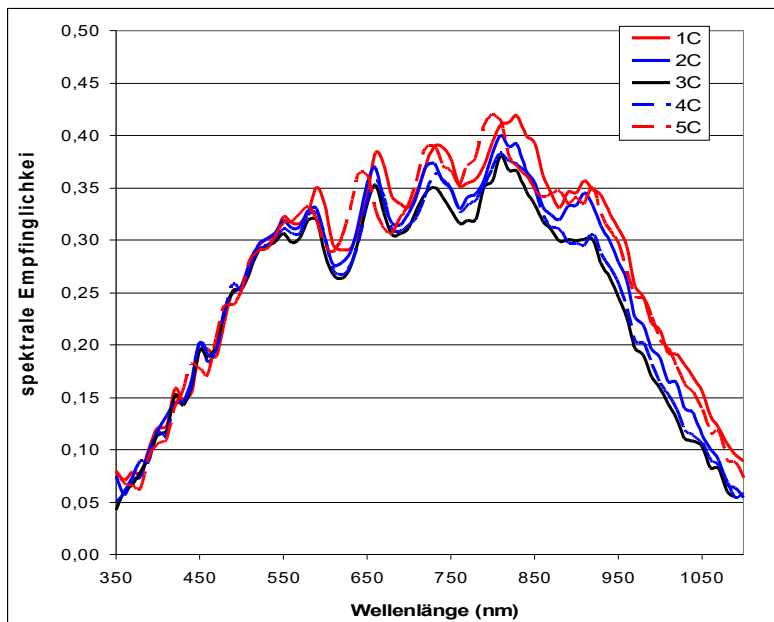


Spectral sensitivity in A/W as function of the wavelength in nm for different samples.
The position of local minima and maxima may vary.

Four Quadrant Photodiode PR5471 / 5472 / 5473



Photodiodes – Dimensions

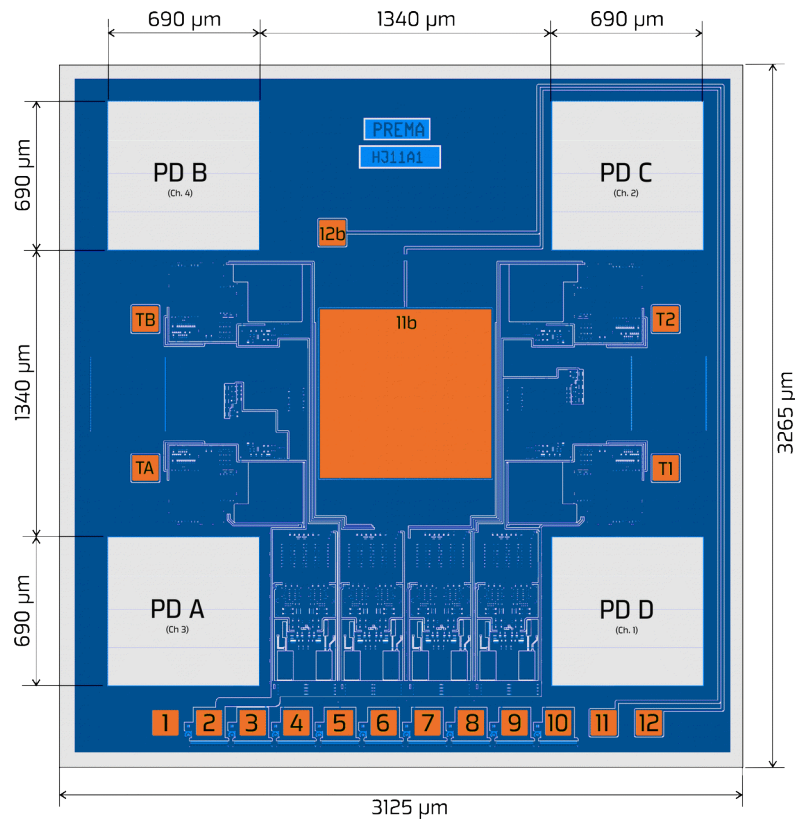

General dimensions:

- Die size: 3,125 µm x 3,265 µm (measured between centres of scribe lane)
- Photodiodes active area: approx. 690 µm x 690 µm x 4
- Pad window: 120 µm x 120 µm

PAD DESCRIPTION

Pin No	Pin Name	Pin Function Description
1	Vee	negative supply voltage
2	Vcc	positive supply voltage
3	oDn	D channel negative output
4	oD	D channel positive output
5	oCn	C channel negative output
6	oC	C channel positive output
7	oBn	B channel negative output

Pin No	Pin Name	Pin Function Description
8	oB	B channel positive output
9	oAn	A channel negative output
10	oA	A channel positive output
11/11b	LED_BS	LED backside connection
12/12b	LED TS	LED topside connection

Test pads are to be used for chip test only and not described in this document.

Four Quadrant Photodiode PR5471 / 5472 / 5473



PRELIMINARY DATASHEET - DATA MAY CHANGE WITHOUT NOTICE

Disclaimer

Information provided by PREMA is believed to be accurate and correct. However, no responsibility is assumed by PREMA for its use, nor for any infringements of patents or other rights of third parties which may result from its use. PREMA reserves the right at any time without notice to change circuitry and specifications.

Life Support Policy

PREMA Semiconductors products are not authorized for use as critical components in life support devices or systems without the express written approval of PREMA Semiconductor. As used herein:

1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into the body, or (b) support or sustain life, and whose failure to perform when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in a significant injury to the user.
2. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

PREMA Semiconductor GmbH

Robert-Bosch-Str. 6

55129 Mainz Germany

Phone: +49-6131-5062-0

Fax: +49-6131-5062-220

Email: prema@prema.com Web site: www.prema.com