



INVERSE MULTIPLEXING FOR ATM

IDT82V2616

Version - 2
December 8, 2003

2975 Stender Way, Santa Clara, California 95054
Telephone: (800) 345-7015 • • FAX: (408) 492-8674
Printed in U.S.A.
© 2003 Integrated Device Technology, Inc.

DISCLAIMER

Integrated Device Technology, Inc. reserves the right to make changes to its products or specifications at any time, without notice, in order to improve design or performance and to supply the best possible product. IDT does not assume any responsibility for use of any circuitry described other than the circuitry embodied in an IDT product. The Company makes no representations that circuitry described herein is free from patent infringement or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent, patent rights or other rights, of Integrated Device Technology, Inc.

LIFE SUPPORT POLICY

Integrated Device Technology's products are not authorized for use as critical components in life support devices or systems unless a specific written agreement pertaining to such intended use is executed between the manufacturer and an officer of IDT.

1. Life support devices or systems are devices or systems which (a) are intended for surgical implant into the body or (b) support or sustain life and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in a significant injury to the user.
 2. A critical component is any components of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.
-



Table of Contents

TABLE OF CONTENTS	III
LIST OF TABLES	VI
LIST OF FIGURES	VIII
FEATURES	1
APPLICATIONS	1
STANDARDS COMPLIANT	1
DESCRIPTION	1
FUNCTIONAL BLOCK DIAGRAM	2
1 PIN ASSIGNMENT	3
2 PIN DESCRIPTION	4
3 IDT82V2616 INTERFACE	11
3.1 UTOPIA INTERFACE	11
3.1.1 Utopia Loopback Function	11
3.2 LINE INTERFACE	12
3.2.1 Line Interface Work Modes	12
3.2.1.1 Mode0	13
3.2.1.2 Mode1~Mode4	13
3.2.1.3 Mode5~Mode6	15
3.2.1.4 Mode7~Mode10	15
3.2.1.5 Mode11	15
3.2.1.6 Mode12~Mode13	15
3.2.1.7 Mode14~Mode15	16
3.2.2 Line Interface Timing Clock Modes	16
3.2.3 Line Interface Loopback Function	16
3.3 EXTERNAL MICROPROCESSOR INTERFACE	17
3.3.1 External Microprocessor Interface Selection	17
3.3.2 Command FIFOs	17
3.3.3 Registers	17
3.3.4 Register Map	17
3.3.5 Register Description	18
3.3.6 Procedure of Loading Software and Sending Commands	20
3.4 SRAM INTERFACE	22
4 IMA AND UNI FUNCTIONS	23
4.1 IMA MODE	23
4.1.1 IMA Frame	23
4.1.2 TRL (Timing Reference Link)	23
4.1.3 Stuffing Mode	23

4.1.4	Link Backup.....	23
4.2	UNI MODE	23
5	PROGRAMMING INFORMATION FOR IMAOS16	24
5.1	COMMAND TYPES	24
5.1.1	Command Message	24
5.1.2	Command Reply Message.....	24
5.1.3	Alarm Message	24
5.2	COMMAND ENCODING	25
5.3	COMMAND DESCRIPTION	26
6	IMA OPERATION	62
6.1	IMA INITIALIZATION	62
6.2	CONFIGURE A GROUP	62
6.3	START UP A GROUP	63
6.4	INHIBIT A GROUP/NOT INHIBIT A GROUP	63
6.5	ADD LINKS TO A GROUP THAT IS IN OPERATIONAL STATE	63
6.6	DELETE LINKS	63
6.7	DEACTIVATE AND RECOVER LINKS	63
6.8	RESTART A GROUP	63
6.9	DELETE A GROUP	63
7	PMON (PERFORMANCE MONITORING)	64
8	IMAOS16_SLAVE	66
8.1	GROUP AUTO DETECT	66
8.1.1	Master Side	66
8.1.2	Slave Side	66
8.2	PROGRAMMING INFORMATION FOR IMAOS16_SLAVE	66
8.2.1	Command types	66
8.2.2	Command Encoding.....	66
8.2.3	Command Description.....	66
9	JTAG TEST ACCESS PORT	73
9.1	TAP BUS SIGNALS	73
9.2	INSTRUCTIONS	73
10	PHYSICAL AND ELECTRICAL CHARACTERISTICS	74
10.1	ABSOLUTE MAXIMUM RATINGS	74
10.2	D.C. CHARACTERISTICS	74
10.3	A.C. CHARACTERISTICS	75
10.3.1	Output Loading.....	75
10.3.2	System Clock and RST Signal Timing	75
10.3.3	Utopia Interface Timing	76
10.3.4	Line Interface Timing.....	77
10.3.5	Microprocessor Interface Timing	78
10.3.5.1	Interface with Motorola CPU (MPM =0)	78
10.3.5.2	Interface with Intel CPU (MPM =1).....	80

10.3.6	SRAM Interface Timing	82
10.3.6.1	Write Cycle Specification.....	82
10.3.6.2	Read Cycle Specification	83
GLOSSARY		84
INDEX		88
ORDERING INFORMATION.....		91



List of Tables

Table-1	Pin Description	4
Table-2	Data Rates of Different Modes	13
Table-3	Pins Used in Multi-Rate Multiplex Mode	15
Table-4	Register Map	17
Table-5	Input FIFO Data Length Register (INPUT_FIFO_LENGTH_REG)	18
Table-6	Output FIFO Data Length Register (OUTPUT_FIFO_LENGTH_REG)	18
Table-7	Output FIFO Data Register (OUTPUT_FIFO_DATA_REG)	18
Table-8	Input FIFO Data Register (INPUT_FIFO_DATA_REG)	18
Table-9	FIFO Interrupt Enable Register (FIFO_INT_ENABLE_REG)	19
Table-10	FIFO Interrupt Status Register (FIFO_STATE_REG)	19
Table-11	FIFO Interrupt Reset Register (FIFO_INT_RESET_REG)	19
Table-12	Output FIFO Internal State Register (OUTPUT_FIFO_INTERNAL_STATE_REG)	20
Table-13	Input FIFO Internal State Register (INPUT_FIFO_INTERNAL_STATE_REG)	20
Table-14	Maximum Delay Tolerance Value for Different SRAM Size in T1 Unchannelized Mode	22
Table-15	Maximum Delay Tolerance Value for Different SRAM Size in E1 Unchannelized Mode	22
Table-16	Command Encoding	25
Table-17	ConfigDev Command (Encoding: 01H)	26
Table-18	ConfigUtopiaIF Command (Encoding: 03H)	28
Table-19	ConfigLoopMode Command (Encoding: 04H)	29
Table-20	ConfigGroupPara Command (Encoding: 05H)	30
Table-21	ConfigGroupInterFace Command (Encoding: 06H)	32
Table-22	ConfigGroupWorkMode Command (Encoding: 07H)	33
Table-23	ConfigGSMTimers Command (Encoding: 08H)	34
Table-24	ConfigTRLLink Command (Encoding: 09H)	35
Table-25	ConfigIFSMPara Command (Encoding: 0AH)	36
Table-26	AddTxLink Command (Encoding: 0BH)	37
Table-27	AddRxLink Command (Encoding: 0CH)	39
Table-28	ConfigUNILink Command (Encoding: 0DH)	40
Table-29	StartGroup Command (Encoding: 0EH)	41
Table-30	StartLASR Command (Encoding: 0FH)	42
Table-31	InhibitGrp Command (Encoding: 10H)	43
Table-32	NotInhibitGrp Command (Encoding: 11H)	44
Table-33	RestartGrp Command (Encoding: 12H)	45
Table-34	DeleteGrp Command (Encoding: 13H)	46
Table-35	RecoverLink Command (Encoding: 14H)	47
Table-36	DeleteLink Command (Encoding: 15H)	48
Table-37	DeactLink Command (Encoding: 16H)	49
Table-38	GetGroupState Command (Encoding: 17H)	50
Table-39	GetGroupDelayInfo Command (Encoding: 18H)	51
Table-40	GetLinkState Command (Encoding: 19H)	52
Table-41	GetGrpPerf Command (Encoding: 1AH)	53

Table-42	GetLinkPerf Command (Encoding: 1BH)	54
Table-43	GetConfigPara Command (Encoding: 1CH)	56
Table-44	GetGrpWorkingPara Command (Encoding: 1DH)	57
Table-45	GetLinkWorkingPara Command (Encoding: 1EH)	58
Table-46	StartTestPattern Command (Encoding: 1FH)	59
Table-47	GetLoopedTestPattern Command (Encoding: 20H)	60
Table-48	StopTestPattern Command (Encoding: 21H)	61
Table-49	GetVersionInfo Command (Encoding: 22H)	61
Table-50	Parameters for IMA Group Configuration	62
Table-51	The PMON Parameters	64
Table-52	Definitions of Different ICP Cells.....	64
Table-53	Failure/Alarm Signals.....	65
Table-54	Command Encoding	66
Table-55	DeviceInitial Command (Encoding: 01H)	67
Table-56	ConfigSlaveFrame Command (Encoding: 02H)	69
Table-57	ConfigUtopiaIF Command (Encoding: 03H)	70
Table-58	GetVersionInfo Command (Encoding: 22H)	71
Table-59	GroupInitial Command (Encoding: 23H)	72
Table-60	Absolute Maximum Ratings	74
Table-61	D.C. Characteristics	74
Table-62	System Clock and Reset Timing Parameters	75
Table-63	Utopia Interface Timing Parameters	76
Table-64	Line Interface Timing Parameters.....	77
Table-65	Microprocessor Interface Timing Parameter for Motorola CPU Read Cycle	78
Table-66	Microprocessor Interface Timing Parameters for Motorola CPU Write Cycle	79
Table-67	Microprocessor Interface Timing Parameter for Intel CPU Read Cycle.....	80
Table-68	Microprocessor Interface Timing Parameters for Intel CPU Write Cycle	81
Table-69	SRAM Interface Write Cycle Parameters.....	82
Table-70	SRAM Interface Read Cycle Parameters	83



List of Figures

Figure-1	Functional Diagram	2
Figure-2	IDT82V2616 PBGA260 Package Pin Assignment	3
Figure-3	Utopia Loopback	11
Figure-4	Line Interface Work Modes	12
Figure-5	G.802 Mapping Mode	14
Figure-6	Spaced Mapping Mode	14
Figure-7	Multiplexing Four 2 MHz Streams into One 8 MHz Stream	15
Figure-8	Input FIFO Write Process	20
Figure-9	Output FIFO Read Process	21
Figure-10	Command Message Format	24
Figure-11	Command Reply Message Format	24
Figure-12	Alarm Message Format	24
Figure-13	Reset Signal Timing Diagram	75
Figure-14	Tx Utopia Interface Timing Diagram	76
Figure-15	Rx Utopia Interface Timing Diagram	76
Figure-16	Line Interface Transmit Timing Diagram	77
Figure-17	Line Interface Receive Timing Diagram	77
Figure-18	Microprocessor Interface Timing Diagram for Motorola CPU Read Cycle	78
Figure-19	Microprocessor Interface Timing Diagram for Motorola CPU Write Cycle	79
Figure-20	Microprocessor Interface Timing Diagram for Intel CPU Read Cycle	80
Figure-21	Microprocessor Interface Timing Diagram for Intel CPU Write Cycle	81
Figure-22	SRAM Interface Timing Diagram for Write Cycle	82
Figure-23	SRAM Interface Timing Diagram for Read Cycle	83



FEATURES

◆ Highlights

- Provides API command set for convenient configuration and operation. An embedded controller and a downloaded software are used to interpret the commands. Functions can be added by software upgrading.
- Supports IMA group auto detect.
- Supports link backup so that a backup link can be automatically added when a previously configured link fails.
- All the state machines are implemented in hardware.
- Advanced cell buffer management algorithm to support ATM QoS requirements.

◆ Other Features

- Accommodates up to 8 IMA logical groups.
- Supports 16 T1/E1 channelized or unchannelized links.
- Supports T1 ISDN links.
- Supports MIXED mode: links not assigned to an IMA group can be used in UNI mode.
- Supports symmetrical and asymmetrical operation.
- Supports Common Transmit Clock (CTC) and Independent Transmit Clock (ITC) timing modes.
- Provides 16 Utopia Level 2 8 bit cell level handshake MPHY interface to ATM device.
- Supports maximum link delay tolerance of up to 212 ms for E1 or 281 ms for T1 (when 1024 KB external memory is used).
- Provides parameters for MIB (Management Information Base).
- Supports dynamic addition/deletion of links to/from a working IMA group.
- Supports line side clock detection.
- Supports non-multiplexed Intel or Motorola microprocessor interface.
- Loopback capability at both TDM and Utopia ports.
- Supports MVIP.

- JTAG boundary scan meets IEEE 1149.1.
- Package: 260 pin PBGA.
- 3.3V operation / 5V tolerant input.

APPLICATIONS

- DSLAM concentrator
- 3G Wireless base station controller (NodeB) and Radio Network Controller (RNC)
- Integrated Access Devices (IAD)

STANDARDS COMPLIANT

◆ ATM-Forum

- Utopia Level 2 Version 1.0, af-phy-0039.000, June 1995.
- Inverse Multiplexing for ATM Specification version 1.1, af-phy-0086.001, March 1999.
- Backward compatible with Inverse Multiplexing for ATM Specification version 1.0, af-phy-0086.000, September 1994.
- DS1 Physical Layer Specification, af-phy-0016.000, September 1994.
- E1 Physical Interface Specification, af-phy-0064.000, September 1996.

◆ ITU-T

- I.432 B-ISDN User Network Interface PHY specification.
- G.804 ATM Cell Mapping into Plesiochronous Digital Hierarchy (PDH).
- G.802 Inter-working between networks based on different digital hierarchies and speech encoding laws.
- I.610 B-ISDN operation and maintenance principles and functions.

◆ ANSI

- ANSI T1.646-1995, Broadband-ISDN-Physical Layer Specification for User-Network Interface Including DS1/ATM, 1995.

◆ MVIP

DESCRIPTION

The 16-port IDT82V2616 is a feature-rich device that provides the solution to implement IMA and UNI logical channels over T1 or E1 links in all public or private UNI, NNI and B-ICI applications. The chip is compliant with the ATM Forum IMA specification v1.1 and backward compatible with IMA specification v1.0.

In the chip architecture, up to 16 physically independent T1/E1 streams can be terminated through the utilization of most T1/E1 framers and LIUs in the market, and up to 8 logical IMA groups (i.e., 8 data chan-

nels) can be supported at the same time. To interface with most popular ATM layer chips in the market, IDT82V2616 supports Utopia layer 2 MPHY cell level handshake 8-bit bus interface.

Through a well-defined API command set, IMA function can be easily designed into various IMA systems and there is little necessity to access a large amount of registers. A downloaded software is used to interpret the command set and can be easily upgraded to meet specific requirement.

FUNCTIONAL BLOCK DIAGRAM

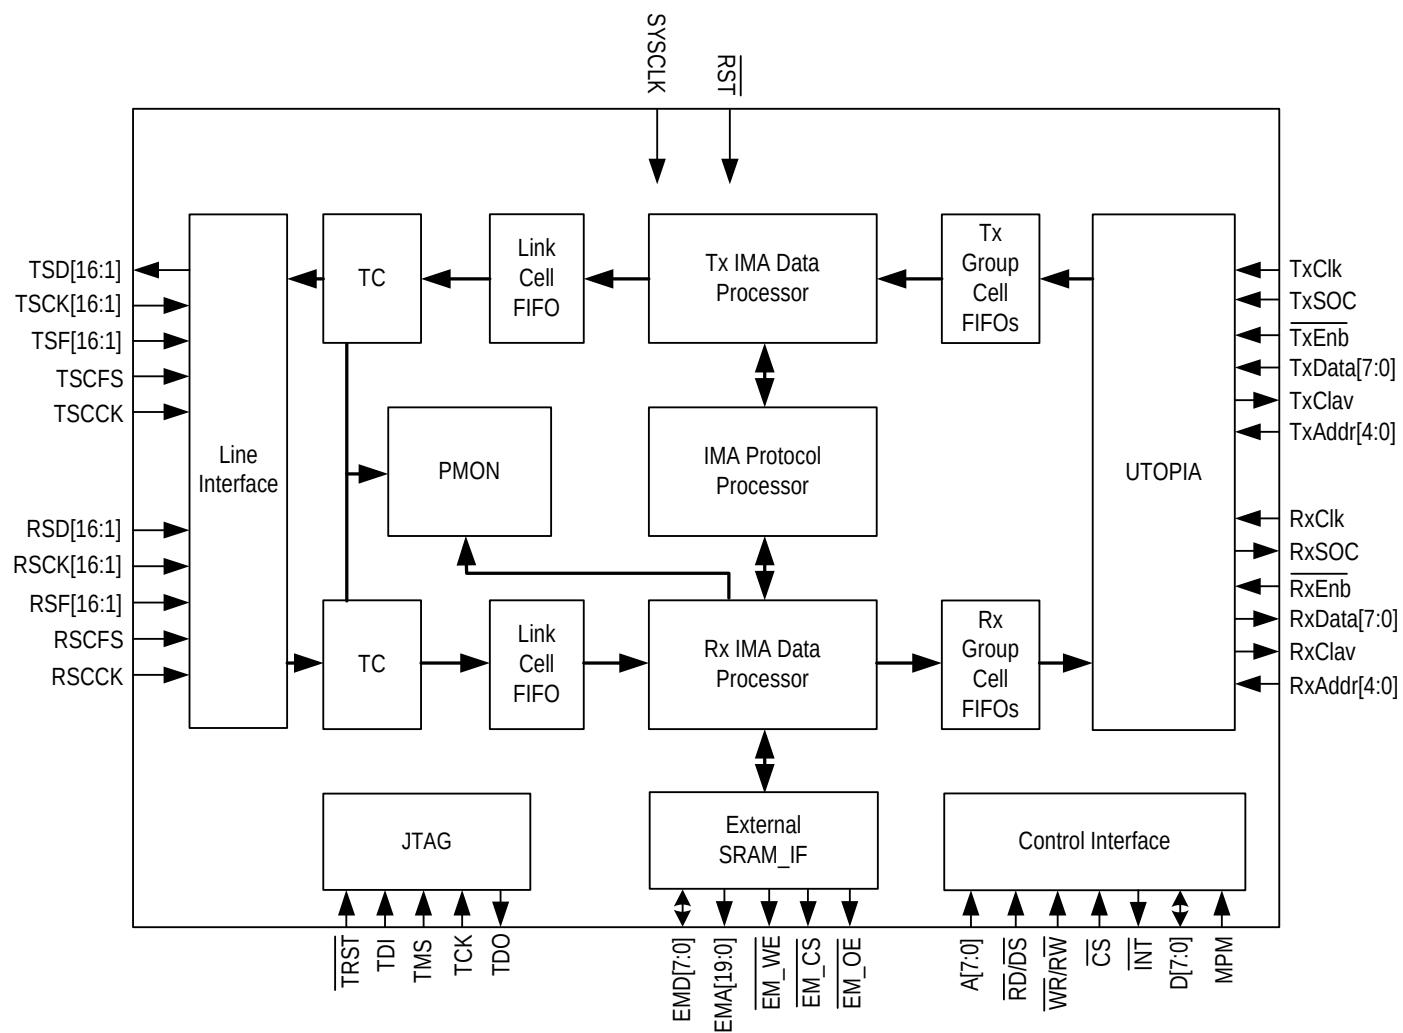


Figure-1 Functional Diagram

1 PIN ASSIGNMENT

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	
A	VDD	VDD	TMS	TDI	IC	EMD6	EMD2	EM_CS	EMA17	EMA16	EMA12	EMA8	EMA4	EMA0	RxData3	RxData6	VDD	VDD	A
B	VDD	VDD	TRST	TCK	IC	EMD7	EMD3	EM_WE	EMA18	EMA15	EMA11	EMA7	EMA3	RxData0	RxData4	RxData7	VDD	VDD	B
C	RSF1	RSCK1	RSD1	TDO	IC	SYSClk	EMD4	EMD0	EMA19	EMA14	EMA10	EMA6	EMA2	RxData1	RxData5	RxSOC	RxClav	RxAddr4	C
D	RSF2	RSCK2	RSD2	NC	IC	IC	EMD5	EMD1	EM_OE	EMA13	EMA9	EMA5	EMA1	RxData2	NC	RxAddr3	RxAddr2	RxAddr1	D
E	RSD4	RSF3	RSCK3	RSD3											RxAddr0	RxEnb	RxCk	TxCk	E
F	RSCK5	RSD5	RSF4	RSCK4											TxCk	TxAddr0	TxAddr1	TxAddr2	F
G	RSF6	RSCK6	RSD6	RSF5											TxAddr3	TxAddr4	TxSOC	TxEnb	G
H	RSD8	RSF7	RSCK7	RSD7											TxData7	TxData6	TxData5	TxData4	H
J	RSCK9	RSD9	RSF8	RSCK8											TxData3	TxData2	TxData1	TxData0	J
K	RSF9	RSD10	RSCK10	RSF10											IC	IC	IC	IC	K
L	RSD11	RSCK11	RSF11	RSD12											WR/RW	CS	IC	IC	L
M	RSCK12	RSF12	RSD13	RSCK13											A5	A6	A7	RD/DS	M
N	RSF13	RSD14	RSCK14	RSF14											A1	A2	A3	A4	N
P	RSD15	RSCK15	RSF15	RSD16											D6	D7	MPM	A0	P
R	RSCK16	RSF16	RSCFS	TSF16	TSD14	TSCK13	TSF12	TSD10	TSCK9	TSF7	TSD5	TSCK4	TSF3	TSD1	IC	D3	D4	D5	R
T	RSCK	TSCK	TSCFS	TSD15	TSCK14	TSF13	TSD11	TSCK10	TSF9	TSCK7	TSF6	TSD4	TSCK3	TSF2	RST	D0	D1	D2	T
U	VDD	VDD	TSD16	TSCK15	TSF14	TSD12	TSCK11	TSF10	TSD8	TSD7	TSCK6	TSF5	TSD3	TSCK2	TSF1	INT	VDD	VDD	U
V	VDD	VDD	TSCK16	TSF15	TSD13	TSCK12	TSF11	TSD9	TSCK8	TSF8	TSD6	TSCK5	TSF4	TSD2	TSCK1	IC	VDD	VDD	V
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	

**Figure-2 IDT82V2616 PBGA260 Package Pin Assignment
(Top View)**

2 PIN DESCRIPTION

Table-1 Pin Description

Name	Pin Number	Input/Output	Description
Global Signals			
SYSCLK	C6	I	SYSCLK: System Clock System clock for the IDT82V2616. Default is 20 MHz.
$\overline{\text{RST}}$	T15	I	$\overline{\text{RST}}$: System Reset System reset signal, low active. After reset, all registers are reset to default values, and both the contents in SRAM and the downloaded software are cleared.
ATM Utopia Interface			
TxCk	F15	I	TxCk: Utopia Transmit Clock Utopia transmit clock used to transfer data from the ATM layer to the IDT82V2616. The frequency of the TxCk should be less than or equal to that of the system clock. Data is sampled on the rising edge of this signal.
$\overline{\text{TxEnb}}$	G18	I	$\overline{\text{TxEnb}}$: Utopia Transmit Enable Utopia low active signal asserted by the ATM layer device during cycles when TxData contains valid cell data. The $\overline{\text{TxEnb}}$ input is sampled on the rising edge of TxCk.
TxAddr4 TxAddr3 TxAddr2 TxAddr1 TxAddr0	G16 G15 F18 F17 F16	I	TxAddr[4:0]: Utopia Transmit Address Utopia transmit port address driven from the ATM layer to poll and select an appropriate port. The TxAddr[4:0] input bus are sampled on the rising edge of TxCk.
TxData7 TxData6 TxData5 TxData4 TxData3 TxData2 TxData1 TxData0	H15 H16 H17 H18 J15 J16 J17 J18	I	TxData[7:0]: Utopia Transmit Data Utopia 8-bit data bus driven from the ATM layer to the IDT82V2616. The TxData[7:0] input bus are sampled on the rising edge of TxCk.
TxClav	E18	High-Z O	TxClav: Utopia Transmit Cell Available Utopia transmit cell available signal from the IDT82V2616 to the ATM layer. A polled port drives TxClav only during each cycle following one with its address on the TxAddr lines. The polled port asserts TxClav high to indicate its corresponding FIFO can accept the transfer of a complete cell, otherwise it deasserts the signal. The TxClav output is updated on the rising edge of TxCk. Note: This pin requires a pull-down resistor.
TxSOC	G17	I	TxSOC: Utopia Transmit Start of Cell Utopia start of cell signal. It will be driven high by the ATM layer when TxData[7:0] contain the first valid byte of a cell. The TxSOC input is sampled on the rising edge of TxCk.
RxCk	E17	I	RxCk: Utopia Receive Clock Utopia receive clock. The frequency of RxCk should be less than or equal to the frequency of the system clock. Data is sampled on the rising edge of this signal.
$\overline{\text{RxEnb}}$	E16	I	$\overline{\text{RxEnb}}$: Utopia Receive Enable When this pin is low, the received data will be transferred on RxData[7:0] in the following cycles. The $\overline{\text{RxEnb}}$ input is sampled on the rising edge of RxCk.

Table-1 Pin Description (Continued)

Name	Pin Number	Input/Output	Description
RxAddr4 RxAddr3 RxAddr2 RxAddr1 RxAddr0	C18 D16 D17 D18 E15	I	RxAddr[4:0]: Utopia Receive Address Utopia receive port address driven from the ATM layer to poll and select an appropriate port. The RxAddr[4:0] input bus are sampled on the rising edge of RxClk.
RxData7 RxData6 RxData5 RxData4 RxData3 RxData2 RxData1 RxData0	B16 A16 C15 B15 A15 D14 C14 B14	High-Z O	RxData[7:0]: Utopia Receive Data Utopia 8-bit data bus driven from the IDT82V2616 to the ATM layer. The RxData[7:0] output bus are updated on the rising edge of RxClk.
RxClav	C17	High-Z O	RxClav: Utopia Receive Cell Available Utopia cell available signal. A polled port drives RxClav only during each cycle following one with its address on the RxAddr lines. The polled port asserts RxClav high to indicate its corresponding FIFO has a complete cell available for transfer to the ATM layer, otherwise it deasserts the signal. The RxClav output is updated on the rising edge of RxClk. Note: This pin requires a pull-down resistor.
RxSOC	C16	High-Z O	RxSOC: Utopia Receive Start of Cell Utopia start of cell pulse. It will be driven high when RxData[7:0] contain the first valid byte of a cell. The RxSOC input is updated on the rising edge of RxClk.
T1/E1 Line Interface			
TSD16 TSD15 TSD14 TSD13 TSD12 TSD11 TSD10 TSD9 TSD8 TSD7 TSD6 TSD5 TSD4 TSD3 TSD2 TSD1	U3 T4 R5 V5 U6 T7 R8 V8 U9 U10 V11 R11 T12 U13 V14 R14	O	TSDn: Transmit Side Data Output TSDn contains the transmit data for the n-th link. The TSDn output is updated on the rising edge of TSCKn or TSCCK if common clock is used.

Table-1 Pin Description (Continued)

Name	Pin Number	Input/Output	Description
TSCK16 TSCK15 TSCK14 TSCK13 TSCK12 TSCK11 TSCK10 TSCK9 TSCK8 TSCK7 TSCK6 TSCK5 TSCK4 TSCK3 TSCK2 TSCK1	V3 U4 T5 R6 V6 U7 T8 R9 V9 T10 U11 V12 R12 T13 U14 V15	I	<p>TSCKn: Transmit Side Clock TSCKn contains the transmit clock for the n-th link.</p> <p>Note: If unused, TSCKn should be connected to ground.</p>
TSF16 TSF15 TSF14 TSF13 TSF12 TSF11 TSF10 TSF9 TSF8 TSF7 TSF6 TSF5 TSF4 TSF3 TSF2 TSF1	R4 V4 U5 T6 R7 V7 U8 T9 V10 R10 T11 U12 V13 R13 T14 U15	I	<p>TSFn: Transmit Side Frame pulse TSFn is used to delineate each frame for the n-th link. The TSFn input is sampled on the falling edge of TSCKn or TSCCK if common clock is used.</p> <p>Note: If unused, TSFn should be connected to ground.</p>
TSCCK	T2	I	<p>TSCCK: Transmit Side Common Clock TSCCK is the transmit clock for links that are configured in Common Clock Mode.</p> <p>Note: If unused, TSCCK should be connected to ground.</p>
TSCFS	T3	I	<p>TSCFS: Transmit Side Common Frame Pulse This signal is used to delineate each frame for links that are configured in Common Clock Mode. The TSCFS input is sampled on the falling edge of TSCCK.</p> <p>Note: If unused, TSCFS should be connected to ground.</p>

Table-1 Pin Description (Continued)

Name	Pin Number	Input/Output	Description
RSD16 RSD15 RSD14 RSD13 RSD12 RSD11 RSD10 RSD9 RSD8 RSD7 RSD6 RSD5 RSD4 RSD3 RSD2 RSD1	P4 P1 N2 M3 L4 L1 K2 J2 H1 H4 G3 F2 E1 E4 D3 C3	I	RSDn: Receive Side Data Input RSDn contains the receive data for the n-th link. The RSDn input is sampled on the falling edge of RSCKn or RSCCK if common clock is used. Note: If unused, RSDn should be connected to ground.
RSCK16 RSCK15 RSCK14 RSCK13 RSCK12 RSCK11 RSCK10 RSCK9 RSCK8 RSCK7 RSCK6 RSCK5 RSCK4 RSCK3 RSCK2 RSCK1	R1 P2 N3 M4 M1 L2 K3 J1 J4 H3 G2 F1 F4 E3 D2 C2	I	RSCKn: Receive Side Clock RSCKn contains the recovered line clock for the n-th link. Note: If unused, RSCKn should be connected to ground.
RSF16 RSF15 RSF14 RSF13 RSF12 RSF11 RSF10 RSF9 RSF8 RSF7 RSF6 RSF5 RSF4 RSF3 RSF2 RSF1	R2 P3 N4 N1 M2 L3 K4 K1 J3 H2 G1 G4 F3 E2 D1 C1	I	RSFn: Receive Side Frame Pulse RSFn is used to delineate each frame for the n-th link. The RSFn input is sampled on the falling edge of RSCKn or RSCCK if common clock is used. Note: If unused, RSFn should be connected to ground.
RSCCK	T1	I	RSCCK: Receive Side Common Clock RSCCK is the receive clock for links that are configured in Common Clock Mode. Note: If unused, RSCCK should be connected to ground.

Table-1 Pin Description (Continued)

Name	Pin Number	Input/Output	Description
RSCFS	R3	I	RSCFS: Receive Side Common Frame Pulse RSCFS is used to delineate each frame for links that are configured in Common Clock Mode. The RSCFS input is sampled on the falling edge of RSCCK. Note: if unused, RSCFS should be connected to ground.
Microprocessor Interface			
MPM	P17	I	MPM: Microprocessor Interface Mode Connected to VDD for Intel; connected to GND for Motorola.
$\overline{RD}/\overline{DS}$	M18	I	$\overline{RD}$: Read Operation In parallel Intel microprocessor interface mode, this pin is asserted low by the microprocessor to initiate a read cycle. Data is output to D[7:0] from the device. $\overline{DS}$: Data Strobe In parallel Motorola microprocessor interface mode, this pin is the data strobe of the parallel interface. During a write operation ($R\overline{W}=0$), data on D[7:0] is sampled into the device. During a read operation ($R\overline{W}=1$), data is output to D[7:0] from the device.
$\overline{WR}/\overline{RW}$	L15	I	$\overline{WR}$: Write Operation In parallel Intel microprocessor interface mode, this pin is asserted low by the microprocessor to initiate a write cycle. Data on D[7:0] is sampled into the device during a write operation. $R\overline{W}$: Read/Write Select In parallel Motorola microprocessor interface mode, this pin is asserted low for write operation and high for read operation.
D7 D6 D5 D4 D3 D2 D1 D0	P16 P15 R18 R17 R16 T18 T17 T16	I/O	D[7:0]: Data Bus These pins function as a bi-directional data bus of the microprocessor interface.
A7 A6 A5 A4 A3 A2 A1 A0	M17 M16 M15 N18 N17 N16 N15 P18	I	A[7:0]: Address Bus These pins function as an address bus of the microprocessor interface.
$\overline{CS}$	L16	I	$\overline{CS}$: Chip Select For each read or write operation, this pin must be changed from high to low, and remains low until the operation is over.
$\overline{INT}$	U16	Open_drain	$\overline{INT}$: Interrupt Request A low level on this pin indicates that an interrupt is pending inside the chip.

Table-1 Pin Description (Continued)

Name	Pin Number	Input/Output	Description
SRAM Interface			
EMD7 EMD6 EMD5 EMD4 EMD3 EMD2 EMD1 EMD0	B6 A6 D7 C7 B7 A7 D8 C8	I/O	EMD[7:0]: Data Bus Data Input/Output pins for the external SRAM. Used for data exchange between the IDT82V2616 and the external SRAM.
EMA19 EMA18 EMA17 EMA16 EMA15 EMA14 EMA13 EMA12 EMA11 EMA10 EMA9 EMA8 EMA7 EMA6 EMA5 EMA4 EMA3 EMA2 EMA1 EMA0	C9 B9 A9 A10 B10 C10 D10 A11 B11 C11 D11 A12 B12 C12 D12 A13 B13 C13 D13 A14	O	EMA[19:0]: Address Bus Address of the external SRAM. Used to select a data entry in the external SRAM.
$\overline{\text{EM_WE}}$	B8	O	$\overline{\text{EM_WE}}$: Write Enable Write enable signal for the external SRAM. When $\overline{\text{EM_WE}}$ pin and $\overline{\text{EM_CS}}$ pin are both low, data can be written to the external SRAM.
$\overline{\text{EM_OE}}$	D9	O	$\overline{\text{EM_OE}}$: Output Enable Output enable signal for the external SRAM. When $\overline{\text{EM_OE}}$ pin and $\overline{\text{EM_CS}}$ pin are both low, data can be read from the external SRAM.
$\overline{\text{EM_CS}}$	A8	O	$\overline{\text{EM_CS}}$: Chip Select Chip enable signal for the external SRAM.
JTAG & Scan Interface			
TCK	B4	I	TCK: JTAG Test Clock This pin is the input clock for JTAG.
TMS	A3	I	TMS: JTAG Test Mode Select This pin has an internal pull-up resistor.
TDI	A4	I	TDI: JTAG Test Data Input This pin is used to load instructions and data into the test logic and has an internal pull-up resistor.
TDO	C4	High-Z	TDO: JTAG Test Data Output This is normally high impedance and is used to read all the serial configuration and test data from the test logic.
$\overline{\text{TRST}}$	B3	I	$\overline{\text{TRST}}$: JTAG Test Port Reset This pin has an internal pull-up resistor.

Table-1 Pin Description (Continued)

Name	Pin Number	Input/Output	Description
Power Supplies and Grounds			
VDD	A1,A2,A17,A18,B1,B2, B17,B18,G7,G12,M7, M12,U1,U2,U17,U18, V1,V2,V17,V18	-	3.3V Power Supply
GND	G8,G9,G10,G11,H7, H8,H9,H10,H11,H12, J7,J8,J9,J10,J11,J12, K7,K8,K9,K10,K11, K12,L7,L8,L9,L10,L11, L12,M8,M9,M10,M11	-	Ground
Others			
IC	K15	-	IC: Internal Connected Internal use. For normal operation, these pins should be connected to VDD.
IC	A5,B5,C5,D5,D6,L18, R15,V16	-	IC: Internal Connected Internal use. For normal operation, these pins should be connected to ground.
IC	K16,K17,K18,L17	-	IC: Internal Connected Internal use. For normal operation, these pins should be left open.
NC	D4,D15	-	NC: No Connection

3 IDT82V2616 INTERFACE

3.1 UTOPIA INTERFACE

The Utopia interface operates in level 2 mode. The IDT82V2616 supports up to 16 Utopia level 2 ports. Each port is assigned an address ranging from 0 to 30. The address value of 31 is reserved and should not be used. All the 31 ports can be individually enabled or disabled by **ConfigUtopiaIF** command.

Each IMA group or UNI link corresponds to a port. For each IMA group, the port address can be assigned by **ConfigGroupInterface** command. For each UNI link, the port address can be assigned by **ConfigUNILink** command. Inside the device, each port corresponds to a GCF (Group Cell FIFO) which is 2 cells deep.

The IDT82V2616 uses cell level handshake for cell transfer. One entire cell is transferred before another port can be selected. The start of a cell is marked by TxSOC and RxSOC signals in the transmit and the receive directions. These two signals are active during the first byte of a cell.

3.1.1 UTOPIA LOOPBACK FUNCTION

For diagnostic purpose, the capability to loop back all Utopia traffic to Utopia bus is provided. This loopback is called Utopia loopback and can be enabled by **ConfigLoopMode** command. In this mode, cells are taken from TGCFs (Transmit Group Cell FIFO) and sent to the respective RGCFs (Receive Group Cell FIFO). When in Utopia loopback mode, cells will not be transmitted to the line interface. Refer to [Figure-3](#).

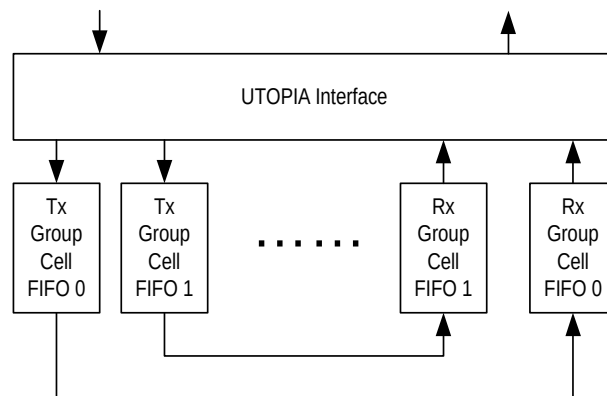


Figure-3 Utopia Loopback

3.2 LINE INTERFACE

3.2.1 LINE INTERFACE WORK MODES

For different framers, the line interface can be configured to different Work Mode to adapt to different data format. Figure-4 shows all the 16 Work Modes and Table-2 lists IMA layer data rate for each mode.

In channelized mode, all the framing bits and signalling bits are set to zero in transmit direction. And all the received signalling bits and framing bits are discarded in receive direction. In unchannelized mode, all bits are utilized for data transfer.

The Work Mode is selected by AddTxLink or AddRxLink command when the link is in an IMA group. The Work Mode is selected by ConfigUNILink command when a link is used as a UNI link.

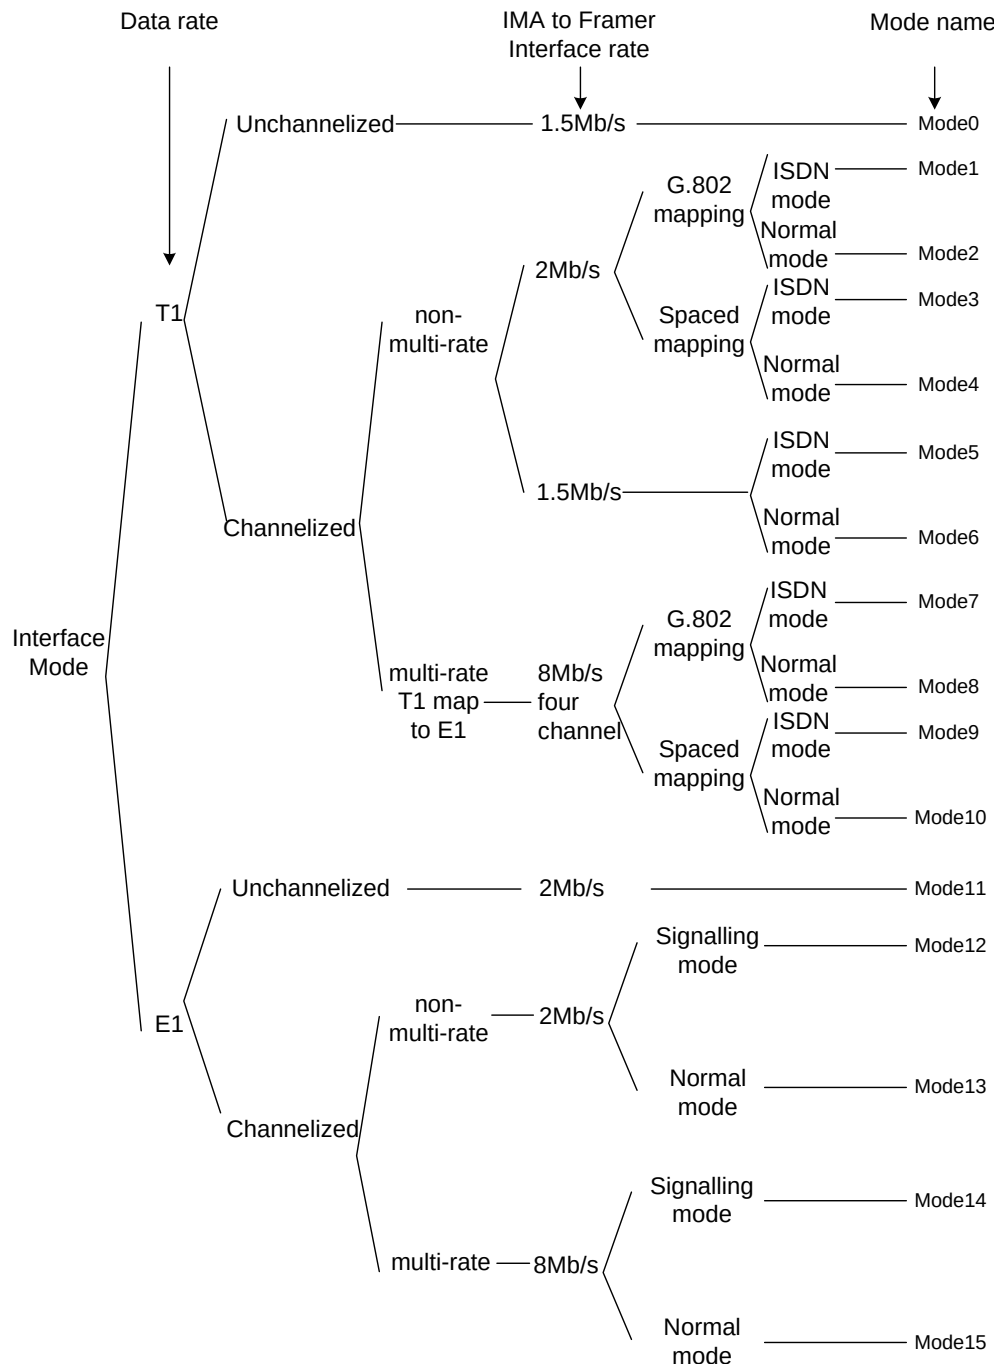


Figure-4 Line Interface Work Modes

Table-2 Data Rates of Different Modes

Mode	IMA Data Rate Per Channel (Maximum)	Interface Clock (Maximum)
Mode0	1.544 Mb/s	1.544 MHz
Mode1	1.472 Mb/s	2.048 MHz
Mode2	1.536 Mb/s	2.048 MHz
Mode3	1.472 Mb/s	2.048 MHz
Mode4	1.536 Mb/s	2.048 MHz
Mode5	1.472 Mb/s	1.544 MHz
Mode6	1.536 Mb/s	1.544 MHz
Mode7	1.472 Mb/s	8.192 MHz
Mode8	1.536 Mb/s	8.192 MHz
Mode9	1.472 Mb/s	8.192 MHz
Mode10	1.536 Mb/s	8.192 MHz
Mode11	2.048 Mb/s	2.048 MHz
Mode12	1.920 Mb/s	2.048 MHz
Mode13	1.984 Mb/s	2.048 MHz
Mode14	1.920 Mb/s	8.192 MHz
Mode15	1.984 Mb/s	8.192 MHz

3.2.1.1 Mode0

In this mode, the transmit and receive data are viewed as a continuous 1.544Mb/s serial stream. There is no concept of time slot in an unchannelized link. Each eight bits are grouped into an octet with arbitrary alignment. The first bit received/transmitted is the most significant bit of an octet while the last bit is the least significant bit. The 1.544 MHz data stream clock is provided by the system.

The 1.544 MHz clock in Tx and Rx directions can be either common clock or independent clock. If common clock is used, TSCCK and RSCCK are used as Tx clock and Rx clock respectively, and TSCFS and RSCFS are used as common frame pulse in Tx and Rx directions respectively. If independent clock is used, TSCK[i] and RSCK[i] are used as Tx clock and Rx clock respectively, and TSF[i] and RSF[i] are used as the frame pulse in Tx and Rx directions respectively.

3.2.1.2 Mode1~Mode4


In these four modes, the transmit/receive data rate is T1 channelized while the line interface timing clock is 2.048 MHz (E1 clock). Thus the mapping between T1 frame and E1 frame is needed. Two mapping modes can be used: G.802 mapping mode and spaced mapping mode.

Each mapping mode can be further divided into two data modes: T1 ISDN mode and T1 normal mode. The mapping is done in a frame-by-frame fashion and the unassigned time slots are set to zero.

In these modes, the clock for Tx and Rx can be either common clock or independent clock. If common clock is used, TSCCK and RSCCK are used as Tx clock and Rx clock respectively, and TSCFS and RSCFS are used as common frame pulse in Tx and Rx directions respectively. If independent clock is used, TSCK[i] and RSCK[i] are used as Tx clock and Rx clock respectively, and TSF[i] and RSF[i] are used as the frame pulse in Tx and Rx directions respectively.

G.802 Mapping

This mode supports ITU-T Recommendation G.802, which describes how 24 (or 23, in signalling mode) T1 time slots and one framing bit (totally 193/185 bits per T1/T1-ISDN frame) are mapped to 32 E1 time slots (256 bits). This mapping is done by mapping the 24 (or 23 in T1-ISDN mode) T1 time slots to TS1~TS15 and TS17~TS25 (or TS17~TS24), and mapping the framing bit to bit 1 of TS26/TS25. TS0, TS16, TS27/TS26 through TS31 are all unassigned and set to zero (refer to [Figure-5](#)).

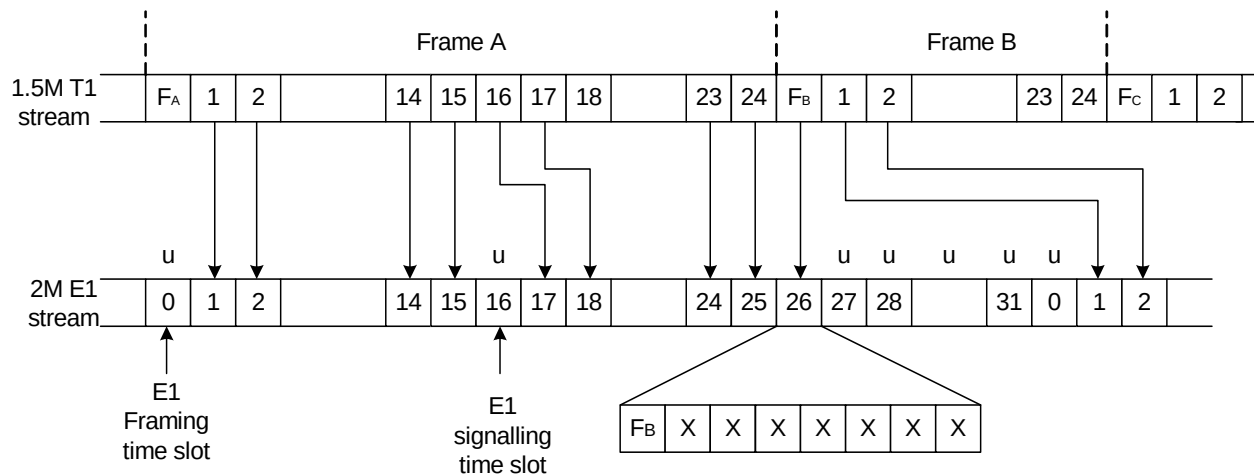


1. X=unused bit
2. u=unassigned time slot
3. F_A, F_B and F_C are T1 framing bits for frame A, B and C respectively.

Figure-5 G.802 Mapping Mode

Spaced Mapping

In this mode, T1 to E1 mapping makes every fourth time slot unassigned (i.e., 4, 8, 12, 16, 20, 24 and 28). Refer to Figure-6. Suppose T1 time slot x is mapped to E1 time slot y . We have $y = x + \text{int}((x-1)/3)$, where

$\text{int}(n)$ is the largest integer no greater than n . The framing bit is assigned to the first bit of TS0. This distribution of unassigned time slots averages out the idle time slots and optimizes the framer's slip buffer's usage.

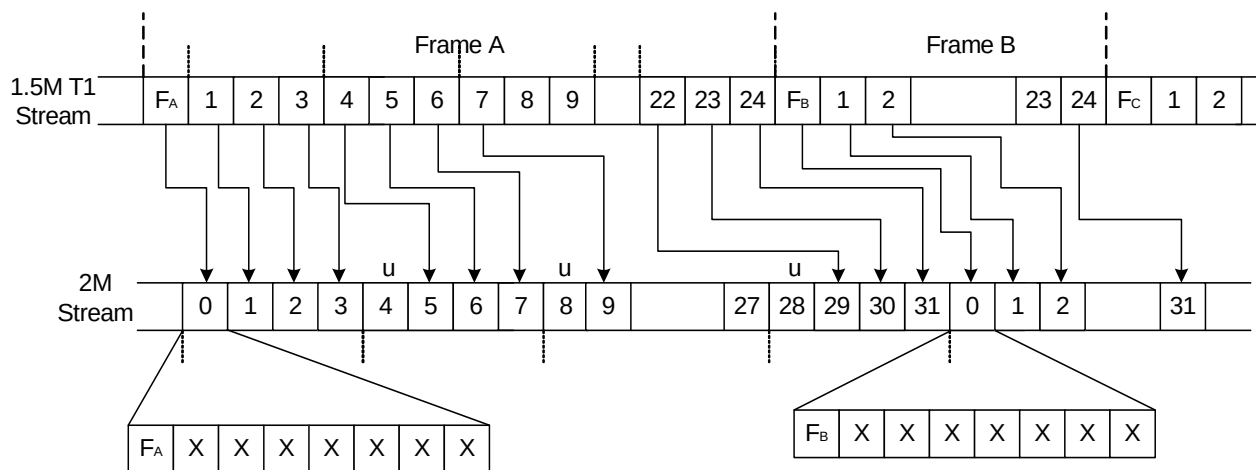

1. X=unused bits
2. u=unassigned time slot
3. F_A, F_B and F_C are T1 framing bits for frame A, B and C respectively.
4. Mapping rule: If T1 time slot x is mapped to E1 time slot y , $y = x + \text{int}(x/3)$. Here $\text{int}(n)$ is the largest integer no greater than n .

Figure-6 Spaced Mapping Mode

T1 ISDN Mode

The T1 ISDN mode corresponds to the use of 23 time slots to transmit data, that is, T1 data is not transmitted during the framing bit and time slot 24. Therefore, only 23 time slots are considered useful and are mapped while time slot 24 and the framing bit are meaningless and are not mapped.

T1 Normal Mode

In this mode, the data is not transmitted during the framing bit while all the other 24 time slots are used.

3.2.1.3 Mode5~Mode6

In these modes, the transmit/receive data rate is T1 channelized, and the line interface timing clock is 1.544 MHz (T1 clock). The ISDN mode and normal mode are defined in [T1 ISDN Mode](#) and [T1 Normal Mode](#) on [page 15](#).

In these modes, the clock for Tx and Rx can be either common clock or independent clock. If common clock is used, TSCCK and RSCCK are used as Tx clock and Rx clock respectively, and TSCFS and RSCFS are used as common frame pulse in Tx and Rx directions respectively. If independent clock is used, TSCK[i] and RSCK[i] are used as Tx clock and Rx clock respectively, and TSF[i] and RSF[i] are used as the frame pulse in Tx and Rx directions respectively.

3.2.1.4 Mode7~Mode10

In these modes, only TSCCK and RSCCK are used to input the 8.192 MHz clock in Tx and Rx directions respectively, and TSCFS and RSCFS are used as common frame pulse in Tx and Rx directions respectively. All the TSCK[i], TSF[i], RSCK[i] and RSF[i] pins are not used and should be connected to ground. The unused RSD pins should also be connected to ground.

The data pins used for multiplexing are shown in the table below:

Table-3 Pins Used in Multi-Rate Multiplex Mode

Tx Pin Name	Rx Pin Name	Multiplexed Channel
TSD[1]	RSD[1]	channel 1~channel 4
TSD[2]	RSD[2]	channel 5~channel 8
TSD[3]	RSD[3]	channel 9~channel 12
TSD[4]	RSD[4]	channel 13~channel 16

Multi-rate

Multi-rate is used for multiplexing four E1 streams into one high-speed stream. [Figure-7](#) shows four 2.048 MHz E1 streams multiplexed into a single 8.192 MHz stream through one data pin. The multiplexing uses the round-robin technology. The system provides 8.192 MHz common clock and 8KHz common frame pulse.

For T1 channel, before multiplexing, a mapping from each T1 frame to E1 frame is first done. Then the mapped 4 E1 channels are multiplexed into one 8.192 MHz stream as [Figure-7](#) shows.

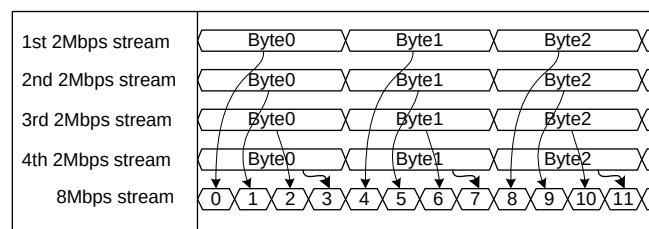


Figure-7 Multiplexing Four 2 MHz Streams into One 8 MHz Stream

T1 Multi-Rate Mode

Since there are two T1 to E1 mapping methods that can be used as described in [G.802 Mapping](#) and [Spaced Mapping](#) on [page 13](#), two new modes can be derived when multiplexing is further used. Again, T1 ISDN data mode and T1 normal mode can be applied, thus we have 4 more modes: mode7~mode10.

3.2.1.5 Mode11

In this mode, the transmit and receive data are viewed as a continuous 2.048Mb/s serial stream. There is no concept of time slot in an unchannelized link. Each eight bits are grouped into an octet. Whether it is in byte alignment or not is dependent on the TSF or TSCFS signal. The first bit received/transmitted is the most significant bit of an octet while the last bit is the least significant bit. The 2.048 MHz data stream clock is provided by the system.

In this mode, the clock for Tx and Rx can be either common clock or independent clock. If common clock is used, TSCCK and RSCCK are used as Tx clock and Rx clock respectively. If independent clock is used, the clock for the i-th link comes from TSCK[i] and RSCK[i] in Tx and Rx directions respectively.

In Common Clock Mode, the TSCFS signal is used for byte alignment pulse for the transmitted bit stream while in Independent Clock Mode, the TSF[i] signal is used for byte alignment pulse for the i-th transmit link.

The frequency for TSF[i] (or TSCFS) is the result of TSCK[i] (or TSCCK) divided by 256 and the pulse width of this signal is one cycle of TSCK[i] or TSCCK signal.

3.2.1.6 Mode12~Mode13

These two modes are E1 non-multi-rate combined with different signalling modes. The non-multi-rate is the channelized generic E1 interface, i.e., a 2.048 MHz channel is divided into 32 sub-channels (also called time slots), and these sub-channels are used to exchange data.

In these modes, the clock for Tx and Rx can be either common clock or independent clock. If common clock is used, TSCCK and RSCCK are used as Tx clock and Rx clock respectively, and TSCFS and RSCFS are used as common frame pulse in Tx and Rx directions respectively. If independent clock is used, TSCK[i] and RSCK[i] are used as Tx clock and Rx clock respectively, and TSF[i] and RSF[i] are used as the frame pulse in Tx and Rx directions respectively.

Channelized Non-Multi-Rate E1

In this mode, the system provides 2.048 MHz clock and 8KHz frame pulse for E1 bit stream exchange between the IDT82V2616 and the line interface. The E1 time slot 0 is not used for data exchange while time slot 16 may or may not be used for data exchange, depending on Signalling or Non-Signalling mode.

Signalling and Non-Signalling

In signalling mode, time slot 0 and time slot 16 are not used for data exchange between the IDT82V2616 and the line interface. In non-signalling mode, only time slot 0 is not used for data exchange.

3.2.1.7 Mode14~Mode15

The multi-rate concept is defined in [Multi-rate](#) on [page 15](#), and the signalling and non-signalling concepts are defined in [Signalling and Non-Signalling](#) on [page 16](#). The system provides 8.192 MHz common clock and 8KHz common frame pulse.

In these modes, only the TSCCK and RSCCK pins are used to input the 8.192 MHz clock in Tx and Rx directions respectively, and TSCFS and RSCFS are used as common frame pulse in Tx and Rx directions respectively. The TSCK[i], TSF[i], RSCK[i] and RSF[i] pins are not used and should be connected to ground. The unused RSD pins should also be connected to ground.

The data pins used for multiplexing are shown in [Table-3](#).

3.2.2 LINE INTERFACE TIMING CLOCK MODES

Two timing clock modes can be selected. One is Common Clock Mode, the other is Independent Clock Mode. The timing clock mode can be individually configured for each link. In IMA mode, AddTxLink

command and AddRxLink command can be used to configure the clock mode in the transmit and receive directions respectively. In UNI mode, ConfigUNILink command can be used to configure the clock mode.

If a link is configured in Common Clock Mode, TSCCK and RSCCK are used as Tx clock and Rx clock respectively, and TSCFS and RSCFS are used as common frame pulse in Tx and Rx directions respectively.

If a link is configured in Independent Clock Mode, TSCK[i] and RSCK[i] are used as Tx clock and Rx clock respectively, and TSF[i] and RSF[i] are used as the frame pulse in Tx and Rx directions respectively.

These two timing clock modes can be configured at the same time, i.e., some links can work in Common Clock Mode while other links can work in Independent Clock Mode.

The line interface mode7~mode10 and mode14~mode15 cannot be used in Independent Clock Mode.

3.2.3 LINE INTERFACE LOOPBACK FUNCTION

The line interface supports two line loopback functions, one is external loopback mode and the other is internal loopback mode. The two loopback modes can be selected by ConfigLoopMode command.

In external loopback mode, all the data received at the line side is looped back to the transmit side and is transmitted out. When this function is enabled, all the links will be in external loopback mode. Data will not be transmitted to the Utopia interface.

In internal loopback mode, the data transmitted are also sent to the receive side. When this function is enabled, all the links will be in internal loopback mode. Data will not be transmitted to the FE Utopia interface.

3.3 EXTERNAL MICROPROCESSOR INTERFACE

The IDT82V2616 uses an embedded controller and a downloaded software (IMAOS16 or IMAOS16_Slave¹) to communicate with the external microprocessor. The external microprocessor sends commands to configure the device and read feedbacks. The downloaded software interprets these commands and the embedded controller executes these commands. This relieves programmers from accessing vast registers. Just by accessing a few registers, programmers can use a set of well-defined commands to communicate with IDT82V2616.

3.3.1 EXTERNAL MICROPROCESSOR INTERFACE SELECTION

The IDT82V2616 supports both non-multiplexed Intel and non-multiplexed Motorola microprocessor interfaces. For Intel microprocessor interface, the MPM pin should be connected to VDD; for Motorola microprocessor interface, the MPM pin should be connected to ground.

1. IMAOS16 is used when the device is in normal communication while IMAOS16_Slave is used when the device operates in Slave Mode. Refer to [8.1 Group Auto Detect](#).

3.3.2 COMMAND FIFOS

The embedded controller uses two FIFOs to communicate with the external microprocessor. One is Input FIFO, which is used to receive commands and data from the external microprocessor; the other is Output FIFO, which is used to send data to the external microprocessor. The lengths of these two FIFOs are both 16 bytes. These two FIFOs can only be accessed through registers.

3.3.3 REGISTERS

The IDT82V2616 provides 9 registers for the external microprocessor to load software to the device, send commands and read feedbacks.

3.3.4 REGISTER MAP

Table-4 Register Map

Address (Hex)	Register	R/W	Map							
			b7	b6	b5	b4	b3	b2	b1	b0
00	INPUT_FIFO_LENGTH_REG	R/W	-	-	-	Input_Message_Length[4:0]				
01	OUTPUT_FIFO_LENGTH_R EG	R	-	-	-	Output_Message_Length[4:0]				
02	OUTPUT_FIFO_DATA_REG	R	Output_Data[7:0]							
03	INPUT_FIFO_DATA_REG	R/W	Input_Data[7:0]							
04	FIFO_INT_ENABLE_REG	R/W	-	-	-	-	-	Input_FIFO_empt y_int_en	Input_FIFO_ov erflow_int_en	Output_FIFO_m sg_ava ilable_int_en
05	FIFO_STATE_REG	R	-	-	-	-	-	Input_FIFO_empt y_state	Input_FIFO_ov erflow_state	Output_FIFO_m sg_ava ilable_state
06	FIFO_INT_RESET_REG	W	-	-	-	-	-	Input_FIFO_empt y_int_rst	Input_FIFO_ov erflow_int_rst	Output_FIFO_m sg_ava ilable_int_rst
07	OUTPUT_FIFO_INTERNAL_ STATE_REG	R	-	-	-	Output_remain_msg_length[4:0]				
08	INPUT_FIFO_INTERNAL_ST ATE_REG	R	-	-	-	Input_remain_msg_length[4:0]				

3.3.5 REGISTER DESCRIPTION

Table-5 Input FIFO Data Length Register (INPUT_FIFO_LENGTH_REG)
(R/W, Address=00H)

Symbol	Position	Default	Description
-	7-5	0	Reserved.
Input_Message_Length[4:0]	4-0	0	These 5 bits contain the message length in the Input FIFO which should be written after the message is sent to the Input FIFO. The valid length is from 0 to 16 bytes.

Table-6 Output FIFO Data Length Register (OUTPUT_FIFO_LENGTH_REG)
(R, Address=01H)

Symbol	Position	Default	Description
-	7-5	0	Reserved.
Output_Message_Length[4:0]	4-0	0	These 5 bits contain the length of the message in the Output FIFO. Valid length is from 0 to 16 bytes.

Table-7 Output FIFO Data Register (OUTPUT_FIFO_DATA_REG)
(R, Address=02H)

Symbol	Position	Default	Description
Output_Data[7:0]	7-0	0	These bits contain the data from the message Output FIFO. The complete message can be retrieved by continuously reading this register.

Table-8 Input FIFO Data Register (INPUT_FIFO_DATA_REG)
(R/W, Address=03H)

Symbol	Position	Default	Description
Input_Data[7:0]	7-0	0	These bits contain data to be sent to the Input FIFO. By continuously writing to this register, a complete message can be sent. Before the message is sent, the Input_FIFO_empty_state bit in the EP_interrupt status register should be polled to see whether the Input FIFO is available for writing. After the message is sent, the message length should be written to the EP_Tx_length register.

Table-9 FIFO Interrupt Enable Register (FIFO_INT_ENABLE_REG)
(R/W, Address=04H)

Symbol	Position	Default	Description
-	7-3	0	Reserved.
Input_FIFO_empty_int_en	2	0	Input FIFO empty interrupt enable 0: Interrupt disabled 1: Interrupt enabled
Input_FIFO_overflow_int_en	1	0	Input FIFO overflow interrupt enable 0: Interrupt disabled 1: Interrupt enabled
Output_FIFO_msg_available_int_en	0	0	Output FIFO message available interrupt enable 0: Interrupt disabled 1: Interrupt enabled

Table-10 FIFO Interrupt Status Register (FIFO_STATE_REG)
(R, Address=05H)

Symbol	Position	Default	Description
-	7-3	0	Reserved.
Input_FIFO_empty_state ⁽¹⁾	2	0	Input FIFO availability status 0: Input FIFO is not available for writing. 1: Input FIFO is available for writing.
Input_FIFO_overflow_state	1	0	Input FIFO overflow status 0: Input FIFO is not full. 1: Input FIFO is full.
Output_FIFO_msg_available_state	0	0	Output FIFO message availability status 0: No message is in the Output FIFO. 1: A message is in the Output FIFO.

¹ For the first time a message is to be sent, this bit is a Don't Care.

Table-11 FIFO Interrupt Reset Register (FIFO_INT_RESET_REG)
(W, Address=06H)

Symbol	Position	Default	Description
-	7-3	0	Reserved.
Input_FIFO_empty_int_rst	2	0	Write '1' to clear the Input_FIFO_empty_state status.
Input_FIFO_overflow_int_rst	1	0	Write '1' to clear the Input_FIFO_overflow_state status.
Output_FIFO_msg_available_int_rst	0	0	Write '1' to clear the Output_FIFO_msg_available_state status.

Table-12 Output FIFO Internal State Register (OUTPUT_FIFO_INTERNAL_STATE_REG)
(R, Address=07H)

Symbol	Position	Default	Description
-	7-5	0	Reserved.
Output_remain_msg_length[4:0]	4-0	0	The length of the message remaining in the Output FIFO to be read by the external microprocessor.

Table-13 Input FIFO Internal State Register (INPUT_FIFO_INTERNAL_STATE_REG)
(R, Address=08H)

Symbol	Position	Default	Description
-	7-5	0	Reserved.
Input_remain_msg_length[4:0]	4-0	0	The length of the message remaining in the Input FIFO to be processed by the IDT82V2616.

3.3.6 PROCEDURE OF LOADING SOFTWARE AND SENDING COMMANDS

After chip reset, the IMAOS16 or IMAOS16_Slave (a binary file shipped with the chip) should be loaded to the IDT82V2616 to interpret commands. The procedure of loading the IMAOS16 or IMAOS16_Slave

is the same with that of sending the commands. [Figure-8](#) shows the Input-FIFO write process and [Figure-9](#) shows the Output-FIFO read process.

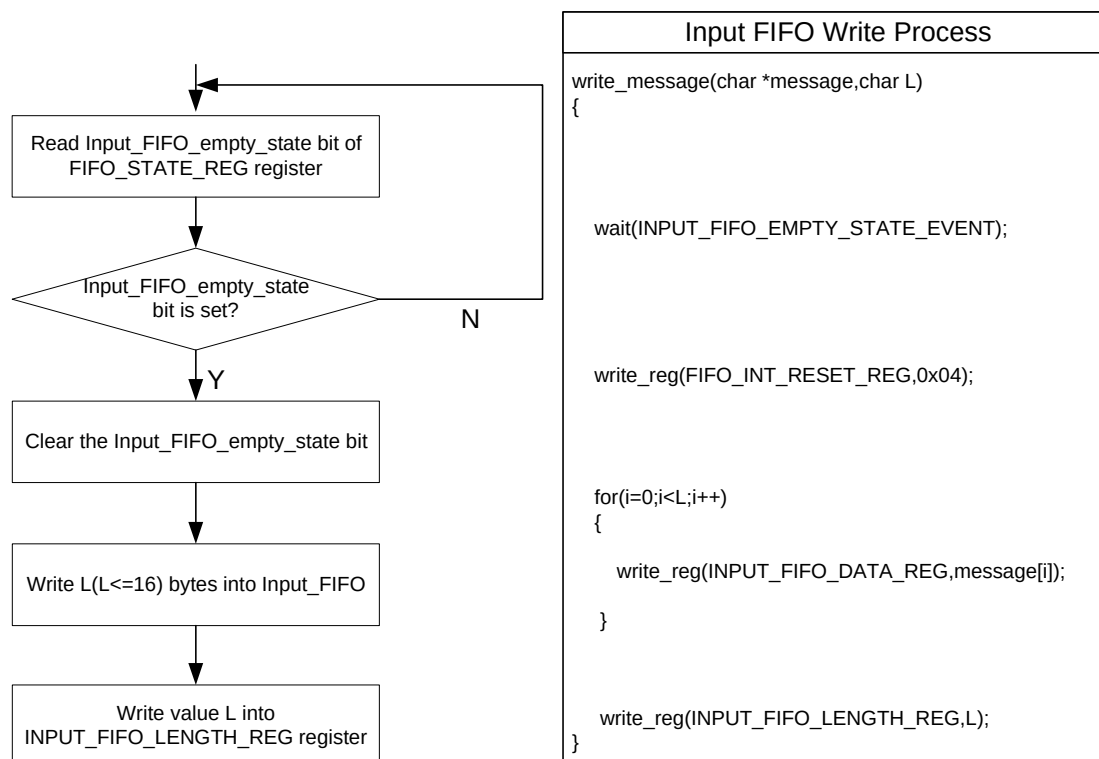


Figure-8 Input FIFO Write Process

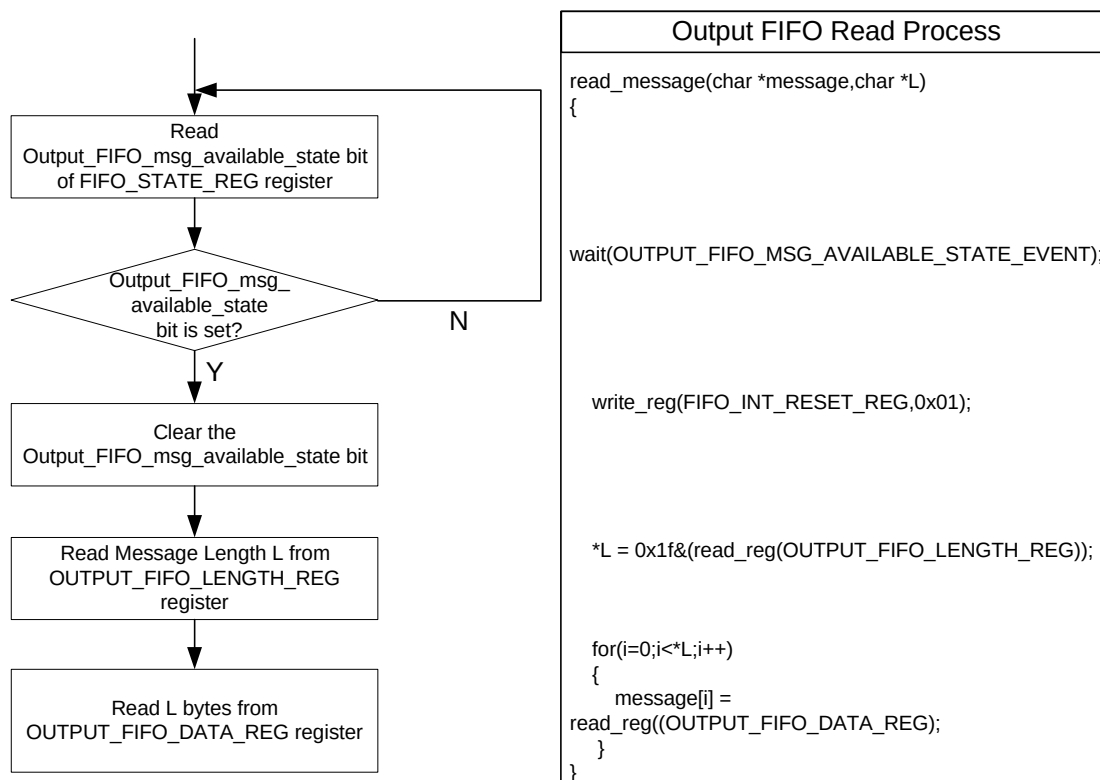


Figure-9 Output FIFO Read Process

3.4 SRAM INTERFACE

The SRAM interface has an 8-bit wide data bus, EMD[7:0], and a 20-bit wide address bus, EMA[19:0]. The minimum throughput is 8Mbyte/s and the minimum access time is 40ns.

When both $\overline{\text{EM_WE}}$ pin and $\overline{\text{EM_CS}}$ pin are low, data can be written to the external SRAM. When both $\overline{\text{EM_OE}}$ pin and $\overline{\text{EM_CS}}$ pin are low, data can be read from the external SRAM.

The size of the SRAM can be selected from 4K byte to 1024 Kbyte. When the minimum 4K byte memory is selected, only 12 address pins will be used. Different memory size will affect different delay compensation capability. [Table-14](#) and [Table-15](#) show memory size vs. maximum delay tolerance in T1 and E1 unchannelized modes respectively.

Table-14 Maximum Delay Tolerance Value for Different SRAM Size in T1 Unchannelized Mode

SRAM Used (Kbyte)	Maximum Delay Tolerance (ms)	Address Bus Used
1024	281	EMA[19:0]
512	141	EMA[18:0]
256	70	EMA[17:0]
128	35	EMA[16:0]
64	17.58	EMA[15:0]
32	8.79	EMA[14:0]
16	4.39	EMA[13:0]
8	2.20	EMA[12:0]
4	1.10	EMA[11:0]

Table-15 Maximum Delay Tolerance Value for Different SRAM Size in E1 Unchannelized Mode

SRAM Used (Kbyte)	Maximum Delay Tolerance (ms)	Address Bus Used
1024	212	EMA[19:0]
512	106	EMA[18:0]
256	53	EMA[17:0]
128	26.5	EMA[16:0]
64	13.25	EMA[15:0]
32	6.625	EMA[14:0]
16	3.31	EMA[13:0]
8	1.66	EMA[12:0]
4	0.83	EMA[11:0]

4 IMA AND UNI FUNCTIONS¹

The IDT82V2616 is capable of combining the transport bandwidth of multiple links into one single logical link. The logical link is called a group. The IDT82V2616 supports up to 8 independent groups with each group capable of supporting from 1 to 16 links. Links that are assigned to an IMA group are called in IMA mode while links that are not assigned to any IMA group can be used in UNI mode.

4.1 IMA MODE

4.1.1 IMA FRAME

An IMA frame is defined as M consecutive cells, numbered from 0 to M-1 on each link, across all the links in an IMA group. It is generated by inserting an ICP cell after every M-1 cells per link. Values of M supported are 32, 64, 128 and 256, which can be programmed for all the links in a group by **ConfigGroupPara** command. The ICP cell occurs within the frame at the ICP cell offset position and should be at the same position throughout the frame. The ICP offset is programmable on a per-link basis by **AddTxLink** command.

4.1.2 TRL (TIMING REFERENCE LINK)

Within an IMA group, a TRL should be selected to pass synchronization from the transmit to the receive end. The TRL can be selected by **ConfigTRLLink** command.

4.1.3 STUFFING MODE

The insertion of stuff cells is to compensate for timing differences between links within an IMA group.

There are two kinds of stuffing method: CTC (Common Transmit Clock) mode and ITC (Independent Transmit Clock) mode. The stuffing method is selected by **ConfigGroupWorkMode** command.

In CTC mode, a stuff cell is added after every 2048 ICP, filler and ATM layer cells. The stuff cell is generated by repeating the ICP cell. Both the ICP cell and the stuff cell are identified as ICP cells via the Link

Stuff Indication (LSI) field of the ICP cell. The stuff cell event will occur on the same frame on all the links. However, the pre-defined ICP offset will determine at which cell in the frame the stuff event will occur.

In ITC mode, a stuff cell is added to the TRL the same way as in CTC mode, that is, it is added after every 2048 ICP, filler and ATM layer cells. On all other links in the group, stuff cells are added as necessary to compensate for timing differences between the TRL and other links of the group.

In an IMA group, if at least one of the links uses independent clock pin as its clock input, stuff mode can only be set as ITC. If all the links within the group use common clock pin (i.e., TSCCK and RSCCK) as their clock input, stuff mode can be set as either CTC or ITC. For details about the two clock modes, please refer to [3.2.2 Line Interface Timing Clock Modes](#).

4.1.4 LINK BACKUP

The group link backup function is used to add a link to the group for backup in case of link failure. This function is only enabled when the device is working in symmetry mode.

The link to be added to the group is specified as backup link or non-backup link in "AddLink" command (i.e., **AddTxLink** and **AddRxLink** commands). Note that only one backup link is supported in each group. If several links are specified as backup links, only the last added backup link is regarded as a backup link.

When a link failure event occurred, the IDT82V2616 will automatically pick up a backup link and start to activate the link.

4.2 UNI MODE

ConfigDev command and **ConfigUNILink** command can be used to configure a UNI link. **ConfigDev** command can be used to configure TC Work Mode, TC Alpha and Delta value and LCD threshold. **ConfigUNILink** command can be used to configure link physical ID, Tx and Rx Utopia port, line interface Work Mode and clock mode.

When a link is configured in UNI mode, IMA functions are bypassed. ATM cells are simply transmitted from the Utopia interface to the line interface.

¹. Chapter 4, 5, 6 and 7 are specific to IMAOS16. Details about IMAOS16_Slave are provided in Chapter 8.

5 PROGRAMMING INFORMATION FOR IMAOS16

5.1 COMMAND TYPES

There are three types of messages:

1. Command message (external MPU $\Rightarrow$ embedded controller)
2. Reply message (embedded controller $\Rightarrow$ external MPU)
3. Notification message (embedded controller $\Rightarrow$ external MPU)

The formats of the three types of messages are different.

5.1.1 COMMAND MESSAGE




Figure-10 Command Message Format

Command Handler

From 0~126 defined by user's driver. It is the sequence number of the sent message.

Command Type

The encoding of the command. Refer to [5.2 Command Encoding](#).

Command Parameters

The Parameters of the command.

5.1.2 COMMAND REPLY MESSAGE




Figure-11 Command Reply Message Format

Command Reply Handler

The original Command Handler plus 128.

Command Replies

The replies of the original command.

5.1.3 ALARM MESSAGE




Figure-12 Alarm Message Format

Alarm Handler

FFH.

Link ID /Group ID

The link ID or group ID.

Alarm Type

The sequence in [Table-53 Failure/Alarm Signals](#) on [page 65](#).

5.2 COMMAND ENCODING

Table-16 Command Encoding⁽¹⁾

Command Encoding	Command Name
01H	ConfigDev
03H	ConfigUtopiaIF
04H	ConfigLoopMode
05H	ConfigGroupPara
06H	ConfigGroupInterFace
07H	ConfigGroupWorkMode
08H	ConfigGSMTimers
09H	ConfigTRLLink
0AH	ConfigIFSMPara
0BH	AddTxLink
0CH	AddRxLink
0DH	ConfigUNILink
0EH	StartGroup
0FH	StartLASR
10H	InhibitGrp
11H	NotInhibitGrp
12H	RestartGrp
13H	DeleteGrp
14H	RecoverLink
15H	DeleteLink
16H	DeactLink
17H	GetGroupState
18H	GetGroupDelayInfo
19H	GetLinkState
1AH	GetGrpPerf
1BH	GetLinkPerf
1CH	GetConfigPara
1DH	GetGrpWorkingPara
1EH	GetLinkWorkingPara
1FH	StartTestPattern
20H	GetLoopedTestPattern
21H	StopTestPattern
22H	GetVersionInfo

¹ If the user sends a value not listed in this table, IMAOS will be in unknown state.

5.3 COMMAND DESCRIPTION

Each command description contains two parts: the Command Parameters and the Command Reply. In the Command Parameters part, a figure is used to illustrate the byte sequence of the parameters. All the parameters description are listed below the figure. In the Command Reply part, a figure is used to illustrate the reply sequence in the reply message. The reply description is listed below the figure. For detailed information about the packet of command message and reply message, refer to [page 24](#).

Table-17 ConfigDev Command (Encoding: 01H)

This is the first command to be issued. If this command is not issued, the default value will be used.

Command Parameters													
<div><div>1-2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div></div> <div><div>SysClk</div><div>T_{in}</div><div>T_{exit}</div><div>No</div><div>TCWorkMode</div><div>TCAAlpha&Delta</div><div>TCLCD_Threshold</div></div>													
Byte Sequence	Parameter Name	Default	Description										
1-2	SysClk	4E20H	SysClk=Frequency of System Clock (Hz)/1000. For example, if the system clock is 20 MHz, this value would be 20000. Unit: sys-ticks in 1 ms (MSB first) Note: Wrong configuration will make IMAOS's timer work improperly.										
3	T _{in}	2H	Timer of entering failure alarm state. When a defect persists for a period set by this timer, the IDT82V2616will enter failure alarm state. Unit: 250 ms										
4	T _{exit}	0AH	Timer of exiting failure alarm state. If a defect no longer exists for a period set by this timer, the IDT82V2616 will exit failure alarm state. Unit: 250 ms										
5	No	0H	Reserved. Write 0 to this field.										
6	TCWorkMode	7H	<table><tr><th>Bit Position</th><th>Description</th></tr><tr><td>7~3</td><td>Don't Care</td></tr><tr><td>2</td><td>1: Enable Tx TC scrambling (default); 0: Disable Tx TC scrambling</td></tr><tr><td>1</td><td>1: Enable Rx TC HEC error correct control (default); 0: Disable Rx TC HEC error correct control</td></tr><tr><td>0</td><td>1: Enable Rx TC de-scrambling (default); 0: Disable Rx TC de-scrambling</td></tr></table>	Bit Position	Description	7~3	Don't Care	2	1: Enable Tx TC scrambling (default); 0: Disable Tx TC scrambling	1	1: Enable Rx TC HEC error correct control (default); 0: Disable Rx TC HEC error correct control	0	1: Enable Rx TC de-scrambling (default); 0: Disable Rx TC de-scrambling
Bit Position	Description												
7~3	Don't Care												
2	1: Enable Tx TC scrambling (default); 0: Disable Tx TC scrambling												
1	1: Enable Rx TC HEC error correct control (default); 0: Disable Rx TC HEC error correct control												
0	1: Enable Rx TC de-scrambling (default); 0: Disable Rx TC de-scrambling												
7	TCAAlpha&Delta	67H	<table><tr><th>Bit Position</th><th>Description</th></tr><tr><td>7-4</td><td>Delta value. Valid is 0~15.</td></tr><tr><td>3-0</td><td>Alpha value. Valid is 0~15.</td></tr></table> <p>Alpha value is the number of consecutive incorrect HEC fields for the Rx cell synchronization state machine to exit sync state. Delta value is the number of consecutive correct HEC fields for the Rx cell synchronization state machine to enter sync state.</p>	Bit Position	Description	7-4	Delta value. Valid is 0~15.	3-0	Alpha value. Valid is 0~15.				
Bit Position	Description												
7-4	Delta value. Valid is 0~15.												
3-0	Alpha value. Valid is 0~15.												

Table-17 ConfigDev Command (Encoding: 01H) (Continued)

8	TCLCD_Threshold	68H	0~255 LCD threshold. If the OCD anomaly persists for the time set by this parameter, LCD defect will be reported. Unit: one cell's transmission time
Command Reply			
<div style="text-align: center;"> 1 <div style="border: 1px solid black; padding: 5px; display: inline-block;">Ack</div> </div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: OK; 1: Invalid parameter (length of the command is incorrect); Others: Internal error. The chip should be reset.	

Table-18 ConfigUtopiaF Command (Encoding: 03H)

Command Parameters			
<div> <div>1-4</div> <div>5-8</div> <div>Tx Utopia port enable</div> <div>Rx Utopia port enable</div> </div>			
Byte Sequence	Parameter Name	Default	Description
1-4	Tx Utopia port enable	00000000H	<p>Every bit of the 4 bytes enables a Utopia Tx port (MSB byte first, LSB byte last). 0: Disable the port; 1: Enable the port</p> <p>This 4 bytes parameter enables or disables each of the 31 Utopia port (port 31 is reserved and should not be used). The 4 bytes can be regarded as a sequence of 32 bits. The most significant bit in byte 1 (the first byte sent to embedded controller) is bit 31. The least significant bit of byte 4 (the last byte sent) is bit 0.</p>
5-8	Rx Utopia port enable	00000000H	<p>Every bit of the 4 bytes enables a Utopia Rx port (MSB byte first, LSB byte last). 0: Disable the port; 1: Enable the port</p> <p>The meaning of this parameter is similar to the Utopia Tx port enable field. See above.</p>
Command Reply			
<div> <div>1</div> <div>Ack</div> </div>			
Byte Sequence	Reply Name	Description	
1	Ack	<p>0: OK; 1: Invalid parameter (length of the command is incorrect); Others: Internal error. The chip should be reset.</p>	

Table-19 ConfigLoopMode Command (Encoding: 04H)

Command Parameters			
<div>1</div> <div>Loop mode</div>			
Byte Sequence	Parameter Name	Default	Description
1	Loop mode	0H	0: Disable all the loopback functions; 1: Enable line interface internal loopback mode; 2: Enable line interface external loopback mode; 3: Enable Utopia loopback mode; Others: The same as 0.
Command Reply			
<div>1</div> <div>Ack</div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: OK; 1: Invalid parameter (length of the command is incorrect); Others: Internal error. The chip should be reset.	

Table-20 ConfigGroupPara Command (Encoding: 05H)

This is the first command to configure a physical group. Other configuration commands prior to this command would make the group work improperly.

Command Parameters																		
1	2	3	4	5-6	7	8	9											
Group ID	NE IMA ID	M for Tx (M_{tx})	Acceptable M for Rx (M_{rx})	Max delay compensation value	Version Backward Compatibility	P_{tx}	P_{rx}											
Byte Sequence	Parameter Name	Default	Description															
1	Group ID	NA (Not Available)	<p>The physical group ID (0~7)</p> <p>This is the physical identification of an IMA group. Each Group ID is unique in the IDT82V2616 and should not be equal to any Channel ID that has been assigned to a UNI link. There are altogether 8 physical groups. This group ID can be any value from 0~7. It should be noted that this Group ID is not the same as IMA ID which is used to identify a logical IMA group and can be any value from 0~255.</p>															
2	NE IMA ID	0H	<p>0~255</p> <p>This is the logical ID of a physical IMA group, which is packaged in ICP cells and is sent to the FE to indicate which group a link belongs to.</p>															
3	M for Tx (M_{tx})	0H	<p>0: 32 (default); 1: 64; 2: 128; 3: 256</p> <p>This is the IMA frame length that this group will use at the transmit end. There are altogether 4 frame lengths that can be selected: 32, 64, 128 and 256. Note: M_{tx} must be right, otherwise IMAOS will work improperly.</p>															
4	Acceptable M for Rx (M_{rx})	NA	<table><tr><th>Bit</th><th>Meaning</th></tr><tr><td>3</td><td>1: Accept M=256 0: Do not accept M=256</td></tr><tr><td>2</td><td>1: Accept M=128 0: Do not accept M=128</td></tr><tr><td>1</td><td>1: Accept M=64 0: Do not accept M=64</td></tr><tr><td>0</td><td>1: Accept M=32 0: Do not accept M=32</td></tr></table> <p>This is the acceptable IMA frame length of the receive end. Note: The M_{rx} must be right, otherwise IMAOS will work improperly.</p>						Bit	Meaning	3	1: Accept M=256 0: Do not accept M=256	2	1: Accept M=128 0: Do not accept M=128	1	1: Accept M=64 0: Do not accept M=64	0	1: Accept M=32 0: Do not accept M=32
Bit	Meaning																	
3	1: Accept M=256 0: Do not accept M=256																	
2	1: Accept M=128 0: Do not accept M=128																	
1	1: Accept M=64 0: Do not accept M=64																	
0	1: Accept M=32 0: Do not accept M=32																	
5-6	Max delay compensation value	NA	<p>0~1024 cells</p> <p>This is the maximum cells delay that can be tolerated. This value is constrained by the size of the external SRAM and it shall be no more than 1024 cells. Refer to 3.4 SRAM Interface. Note: If the value exceeds 1024, IMAOS will work improperly.</p>															
7	Version Backward Compatibility	NA	<p>0: No; 1: Yes</p> <p>Version backward compatibility indicates whether version 1.0 is supported when the FE's group is using IMA 1.0. By default, the chip works in version 1.1 and does not support backward compatibility.</p>															

Table-20 ConfigGroupPara Command (Encoding: 05H) (Continued)

8	P _{tx}	NA	1~16 The minimum number of active Tx links for the GSM to move to operational state. This implies that the Tx links to be configured should be no less than this number. Note: If this value is larger than the link numbers that will be added later, this IMA group's state machine will stop at Insufficient-Link state.
9	P _{rx}	NA	1~16 The minimum number of active Rx links for the GSM to move to operational state. This implies that the Rx links to be configured should be no less than this number. In SCSO mode, if p _{tx} is not equal to P _{rx} , p _{tx} is used as P _{rx} . Note: If this value is larger than the link numbers that will be added later, this IMA group's state machine will stop at Insufficient-Link state.
Command Reply			
<div style="text-align: center;"> 1 <div style="border: 1px solid black; padding: 5px; display: inline-block;">Ack</div> </div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: OK; 1: Invalid parameter; Others: Internal error. The chip should be reset.	

Table-21 ConfigGroupInterFace Command (Encoding: 06H)

This command should follow the ConfigGroupPara command.

Command Parameters			
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">1 <div style="border: 1px solid black; padding: 2px 10px;">Group ID</div></div> <div style="text-align: center;">2 <div style="border: 1px solid black; padding: 2px 10px;">Tx Utopia port</div></div> <div style="text-align: center;">3 <div style="border: 1px solid black; padding: 2px 10px;">Rx Utopia port</div></div> </div>			
Byte Sequence	Parameter Name	Default	Description
1	Group ID	NA	The physical group ID (0~7). This is the same Group ID in ConfigGroupPara command.
2	Tx Utopia port	1FH	0~30 The Utopia port address for data transmit. Port 31 is reserved and should not be used. Note: The upper 3 bits are Don't Care.
3	Rx Utopia port	1FH	0~30 The Utopia port address for data receive. Port 31 is reserved and should not be used. Note: The upper 3 bits are Don't Care.
Command Reply			
<div style="display: flex; justify-content: center; align-items: center;"> <div style="text-align: center;">1 <div style="border: 1px solid black; padding: 2px 10px;">Ack</div></div> </div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: OK; 1: Invalid parameter; 2: The physical group is not configurable (should issue ConfigGroupPara command first); Others: Internal error. The chip should be reset.	

Table-22 ConfigGroupWorkMode Command (Encoding: 07H)

This should be the third command issued to configure a group, i.e., this command should follow ConfigGroupInterface command.

Command Parameters			
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">1 <div style="border: 1px solid black; padding: 2px 10px;">Group ID</div></div> <div style="text-align: center;">2 <div style="border: 1px solid black; padding: 2px 10px;">Symmetry mode</div></div> <div style="text-align: center;">3 <div style="border: 1px solid black; padding: 2px 10px;">Stuff mode</div></div> <div style="text-align: center;">4 <div style="border: 1px solid black; padding: 2px 10px;">Stuff adv mode</div></div> </div>			
Byte Sequence	Parameter Name	Default	Description
1	Group ID	NA	The physical group ID (0~7). This is the same Group ID in ConfigGroupPara command.
2	Symmetry mode	NA	0: SCSO (Symmetrical Configuration and Symmetrical Operation); 1: SCAO (Symmetrical Configuration and Asymmetrical Operation); 2: ACAO (Asymmetrical Configuration and Asymmetrical Operation) Note: Value exceeds 2 will be regarded as 0.
3	Stuff mode	1H	0: ITC (Independent Transmit Clock stuff insertion); 1: CTC (Common Transmit Clock stuff insertion) If at least one of the links uses independent clock pin as its clock input, stuff mode can only be set as ITC. If all the links within the group use common clock pin (i.e., TSCCK and RSCCK) as their clock input, stuff mode can be set as either CTC or ITC. Note: Wrong configuration will lead to wrong ICP cells.
4	Stuff adv mode	1H	0: Pre-notify the stuff event 1 frame ahead; 1: Pre-notify the stuff event 4 frames ahead. ICP stuff cell indication. It tells the FE the distance (unit is IMA frame) between the current ICP cell and the forthcoming stuff ICP cell. Note: The upper 7 bits are Don't Care.
Command Reply			
<div style="display: flex; justify-content: center; align-items: center;"> <div style="text-align: center;">1 <div style="border: 1px solid black; padding: 2px 10px;">Ack</div></div> </div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: OK; 1: Invalid parameter; 2: The physical group is not configurable; Others: Internal error. The chip should be reset.	

Table-23 ConfigGSMTimers Command (Encoding: 08H)

Command Parameters			
<div> <div>1</div> <div>2</div> <div>3</div> <div>4</div> <div>5</div> </div> <div> <div>Group ID</div> <div>Timer for GSM start-up Ack</div> <div>Timer for GSM Configure Abort</div> <div>Timer for GSM to report Rx=Active</div> <div>Timer for GSM to report Tx=Active</div> </div>			
Byte Sequence	Parameter Name	Default	Description
1	Group ID	NA	The physical group ID (0~7). This is the same Group ID in ConfigGroupPara command.
2	Timer for GSM start-up Ack	4H	1~255 Unit: 250 ms This timer will start when the GSM enters start-up Ack state. If there is no response from the FE after a period set by this timer, the GSM will return from start-up Ack to start-up state. If 0 is sent, it will be interpreted as 1*250 ms by the embedded controller.
3	Timer for GSM Configure Abort	4H	1~255 Unit: 250 ms This timer will start when the GSM enters start-up Abort state. After a period set by this timer, the GSM will return to start-up state. If 0 is sent, it will be interpreted as 1*250 ms by the embedded controller.
4	Timer for GSM to report Rx=Active	4H	1~255 Unit: 250 ms This timer will start when all the Rx links are reported Usable. If either all the configured links are being reported Tx=Usable by the FE or the timer expires, all the Rx links will be brought to Active state. If 0 is sent, it will be interpreted as 1*250 ms by the embedded controller.
5	Timer for GSM to report Tx=Active	4H	1~255 Unit: 250 ms This timer will start when all the Tx links are reported Usable. If either all the configured links are being reported Rx=Active by the FE or the timer expires, all the Tx links will be brought to Active state. If 0 is sent, it will be interpreted as 1*250 ms by the embedded controller.
Command Reply			
<div>1</div> <div>Ack</div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: OK; 1: Invalid parameter; 2: The physical group is not configurable; Others: Internal error. The chip should be reset.	

Table-24 ConfigTRLLink Command (Encoding: 09H)

Command Parameters			
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">1 <div style="border: 1px solid black; padding: 2px 10px;">Group ID</div></div> <div style="text-align: center;">2 <div style="border: 1px solid black; padding: 2px 10px;">TxTRL</div></div> </div>			
Byte Sequence	Parameter Name	Default	Description
1	Group ID	NA	The physical group ID (0~7). This is the same Group ID in ConfigGroupPara command.
2	TxTRL	0H	0~15 The TRL link selected for this group. Data on TSD1 pin is deemed data on Tx link 0; Data on TSD2 pin is deemed data on Tx link 1 and so on. This link should have been added to the group, otherwise the group will fail to start up. If the TRL link has been configured previously, this command is used to change the TRL link.
Command Reply			
<div style="text-align: center;">1 <div style="border: 1px solid black; padding: 2px 10px;">Ack</div></div>			
Byte Sequence	Reply Name	Description	
	Ack	0: OK; 1: Invalid parameter; 2: The physical group is not configurable; Others: Internal error. The chip should be reset.	

Table-25 ConfigIFSMPara Command (Encoding: 0AH)

Command Parameters											
<div><div>1</div><div>2</div><div><div>Group ID</div><div>Alpha&Beta&Gamma</div></div></div>											
Byte Sequence	Parameter Name	Default	Description								
1	Group ID	NA	The physical group ID (0~7). This is the same Group ID in ConfigGroupPara command.								
2	Alpha&Beta&Gamma	91H	<table><tr><th>Bit</th><th>Meaning</th></tr><tr><td>7-6</td><td>Alpha value. Default is 2.</td></tr><tr><td>5-3</td><td>Beta value. Default is 2.</td></tr><tr><td>2-0</td><td>Gamma value. Default is 1.</td></tr></table> <p>Alpha value is the number of consecutive invalid ICP cells for the IFSM state machine to exit SYNC state. Beta is the number of consecutive errored ICP cells for the IFSM state machine to exit SYNC state. Gamma is the number of consecutive valid ICP cells for the IFSM state machine to enter SYNC state.</p>	Bit	Meaning	7-6	Alpha value. Default is 2.	5-3	Beta value. Default is 2.	2-0	Gamma value. Default is 1.
Bit	Meaning										
7-6	Alpha value. Default is 2.										
5-3	Beta value. Default is 2.										
2-0	Gamma value. Default is 1.										
Command Reply											
<div><div>1</div><div>Ack</div></div>											
Byte Sequence	Reply Name	Description									
1	Ack	0: OK; 1: Invalid parameter; 2: The physical group is not configurable; Others: Internal error. The chip should be reset.									

Table-26 AddTxLink Command (Encoding: 0BH)

Command Parameters			
<div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div></div><div><div>Group ID</div><div>Tx link physical ID</div><div>Tx line interface Work Mode</div><div>Tx line interface clock</div><div>Tx link logical ID</div><div>Tx link ICP offset</div><div>Backup function</div></div></div>			
Byte Sequence	Parameter Name	Default	Description
1	Group ID	NA	The physical group ID (0~7). This is the same Group ID in ConfigGroupPara command.
2	Tx link physical ID	NA	0~15 The Tx link that will be configured to this group. Data on TSD1 pin is deemed data on Tx link 0; Data on TSD2 pin is deemed data on Tx link 1 and so on. Note: Value exceeds 15 will lead to IMAOS crash.
3	Tx line interface Work Mode	0FH	Mode0~Mode15 Line interface Work Mode for this link. Note: If the value exceeds 15, IMAOS will work improperly.
4	Tx line interface clock	0H	0: Common Clock Mode; 1: Independent Clock Mode Line interface clock input mode. The line interface mode7~mode10 and mode14~mode15 cannot be used in Independent Clock Mode. Note: IMAOS does not check this value. Value exceeds 1 will cause wrong configuration.
5	Tx link logical ID	0H	0~31 The logical Tx link # designated to that physical link. It is used for Tx ICP cell. Note: IMAOS does not check this value. If this value is wrong, IMAOS will work improperly.
6	Tx link ICP offset	0H	The ICP offset over that Tx link The ICP cell offset of the IMA frame on that link. This value should be smaller than the Tx frame length. Note: If this value is wrong, IMAOS will work improperly.
7	Backup function	NA	0: No; 1: Yes Whether this is a backup link or not. When other links failed, this link will be automatically added to the group. Note1: Only one backup link is supported in each group. If several links are specified as backup links, only the last added backup link is regarded as a backup link. Note2: If a backup link is added after the StartGroup or StartLASR command, a StartLASR command should be issued to make this backup link take effect.

Table-26 AddTxLink Command (Encoding: 0BH) (Continued)

Command Reply		
<div>1</div> <div>Ack</div>		
Byte Sequence	Reply Name	Description
	Ack	0: OK; 1: Invalid parameter; 2: The physical group is not configurable; 3: Tx physical link is used by other groups; 4: Tx ICP offset is larger than M; 5: Link logical ID is used by other links in this group; Others: Internal error. The chip should be reset.

Table-27 AddRxLink Command (Encoding: 0CH)

Command Parameters			
<div> <div>1</div> <div>2</div> <div>3</div> <div>4</div> <div>5</div> </div> <div> <div>Group ID</div> <div>Rx link physical ID</div> <div>Rx line interface Work Mode</div> <div>Rx line interface clock</div> <div>Backup function</div> </div>			
Byte Sequence	Parameter Name	Default	Description
1	Group ID	NA	The physical group ID (0~7). This is the same Group ID in ConfigGroupPara command.
2	Rx link physical ID	NA	0~15 The Rx link that will be configured to this group. Data on RSD1 pin is deemed data on Rx link 0; Data on RSD2 pin is deemed data on Rx link 1 and so on. Note: If the value exceeds 15, the performance cannot be guaranteed.
3	Rx line interface Work Mode	0FH	Mode0~mode15 Line interface Work Mode for this link. Note: If the value exceeds 15, the performance cannot be guaranteed.
4	Rx line interface clock	0H	0: Common Clock Mode; 1: Independent Clock Mode Line interface clock input mode. The line interface mode7~mode10 and mode14~mode15 cannot be used in Independent Clock Mode. Note: IMAOS does not check this value. Value exceeds 1 will cause wrong configuration.
5	Backup function	NA	0: No; 1: Yes Whether this is a backup link or not. When other links fail, this link will be automatically added to the group. Note: Only one backup link is supported in each group. If several links are specified as backup links, only the last added backup link is regarded as a backup link.
Command Reply			
<div>1</div> <div>Ack</div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: OK; 1: Invalid parameter; 2: The physical group is not configurable; 3: The Rx physical link is used by other groups; Others: Internal error. The chip should be reset.	

Table-28 ConfigUNILink Command (Encoding: 0DH)

Command Parameters			
<div> <div>1</div> <div>2</div> <div>3</div> <div>4</div> <div>5</div> <div>6</div> </div> <div> <div>Channel ID</div> <div>Link physical #</div> <div>Tx Utopia Port</div> <div>Rx Utopia Port</div> <div>link line interface Work Mode</div> <div>link line interface clock</div> </div>			
Byte Sequence	Parameter Name	Default	Description
1	Channel ID	NA	0~15 The internally used channel for this UNI link. Each Channel ID is unique and should not be equal to any Group ID that has been assigned. It is recommended that Channel ID be used from 15 down to 0. As a Group ID is from 0 to 7, it is better for a Channel ID to be from 8 to 15 unless all the values from 8 to 15 are taken.
2	Link physical #	NA	0~15 The physical link to be used in UNI mode. Note: If the value exceeds 15, the performance cannot be guaranteed.
3	Tx Utopia Port	1FH	0~30 The Utopia port address for data transmit. Port 31 is reserved and should not be used. Note: The upper 3 bits are Don't Care.
4	Rx Utopia Port	1FH	0~30 The Utopia port address for data receive. Port 31 is reserved and should not be used. Note: The upper 3 bits are Don't Care.
5	link line interface Work Mode	0FH	Mode0~mode15 Line interface Work Mode for this link. Note: If the value exceeds 15, IMAOS will work improperly.
6	link line interface clock	0H	0: Common Clock Mode; 1: Independent Clock Mode Line interface clock input mode. The line interface mode7~mode10 and mode14~mode15 cannot be used in Independent Clock Mode. Note: IMAOS does not check this value. Value exceeds 1 will cause wrong configuration.
Command Reply			
<div>1</div> <div>Ack</div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: OK; 1: The link is busy or Channel ID is over 15; Others: Internal error. The chip should be reset.	

Table-29 StartGroup Command (Encoding: 0EH)

This command is used to start a configured group.

Command Parameters			
<div style="text-align: center;">1</div> <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 100px;">Group ID</div>			
Byte Sequence	Parameter Name	Default	Description
1	Group ID	NA	The valid physical group that has been configured. This is the same Group ID in ConfigGroupPara command.
Command Reply			
<div style="text-align: center;">1</div> <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 100px;">Ack</div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: Acknowledge; 1: Invalid parameter; 2: The group is not configured; Others: Internal error. The chip should be reset.	

Table-30 StartLASR Command (Encoding: 0FH)

This command is used to start LASR procedure on one or more links. The links here may be new links or links with failure/fault/inhibiting condition. This command may combine with AddTxLink and AddRxLink commands.

Command Parameters			
<div style="text-align: center;">1</div> <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 100px;">Group ID</div>			
Byte Sequence	Parameter Name	Default	Description
1	Group ID	NA	The physical group ID (0~7). Valid physical group that has been configured and is in OPERATIONAL state.
Command Reply			
<div style="text-align: center;">1</div> <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 100px;">Ack</div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: Acknowledge; 1: Invalid parameter; 2: The group is not configured; 3: The Previous LASR is not finished; Others: Internal error. The chip should be reset.	

Table-31 InhibitGrp Command (Encoding: 10H)

This command is used to inhibit a group. Once a group is inhibited by this command, it will go to BLOCKED state instead of the OPERATIONAL state when sufficient links exist in the group. If the group is already in OPERATIONAL state, the GSM will transition to BLOCKED state.

Command Parameters			
<div style="text-align: center;"> 1 <div style="border: 1px solid black; padding: 5px; display: inline-block;">Group ID</div> </div>			
Byte Sequence	Parameter Name	Default	Description
1	Group ID	NA	The physical group ID (0~7). The physical group to be inhibited.
Command Reply			
<div style="text-align: center;"> 1 <div style="border: 1px solid black; padding: 5px; display: inline-block;">Ack</div> </div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: Acknowledge; 1: Invalid parameter; Others: Internal error. The chip should be reset.	

Table-32 NotInhibitGrp Command (Encoding: 11H)

This command is used to clear the inhibiting status. If a group is in BLOCKED state, the GSM will go to OPERATIONAL state.

Command Parameters			
<div style="text-align: center;">1</div> <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 100px;">Group ID</div>			
Byte Sequence	Parameter Name	Default	Description
1	Group ID	NA	The physical group ID (0~7). The physical group to be uninhibited.
Command Reply			
<div style="text-align: center;">1</div> <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 100px;">Ack</div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: Acknowledge; 1: Invalid parameter; Others: Internal error. The chip should be reset.	

Table-33 RestartGrp Command (Encoding: 12H)

This command is used to restart the specified group. The GSM will go back to Start-up state and all the Tx and Rx links will go back to Unusable state.

Command Parameters			
<div style="text-align: center;">1</div> <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 100px;">Group ID</div>			
Byte Sequence	Parameter Name	Default	Description
1	Group ID	NA	The physical group ID (0~7). The physical group to be restarted.
Command Reply			
<div style="text-align: center;">1</div> <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 100px;">Ack</div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: Acknowledge; 1: Invalid parameter; 2: The group is not configured; Others: Internal error. The chip should be reset.	

Table-34 DeleteGrp Command (Encoding: 13H)

This command is used to delete the specified group and all its links at once. Upon the issue of this command, the GSM will go back to Not Configured state and all the links will transition to Not In Group state.

Command Parameters			
<div style="text-align: center;"> 1 <div style="border: 1px solid black; padding: 5px; display: inline-block;">Group ID</div> </div>			
Byte Sequence	Parameter Name	Default	Description
1	Group ID	NA	The physical group ID (0~7). The physical group to be deleted.
Command Reply			
<div style="text-align: center;"> 1 <div style="border: 1px solid black; padding: 5px; display: inline-block;">Ack</div> </div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: Acknowledge; 1: Invalid parameter (length of the command is incorrect or Group ID is over 7); Others: Internal error. The chip should be reset.	

Table-35 RecoverLink Command (Encoding: 14H)

This command is used to tell the IDT82V2616 that a link is no longer in fault state or cancel the inhibition made by "DeactLink" command. This command should combine with a "StartLASR" command in order to recover the link physically.

Command Parameters			
<div style="text-align: center;"> <div style="display: flex; justify-content: space-around; margin-bottom: 5px;"> 123 </div> <div style="display: flex; justify-content: space-around; border: 1px solid black; padding: 5px; margin: 0 auto; width: fit-content;"> <div style="border: 1px solid black; padding: 2px 10px;">Group ID</div> <div style="border: 1px solid black; padding: 2px 10px;">Link physical ID</div> <div style="border: 1px solid black; padding: 2px 10px;">Direction</div> </div> </div>			
Byte Sequence	Parameter Name	Default	Description
1	Group ID	NA	The physical group ID (0~7). The physical group that contains the link to be recovered by this command.
2	Link physical ID	NA	0~15 The physical link to be recovered. The link should belong to the group, and was previously deactivated.
3	Direction	NA	0: Rx; 1: Tx; 2: Both Note1: If the group is in symmetry mode, both links should be recovered; Note2: If the value exceeds 2, IMAOS will work improperly.
Command Reply			
<div style="text-align: center;"> <div style="margin-bottom: 5px;">1</div> <div style="border: 1px solid black; padding: 2px 10px; margin: 0 auto; width: fit-content;">Ack</div> </div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: OK; 1: Invalid parameter; 2: The link does not belong to that group; Others: Internal error. The chip should be reset.	

Table-36 DeleteLink Command (Encoding: 15H)

This command is used to delete a link from a group.

Command Parameters			
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">1 <div style="border: 1px solid black; padding: 2px;">Group ID /Channel ID</div></div> <div style="text-align: center;">2 <div style="border: 1px solid black; padding: 2px;">Link physical ID</div></div> <div style="text-align: center;">3 <div style="border: 1px solid black; padding: 2px;">Direction</div></div> </div>			
Byte Sequence	Parameter Name	Default	Description
1	Group ID /Channel ID	NA	The physical group ID (0~7) or Channel ID (0~15). The physical group that contains the link to be deleted or Channel ID of the UNI link to be deleted.
2	Link physical ID	NA	0~15 Physical link to be deleted. The link should belong to the group.
3	Direction	NA	0: Rx; 1: Tx; 2: Both Note1: If the group is in symmetry mode, both directions are deleted and the direction value is ignored. If it is a UNI link, this parameter is ignored. Note2: If the value exceeds 2, IMAOS will work improperly.
Command Reply			
<div style="display: flex; justify-content: center; align-items: center;"> <div style="text-align: center;">1 <div style="border: 1px solid black; padding: 2px;">Ack</div></div> </div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: Acknowledge; 1: Invalid parameter; 2: The link does not belong to that group; Others: Internal error. The chip should be reset. After the link has both ends deleted, the link is in UNI mode, which is the default Work Mode of a link. The "GetLink-State" command can be used to poll the link state.	

Table-37 DeactLink Command (Encoding: 16H)

This command is to make a link go to Unusable state due to user defined fault condition or that user just wants to inhibit it.

Command Parameters			
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">1 Group ID</div> <div style="text-align: center;">2 Link physical ID</div> <div style="text-align: center;">3 Reason</div> <div style="text-align: center;">4 Direction</div> </div>			
Byte Sequence	Parameter Name	Default	Description
1	Group ID	NA	The physical group ID (0~7) The physical group that contains the link to be deactivated by this command.
2	Link physical ID	NA	0~15 Physical link to be deactivated. The link should belong to the group. Note: If the value exceeds 15, the performance cannot be guaranteed.
3	Reason	NA	0: Inhibition; 1: Fault
4	Direction	NA	0: Rx; 1: Tx; 2: Both Note1: If the group is in symmetry mode, both directions are deactivated and the direction value is ignored. Note2: If the value exceeds 2, IMAOS will work improperly.
Command Reply			
<div style="display: flex; justify-content: center; align-items: center;"> <div style="text-align: center;">1 Ack</div> </div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: Acknowledge; 1: Invalid parameter; 2: The link does not belong to that group; Others: Internal error. The chip should be reset.	

Table-38 GetGroupState Command (Encoding: 17H)

Command Parameters		
<div style="text-align: center;"> 1 <div style="border: 1px solid black; padding: 5px; display: inline-block;">Group ID</div> </div>		
Byte Sequence	Parameter Name	Description
1	Group ID	The physical group ID (0~7).
Command Reply		
<div style="text-align: center;"> <div style="display: flex; justify-content: space-around; margin-bottom: 5px;"> 1234 </div> <div style="border: 1px solid black; padding: 5px; display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 2px 5px;">Ack</div> <div style="border: 1px solid black; padding: 2px 5px;">NEGSMSState</div> <div style="border: 1px solid black; padding: 2px 5px;">FEGSMSState</div> <div style="border: 1px solid black; padding: 2px 5px;">NEGTSMSState</div> </div> </div>		
Byte Sequence	Reply Name	Description
1	Ack	0: Acknowledge; 1: Invalid parameter; 2: Information not available; Others: Internal error. The chip should be reset. Note: If Ack is not equal to 0, values for the following fields will not be returned.
2	NEGSMSState	Bits 3:0: NE Group State 0000: Start-up; 0001: Start-up-Ack; 0010: Config-Aborted - Unsupported M; 0011: Config-Aborted - Incompatible Group Symmetry; 0100: Config-Aborted - Unsupported IMA Version; 0101, 0110: Reserved for other Config-Aborted reasons in a future version of the IMA specification; 0111: Config-Aborted - Other reasons; 1000: Insufficient-Links; 1001: Blocked; 1010: Operational; Others: Reserved for later use in a future version of the IMA specification.
3	FEGSMSState	Bits 3:0: FE Group State 0000: Start-up; 0001: Start-up-Ack; 0010: Config-Aborted - Unsupported M; 0011: Config-Aborted - Incompatible Group Symmetry; 0100: Config-Aborted - Unsupported IMA Version; 0101, 0110: Reserved for other Config-Aborted reasons in a future version of the IMA specification; 0111: Config-Aborted - Other reasons; 1000: Insufficient-Links; 1001: Blocked; 1010: Operational; Others: Reserved for later use in a future version of the IMA specification.
4	NEGTSMSState	0: GTSM is down; 1: GTSM is up. NE GTSM state.

Table-39 GetGroupDelayInfo Command (Encoding: 18H)

Command Parameters		
<div style="text-align: center;">1</div> <div style="border: 1px solid black; padding: 2px; margin: 0 auto; width: 100px;">Group ID</div>		
Byte Sequence	Parameter Name	Description
1	Group ID	The physical group ID (0~7).
Command Reply		
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">1</div> <div style="text-align: center;">2-3</div> </div> <div style="display: flex; justify-content: space-around; align-items: center; margin-top: 10px;"> <div style="border: 1px solid black; padding: 2px;">Ack</div> <div style="border: 1px solid black; padding: 2px;">MaxDiffDelayOfGroupLinks</div> </div>		
Byte Sequence	Reply Name	Description
1	Ack	0: Acknowledge; 1: Invalid parameter; 2: The info is not available; Others: Internal error. The chip should be reset. Note: If Ack is not equal to 0, the value for the following field will not be returned.
2-3	MaxDiffDelayOf-GroupLinks (cells)	The maximum delay value between any two links in that group. (MSB byte first)

Table-40 GetLinkState Command (Encoding: 19H)

Command Parameters		
<div style="text-align: center;">1</div> <div style="border: 1px solid black; padding: 2px; margin: 5px auto; width: fit-content;">Physical link #</div>		
Byte Sequence	Parameter Name	Description
1	Physical link #	0~15 The # of the physical link.
Command Reply		
<div style="display: flex; justify-content: space-around; margin-bottom: 5px;"> 1234567 </div> <div style="border: 1px solid black; padding: 2px; margin: 5px auto; width: fit-content; display: flex; justify-content: space-between;"> AckNERxStateNETxStateFERxStateFETxStateTC StateIMA SYNC State </div>		
Byte Sequence	Reply Name	Description
1	Ack	0: Acknowledge; 1: Invalid parameter; Others: Internal error. The chip should be reset. Note1: For a UNI link, only the TC State value is meaningful. Other values are all meaningless. Note2: If Ack is not equal to 0, values for the following fields will not be returned.
2	NERxState	0x00: not in any group; 0x01: Unusable-No-reason; 0x02: Unusable-Fault; 0x03: Unusable-Misconnected; 0x04: Unusable-Inhibited; 0x05: Unusable-Failed; 0x06: Usable; 0x07: Active. The NE Rx LSM State.
3	NETxState	The same as above. The NE Tx LSM State.
4	FERxState	The same as above. The FE Rx LSM State.
5	FETxState	The same as above. The FE Tx LSM State.
6	TC State	Bit2: 0: Not TC sync; 1: TC sync. Other bits: Don't Care
7	IMA Sync State	Bit5: 0: Not IMA sync state; 1: IMA sync state. Other bits: Don't Care

Table-41 GetGrpPerf Command (Encoding: 1AH)

Command Parameters		
<div style="text-align: center;"> 1 <div style="border: 1px solid black; padding: 2px; display: inline-block;">Group ID</div> </div>		
Byte Sequence	Parameter Name	Description
1	Group ID	The physical group ID (0~7).
Command Reply		
<div style="text-align: center;"> 1 2-3 <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-right: 10px;">Ack</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">Value</div> </div>		
Byte Sequence	Reply Name	Description
1	Ack	0: Acknowledge; 1: Invalid parameter; 2: Info not available; Others: Internal error. The chip should be reset. Note: If Ack is not equal to 0, the value for the following field will not be returned.
2-3	Value	value of GR-UAS-IMA (For detailed definition, refer to Table-51) (MSB byte first) If Ack is equal to 0, the value of IMAGrpUnavaiSec will be returned. If the performance parameter is not retrieved after a long period, it might reach the maximum value. In this case, the value is held. If Ack is not 0, the value will be 0.

Table-42 GetLinkPerf Command (Encoding: 1BH)

Command Parameters																						
<div><div>1</div><div>2</div></div> <div><div>Physical link #</div><div>Type</div></div>																						
Byte Sequence	Parameter Name	Description																				
1	Physical link #	0~15 The # of the physical link.																				
2	Type	The performance types (For detailed description of these performance types, please refer to Table-51): <table><tr><th>Performance Type</th><th>Parameters</th></tr><tr><td rowspan="4">0</td><td>SES-IMA</td></tr><tr><td>SES-IMA-FE</td></tr><tr><td>UAS-IMA</td></tr><tr><td>UAS-IMA-FE</td></tr><tr><td rowspan="4">1</td><td>Tx-UUS-IMA</td></tr><tr><td>Rx-UUS-IMA</td></tr><tr><td>Tx-UUS-IMA-FE</td></tr><tr><td>Rx-UUS-IMA-FE</td></tr><tr><td rowspan="3">2</td><td>OCD_TC</td></tr><tr><td>HCS_ERR_TC</td></tr><tr><td>IV-IMA</td></tr><tr><td rowspan="3">3</td><td>Rx-Stuff-IMA</td></tr><tr><td>Tx-Stuff-IMA</td></tr><tr><td>OIF-IMA</td></tr></table>	Performance Type	Parameters	0	SES-IMA	SES-IMA-FE	UAS-IMA	UAS-IMA-FE	1	Tx-UUS-IMA	Rx-UUS-IMA	Tx-UUS-IMA-FE	Rx-UUS-IMA-FE	2	OCD_TC	HCS_ERR_TC	IV-IMA	3	Rx-Stuff-IMA	Tx-Stuff-IMA	OIF-IMA
Performance Type	Parameters																					
0	SES-IMA																					
	SES-IMA-FE																					
	UAS-IMA																					
	UAS-IMA-FE																					
1	Tx-UUS-IMA																					
	Rx-UUS-IMA																					
	Tx-UUS-IMA-FE																					
	Rx-UUS-IMA-FE																					
2	OCD_TC																					
	HCS_ERR_TC																					
	IV-IMA																					
3	Rx-Stuff-IMA																					
	Tx-Stuff-IMA																					
	OIF-IMA																					
Command Reply																						
<div><div>1</div><div>2-10</div></div> <div><div>Ack</div><div>Value</div></div>																						
Byte Sequence	Reply Name	Description																				
1	Ack	0: Acknowledge; 1: Invalid parameter; 2: Info not available; Others: Internal error. The chip should be reset. Note: If Ack is not equal to 0, the value for the following field will not be returned.																				

Table-42 GetLinkPerf Command (Encoding: 1BH) (Continued)

2-10	Value	<p>The counter value of the performance parameter according to Type (MSB first). The returned value occupies 9 bytes. Different parameters take different number of bytes.</p> <table border="1" data-bbox="667 294 1300 892"> <thead> <tr> <th>Performance Type</th><th>Parameters</th><th>Bytes</th></tr> </thead> <tbody> <tr> <td rowspan="5">0</td><td>SES-IMA</td><td>2</td></tr> <tr> <td>SES-IMA-FE</td><td>2</td></tr> <tr> <td>UAS-IMA</td><td>2</td></tr> <tr> <td>UAS-IMA-FE</td><td>2</td></tr> <tr> <td>0</td><td>1</td></tr> <tr> <td rowspan="5">1</td><td>Tx-UUS-IMA</td><td>2</td></tr> <tr> <td>Rx-UUS-IMA</td><td>2</td></tr> <tr> <td>Tx-UUS-IMA-FE</td><td>2</td></tr> <tr> <td>Rx-UUS-IMA-FE</td><td>2</td></tr> <tr> <td>0</td><td>1</td></tr> <tr> <td rowspan="3">2</td><td>OCD_TC</td><td>3</td></tr> <tr> <td>HCS_ERR_TC</td><td>3</td></tr> <tr> <td>IV-IMA</td><td>3</td></tr> <tr> <td rowspan="3">3</td><td>Rx-Stuff-IMA</td><td>3</td></tr> <tr> <td>Tx-Stuff-IMA</td><td>3</td></tr> <tr> <td>OIF-IMA</td><td>3</td></tr> </tbody> </table> <p>Note: If the performance parameters are not retrieved after a long period, they might reach the maximum value. In this case, the values are held.</p>	Performance Type	Parameters	Bytes	0	SES-IMA	2	SES-IMA-FE	2	UAS-IMA	2	UAS-IMA-FE	2	0	1	1	Tx-UUS-IMA	2	Rx-UUS-IMA	2	Tx-UUS-IMA-FE	2	Rx-UUS-IMA-FE	2	0	1	2	OCD_TC	3	HCS_ERR_TC	3	IV-IMA	3	3	Rx-Stuff-IMA	3	Tx-Stuff-IMA	3	OIF-IMA	3
Performance Type	Parameters	Bytes																																							
0	SES-IMA	2																																							
	SES-IMA-FE	2																																							
	UAS-IMA	2																																							
	UAS-IMA-FE	2																																							
	0	1																																							
1	Tx-UUS-IMA	2																																							
	Rx-UUS-IMA	2																																							
	Tx-UUS-IMA-FE	2																																							
	Rx-UUS-IMA-FE	2																																							
	0	1																																							
2	OCD_TC	3																																							
	HCS_ERR_TC	3																																							
	IV-IMA	3																																							
3	Rx-Stuff-IMA	3																																							
	Tx-Stuff-IMA	3																																							
	OIF-IMA	3																																							

Table-43 GetConfigPara Command (Encoding: 1CH)

This command is used to get the parameters as shown in the parameter list of a command (designated by Command ID), i.e., get the configured information or default information as a command's parameter list designated.

Command Parameters		
<div style="text-align: center;"> <div style="display: inline-block; width: 150px; text-align: center;">1</div> <div style="display: inline-block; width: 150px; text-align: center;">2</div> </div> <div style="text-align: center; margin-top: 10px;"> <div style="display: inline-block; width: 100px; text-align: center; border: 1px solid black; padding: 2px;">Command ID</div> <div style="display: inline-block; width: 100px; text-align: center; border: 1px solid black; padding: 2px; margin-left: 10px;">Group ID</div> </div>		
Byte Sequence	Parameter Name	Description
1	Command ID	<p>The command encoding of the commands below:</p> <ul style="list-style-type: none"> • ConfigDev • ConfigUTOPIAIF • ConfigLoopMode • ConfigGroupPara • ConfigGroupInterface • ConfigGroupWorkMode • ConfigGSMTimers • ConfigTRL • ConfigIFSMpara <p>Note: If the value is not one from above, IMAOS will crash.</p>
2	Group ID	<p>The group ID (If Command ID is "ConfigDev", don't care this parameter, that is, any value will do.)</p> <p>If the command (such as ConfigDev command) has no GroupID parameter, this field should be set to 0 and will be ignored by the embedded controller.</p>
Command Reply		
<div style="text-align: center;"> <div style="display: inline-block; width: 100px; text-align: center;">1</div> <div style="display: inline-block; width: 150px; text-align: center;">2</div> <div style="display: inline-block; width: 100px; text-align: center;">3</div> <div style="display: inline-block; width: 150px; text-align: center;">4-12</div> </div> <div style="text-align: center; margin-top: 10px;"> <div style="display: inline-block; width: 100px; text-align: center; border: 1px solid black; padding: 2px;">Ack</div> <div style="display: inline-block; width: 100px; text-align: center; border: 1px solid black; padding: 2px; margin-left: 10px;">Command ID sent before</div> <div style="display: inline-block; width: 100px; text-align: center; border: 1px solid black; padding: 2px; margin-left: 10px;">Group ID sent before</div> <div style="display: inline-block; width: 150px; text-align: center; border: 1px solid black; padding: 2px; margin-left: 10px;">Parameter sent before</div> </div>		
Byte Sequence	Reply Name	Description
1	Ack	<p>0: Acknowledge; 1: Invalid parameter; 2: Info not available; Others: Internal error. The chip should be reset.</p> <p>Note1: If Ack is not equal to 0, values for the following fields will not be returned. Note2: If Ack for this command is equal to 0 but the Ack for the command sent before is not equal to 0, values for the following fields are undetermined.</p>
2	Command ID sent before	The command ID sent before.
3	Group ID sent before	<p>The Group ID sent before.</p> <p>For ConfigDev command, this byte has no meaning.</p>
4-12	Parameter sent before	<p>This field contains all the parameters that were sent previously excluding the Group ID, as it is returned in byte 3. The length of this field depends on the Command ID and the sequence is the same as the input.</p>

Table-44 GetGrpWorkingPara Command (Encoding: 1DH)

Command Parameters							
<div>1</div> <div>Group ID</div>							
Byte Sequence	Parameter Name	Description					
1	Group ID	The physical group ID (0~7).					
Command Reply							
1	2	3	4	5	6	7	8
Ack	NE IMA ID	FE IMA ID	M _{tx}	M _{rx}	Version now used	Tx TRL	Rx TRL
Byte Sequence	Reply Name	Description					
1	Ack	0: Acknowledge; 1: Invalid parameter; 2: Info not available; Others: Internal error. The chip should be reset. Note: If Ack is not equal to 0, values for the following fields will not be returned.					
2	NE IMA ID	The IMA ID in the ICP cell transmitted to the FE from the NE.					
3	FE IMA ID	The IMA ID in the ICP cell that the NE received from the FE.					
4	M _{tx}	The IMA frame length the NE is using.					
5	M _{rx}	The IMA frame length the FE is using.					
6	Version now used	0: Both ends are 1.1; 1: The FE is 1.0 and the NE is 1.0 compatible.					
7	Tx TRL	The physical link # used for Tx TRL.					
8	Rx TRL	The physical link # the FE used for TRL.					

Table-45 GetLinkWorkingPara Command (Encoding: 1EH)

Command Parameters		
<div style="text-align: center;">1</div> <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: fit-content;">Physical link #</div>		
Byte Sequence	Parameter Name	Description
1	Physical link #	0~15. The # of the physical link.
Command Reply		
<div style="display: flex; justify-content: space-around; margin-bottom: 5px;"> 1234567 </div> <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 100%;"> <div style="display: flex; justify-content: space-between; padding: 0 10px;"> <div style="border: 1px solid black; padding: 5px; width: 15%;">Ack</div> <div style="border: 1px solid black; padding: 5px; width: 15%;">Mode</div> <div style="border: 1px solid black; padding: 5px; width: 20%;">Group ID # /UNI mode Utopia Tx port</div> <div style="border: 1px solid black; padding: 5px; width: 20%;">TxLink ID / UNI mode Utopia Rx port</div> <div style="border: 1px solid black; padding: 5px; width: 15%;">RxLink ID</div> <div style="border: 1px solid black; padding: 5px; width: 15%;">Tx ICP offset</div> <div style="border: 1px solid black; padding: 5px; width: 15%;">Rx ICP offset</div> </div> </div>		
Byte Sequence	Reply Name	Description
1	Ack	0: Acknowledge; 1: Invalid parameter; 2: Info not available; Others: Internal error. The chip should be reset. Note: If Ack is not equal to 0, values for the following fields will not be returned.
2	Mode	0: UNI; 1: IMA mode – Both Tx and Rx are used; 2: IMA mode – Only Tx used; 3: IMA mode – Only Rx used
3	Group ID # /UNI mode Utopia Tx port	If Mode is IMA, this value means which physical group at the NE the link belongs to; If mode is UNI, this value is the Utopia Tx port address.
4	TxLink ID / UNI mode Utopia Rx port	If Mode is IMA, this value means the logical link # assigned (0~31), If mode is UNI, this value is the Utopia Rx port address.
5	RxLink ID	The logical link ID # the FE is using.
6	Tx ICP offset	0~255 (in IMA mode; not used in UNI mode).
7	Rx ICP offset	0~255 (in IMA mode; not used in UNI mode).

Table-46 StartTestPattern Command (Encoding: 1FH)

Command Parameters		
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">1 <div style="border: 1px solid black; padding: 2px;">Group ID</div></div> <div style="text-align: center;">2 <div style="border: 1px solid black; padding: 2px;">Physical link #</div></div> <div style="text-align: center;">3 <div style="border: 1px solid black; padding: 2px;">Pattern</div></div> </div>		
Byte Sequence	Parameter Name	Description
1	Group ID	The physical group ID (0~7)
2	Physical link #	0~15 The # of the physical link.
3	Pattern	0~FFH, and FFH is not recommended. This byte is used to define the pattern for testing purpose.
Command Reply		
<div style="display: flex; justify-content: center; align-items: center;"> <div style="text-align: center;">1 <div style="border: 1px solid black; padding: 2px;">Ack</div></div> </div>		
Byte Sequence	Reply Name	Description
	Ack	0: Acknowledge; 1: Invalid parameter; 2: The link does not belong to the group; Others: Internal error. The chip should be reset.

Table-47 GetLoopedTestPattern Command (Encoding: 20H)

Command Parameters		
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">1 <div style="border: 1px solid black; padding: 2px;">Group ID</div></div> <div style="text-align: center;">2 <div style="border: 1px solid black; padding: 2px;">Physical link #</div></div> </div>		
Byte Sequence	Parameter Name	Description
1	Group ID	The physical group ID (0~7)
2	Physical link #	0~15 The # of the physical link.
Command Reply		
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">1 <div style="border: 1px solid black; padding: 2px;">Ack</div></div> <div style="text-align: center;">2 <div style="border: 1px solid black; padding: 2px;">Pattern</div></div> </div>		
Byte Sequence	Reply Name	Description
Ack	1	0: Acknowledge; 1: Invalid parameter; 2: The link does not belong to the group; Others: Internal error. The chip should be reset. Note: If Ack is not equal to 0, the value for the following field will not be returned.
Pattern	1	The FE looped test pattern over that link

Table-48 StopTestPattern Command (Encoding: 21H)

Command Parameters		
<div style="text-align: center;">1</div> <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 100px;">Group ID</div>		
Byte Sequence	Parameter Name	Description
1	Group ID	The physical group ID (0~7)
Command Reply		
<div style="text-align: center;">1</div> <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 100px;">Ack</div>		
Byte Sequence	Reply Name	Description
1	Ack	0: OK; 1: Invalid parameter; Others: Internal error. The chip should be reset.

Table-49 GetVersionInfo Command (Encoding: 22H)

Command Parameters		
No.		
Command Reply		
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">1</div> <div style="text-align: center;">2</div> <div style="text-align: center;">3</div> </div> <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: 300px; display: flex; justify-content: space-between;"> <div style="width: 30%;">Ack</div> <div style="width: 30%;">SW_ver_majority</div> <div style="width: 30%;">SW_ver_minority</div> </div>		
Byte Sequence	Reply Name	Description
1	Ack	0: OK; Others: Internal error. The chip should be reset. Note: If Ack is not equal to 0, values for the following fields will not be returned.
2	SW_ver_majority	The integer part of the version. For example, if the current version is 1.12, the returned value will be 1.
3	SW_ver_minority	The fractional part of the version. For example, if the current version is 1.12, the returned value will be 12.

6 IMA OPERATION

This chapter is a brief introduction of how a group and links are configured, started, inhibited, deleted and so on.

6.1 IMA INITIALIZATION

ConfigDev command is the first command to be issued to initialize the device. If this command is not issued, the default value will be used.

6.2 CONFIGURE A GROUP

After a group is configured, an ID (IMA ID) is allocated to a physical group, links are assigned to that group and other parameters needed for the group's proper operation are set. The IMA ID should not be changed during the whole life cycle of the group except that the group is restarted. [Table-50](#) is the list of group parameters that should be configured.

Table-50 Parameters for IMA Group Configuration

Parameter Name	Description
Group ID	The physical group ID used for this IMA group.
NE IMA ID	The IMA group logical ID#.
M for Tx (M_{Tx})	The frame length that the NE Tx would like to use.
Acceptable M for Rx (M_{Rx})	The frame length proposed by the FE Tx that the NE Rx can accept.
Max delay compensation value (cells)	The maximum different link delay value a group is expected to have.
Version Backward Compatibility	Whether IMA 1.0 is supported
TxUtopia port	The Utopia address where ATM traffic comes from
RxUtopia port	The Utopia address where ATM traffic goes
Symmetry mode	The group link's configuration and operation mode.
Timing clock mode	The transmission timing clock mode.
Stuff mode	The SICP insertion method.
Stuff adv mode	The stuff pre-notify mode. Valid value is 1 or 4.
Timer for GSM start up Ack	This is the timer for GSM to return from start-up Ack to start-up state when there is no response from the FE.
Timer for GSM Configure Abort	This is the timer for GSM to return from start-up Abort state to start-up state.
Timer for GSM to report Rx=active	This is the timer for Group wide start-up procedure to report Rx=Active state.
Timer for GSM to report Tx=active	This is the timer for Group wide start-up procedure to report Tx=Active state.
Tx TRL	The transmit timing reference link. (Physical ID)
Alpha	The number of consecutive invalid ICP cells for the IFSM state machine to exit SYNC state. Default value is 2.
Beta	The number of consecutive errored ICP cells for the IFSM state machine to exit SYNC state. Default value is 2.
Gamma	The number of consecutive valid ICP cells for the IFSM state machine to enter SYNC state. Default value is 1.
P_{Tx}	The minimum number of active Tx links for the group to enter operational state
P_{Rx}	The minimum number of active Rx links for the group to enter operational state
All the Tx links' physical IDs	The physical links' ID used for transmission.
All the Tx links' logical IDs	The logical link ID for each Tx link.
All the Rx links' physical IDs	The physical links' ID used for receiving.
All Tx links' line interface Work Mode	The line interface Work Mode for each Tx link.
All Rx links' line interface Work Mode	The line interface Work Mode for each Rx link.
All Tx links' line interface clock mode	The line interface clock mode for each Tx link.
All Rx links' line interface Work Mode	The line interface clock mode for each Rx link.

Table-50 Parameters for IMA Group Configuration (Continued)

Tx links' ICP offsets	The ICP cell location within the IMA frame transmitted over each Tx link.
All Tx links' backup property	The Tx link added to the group is a backup link or not.
All Rx links' backup property	The Rx link added to the group is a backup link or not.

6.3 START UP A GROUP

A group can be started by **StartGroup** command. At IMA group start-up, the NE and the FE exchange their configuration parameters. When both ends accept the parameters proposed by the other end, they enter an intermediate state to wait for P_{tx} and P_{rx} links to enter active state. The group can then enter operational state.

6.4 INHIBIT A GROUP/NOT INHIBIT A GROUP

The inhibition of a group is the shut down of the group for a reason other than insufficient links.

A group can be inhibited by **InhibitGrp** command.

A group inhibition state can be cancelled by **NotInhibitGrp** command.

6.5 ADD LINKS TO A GROUP THAT IS IN OPERATIONAL STATE

The LASR (Link Addition and Slow Recovery) procedure is to be started when new links are to be inserted or links are to be recovered from a group.

The LASR procedure can be started by **StartLASR** command.

6.6 DELETE LINKS

A link can be removed by **DeleteLink** command. The deletion procedure can be initiated from both the Tx and Rx side.

6.7 DEACTIVATE AND RECOVER LINKS

Links are deactivated because of link fault, failure (Rx failed) or inhibition while links are recovered because defect no longer exists or inhibition is cancelled.

The deactivation-recovering of a link is done by the IDT82V2616 automatically according to the FE notification (Remote Failure Indicator in ICP cell) or by the embedded controller (issue commands like **DeactLink** and **RecoverLink** commands) due to link fault or inhibition or no longer link fault or inhibition.

6.8 RESTART A GROUP

After a group is started, the parameters of the group can be reconfigured at any time, which will cause the group to be restarted automatically. However, a group can also be restarted by **RestartGrp** command. When a group is restarted, the GSM transits to Start-up state from any other states except Not Configured state. If the GSM is in Operational state, the group may be blocked and all the links be inhibited before restart.

6.9 DELETE A GROUP

When a group is deleted from any other state by **DeleteGrp** command, the GSM enters Not Configured state and all the links belonging to that group will also be deleted and unassigned.

7 PMON (PERFORMANCE MONITORING)

The PMON module uses counters for performance monitoring and failure/alarms integration. [Table-51](#) shows the performance parameters that the IDT82V2616 implements. [Table-53](#) lists the failure/alarm signals sent by alarm messages.

Table-51 The PMON Parameters

Parameter	Link/Group	Definition	Retrieve
SES-IMA	Link	Count of NE Severely Errored Seconds.	GetLinkPerf command
SES-IMA-FE	Link	Count of FE Severely Errored Seconds.	
UAS-IMA	Link	Count of NE UnAvailable Seconds.	
UAS-IMA-FE	Link	Count of FE UnAvailable Seconds.	
Tx-UUS-IMA	Link	Count of NE Tx Unusable seconds.	
Rx-UUS-IMA	Link	Count of NE Rx Unusable seconds.	
Tx-UUS-IMA-FE	Link	Count of FE Tx UnUsable Seconds.	
Rx-UUS-IMA-FE	Link	Count of FE Rx UnUsable Seconds.	
OCD_TC	Link	Count of link out of cell delineation entrances.	
HCS_ERR_TC	Link	Count of Cell header sequence error.	
IV-IMA	Link	Count of ICP Violations. Three types of ICP invalid signals will cause the IV-IMA. They are: Errored ICP, invalid ICP and missing ICP. (See Table-52 for definitions). The IV-IMA is counted only during Non-SES-IMA or Non-UAS-IMA period.	
Rx-Stuff-IMA	Link	Count of received Stuff ICP cells over one link.	
Tx-Stuff-IMA	Link	Count of transmitted Stuff ICP cells over one link.	
OIF-IMA	Link	Count of Out of IMA Frame anomalies except during SES-IMA or UAS-IMA conditions.	GetGrpPerf command
GR-UAS-IMA	Group	Count of Seconds when GTSM is down.	

Table-52 Definitions of Different ICP Cells

ICP Cell Type	Definition
Errored ICP	Cell with a HEC or CRC-10 error at expected ICP frame position and is not a Missing ICP cell.
Invalid ICP	Cell with good HEC and CRC-10 and CID=ICP at expected frame position but with one of the following unexpected errors: <ul style="list-style-type: none"> • Unexpected IMA label • Unexpected LID • Unexpected IMA ID • Received M$\neq$ expected M • Unexpected IMA frame sequence number • Unexpected ICP cell offset
Missing ICP	Cell located at ICP cell location with: <ul style="list-style-type: none"> • No HEC error but without IMA OAM cell header or • No HEC error and with IMA OAM cell header but the CID$\neq$ ICP.

Table-53 Failure/Alarm Signals

Sequence	Name	Link /Group	Implement	Definition
01H	LCD	Link	SW	Loss of Cell Delineation.
02H	LIF	Link	SW	Loss of IMA Frame.
03H	LODS	Group wide and Link specific	SW	Link Out of Delay Synchronization.
04H	RFI-IMA	Link	SW	Persistence of an RDI-IMA defect at the NE.
05H	Tx-Unusable-FE	Link	SW	When the FE reports Tx-Unusable.
06H	Rx-Unusable-FE	Link	SW	When the FE reports Rx-Unusable.
07H	Start-up-FE	Group	SW	When the FE is starting-up (the declaration of this failure alarm may be delayed to ensure the FE remains in Start-up).
08H	Config-Aborted	Group	SW	When the FE tries to use unacceptable configuration parameters.
09H	Config-Aborted-FE	Group	SW	When the FE reports unacceptable configuration parameters.
0AH	Insufficient-Links	Group	SW	When less than P_{tx} transmit or P_{rx} receive links are Active.
0BH	Insufficient-Links-FE	Group	SW	When the FE reports that less than P_{tx} transmit or P_{rx} receive links are Active.
0CH	Blocked-FE	Group	SW	When the FE reports that it is blocked.
0DH	GR-Timing-Mismatch	Group	SW	When the FE transmit clock mode is different from the NE transmit clock mode.

8 IMAOS16_SLAVE

The previous chapters 4, 5, 6 and 7 are specific to IMAOS16. Details about IMAOS16_Slave are provided in this chapter.

When IMAOS16_Slave is downloaded, the device supports the Group Auto Detect function and operates in Slave Mode.

8.1 GROUP AUTO DETECT

The group auto detect function can be used to configure and start a group from one end while forcing the other end's group to follow this end's group configuration and start-up procedure, that is, the other end's group can be brought into operational state automatically. The two ends are called Master Side and Slave Side separately.

8.1.1 MASTER SIDE

The Master Side should download IMAOS16 and work in symmetry mode. Up to 8 groups can be started at the Master side.

The configuration of the Master Side is the same as that in normal Work Mode.

8.1.2 SLAVE SIDE

The Slave Side should download IMAOS16_Slave.

After power-on or reset, the Slave Side should be initialized by issuing the DeviceInitial, ConfigSlaveFrame, ConfigUtopiaIF and GroupInitial commands. Only after the Slave Side has been initialized will the Slave Side start to detect the far end's start-up procedure.

After the far end has started up, the Slave Side will be brought into operational state automatically without any need of local group configuration and management.

8.2 PROGRAMMING INFORMATION FOR IMAOS16_SLAVE

8.2.1 COMMAND TYPES

Refer to [5.1 Command Types](#).

8.2.2 COMMAND ENCODING

Table-54 Command Encoding

Command Encoding	Command Name
01H	DeviceInitial
02H	ConfigSlaveFrame
03H	ConfigUtopiaIF
22H	GetVersionInfo
23H	GroupInitial

8.2.3 COMMAND DESCRIPTION

Each command description contains two parts: the Command Parameters and the Command Reply. In the Command Parameters part, a figure is used to illustrate the byte sequence of the parameters. All the parameters description are listed below the figure. In the Command Reply part, a figure is used to illustrate the reply sequence in the reply message. The reply description is listed below the figure. For detailed information about the packet of command message and reply message, refer to [page 24](#).

Table-55 DeviceInitial Command (Encoding: 01H)

This is the first command to be issued. If this command is not issued, the default value will be used.

Command Parameters													
<div><div>1-2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div></div> <div><div>SysClk</div><div>T_{in}</div><div>T_{exit}</div><div>No</div><div>TCWorkMode</div><div>TCAAlpha&Delta</div><div>TCLCD_Threshold</div></div>													
Byte Sequence	Parameter Name	Default	Description										
1-2	SysClk	4E20H	SysClk=Frequency of System Clock (Hz)/1000. For example, if the system clock is 20 MHz, this value would be 20000. Unit: sys-ticks in 1 ms (MSB first) Note: Wrong configuration will make IMAOS_Slave's timer work improperly.										
3	T _{in}	2H	Timer of entering failure alarm state. When a defect persists for a period set by this timer, the IDT82V2616will enter failure alarm state. Unit: 250 ms										
4	T _{exit}	0AH	Timer of exiting failure alarm state. If a defect no longer exists for a period set by this timer, the IDT82V2616 will exit failure alarm state. Unit: 250 ms										
5	No	0H	Reserved. Write 0 to this field.										
6	TCWorkMode	7H	<table><tr><th>Bit Position</th><th>Description</th></tr><tr><td>7~3</td><td>Don't Care</td></tr><tr><td>2</td><td>1: Enable Tx TC scrambling (default); 0: Disable Tx TC scrambling</td></tr><tr><td>1</td><td>1: Enable Rx TC HEC error correct control (default); 0: Disable Rx TC HEC error correct control</td></tr><tr><td>0</td><td>1: Enable Rx TC de-scrambling (default); 0: Disable Rx TC de-scrambling</td></tr></table>	Bit Position	Description	7~3	Don't Care	2	1: Enable Tx TC scrambling (default); 0: Disable Tx TC scrambling	1	1: Enable Rx TC HEC error correct control (default); 0: Disable Rx TC HEC error correct control	0	1: Enable Rx TC de-scrambling (default); 0: Disable Rx TC de-scrambling
Bit Position	Description												
7~3	Don't Care												
2	1: Enable Tx TC scrambling (default); 0: Disable Tx TC scrambling												
1	1: Enable Rx TC HEC error correct control (default); 0: Disable Rx TC HEC error correct control												
0	1: Enable Rx TC de-scrambling (default); 0: Disable Rx TC de-scrambling												
7	TCAAlpha&Delta	67H	<table><tr><th>Bit Position</th><th>Description</th></tr><tr><td>7-4</td><td>Delta value. Valid is 0~15.</td></tr><tr><td>3-0</td><td>Alpha value. Valid is 0~15.</td></tr></table> <p>Alpha value is the number of consecutive incorrect HEC fields for the Rx cell synchronization state machine to exit sync state. Delta value is the number of consecutive correct HEC fields for the Rx cell synchronization state machine to enter sync state.</p>	Bit Position	Description	7-4	Delta value. Valid is 0~15.	3-0	Alpha value. Valid is 0~15.				
Bit Position	Description												
7-4	Delta value. Valid is 0~15.												
3-0	Alpha value. Valid is 0~15.												
8	TCLCD_Threshold	68H	0~255 LCD threshold. If the OCD anomaly persists for the time set by this parameter, LCD defect will be reported. Unit: one cell's transmission time										

Table-55 DeviceInitial Command (Encoding: 01H) (Continued)

Command Reply		
<div>1</div> <div>Ack</div>		
Byte Sequence	Reply Name	Description
1	Ack	0: OK; 1: Invalid parameter (length of the command is incorrect); Others: Internal error. The chip should be reset.

Table-56 ConfigSlaveFrame Command (Encoding: 02H)

Command Parameters			
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">1 line interface Work Mode</div> <div style="text-align: center;">2 line interface clock mode</div> </div>			
Byte Sequence	Parameter Name	Default	Description
1	line interface Work Mode	0FH	Mode0~mode15 Line interface Work Mode for all the links.
2	line interface clock mode	0H	0: Common Clock Mode; 1: Independent Clock Mode Line interface clock input mode for all the links. Line interface mode7~mode10 and mode14~mode15 cannot be used in Independent Clock Mode.
Command Reply			
<div style="text-align: center;">1 Ack</div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: OK; 1: Invalid parameter (length of the command is incorrect). Others: Internal error. The chip should be reset.	

Table-57 ConfigUtopiaF Command (Encoding: 03H)

Command Parameters			
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> 1-4 <div style="border: 1px solid black; padding: 2px;">Tx Utopia port enable</div> </div> <div style="text-align: center;"> 5-8 <div style="border: 1px solid black; padding: 2px;">Rx Utopia port enable</div> </div> </div>			
Byte Sequence	Parameter Name	Default	Description
1-4	Tx Utopia port enable	00000000H	<p>Every bit of the 4 bytes enables a Utopia Tx port (MSB byte first, LSB byte last). 0: Disable the port; 1: Enable the port</p> <p>This 4 bytes parameter enables or disables each of the 31 Utopia port (port 31 is reserved and should not be used). The 4 bytes can be regarded as a sequence of 32 bits. The most significant bit in byte 1 (the first byte sent to embedded controller) is bit 31. The least significant bit of byte 4 (the last byte sent) is bit 0.</p>
5-8	Rx Utopia port enable	00000000H	<p>Every bit of the 4 bytes enables a Utopia Rx port (MSB byte first, LSB byte last). 0: Disable the port; 1: Enable the port</p> <p>The meaning of this parameter is similar to the Utopia Tx port enable field. See above.</p>
Command Reply			
<div style="text-align: center;"> 1 <div style="border: 1px solid black; padding: 2px;">Ack</div> </div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: OK; 1: Invalid parameter (length of the command is incorrect); Others: Internal error. The chip should be reset.	

Table-58 GetVersionInfo Command (Encoding: 22H)

Command Parameters		
No.		
Command Reply		
<div> <div>1</div> <div>2</div> <div>3</div> <div>Ack</div> <div>SW_ver_majority</div> <div>SW_ver_minority</div> </div>		
Byte Sequence	Reply Name	Description
1	Ack	0: OK; Others: Internal error. The chip should be reset. Note: If Ack is not equal to 0, values for the following fields will not be returned.
2	SW_ver_majority ⁽¹⁾	The integer part of the version. For example, if the current version is 2.12, the returned value will be 2.
3	SW_ver_minority	The fractional part of the version. For example, if the current version is 2.12, the returned value will be 12.

¹ For IMAOS16, the returned value is an odd number. For IMAOS16_Slave, the returned value is an even number.

Table-59 GroupInitial Command (Encoding: 23H)

Command Parameters			
<div> <div>1</div> <div>2</div> <div>3</div> <div>4-5</div> </div> <div> <div>Group ID</div> <div>Tx Utopia port</div> <div>Rx Utopia port</div> <div>Max delay compensation value</div> </div>			
Byte Sequence	Parameter Name	Default	Description
1	Group ID	NA	The physical group ID (0~7). The Group ID follows the IMA ID of the Master Side. Note that the IMA ID of the Master Side should not exceed 7.
2	Tx Utopia port	1FH	0~30 The Utopia port address for data transmit. Port 31 is reserved and should not be used. Note: The upper 3 bits are Don't Care.
3	Rx Utopia port	1FH	0~30 The Utopia port address for data receive. Port 31 is reserved and should not be used. Note: The upper 3 bits are Don't Care.
4-5	Max delay compensation value	NA	0~1024 cells This is the maximum cells delay that can be tolerated. This value is constrained by the size of the external SRAM and it shall be no more than 1024 cells. Refer to 3.4 SRAM Interface . Note: If the value exceeds 1024, IMAOS_Slave will work improperly.
Command Reply			
<div>1</div> <div>Ack</div>			
Byte Sequence	Reply Name	Description	
1	Ack	0: OK; 1: Invalid parameter; Others: Internal error. The chip should be reset.	

9 JTAG TEST ACCESS PORT

signal that resets all flip-flops of TAP asynchronously.

9.1 TAP BUS SIGNALS

The interface from the board to the on-chip Test Access Port is the TAP bus, which consists of five signals:

- ◆ The standard bus: TDI, TDO, TCK, TMS.
- ◆ $\overline{\text{TRST}}$: Test reset. Reset the TAP controller. The signal is specified as optional in the IEEE spec. $\overline{\text{TRST}}$ is an active low

9.2 INSTRUCTIONS

Meet the IEEE standard [13] which requires at least EXTEST, BYPASS, IDCODE and SAMPLE instructions are implemented. The IDT82V2616 identification code is 004B9067 hexadecimal.

10 PHYSICAL AND ELECTRICAL CHARACTERISTICS

10.1 ABSOLUTE MAXIMUM RATINGS

Table-60 Absolute Maximum Ratings

Parameter	Min	Max
Storage temperature	-65°C	+150°C
Voltage on VDD with reference to GND	-0.3V	4.6V
Voltage on input pin	-0.3V	5.25V
Voltage on output pin	-0.3V	VDD+0.3V
Maximum lead temperature for soldering during 10s		230°C
ESD Performance (HBM)	2000V	
Latch-up current on any pin	100mA	
Maximum junction temperature		150°C

10.2 D.C. CHARACTERISTICS

@ TA= -40 to +85°C.

Table-61 D.C. Characteristics

Parameter	Description	Min	Typ	Max	Unit	Test Conditions
VDD	Core Power Supply	2.97	3.3	3.63	V	
V _{OL}	Output Low Voltage			0.40	V	VDD=min, I _{OL} =4mA or 6mA ⁽¹⁾
V _{OH}	Output High Voltage	2.4			V	VDD=min, I _{OH} = 4mA or 6mA
V _{T+}	Input High Voltage ⁽²⁾			2.0	V	
V _{T-}	Input Low Voltage	0.83			V	
V _{TH}	Input Hysteresis Voltage	0.17	0.65	1.17	V	
I _{ILPU}	Input Low Current	-20	-55	-200	uA	V _{IL} =GND
I _{IL}	Input Low Current	-1	0	+1	uA	V _{IL} =GND
I _{IH}	Input High Current	-2	0	+2	uA	V _{IH} =+5V
I _{DDOP1}	Operating current		160		mA	VDD=3.63V, SYSClk=25MHz

¹ The output driving capacity of all the embedded memory output pins are 4mA while the output driving capacity of all the other output pins are 6mA.

² All the input pins are schmitt-trigger pins.

10.3 A.C. CHARACTERISTICS

@ TA=-40 to +85°C, VDD=3.3V±10%

10.3.1 OUTPUT LOADING

Default load capacitance on output is 50pF.

Microprocessor interface and Utopia interface outputs are loaded by 100pF.

10.3.2 SYSTEM CLOCK AND $\overline{\text{RST}}$ SIGNAL TIMING

Table-62 System Clock and Reset Timing Parameters

Parameter	Description	Min	Max	Unit
tSYCLK	The system clock cycle time	40	54	ns
D _{SYCLK}	The system clock duty cycle	40	60	%
t $\overline{\text{RST}}$	The $\overline{\text{RST}}$ pulse width	1		ms

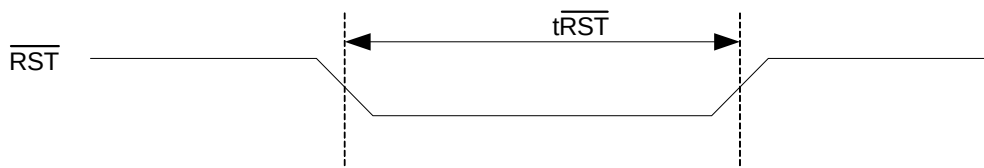


Figure-13 Reset Signal Timing Diagram

10.3.3 UTOPIA INTERFACE TIMING

Table-63 Utopia Interface Timing Parameters

Parameter	Description	Min	Max	Unit
f_{TxCLK}	Utopia Tx interface clock frequency		$f_{\text{SYSCLK}}^{(1)}$	MHz
f_{RxCLK}	Utopia Rx interface clock frequency		f_{SYSCLK}	MHz
tCLAV	TxClav and RxClav valid from rising edge of TxClk and RxClk respectively		20	ns
tUTS	$\overline{\text{TxEnb}}$, TxSOC, TxData and TxAddr to TxClk setup time	6		ns
tUTH	$\overline{\text{TxEnb}}$, TxSOC, TxData and TxAddr to TxClk hold time	1		ns
tURCO	RxClav, RxSOC, RxData valid from rising edge of RxClk		20	ns
tURS	RxAddr, $\overline{\text{RxEnb}}$ to RxClk setup time	6		ns
tURH	RxAddr, $\overline{\text{RxEnb}}$ to RxClk hold time	1		ns
tP	Width of pull-down pulse after TxClav or RxClav is deasserted.	2		ns

¹ f_{SYSCLK} is the frequency of the system clock the chip uses.

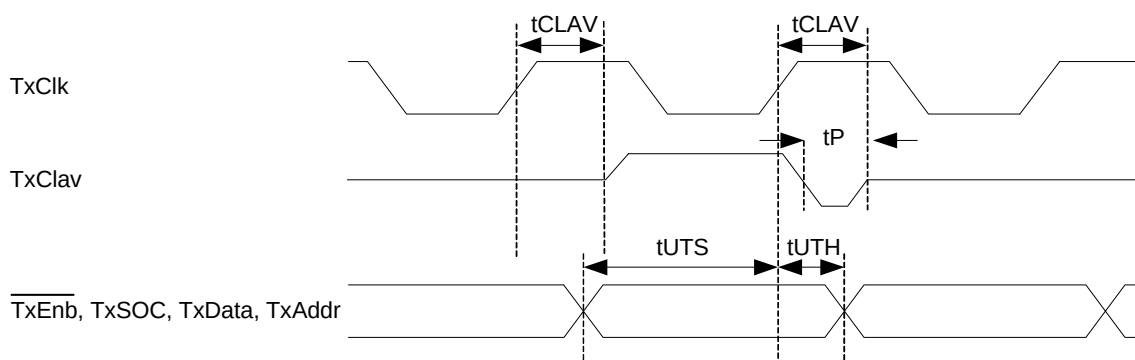


Figure-14 Tx Utopia Interface Timing Diagram

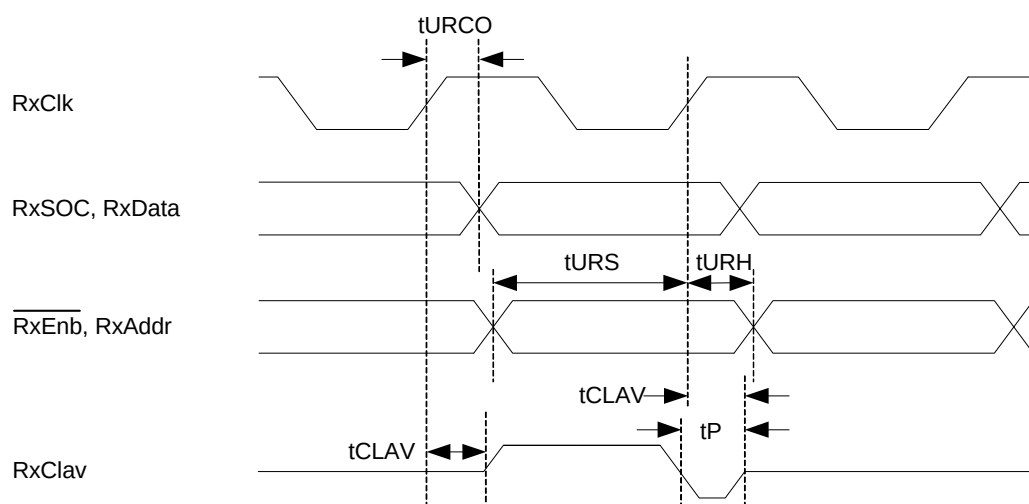
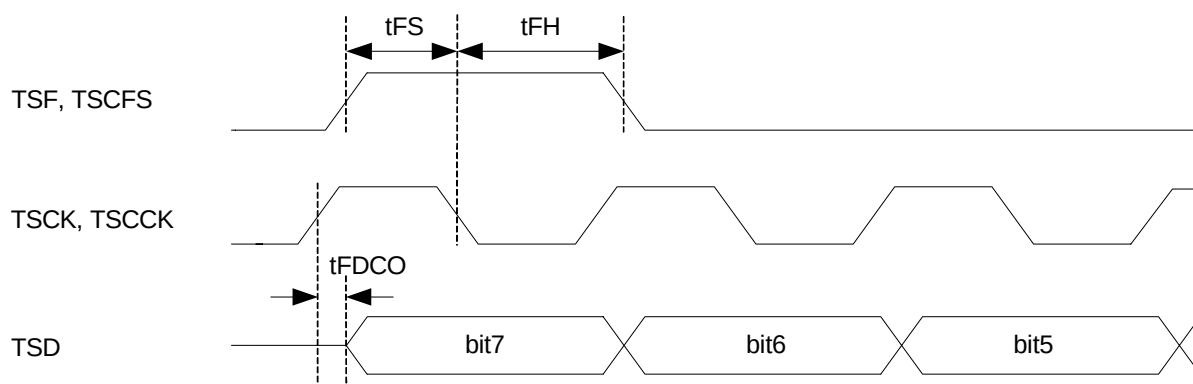
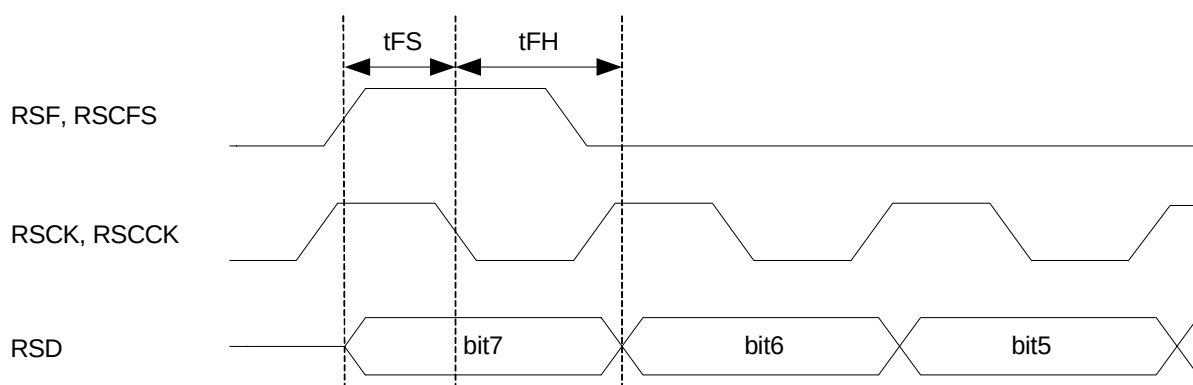


Figure-15 Rx Utopia Interface Timing Diagram

10.3.4 LINE INTERFACE TIMING

Table-64 Line Interface Timing Parameters

Parameter	Description	Min	Max	Unit
D_{CK}	The TSCK, TSCCK, RSCK and RSCCK clock duty cycle	40	60	%
f_{TSCKE1}	E1 mode transmit direction clock frequency		8.192	MHz
f_{RSCKE1}	E1 mode receive direction clock frequency		8.192	MHz
f_{TSCKT1}	T1 mode transmit direction clock frequency		8.192	MHz
f_{RSCKT1}	T1 mode receive direction clock frequency		8.192	MHz
t_{FDCO}	TSD valid from TSCK		20	ns
t_{FS}	TSF, TSCFS to TSCK set up time; RSD, RSF, RSCFS to RSCK set up time	10		ns
t_{FH}	TSF, TSCFS to TSCK hold time; RSD, RSF, RSCFS to RSCK hold time	5		ns

**Figure-16 Line Interface Transmit Timing Diagram****Figure-17 Line Interface Receive Timing Diagram**

10.3.5 MICROPROCESSOR INTERFACE TIMING

10.3.5.1 Interface with Motorola CPU (MPM =0)

Read Cycle Specification

Table-65 Microprocessor Interface Timing Parameter for Motorola CPU Read Cycle

Symbol	Parameter	Min	Max	Unit
t _{RC}	Read cycle time	240		ns
t _{DW}	Valid read signal width	235		ns
t _{RWV}	$\overline{RW}$ available time after valid read signal falling edge		10	ns
t _{RWH}	$\overline{RW}$ hold time after valid read signal falling edge	135		ns
t _{AV}	Address available time after valid read signal falling edge		10	ns
t _{ADH}	Address hold time after valid read signal falling edge	135		ns
t _{PRD}	Data propagation delay after valid read signal falling edge		205	ns
t _{DH}	Read out data hold time after valid read signal rising edge	5	20	ns
t _{Recovery}	Recovery time from read cycle	5		ns

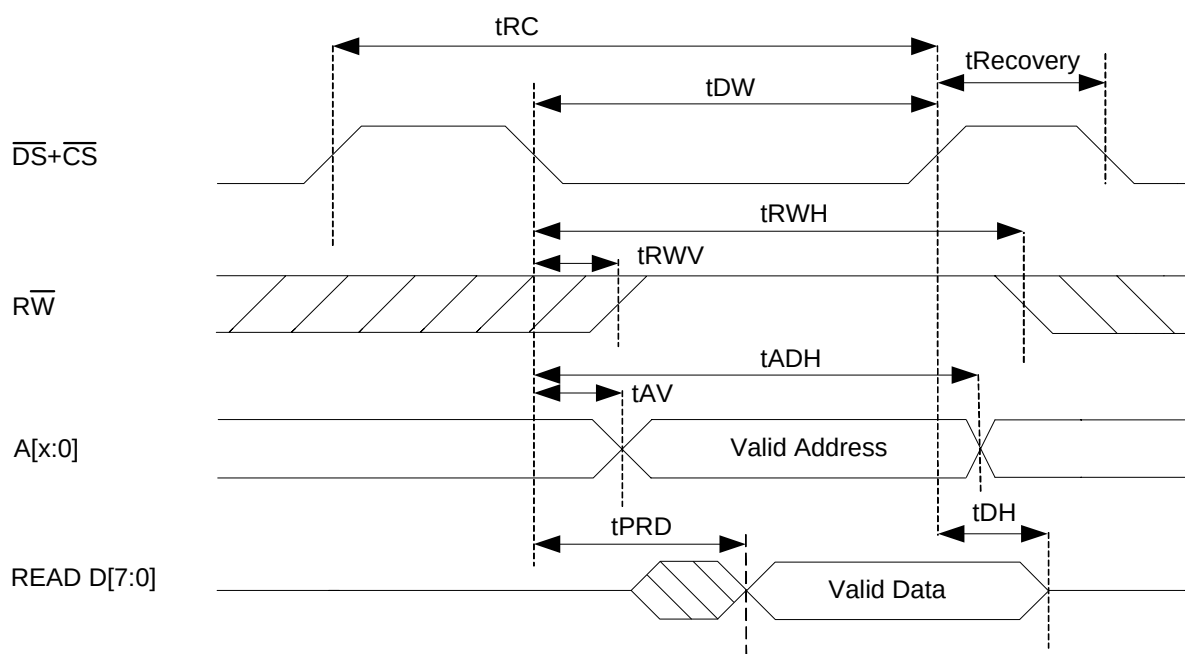
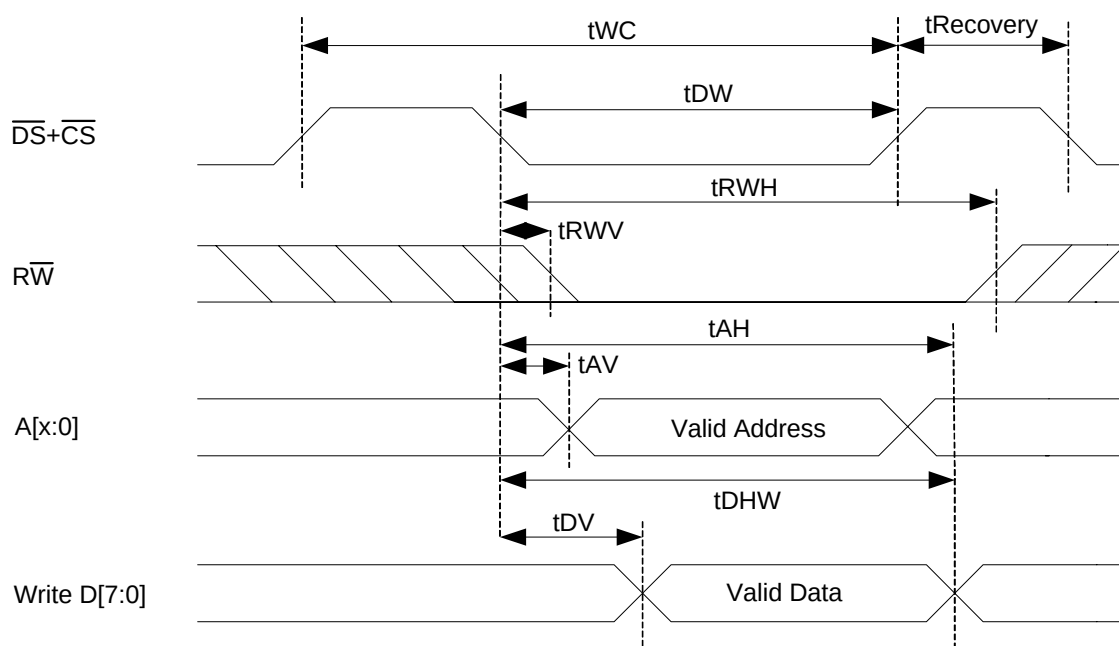


Figure-18 Microprocessor Interface Timing Diagram for Motorola CPU Read Cycle

Write Cycle Specification

Table-66 Microprocessor Interface Timing Parameters for Motorola CPU Write Cycle

Symbol	Parameter	Min	Max	Unit
tWC	Write cycle time	240		ns
tDW	Valid write signal width	235		ns
tRWV	$\overline{RW}$ available time after valid write signal falling edge		10	ns
tRWH	$\overline{RW}$ hold time after valid write signal falling edge	165		ns
tAV	Address available time after valid write signal falling edge		10	ns
tAH	Address hold time after valid write signal falling edge	165		ns
tDV	Data propagation delay after valid write signal falling edge		50	ns
tDHW	Data hold time after valid write signal rising edge	165		ns
tRecovery	Recovery time from write cycle	5		ns


**Figure-19 Microprocessor Interface Timing Diagram for Motorola CPU Write Cycle**

10.3.5.2 Interface with Intel CPU (MPM =1)

Read Cycle Specification

Table-67 Microprocessor Interface Timing Parameter for Intel CPU Read Cycle


Symbol	Parameter	Min	Max	Unit
tRC	Read cycle time	240		ns
tRDW	Valid read signal width	235		ns
tAV	Address available time after valid read signal falling edge		10	ns
tAH	Address hold time after valid read signal falling edge	135		ns
tPRD	Data propagation delay after valid read signal falling edge		205	ns
tDH	Read out data hold time after valid read signal rising edge	5	20	ns
tRecovery	Recovery time from read cycle	5		ns

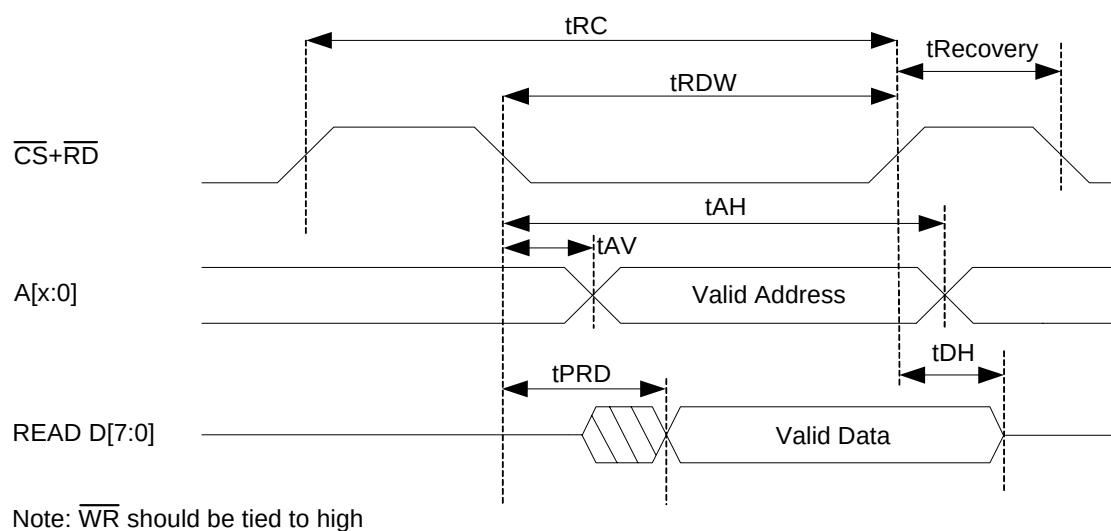**Figure-20 Microprocessor Interface Timing Diagram for Intel CPU Read Cycle**

Write Cycle Specification

Table-68 Microprocessor Interface Timing Parameters for Intel CPU Write Cycle

Symbol	Parameter	Min	Max	Unit
tWC	Write cycle time	240		ns
tWRW	Valid write signal width	235		ns
tAV	Address available time after valid write signal falling edge		10	ns
tAH	Address hold time after valid write signal falling edge	165		ns
tDV	Data available time after valid write signal falling edge		50	ns
tDHW	Data hold time after valid write signal falling edge	165		ns
tRecovery	Recovery time from write cycle	5		ns

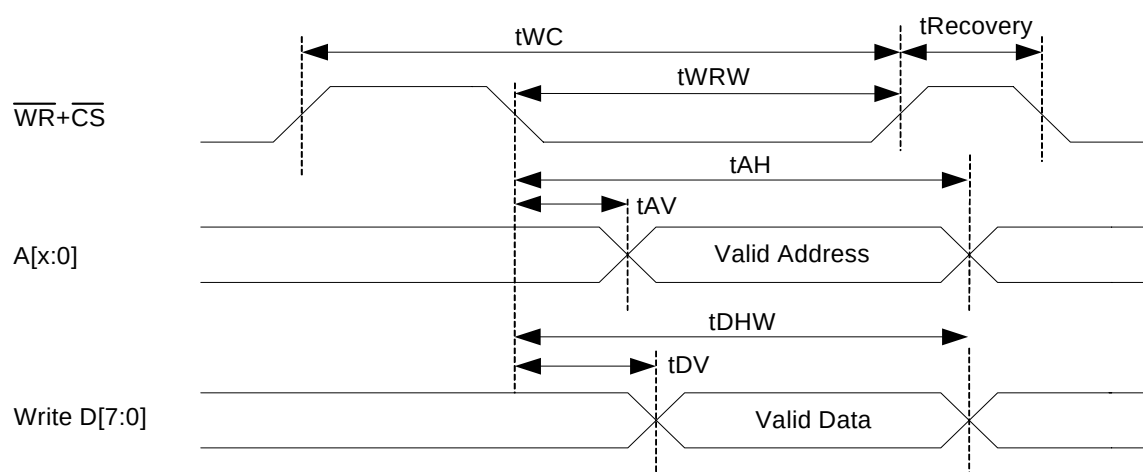

Note: $\overline{RD}$ should be tied to high

Figure-21 Microprocessor Interface Timing Diagram for Intel CPU Write Cycle

10.3.6 SRAM INTERFACE TIMING

10.3.6.1 Write Cycle Specification

Table-69 SRAM Interface Write Cycle Parameters

Symbol	Description	Min	Max	Unit
tWC	Write cycle time	40		ns
tAS	Address set up time	3	20	ns
tAH	Address hold time	1		ns
tWP	Write pulse width	20		ns
tDW	Data valid to end of write	7		ns
tDH	Data hold time	0		ns

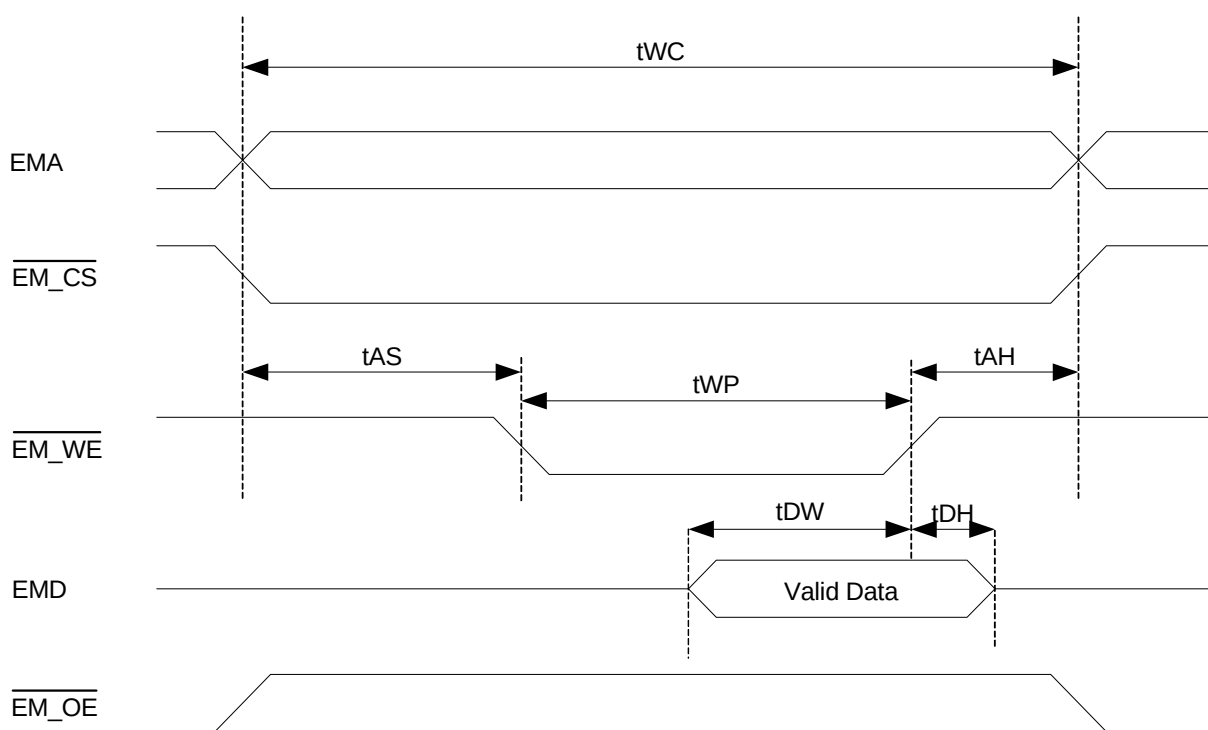


Figure-22 SRAM Interface Timing Diagram for Write Cycle

10.3.6.2 Read Cycle Specification

Table-70 SRAM Interface Read Cycle Parameters

Symbol	Description	Min	Max	Unit
tRC	Read cycle time	40		ns
tAA	Address Access time		20	ns
tCA	$\overline{\text{EM_CS}}$ Access time		20	ns
tOA	$\overline{\text{EM_OE}}$ Access time		20	
tCHZ	Delay from disabled $\overline{\text{EM_CS}}$ to data bus high impedance		7	ns
tOHZ	Delay from disabled $\overline{\text{EM_OE}}$ to data bus high impedance		7	ns

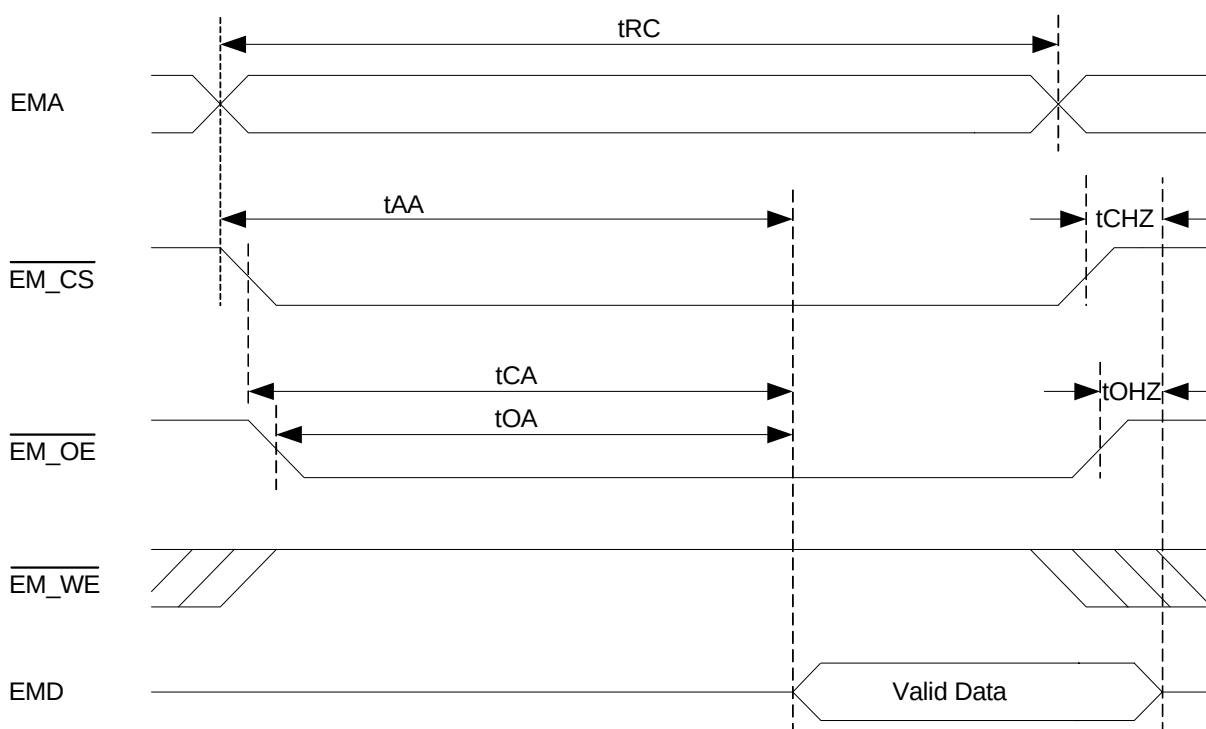


Figure-23 SRAM Interface Timing Diagram for Read Cycle

Active State	— A link state indicating that the link is ready for transmitting or receiving ATM cells in the specified direction, either Tx or Rx. Each direction may enter active state asynchronously.
Anomaly	— Discrepancy between the actual and desired characteristic of an item. An anomaly may or may not affect an item to perform a required function.
API	— Application Programming Interface
Asymmetrical Configuration	— This is an IMA configuration scheme. In this configuration mode, the physical links that are assigned to an IMA group are not required to be configured in both Tx and Rx directions. That is, some of the physical links may be configured to use both directions while others may only use one direction (Tx or Rx).
Asymmetrical Operation	— This is an ATM traffic transfer mode of an IMA group. In this mode, the physical link can be used to transfer data in one direction and does not care the other direction's Tx and Rx state. That is, when the Tx state of end A and Rx state of end B have both entered active state, end A starts to transfer data to end B and end B starts to receive. In this case, end A does not care whether end A's Rx state is active or not and end B does not care whether end B's Tx state is active or not.
ATM	— Asynchronous Transfer Mode
ATM Layer Cells	— Cells (ATM formatted) that are exchanged between ATM layer and IMA sublayer. It is also called application data.
Blocked State	— This is a group state indicating that the group has been inhibited from transiting into OPERATIONAL state for some administrative purposes.
Config-Aborted	— This is a group state indicating that the group has rejected the group parameters proposed by the FE IMA group.
Common Transmit Clock (CTC)	— This is a configuration where the transmit clocks of all the physical links within an IMA group are derived from the same clock source.
Data Round-Robin	— This is the data transfer method IMA used to deliver cells from ATM layer to multiple transmit links within an IMA group, or the data play-out method that the IMA used to form a consecutive cell stream from multiple receive links within an IMA group.
Defect	— A defect may be caused by successive anomaly of an item to perform a required function. The defect may or may not lead to maintenance action depending on the results of additional analysis.
ES	— Errored Seconds
Far End (FE)	— Two communication entities are considered to be two communication ends. Mostly, one is called Near-End (NE) and the other is called Far-End (FE).
Filler Cell	— This is a kind of OAM cell used by IMA layer. It is used to fill in the IMA frame when no cells are available at the ATM layer. Thus filler cell is used for cell rate decoupling at IMA sublayer (like idle cell used in TC layer).
Group State Machine (GSM)	— This is the state machine that determines the behavior of the IMA group.
Group Traffic State Machine (GTSM)	— This state machine controls when to exchange ATM layer cell between the ATM layer and the IMA layer
Group Wide Procedure (GWP)	— This refers to the Group Start-up and LASR procedures performed by the IMA unit to synchronize the activation of IMA links within the IMA group.
Header Error Check (HEC)	— This is used for checking the correctness of the ATM cell header.

ICP Offset	— The ICP cell is used for IMA frame synchronization. The ICP offset is used to tell the receive side the ICP cell's position in an IMA frame and the receive side can make use of this information to figure out the first cell of the frame.
ICP Cell	— The ICP cell is a kind of OAM cell. It can be used by the IMA sublayer to delineate the IMA frame. Also, it conveys information about the status or configuration parameters of each end.
ICP Stuff	— The ICP stuff is two consecutive ICP cells at the ICP offset position. The ICP stuff is inserted by repeating the ICP cell. The purpose of the ICP stuff is to decrease the IMA data cell rate of fast links at the transmit side. When an ICP stuff is inserted into an IMA frame, the frame length will become M+1, with M being the frame length without ICP stuff.
IMA Frame Synchronization Mechanism (IFSM)	— This is a state machine used for receiving IMA frame synchronization. It is an analogy to the cell delineation mechanism defined in ITU-T recommendation I.432.
IMA	— Inverse Multiplexing for ATM
IMA Frame	— The IMA frame is a cell stream transmitted over IMA links within an IMA group. There are altogether M cells in one IMA frame without ICP stuff. M could be 32, 64, 128 or 256. In each IMA frame, there are one ICP cell, ATM layer cells and IMA Filler cells. The ICP cells occur at the offset position specified in the ICP cell (the offset may be different for different links).
IMA Group	— The IMA group is a number of links at one end that are used to establish an IMA virtual link to the other end.
IMA Link	— An IMA link is a unidirectional logical link of a physical link's Tx or Rx direction. The IMA link is identified by the value of LID field of the ICP cells carried over that IMA link. Thus a physical link that connects two ends (A and B) may consist of two IMA links, one from A to B and the other from B to A.
IMA Sublayer	— The IMA is a sublayer part of the Physical layer and located between the interface specific Transmission Convergence (TC) sublayer and the ATM layer.
IMA Virtual Link	— This is a data communication channel between two communication ends (two IMA units) over a number of physical links; These links are also called an IMA group.
IMAOS16	— A downloaded software used when the device is in normal communication.
IMAOS16_Slave	— A downloaded software used when the device operates in Slave Mode. It supports the Group Auto Detect function.
Independent Transmit Clock (ITC)	— This is a configuration where there is at least one IMA link within an IMA group that has its transmit clock derived from a clock source that is different from that of other IMA links. The IMA transmitter may indicate that it is in the ITC mode even if all of the transmit clocks of the links are derived from the same source.
In Group	— This is an event indicating that a link has been configured into an IMA group.
Inhibiting	— This represents the action to voluntarily disable the capacity of the group or the link to carry ATM layer cells for reasons other than reported problems.
Insufficient-Links	— Group state indicating that the group does not have sufficient links in the Active state to be in the Operational state.
LASR	— This stands for Link Addition and Slow Recovery procedure.
LCD	— Loss of Cell Delineation defect. The LCD defect is reported when the OCD anomaly persists for the time specified in ITU-T Recommendation I.432 [30]. The LCD defect is cleared when the OCD anomaly has not been detected for the period of time specified in ITU-T Recommendation I.432.
LID	— Link Identifier. The LID field in the ICP cell is used to identify an IMA link on which the ICP cells are transmitted. The LID is been used to determine the round-robin order to retrieve cells from the incoming IMA links at the IMA receiver.
LIF	— Loss of IMA Frame defect. The LIF defect is the occurrence of persistent OIF anomalies for at least 2 IMA frames.
Link	— The term "link" refers to an IMA link in this data sheet, unless the context clearly refers to a physical link.
Link Defect	— A link defect is the occurrence of the persistent detection of an anomaly at the Interface Specific Transmission Convergence sublayer. LOS, LOF/OOF, AIS, LOC and LCD defects are examples of link defects reported at the Interface Specific Transmission Convergence sublayer.

LODS	—	Link Out Of Delay Synchronization defect. The LODS is a link event indicating that the link is not synchronized with the other links within the IMA group.
LOF	—	Loss Of Frame
LOS	—	Loss Of Signal
LSB	—	Least Significant Bit
LSI	—	Link Stuff Indication
LSM	—	Link State Machine
M	—	IMA frame size
MIB	—	Management Information Base
MPU	—	MicroProcessor Unit
MSB	—	Most Significant Bit
NE	—	Near-End (local end)
Not Configured	—	This is a group state indicating that the group does not exist yet.
Not in Group	—	This is used as an event or a state indicating that a link is no longer configured within an IMA group.
OAM	—	Operations And Maintenance
OCD	—	Out of Cell Delineation anomaly. As specified in ITU-T Recommendation I.432 [30], an OCD anomaly is reported upon the occurrence of Alpha (α) consecutive cells with incorrect HEC, and it is no longer reported after detecting Delta (δ) consecutive cells with correct HEC.
OIF	—	Out of IMA Frame anomaly
OOF	—	Out Of Frame
Operational	—	Group state indicating that the group has sufficient links in both Tx and Rx directions to carry ATM layer cells.
Physical Link	—	This is the link being used by the IMA unit to transmit and receive ATM cells. The IMA unit may use physical links in one or both directions.
P _{Rx}	—	Minimum number of links required to be active in the receive direction for the IMA group to move into the Operational state.
P _{Tx}	—	Minimum number of links required to be active in the transmit direction for the IMA group to move into the Operational state.
RDI	—	Remote Defect Indicator
RFI	—	Remote Failure Indicator
Rx	—	Receive (side)
SES	—	Severely Errored Seconds
SICP Cell	—	Stuff ICP cell. One of the 2 ICP cells comprising a stuff event.
Stuff Event	—	This is a repetition of an ICP cell over one IMA link to compensate for timing difference with other links within the IMA group.
Start-up	—	This is a group state indicating that the group is waiting to see the FE in Start-up.
Start-up-Ack	—	This is a group transitional state, when both groups are in start-up and the FE group parameters have been accepted.
Symmetrical Configuration	—	This is an IMA group configuration scheme. In this configuration mode, physical links that are assigned to an IMA group are required to be configured in both Tx and Rx directions.
Symmetrical Operation	—	This is an ATM traffic mode of an IMA group. In this mode, the physical link can be used to transfer data only when the link's NE's Tx and Rx and FE's Tx and Rx are all in active state.

TAP bus	—	Test Access Port bus
TC	—	Transmission Convergence
TRL	—	Timing Reference Link.
Tx	—	Transmit (side)
UAS	—	UnAvailable Seconds
UAS-IMA	—	UnAvailable Seconds for IMA. Interval during which the IMA receiver is declared unavailable. The period of unavailability begins at the onset of 10 continuous SES-IMA, including the first 10 seconds to enter the UAS-IMA condition. The period of unavailability ends at the onset of 10 continuous seconds with no SES-IMA, excluding the last 10 seconds to exit the UAS-IMA condition.
Unusable	—	This is a link state indicating the link is not in use due to fault, inhibition, etc.
Usable	—	This is a link state indicating the link is ready to operate in the specified direction, but it is waiting to move to Active.
UUS	—	UnUsable Seconds. Number of seconds during which the link state is Unusable.



A

A.C. characteristics	75
absolute maximum ratings	74
add links to a group	63
AddRxLink command	12, 16, 23, 39
AddTxLink command	12, 16, 23, 37

B

Blocked-FE	65
------------------	----

C

command	
AddRxLink	12, 16, 23, 39
AddTxLink	12, 16, 23, 37
ConfigDev	23, 26
ConfigGroupInterFace	11, 32
ConfigGroupPara	30
ConfigGroupWorkMode	33
ConfigGSMTimers	34
ConfigIFSMPara	36
ConfigLoopMode	11, 16, 29
ConfigSlaveFrame	69
ConfigTRLLink	23, 35
ConfigUNILink	11, 12, 16, 23, 40
ConfigUtopiaIF	11, 28, 70
DeactLink	49, 63
DeleteGrp	46, 63
DeleteLink	48, 63
DeviceInitial	67
GetConfigPara	56
GetGroupDelayInfo	51
GetGroupState	50
GetGrpPerf	53
GetGrpWorkingPara	57
GetLinkPerf	54
GetLinkState	52
GetLinkWorkingPara	58
GetLoopedTestPattern	60
GetVersionInfo	61, 71
GroupInitial	72
InhibitGrp	43, 63
NotInhibitGrp	44, 63
RecoverLink	47, 63
RestartGrp	45, 63
StartGroup	41, 63
StartLASR	42, 63
StartTestPattern	59

StopTestPattern	61
command description	26, 66
command set list and their encoding	25
Config-Aborted	65
Config-Aborted-FE	65
ConfigDev command	23, 26
ConfigGroupInterFace command	11, 32
ConfigGroupPara command	30
ConfigGroupWorkMode command	33
ConfigGSMTimers command	34
ConfigIFSMPara command	36
ConfigLoopMode command	11, 16, 29
ConfigSlaveFrame command	69
ConfigTRLLink command	23, 35
ConfigUNILink command	11, 12, 16, 23, 40
configure a group	62
ConfigUtopiaIF command	11, 28, 70

D

D.C. characteristics	74
deactivate links	63
DeactLink command	49, 63
delete a group	63
delete links	63
DeleteGrp command	46, 63
DeleteLink command	48, 63
DeviceInitial command	67

E

errored ICP	64
-------------------	----

F

failure/alarm signal	
Blocked-FE	65
Config-Aborted	65
Config-Aborted-FE	65
GR-Timing-Mismatch	65
Insufficient-Links	65
Insufficient-Links-FE	65
LCD	65
LIF	65
LODS	65
RFI-IMA	65
Rx-Unusable-FE	65
Start-up-FE	65
Tx-Unusable-FE	65
FIFO_INT_ENABLE_REG register	19

FIFO_INT_RESET_REG register	19
FIFO_STATE_REG register	19

G

G.802 mapping	13
GetConfigPara command	56
GetGroupDelayInfo command	51
GetGroupState command	50
GetGrpPerf command	53
GetGrpWorkingPara command	57
GetLinkPerf command	54
GetLinkState command	52
GetLinkWorkingPara command	58
GetLoopedTestPattern command	60
GetVersionInfo command	61, 71
global signals	4
glossary	84
group auto detect	
master side	66
slave side	66
GroupInitial command	72
GR-Timing-Mismatch	65
GR-UAS-IMA	64

H

HCS_ERR_TC	54, 64
------------------	--------

I

IMA frame	23
IMA initialization	62
IMA mode	23
IMA operation	62
IMAOS16	17, 20, 66
IMAOS16_Slave	17, 20, 66
inhibit a group	63
InhibitGrp command	43, 63
INPUT_FIFO_DATA_REG register	18
INPUT_FIFO_INTERNAL_STATE_REG register	20
INPUT_FIFO_LENGTH_REG register	18
Insufficient-Links	65
Insufficient-Links-FE	65
Intel	
microprocessor interface timing	80
interface	
JTAG & Scan	73
JTAG & Scan interface	9
line interface	5, 12
microprocessor	17
microprocessor interface	8
SRAM interface	9, 22
Utopia interface	11
invalid ICP	64
IV-IMA	54, 64

J

JTAG & Scan interface	9, 73
JTAG instructions	73

L

LCD	65
LIF	65
line interface	5, 12
external loopback	16
internal loopback	16
loopback	16
external loopback	16
internal loopback	16
timing clock mode	16
line interface timing	77
line interface timing clock mode	16
line interface Work Mode	
mode0	13
mode1~mode4	13
mode11	15
mode12 and mode13	15
mode14 and mode15	16
mode5 and mode6	15
mode7~mode10	15
link backup	23
LODS	65
loopback	16
line interface	16
Utopia loopback	11

M

mapping	
G.802 mapping	13
spaced mapping	14
master side	66
maximum delay tolerance	22
SRAM size	22
microprocessor interface	8, 17
microprocessor interface timing	
Intel	80
Motorola	78
missing ICP	64
mode	
IMA mode	23
UNI mode	23
Motorola	
microprocessor interface timing	78
multi-rate	15

N

not inhibit a group	63
NotInhibitGrp command	44, 63

O

OCD_TC	54, 64
OIF-IMA	54, 64
OUTPUT_FIFO_DATA_REG register	18
OUTPUT_FIFO_INTERNAL_STATE_REG register	20
OUTPUT_FIFO_LENGTH_REG register	18

P

performance monitoring	64
physical and electrical characteristics	74
pin description	
global signals	4
JTAG & Scan interface	9
line interface	5
microprocessor interface	8
others	10
power supplies and grounds	10
SRAM interface	9
PMON	64
PMON parameters	
GR-UAS-IMA	64
HCS_ERR_TC	54, 64
IV-IMA	54, 64
OCD_TC	54, 64
OIF-IMA	54, 64
Rx-Stuff-IMA	54, 64
Rx-UUS-IMA	54, 64
Rx-UUS-IMA-FE	54, 64
SES-IMA	54, 64
SES-IMA-FE	54, 64
Tx-Stuff-IMA	54, 64
Tx-UUS-IMA	54, 64
Tx-UUS-IMA-FE	54, 64
UAS-IMA	54, 64
UAS-IMA-FE	54, 64
power supplies and grounds	10

R

recover links	63
RecoverLink command	47, 63
register	
FIFO_INT_ENABLE_REG	19
FIFO_INT_RESET_REG	19
FIFO_STATE_REG	19
INPUT_FIFO_DATA_REG	18
INPUT_FIFO_INTERNAL_STATE_REG	20
INPUT_FIFO_LENGTH_REG	18
OUTPUT_FIFO_DATA_REG	18
OUTPUT_FIFO_INTERNAL_STATE_REG	20
OUTPUT_FIFO_LENGTH_REG	18
register description	18
register list and map	17
restart a group	63

RestartGrp command	45, 63
RFI-IMA	65
Rx-Stuff-IMA	54, 64
Rx-Unusable-FE	65
Rx-UUS-IMA	54, 64
Rx-UUS-IMA-FE	54, 64

S

SES-IMA	54, 64
SES-IMA-FE	54, 64
slave side	66
spaced mapping	14
SRAM interface	9, 22
SRAM interface timing	82
SRAM size	
maximum delay tolerance	22
start up a group	63
StartGroup command	41, 63
StartLASR command	42, 63
StartTestPattern command	59
Start-up-FE	65
StopTestPattern command	61
stuffing mode	23
CTC	23
ITC	23


T

T1 ISDN mode	15
T1 normal mode	15
timing	
line interface timing	77
microprocessor interface timing	
Intel	80
Motorola	78
SRAM interface timing	82
Utopia interface timing	76
timing clock mode	
line interface	16
timing reference link	23
TRL	23
Tx-Stuff-IMA	54, 64
Tx-Unusable-FE	65
Tx-UUS-IMA	54, 64
Tx-UUS-IMA-FE	54, 64

U

UAS-IMA	54, 64
UAS-IMA-FE	54, 64
UNI mode	23
Utopia interface	11
Utopia interface timing	76
Utopia loopback	11

ORDERING INFORMATION

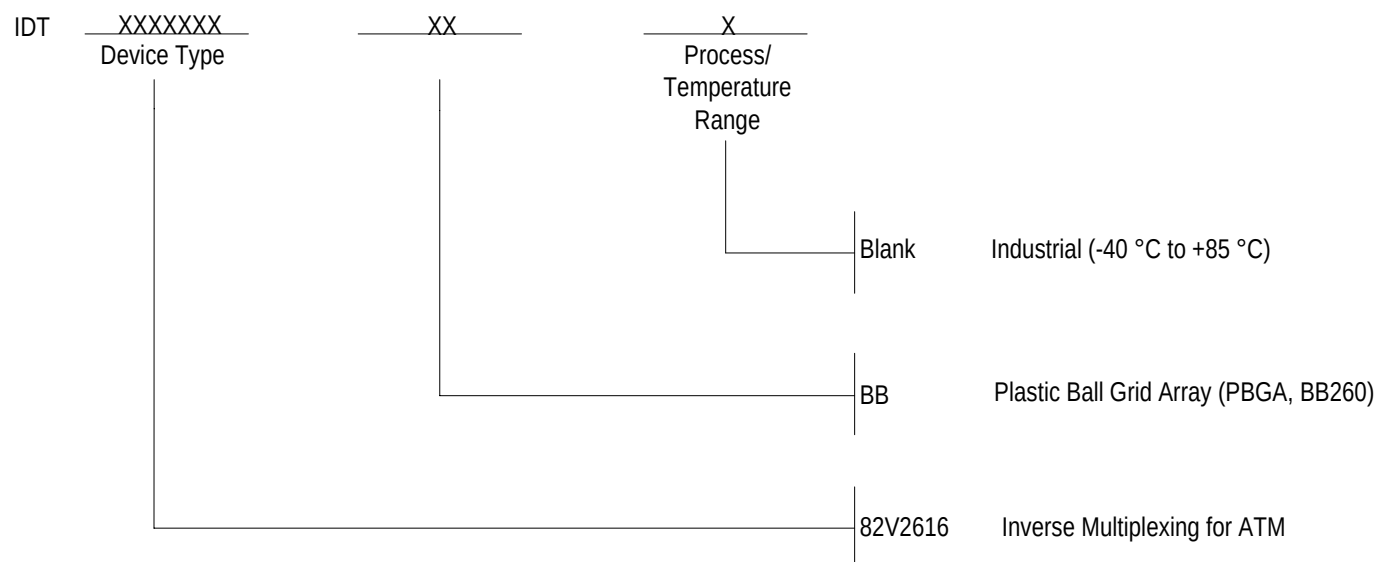

Data Sheet Document History

10/17/2003 Pages 1, 10, 11, 23, 26, 29, 37, 39, 66, 75, 76

12/08/2008 Page 1



CORPORATE HEADQUARTERS
 2975 Stender Way
 Santa Clara, CA 95054

for SALES:
 800-345-7015 or 408-727-5116
 fax: 408-492-8674
www.idt.com

for Tech Support:
 408-330-1552
 email: TELECOMhelp@idt.com

The IDT logo is a registered trademark of Integrated Device Technology, Inc.