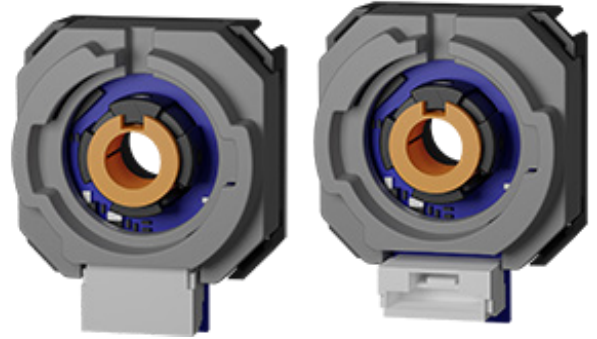


SERIES: AMT12 | **DESCRIPTION:** MODULAR INCREMENTAL ENCODER

FEATURES

- 16 programmable resolutions up to 4096 PPR
- single ended quadrature A/B
- resilient to dust, dirt, and oil
- low power consumption
- -40 to +125°C temperature range
- radial and axial cable connections
- configuration and firmware updates via AMT Viewpoint™ software
- fits motor shafts from 1 mm to ¼"


ELECTRICAL

| parameter | conditions/description | min | typ | max | units |
|----------------------------|------------------------------|---------|-----|-----|-------|
| power supply | VDD | 4.5 | 5 | 5.5 | V |
| start-up time ¹ | | | 200 | | ms |
| current consumption | with unloaded output | | 16 | | mA |
| output high level | | VDD-0.8 | | | V |
| output low level | | | | 0.4 | V |
| output current | CMOS sink/source per channel | | | 2 | mA |
| rise/fall time | | | 30 | | ns |

Note: 1. Encoder must be stationary during start-up.

INCREMENTAL CHARACTERISTICS

| parameter | conditions/description | min | typ | max | units |
|--|---|-----|------|-----|---------|
| channels | quadrature A & B | | | | |
| waveform | CMOS voltage square wave | | | | |
| phase difference | A leads B for CCW rotation (viewed from front) | | 90 | | degrees |
| quadrature resolutions ² | 96, 192, 200, 250, 384, 400, 500, 512, 768, 800, 1000, 1024, 1600, 2000, 2048, 4096 | | | | PPR |
| accuracy | | | 0.25 | | degrees |
| quadrature duty cycle (at each resolution) | 512, 1024, 2048, 4096 | 49 | 50 | 51 | % |
| | 96, 192, 200, 250, 384, 400, 500, 768, 800, 1000 | 47 | 50 | 53 | % |
| | 1600, 2000 | 43 | 50 | 56 | % |

Notes: 2. Resolutions programmed with AMT Viewpoint™ PC software. Default resolution set to 2048 PPR. Listed as pre-quadrature, meaning final number of counts is PPR x 4.

MECHANICAL

| parameter | conditions/description | min | typ | max | units |
|---------------------------------------|---|------|---------------|------|-------|
| motor shaft length | | 12.3 | | | mm |
| motor shaft tolerance | | | NOM +0/-0.015 | | mm |
| axial play | | | | ±0.3 | mm |
| hub set screw to shaft torque | | | 3 | | in-lb |
| rotational speed (at each resolution) | 384, 768, 800, 1000, 1600, 2000, 2048, 4096 | | | 4000 | RPM |
| | 96, 192, 200, 250, 400, 500, 512, 1024 | | | 8000 | RPM |


ENVIRONMENTAL

| parameter | conditions/description | min | typ | max | units |
|-----------------------|--|-----|-----|-----|-------|
| operating temperature | | -40 | | 125 | °C |
| humidity | non-condensing | | | 85 | % |
| vibration | 10~500 Hz, 5 minute sweep, 2 hours on each XYZ | | | 5 | G |
| shock | 3 pulses, 6 ms, 3 on each XYZ | | | 200 | G |
| RoHS | yes | | | | |

WAVEFORMS

Figure 1

Quadrature signals showing counter-clockwise rotation

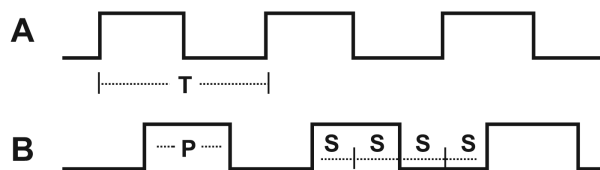


The following parameters are defined by the resolution selected for each encoder. The encoders resolution is listed as Pulses Per Revolution (PPR), which is the number of periods (or high pulses) over the encoders revolution.

| Parameter | Description | Expression | Units | Notes |
|-----------|-----------------|------------|-----------------------|--|
| PPR | resolution | | Pulses Per Revolution | This is the user selected value and the format all resolutions are listed in |
| CPR | counts | PPR x 4 | Counts Per Revolution | This is the number of quadrature counts the encoder has |
| T | period | 360/R | mechanical degrees | |
| P | pulse width | T/2 | mechanical degrees | |
| S | A/B state width | T/4 | mechanical degrees | This is the width of a quadrature state |

Note: For more information regarding PPR, CPR, or LPR (Lines Per Revolution) view <https://www.cuidevices.com/blog/what-is-encoder-ppr-cpr-and-lpr>

PART NUMBER KEY

For customers that prefer a specific AMT12 configuration, please reference the custom configuration key below.

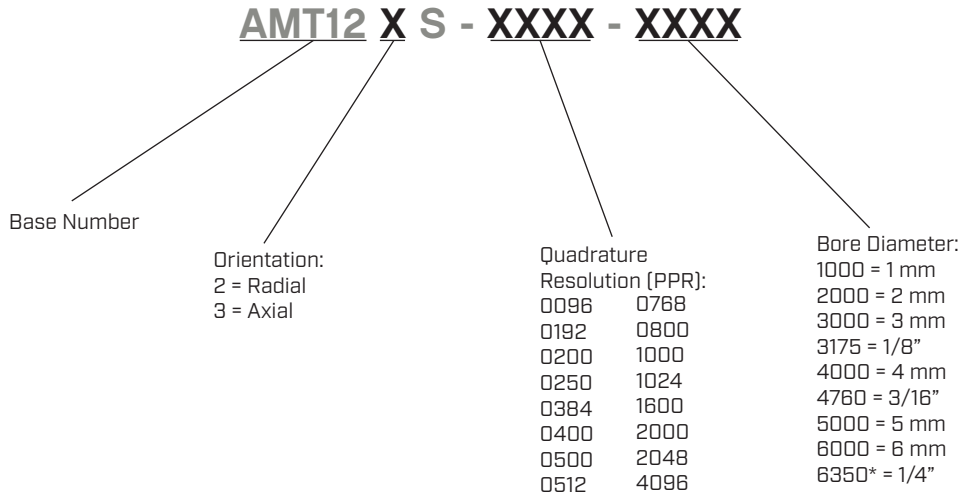

*1/4 inch bore diameter option only available as custom configuration.

AMT12-V KITS

In order to provide maximum flexibility for our customers, the AMT12 series is provided in kit form standard. This allows the user to implement the encoder into a range of applications using one sku#, reducing engineering and inventory costs. AMT12 kit includes all items shown below.

ORDERING GUIDE

AMT12 X S-V

Orientation:
2 = Radial
3 = Axial



| SHAFT ADAPTERS | | | | | | |
|----------------|------------|--------|--------|------|---------|-------|
| | | | | | | |
| 1 mm | 2 mm | 3 mm | 1/8 in | 4 mm | 3/16 in | 5 mm |
| White | Light Blue | Orange | Purple | Gray | Yellow | Green |

| AMT12 ENCODER | AMT12 BASE | ALIGNMENT TOOL* | PLACEMENT TOOL | CENTERING TOOL | ALLEN WRENCH |
|--|------------|-----------------|----------------|----------------|--------------|
| | | | | | |
| Shaft adapter is not needed for 6 mm shaft | | | | | |

*Alignment Tool comes pre-installed on all AMT12 Encoders.

ENCODER INTERFACE

| CONNECTOR PINOUT | | |
|------------------|---------|---------|
| Function | | |
| # | AMT122 | AMT123 |
| 1 | +5 V | +5 V |
| 2 | GND | GND |
| 3 | A | A |
| 4 | B | B |
| 5 | ENC_TX+ | ENC_TX+ |
| 6 | ENC_RX+ | ENC_RX+ |
| 7 | MCLR | MCLR |
| 8 | N/A | N/A |

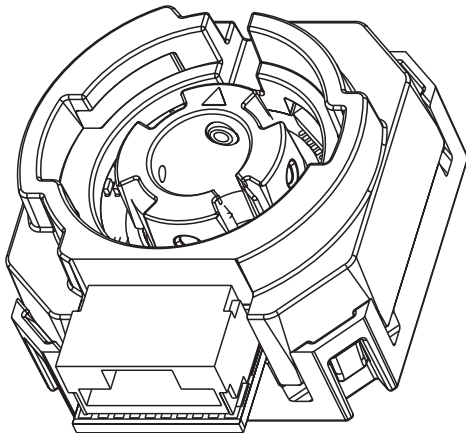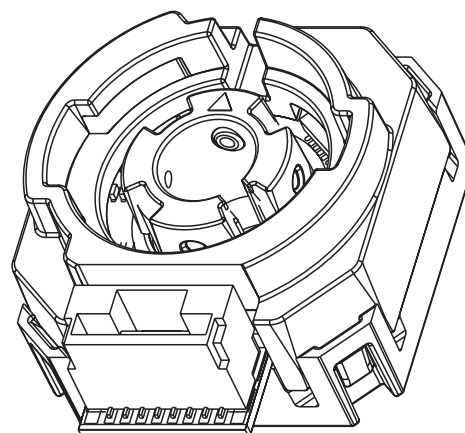
AMT122**AMT123**

Mating Connector:
JST NSHR-08V-S

MECHANICAL DRAWING


units: mm
 tolerance:
 X.X ±0.25 mm
 X.XX ±0.15 mm

AMT122






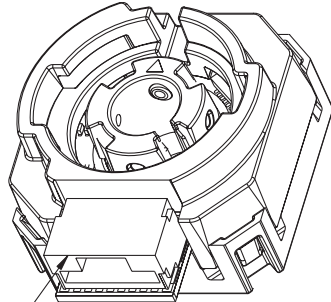


SM08B-NSHSS-TB

AMT123

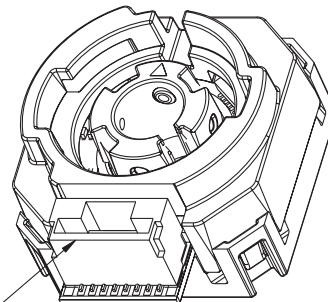


BM08B-NSHSS-TBT

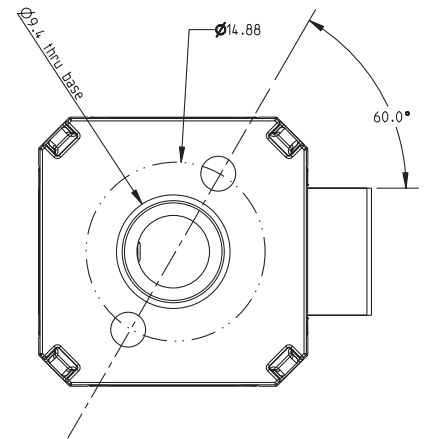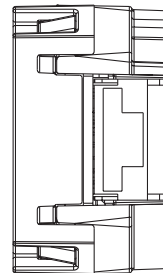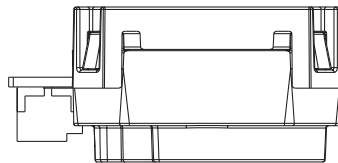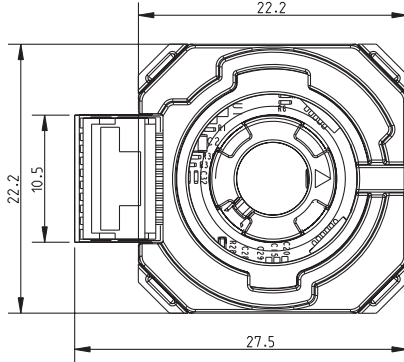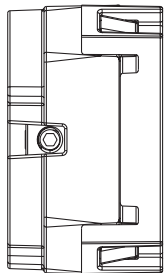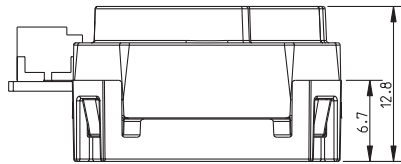


ASSEMBLY PROCEDURE

STEP 1

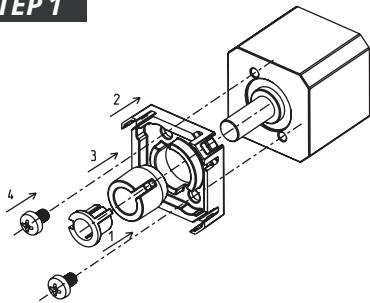


1. Begin by selecting the appropriately sized shaft adapter and insert it into the centering tool. No adapter is needed for a 6 mm motor shaft.
2. Place the plastic base over the motor shaft.
3. Slide the centering tool and shaft adapter over the motor shaft. The centering tool will hold the base in the proper position.
4. While holding the centering tool down in place, install screws to secure the base to the motor body.

STEP 2

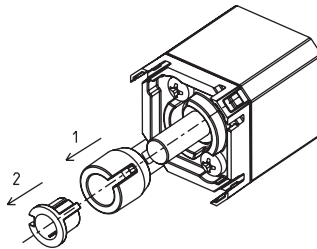


1. Remove the centering tool.
2. Take the shaft adapter out of the centering tool.

STEP 3

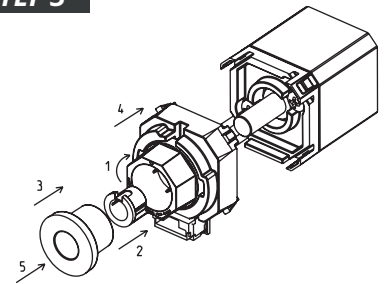


1. Rotate the pre-installed alignment tool clockwise and completely to the right so that the pre-installed shaft set screw is visible.
2. Insert the shaft adapter into the encoder making sure the adapter is properly aligned with the keyway in the metal hub. No adapter is needed for a 6 mm motor shaft.
3. Insert the placement tool into the assembly. This placement tool holds the encoder's hub and shaft adapter in the proper position for installation onto the motor shaft.
4. Position the encoder so it can snap onto the plastic base. The encoder will only snap into place in one orientation.
5. Slide the encoder onto the motor shaft applying force only to the placement tool to maintain proper alignment of the encoder's hub and shaft adapter.
6. Ensure all 4 locking tabs are secured in place over the encoder hub.

STEP 4

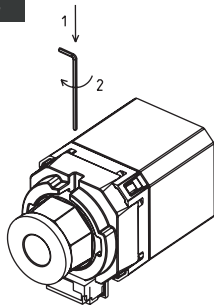

1. Insert the Allen Wrench into the notch on the top.
2. Tighten the shaft set screw. Torque to the specification listed on the applicable AMT encoder datasheet.

STEP 5

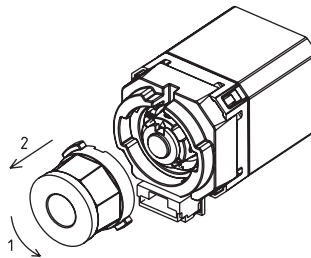

1. Rotate the placement tool and alignment tool counterclockwise until the tabs align with the openings.
2. Remove both tools from the encoder.
3. When installation is finished, the motor shaft should be rotating freely.

REVISION HISTORY

| rev. | description | date |
|------|---|------------|
| 1.0 | initial release | 09/03/2020 |
| 1.01 | added motor shaft tolerance details, updated start-up details | 09/10/2021 |
| 1.02 | logo, datasheet style update | 08/05/2022 |

The revision history provided is for informational purposes only and is believed to be accurate.



CUI Devices offers a one (1) year limited warranty. Complete warranty information is listed on our website.

CUI Devices reserves the right to make changes to the product at any time without notice. Information provided by CUI Devices is believed to be accurate and reliable. However, no responsibility is assumed by CUI Devices for its use, nor for any infringements of patents or other rights of third parties which may result from its use.

CUI Devices products are not authorized or warranted for use as critical components in equipment that requires an extremely high level of reliability. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

cuidevices.com