

# M40S-64A005AA0, M40E-64A005RA0 M4000 Area



**MULTIPLE LIGHT BEAM SAFETY DEVICES** 

# M40S-64A005AA0, M40E-64A005RA0 | M4000 Area

MULTIPLE LIGHT BEAM SAFETY DEVICES



# Ordering information

System part	Туре	Part no.
Sender	M40S-64A005AA0	1200506
Receiver	M40E-64A005RA0	1200508

Other models and accessories → www.sick.com/M4000\_Area

# 

# Detailed technical data

# Features

Scanning range	0.5 m 19 m, configurable
Low scanning range	0.5 m 6 m
Great scanning range	5 m 19 m
Length of the monitored area	900 mm
Resolution	60 mm
Response time	17 ms
Synchronization	Optical synchronisation

## Safety-related parameters

Туре	Type 4 (IEC 61496)
Safety integrity level	SIL3 (IEC 61508) SILCL3 (EN 62061)
Category	Category 4 (EN ISO 13849)
Performance level	PL e (EN ISO 13849)
$\ensuremath{PFH}_{\ensuremath{D}}$ (mean probability of a dangerous failure per hour)	1.4 * E-08 (EN ISO 13849)
T <sub>M</sub> (mission time)	20 years (EN ISO 13849)
Safe state in the event of a fault	At least one OSSD is in the OFF state.

# Functions

	Functions	Delivery status	
Restart interlock	1	Internal	
External device monitoring (EDM)	1	Activated	
Beam coding	1	Uncoded	
Sender test	1	Deactivated	
Configurable scanning range	1	0.5 m 6 m	
Configurable application diagnostic output	1	Contamination (OWS)	
Safe SICK device communication via EFI	1		

# M40S-64A005AA0, M40E-64A005RA0 | M4000 Area

MULTIPLE LIGHT BEAM SAFETY DEVICES

## Interfaces

System connection		
Connection type	Hirschmann male connector M26, 12-pin	
Permitted cable length	≤ 50 m <sup>1)</sup>	
Permitted cross-section	≥ 0.75 mm²	
Configuration method	PC with CDS (Configuration and Diagnostic Software)	
Configuration connection		
Connection type	Female connector M8, 4-pin	
Display elements	LEDs 7-segment display	
Fieldbus, industrial network		
Integration via EFI gateways	CANopen, Ethernet, PROFIBUS DP, PROFIBUS PROFIsafe, PROFINET PROFIsafe $^{\rm 2)}$	
Integration via Flexi Soft safety controller	CANopen, DeviceNet™, EtherCAT®, EtherNet/IP™, Modbus TCP, PROFIBUS DP, PROFINET <sup>3)</sup>	

 $^{(1)}$  Depending on load, power supply and wire cross-section. The technical specifications must be observed.

<sup>2)</sup> For a suitable EFI-gateway see modules and gateways in the accessory section of connection systems.

<sup>3)</sup> For additional information on Flexi Soft -> www.sick.com/Flexi\_Soft.

### Electrical data

Protection class	III (EN 50178)
Supply voltage V <sub>S</sub>	24 V DC (19.2 V DC 28.8 V DC) <sup>1)</sup>
Residual ripple	$\leq 10 \%^{2}$
Power consumption	$\leq$ 0.2 A: $\leq$ 0.6 A (depending on type)
Safety outputs (OSSD)	
Type of output	2 PNP semiconductors, short-circuit protected, cross-circuit monitored <sup>3)</sup>
Switching voltage HIGH	24 V DC (V <sub>S</sub> – 2.25 V DC V <sub>S</sub> )
Switching voltage LOW	≤ 2 V DC
Switching current	≤ 500 mA
Diagnostic outputs	
Type of output	PNP semiconductor, short-circuit protected
Switching voltage HIGH	24 V DC (V <sub>S</sub> – 4.2 V DC V <sub>S</sub> )
Switching voltage LOW	High resistance
Switching current	≤ 100 mA

<sup>1)</sup> The external voltage supply must be capable of buffering brief mains voltage failures of 20 ms as specified in EN 60204-1. Suitable power supplies are available as accessories from SICK.

 $^{2)}$  Within the limits of  $\mathrm{V}_{S}.$ 

 $^{3)}$  Applies to the voltage range between –30 V and +30 V.

### Mechanical data

Housing cross-section	52 mm x 55.5 mm
Housing material	Aluminum alloy ALMGSI 0.5
Surface treatment	Powder coated
Front screen material	Polycarbonate, scratch-resistant coating
Ambient data	
Enclosure rating	IP65 (EN 60529)

# M40S-64A005AA0, M40E-64A005RA0 | M4000 Area MULTIPLE LIGHT BEAM SAFETY DEVICES


Ambient operating temperature	-30 °C +55 °C
Ambient operating temperature	-50 0 155 0
Storage temperature	-30 °C +70 °C
Air humidity	15 % 95 %, Non-condensing
Vibration resistance	5 g, 10 Hz 55 Hz (IEC 60068-2-6)
Shock resistance	10 g, 16 ms (IEC 60068-2-29)

Other information

Wave length	850 nm
Classifications	
ECI@ss 5.0	27272703
ECI@ss 5.1.4	27272703
ECI@ss 6.0	27272703
ECI@ss 6.2	27272703
ECI@ss 7.0	27272703
ECI@ss 8.0	27272703
ECI@ss 8.1	27272703
ECI@ss 9.0	27272703
ETIM 5.0	EC001832
ETIM 6.0	EC001832
UNSPSC 16.0901	46171620

MULTIPLE LIGHT BEAM SAFETY DEVICES

# Dimensional drawing (Dimensions in mm (inch))

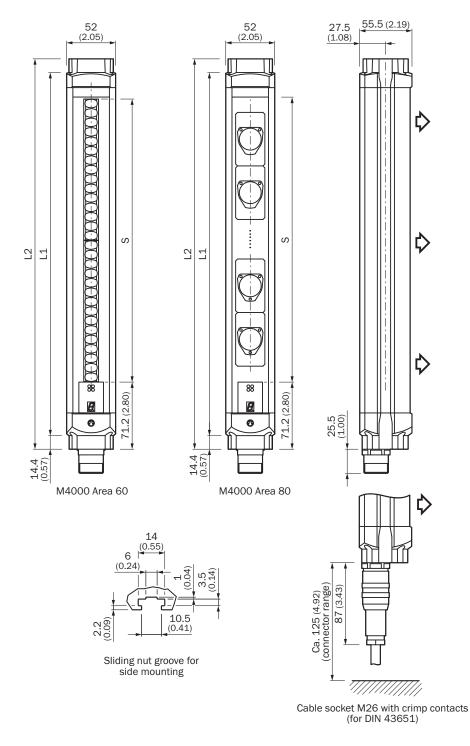


# M40S-64A005AA0, M40E-64A005RA0 | M4000 Area

MULTIPLE LIGHT BEAM SAFETY DEVICES

Length of the monitored area S	L1	L2
300 (11.81)	387 (15.24)	416 (16.38)
450 (17.72)	537 (21.14)	566 (22.28)
600 (23.62)	687 (27.05)	716 (28.19)
750 (29.53)	837 (32.95)	866 (34.09)
900 (35.43)	987 (38.86)	1,016 (40.00)
1,050 (41.34)	1,137 (44.76)	1,166 (45.91)
1,200 (47.24)	1,287 (50.67)	1,316 (51.81)
1,350 (53.15)	1,437 (56.57)	1,466 (57.72)
1,500 (59.06)	1,587 (62.48)	1,616 (63.62)
1,650 (64.96)	1,737 (68.39)	1,766 (69.53)
1,800 (70.87)	1,887 (74.29)	1,916 (75.43)

# **Connection diagram**

M4000 Area connected to UE10-30S safety relay

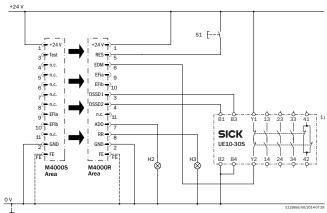

# ( 2) PELV

#### Task

Connection of an M4000 Area multiple light beam safety device to a UE10-30S safety relay.

Operating mode: with restart interlock and external device monitoring.

#### **Operating characteristics**

When the light path is clear and the UE10-30S is de-energized and functioning correctly, the yellow LED on the receiver and the H3 lamp flash. The system is ready for switch-on and waits for an input signal/switch-on signal. The system is enabled by pressing and releasing the S1 button. The OSSD1 and OSSD2 outputs are live, the UE10-30S is switched on. On interruption of one or several of the light beams, the UE10-30S is de-energized by the OSSD1 and OSSD2 outputs.

If the optics are dirty, H2 indicator illuminates.

#### Fault analysis

OSSD cross-circuits and short-circuits are detected and lead to the inhibited state (lock-out). The erroneous behavior of the UE10-30S will be detected. The shutdown function is retained. On manipulation (e.g., jamming) of the S1 button, the system does not enable the output current circuits.

#### Comments

<sup>1)</sup> Output circuits: These contacts are to be connected to the controller such that, with the output circuit open, the dangerous state is disabled. For categories 4 and 3, this integration must be dual-channel (x/y paths). Single-channel insertion in the control (z path) is only possible with a single-channel control and by taking the risk analysis into account.

<sup>2)</sup> PELV in accordance with the requirements in

#### EN 60204-1/6.4

Take note of the operating instructions of the integrated devices. This applies particularly to the use of configurable functions.

MULTIPLE LIGHT BEAM SAFETY DEVICES

# **Recommended accessories**

Other models and accessories → www.sick.com/M4000\_Area

	Brief description	Туре	Part no.
Mounting bra	ckets and plates		
	4 pieces, Mounting kit 1, mounting bracket, rigid, L-shaped, including fixing screws and washers	BEF-3WNGBAST4	7021352
Other mounti	ng accessories		
	2 pieces, Floor stands for the horizontal mounting of the safety light curtains C4000 Fusion, Entry/Exit, Palletizer, as well as the multi-beam safety light curtain M4000 Area, for mounting heights of between 70 mm and 780 mm., Includes mounting bracket	BEF-3HHOCAST2	2041661
Terminal and	alignment brackets		
	4 pieces, Mounting kit 6, side bracket, rotatable, Zinc diecast	BEF-1SHABAZN4	2019506
6	4 pieces, Mounting kit 12, rotatable, swivel mount	BEF-2SMGEAKU4	2030510
Plug connect	ors and cables		
	Head A: female connector, M26, 12-pin, straight Head B: cable Cable: PVC, unshielded, 5 m	DOL-0612G05M075KM0	2022545
	Head A: female connector, M26, 12-pin, straight Head B: cable Cable: PVC, unshielded, 10 m	DOL-0612G10M075KM0	2022547
	Head A: female connector, M26, 12-pin, straight Head B: cable Cable: PVC, unshielded, 20 m	DOL-0612G20M075KM0	2022549
	Head A: female connector, M26, 12-pin, straight Head B: - Cable: unshielded	DOS-0612G000GA3KM0	6020757
6	Head A: female connector, M26, 12-pin, angled Head B: - Cable: unshielded	DOS-0612W000GA3KM0	6020758
Alignment aid	ls		
Ũ	Laser alignment aid for various sensors, laser class 2 (IEC 60825). Do not look into the beam!	AR60	1015741
	Adapter AR60 for M4000 and M4000 Curtain	AR60 adapter, M4000	4040006

# SICK AT A GLANCE

SICK is one of the leading manufacturers of intelligent sensors and sensor solutions for industrial applications. A unique range of products and services creates the perfect basis for controlling processes securely and efficiently, protecting individuals from accidents and preventing damage to the environment.

We have extensive experience in a wide range of industries and understand their processes and requirements. With intelligent sensors, we can deliver exactly what our customers need. In application centers in Europe, Asia and North America, system solutions are tested and optimized in accordance with customer specifications. All this makes us a reliable supplier and development partner.

Comprehensive services complete our offering: SICK LifeTime Services provide support throughout the machine life cycle and ensure safety and productivity.

For us, that is "Sensor Intelligence."

# WORLDWIDE PRESENCE:

Contacts and other locations -www.sick.com



Online data sheet

