



Simplifying System IntegrationTM

73M1822/73M1922

Modem CTL Application User Guide

December 23, 2009
Rev. 1.0
UG_1x22_056

© 2009 Teridian Semiconductor Corporation. All rights reserved.
Teridian Semiconductor Corporation is a registered trademark of Teridian Semiconductor Corporation.
Linux is a registered trademark of Linus Torvalds.
All other trademarks are the property of their respective owners.

Teridian Semiconductor Corporation makes no warranty for the use of its products, other than expressly contained in the Company's warranty detailed in the Teridian Semiconductor Corporation standard Terms and Conditions. The company assumes no responsibility for any errors which may appear in this document, reserves the right to change devices or specifications detailed herein at any time without notice and does not make any commitment to update the information contained herein. Accordingly, the reader is cautioned to verify that this document is current by comparing it to the latest version on <http://www.teridian.com> or by checking with your sales representative.

Table of Contents

1	Introduction	5
1.1	Modem CTL User Space Application.....	5
1.2	Modem CTL Command Summary	6
2	Command Descriptions.....	7
2.1	Help Command.....	7
2.2	1x22 Hardware Register Access	8
2.2.1	Register Read Commands	8
2.2.2	Register Write Command	9
2.3	Answering of Incoming Calls	9
2.3.1	Auto Answer Setting Command.....	9
2.3.2	Answer Command	10
2.4	Set Active Channel Command	10
2.5	Dial Commands	11
2.6	Exit Command	12
2.7	Hook Switch Operation	12
2.7.1	Off-Hook Command	12
2.7.2	On-Hook Command	13
2.8	Line Status and Monitor	13
2.8.1	IET Setting Command.....	14
2.8.2	Measure Command	15
2.9	GPIO Management.....	16
2.9.1	GPIO Config Command	16
2.9.2	GPIO Data Command	17
2.9.3	GPIO Control Command	17
2.10	Loopback Management.....	18
2.10.1	Loopback Set Command.....	18
2.10.2	Loopback Clear Command.....	18
2.10.3	Loopback Get Command	18
2.11	Billing Tone Filter Commands	19
2.12	Threshold Override Commands.....	19
3	Related Documentation.....	20
4	Contact Information.....	20
	Revision History	21

Figures

Figure 1: Conceptual Diagram of the Linux Modem CTL Application	5
Figure 2: Help Command Logging Session	7
Figure 3: Register Read Command Logging Session	8
Figure 4: Register Write Command Logging Session	9
Figure 5: Autoanswer Command Logging Session	9
Figure 6: Answer Command Logging Session.....	10
Figure 7: Set Active Channel Logging Session.....	10
Figure 8: Dial Command Logging Session	11
Figure 9: Exit Command Logging Session	12
Figure 10: Off-Hook Command Logging Session	12
Figure 11: On-Hook Command Logging Session	13
Figure 12: IET Command Logging Session	14
Figure 13: Measure Command Logging Session	15
Figure 14: GPIO Config GET/SET Command Logging Session.....	16
Figure 15: GPIO Data Command Logging Session	17
Figure 16: GPIO Control Logging Session	17
Figure 17: Loopback Command Logging Session	18
Figure 18: Billing Tone Filter Command Logging Session.....	19
Figure 19: Override Threshold Command Logging Session.....	19

Tables

Table 1: Summary of Modem CTL Commands.....	6
---	---

1 Introduction

This document describes the 73M1822/73M1922 Modem CTL Application, a software tool that is used to demonstrate and evaluate the 73M1822/73M1922 Reference Driver and the 73M1822/73M1922 devices in a system.

This user guide applies to both the 73M1922 and 73M1822, which will be collectively referred to as the 73M1x22 in this document. The current Modem CTL Application version can be used on Linux® 2.4 and 2.6 kernels.

The Modem CTL Application is a command line parser that manages 73M1x22 devices via Modem API through the reference driver. Functions and features of the 73M1x22 supported by the 73M1822/73M1922 Control Module are leveraged by this Modem CTL Application. This interactive user application is made up of an executable named `tsc_1x22_app`, which requires no parameters when executed from the Linux shell prompt.

The Modem CTL Application works in conjunction with the 73M1822/73M1922 Control Module, which can be ported to a range of processors and operating systems.

1.1 Modem CTL User Space Application

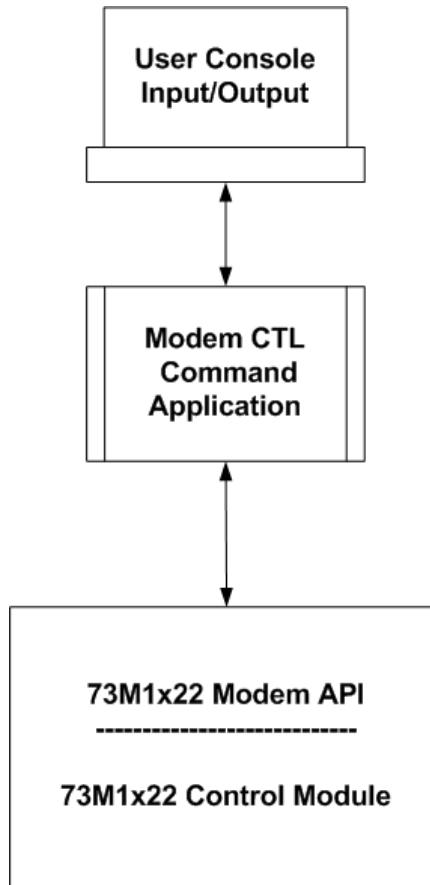


Figure 1: Conceptual Diagram of the Linux Modem CTL Application

The Modem CTL Application can be used to “test drive” the reference drivers and the Modem API for the 73M1x22 product. It is expected the user will transfer the knowledge learned from using this Modem CTL application to their own product once they are familiar with the operation of the code. The commands are not necessarily the same as those found in modems, but they do allow the 73M1x22 to perform the basic functions such as going on and off hook, pulse dialing, etc.

1.2 Modem CTL Command Summary

Entering `tsc_1x22_app` at the command line brings up the Modem CTL program. Refer to the individual command descriptions in [Section 2](#) for syntax and usage.

When running the Modem CTL program displays the following prompt:

1X22CTL:XX> where: XX is the current active channel.

Upon startup the current active channel is defaulted to channel 0. In which case the prompt will look like this:

1X22CTL:00>

Most commands, without specifying channel number, apply to current active channel. However, some commands provide options for selecting a desired channel (other than the current active channel).

Table 1 provides an overview of the commands implemented in the Modem CTL Application.

Table 1: Summary of Modem CTL Commands

Command Syntax	Description
?	Displays the Help screen – same as the Help command.
autoanswer	Sets channel to auto answer mode. When set, the application automatically answers the incoming RING by going off-hook and performs PCM parameter setting.
answer	Manually answers a call. This command manually answers the RING by going off-hook and performs PCM parameter setting.
billingtonefilter	Billing tone filter disable/enable command.
callmonitor	Managing the setting of call progress monitor audio.
channel	Sets active channel ID.
countryconfig	Managing the default country setting parameter.
dial	Performs pulse dialing.
display	Not implemented.
exit	Exits the Modem CTL program.
gpio	Managing GPIO operation.
help	Displays the Help screen.
iet	Interval Event Table. Used to manage the IET table such as list active IET entries, delete entries and update IET entries.
loopback	Managing loopback operation.
measure	Measures voltage/current. This command initiates or terminates voltage or current measuring session.
offhook	Takes an FXO channel off-hook.
ohhook	Takes an FXO channel on-hook.
register	Manages the 73M1x22 internal registers (read/write).
threshold	Modifying line parameter threshold.
quit	Same as exit.

2 Command Descriptions

This section provides the details of each Modem CTL command. The command syntax varies based on each command but in general it consists of the command verb followed by its parameters. Some commands are self-contained (no parameter is needed) while others may have optional or mandatory parameter(s).

The command verb is auto filled by the program. The user need only type enough to distinguish the command from the rest and the program will fill in the rest. A space character is also filled in so that the user is ready to type in the parameter.

The command line is always terminated by the Enter key. The Enter key at the end of each command triggers the Modem CTL program to start parsing and executing the command. The following sections describe the syntax for each command.

2.1 Help Command

The help command displays the Modem CTL command syntax.

Syntax

```
1X22CTL:NN> help or 1X22CTL:NN> ?
```

Where: NN Current active channel ID.

The following is a log of the help command.

Modem CTL:00> help	
	<ul style="list-style-type: none"> ? - Display Modem CTL command syntax. autoanswer - Auto-answer on incoming ring. answer - Manually answer a ring. billingtonefilter - Billing tone filter enable/disable. callmonitor - Call progress monitor audio setting. channel X - Set active channel X (0..15). countryconf - Country default parameters. dial nnnnnn - Dial number nnnnnn. display - Display... exit - Exit the Modem CTL program. gpio - Managing GPIO configuration and control. help - Display Modem CTL command syntax. iet - Manage IET table. loopback - Loopback control. measure - Measure current/voltage. offhook - Go off-hook on current active channel. onhook - Go on-hook on current active channel. register rgXX - display content of reg rgXX. register rgXX=0xYY - set value 0xYY to reg rgXX. register display rgXX - display content of reg rgXX. register display all - display content of all regs. threshold - Line parameter threshold management. quit - Exit the Modem CTL program.

```
Modem CTL:00>
```

Figure 2: Help Command Logging Session

2.2 1x22 Hardware Register Access

The Modem CTL provides access to the 1x22 hardware register via register read and write command as described below.

2.2.1 Register Read Commands

The `register` command can be used to reads the content register(s) on the current active device (NN).

Syntax

```
1X22CTL:NN> register <rgXX>          (read and display register XX)
1X22CTL:NN> register display <rgXX>    (read and display register XX)
1X22CTL:NN> register display all        (read and display all registers)
```

Where: XX 00 to 25 hexadecimal represent the registers from 00 to 25 hex.
 NN Shows the current active device ID.

Refer to the chip data sheet for registers, their usage and contents. The following is a log of the command to read register 0x03, 0x12 and all registers.

```
Modem CTL:00> register rg03
RG03 - 0xE0

Modem CTL:00> register display rg12
RG12 - 0x04

Modem CTL:00> register display all
-----+
RGXX | 0   1   2   3   4   5   6   7   8   9   A   B   C   E
-----+
00 | 0x00 0x00 0x00 0xE0 0xE4 0x1B 0x00 0x00 0x00 0x00 0x00 0x00 0x2A 0xE0
10 | 0x00 0x0E 0x04 0x80 0x2A 0x38 0xD0 0x00 0x01 0x44 0x04 0x24 0x00 0x02
20 | 0x00 0x00 0x00 0x00 0x00 0xED 0x5C 0x40
-----+
Modem CTL:00>
```

Figure 3: Register Read Command Logging Session

2.2.2 Register Write Command

The register command can also be used to write a value to the register on the current active device (NN).

Syntax

```
1X22CTL:NN> register rgXX=0xYY
```

Where:

XX	00 to 25 hexadecimal represent the registers from 00 to 25 hex.
YY	Hexadecimal value from 0x00 to 0xFF.
NN	Shows the current active channel ID.

Refer to the chip datasheet for registers, their usage and contents. The following is a log of the command to write register 0x12 with the value of 0xC0.

```
Modem CTL:00> register rg12=0xC0
Modem CTL:00>
```

Figure 4: Register Write Command Logging Session

2.3 Answering of Incoming Calls

The Modem CTL reports incoming RING event when one is detected. Each FXO channel can be programmed for auto answer mode to automatically answer the call, or manually answered by the user using this "answer" command.

2.3.1 Auto Answer Setting Command

The autoanswer command sets auto answer mode to the channel. In this mode the incoming call on the FXO channel will be automatically answered by the Modem CTL program. This is accomplished by bringing the channel off-hook when incoming ring is detected without user intervention.

Syntax

```
1X22CTL:NN> autoanswer (set auto-answer mode on current active
channel)
1X22CTL:NN> autoanswer <XX> (set auto-answer mode on channel XX)
```

Where:

XX	00 to 15 decimal represents the device ID.
NN	Shows the current active channel ID.

The following is a log of the command to set auto answer mode on current active channel (0) and on channel 3.

```
Modem CTL:00> autoanswer
Set auto-answer on current active channel: 0
Modem CTL:00> autoanswer 3
Set auto-answer on channel: 3
```

Figure 5: Autoanswer Command Logging Session

2.3.2 Answer Command

The answer command manually answers an incoming call by bringing the FXO channel off-hook. This command is manually issued by the user when the RING event is detected.

Syntax

```
1X22CTL>NN> answer           (answer call on current active
channel)
1X22CTL>NN> answer <XX>      (answer call on channel ID XX)
```

Where: XX 00 to 15 decimal represent the channel ID.
 NN Shows the current active channel ID.

The following is a log of the command to answer incoming call on channel 0, and channel 3.

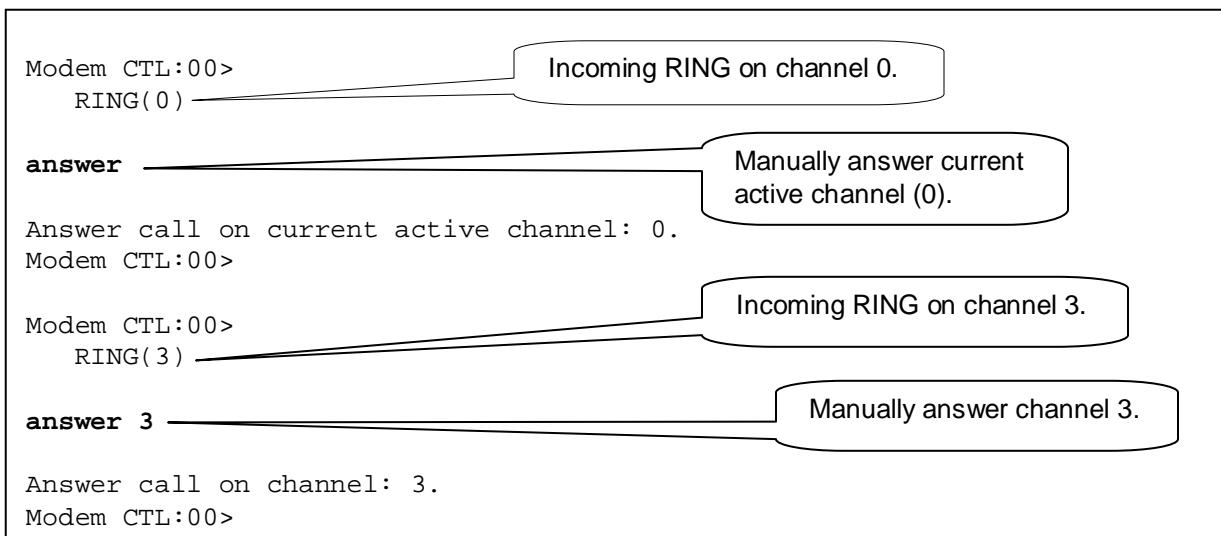


Figure 6: Answer Command Logging Session

2.4 Set Active Channel Command

NOTE: Current 73M1x22 HW Module only supports one channel (0).

The channel command sets the current active channel to a specific channel ID.

Syntax

```
1X22CTL>NN> channel <XX>
```

Where: XX New desired active channel ID – 00 to 15 (decimal).
 NN Shows the current active channel ID.

The following is a log of the command to set new active channel ID to channel 5.

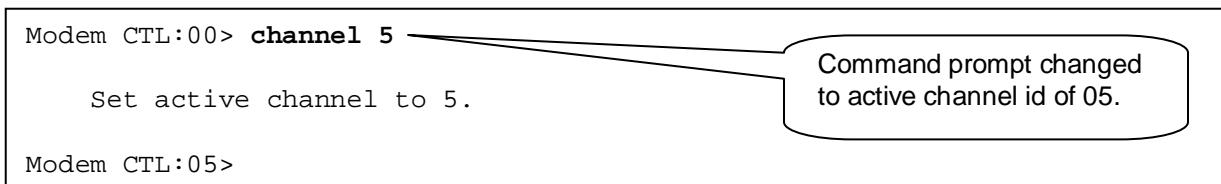


Figure 7: Set Active Channel Logging Session

2.5 Dial Commands

The **dial** is the command for managing pulse dial feature. With this command the user can perform pulse dialing with a numeric digit string, abort or cancel an on-going dial process, or changing or display pulse dial timing parameter. To display the dial timing parameter omit all input after the token “param”.

Syntax

```
1X22CTL>NN> dial <nnnnnnnnnn>          (dial number nnnnnnnnnn)
      dial cancel                         (cancel dial)
      dial param <ii> <jj> <kk>        (change param to ii jj & kk)
      dial param                          (display timer parameters)
```

Where:	nnnnnnnn	Numeric dial string.
	ii	On-hook duration.
	jj	Off-hook duration.
	kk	Inter-digit duration.

The following is a log of the command:

1. Dial on current active channel (0) with the dial string of “7142136016”.
2. Cancel an on-going dial command.
3. Change dial timer parameters – on-hook duration to 40, off-hook duration to 60 and inter-digit duration to 800 ms.

```
Modem CTL:00> dial 7142136016
Modem CTL:00> dial cancel
Modem CTL:00>
Modem CTL:00> DIAL_ABORTED(0)
Modem CTL:00> dial param 40 60 800
Modem CTL:00> dial param
On-hook duration : 40 ms.
Off-hook duration : 60 ms.
Inter-digit duration: 800 ms.
```

Dial 7142136016.

Cancel a dial session.

Set dial parameters to 40, 60, and 800 ms.

Display dial parameters.

Figure 8: Dial Command Logging Session

2.6 Exit Command

The **exit** command terminates the Modem CTL program. When issued, the user is prompted and asked to confirm with a Y(es) or N(o). A “yes” terminates the program.

Syntax

```
1x22CTL>NN> exit
```

Where: NN Shows the current active channel ID.

The following is a log of the command to exit the Modem CTL program.

```
Modem CTL:00> exit  
Are you sure you want to quit? (Y or N)Y  
Good bye!
```

Enter “Y” to confirm.

Figure 9: Exit Command Logging Session

2.7 Hook Switch Operation

The Modem CTL provides commands to manually control the hook switch operation of the FXO channel. The FXO channel can be switched off hook or on hook.

2.7.1 Off-Hook Command

The **offhook** command brings the FXO channel off-hook.

Syntax

```
1x22CTL>NN> offhook          (Current channel ID off-hook)  
1x22CTL>NN> offhook XX      (Channel ID XX off-hook)
```

Where: NN Shows the current active channel ID.

The following is a log of commands that bring the current channel ID and channel 4 off-hook.

```
Modem CTL:00> offhook  
Channel 0 is OFF-hook.  
Modem CTL:00>  
Modem CTL:00> offhook 4  
Channel 4 is OFF-hook
```

Take current channel (0) off-hook.

Take channel 4 off-hook.

Figure 10: Off-Hook Command Logging Session

2.7.2 On-Hook Command

The `onhook` command brings the FXO channel on-hook.

Syntax

```
1X22CTL>NN> onhook          (Bring current channel ID off-hook)  
1X22CTL>NN> onhook <xx>    (Bring channel XX off-hook)
```

Where:
 XX Channel ID.
 NN Show the current active channel ID.

The following is a log of commands that bring the current channel ID and channel 4 on-hook.

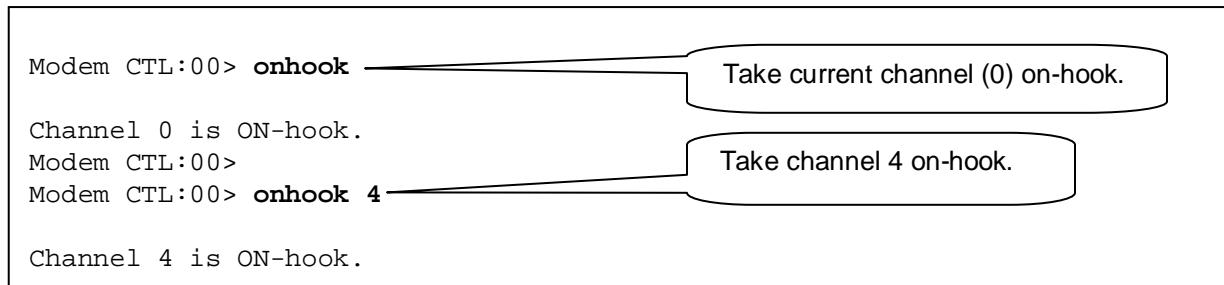


Figure 11: On-Hook Command Logging Session

2.8 Line Status and Monitor

The line's current and voltage can be autonomously monitored by setting the desired level of the IET (Interval Event Table). The Modem CTL provides commands for managing the IET and controlling the monitoring process.

2.8.1 IET Setting Command

The iet (Interval Event Table) is a table of up to 10 entries of interval threshold parameters. The driver can be instructed to monitor the line current and/or voltage and send an appropriate event when the current or voltage falls within active interval threshold.

The iet command can be used for managing this IET table. The command consists of setting (updating) IET entry, deleting (clearing) an IET entry from the table, or list all active IET entries.

Syntax

```
1X22CTL>NN> iet <voltage|current> list
1X22CTL>NN> iet <voltage|current> clear <row>
1X22CTL>NN> iet <voltage|current> set <row> <min> <max> <event>
```

Where:

<row>	Row number (0 to 9).
<min>	Minimum voltage/current range.
<max>	Maximum voltage/current range.
<event>	Event ID (unsigned 32bit value).
NN	Shows the current active channel ID.

The following log consists of these IET commands:

- 5 IET setting commands (set row 0, 1, 2, 3, and 4)
- IET list command
- IET clear command (clear row 3)
- IET list command

The diagram illustrates the sequence of IET commands and their effects on the IET table. It shows five rows of command logs, each with associated callouts explaining the action taken.

Modem CTL:00> iet voltage set 0 100 200 1000

Modem CTL:00> iet voltage set 1 200 300 2000

Modem CTL:00> iet voltage set 2 300 400 3000

Modem CTL:00> iet voltage set 3 400 500 4000

Modem CTL:00> iet voltage set 4 500 600 5000

Set IET voltage row 0, 1, 2, 3, and 4.

Modem CTL:00> iet voltage list

Modem CTL:00> iet voltage clear 3

Modem CTL:00> iet voltage list

List all active IET voltage entries.

Delete IET voltage row number 3.

List all active IET voltage entries.

ROW	MIN	MAX	EVENT
0	100	200	1000
1	200	300	2000
2	300	400	3000
3	400	500	4000
4	500	600	5000

Figure 12: IET Command Logging Session

2.8.2 Measure Command

The **measure** command is used to initiate or terminate a monitoring session. A monitoring session can be for line voltage or line current. Both measuring entity (voltage and current) can be active currently.

Syntax (Stop)

```
1X22CTL>NN> measure <voltage|current> stop
```

Where: NN Show current active channel ID.

Syntax (Start)

```
1X22CTL>NN> measure <voltage|current> start <XX> <YY>
```

Where:
 XX Sample time interval (in ms).
 YY Average Sample count (1 to 20).
 NN Shows the current active channel ID.

The following is a log of the measuring commands.

```
Modem CTL:00> measure voltage start 100 10
LINE_STATE(0)
HookState: OnHook, Entity: Voltage, Row: 0, Event: 1000

Modem CTL:00> measure voltage stop
```

Start voltage measurement session with 100ms interval and 10 average sample counts.

Event triggered for voltage matches IET row 0, on-hook state, with event =1000.

Stop voltage measurement session.

Figure 13: Measure Command Logging Session

2.9 GPIO Management

The Modem CTL provides three commands for managing the GPIO:

1. Config – configures the GPIO pin for operation.
2. Control – enable/disable the GPIO pin.
3. Data – accessing GPIO data.

2.9.1 GPIO Config Command

The GPIO pin must be configured properly before it can be used. Using this command the user can display the GPIO configuration (GET), or configure the GPIO pin for the desired operation (SET). Configuring the GPIO is simple, it requires only up to two parameters:

1. Signal direction (input or output).
2. If configured as input the GPIO will generate interrupt upon rising or falling edge signal – this parameter selects the edge transition. For output direction this parameter is not relevant.

Syntax (GET)

```
1X22CTL>NN> gpio config get gpioX
```

Where: gpioX gpio4, gpio5, gpio6, or gpio7.

NN Shows the current active channel ID.

Syntax (SET)

```
1X22CTL>NN> gpio config set gpioX [input|output] [rising|falling]
```

Where: gpioX gpio4, gpio5, gpio6, or gpio7.

NN Shows the current active channel ID.

The following is a log of the `gpio config` commands.

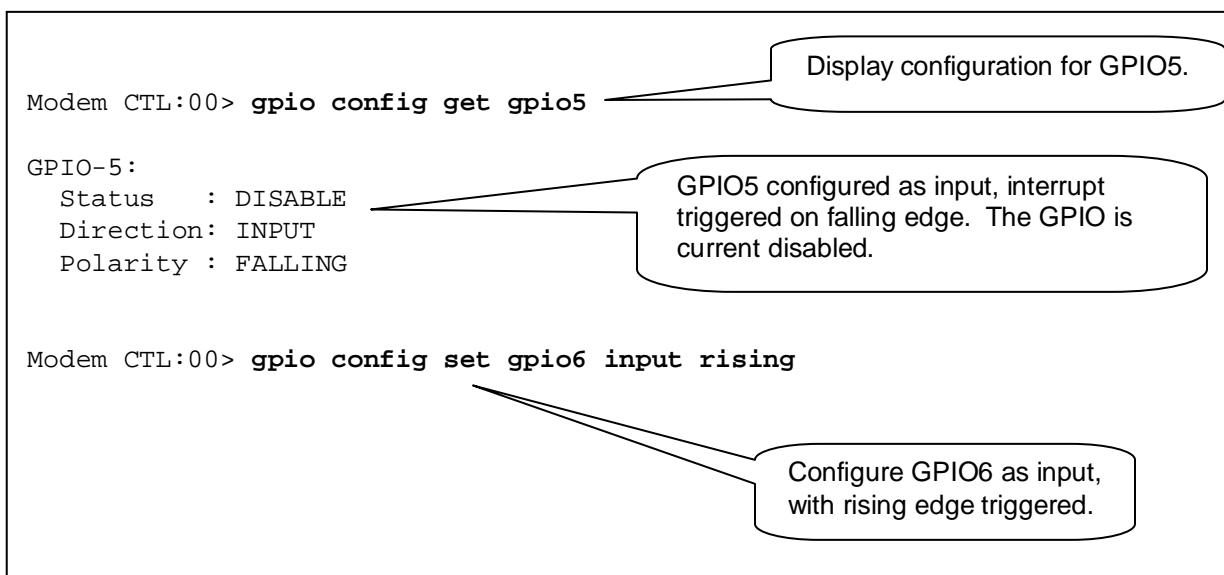


Figure 14: GPIO Config GET/SET Command Logging Session

2.9.2 GPIO Data Command

Using this data command the GPIO pin can be read (if configured as input) or written into (if configured as output) with signal level of high or low.

Syntax (GET)

```
1X22CTL>NN> gpio data get gpioX
```

Where: gpioX gpio4, gpio5, gpio6, or gpio7.
 NN Shows the current active channel ID.

Syntax (SET)

```
1X22CTL>NN> gpio data set gpioX [low|high]
```

Where: gpioX gpio4, gpio5, gpio6, or gpio7.
 NN Shows the current active channel ID.

The following is a log of the gpio data commands.

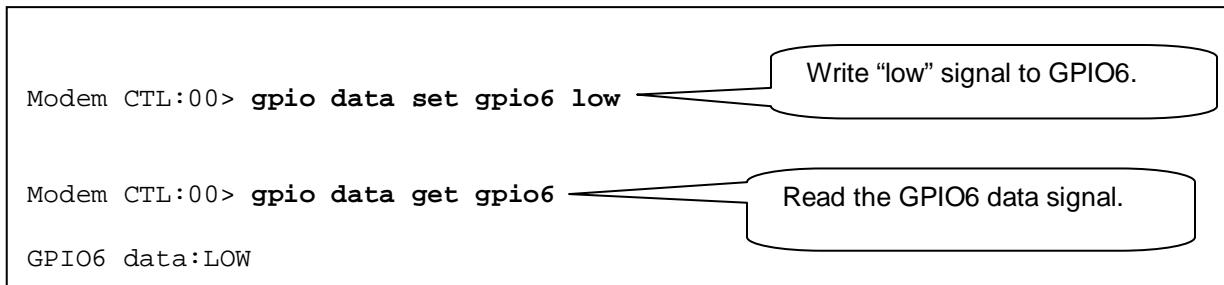


Figure 15: GPIO Data Command Logging Session

2.9.3 GPIO Control Command

The GPIO pin is controlled (enable/disable) using this command. Once configured properly using the config command the GPIO can be set to operational using this command.

Syntax

```
1X22CTL>NN> gpio [enable|disable] gpioX
```

Where: gpioX gpio4, gpio5, gpio6, or gpio7
 NN Shows the current active channel ID.

The following is a log of the gpio control commands.

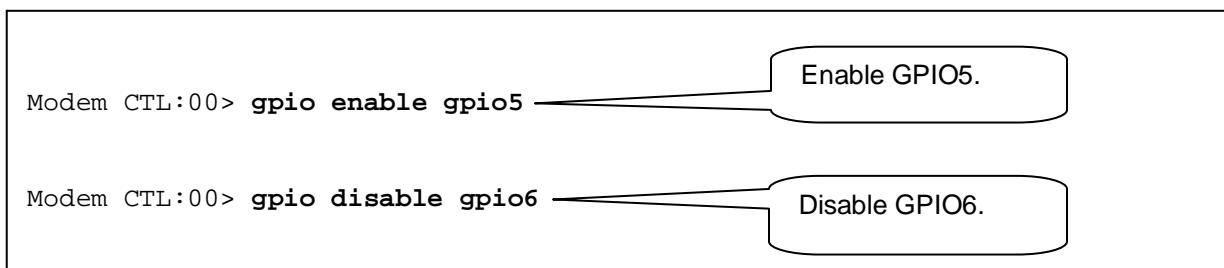


Figure 16: GPIO Control Logging Session

2.10 Loopback Management

There are six different loopback mode can be set internally by the driver. Using the loopback command the user can disable the loopback, query the loopback status, or enable one of the following loopback modes:

1. Digital loopback – 1
2. Internal loopback – 1
3. Digital loopback – 2
4. Internal loopback – 2
5. Analog loopback

2.10.1 Loopback Set Command

This command enables one of the loopback modes.

Syntax

```
1X22CTL>NN> loopback set [digital1|internal1|digital2|internal2|analog]
```

Where: NN Shows the current active channel ID.

2.10.2 Loopback Clear Command

This command disables the loopback.

Syntax

```
1X22CTL>NN> loopback clear
```

Where: NN Shows the current active channel ID.

2.10.3 Loopback Get Command

The command displays the active loopback mode.

Syntax

```
1X22CTL>NN> loopback get
```

Where: NN Shows the current active channel ID.

The following is a log of the loopback commands.

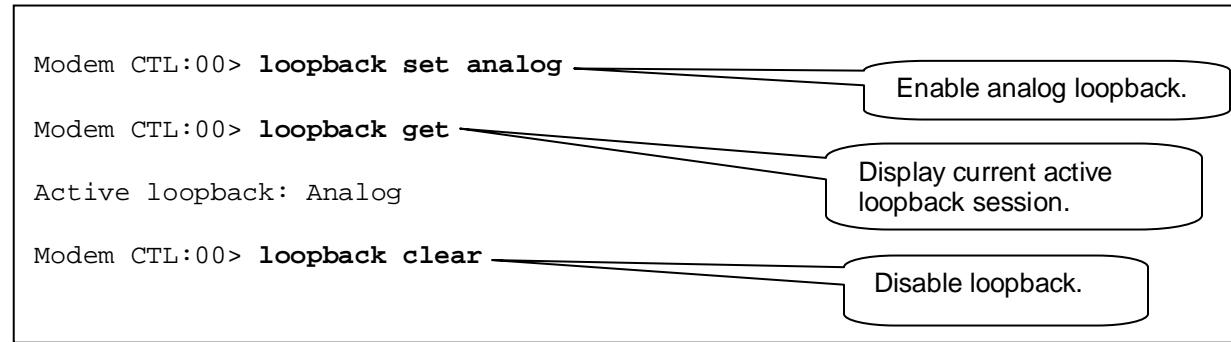


Figure 17: Loopback Command Logging Session

2.11 Billing Tone Filter Commands

This command enables or disables the billing tone filter. If enable the user must specify the Receive Low Pass Notch (RLPN) frequency of 12 or 16 kHz.

Syntax

```
1X22CTL>NN> billingtonefilter [enable|disable] [12khz|16khz]
```

Where: NN Shows the current active channel ID.

The following is a log of the billing tone filter commands:

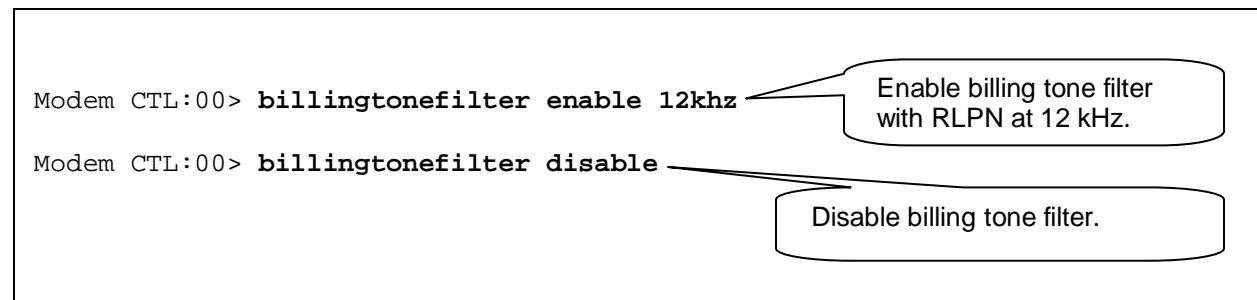


Figure 18: Billing Tone Filter Command Logging Session

2.12 Threshold Override Commands

The FXO channel is operating with the parameter threshold configured by the channel initialization procedure. This command can be used to override the threshold value with new threshold. Three threshold parameters can be overridden:

1. Active Termination Loop (ACZ)
2. DC Current Voltage Characteristic Control (DCIV)
3. Ring Detect Threshold

Syntax

```
1X22CTL>NN> threshold acz xx dciv yy rgth zz
```

Where: xx 0 – 3 (Active Termination Loop).
 yy 0 – 3 (DC Current Voltage Characteristic Control).
 zz 0 – 3 (Ring Detect Threshold).
 NN Shows the current active channel ID.

The following is a log of the billing tone filter commands:

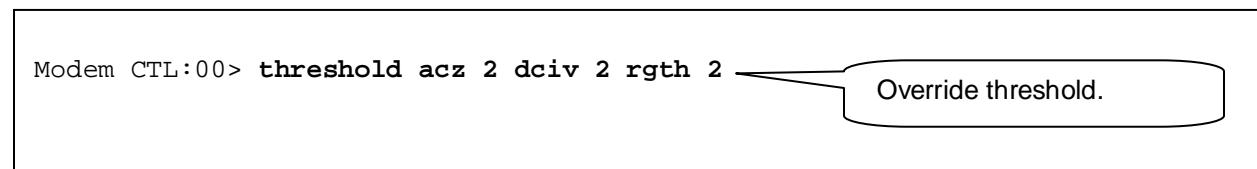


Figure 19: Override Threshold Command Logging Session

3 Related Documentation

The following 73M1x22 documents are available from Teridian Semiconductor Corporation:

73M1822/73M1922 Data Sheet
73M1822/73M1922 Layout Guidelines
73M1x22 Worldwide Design Guide
73M1822/73M1922 Control Module User Guide
73M1822/73M1922 Hardware Module for SMDK412 User Guide
73M1822/73M1922 Modem API User Guide
73M1822/73M1922 Modem CTL Application User Guide
73M1822/73M1922 MicroDAA Software Architecture

4 Contact Information

For more information about Teridian Semiconductor products or to check the availability of the 73M1822 and 73M1922, contact us at:

6440 Oak Canyon Road
Suite 100
Irvine, CA 92618-5201

Telephone: (714) 508-8800
FAX: (714) 508-8878
Email: modem.support@teridian.com

For a complete list of worldwide sales offices, go to <http://www.teridian.com>.

Revision History

Revision	Date	Description
1.0	12/23/2009	First publication.