
71 (\$) TUV

NAIS SENSITIVITY

15A (2C), 10A (4C) COMPACT SP-RELAYS POWER RELAYS WITH HIGH

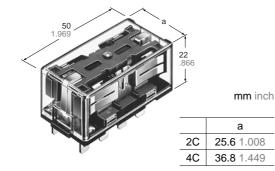

FEATURES

- High Vibration/Shock Resistance Vibration resistance: 18 G, amplitude 3 mm (10 to 55 Hz) Shock resistance: 40 G (11 ms)
- Latching types available
- High Sensitivity in Small Size 150 mW pick-up, 300 mW nominal operating power
- Wide Switching Range

From 1 mA to 15 A (2C) and 10 A (4C)

SPECIFICATIONS

Contacts								
Arrangeme	ent			2 Form C, 4 Form C				
Initial conta (By voltage				$30 \text{ m}\Omega$				
Initial conta	act press	ure		2C: Approx. 0.392 N (40 g 1.41 oz) 4C: Approx. 0.196 N (20 g 0.71 oz)				
Contact ma	aterial			Stationary contact: Gold flashed silver alloy				
				Movable contact: Silver alloy				
Rating	Nomina capacity		vitching	2C: 15 A 250 V AC 10 A 30 V DC 4C: 10 A 250 V AC 10 A 30 V DC				
(resistive load)	Max. sw	vitch	ning power	2C: 3,750 VA, 300 W 4C: 2,500 VA, 300 W				
	Max. sw	vitch	ning voltage	2C, 4C: 250 V AC, 30 V DC				
	Max. sw	vitch	ning current	2C: 15 A (AC) 10 A (DC), 4C: 10 A				
	Mechar	ica	l (at 180 cpm)	5 × 107				
Expected life (min.	Electrical (at 20 cpm) (resistive load)	2C	15 A 250 V AC	105				
			10 A 30 V DC	105				
operations)		4C	10 A 250 V AC	105				
			10 A 30 V DC	10 ⁵				

Nominal operating power

Minimum set and reset power

Nominal set and reset power

Characteristics (at 25°C 77°F 50% Relative humidity)

Max. operati	ng speed	(at rated load)	20 cpm			
Initial insulat	ion resista	ance*1	1,000 MΩ at 500 V DC			
Initial	Between	open contacts	1,500 Vrms			
breakdown	Betweer	contact sets	3,000 Vrms			
voltage*2	Between	contact and coil	3,000 Vrms			
Operate time	e*3(at nom	iinal voltage)	Max. 30 ms (Approx. 25 ms)			
Release time (at nominal v		diode)*3	Max. 20 ms (Approx. 15 ms)			
Temperature (at nominal v			Max. 40°C with nominal coil voltage and at nominal switching capacity			
Shock resistance		Functional*4	Min. 392 m/s ² {40 G}			
		Destructive*5	Min. 980 m/s ² {100 G}			
Vibration resistance		Functional*6	176.4 m/s ² {18 G}, 10 to 55 Hz at double amplitude of 3 mm			
		Destructive	176.4 m/s ² {18 G}, 10 to 55 Hz at double amplitude of 3 mm			
Conditions for operation,		Ambient	–50°C to +60°C			
transport and sto		temp.	-58°F to +140°F			
(Not freezing and ing at low temper		Humidity	5 to 85% R.H.			
Unit weight			2C: 50 g 1.76 oz ; 4C: 65 g 2.29 oz			

Remarks

Specifications will vary with foreign standards certification ratings.

*1 Measurement at same location as "Initial breakdown voltage" section

*2 Detection current: 10 mA

*3 Excluding contact bounce time

*4 Half-wave pulse of sine wave: 11ms; detection time: 10µs

*5 Half-wave pulse of sine wave: 6ms

*6 Detection time: 10μs

*7 Refer to 5. Conditions for operation, transport and storage mentioned in AMBIENT ENVIRONMENT (Page 61).

NC machines, remote control panels, sophisticated business equipment.

Coil (polarized) at 20°C 68°F

Single side stable


Latching

TYPICAL APPLICATIONS **ORDERING INFORMATION**

300 mW

150 mW

300 mW



(Notes) 1. PC board terminal types available as option. Please consult us for details.

- 2. 2 Form C: Carton: 20 pcs., Case: 200 pcs. 4 Form C: Carton: 10 pcs., Case: 100 pcs.

3. UL/CSA, TÜV approved type is standard.

TYPES AND COIL DATA (at 20°C 68°F)

Single side stable

Part No.		Nominal	Pick-up	Drop-out	Nominal	Coil resis-	Inductance,	Nominal	Maximum
2 Form C	4 Form C	voltage, V DC	voltage, V DC (max.)	voltage, V DC (min.)	operating current, mA	tance, Ω (±10%) 20°C	H (at 120 Hz)	operating power, mW	allowable voltage, V DC (40°C)
SP2-DC3V	SP4-DC3V	3	2.1	0.3	100.0	30	Approx. 0.05	300	4.5
SP2-DC5V	SP4-DC5V	5	3.5	0.5	60.2	83	0.1	300	7.5
SP2-DC6V	SP4-DC6V	6	4.2	0.6	50.0	120	0.2	300	9
SP2-DC12V	SP4-DC12V	12	8.4	1.2	25.0	480	0.7	300	18
SP2-DC24V	SP4-DC24V	24	16.8	2.4	12.5	1,920	3.0	300	36
SP2-DC48V	SP4-DC48V	48	33.6	4.8	6.2	7,700	11.2	300	72

2-coil latching

Part No.		Nominal voltage, voltage		Nominal operating	Coil resistance, Ω (±10%)		Inductance, H (at 120 Hz)		Nominal	Maximum allowable
2 Form C	4 Form C	V DC	voltage, V DC (max.)	current, mA	Coil I	Coil II	Coil I	Coil II	power, mW	voltage, V DC (40°C)
SP2-L2-DC3V	SP4-L2-DC3V	3	2.1	100.0	30	30	Approx. 0.03	Approx. 0.03	300	4.5
SP2-L2-DC5V	SP4-L2-DC5V	5	3.5	60.2	83	83	0.07	0.07	300	7.5
SP2-L2-DC6V	SP4-L2-DC6V	6	4.2	50.0	120	120	0.1	0.1	300	9
SP2-L2-DC12V	SP4-L2-DC12V	12	8.4	25.0	480	480	0.4	0.4	300	18
SP2-L2-DC24V	SP4-L2-DC24V	24	16.8	12.5	1,920	1,920	1.4	1.4	300	36
SP2-L2-DC48V	SP4-L2-DC48V	48	33.6	6.2	7,680	7,680	5.6	5.6	300	72

DIMENSIONS

2 Form C

4 Form C

Plug-in terminal

.039


10 .394

50

Ó

10.16 10.16 10.16 10.16

4.75

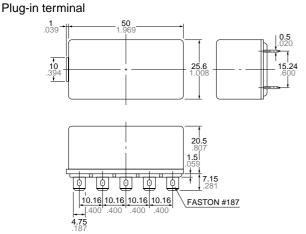

General tolerance: ±0.3 ±.012

Schematic (Bottom view) Single side stable




(Deenergized condition)

2 coil latching



(Reset condition)

Diagram shows the "reset" position when terminals 3 and 4 are energized. Energize terminals 1 and 2 to transfer contacts.

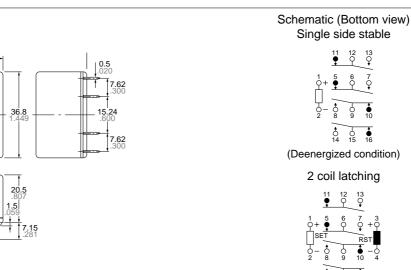

General tolerance: $\pm 0.3 \pm .012$

• 16 0

13 Q

(Deenergized condition)

2 coil latching






Diagram shows the "reset" position when terminals 3 and 4 are energized. Energize terminals 1 and 2 to transfer contacts.


mm inch


REFERENCE DATA

SP

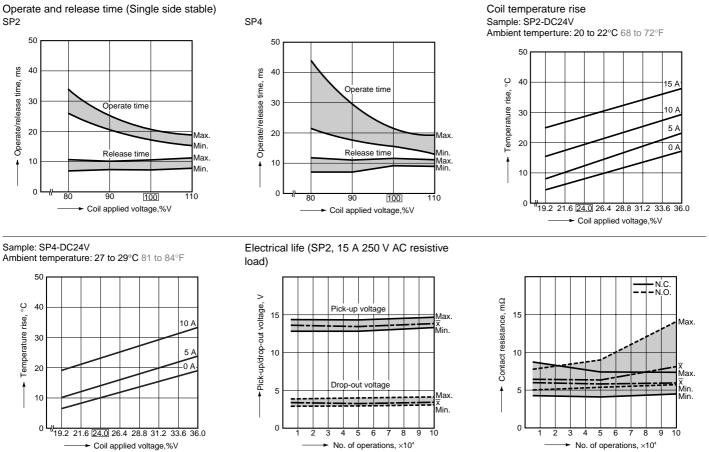




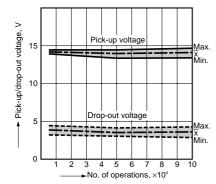

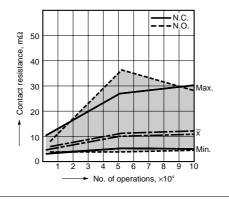


ACCESSORIES


Soldering socket

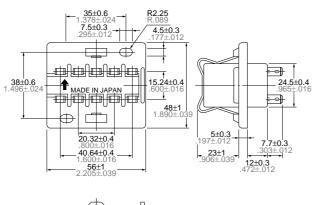





Wrapping socket SP2-WS

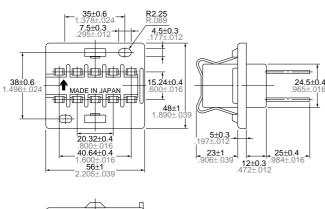




Mounting hole drilling diagram

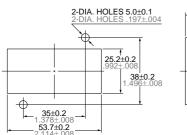

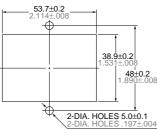


Notes:

 Mounting screws and the fastening bracket are included in the package.
Mount the relay with the proper mounting direction — i.e. with the direction of the NAIS mark on top of the relay case matchSP4-SS

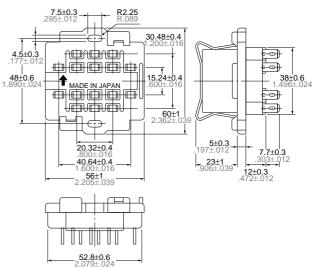

SP4-WS

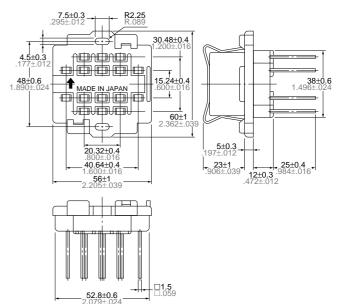

Performance profile

Item	SP2, socket with solder	SP4, socket with solder	SP2, wrap- ping socket	SP4, wrap- ping socket					
Withstand volt- age	AC 3,000V, 1 min., between each terminal								
Insulation resistance	1,000 MΩ min								
Ambient working temperature	-50 to +60°C -58 to +140°F								
Maximum current, ON current	154		12 A	10 A					

Note: Do not remove the relay while it is ON.

ing the direction of the NAIS mark on the terminal block. (The 介 direction of the terminal block is the upward direction of the relay.)

Mounting and removal of fastening bracket

1. Mounting


Insert the A part of the fastening bracket into the mounting groove of the socket, and then fit the B part into groove, while pressing with the tip of a minus screwdriver.

2. Removal


Slide the B part of the fastening bracket

Screw terminal socket

from the groove in the socket, while pressing with the tip of a minus screwdriver. While the bracket is in this position, keep pressing the C part of the bracket to the relay side with your finger, and lift up to the left side and remove from the groove, as in the diagram at right.



mm inch

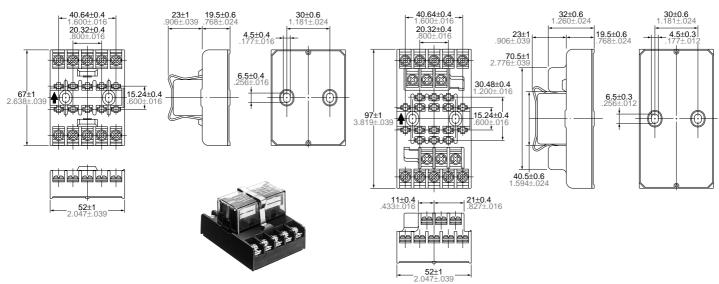


Mounting hole drilling diagram



Notes:

(1) Mounting screws and the fastening bracket are included in the package. (2) Mount the relay with the proper mounting direction — i.e. with the direction of the NAIS mark on top of the relay case matching the direction of the NAIS mark on the terminal block. (The \triangle direction of the terminal block is the upward direction of the relay.)


Mounting plate

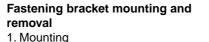


Insert the A part of the fastening bracket into the mounting groove of the terminal block, and then fit the B part into groove, while pressing with the tip of a minus screwdriver.

2. Removal

Slide the B part of the fastening bracket from the groove in the terminal block, while pressing with the tip of a minus screwdriver. While the bracket is in this position, keep pressing the C part of the bracket to the relay side with your finger, and lift up to the left side and remove from the groove, as in the diagram at right.

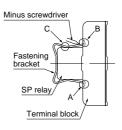

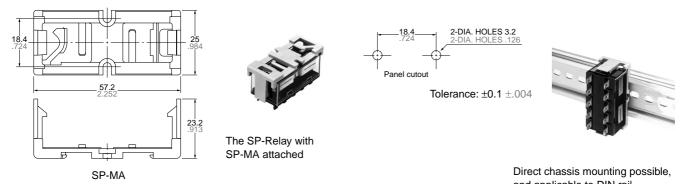

and applicable to DIN rail. [DIN 46277 (35 mm width) is applicable.]

Use method

1. Both the SP relay 2c and 4c can be

ing them directly to the chassis, or by

(A) When attaching directly to chassis

(B) When mounting on a DIN rail

cated in the diagram at right.

Use a 35mm 1.378inch wide DIN rail

The mounting method should be as indi-

For the mounting pitch, refer to the speci-

2. Use the mounting slats either by attach-

mounted to the mounting slats.


mounting with a DIN rail.

Use two M3 screws.

fication diagram.

(DIN46277).

Method for mounting on DIN rail

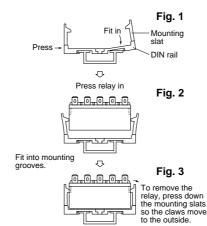

 (1) First fit the arc shaped claw of the mounting slat into the DIN rail.
(2) Press on the side as shown in the diagram below.

(3) Fit in the claw part on the opposite side.

Precautions for use

When mounting to a DIN rail, use a commercially available fastening bracket if there is a need to stop sliding of the mounting slat in the rail direction.

For Cautions for Use, see Relay Technical Information (Page 48 to 76).