



## **Function**

The Zener Barrier prevents the transfer of unacceptably high energy from the safe area into the hazardous area.


The zener diodes in the Zener Barrier are connected in the reverse direction. The breakdown voltage of the diodes is not exceeded in normal operation. If this voltage is exceeded, due to a fault in the safe area, the diodes start to conduct, causing the fuse to blow. The Zener Barrier has a Additionally this Zener Barrier is equipped with a replaceable fuse. This high power version has a smaller serial resistance and therefore provides

higher voltage to the field device.

The Zener Barrier is for evaluation of signals from the hazardous area. The diodes of diode return prevent a current into the hazardous area, therefore the current assumption for intrinsic safety calculations is zero.

Depending on the application, increased or decreased intrinsic safety parameters apply for serial or parallel connection. For the detailed parameters refer to the Zener Barrier certificate. Application examples can be found in the system description of the Zener Barriers.

## Connection

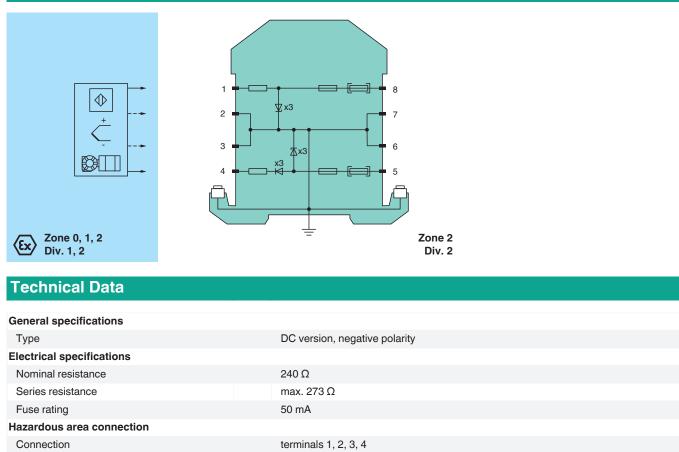

Refer to "General Notes Relating to Pepperl+Fuchs Product Information

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0002 pa-info@us.pepperl-fuchs.com

Germany: +49 621 776 2222 pa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 pa-info@sg.pepperl-fuchs.com



Technical Data				
Safe area connection				
Connection		terminals 5, 6, 7, 8		
Working voltage				
Supply loop		max. 27 V		
Measurement loop		max. 26.5 V at 10 μA		
Conformity				
Degree of protection		IEC 60529		
Ambient conditions				
Ambient temperature		-20 60 °C (-4 140 °F)		
Storage temperature		-25 70 °C (-13 158 °F)		
Relative humidity		max. 75 % , without condensation		
Mechanical specifications				
Degree of protection		IP20		
Connection		screw terminals		
Core cross section		max. 2 x 2.5 mm <sup>2</sup>		
Mass		approx. 150 g		
Dimensions		12.5 x 115 x 116 mm (0.5 x 4.5 x 4.6 inch) (W x H x D)		
Construction type		modular terminal housing, see system description		
Mounting		on 35 mm DIN mounting rail acc. to EN 60715:2001		
Data for application in connection with haza	rdous a	reas		
EU-type examination certificate		BAS 00 ATEX 7096		
Marking		& II (1)GD, [Ex ia Ga] IIC, [Ex ia Da] IIIC, (-20 °C $T_{amb}$ $\leq$ 60 °C) [circuit(s) in zone 0/1/2]		
Voltage	$U_{\circ}$	28 V		
Current	$I_{o}$	120 mA		
Power	Po	830 mW		
Supply				
Maximum safe voltage	Um	250 V		
Series resistance		min. 235.2 Ω		
Certificate		TÜV 99 ATEX 1484 X		
Marking		🐼 II 3G Ex nA II T4 [device in zone 2]		
Directive conformity				
Directive 2014/34/EU		EN IEC 60079-0:2018+AC:2020 , EN 60079-11:2012 , EN 60079-15:2010		
International approvals				
FM approval				
Control drawing		116-0118		
UL approval				
Control drawing		116-0355 (cULus)		
IECEx approval				
IECEx certificate		IECEx BAS 18.0033		
IECEx marking		[Ex ia Ga] IIC , [Ex ia Da] IIIC , [Ex ia Ma] I		
General information				
Supplementary information		Observe the certificates, declarations of conformity, instruction manuals, and manuals where applicable. For information see www.pepperl-fuchs.com.		


 Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
 USA: +1 330 486 0002
 Getwww.pepperl-fuchs.com
 ga-info@us.pepperl-fuchs.com
 ga-info@us.pepperl-fuchs.com

Germany: +49 621 776 2222 pa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 pa-info@sg.pepperl-fuchs.com

2

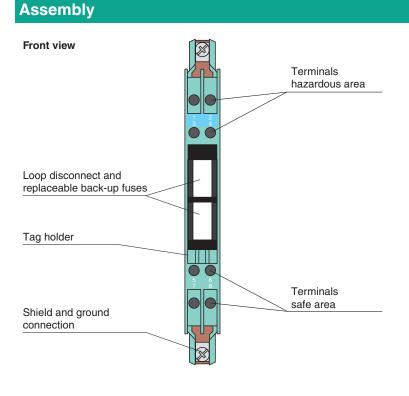

## **Matching System Components**

ZH-ES/LB	Insertion Strip
ZH-Z.AB/NS	Mounting block for DIN mounting rail
ZH-Z.AB/SS	Mounting block for grounding rail
ZH-Z.AK16	Connection terminal for grounding rail
ZH-Z.AR.125	Spacing Roller
ZH-Z.BT	Label Carrier
ZH-Z.ES	Single Socket
ZH-Z.LL	Ground Rail Feed
ZH-Z.NLS-Cu3/10	Grounding Rail
USLKG5	Terminal Block

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

3